Flight Compartment – General Data


1. General

The flight compartment equipment furnishings consist of the pilot's and co-pilot's seats, which are both of the same type.

2. Flight Compartment Seats

Each seat has independent adjustment for height, and fore-and-aft movement. Elastic shock cords are used to take part of the weight of the seat and occupant and make adjustment easier. Both seats have lap-type safety belts and swing back arm rests fitted. Shoulder straps and an inertia reel (Mod 6/1601) are provided for pilot's and co-pilot's seats. Refer to Figure 1 for details.

As a customer standard order option, S.O.O. 6268 – Sheepskin Covers, may be installed for pilot and co-pilot seats. Refer to 12-20-05, Cleaning – General Data for cleaning instructions.

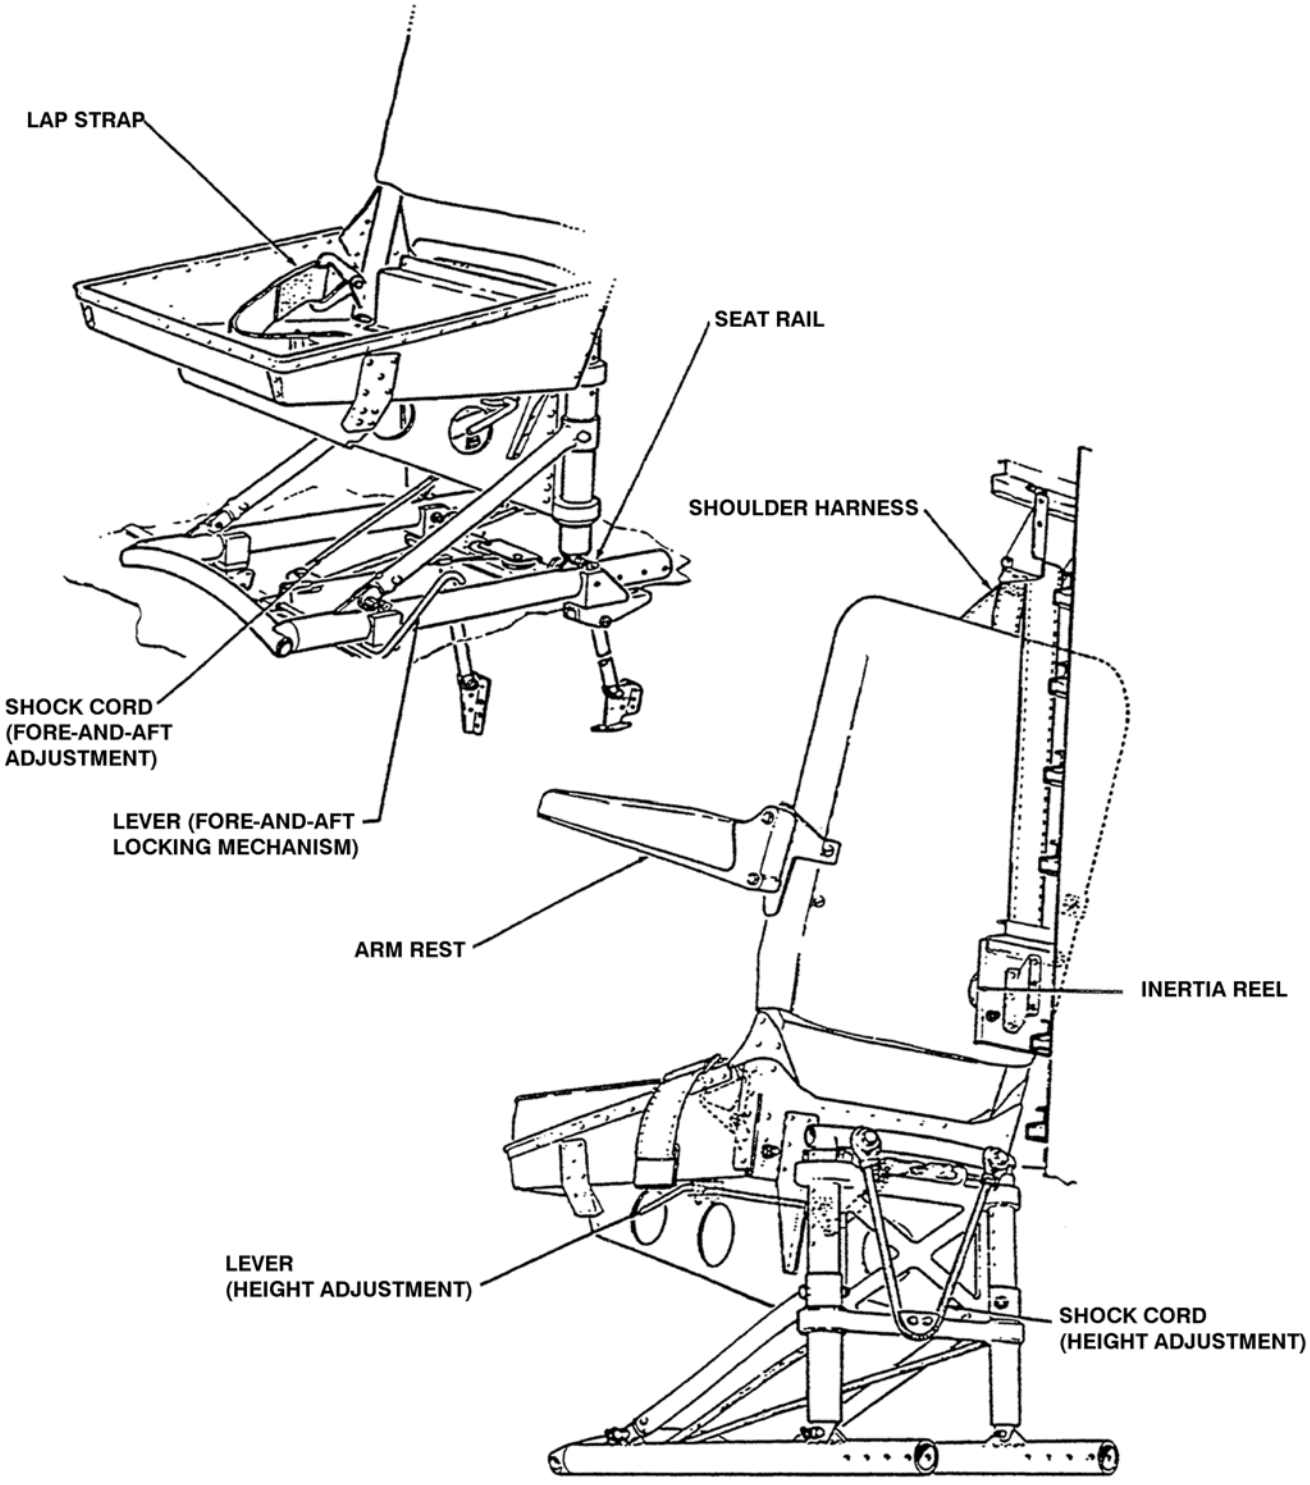

Pilot's and Co-pilot's Seats
Figure 1

3. Removal/Installation

A. Remove Pilot’s and Co-pilot’s Seats

1) Move seat to its fully-forward position and release shock cord from block on floor.

2) Withdraw four seat attachment pins and lift out seat.

B. Install Pilot's and Co-pilot’s Seats

1) Position seat and insert four seat attachment pins.

2) Move seat to fully forward position and engage shock cord with block on floor.

3) Operate seat height adjustment lever and fore-and-aft adjustment lever and check mechanism for release and correct locking.

4) If portable ELT mounting provisions are installed on co-pilot's seat, ensure that safety wire from No. 40 hole in case to ring on pull pin is intact. If safety wire is broken or improperly installed, install safety wire using 0.020–inch diameter copper locking wire. Using single method of safety wiring to ensure that it can easily be broken in an emergency.

This Page Intentionally Left Blank