Cargo Compartments – General Data

1. General

   Provision is made for carrying cargo in the front, rear and cabin compartments. Refer to Figure 1 for details.

2. Front Baggage Compartment

   Four permanently attached tie-down rings are provided in the front baggage compartment.


3. Rear Baggage Compartment

   Eight permanently attached tie-down rings are provided, four in the baggage compartment and four in the baggage compartment extension. A baggage restraint webbing is fitted at the semi-bulkhead between the baggage compartment and the extension.

4. Cabin Compartment

   The main cabin floor is stressed to carry loads of 200 pounds per square foot and the forward and rear baggage compartments are stressed to carry 100 pounds per square foot.

   With passenger seats removed, cargo tie-down rings can be attached to anchor nuts in the floor rails, seat side rails and the beam on the cabin rear bulkhead may be used for attaching tie-down rings when cargo is to be carried in the cabin. Douglas track is installed on the existing floor and side rails, and commercially-supplied tie-down rings designed for Douglas track may also be used.

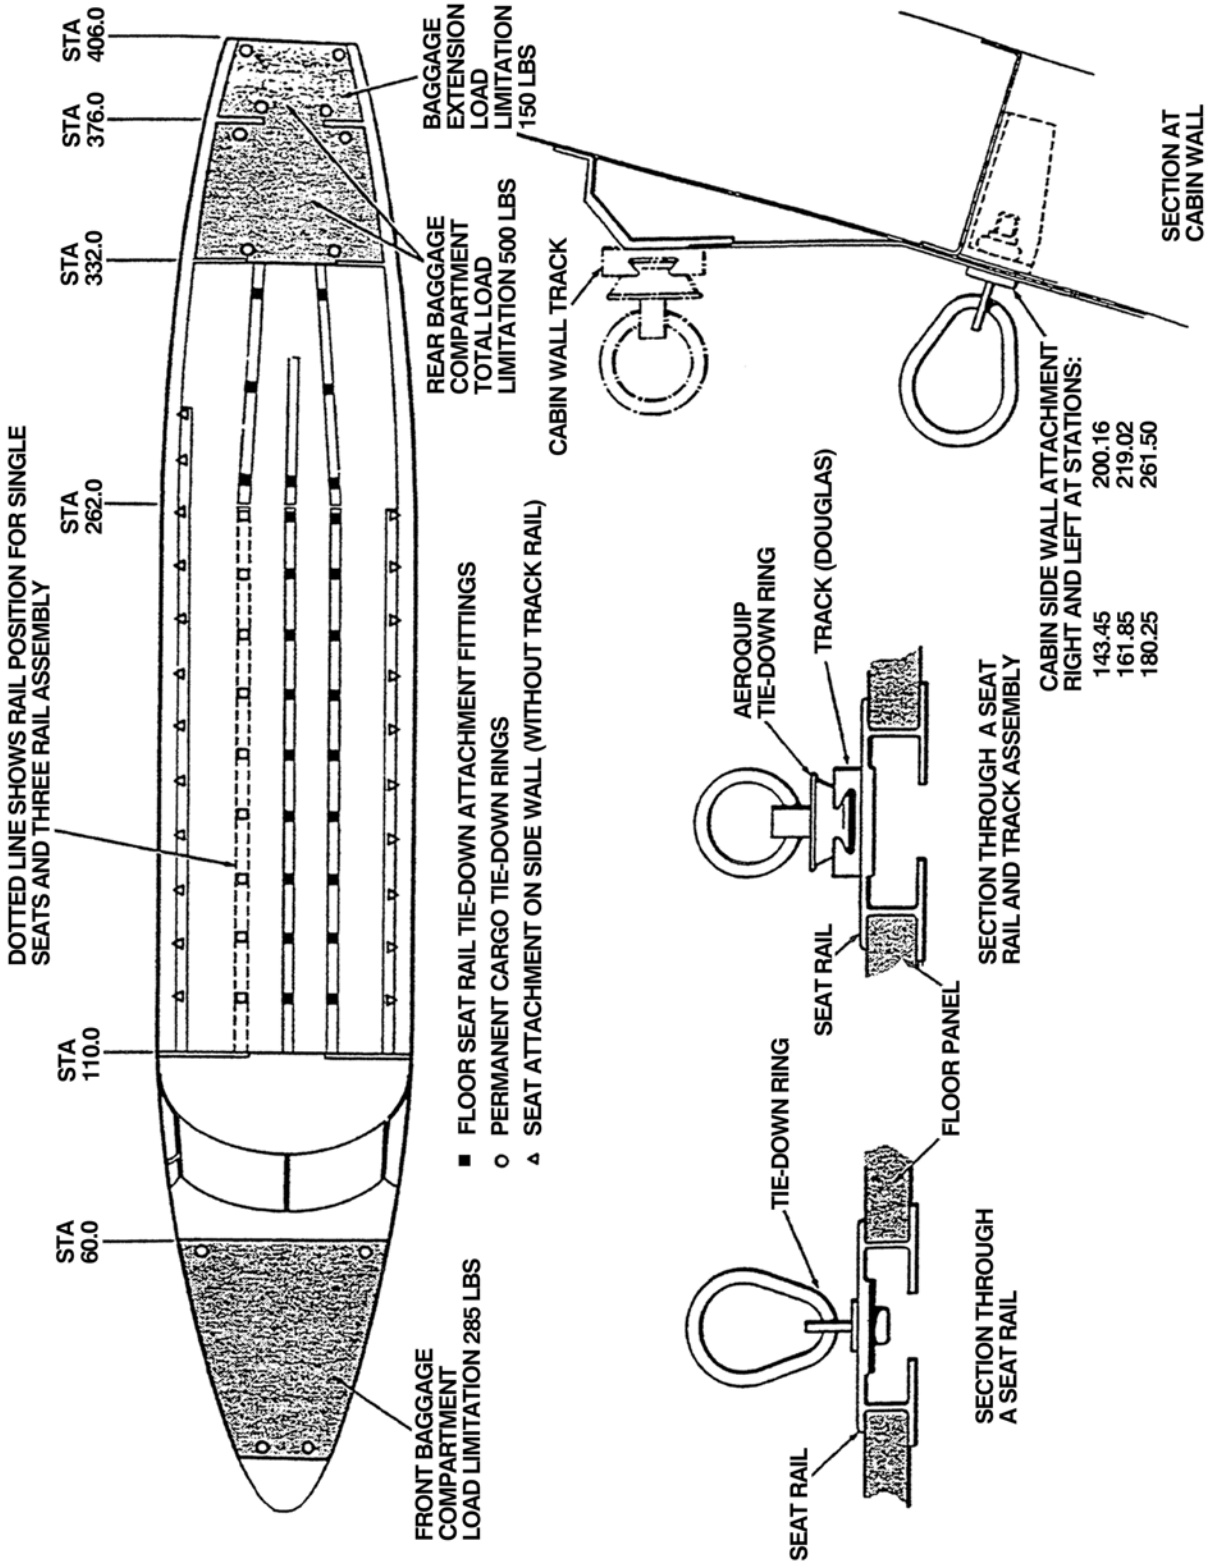

Cargo Tie-Down Point Locations
Figure 1