
Flight Compartment Axe and Axe Stowage (S.O.O. 6376) – General Data

1. General

For aircraft incorporating S.O.O. 6376, provisions have been made for stowing an axe in the flight compartment.

2. Description

The axe and axe stowage brackets are installed in the flight compartment on the cockpit sidewall, adjacent to the pilot's seat. The axe stowage structure consists of a metal holder which encases and supports the axe head, and a metal bracket with a nylon retention strap which retains the axe handle. The axe is removed by firmly pulling on the retention strap lanyard.

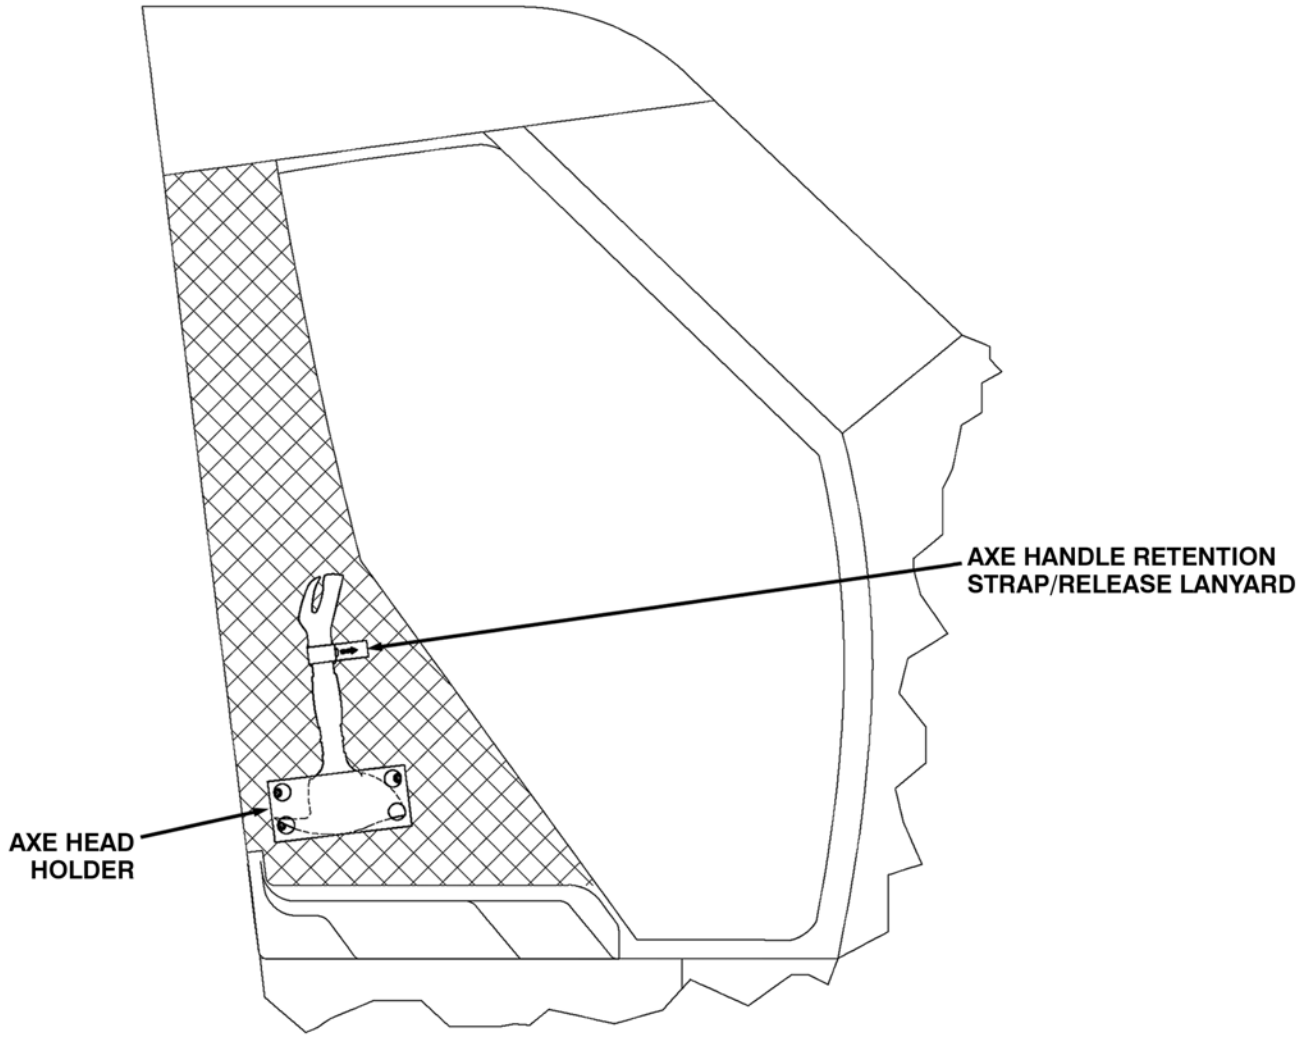

Flight Compartment Axe (S.O.O. 6376)
Figure 1

3. Removal/Installation

A. Removal of Axe and Axe Stowage Brackets

1) Remove axe by firmly pulling on the axe handle retention/release strap.

2) Carefully lift axe out of holder. Inspect the cutting edge and pike for signs of corrosion and loosening.

3) Remove the (4) screws securing the axe head holder to the cockpit sidewall. Retain all hardware.

4) Remove the axe head holder from the aircraft.

5) Remove the (2) screws and (2) spacers securing the axe handle bracket to the cockpit sidewall. Retain all the hardware.

6) Inspect the nylon retention strap/lanyard for signs of wear or deterioration of elastic and nylon webbing. Replace if worn or damaged.

7) Remove the axe handle bracket from the aircraft.

B. Installation of Axe and Axe Stowage Brackets

1) Install (4) screws which secure the axe head holder to the cockpit sidewall.

2) Install (2) screws and (2) spacers which secure the axe handle bracket to the cockpit sidewall.

3) Install axe head into axe head holder.

4) Secure the axe handle to axe handle bracket, using the retention nylon strap. A firm, audible click or snap will indicate the strap is properly fastened.

5) Ensure that the axe can be released when lanyard is firmly pulled.