Apex Database Files – Load Procedures

1. General

This procedure requires the APEX Database Files from epicinds.com.

Note A subscription is required.

2. Description

A. The APEX System for the DHC6-400 Twin Otter has four databases that can be loaded:

1) TERRAIN Database (Green CD or downloaded (approximately 550MB))

2) NAV Database – Transportation and Cities (Purple CD or downloaded (approximately 30MB))

3) NAV Database – World Database (Purple CD or downloaded (file located with same media as step 2))

4) CHARTS Database (Blue CD or downloaded (approximately 500MB))

B. Typical loading times are as follows:

1) TERRAIN – 30 minutes

2) NAV – 10 minutes

3) CHARTS – 45 minutes (based on full world coverage)

3. APEX Database Load Procedure

Insert the TERRAIN, NAV, or CHARTS Database Media and follow the loading procedure as described in 45-00-00, Central Maintenance Computer – General data.

Note The NAV database (purple CD) has two separate files to be loaded. For each of these files there is an extra file of the same name which is not compatible with the DHC-6 Series 400 Twin Otter. Selecting this file will produce a 'SYSTEM SOFTWARE INCOMPATIBLE' message. If this message is witnessed, select the alternate file.

When loading is complete, verify as follows:

A. TERRAIN:

1) Use the arrow keys on the MF Controller to navigate to the SYSTEMS PAGE. (Refer to Figure 1).

2) Push the PAGE button on the MF Controller. (Refer to Figure 2).

3) Use the Joystick to select SCMS/DL and push ENT on the MF Controller. (Refer to Figure 3).

Note There are multiple pages available under the Sys Config tab. To change pages, highlight Page Down or Page Up and press ENT on the MF Controller.

4) Scroll to the page displaying the AGM 1 and AGM 2 Terrain Server on the Sys Config tab. (Refer to Figure 4).

5) Verify that AGM 1 and AGM 2 TERRAIN SERVER shows the correct part number (the last seven digits of the part number downloaded or received on the CD, omitting the dash, is the number which will be displayed here).

B. NAV:

1) Use the arrow keys on the MF Controller to navigate to the DATABASE STATUS DISPLAY. (Refer to Figure 5).

2) Using the Joystick and ENT button on the MF Controller, select the Data Bases tab. (Refer to Figure 2 and Figure 6).

3) Under Navigation DB the effective dates of the currently loaded databases are displayed.

Note

- It may take up to a minute to display valid data on this page. (Refer to Figure 7).
- The current database is displayed in white. An expired database is displayed in yellow.
- The APEX system automatically selects the current database. If both databases are expired, the APEX system selects the newest of the two.

4) Verify that the current database is loaded.

C. CHARTS:

Note The display of Jeppesen charts is a Standard Option Order obtained from OEM and requires a substantiation to be activated from Jeppesen.

1) Use the arrow keys on the MF Controller to navigate to the DATABASE STATUS DISPLAY. (Refer to Figure 5).


2) Using the cursor on the MF Controller, select the Data Bases tab. (Refer to Figure 2 and Figure 6).

3) Under Charts the effective date of the currently loaded database is displayed in green. (Refer to Figure 6).


Note

- It may take up to a minute to display valid data on this page. (refer to Figure 7).
- If this option has not been activated, the display under Charts will display dashes.
- If the charts have not been loaded correctly but are activated, there will be no valid date displayed under Charts.


4) Verify that the date displayed is current.

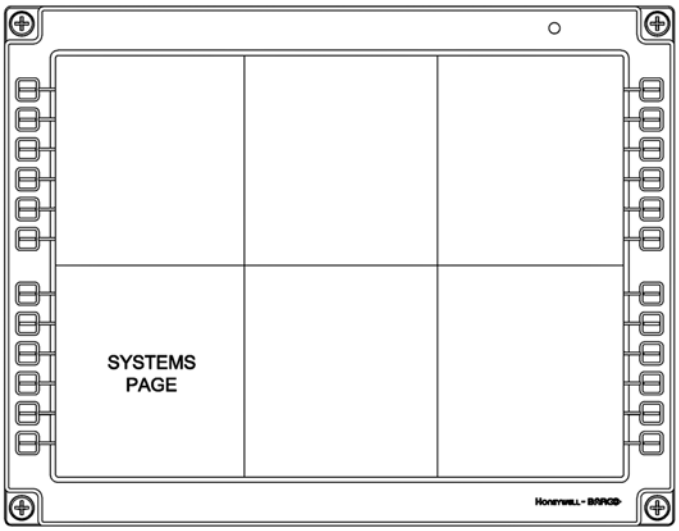


MFD (Lower Typical) – SYSTEMS PAGE Location
Figure 1

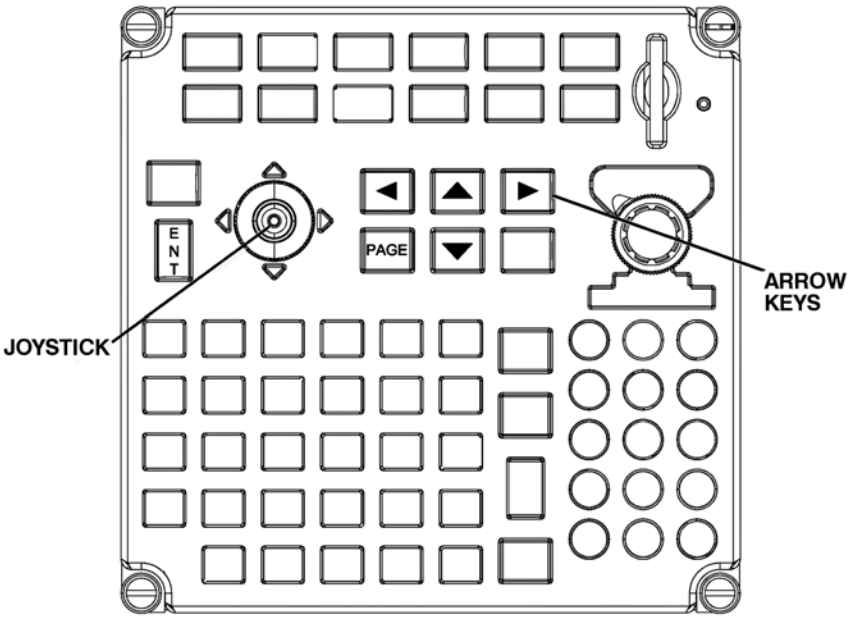


MF Controller
Figure 2

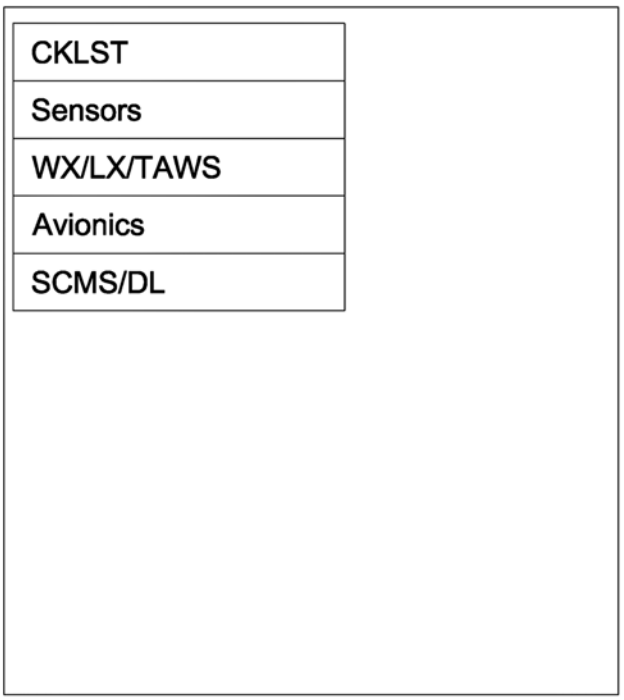


SYSTEMS PAGE Menu
Figure 3

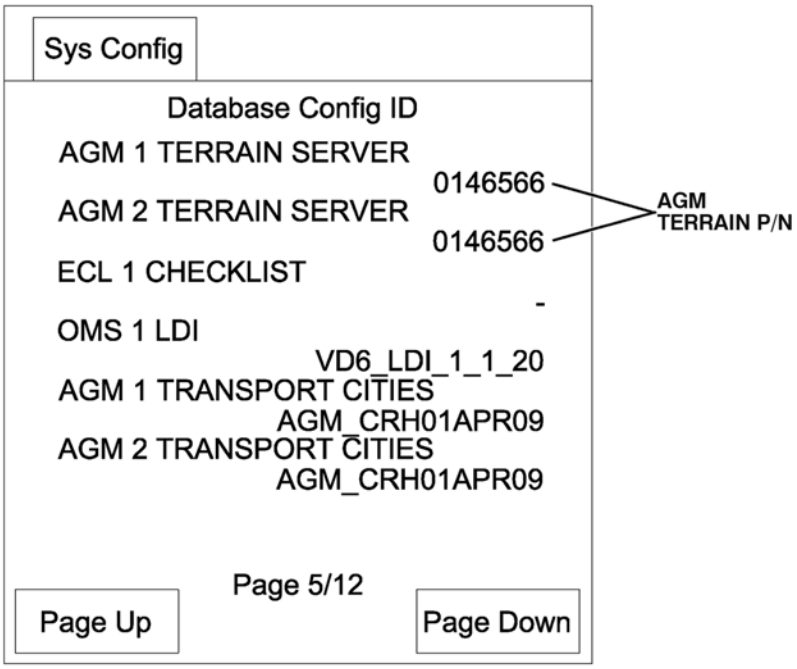


Systems Configuration Tab – (Page 5 Shown)
Figure 4

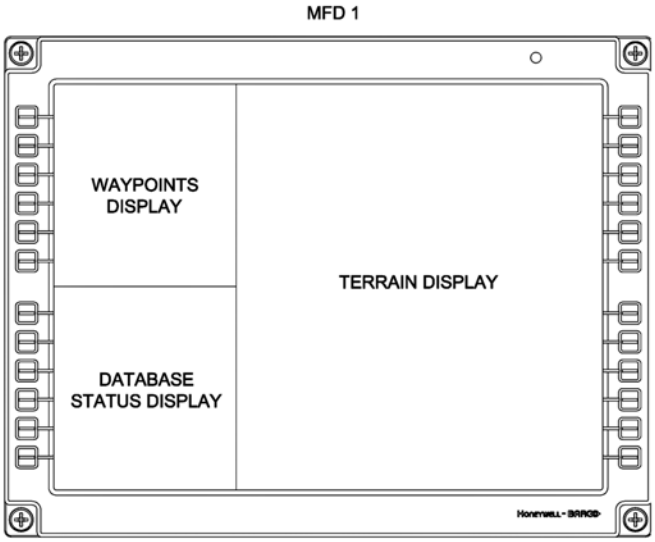

MFD (Upper Typical)
Figure 5

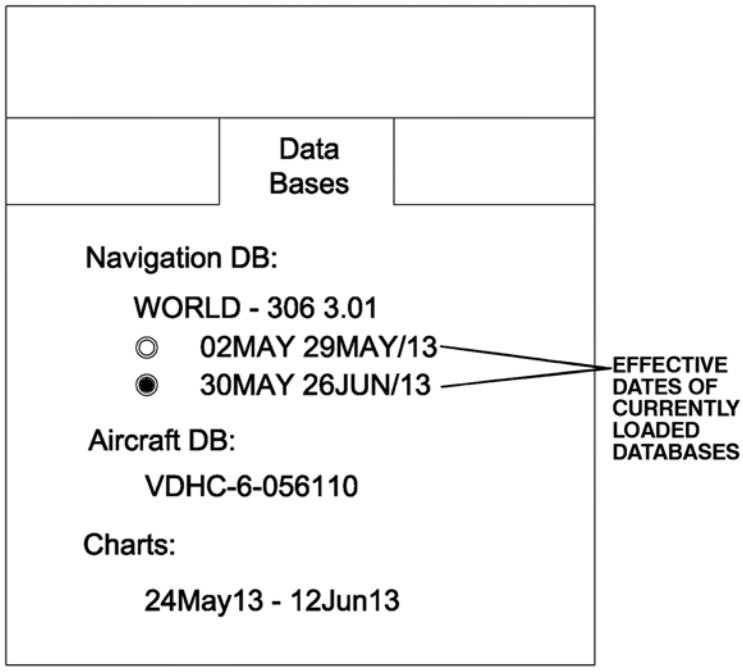

Databases Tab on Database Status Display
Figure 6

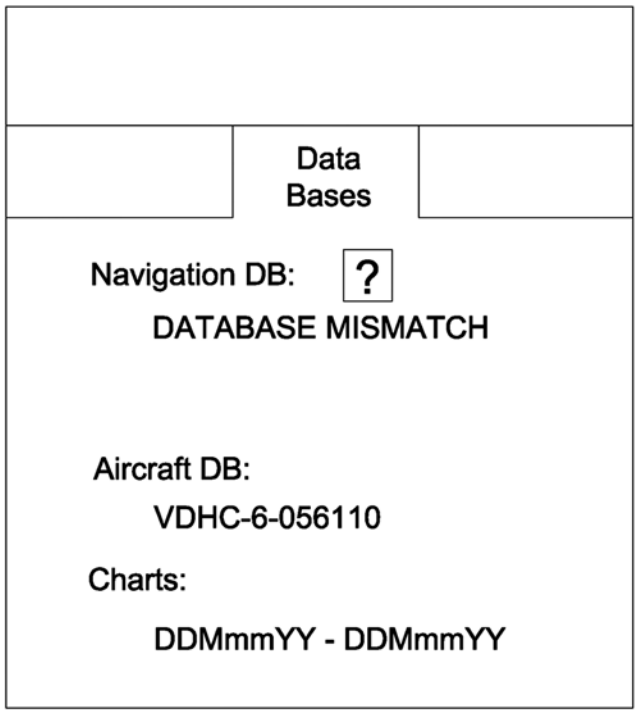

Databases Tab on Database Status Display
Figure 7

Print Date: 2025-09-15