Doors Unlocked Caution System – General Data

1. General

Refer to Figure 1 for details.

The doors unlock caution system, provides the pilot with a visual and an aural indication if any one of the five doors are not locked (on aircraft with S.O.O. 6393, Rear Baggage Door Removal, there are only four doors). Microswitches installed on the right hand cabin door, the front and rear baggage compartment doors and the Airstair door, operate when the associated door (or doors) are opened and complete a ground circuit for a caution message to be displayed through the CAS and an aural warning generated.

Doors not monitored by the system are the left hand and right hand pilot doors, the two plug type emergency doors and the aft portion of the rear cabin door.

2. Description

The 28 Volt DC supply to the system is through a 5 ampere DOORS UNLOCKED circuit breaker. The caution light is connected to the MAU and displayed on the CAS.

The front baggage compartment door, right hand cabin door, and the rear baggage compartment door have a single microswitch installed at each door position, each being electrically connected in parallel.

Note Aircraft with S.O.O. 6393 incorporated do not have a rear baggage compartment door and associated microswitch.


The airstair door has two microswitches connected in series with each other and in series with the control coil of an airstair door caution relay. The airstair door caution relay is located in the cabin roof at the rear of the fuselage station 262.00. One airstair microswitch is installed in the fuselage airstair door structure, and is actuated by the airstair door rear locking pin, the other microswitch is installed within the door and is operated by the door latch. With the aircraft electrical power on, and the airstair door closed and locked, the airstair door caution relay is energized (because of the ground provided through the microswitches for the relay coil), and normally closed contacts are open. Inversely, if the airstair door were unlocked or opened, the relay would deenergize, and its contacts would close, completing a ground circuit to the MAU (refer to Figure 1). Electrical connections to the airstair door lock microswitch are made by spring contacts on the door, and contact strips on the fuselage door surround structure, when the door is closed.

3. Operation

When the aircraft is on the ground or in the air and the Modular Avionics Unit detects a ground as a result of one or more doors being open, the following occurs:

1 MASTER CAUTION light on the instrument panel lights up. (Refer to 31-50-00, Monitor Warning System – General Data).

2 Doors Unlocked caution CAS message is displayed.

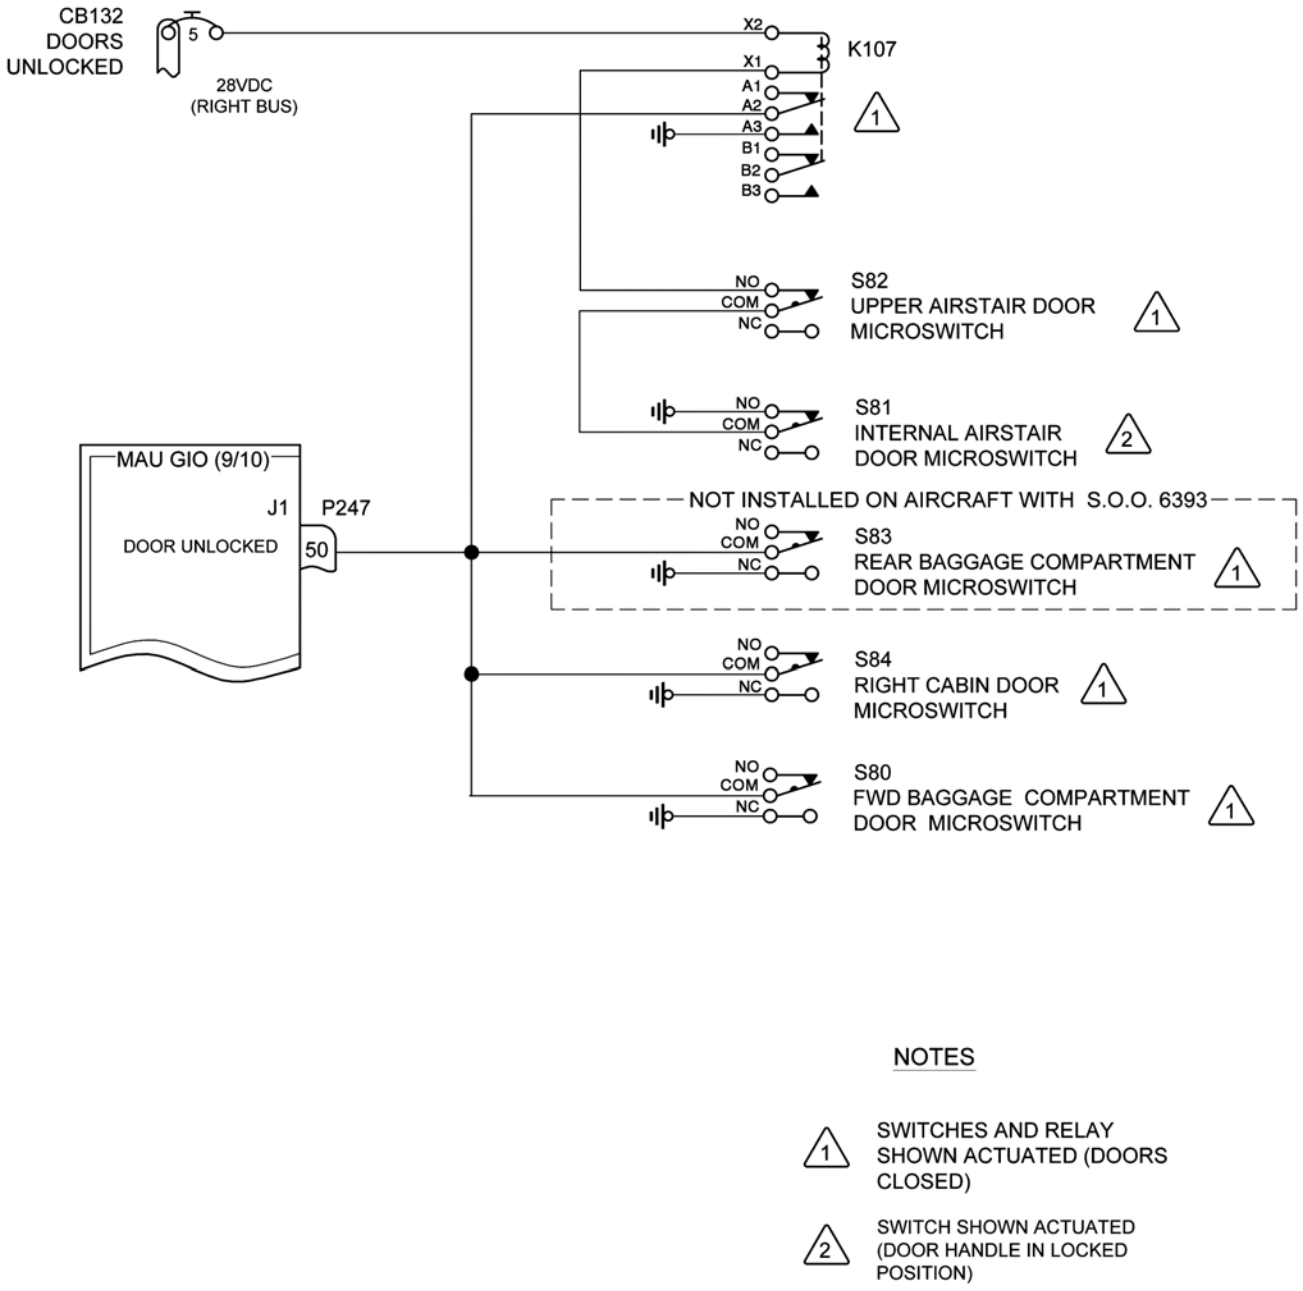

Doors Unlocked Caution – Electrical Schematic
Figure 1