
## Overhead Console – General Data

1. General

Refer to Figure 1 for details.

The overhead console contains the power, propeller, fuel and flap control levers, together with associated quadrants, pulleys and control cables. The power and propeller levers are fitted with friction locks and positioning detents. Incorporated in the overhead console is a power/propeller lever interlock which prevents reverse power lever selection at propeller speeds below 91% rpm. There are five microswitches mounted in the overhead console, four are operated by the fuel control levers in the OFF position and one operated by the power levers in the reverse range. The fuel lever microswitches are operated during the start cycle to change the starter from a compound motor to a series motor, and provide fuel off indication to the CAS. The power lever microswitch is operated in the reverse range to detect the command of reverse power.

The console also has a spring-loaded hinged guard, fitted on the front of the console to prevent inadvertent movement of the fuel levers when they are in the ON position.

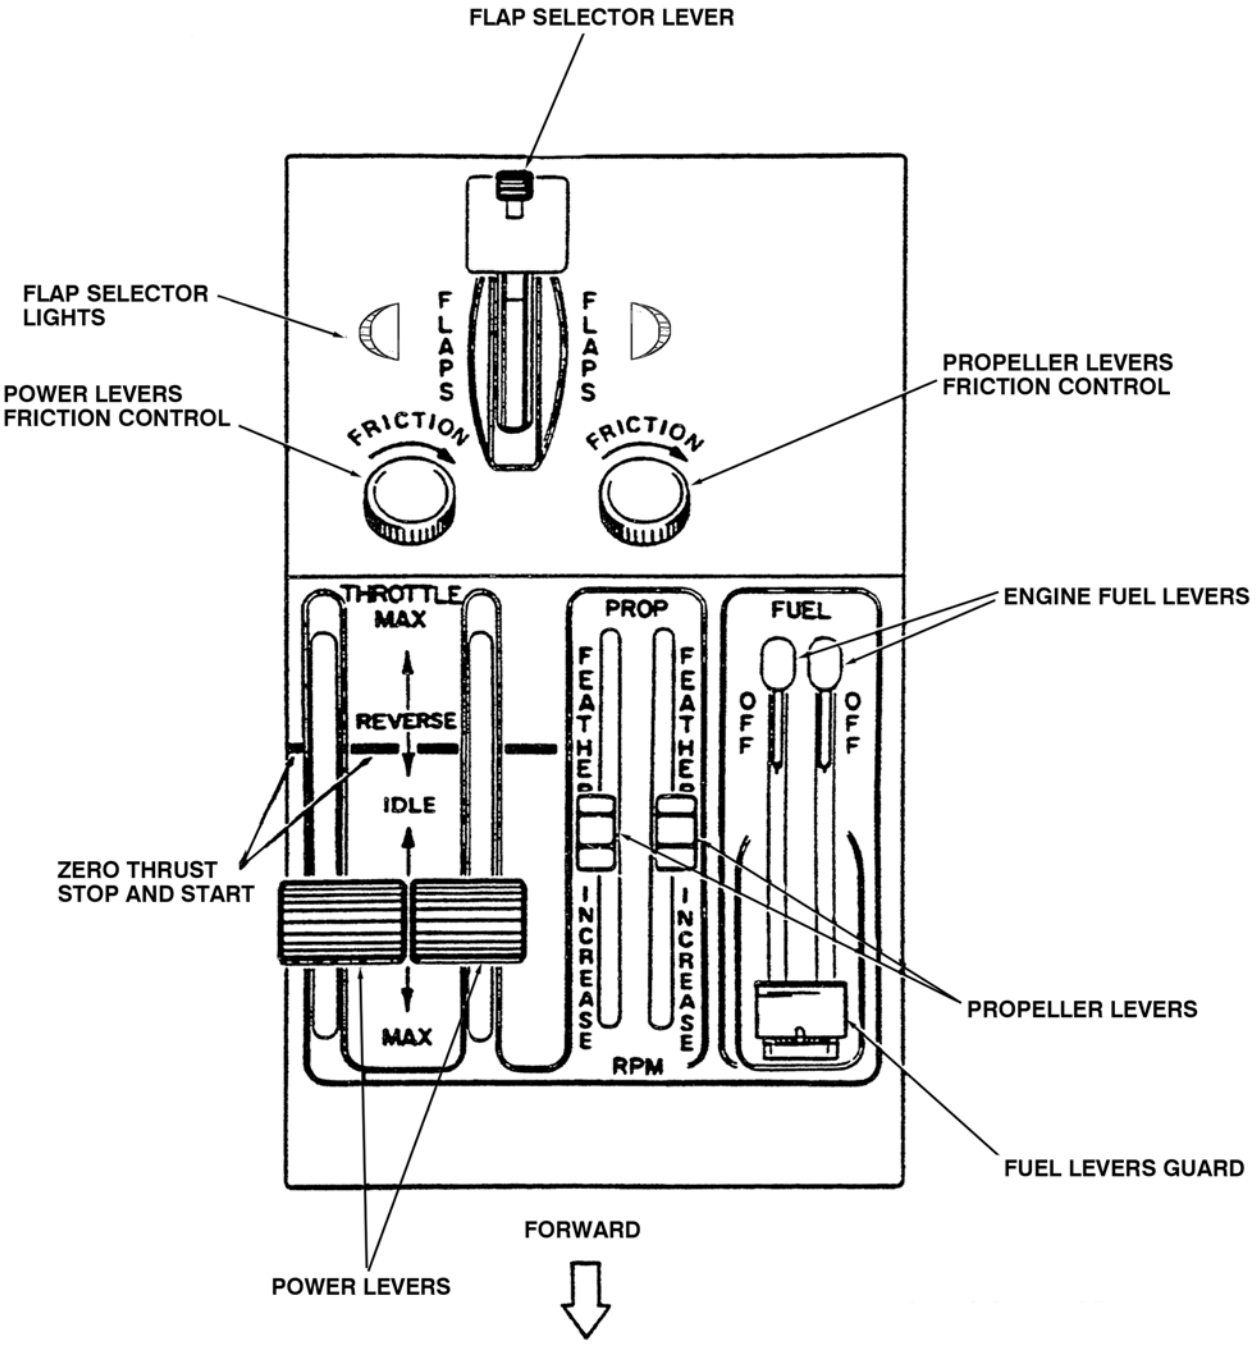


Overhead Console
Figure 1

2. Adjustment/Test

Refer to Figure 2 for details.

A. Rig Power/Propeller Lever Interlock

1) Disconnect power push rods from power control pulleys (refer to 76-10-00, Power Control – Maintenance Practices) and remove left side fairing and lower panel from overhead console.

2) Raise latch lever to main quadrant shaft and support in this position with an 0.06 inch separator between latch lever and main quadrant shaft.


3) Set both power levers to the MAX REVERSE position.

4) Advance propeller lever to maximum rpm position and adjust stop screw, on latch lever shaft, to contact propeller quadrant. Retard propeller lever to mid range.

5) Repeat Para 2.A.4) for opposite propeller lever.

6) Release latch lever and set both power levers to the IDLE position.

7) Check that power levers cannot be moved into REVERSE until either propeller lever is in last inch (approximately) of forward travel. Connect power push rods to power control pulleys.

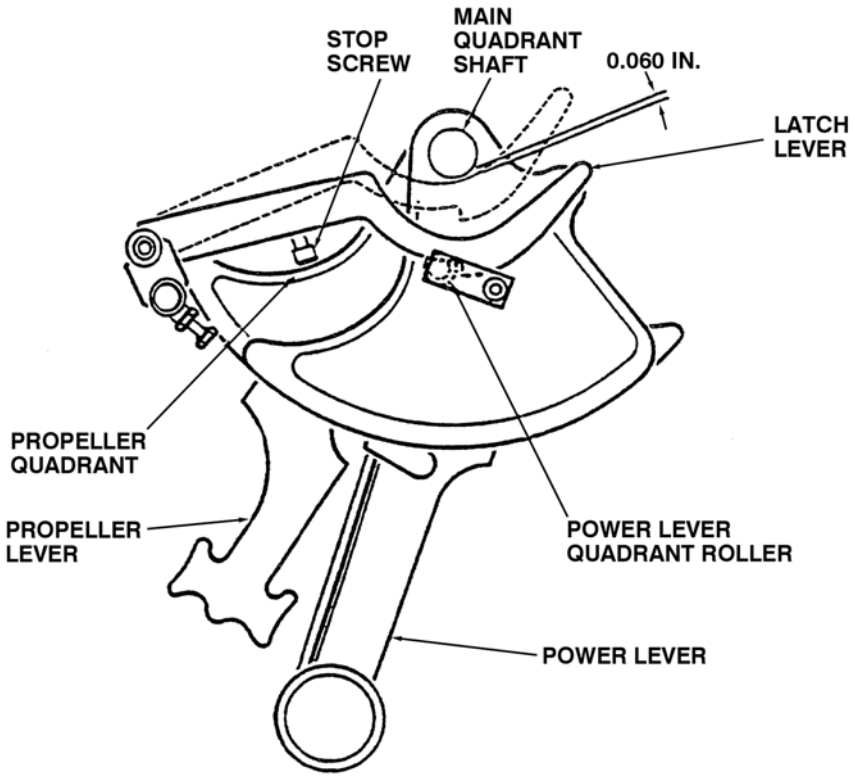


Rigging Power/Propeller Lever Interlock
Figure 2

**This Page Intentionally Left Blank**