
Overhead Panel – General Data

1. General

The overhead control panel contains the electrical master switch, the power source selection switch, the start and ignition switches, landing light and generator control switches (refer to the specific chapters for the controls installed). (Refer to Figure 1).

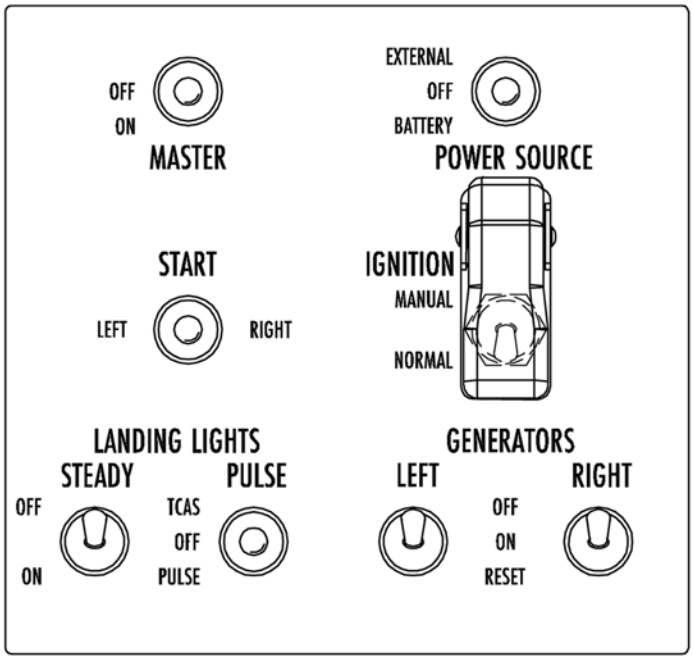


Starter Switch Panel (Pre Mod 6/2314)
Figure 1

The panel is internally lit with LED lights. (Refer to 33-00-00, Lights – General Data).

The overhead panel is located on the flight compartment roof on the pilot's left hand side.

Aircraft incorporating Mod 6/2314, the overhead control panel contains the electrical master switches for the EXTERNAL and BATTERY power sources, the start and ignition switches, landing light and generator control switches (refer to the specific chapters for the controls installed). (Refer to Figure 2).

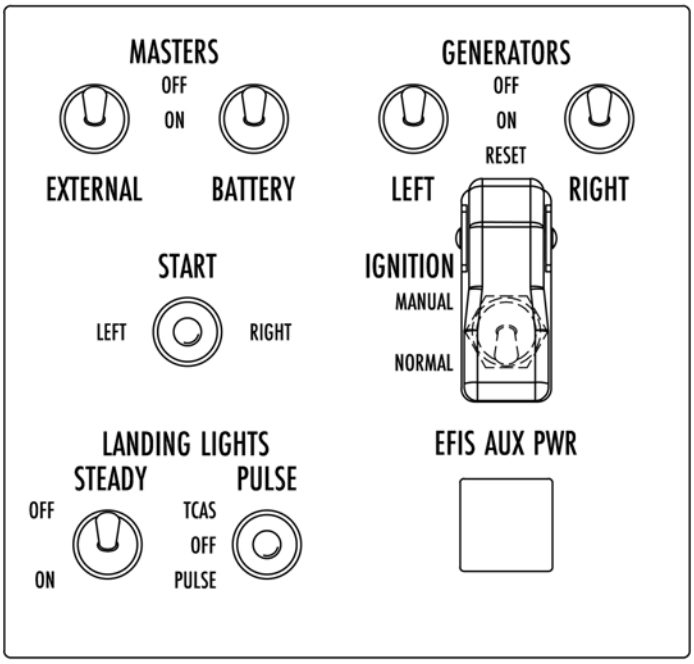

Starter Switch Panel (Post Mod 6/2314)
Figure 2