Parking Brake – General Data

1. General

A push-pull type parking brake handle is located on a pedestal between the pilot's rudder pedals. The handle has restricted movement on the parking brake rod assembly and is spring-loaded to the off position. The rod assembly is connected to a forked lever fitted with two adjustable stops. These stops ride in machined portions of the brake control valves torsion tube levers, and when the brake pedals are fully depressed and the parking brake applied, the forked lever holds the torsion tube levers and brake control valves in brakes on position. To release the brakes, pressure on the brake pedals will allow the spring loading of the parking handle to push the forked lever clear of the torque levers. Refer to Figure 1 for details.


2. Adjustment/Test

A. Parking Brake Adjustment

1) Slacken jam nuts on forked lever stops (refer to Figure 1).

2) Have operator depress brake pedals and pullout parking brake handle. While maintaining position, adjust stops to contact torsion tube levers.

3) Tighten jam nuts. Depress pedals and observe that parking brake handle releases. Re-adjust stops, if necessary, to obtain this condition.

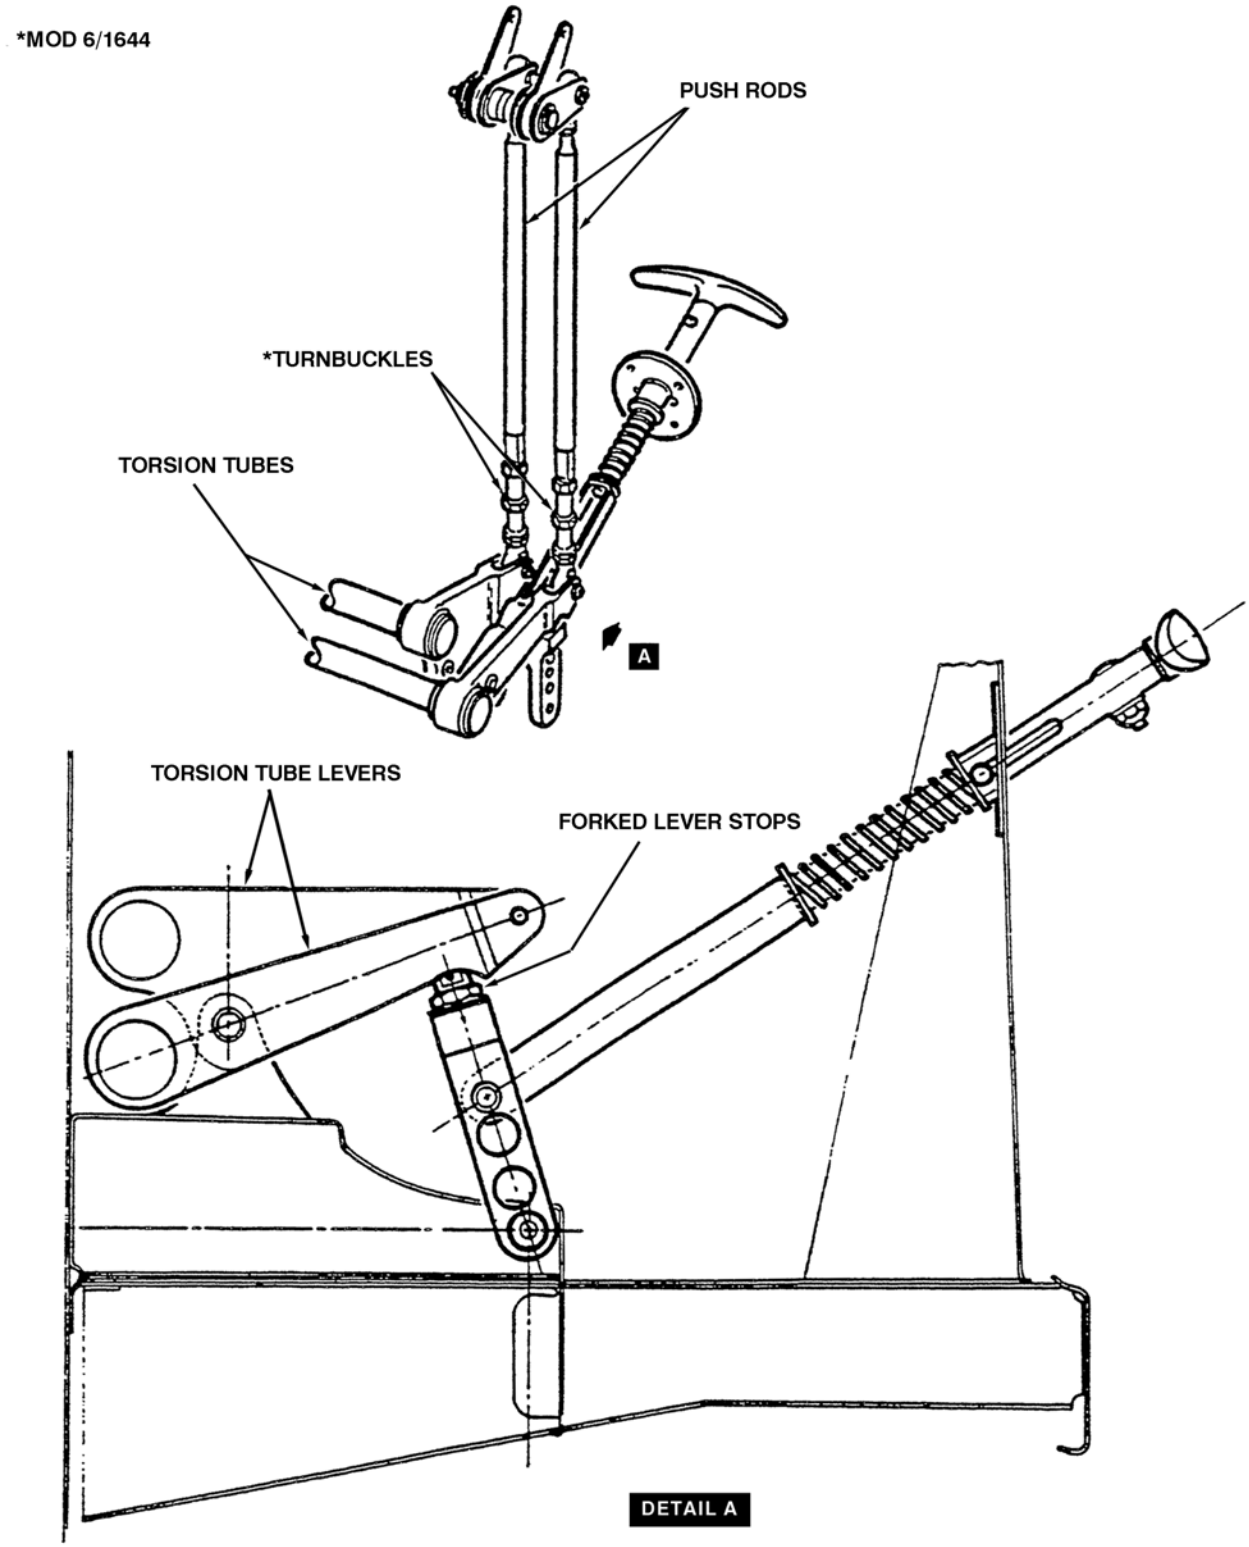

Parking Brake
Figure 1