

Windshield Wiper System (Mod 6/2088) – General Data

1. General

The windshield wiper system consists of two converters, one for each window panel, each having a driving arm and a 12–inch wiper blade. The converters are driven through flexible drive shafts by a single 28 Volt DC motor. The system is controlled by two switches labeled WIPER SPEED and WIPER located on the pilot's subpanel. The WIPER SPEED selects the operating speed, has two marked positions SLOW and FAST. The WIPER switch has 3 positions ON–OFF–PARK. The circuit is protected by a WINDSHIELD WIPER circuit breaker on the circuit breaker panel. When selected to PARK, both wipers should stop adjacent to, and parallel with, the windshield center post. Refer to Figure 1 and Figure 2 for details.

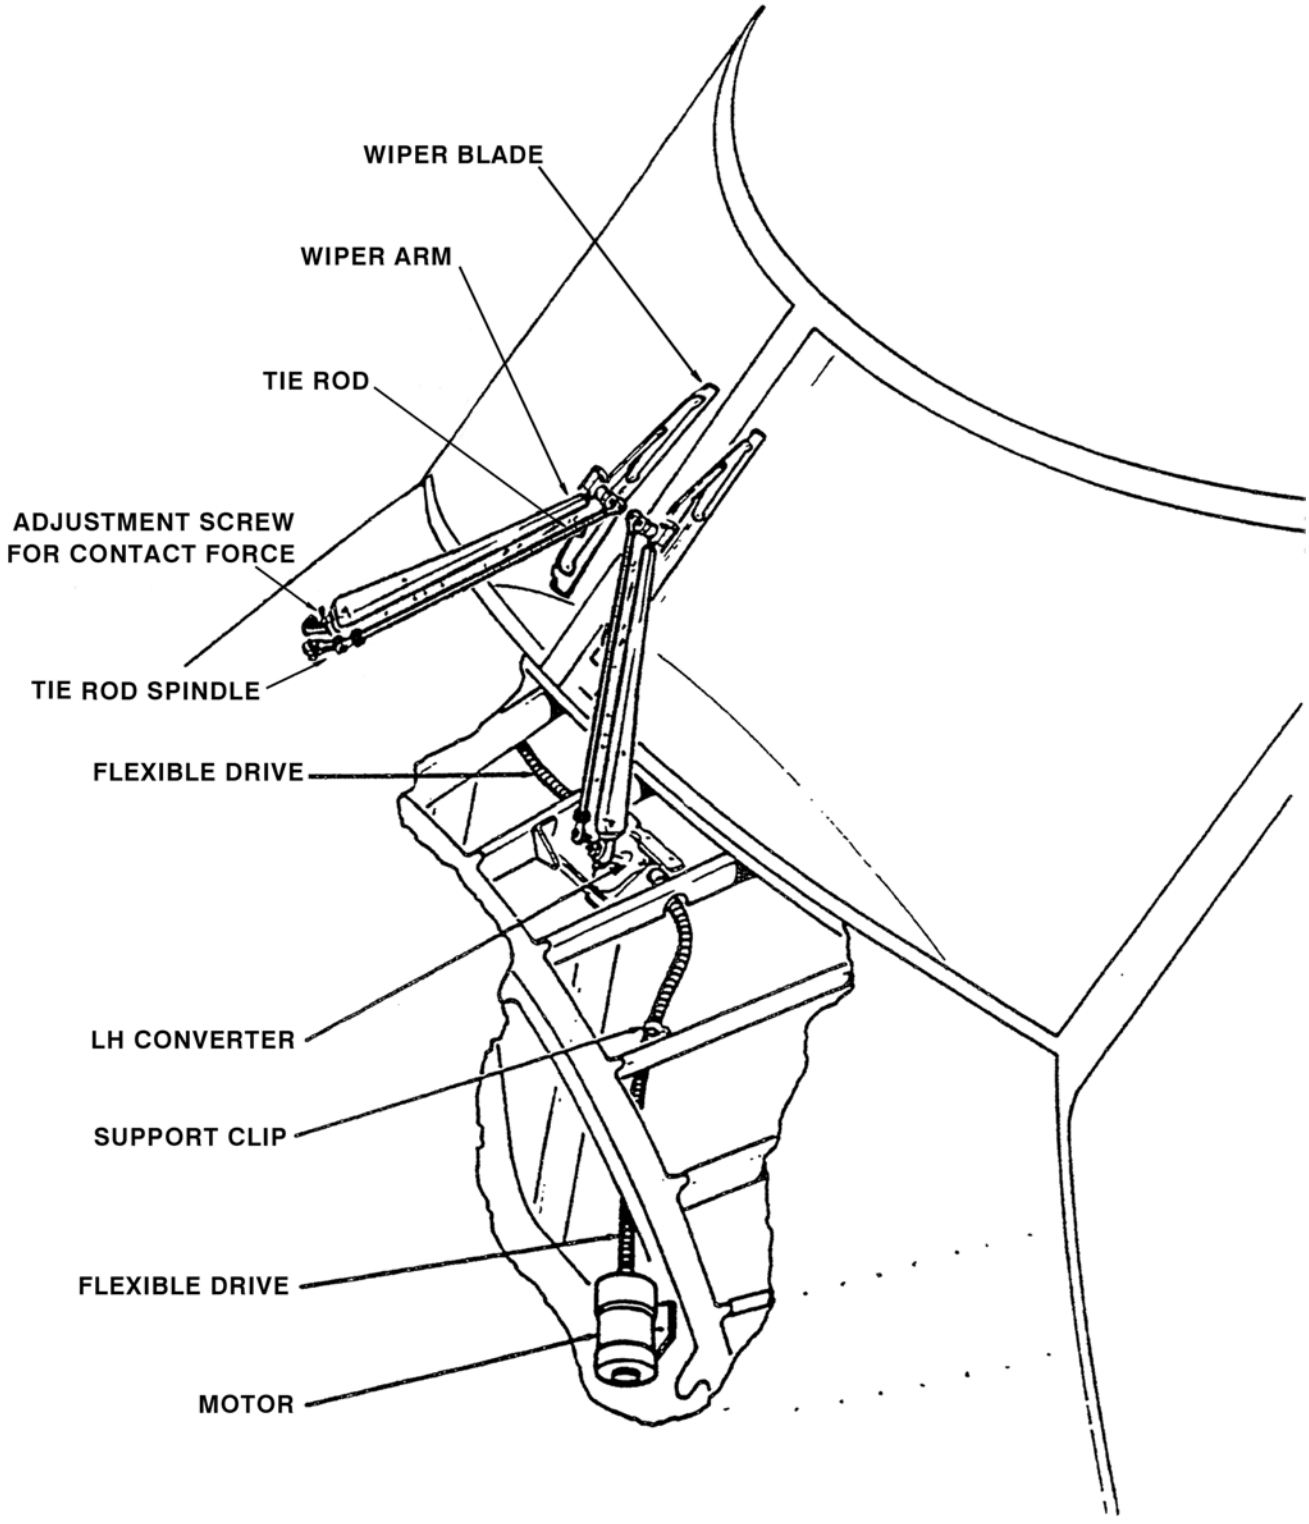

Windshield Wiper System Installation
Figure 1

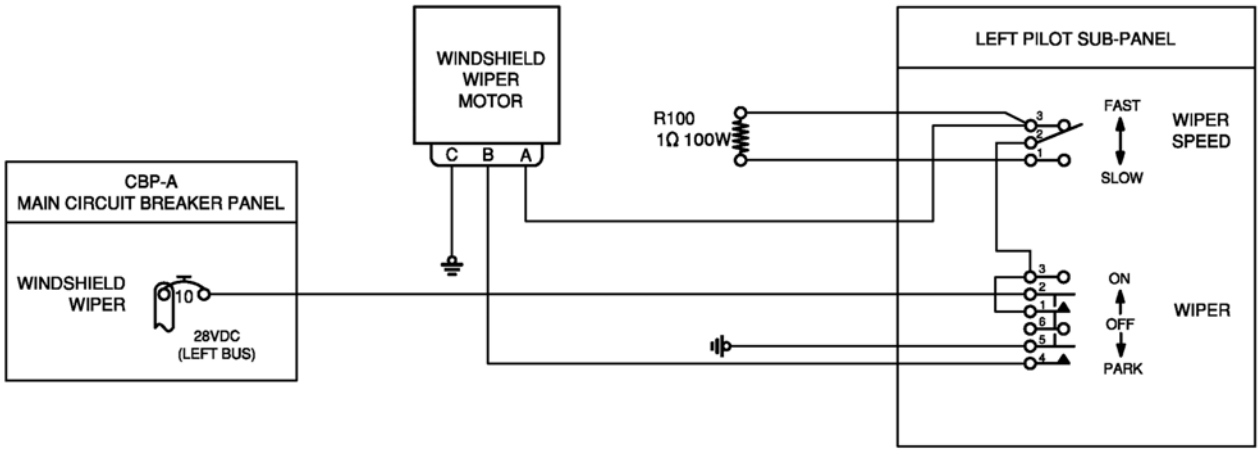

Windshield Wiper Systems – Electrical Schematic
Figure 2

2. Adjustment/Test

A. Operational Test Windshield Wiper System

Note During the following test, maintain an adequate supply of water to the windshields, to prevent the blades operating on a dry surface.

1) Apply DC power (refer to 12-00-00, Servicing – General Data, Para 2.).

2) Engage the WINDSHIELD WIPER circuit breaker and select the WIPER switch to ON.

3) Ensure that each blade wipes the windshield clean of water, that wiper arms traverse 90°, and that both blades operate to between 1.8 and 2.0 inches from the center of the windshield center post.

4) Select the WIPER SPEED switch between FAST and SLOW and check that speed of wipers varies accordingly.

5) Select the WIPER switch to PARK then release to OFF position. Ensure left wiper blade parks 1.8 to 2.0 inches from center of the windshield center post.

6) Disengage WINDSHIELD WIPER circuit breaker.

7) Disconnect DC power (refer to 12-00-00, Servicing – General Data, Para 2.).

This Page Intentionally Left Blank