Windshield Wiper Arm and Blade (Mod 6/2088) – Maintenance Practices

1. Removal/Installation

Refer to Figure 1 for details.

A. Remove Windshield Wiper Arm and Blade

1) Remove nut and washers attaching tie rod to spindle.

2) Remove bolt and washer securing arm to converter shaft.

3) Remove arm complete with tie rod and blade.

B. Install Windshield Wiper Arm and Blade

1) Apply DC power (refer to 12-00-00, Servicing – General Data, Para 2.).

2) Engage WINDSHIELD WIPER circuit breaker, and select the WIPER switch to PARK.

3) Install left or right wiper arm and blade assembly as follows:

a) Left wiper arm and blade:

Align arm splines with splines on left converter shaft, so that distance between center of windshield center post and the wiper blade pivot point is between 1.8 and 2.0 inches. Install washer and bolt to secure arm to converter shaft; lockwire bolt.

b) Right wiper arm and blade:


Align arm splines with splines on right converter, so that distance between center of windshield center post and the wiper blade pivot point is between 1.8 and 2.0 inches. Install washer and bolt to secure and to converter shaft; lockwire bolt.

4) Adjust tie rod until wiper blade is parallel with windshield center post. Secure tie rod to spindle with washers and nut.

5) Using special tool XW20509 (Alco Controls Div. Emerson Electric Co., St. Louis. Mo.), adjust wiper arm spring tension by adjusting screw at lower end of wiper arm, until a blade contact force of 4.5 pounds is obtained.

Note Measure contact force by attaching spring scale to wiper blade pivot, and by pulling at a right angle to and away from windshield.

6) Test windshield wiper system for operation. (Refer to 30-45-00, Windshield Wiper System (Mod 6/2088) – General Data).

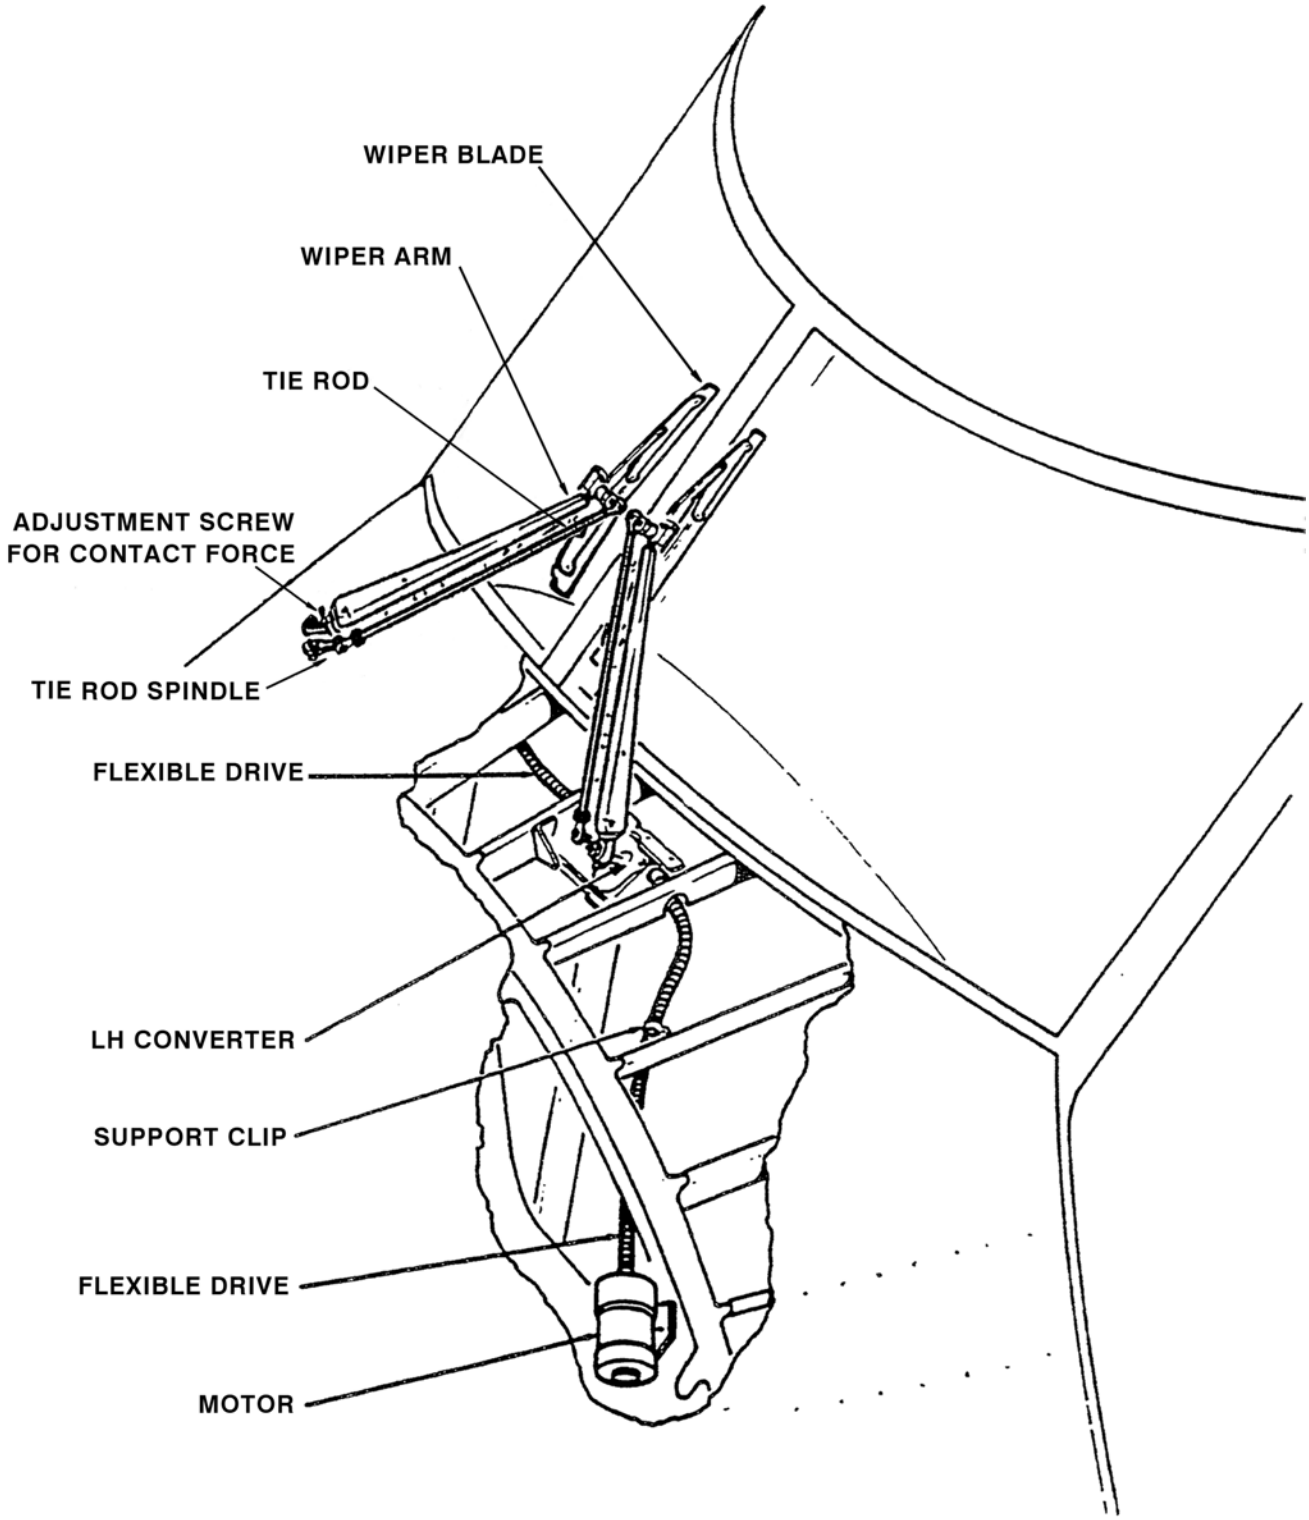

Windshield Wiper System Installation
Figure 1