Windshield Wiper Motor (Mod 6/2088) – Maintenance Practices

1. Removal/Installation

Refer to Figure 1 for details.

A. Remove Windshield Wiper Motor

1) Gain access to forward face of bulkhead at station 60.00.

2) Disconnect electrical wiring from windshield wiper motor.

3) Disconnect flexible drive from motor.

4) Remove four bolts and washers securing mounting plate to the bulkhead bracket and remove mounting plate with wiper motor attached.

5) Remove four screws securing wiper motor to mounting plate and remove motor.

B. Install Windshield Wiper Motor

1) Position wiper motor on mounting plate and secure with four screws.

2) Position mounting plate on bulkhead bracket and secure with four bolts and washers.


3) Ensure that flexible drive shaft is correctly engaged in left converter.

4) Connect flexible drive shaft to motor. Lockwire drive shaft connecting nut.

Note Position support clip (if fitted), to ensure flexible drive is a minimum of 0.10 inch clear of artificial horizon and does not contact other systems.

5) Connect electrical wiring to motor.

6) Test windshield wiper system for operation. (Refer to 30-45-00, Windshield Wiper System (Mod 6/2088) – General Data).

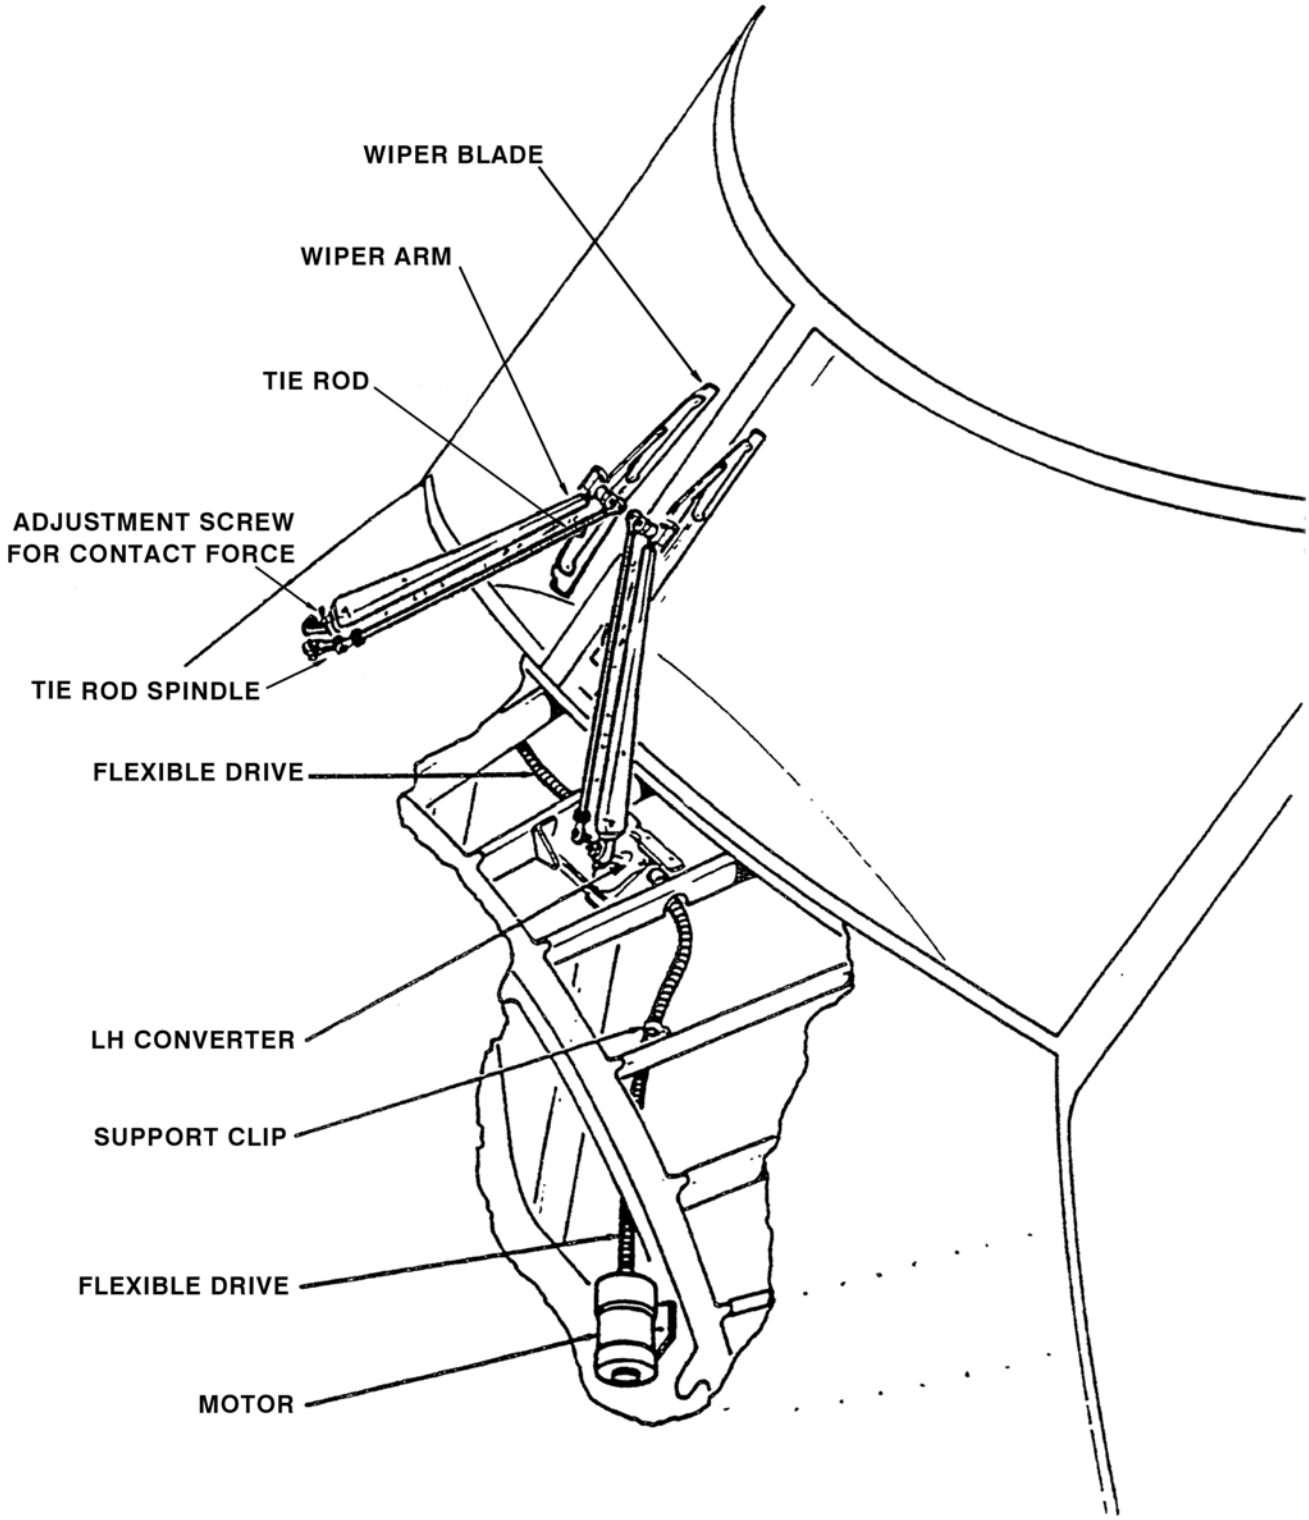


Windshield Wiper System Installation
Figure 1