Windshield Wiper Converters (Mod 6/2088) – Maintenance Practices

1. Removal/Installation

Refer to Figure 1 for details.

A. Remove Windshield Wiper Converter

1) Remove relevant windshield wiper arm and blade. (Refer to 30-45-12, Windshield Wiper Arm and Blade (Mod 6/2088) – Maintenance Practices).

2) Disconnect flexible drive(s) from appropriate converter.

3) Remove and retain the three bolts and washers, securing converter to mounting plate.

4) Withdraw converter from mounting plate.

B. Install Windshield Wiper Converter

1) Locate converter drive shaft through skin and secure to mounting plate using bolts and washers retained during removal.

2) For installation of left converter, (pilot's side) proceed as follows:

a) Connect input drive shalt.

b) Apply DC power (refer to 12-00-00, Servicing – General Data, Para 2.).

c) Engage WINDSHIELD WIPER circuit breaker and select the WIPER switch to PARK.

d) Ensure that left converter wiper arm drive shaft is at limit of counterclockwise movement, (looking aft at front of windshield.)

e) Ensure that right converter wiper arm drive shaft is also at limit of clockwise movement, looking aft at front of Windshield adjusting manually as required.

f) Ensure that flexible drive shaft is correctly engaged in right converter.

g) Connect interconnecting flexible drive to left converter and lockwire drive shaft connector.

Note Position support clip (if fitted), to ensure flexible drive is a minimum of 0.10 inch clear of artificial horizon and does not contact other systems.

3) For installation of right converter, (co-pilot's side) proceed as follows:

a) Apply DC power (refer to 12-00-00, Servicing – General Data, Para 2.).

b) Engage WINDSHIELD WIPER circuit breaker and select the WIPER switch to PARK.

c) Ensure that left converter wiper arm drive shaft is at limit of counterclockwise movement, looking aft at front of windshield.


d) Ensure that right converter wiper arm drive shaft is also at limit of clockwise movement, looking aft at front windshield adjusting manually as required.

e) Ensure that flexible drive shaft is correctly engaged in left converter.

f) Connect interconnecting flexible drive to left converter and lockwire drive shaft connector.

4) Seal between fuselage skin and converter drive outer sleeve using Pro-Seal 735. (Refer to 20-50-02, Sealant and Adhesives – General Data).

5) Install relevant windshield wiper arm and blade. (Refer to 30-45-12, Windshield Wiper Arm and Blade (Mod 6/2088) – Maintenance Practices).

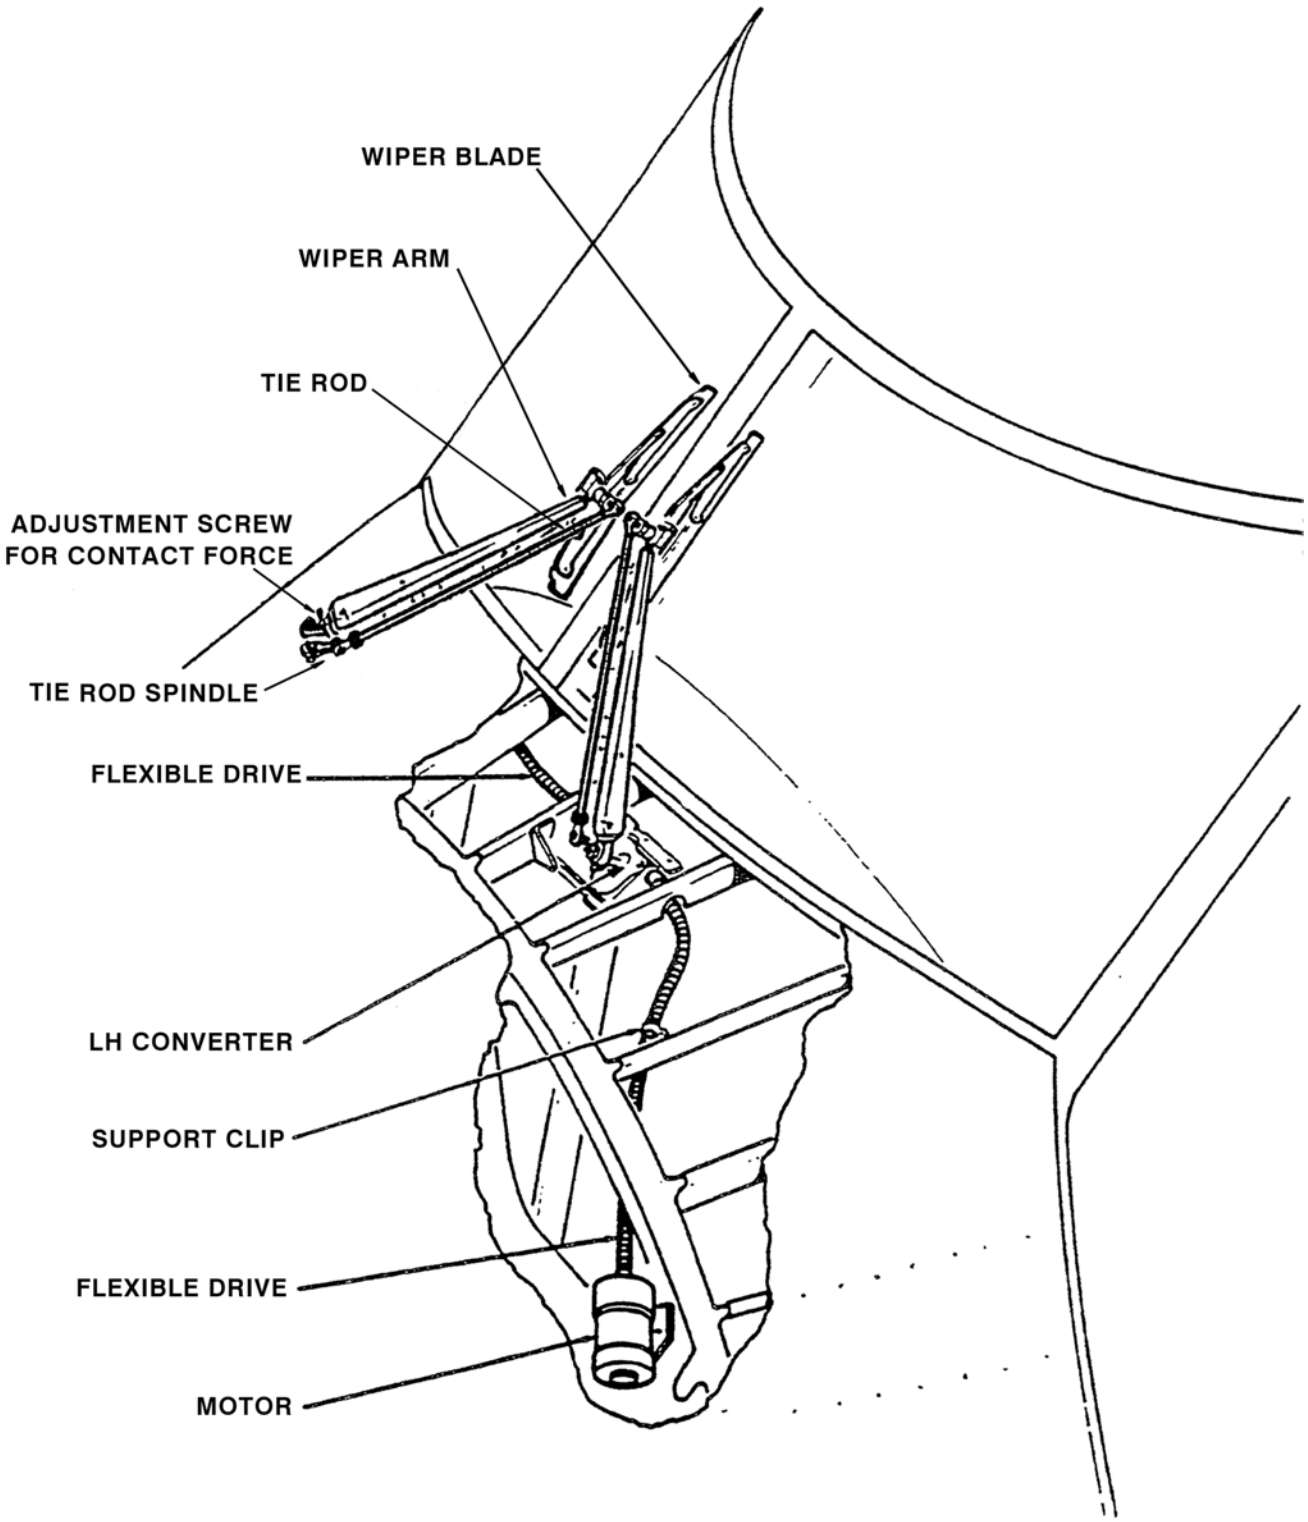

Windshield Wiper System Installation
Figure 1

This Page Intentionally Left Blank