Apex Controllers – General Data

1. General

The Primary Flight Display (PFD) controller, Multi-Function (MF) controller, and a flight controller which provides pilot interface to the Apex system.

The DHC-6 Series 400 avionics suite is developed around a four-screen Honeywell Primus Apex® Electronic Flight Instrument System (EFIS). The suite fully integrates primary flight display, communication, navigation, engine instrument displays, electrical and other systems displays, and crew alerting system (CAS) messages through Apex. Options are provided for some Apex and federated equipment items and safety systems including but not restricted to electronic checklists, electronic charts, TCAS I (optional TCAS II), EGPWS, and flight data recorder, cockpit voice recorder and emergency locator transmitter systems. Airframe signals are interfaced to Apex through two Data Acquisition Units (DAUs).


2. Description

A. PFD Controller (KMC 2210)

During normal, non-reversion operation, the PFD controller provides control of window navigation on the lower 1/6th window of the PFD for radio operation. Key functions are illustrated in Figure 1. The left and right PFD controllers each have an Air Data and solid-state Attitude/Heading Reference System (ADHRS) button, which can be used to change the PFD ADAHRS source channel. In the event of failure or degradation of the signal from the channel normally used, the signal from the opposite-side channel may be selected. ADAHRS source annunciations will be shown in amber in the lower left region of PFD attitude director indicator (ADI) window when the same source has been selected on both left and right PFDs, otherwise, the source annunciation is displayed in white.

The PFD Controller for the Pilot's PFD is installed on the instrument panel to the right of the Pilot's PFD. It allows the Pilot to navigate within the windows on the Pilot's PFD screen and set the format for the system information to be displayed. The Pilot's PFD Controller also acts as a backup to the Co-pilot's PFD controller in the event of a failure. 28 Volt DC power is provided from the left bus through a 3 amp PILOT PFD CTRL (Q1) circuit breaker on the avionics circuit breaker panel (refer to 24-00-00, Electrical Power – General Data). Bezel key and face lighting is controlled by the INSTRUMENT PANEL dim potentiometer.

The PFD Controller for the Co-pilot's PFD is installed on the instrument panel to the left of the Co-pilot's PFD. It allows the Co-pilot to navigate within the windows on the Co-pilot's PFD screen and set the format for the system information to be displayed. The Co-pilot's PFD controller also acts as a backup to the Pilot's PFD Controller in the event of a failure. Bezel key and face lighting is controlled by the INSTRUMENT PANEL dim potentiometer. 28 Volt DC power is provided from the right bus through a 3 amp COPILOT PFD CTRL (Q2) circuit breaker on the avionics circuit breaker panel (refer to 24-00-00, Electrical Power – General Data).

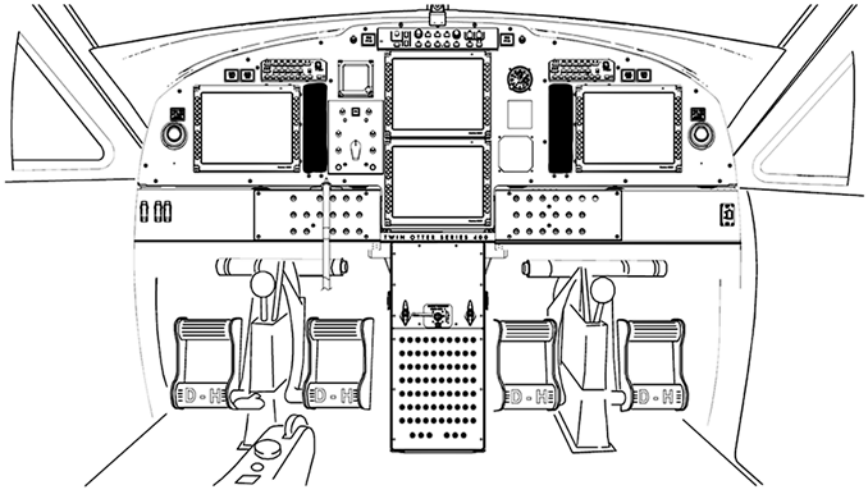



BARO rotary click knob for the setting of the current barometric pressure valve for display on the PFD altitude window. Clockwise rotation increments and counter clockwise decrements the barometric correction valve.

PUSH STD push button to set the current barometric pressure value to standard pressure.

NAV SEL push button to cycle through the navigation sources shown on the HSI display.

NAV PREVIEW push button to activate and cycle through available navigation sensors when FMS is the active sensor.

O (circle) push button to cycle through the No. 1 sources of navigation bearing to be displayed on HSI as a circle pointer (single pointer).

◊ **(diamond)** push button to cycle through the No. 2 source of navigation bearing to be displayed on HSI as a diamond pointer (double pointer).

HSI push button to alternate HSI display between compass and arc formats.

ET push button to activate and control an elapsed timer displayed on PFD.

CRS/RNG dual rotary click knob, inner for control of the desired VOR/LOC course to be flown and the selected navigation sensor shown on the HSI. Outer for control of the range display on the HSI.

PUSH SYNC push button to cause a synchronization of the selected course to the current VOR bearing if a VOR is the selected navigation sensor.

The pilot may configure the PFD to display altitude in meters as well as feet. The pilot may also configure the system for entering the altimeter setting in inches of mecury or millibars.

PFD Controller
Figure 1

B. MF Controller (KMC 2220)

The MF controller is mounted on the aft face of the central control yoke in the cockpit. The MF controller provides the operator key access to menus, functions and formats for the information within each defined windows displayed on the MFDs, as well as the radio window of the PFDs. Refer to Figure 2.

Window focus is obtained using the MF controller. Pressing a bezel button does not bring focus to a window. The Map window in the upper MFD is the default window for focus, except in composite mode. Only one window can be in focus across the displays. When focus is obtained, a cyan border will be shown around the window. After a period of 60 seconds of inactivity, the window focus border will be removed and focus will be returned to the MAP window. When there is no window focus present, a press of the arrow keys on the MF controller will highlight the focus border on the MAP window. When window focus is brought to a window that has data entry fields, a cyan colour cursor will be placed on the first data entry field. The MF Controller joystick can then be used to position the cursor onto the desired data entry field. The MF controller joystick can be used to move focus between different windows on the same display unit, but cannot be used to move the focus from one display unit to another.

Page operation is accomplished by pressing the PAGE button on the MF controller when in an active window. A menu listing the available pages for the window will be displayed.


There are two types of menus:

1) Page menus – to access pages of functions contained in the same window.

2) Functionality menus – to show selection headings that remain the same regardless of the current mode of operation.

   All menus once selected have cursor snapping, whereby the cursor automatically moves to the first item in the menu. The joystick or arrow keys can then be used to move to other items in the menu. When a keyboard or an MF controller entry is made, the cursor is caged inside the data field until the entry is completed either by pressing the ENT key or by clearing (cancelling) the entry with the CLR or DEL keys. If an MF controller short cut key is pressed or the time out period is reached, the entry is considered not finished and reverts to the previous value.

   28 Volt DC power is provided from the left bus through a 3 amp MFD CTRL (Q3) circuit breaker on the avionics circuit breaker panel (refer to 24-00-00, Electrical Power – General Data). Bezel key and face lighting is controlled by the INSTRUMENT PANEL dim potentiometer.

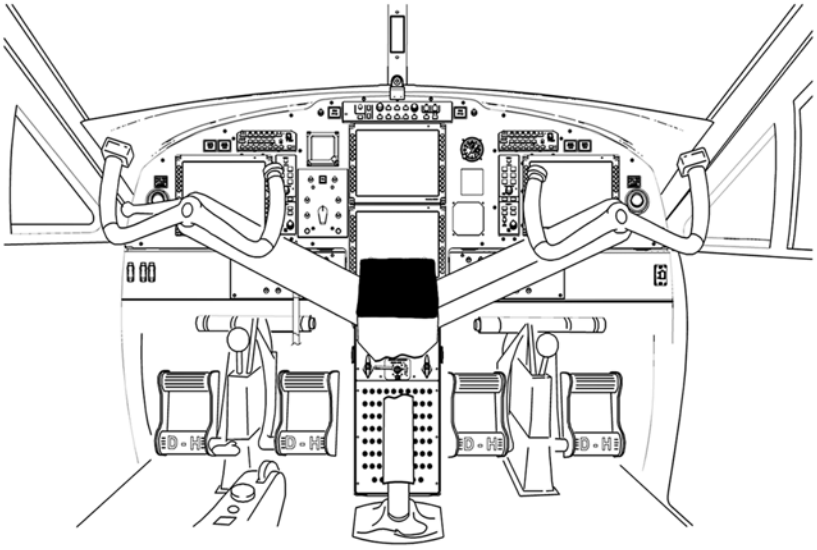



ARROW keys (up, down, left and right) move window focus (i.e. select the window to be made active) in the direction indicated to the next interactive window.

JOYSTICK & KNOB: These control cursor focus within a window, allowing operation control from selectable item to item. Depending on the data field, the concentric knob can control the item that has cursor focus, or, a value can be entered via the alphanumeric keypad.

ENT confirms and executes the entry of data.

PAGE displays a menu of possible pages that can be selected.

MFD SWAP switches the display of the Situation Awareness and Systems MFDs between the upper and lower screens.

DETAIL calls up a secondary window related to the current active window, providing additional details related to the selected item.

KEYPAD alpha numeric push buttons provide direct data entry into an active data field.

DEL deletes the last character entered on the active data field.

CLR erases the entire value of a data entry field on the active data field.

CKLST calls up the electronic checklist.

CHARTS/VIDEO displays charts on the right 2/3rd window of the System MFD.

Secure Digital (SD) data card slot, used to download new FMS navigation database (e.g. Jeppesen) from the SD card, and also to upload maintenance records to the SD card for review by the maintenance technician.


Multi-Function Controller
Figure 2

C. Flight Controller (KMC 9200)

The KMC 9200 Flight Controller (refer to Figure 3) is used to enter selected minimums, set heading or track, and enter selected altitude. All other controls on the flight controller are inoperative and will produce a Function Unavailable CAS message.

For aircraft with Mod 6/2303 incorporated, when the Flight Director (FD) mode is engaged, a green annunciation above the FD button is illuminated. (Refer to 22-00-00, Auto Flight – General Data).

For aircraft with S.O.O. 6221 incorporated, the Flight Controller (FC) (also referred to as the Flight Control Panel [FCP]) provides selections for all AFCS FD and Autopilot (AP) modes except, Go-Around (GA) mode, Touch Control Steering (TCS) and Quick Disconnect (AP DISC). (Refer to 22-10-00, Automatic Flight Control System (AFCS) (Mod 6/2303 and S.O.O. 6221) – General Data).

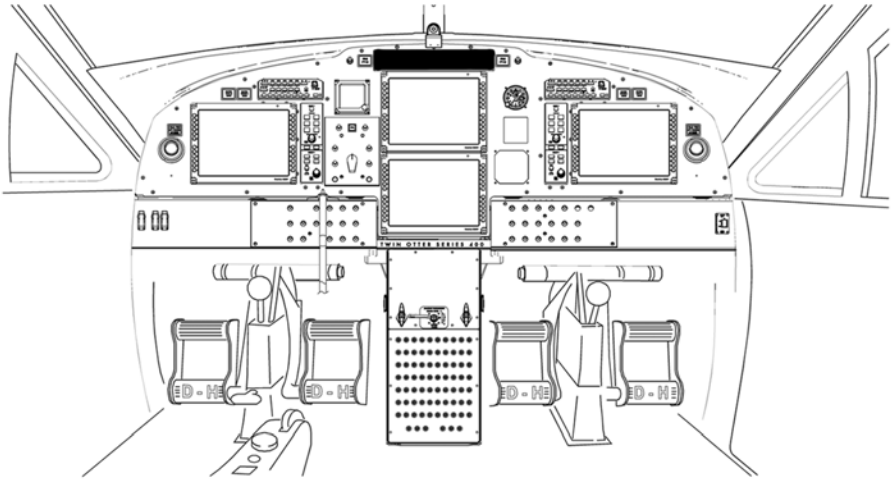



Flight Controller (KMC 9200)
Figure 3

28 Volt DC power is provided from the left bus through a 3 amp FLT CTRL 1A (M1) circuit breaker, and from the right bus through a 3 amp FLT CTRL 1B (M2) circuit breaker on the avionics circuit breaker panel (refer to 24-60-00, DC Electrical Load Distribution – General Data). Bezel key and face lighting is controlled by the INSTRUMENT PANEL dim potentiometer.

3. Adjustment/Test

A. PFD Controller (KMC 2210)

1) Apply DC power (refer to 12-00-00, Servicing – General Data, Para 2.).

2) Wait several minutes for the aircraft electrical and avionics systems to initialize.

3) Rotate the BARO knob. Verify barometric pressure on the PFD increases with clockwise rotation and decreases with counterclockwise rotation.

4) Push the BARO knob (PUSH STD). Verify the current barometric value changes to standard pressure (29.92).

5) Select NAV SEL. Verify navigation sources are displayed on the HSI.

6) Select NAV PREVIEW. Verify the ability to cycle through available navigation sources.

7) Select O (circle). Verify the ability to cycle through the No.1 navigation sources which are displayed on the HSI as a circle pointer (single pointer).

8) Select ◊ (diamond). Verify the ability to cycle through the No.2 navigation sources which are displayed on the HSI as a diamond pointer (double pointer).

9) Select HSI. Verify the HSI display changes between compass and arc formats.

10) Select ET. Verify activation and control of a elapsed timer displayed on the PFD.

11) Rotate the inner CRS/RNG knob. Verify VOR/ILS course to be flown can be selected to different navigation sensor on the HSI.

12) Rotate the outer CRS/RNG knob. Verify the change of range display on the HSI.

13) Select ADHRS. Verify ADAHRS source changes from No.1 to No.2 source or No.2 to No.1 source.

14) Select PFD. Verify control of the RH PFD when the LH PFD controller key is selected and control on the LH PFD when the RH PFD controller key is selected.

15) Turn the INSTRUMENT PANEL dim potentiometer on the aircraft dimming control panel. Verify the PFD dims and brightens accordingly.

16) Disconnect DC power (refer to 12-00-00, Servicing – General Data, Para 2.).

B. Multi-Function (MF) Controller (KMC 2220)

1) Apply DC power (refer to 12-00-00, Servicing – General Data, Para 2.).

2) Wait several minutes for the aircraft electrical and avionics systems to initialize.

3) Initialize the FMS with current position, if available, or with a known waypoint (eg. CYYJ) (Pre Mod 6/2303). Ensure FMS has initialized (Post Mod 6/2303).

4) Select COM. Verify selection of COM 1 window on the pilot PFD. Using the keypad, enter frequency 123.95 MHz and press the ENT button adjacent to the keypad. Ensure the entered frequency appears on pilot's and co-pilot's PFD.

5) Select FREQ SWAP. Ensure COM 1 active and standby frequencies swap positions.

6) Select NAV. Verify selection of NAV 1 window on the pilot PFD. Using the keypad, enter frequency 116.85 MHz and press the ENT button adjacent to the joystick. Ensure the entered frequency appears on the pilot's and co-pilot's PFD.

7) Select XPDR. Verify selection of XPDR window on the pilot PFD. Using the keypad, enter code 1470 and press ENT. Ensure the entered code appears on pilot's and co-pilot's PFD.

8) While focus remains on the XPDR radio window, select DETAIL. Ensure the XPDR detail page opens in the pilot's PFD radio window. Select DETAIL a second time to close XPDR detail page.

9) Select TAWS overlay for display on PFD.

10) Select FLAP OVRD. Ensure FLAP OVRD annunciator appears beside the HSI. Select FLAP OVRD a second time to clear annunciator.

11) Select TERR INHIB. Ensure TERR INHB annunciator appears beside the HSI. Select TERR INHIB a second time to clear annunciator.

12) Select CHART VIDEO. Ensure "Function Unavailable" Status CAS message appears (Pre S.O.O. 6214). Ensure charts window opens on MFD (S.O.O. 6214).

13) Select EVENT. Ensure "Event" Status CAS message is displayed (Post Mod 6/2303).

14) Select CKLST. Ensure "Function Unavailable" Status CAS message appears (Pre S.O.O. 6213). Ensure checklist window becomes active (S.O.O. 6213).

15) Select INFO. Ensure "Show Object" dialog box opens on the INAV map.

16) Move the joystick in all directions. Ensure the cursor moves around the display appropriately.

17) Close the "Show Object" dialog box.

18) With focus remaining on the INAV map, rotate the ring surrounding the joystick in both directions. Ensure map range changes appropriately. Leave MFD range at 50nm.

19) Select DIRECT TO (). Ensure direct-to dialog box appears in the waypoint window.

20) Using the keypad enter an airport code (eg. CYVR), do not press ENT.

21) Select DEL. Ensure the last character entered is deleted.

22) Hold CLR for half a second or more. Ensure the remaining three characters are deleted.

23) Close the direct to dialog box.

24) Select each ARROW key. Ensure window focus moves within the displays in the direction selected (Pre Mod 6/2303). Ensure cursor focus moves to the selected display (Left – DU 1, Up – DU 2, Down – DU 3, Right – DU 4) (Post Mod 6/2303).

25) Bring focus to the System Configuration Window in the bottom left corner of the Systems MFD. Select PAGE. Ensure page menu opens.

26) Select MFD SWAP (

). Ensure Situational Awareness Display (default DU 2) and Systems Display (default DU 3) swap MFD positions.

27) Select WX radar for display on the INAV map. Select WX RADAR outer knob to TEST. Ensure WX test pattern is displayed on MFD.

28) Rotate the WX RADAR inner knob in both directions. Ensure WX tilt indication on the MFD changes appropriately.

29) Press the WX RADAR knob. Rotate the WX RADAR inner knob. Ensure the TILT adjustment has changed to a GAIN adjustment.

30) Select WX RADAR outer knob to OFF.

31) Disconnect DC power (refer to 12-00-00, Servicing – General Data, Para 2.).

C. Flight Controller (KMC 9200) (Pre Mod 6/2303)

1) Apply DC power (refer to 12-00-00, Servicing – General Data, Para 2.).

2) Wait several minutes for the aircraft electrical and avionics systems to initialize.

3) Rotate MINIMUMS knob. Ensure RA minimums indication appears in the attitude indicator area of the PFD and increases and decreases as the knob is rotated.

4) Press MINIMUMS knob. Ensure RA minimums indication clears from PFD.

5) Rotate MINIMUMS knob. Ensure BARO minimums indication appears in the attitude indicator area of the PFD and increases and decreases as the knob is rotated.

6) Set HDG TRK outer knob to TRK. Ensure the indication on HSI switches to TRK.

7) Set HDG TRK outer knob to HDG. Ensure the indication on HSI switches to HDG.

8) Rotate inner knob. Ensure the HDG bug moves around the HSI.

9) Press the HDG TRK knob. Ensure the HDG bug moves to the current aircraft heading.

10) Rotate ALT outer knob. Ensure the selected altitude indication appears above the altitude tape and increments and decrements by 1000 ft per detent.

11) Rotate ALT inner knob. Ensure the selected altitude indication increments and decrements by 100 ft per detent.

12) Select the remaining buttons on flight controller. Ensure “Function Unavailable” Status CAS message appears.

13) Disconnect DC power (refer to 12-00-00, Servicing – General Data, Para 2.).

D. Flight Controller (KMC 9200) (Post Mod 6/2303)

1) Apply DC power (refer to 12-00-00, Servicing – General Data, Para 2.).

2) Wait several minutes for the aircraft electrical and avionics systems to initialize.

3) Rotate MINIMUMS knob. Ensure BARO minimums indication appears in the attitude indicator area of the PFD and increases and decreases as the knob is rotated.

4) Press MINIMUMS knob. Ensure BARO minimums indication clears from the PFD.

5) Rotate MINIMUMS knob. Ensure RA minimums indication appears in the attitude indicator area of the PFD and increases and decreases as the knob is rotated.

6) Set HDG TRK outer knob to TRK. Ensure indication on HSI switches to TRK.

7) Set HDG TRK outer knob to HDG. Ensure indication on HSI switches to HDG.

8) Rotate inner knob. Ensure HDG bug moves around the HSI.

9) Press the HDG TRK knob. Ensure the HDG bug moves to the current aircraft heading.

10) Rotate ALT outer knob. Ensure the selected altitude indication appears above the altitude tape and increments and decrements by 1000 ft per detent.

11) Rotate ALT inner knob. Ensure the selected altitude indication increments and decrements by 100 ft per detent.

12) Select L/R. Ensure FD arrow lights and indications on the PFD toggle between the left and right.

13) Select FD. Ensure FD light illuminates and ROL and PIT indications appear on the PFD.

14) Select ALT. Ensure ALT light illuminates, and ALT indication appears on the PFD.

15) Select VS. Ensure VS light illuminates and VS indication appears on the PFD.

16) Select NOSE DN. Ensure VS bug moves down with each press.

17) Select NOSE UP. Ensure VS bug moves up with each press.

18) Select SPD. Ensure SPD light illuminates and SPD indication appears on the PFD.

19) If required, select NAV SEL on PFD controller to set NAV source to FMS.

20) Select VNAV. Ensure VNAV light illuminates and VNAV indication appears on the PFD.

21) Select HDG/T. Ensure HDG/T light illuminates and HDG indication appears on the PFD.

22) Select BL. Ensure BL light illuminates and bank limits are displayed in magenta on the roll indicator.

23) Select NAV. Ensure NAV light illuminates and NAV indication appears on the PFD.

24) Select NAV SEL on PFD controller to set NAV source to VOR or LOC.

25) Select APR. Ensure APR light illuminates and APR indication appears on the PFD.

26) Select FD. Ensure all FD mode lights extinguish.

27) Connect air data test set to the aircraft pitot heads (S.O.O. 6221) (refer to 34-11-00, Connecting Air Data Test Set, Para 4.A.).

28) Adjust air data test set to provide an airspeed of 60 knots (S.O.O. 6221).

29) Select AP. Ensure “Function Unavailable” Status CAS message appears (Pre S.O.O. 6221). Ensure AP and YD lights illuminate and AP and YD indications appear on the PFD (S.O.O. 6221).

30) Select YD. Ensure “Function Unavailable” Status CAS message appears (Pre S.O.O. 6221). Ensure YD light extinguishes and YD indication clears from the PFD (S.O.O. 6221).

31) Vent the air data test set to ambient conditions (S.O.O. 6221).

32) Disconnect the air data test set (S.O.O. 6221) (refer to 34-11-00, Disconnecting Air Data Test Set, Para 4.B.).

33) Disconnect DC power (refer to 12-00-00, Servicing – General Data, Para 2.).

4. Removal and Installation

WARNING **INSTALLATION OF THIS COMPONENT CONTAINS PROTECTION FEATURES THAT ARE CRITICAL TO PREVENTING DEGRADATION FROM THE EFFECTS OF HIGH INTENSITY RADIATED FIELDS (HIRF) AND INDIRECT EFFECTS OF LIGHTNING (IEL). ENSURE INTEGRITY OF THE HIRF/IEL PROTECTION FEATURES ARE MAINTAINED IN ACCORDANCE WITH THE FOLLOWING:**

CHASSIS GROUNDING – PANEL / PEDESTAL MOUNT UNITS CANNOT BE RELIABLY GROUNDED TO THE AIRFRAME VIA THE PANEL MOUNTING SCREWS OR DZUS FASTENERS. GROUNDING OF THESE UNITS IS ACCOMPLISHED BY USING THE SHIELD GROUNDING BRAID OR JUMPER. VERIFY PROPER ELECTRICAL BONDING AS DETAILED IN 20-75-00, ELECTRICAL BONDING AND GROUNDING OF AIRCRAFT STRUCTURES – GENERAL DATA.

SHIELD GROUNDS – VERIFY SHIELD GROUNDING AT CONNECTOR BACKSHELLS AS PER REQUIREMENTS IN PSM 1-64-2W.

BACKSHELLS OR STRAIN RELIEFS – VERIFY PROPER ELECTRICAL BONDING BETWEEN THE BACKSHELL/STRAIN RELIEF AND THE CONNECTOR AS PER REQUIREMENTS IN PSM 1-64-2W.

A. PFD Controller (KMC 2210)

1) Removal of PFD Controller

a) Ensure the aircraft electrical system is OFF. (Refer to 24-00-00, Electrical Power – General Data).

CAUTION **CARE MUST BE TAKEN TO ENSURE THE WRENCH IS SEATED CORRECTLY ON THE SCREW BEFORE ROTATING; UNIT CAN BE DAMAGED.**

b) Using a 3/32” hexagonal-head wrench, engage it into the PFD controller locking screw.

c) Turn the locking screw counterclockwise while gently pulling and shifting the controller, until the controller disengages from the instrument panel.

d) Carefully pull on the edges of the controller until removed from its mount in the instrument panel.

e) Disconnect the electrical connector.

f) Remove unit from aircraft.

2) Installation of PFD Controller

a) Ensure the aircraft electrical system is OFF. (Refer to 24-00-00, Electrical Power – General Data).

b) Connect the electrical connector to the PFD controller.

c) Push carefully on the face of the controller until the locking screw is engaged.

d) Slide the controller into its mount in the instrument panel.

CAUTION **CARE MUST BE TAKEN TO ENSURE THE WRENCH IS SEATED CORRECTLY ON THE SCREW BEFORE ROTATING; UNIT CAN BE DAMAGED.**

e) Using a 3/32” hexagonal-head wrench, while gently pushing and shifting the controller, engage it into the PFD controller locking screw.

f) Carefully apply a light pressure to the edges of the unit, while gently pushing and shifting the controller, turning the 3/32” wrench clockwise to tighten the locking screw.

g) Do a function test, refer to Para 3.A.

B. MF Controller (KMC 2220)

1) Removal of MF Controller

a) Ensure the aircraft electrical system is OFF. (Refer to 24-00-00, Electrical Power – General Data).

CAUTION **CARE MUST BE TAKEN TO ENSURE THE WRENCH IS SEATED CORRECTLY ON THE SCREW BEFORE ROTATING; UNIT CAN BE DAMAGED.**

b) Using a slotted screwdriver, engage it into the MF controller screw.

c) Turn the locking screw counterclockwise until the controller disengages from its mount.

d) Pull on the edges of the controller until it is removed from its mount.

e) Disconnect connectors.

f) Remove unit from aircraft.

Note Stow connectors as required.

2) Installation of MF Controller

a) Ensure the aircraft electrical system is OFF. (Refer to 24-00-00, Electrical Power – General Data).

b) Connect connectors.

c) Slide the MF controller into mount on the control yoke.

d) Push carefully on the face of the MF controller until locking screw is engaged.

CAUTION **CARE MUST BE TAKEN TO ENSURE THE WRENCH IS SEATED CORRECTLY ON THE SCREW BEFORE ROTATING; UNIT CAN BE DAMAGED.**

e) Using a slotted screwdriver, engage it into the MF controller locking screw.

f) Apply light pressure to the edge of unit, while turning the screwdriver clockwise 1/4 turn.

g) Do a function test, refer to Para 3.B.

C. Flight Controller (KMC 9200)

1) Removal of Flight Controller

a) Ensure the aircraft electrical system is OFF. (Refer 24-00-00, Electrical Power – General Data).

CAUTION **CARE MUST BE TAKEN TO ENSURE THE WRENCH IS SEATED CORRECTLY ON THE SCREW BEFORE ROTATING; UNIT CAN BE DAMAGED.**

b) Using a 3/32” hexagonal-head wrench, engage it into the Flight controller locking screw.

c) Turn the locking screw counterclockwise while gently pulling and shifting, until the controller disengages from the instrument panel.

d) Carefully pull on the edges of the controller until removed from the instrument panel.

e) Disconnect the electrical connector.

f) Remove unit from aircraft.

2) Installation of Flight Controller

a) Ensure the aircraft electrical system is OFF. (Refer to 24-00-00, Electrical Power – General Data).

b) Connect the electrical connector to the Flight controller.

c) Carefully slide the controller into the instrument panel.

CAUTION **CARE MUST BE TAKEN TO ENSURE THE WRENCH IS SEATED CORRECTLY ON THE SCREW BEFORE ROTATING; UNIT CAN BE DAMAGED.**

d) Using a 3/32” hexagonal-head wrench, while gently shifting and pushing, engage it into the Flight Controller locking screw.

e) Turn the locking screw counterclockwise until the controller disengages from the instrument panel.

f) Do a function test, refer to Para 3.C (Pre Mod 6/2303) or Para 3.D (Post Mod 6/2303).

5. Troubleshooting

A. PFD Controller (KMC 2210)

1) Ensure PILOT PFD CTRL (Q1) & COPILOT PFD CTRL (Q2) circuit breakers are closed.

2) If presented with any of the following CAS messages, the associated PFD controller(s) requires servie (refer to Para 5.A.6)):

- LH PFD CTRL Fail (Caution)
- RH PFD CTRL Fail (Caution)
- LH PFD CTRL Fail (Advisory)
- RH PFD CTRL Fail (Advisory)
- LH+RH PFD CTRL Fail (Advisory)

3) Visually inspect the electrical connectors for damaged wiring or contacts. Ensure connectors are fully seated and tight.

4) Swap PFD controller with a known good unit. If issue clears, removed PFD controller requires service (refer to Para 5.A.6)).

5) If troubleshooting at a wire level is required, refer to the applicable wiring diagrams in Wiring Manual PSM 1-64-2W.

6) If repair or service is required, remove and send to appropriately rated avionics repair facility.

B. MF Controller (KMC 2220)

1) Ensure MFD CTRL (Q3) circuit breaker is closed.

2) Visually inspect the electrical connectors for damaged wiring or contacts. Ensure connectors are fully seated and tight.

3) If troubleshooting at a wire level is required, refer to the applicable wiring diagrams in Wiring Manual PSM 1-64-2W.

4) If repair or service is required, send to appropriately rated avionics repair facility.

C. Flight Controller (KMC 9200)

1) Ensure FLT CTRL 1A (M1) & FLT CTRL 1B (M2) circuit breakers are closed.

2) Visually inspect the electrical connectors for damaged wiring or contacts. Ensure connectors are fully seated and tight.

3) If troubleshooting at a wire level is required, refer to the applicable wiring diagrams in Wiring Manual PSM 1-64-2W.

4) If repair or service is required, send to appropriately rated avionics repair facility.

This Page Intentionally Left Blank