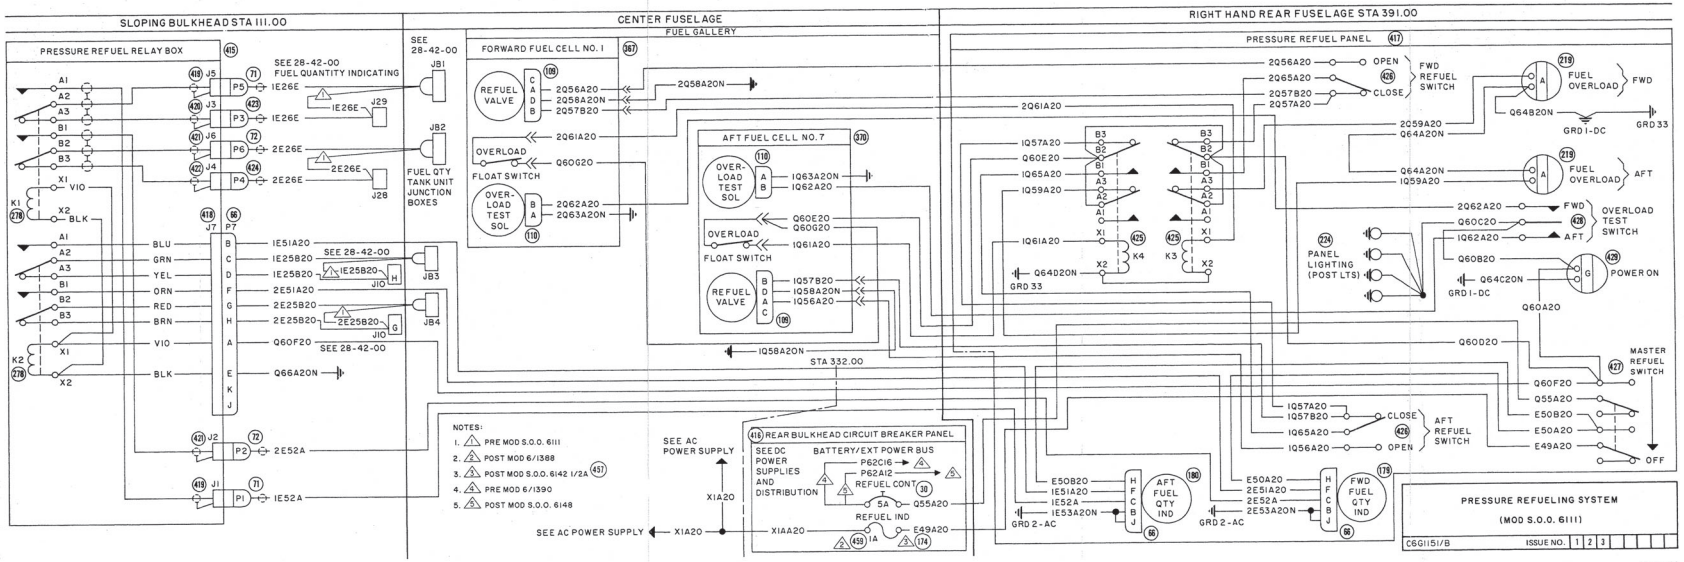

PRESSURE REFUELING SYSTEM
(MOD S.O.O. 6111)

C6G1151/B ISSUE NO. 1 2 3

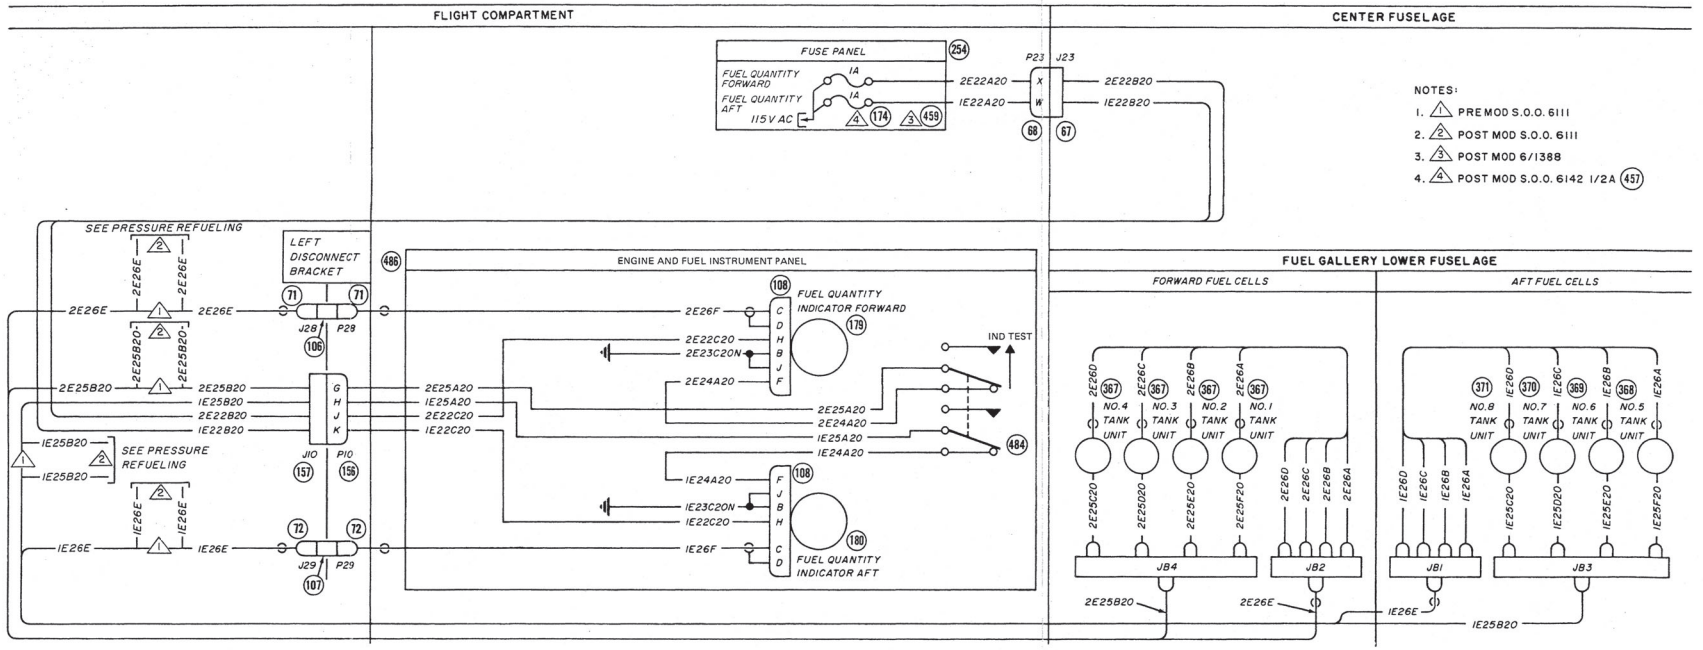

FUEL QUANTITY INDICATING SYSTEM

C6N 1002/25/A ISSUE NO. 1 2 3 4 5

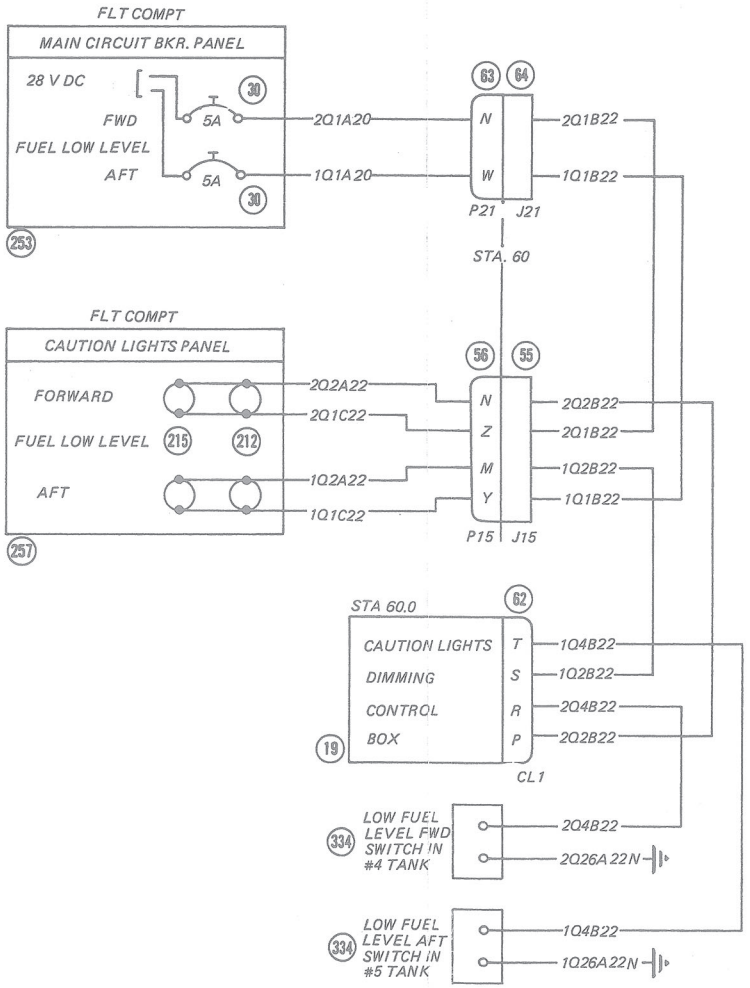

FUEL LOW LEVEL WARNING SYSTEM

C6N 1002/25/A ISSUE NO. 1 2

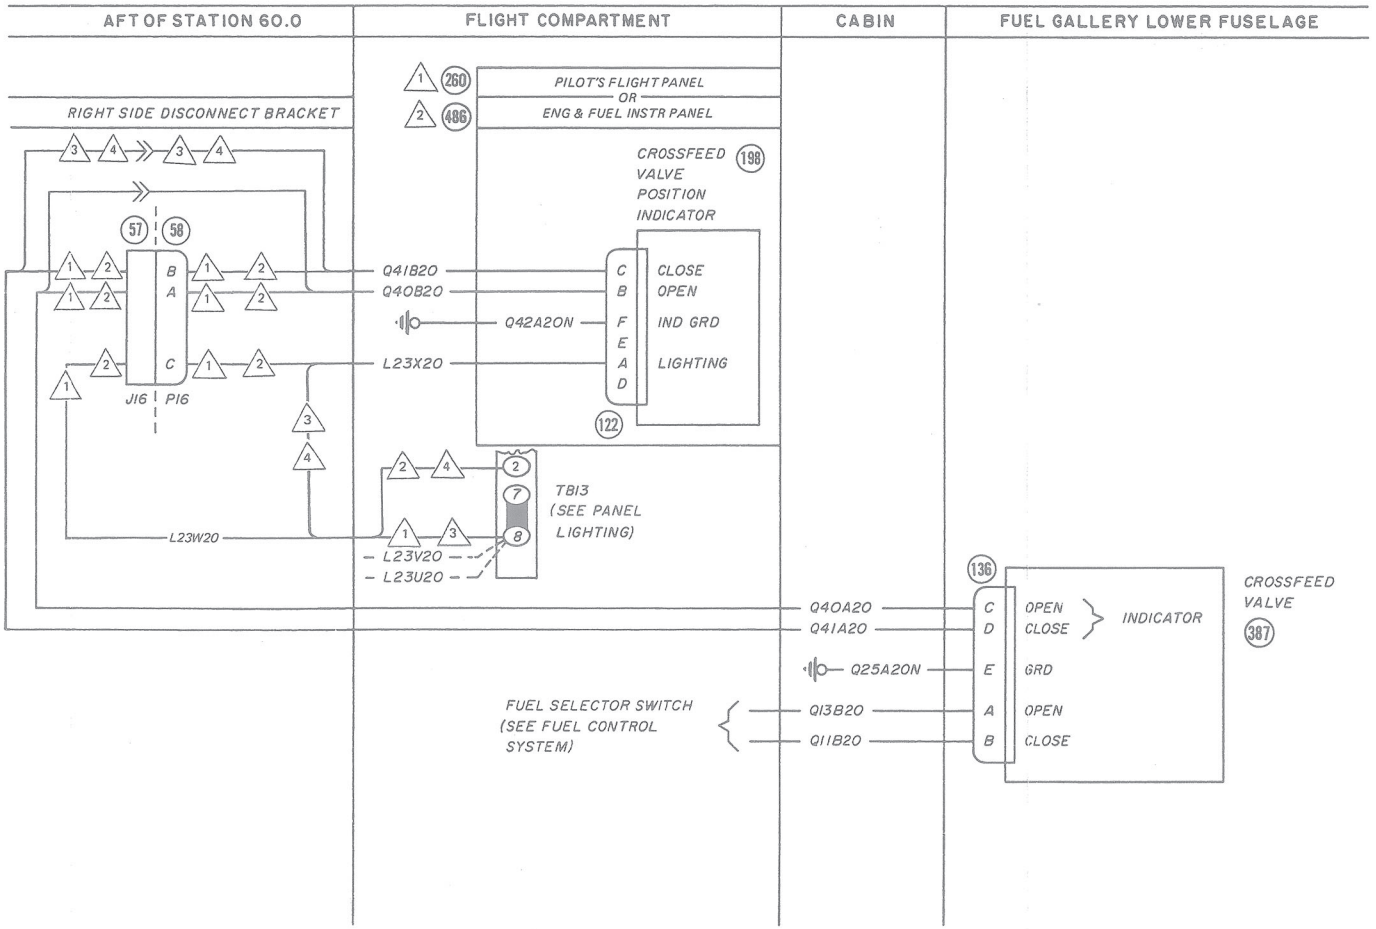

NOTES:

1. PRE-MOD 6/1475
2. MOD 6/1475
3. WHEN NO PINS AVAILABLE ON P16/J16 (1)
4. WHEN NO PINS AVAILABLE ON P16/J16 (2)

FUEL CROSSFEED VALVE POSITION INDICATOR (MOD SOO 6035)

C6Z1275/C ISSUE NO. 1 2

LIST OF EFFECTIVE PAGES: CHAPTER 29: HYDRAULIC POWER

Reference	Page	Date
Contents	*1	Jun 16/80
29-10-00	*1	Jun 16/80
	*2	Jun 16/80

The asterisk (*) indicates pages revised, added or deleted by current revision.

DHC-6 TWIN OTTER SERIES 300
WIRING DIAGRAM MANUAL

CHAPTER 29 - HYDRAULIC POWER

TABLE OF CONTENTS

Subject	Chapter Section Subject	Page
MAIN	29-10-00	
Hydraulic Oil Pump (Pre Mod 6/1654) Sheet 1		1
Hydraulic Oil Pump (Mod 6/1654) Sheet 2		2

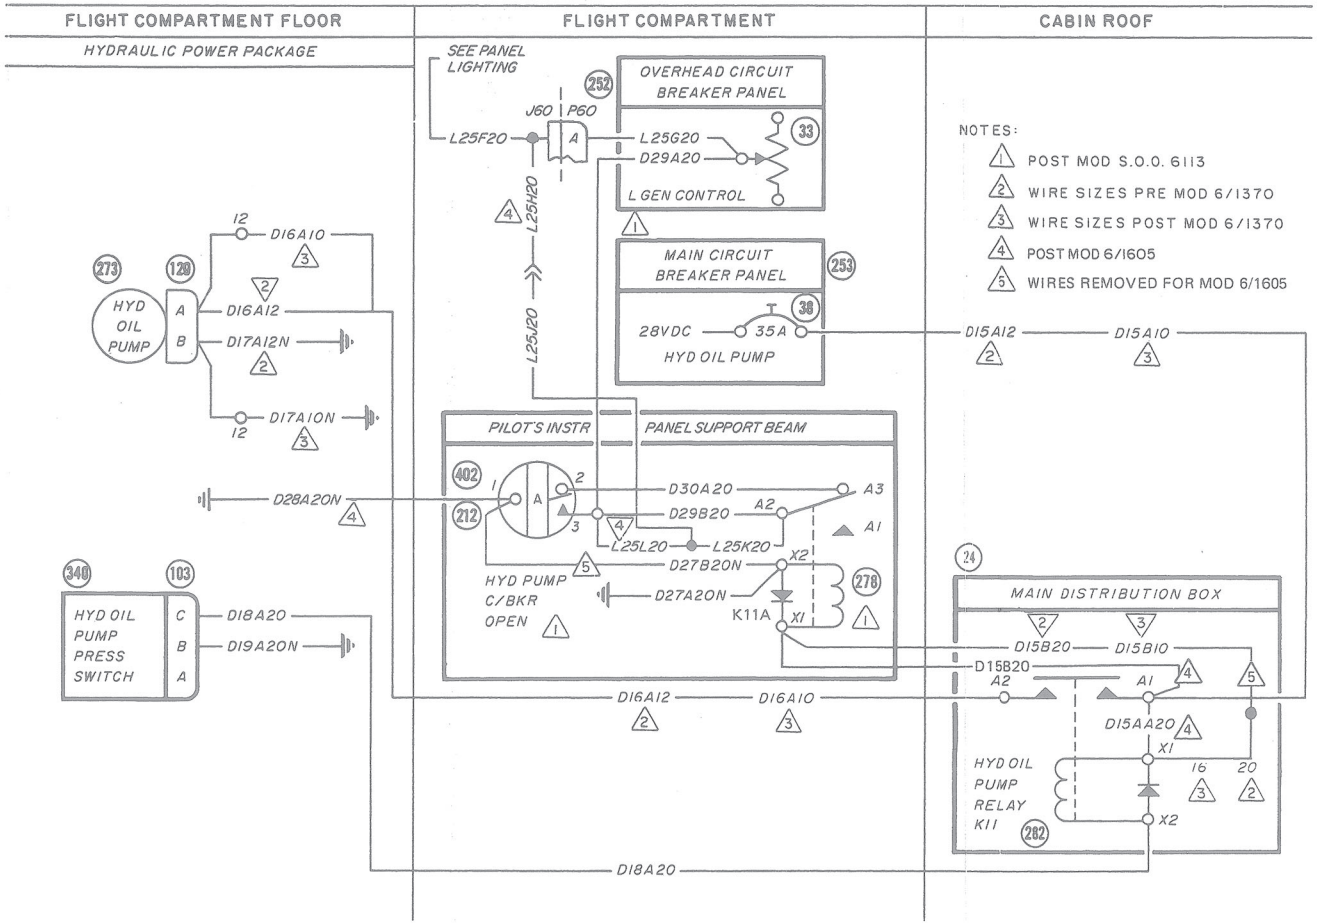

HYDRAULIC OIL PUMP PRE MOD 6/1654 SHEET 1	
C6N1002/5/B/C AND C6N1067	ISSUE NO. 1 2 3 4 5

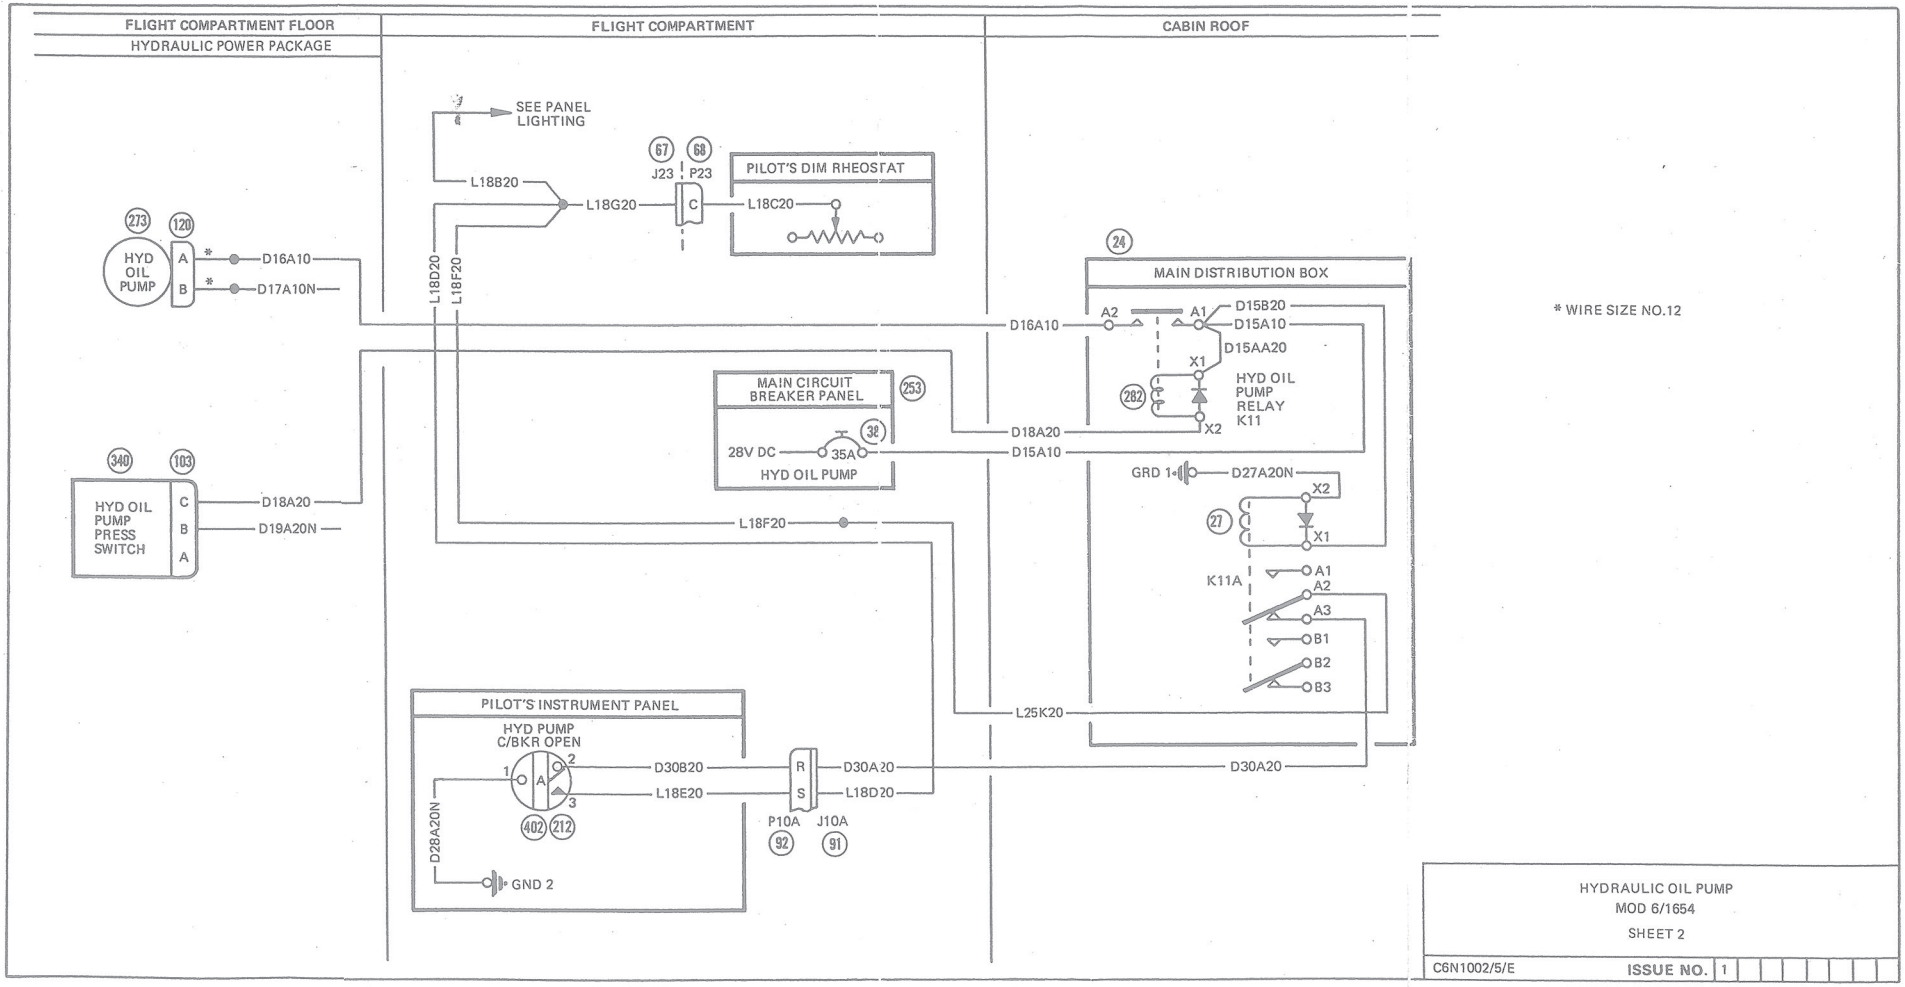

* WIRE SIZE NO.12

HYDRAULIC OIL PUMP
MOD 6/1654
SHEET 2

C6N1002/5/E ISSUE NO. 1

DHC-6 TWIN OTTER SERIES 300
WIRING DIAGRAM MANUAL

LIST OF EFFECTIVE PAGES: CHAPTER 30: ICE AND RAIN PROTECTION

Reference	Page	Date
Contents	*1	Apr 22 /83
30-10-00	1	May 7 /82
	2	May 7 /82
30-20-00	1	Jun 8 /71
30-30-00	1	Jun 16 /80
30-40-00	1	Mar 1 /69
30-45-00	*1	Apr 22 /83
30-45-01	*1	Apr 22 /83
30-60-00	1	Oct 18 /73

The asterisk (*) indicates pages revised, added or deleted by current revision.

DHC-6 TWIN OTTER SERIES 300
WIRING DIAGRAM MANUAL

CHAPTER 30 - ICE AND RAIN PROTECTION

TABLE OF CONTENTS

Subject	Chapter Section Subject	Page
AIRFOIL	30-10-00	
Wing and Tail Deicing System (Mod S.O.O. 6004) - Sheet 1		1
Wing and Tail Deicing System (Mod S.O.O. 6004) - Sheet 2		2
AIR INTAKES	30-20-00	
Intake Heaters		1
PITOT AND STATIC	30-30-00	
Pitot Heaters		
WINDOWS AND WINDSHIELDS	30-40-00	
Windshield Heating System		1
Windshield Wipers (Mod S.O.O. 6009) (Mod 6/1827)	30-45-00	1
Windshield Wipers (Mod S.O.O. 6157 or 6/1607) (Mod 6/1827)	30-45-01	1
PROPELLERS/ROTORS	30-60-00	
Propeller Deicing System (Mod S.O.O. 6005)		1

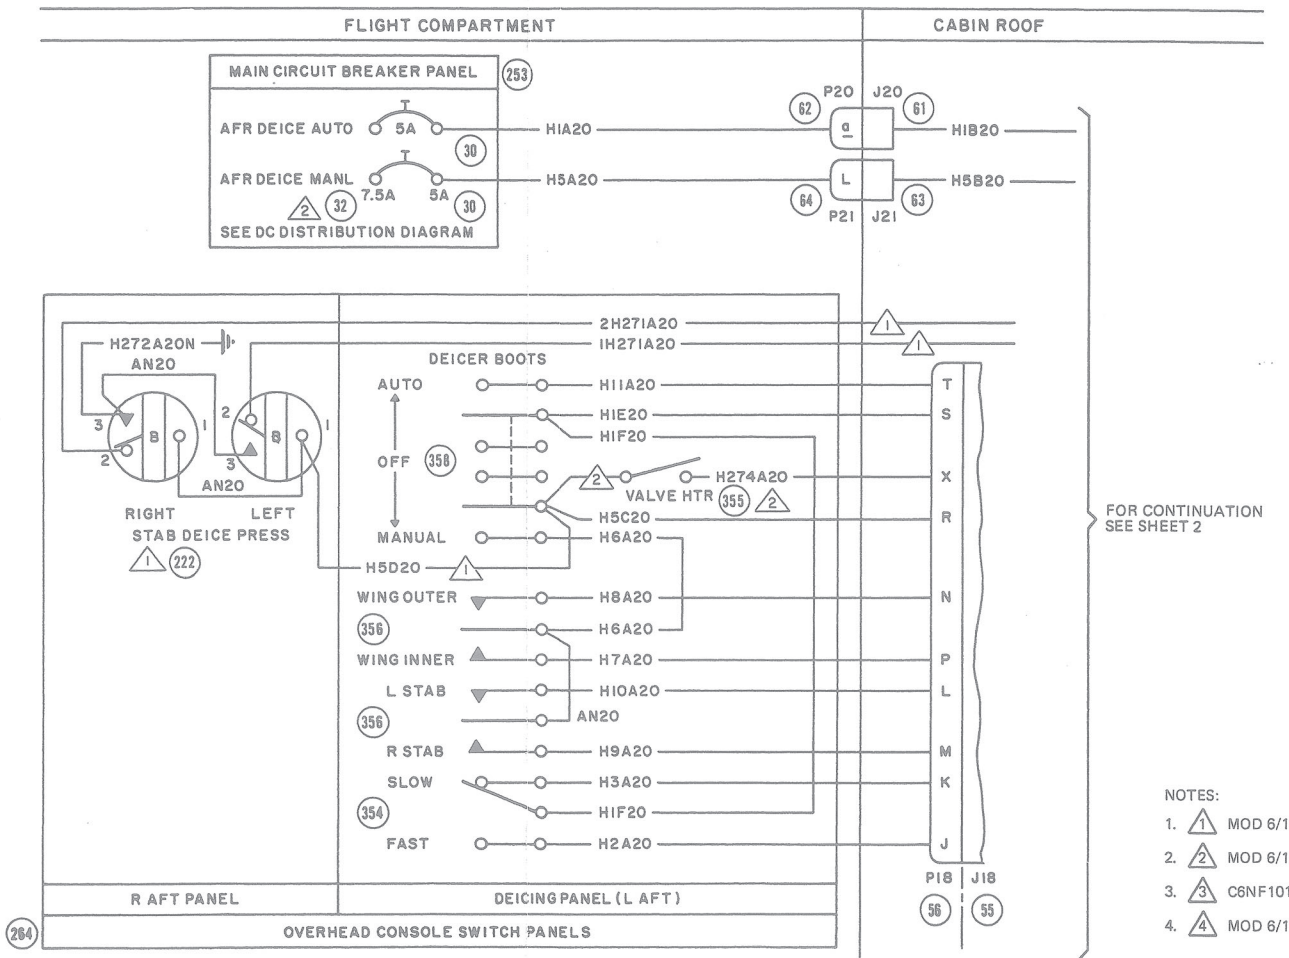

NOTES:
1. MOD 6/1393
2. MOD 6/1440
3. C6NF1017-1
4. MOD 6/1779

WING AND TAIL DEICING SYSTEM
(MOD S.O.O. 6004)
(SHEET 1)

C6N1002/34/D
AND C6N1084/F

ISSUE NO. 1 2 3 4 5

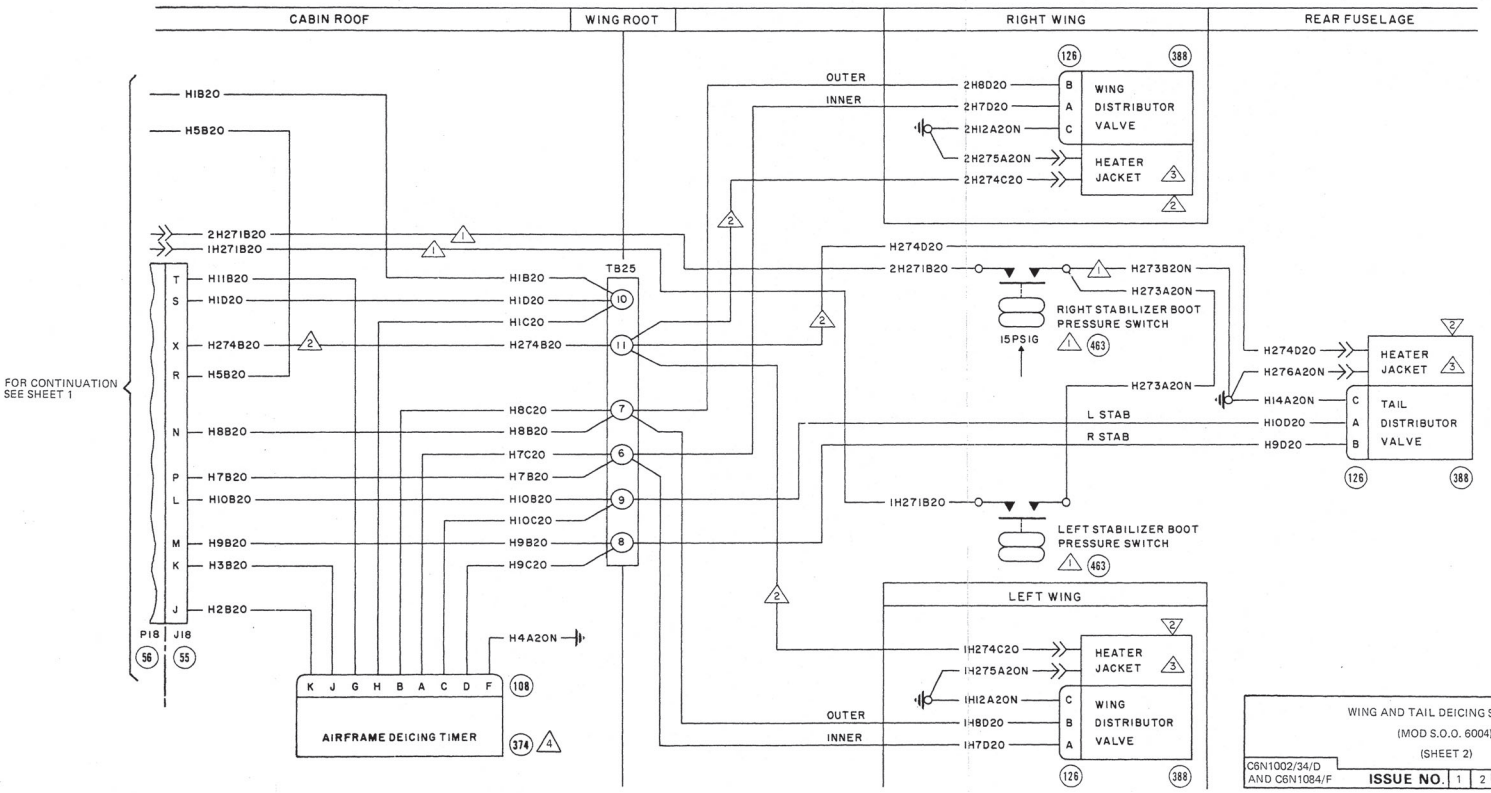

WING AND TAIL DEICING SYSTEM
(MOD S.O.O. 6004)
(SHEET 2)

C6N1002/34/D AND C6N1084/F **ISSUE NO.** 1 2 3 4 5

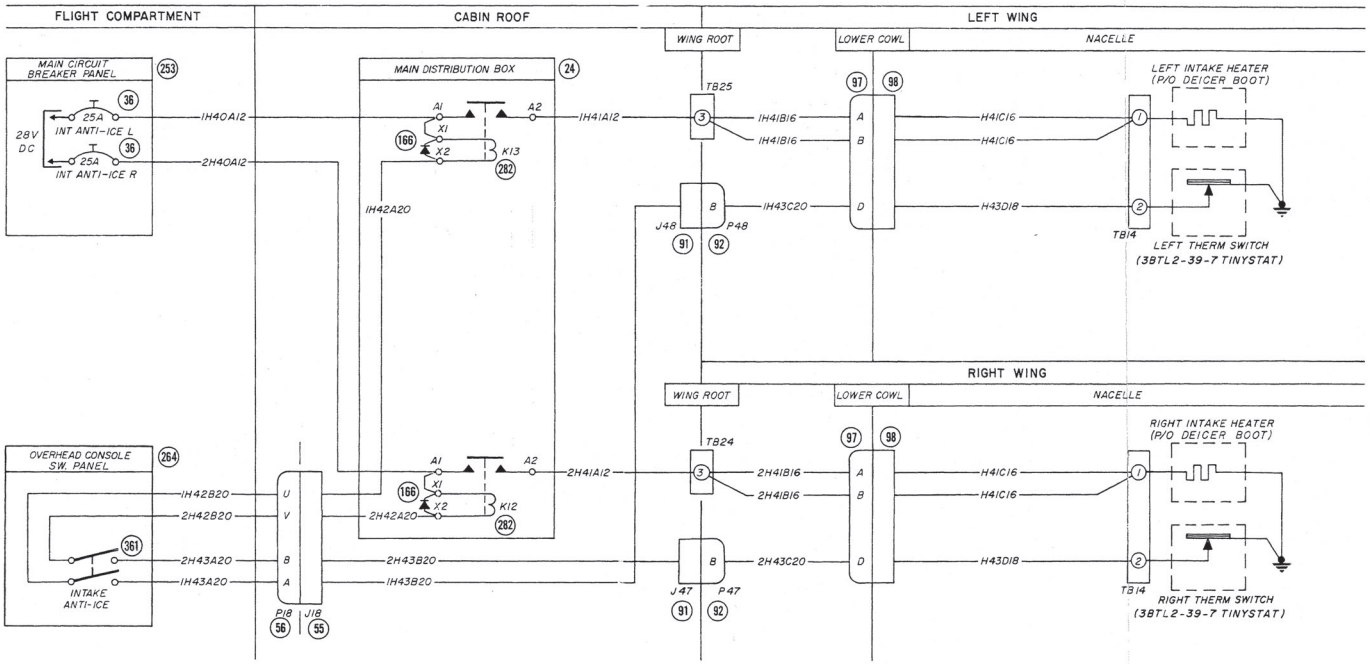

INTAKE HEATERS								
C6N1002/30/	ISSUE NO.	1	2					

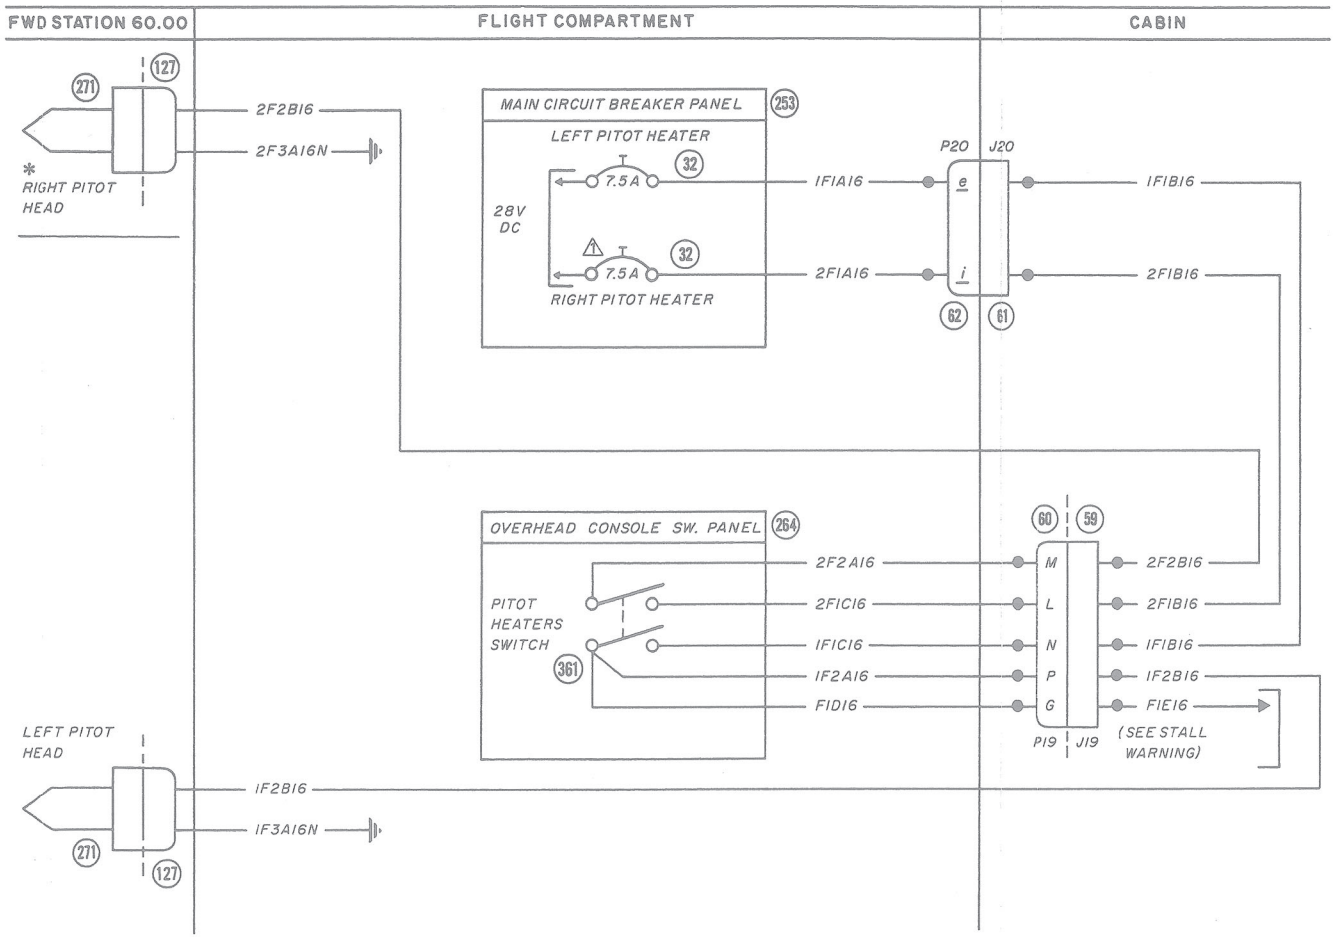

NOTES:

⚠ MOD 6/1604

* CUSTOMER OPTION EQUIPMENT

PITOT HEATERS

C6N1002/16/B ISSUE NO. 1 2

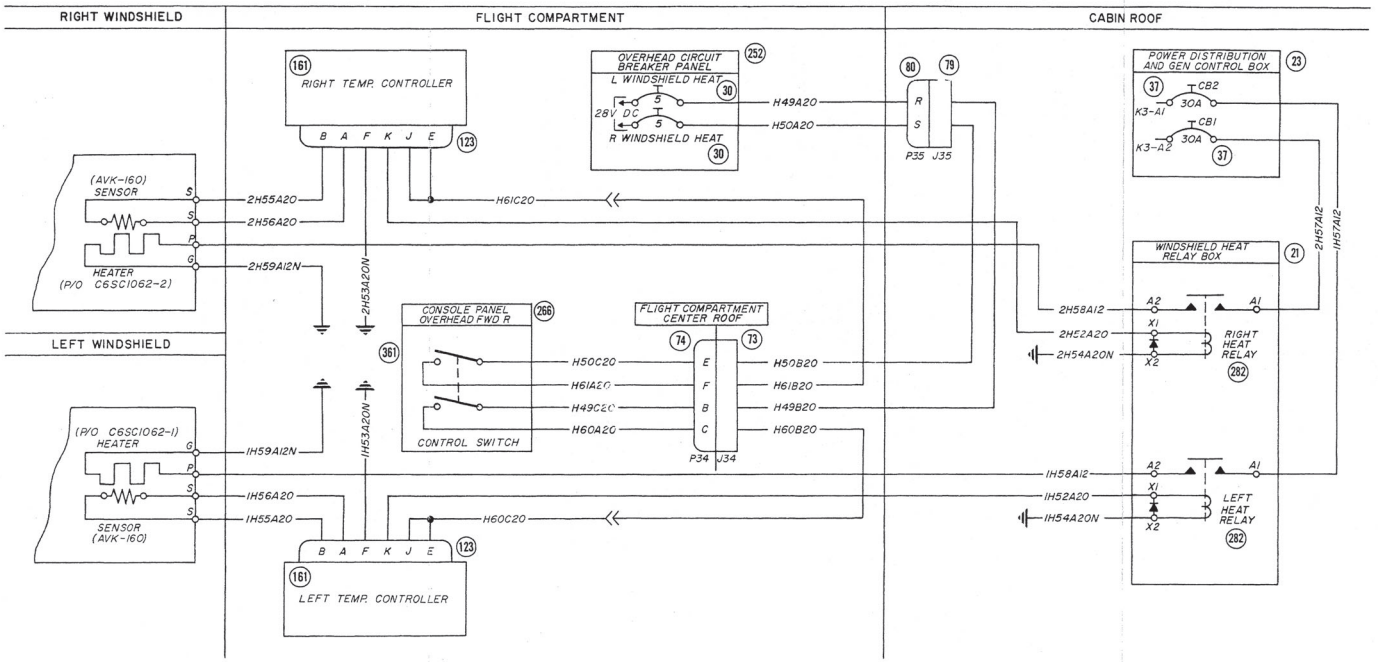

WINDSHIELD HEATING SYSTEM

C6N1002/29/ ISSUE NO. 1

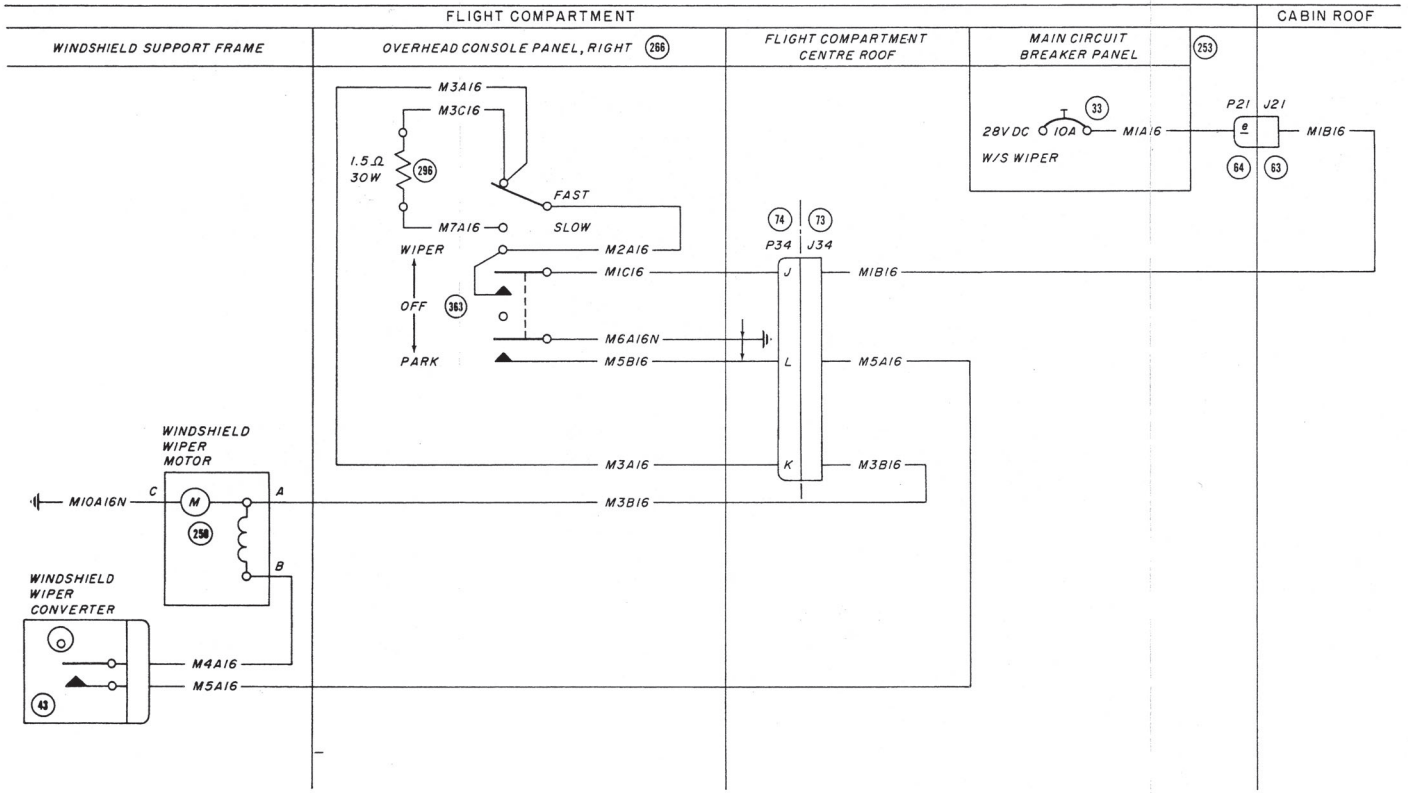

WINDSHIELD WIPERS (MOD S.O.O. 6009)
(MOD 6/1827)

C6N1002/32/C ISSUE NO. 1 2 3

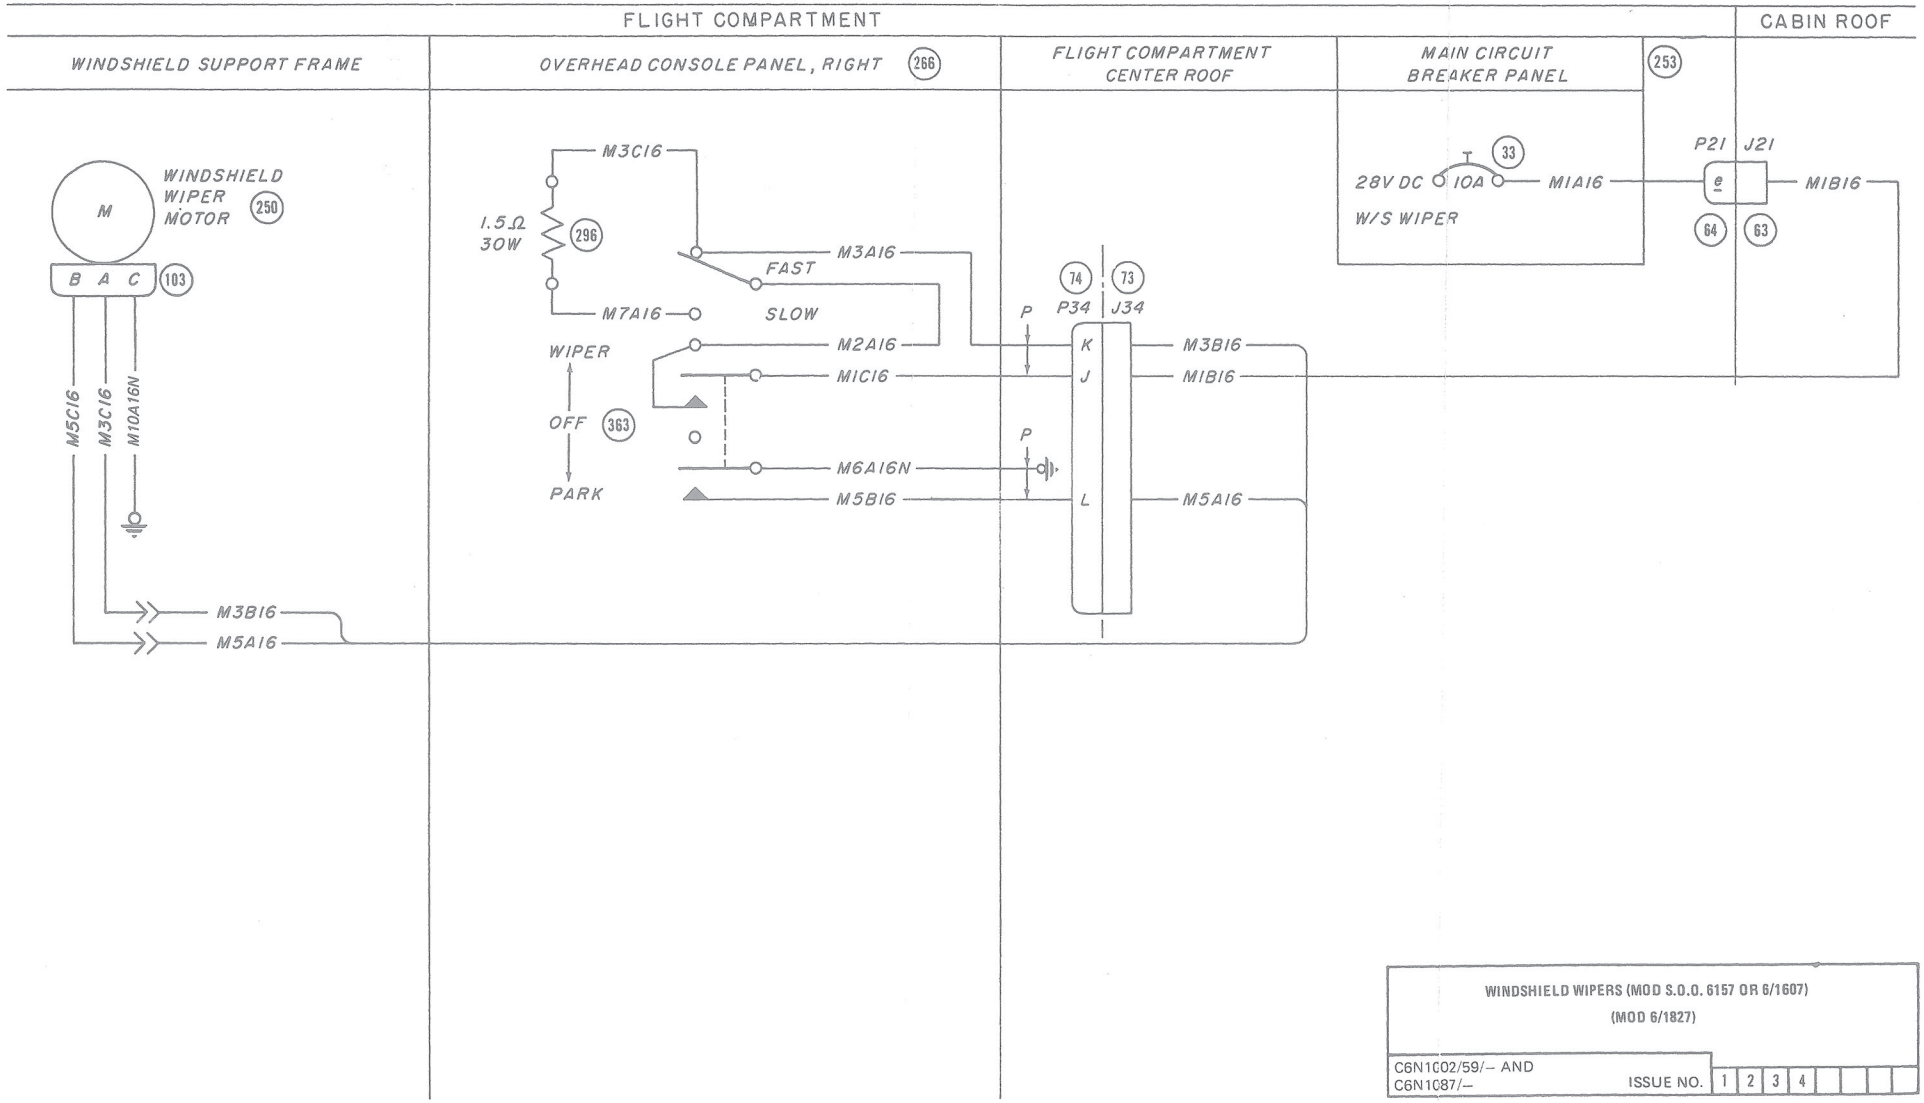

WINDSHIELD WIPERS (MOD S.O.O. 6157 OR 6/1607)
(MOD 6/1827)

C6N1002/59/– AND
C6N1087/–

ISSUE NO. 1 2 3 4

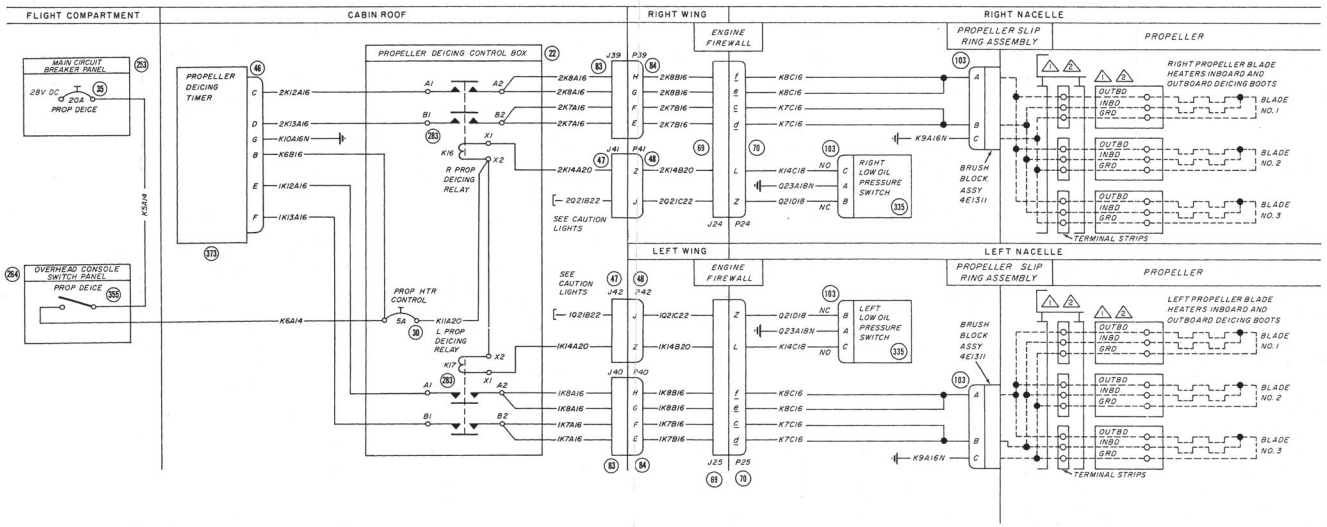

NOTES:

1. ⚠1 MOD 6/1441 PROPELLER BLADE TERMINAL BLOCKS AND CABLE ASSEMBLIES FITTED
2. ⚠2 MOD 6/1441 PROPELLER BLADE TERMINAL CLAMP ASSEMBLIES AND WIRE HARNESSES FITTED

PROPELLER DEICING SYSTEM (MOD S.O.O. 6005)								
C6N1002/31/A AND C6Z1762	ISSUE NO.	1	2					

LIST OF EFFECTIVE PAGES: CHAPTER 32: LANDING GEAR

Reference	Page	Date
Contents	1	Jul 1/69
32-61-00	*1	Jul 15/69

The asterisk (*) indicates pages revised, added or deleted by current revision.

DHC-6 TWIN OTTER SERIES 300
WIRING DIAGRAM MANUAL

CHAPTER 32 - LANDING GEAR

TABLE OF CONTENTS

Subject	Chapter Section Subject	Page
POSITION AND WARNING	32-60-00	
Ski Position Indication	32-61-00	1

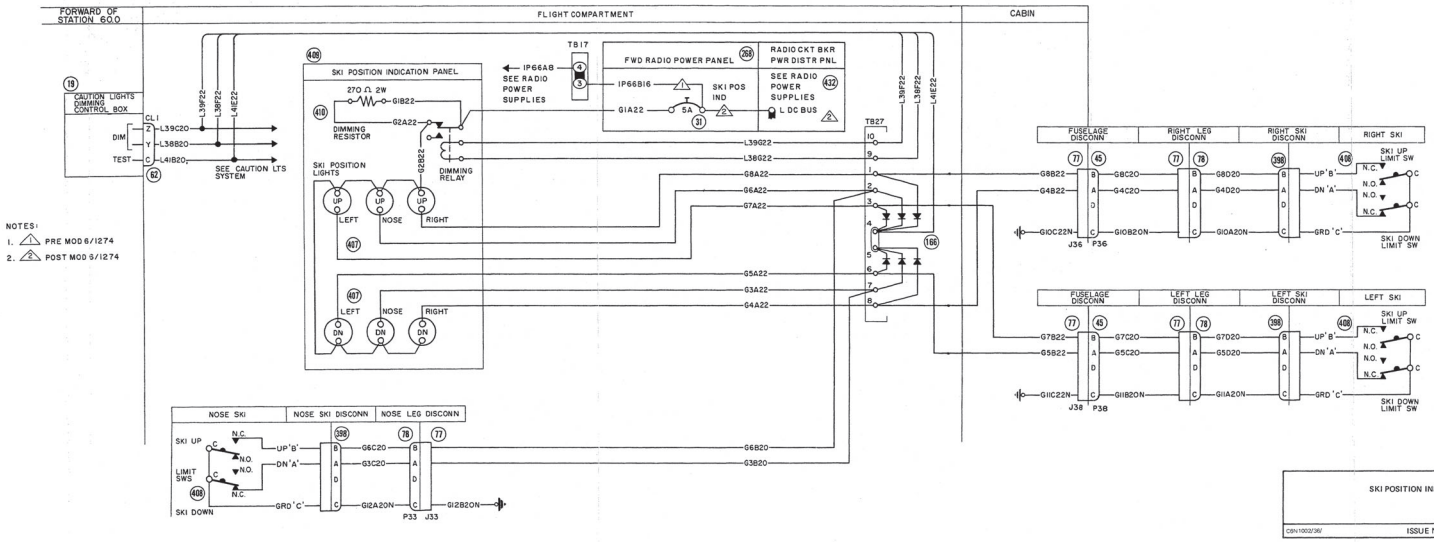

NOTES:
1. ⚠1 PRE MOD 6/1274
2. ⚠2 POST MOD 5/1274

SKI POSITION INDICATION

CSN 1002/36/ ISSUE NO. 1 2

DHC–6 TWIN OTTER SERIES 300
WIRING DIAGRAM MANUAL

LIST OF EFFECTIVE PAGES: CHAPTER 33: LIGHTS

On a revised page the portion of the text and illustration affected by the latest technical revision is indicated by a black vertical line. Pages with a black vertical line against the date at the bottom of the page are the result of text shift from page to page or nontechnical corrections.

Reference	Page	Date	Reference	Page	Date
List of Effective Pages	*1	Feb 28/05			
Contents	1	May 7/82			
33–10–00	1	Mar 10/76			
	2	Mar 10/76			
	3	Mar 10/76			
	*4	Feb 28/05			
	5	Mar 10/76			
	6	Mar 10/76			
	*7	Feb 28/05			
	8	Mar 10/76			
	9	Mar 10/76			
	10	Mar 10/76			
	11	Jun 16/80			
	12	Mar 10/76			
	13	Mar 10/76			
	14	Mar 10/76			
33–20–00	1	Mar 10/76			
	2	Mar 10/76			
	2A	Mar 10/76			
	3	Mar 1/69			
33–40–00	1	Mar 1/69			
	2	Mar 10/76			
	3	Jun 16/80			
	4	Mar 10/76			
	5	Nov 24/77			
	6	Jun 16/80			
	7	Jun 16/80			
33–50–01	1	May 7/82			

The asterisk (*) indicates pages revised, added or deleted by current revision.

DHC-6 TWIN OTTER SERIES 300
WIRING DIAGRAM MANUAL

CHAPTER 33 - LIGHTS

TABLE OF CONTENTS

Subject	Chapter Section Subject	Page
FLIGHT COMPARTMENT	33-10-00	
Caution Light System - Sheet 1		1
Caution Light System - Sheet 2		2
Caution Light System - Sheet 3		3
Caution Light System - Sheet 4		4
Caution Light System - Sheet 5		5
Caution Light System - Sheet 6		6
Caution Light System - Sheet 7		7
Caution Light System - Sheet 8		8
Caution Light System - Sheet 9		9
Caution Light System - Sheet 10		10
Panel Lighting - Sheet 1		11
Panel Lighting - Sheet 2		12
Radio Panel Lighting		13
Flight Compartment Lights		14
PASSENGER COMPARTMENT	33-20-00	
Toilet and Baggage Compartment Lights (Mod 6/1218 and 6/1225)		1
Cabin Lighting (Mod 6/1218 and 6/1225) - Sheet 1		2
Cabin Lighting (Mod 6/1218 and 6/1225) - Sheet 2		2A
Cabin Warning Sign		3
EXTERIOR	33-40-00	
Landing Lights		1
Wing Inspection Lights (Mod S.O.O. 6006)		2
Position Lights (Pre Mod 6/1513)		3
Anti-collision Lights (Pre Mod 6/1513)		4
Taxi Light (Mod S.O.O. 6012 or 6/1600)		5
Beacon Lights		6
Strobe and Wing Position Lights (Mod 6/1513)		7
INTERIOR LIGHTS	33-50-01	
Emergency Lights (S.O.O. 6179)		1

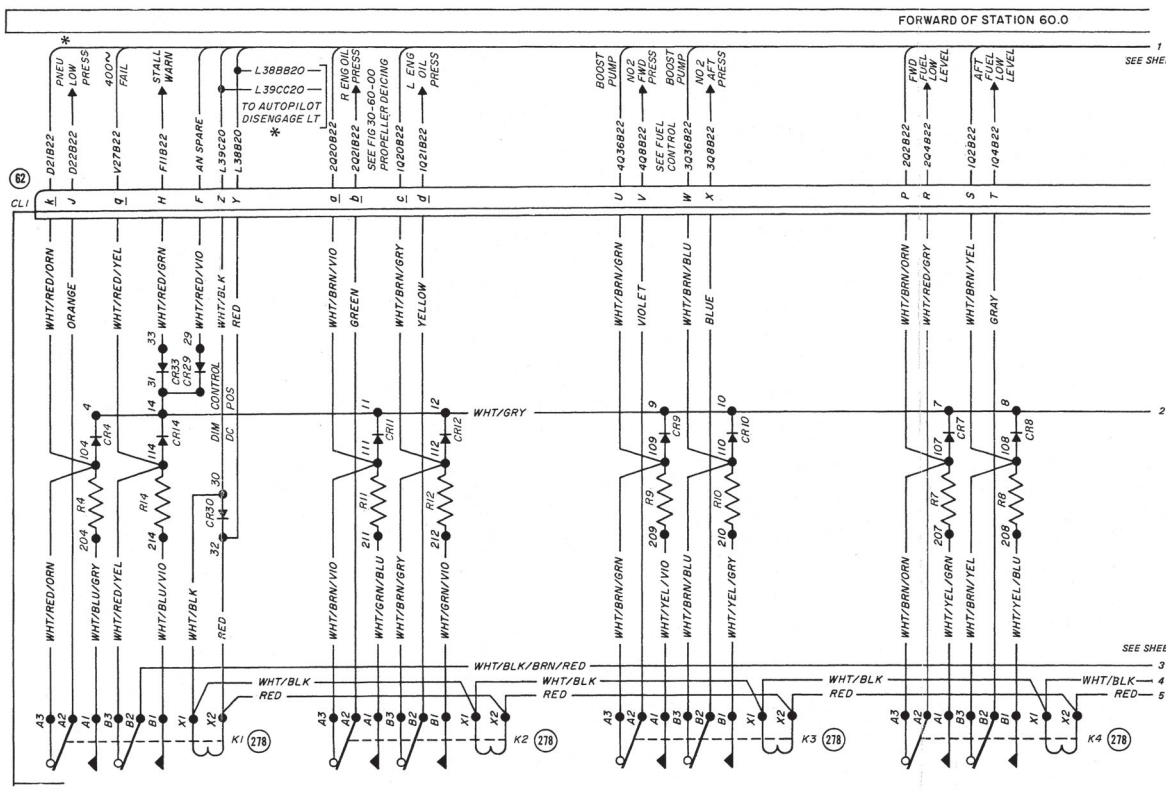

EQUIPMENT LOCATIONS

CAUTION LTS DIM CONTROL BOX PRE MOD 6/1347		COMMON LTS AND CONTROL CIRCUIT	CAUTION LTS DIM CONTROL BOX POST MOD 6/1347	
SHTS 1 & 2	SHTS 3 & 4	SHTS 5 & 6	SHTS 7 & 8	SHTS 9 & 10

NOTES:
1. * CUSTOMER OPTION EQUIPMENT
2. △1 POST MOD 6/1373
3. △2 PRE MOD 6/1347
4. △3 POST MOD 6/1347
5. △4 POST MOD S.O.O. 6142 (K11 AND K13 ADDED)
6. △5 POST MOD 6/1479

CAUTION LIGHT SYSTEM
(SHEET 1)

C6N1002/38/D, C6Z1815/D, ISSUE NO. 1 2 3 4 5
C6N1002/18/A

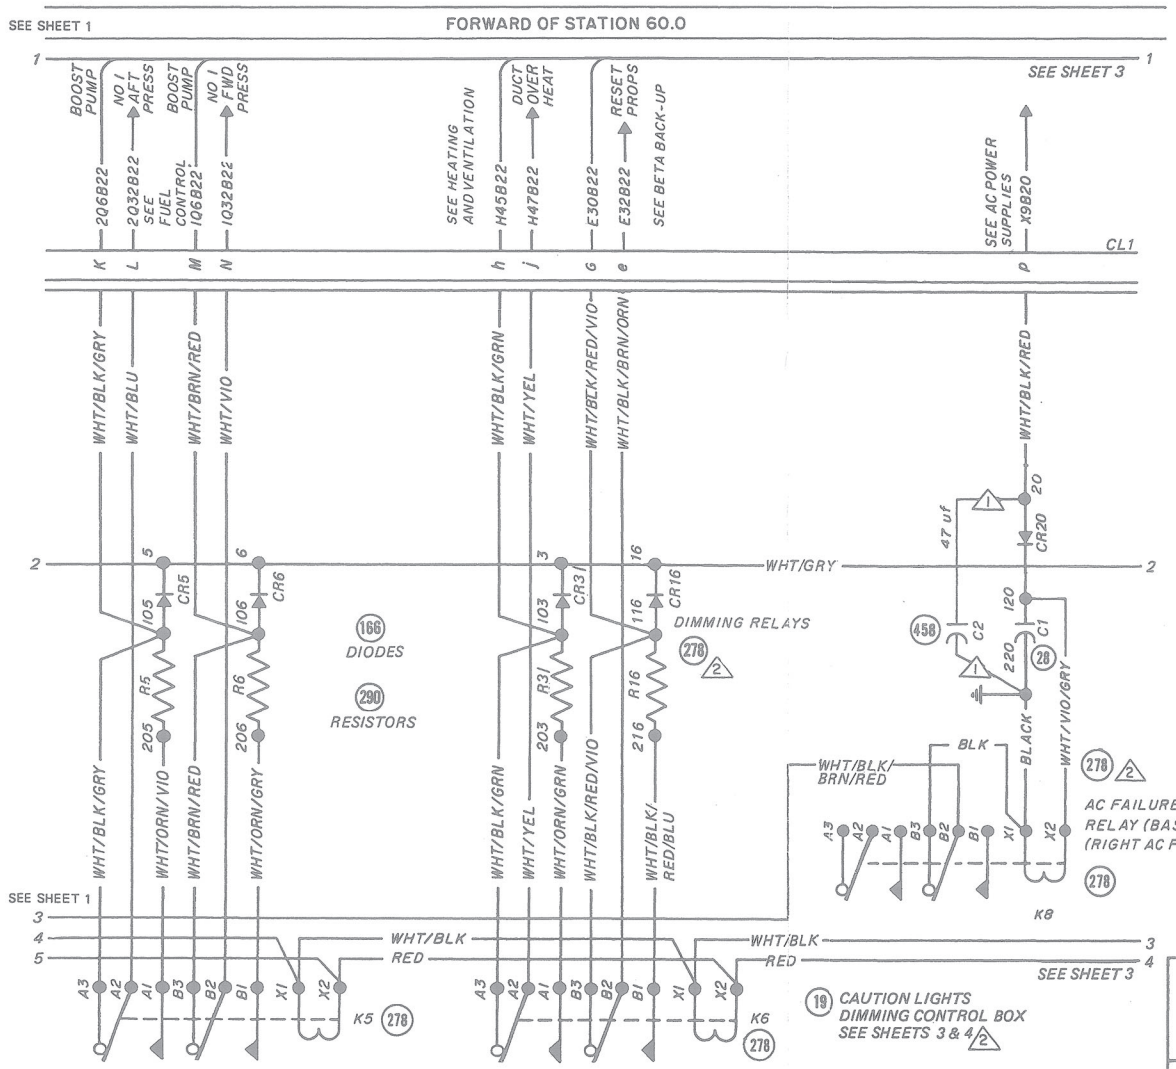

EQUIPMENT LOCATIONS

CAUTION LTS DIM CONTROL BOX PRE MOD 6/1347	COMMON LTS AND CONTROL CIRCUIT	CAUTION LTS DIM CONTROL BOX POST MOD 6/1347
SHTS 1 & 2 SHTS 3 & 4	SHTS 5 & 6	SHTS 7 & 8 SHTS 9 & 10

NOTES:
1. * CUSTOMER OPTION EQUIPMENT
2. 1 POST MOD 6/1373
3. 2 PRE MOD 6/1347
4. 3 POST MOD 6/1347
5. 4 POST MOD S.O.O. 6142 (K11 AND K13 ADDED)
6. 5 POST MOD 6/1479

CAUTION LIGHT SYSTEM

(SHEET 2)

C6N1002/38/D, C6Z1815/D, ISSUE NO. 1 2 3 4 5

C6N1002/18/A

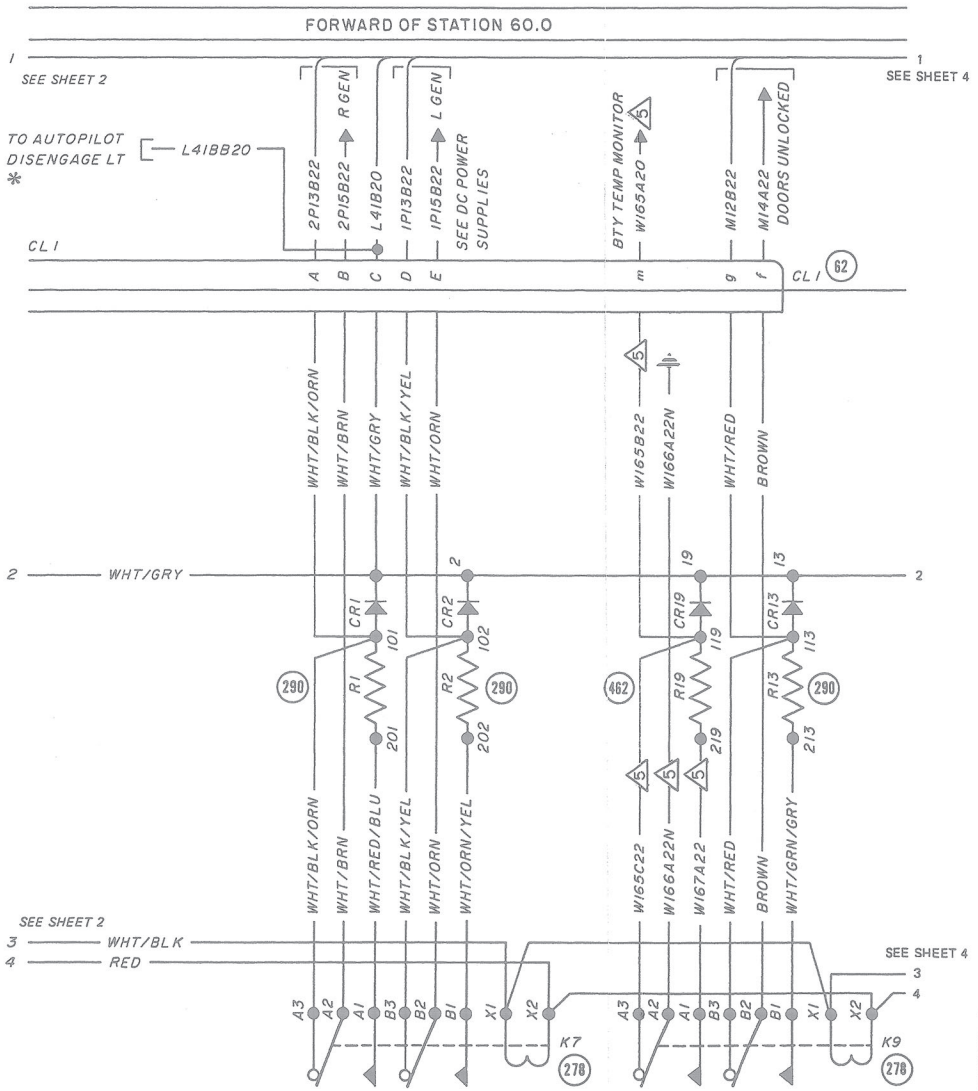

NOTES:
1. * CUSTOMER OPTION EQUIPMENT
2. △1 POST MOD 6/1373
3. △2 PRE MOD 6/1347
4. △3 POST MOD 6/1347
5. △4 POST MOD S.O.O. 6142 (K11 AND K13 ADDED)
6. △5 POST MOD 6/1479

CAUTION LIGHT SYSTEM (SHEET 3)									
C6N1002/38/D, C6Z1815/D	ISSUE NO.	1	2	3	4	5			

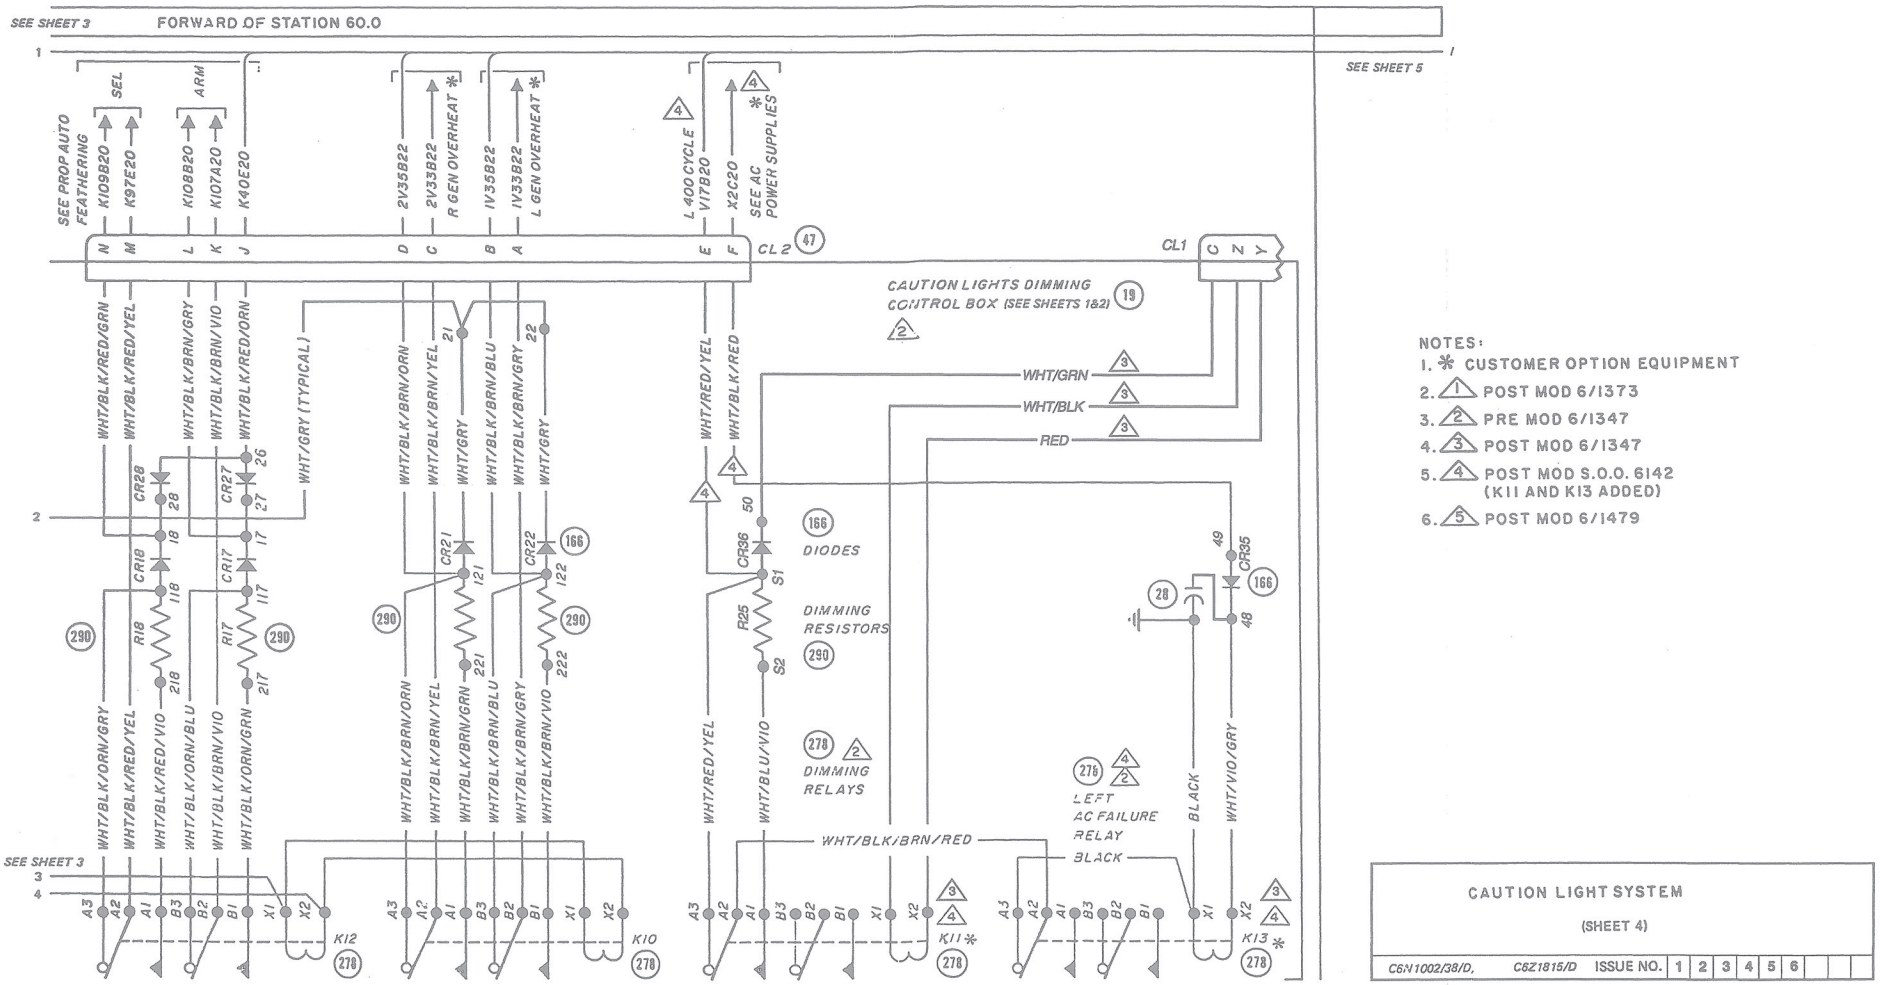

NOTES:
1. * CUSTOMER OPTION EQUIPMENT
2. △1 POST MOD 6/1373
3. △2 PRE MOD 6/1347
4. △3 POST MOD 6/1347
5. △4 POST MOD S.O.O. 6142 (K11 AND K13 ADDED)
6. △5 POST MOD 6/1479

CAUTION LIGHT SYSTEM
(SHEET 4)

C6N1002/38/D, C6Z1815/D ISSUE NO. 1 2 3 4 5 6

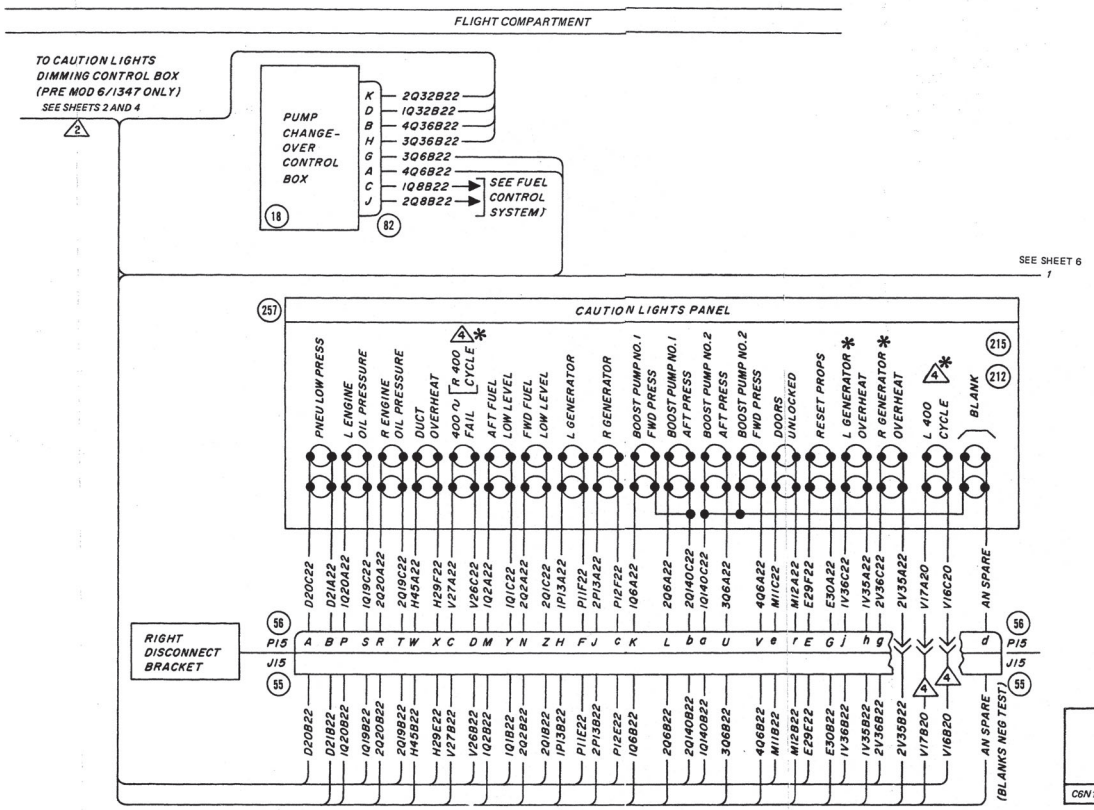

NOTES:
1. * CUSTOMER OPTION EQUIPMENT
2. 1 POST MOD 6/1373
3. 2 PRE MOD 6/1347
4. 3 POST MOD 6/1347
5. 4 POST MOD S.O.O. 6142 (K11 AND K13 ADDED)
6. 5 POST MOD 6/1479

CAUTION LIGHT SYSTEM
(SHEET 5)

C6N1002/38/D, /49/B, C6Z1815/D ISSUE NO. 1 2 3 4 5

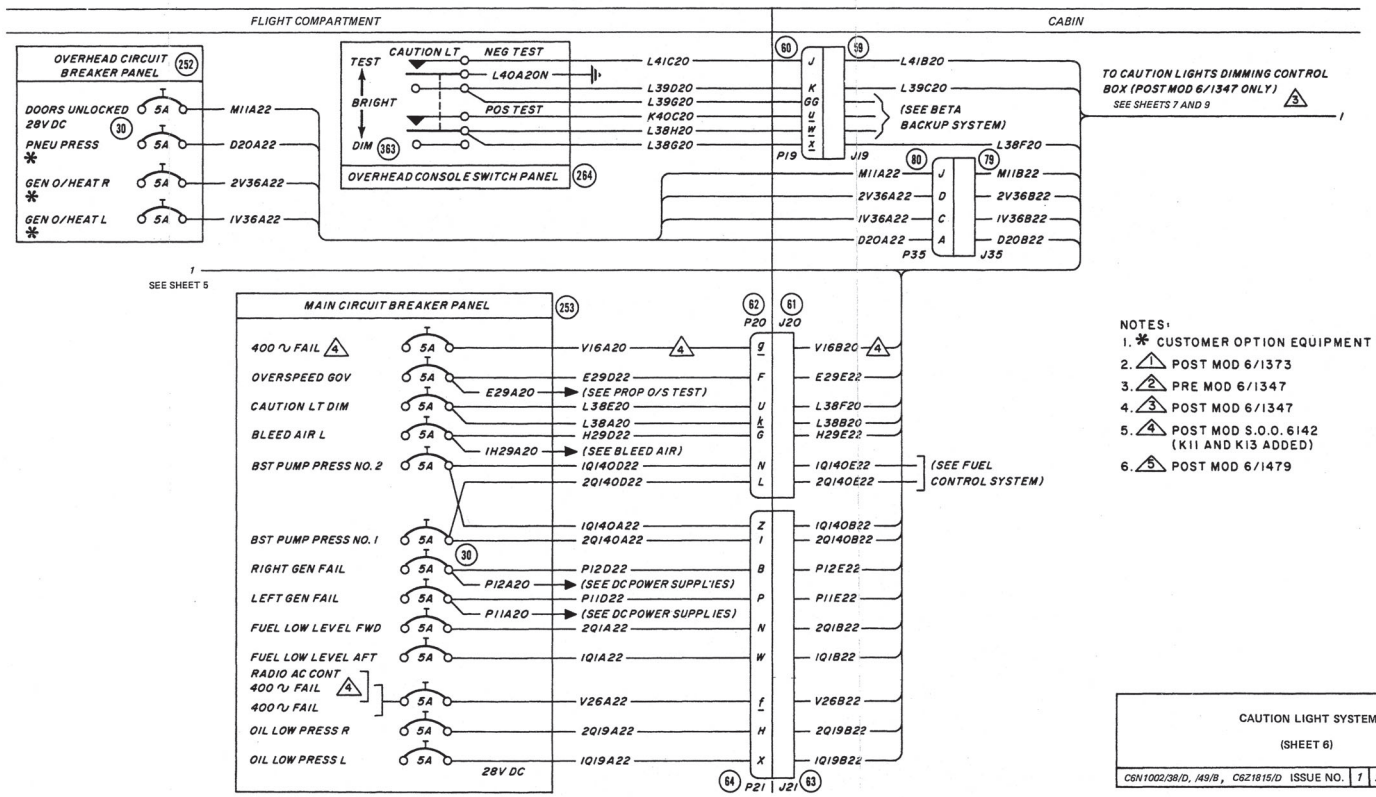

NOTES:
1. * CUSTOMER OPTION EQUIPMENT
2. 1 POST MOD 6/1373
3. 2 PRE MOD 6/1347
4. 3 POST MOD 6/1347
5. 4 POST MOD S.O.O. 6142 (K11 AND K13 ADDED)
6. 5 POST MOD 6/1479

CAUTION LIGHT SYSTEM
(SHEET 6)

C6N1002/38/D, /49/B, C6Z1815/D ISSUE NO. 1 2 3 4 5

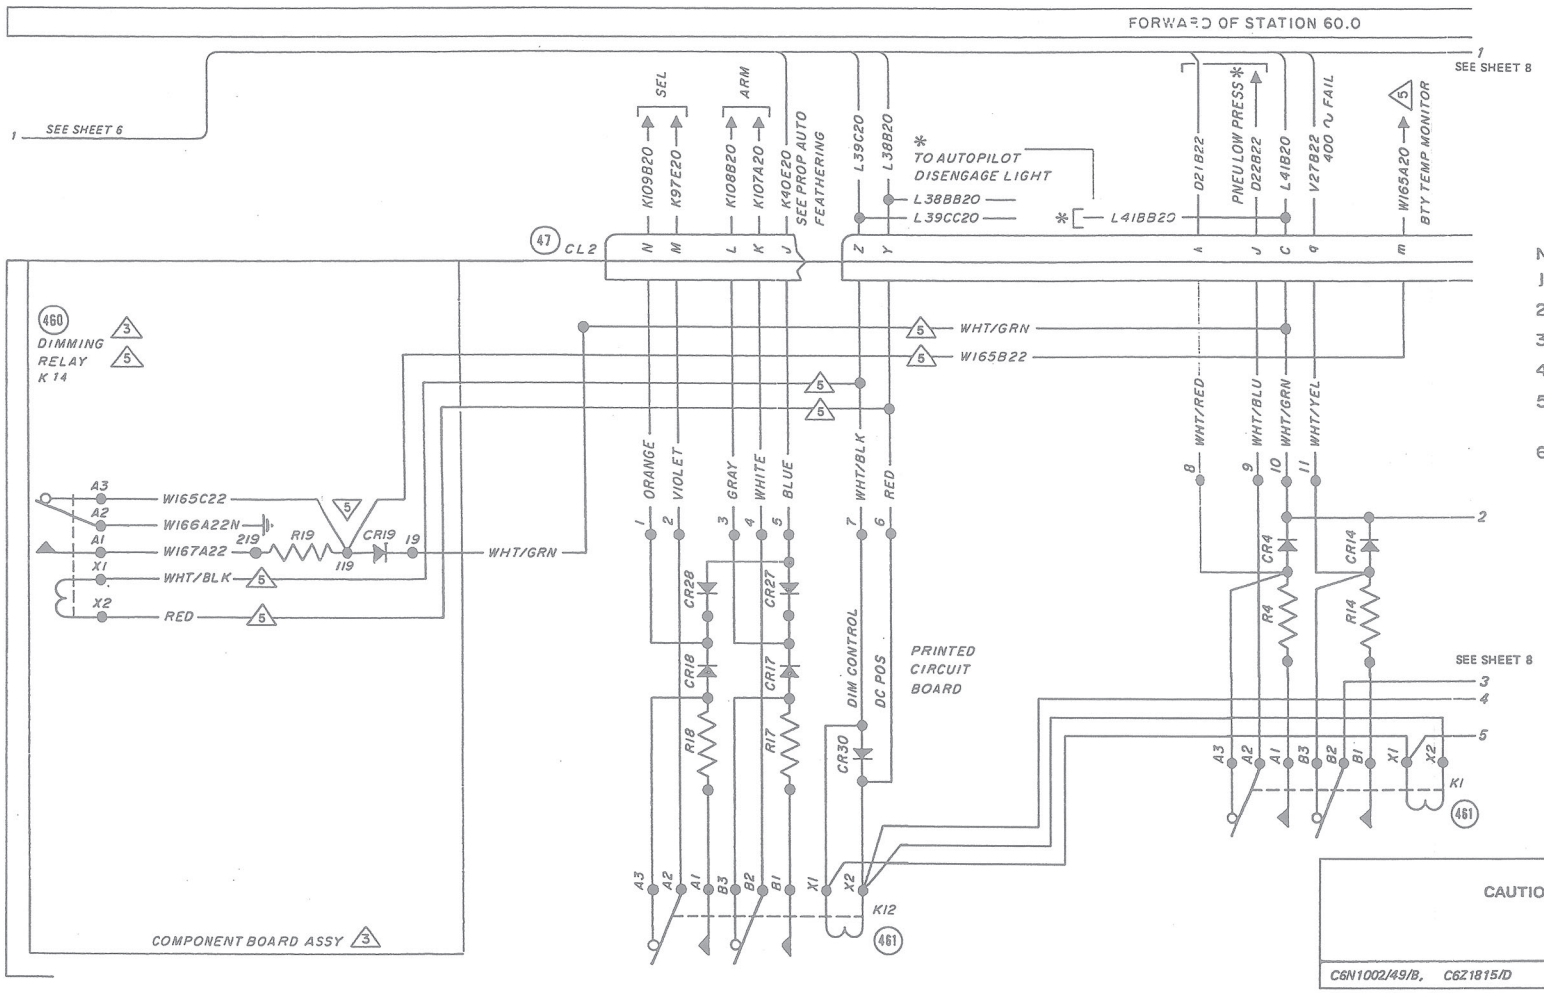

NOTES:
1. * CUSTOMER OPTION EQUIPMENT
2. 1 POST MOD 6/1373
3. 2 PRE MOD 6/1347
4. 3 POST MOD 6/1347
5. 4 POST MOD S.O.O. 6142 (K11 AND K13 ADDED)
6. 5 POST MOD 6/1479)

CAUTION LIGHT SYSTEM

(SHEET 7)

C6N1002/49/B, C6Z1815/D ISSUE NO. 1 2 3 4

C6N1002/18/A

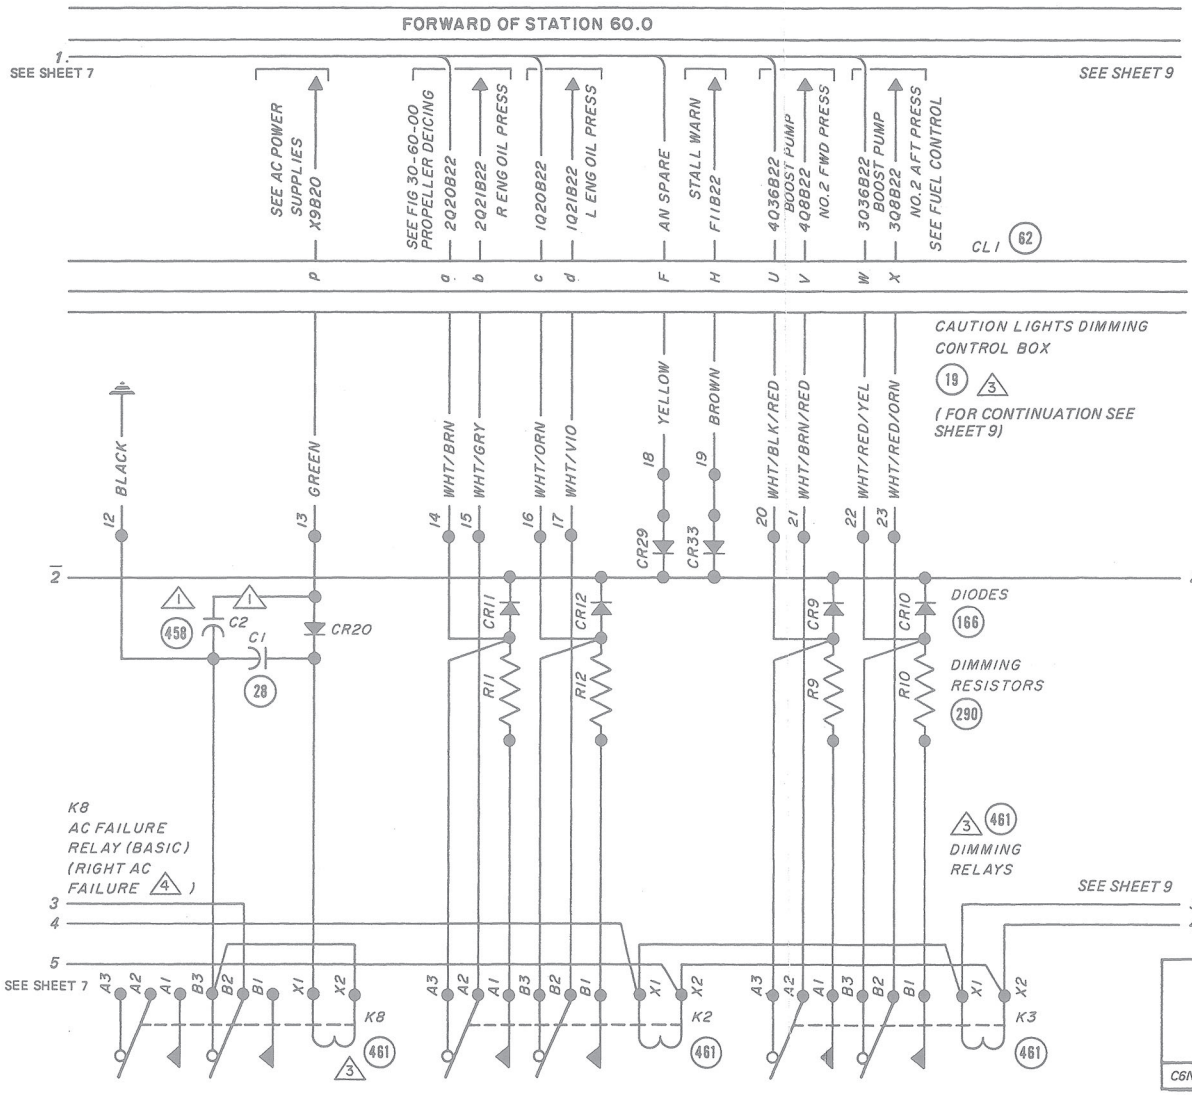

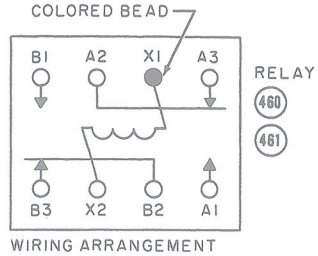

NOTES:
1. * CUSTOMER OPTION EQUIPMENT
2. 1 POST MOD 6/1373
3. 2 PRE MOD 6/1347
4. 3 POST MOD 6/1347
5. 4 POST MOD S.O.O. 6142 (K11 AND K13 ADDED)
6. 5 POST MOD 6/1479)

CAUTION LIGHT SYSTEM
(SHEET 8)

C6N1002/49/B, C6Z1815/D	ISSUE NO.	1	2	3					

C6N1002/18/A

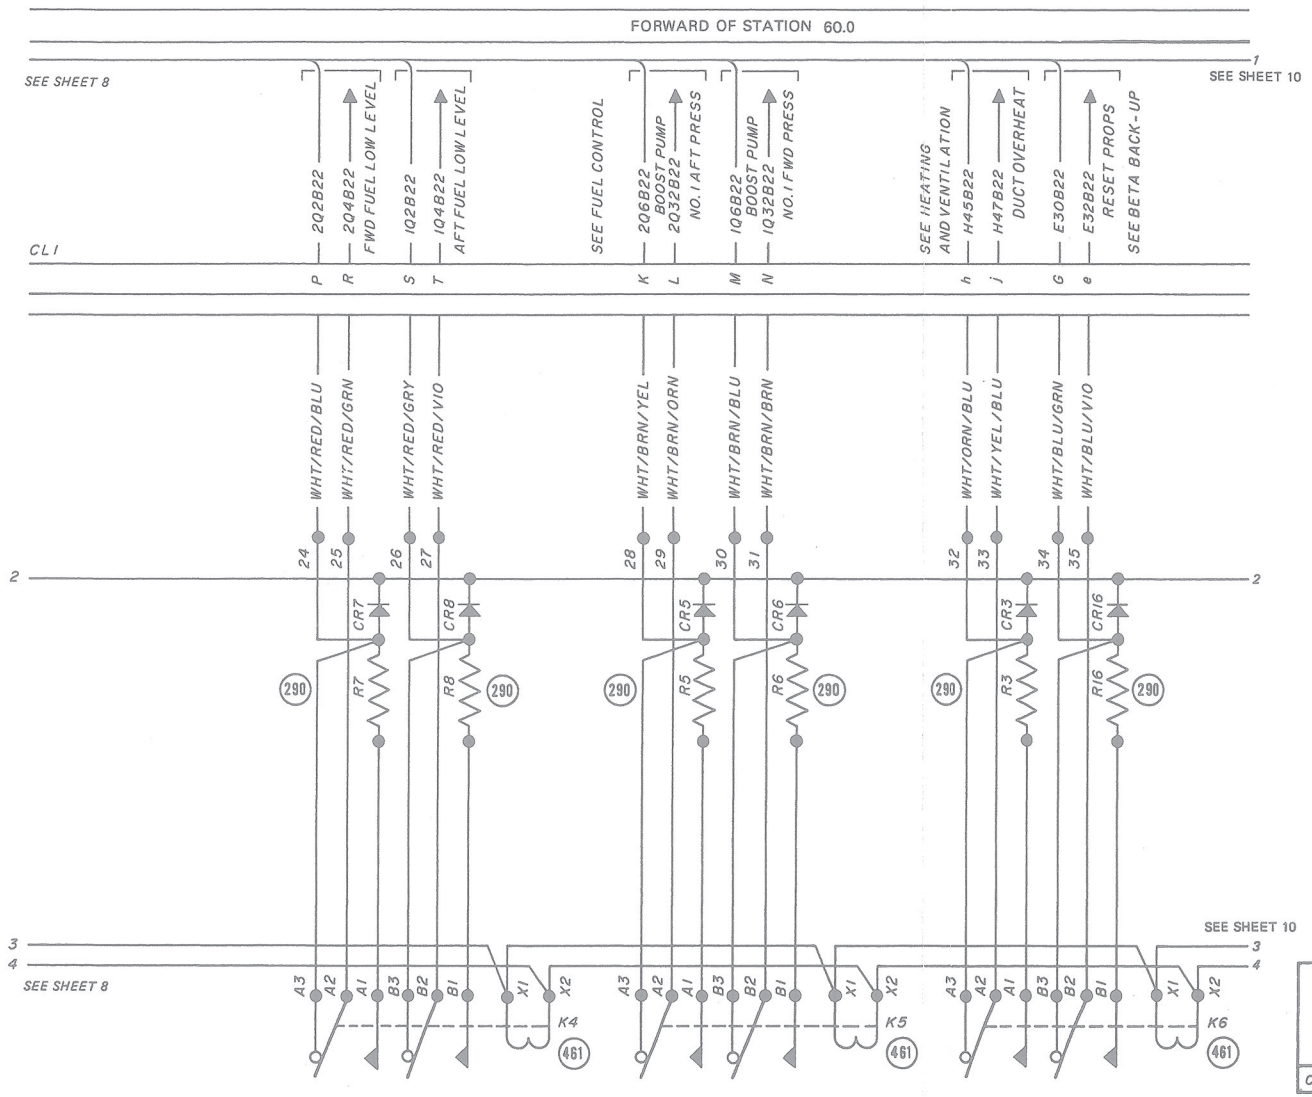

NOTES:

1. ✻ CUSTOMER OPTION EQUIPMENT
2. △1 POST MOD 6/1373
3. △2 PRE MOD 6/1347
4. △3 POST MOD 6/1347
5. △4 POST MOD S.O.O. 6142 (K11 AND K13 ADDED)
6. △5 POST MOD 6/1479

CAUTION LIGHT SYSTEM

(SHEET 9)

C6N1002/49/B, C6Z1815/D ISSUE NO. 1 2 3

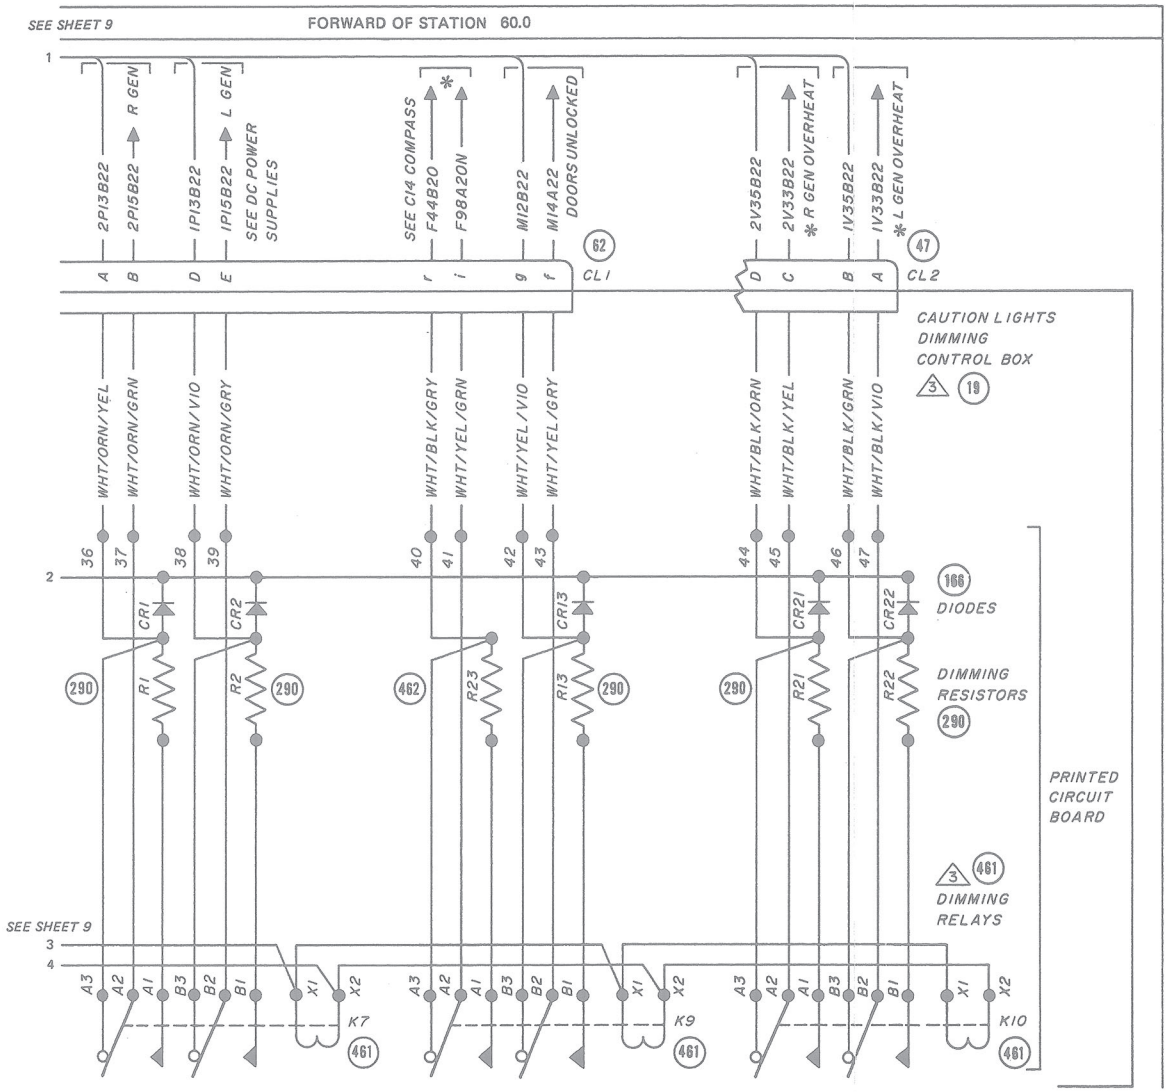

NOTES:

1. * CUSTOMER OPTION EQUIPMENT
2. △1 POST MOD 6/1373
3. △2 PRE MOD 6/1347
4. △3 POST MOD 6/1347
5. △4 POST MOD S.O.O. 6142 (K11 AND K13 ADDED)
6. △5 POST MOD 6/1479

CAUTION LIGHT SYSTEM

(SHEET 10)

C6N1002/49/B, C6Z1815/D ISSUE NO. 1 2 3

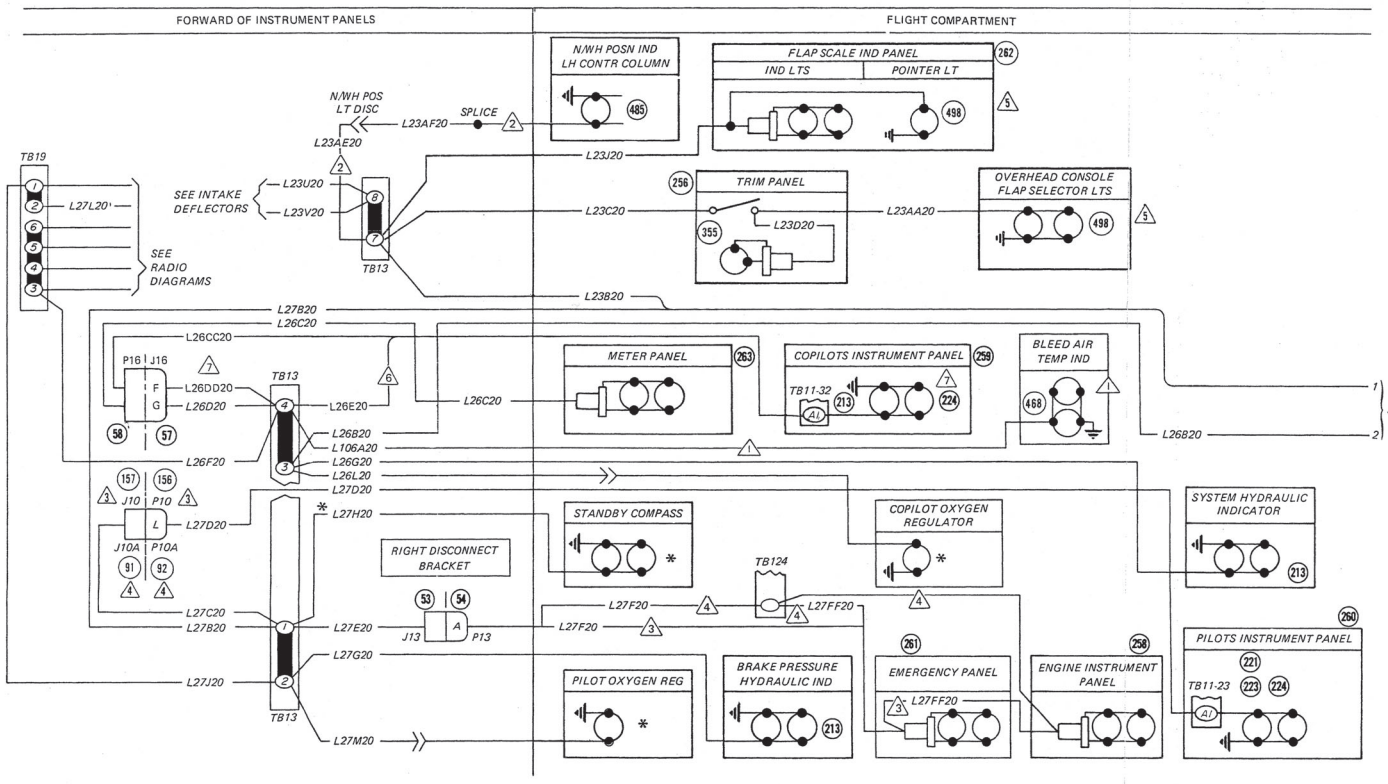

NOTES:

1. * CUSTOMER OPTION EQUIPMENT
2. △1 POST MOD 6/1266
3. ON EACH PANEL, POST AND EDGE LIGHTS AS REQUIRED ARE CONNECTED IN PARALLEL
4. LAMPS USED IN EMBEDDED EDGE LIGHTS ARE 855 OR 627
5. △2 MOD 6/1478
6. △3 PRE MOD 6/1475
7. △4 MOD 6/1475
8. △5 S.O.O. 6161 OR MOD 6/1609
9. △6 PRE MOD 6/1604
10. △7 MOD 6/1604

PANEL LIGHTING

(SHEET 1)

△7 C6N1002/55/A AND CAS 6247 **ISSUE NO.** 1 2 3 4 5 6

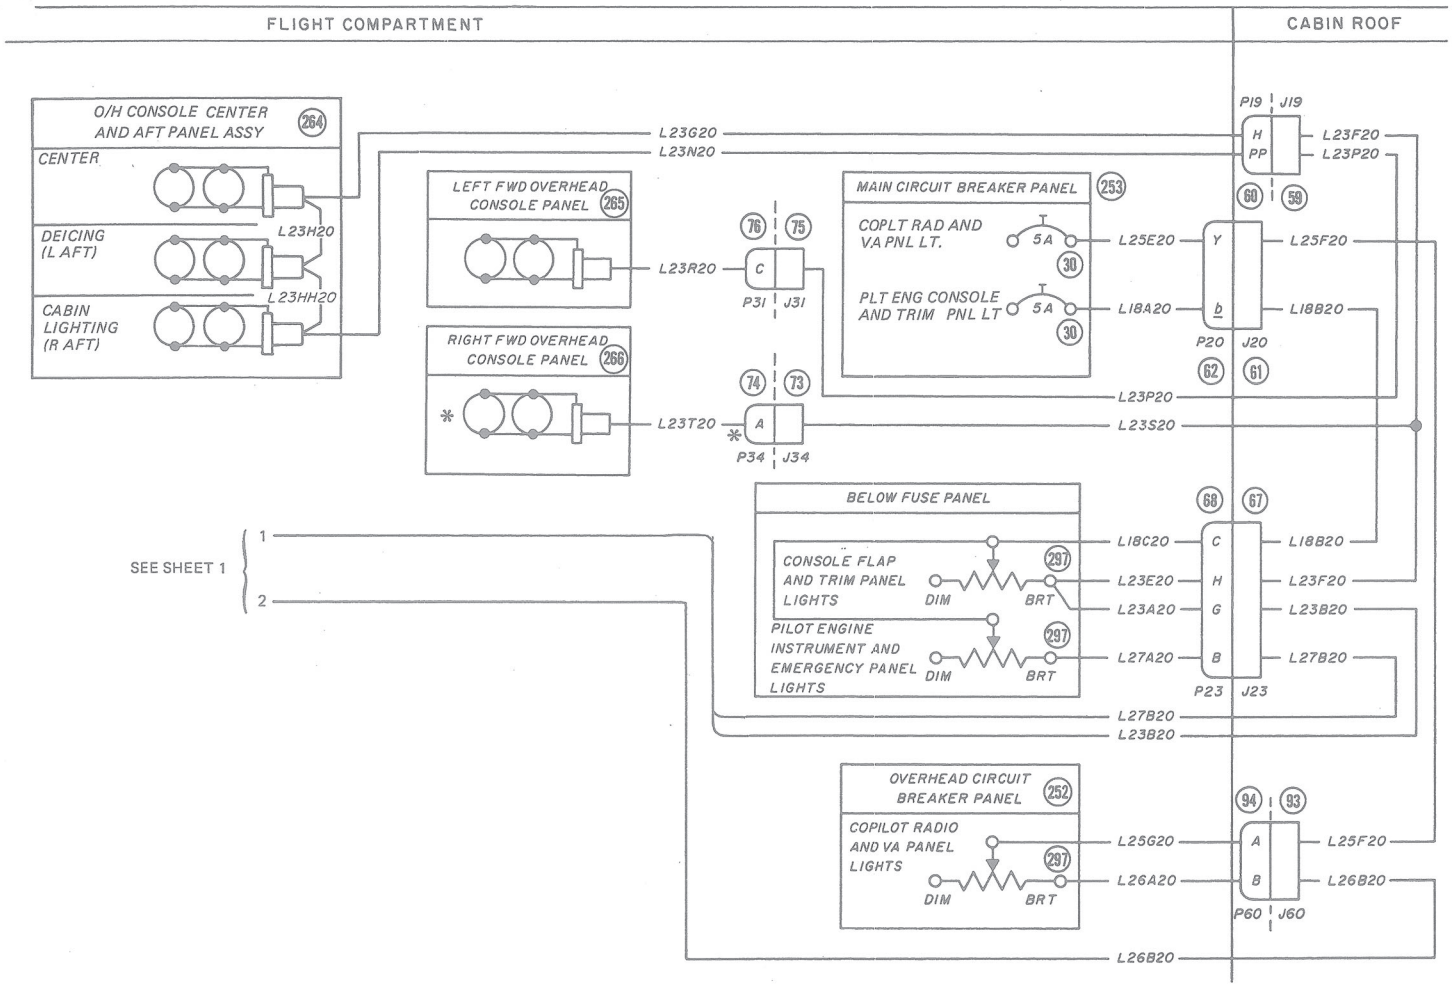

NOTES:
1. * CUSTOMER OPTION EQUIPMENT
2. ⚠1 POST MOD 6/1266
3. ON EACH PANEL, POST AND EDGE LIGHTS AS REQUIRED ARE CONNECTED IN PARALLEL
4. LAMPS USED IN EMBEDDED EDGE LIGHTS ARE 855 OR 627
5. ⚠2 MOD 6/1478
6. ⚠3 PRE MOD 6/1475
7. ⚠4 MOD 6/1475

PANEL LIGHTING
(SHEET 2)

C6N 1002/41/D AND ISSUE NO. 1 2 3 4

CAS 6247

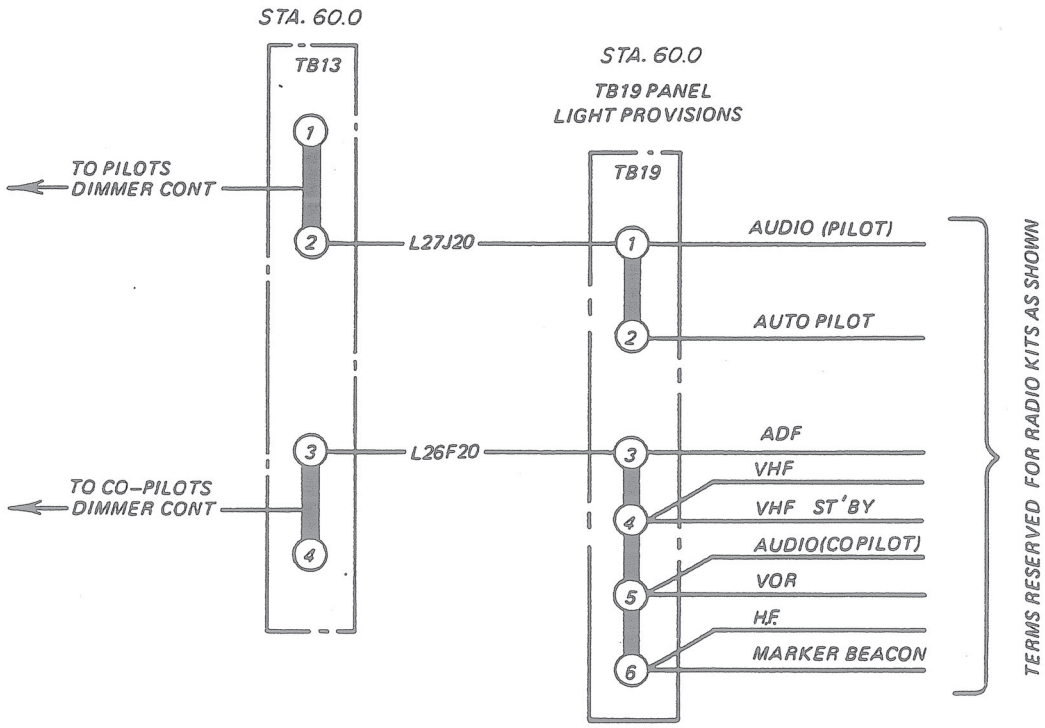

RADIO PANEL LIGHTING										
C6R1122/-	ISSUE NO.	1	2							

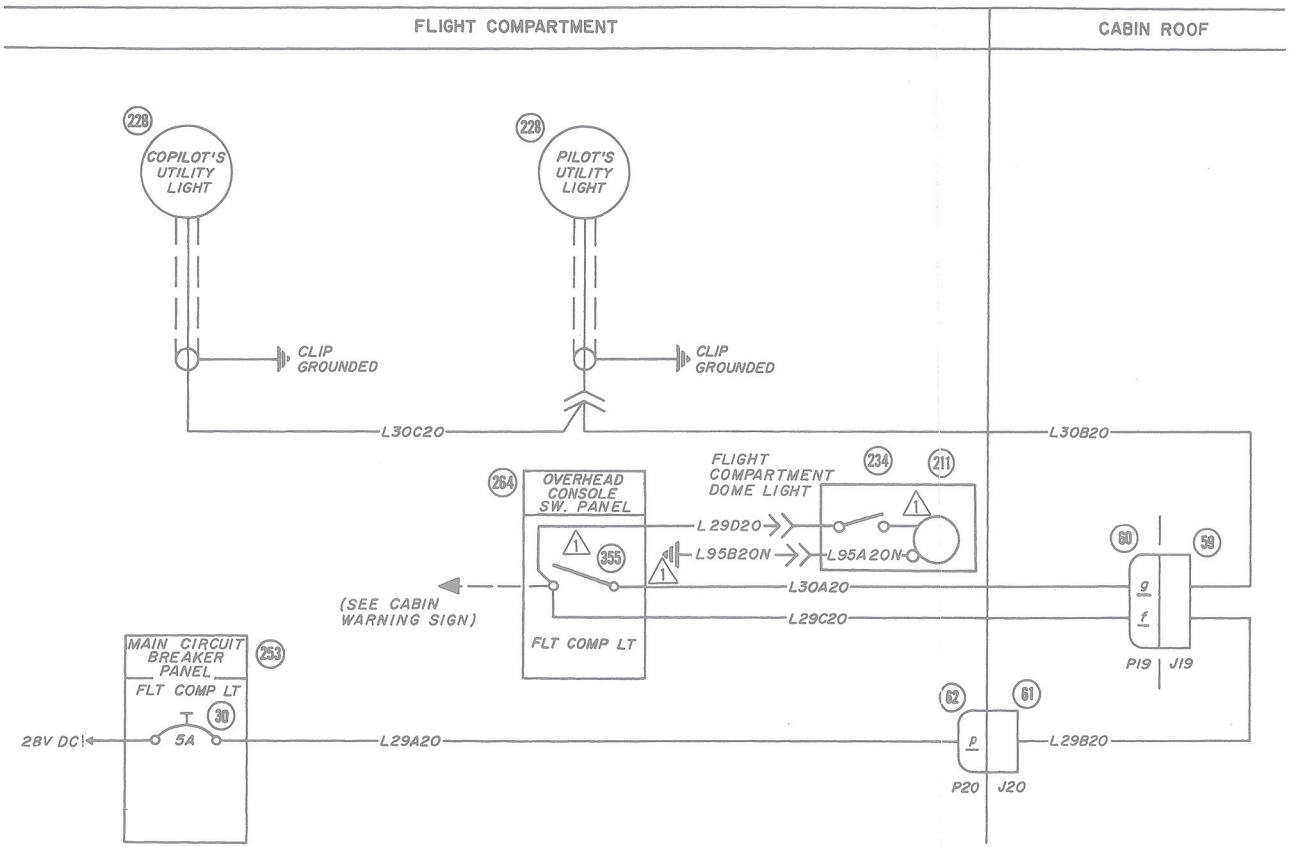

NOTES:

1. MOD 6/1327

FLIGHT COMPARTMENT LIGHTS

C6N1002/19/F ISSUE NO. 1 2
and C6N1002/42/A

VIKING – Temporary Revision

PSM NO.: 1–63–2W **AIRCRAFT:** DHC–6 **SERIES:** 300

PUBLICATION: WIRING DIAGRAM MANUAL **TEMPORARY REVISION NO.:** W27

Insert in 33-20-00, before Page 1

TOILET AND BAGGAGE COMPARTMENT LIGHTS
(MOD 6/1218 AND 6/1225)

REASON FOR ISSUE:
This Temporary Revision introduces Mod 6/2502, Upgraded Nose Baggage Compartment.

ACTION:
In PSM 1–63–2W, Section 33-20-00, ignore existing Page 1 and insert revised page, as shown on Page 3 of this Temporary Revision.

RECORDING INSTRUCTIONS:
Record this Temporary Revision No. and the relevant information in the appropriate columns of the TEMPORARY REVISION INDEX provided at the front of the manual.

This Page Intentionally Left Blank

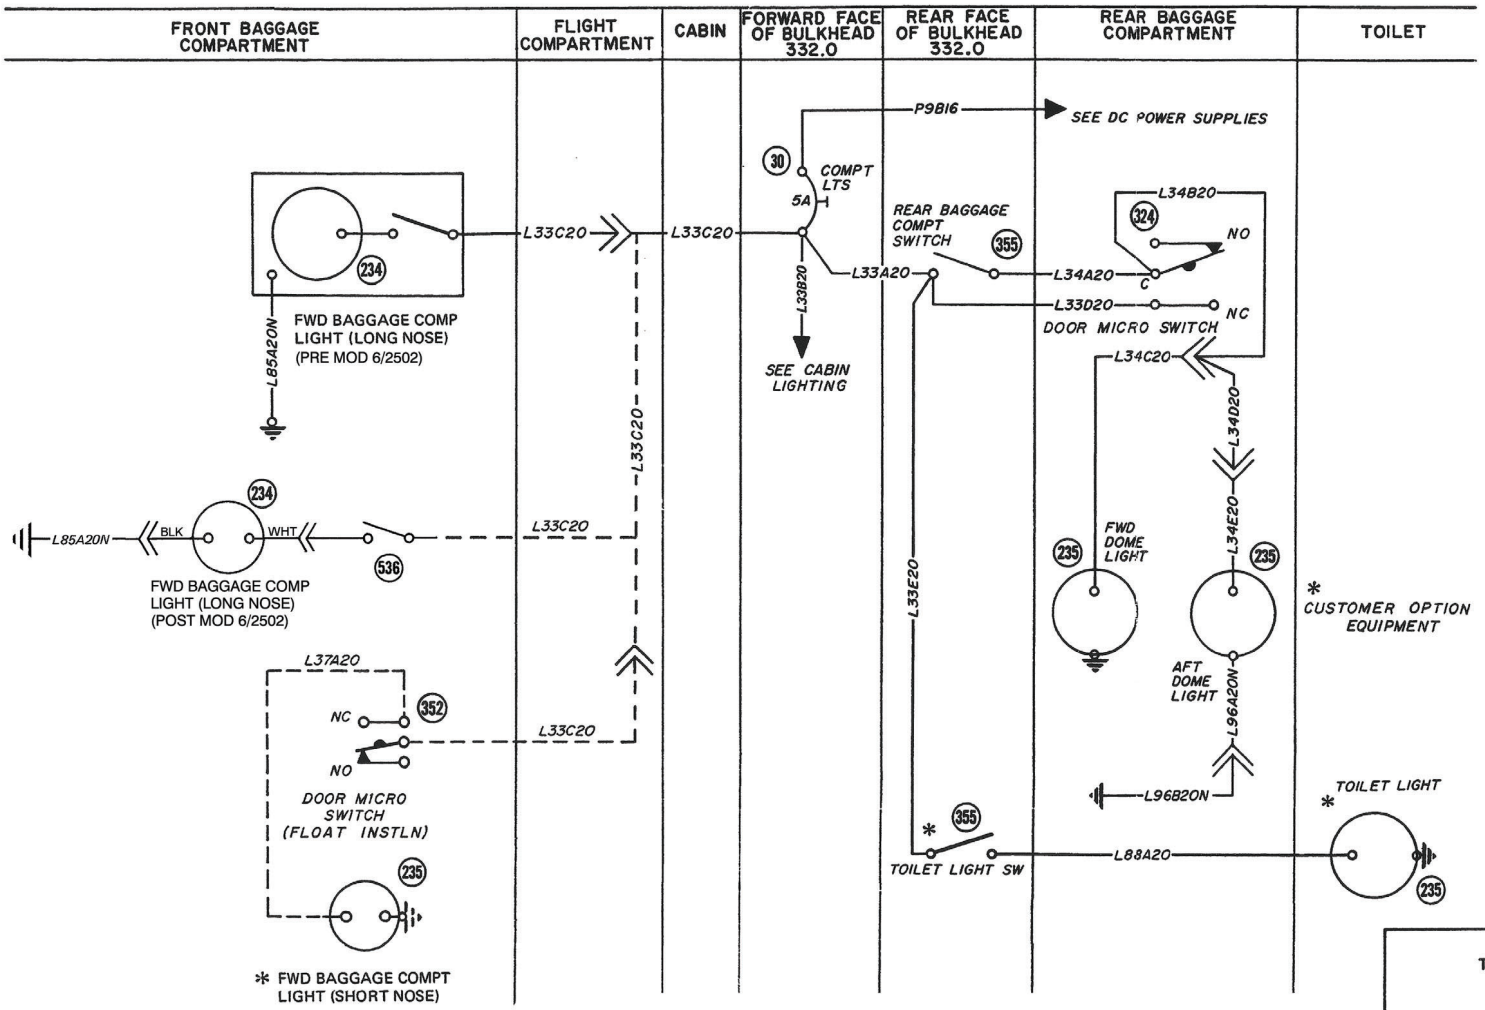

TOILET AND BAGGAGE COMPARTMENT LIGHTS
(MOD 6/1218 AND 6/1225)

C6N 1002/42/A ISSUE NO. 1 2 3

This Page Intentionally Left Blank

NOTE: Please see the TEMPORARY REVISION that revises this page.

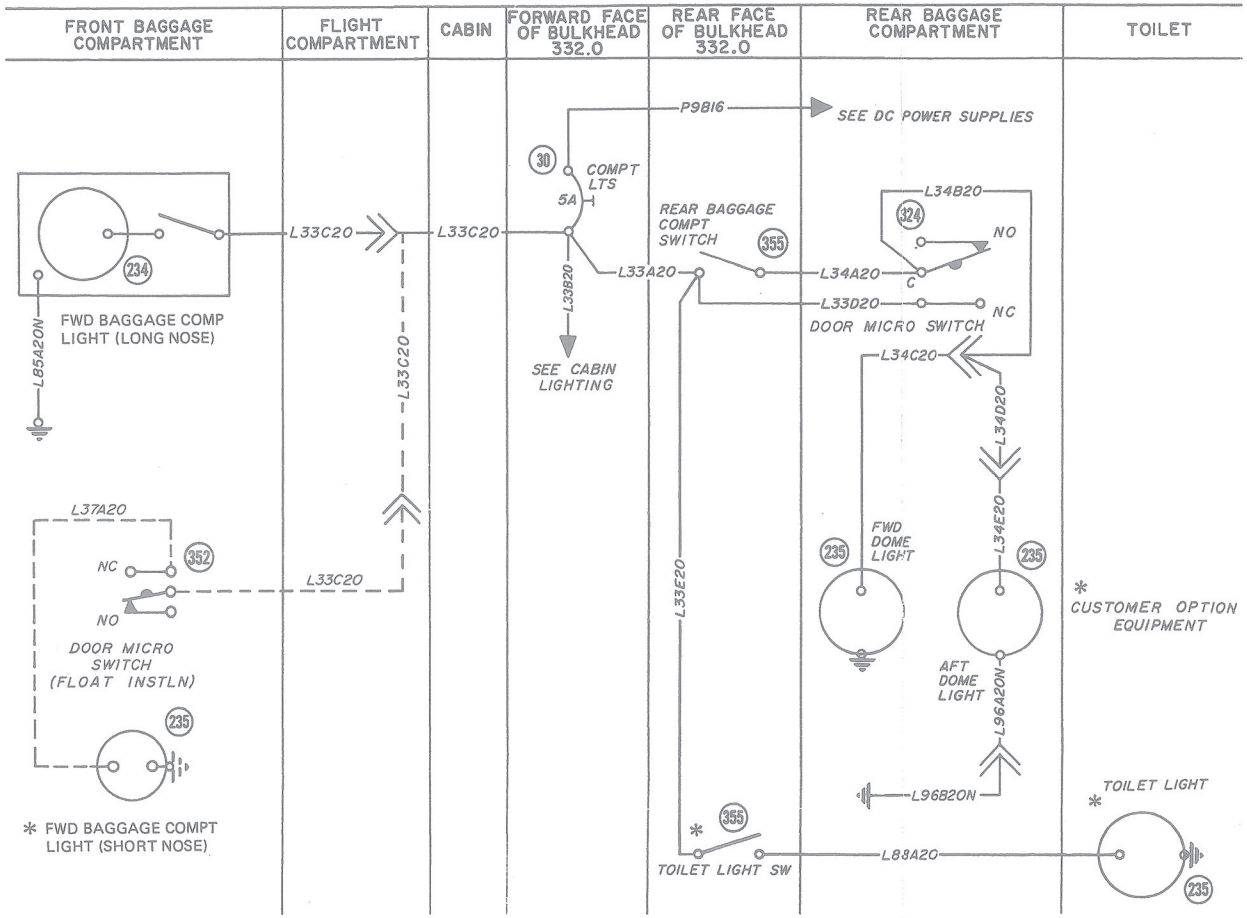

TOILET AND BAGGAGE COMPARTMENT LIGHTS
(MOD 6/1218 AND 6/1225)

C6N 1002/42/A ISSUE NO. 1 2

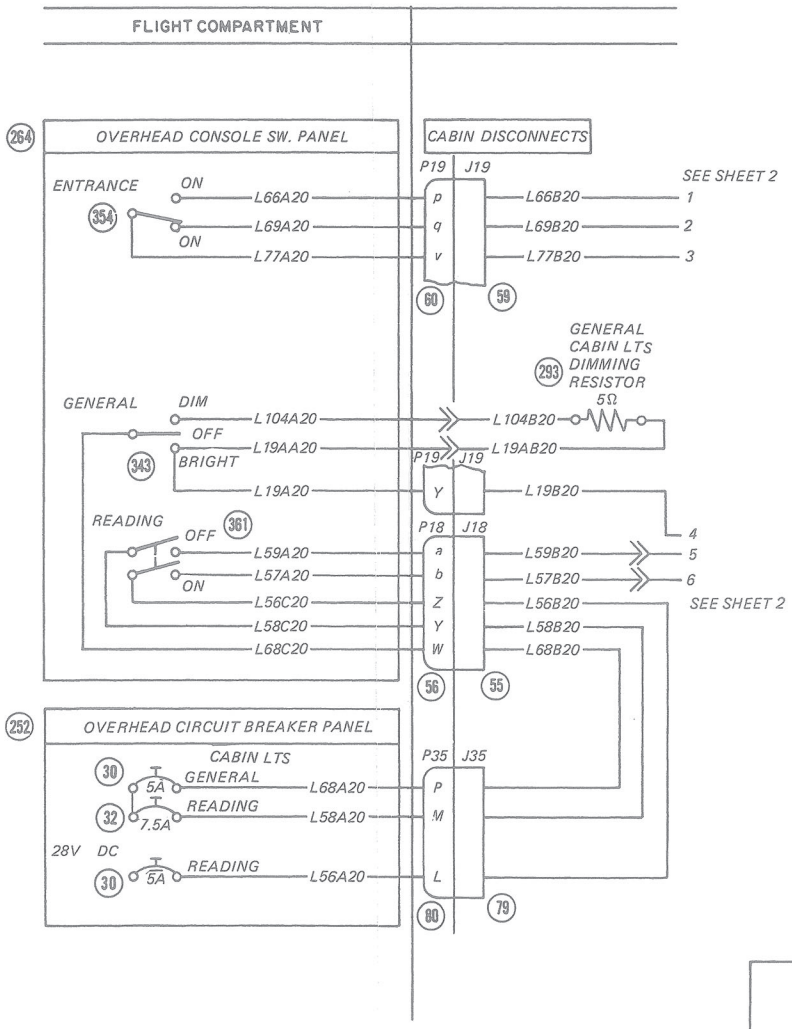

CABIN LIGHTING
(MOD 6/1218 AND 6/1225)
(SHEET 1)

C6N1002/42/A ISSUE NO. 1 2 3

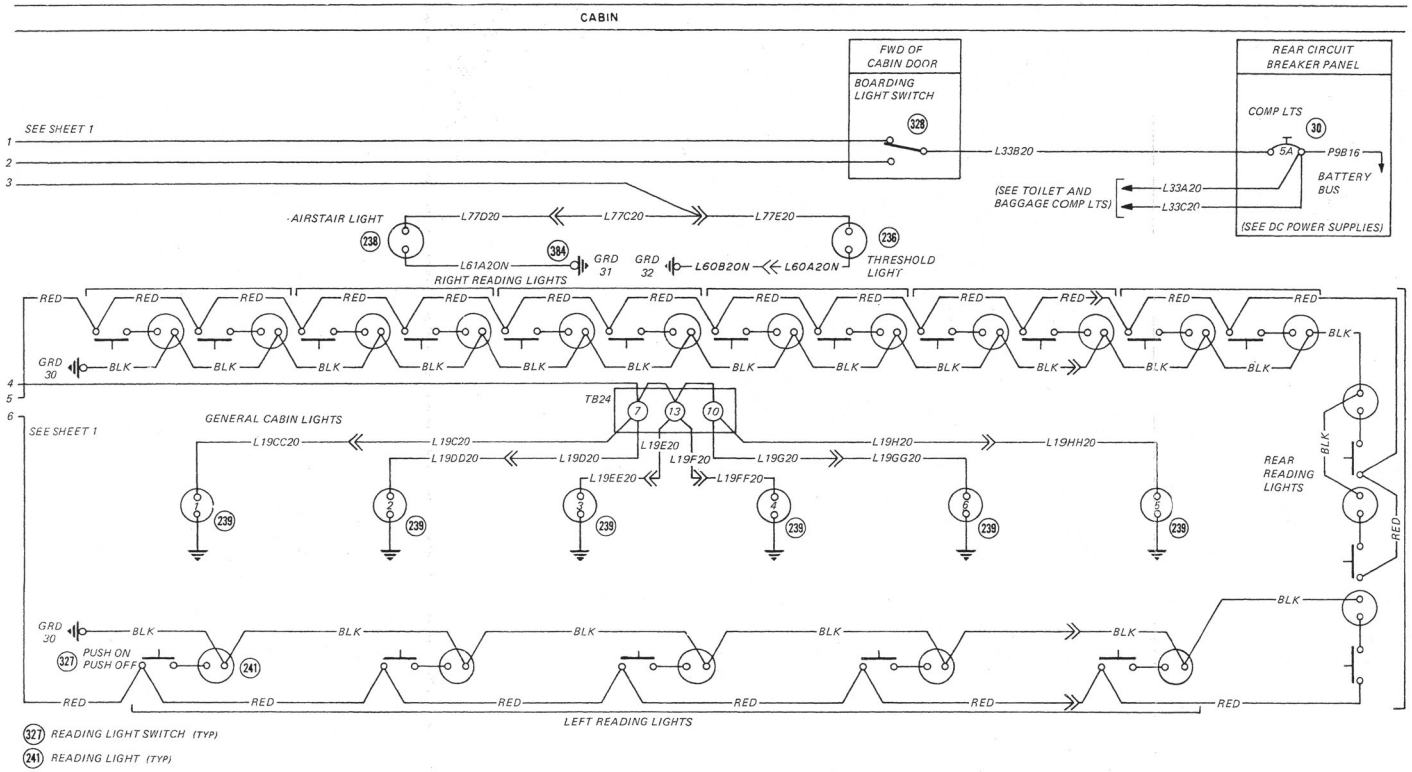

CABIN LIGHTING
(MOD 6/1218 AND 6/1225)
(SHEET 2)

C6N1002/42/A ISSUE NO. 1 2 3

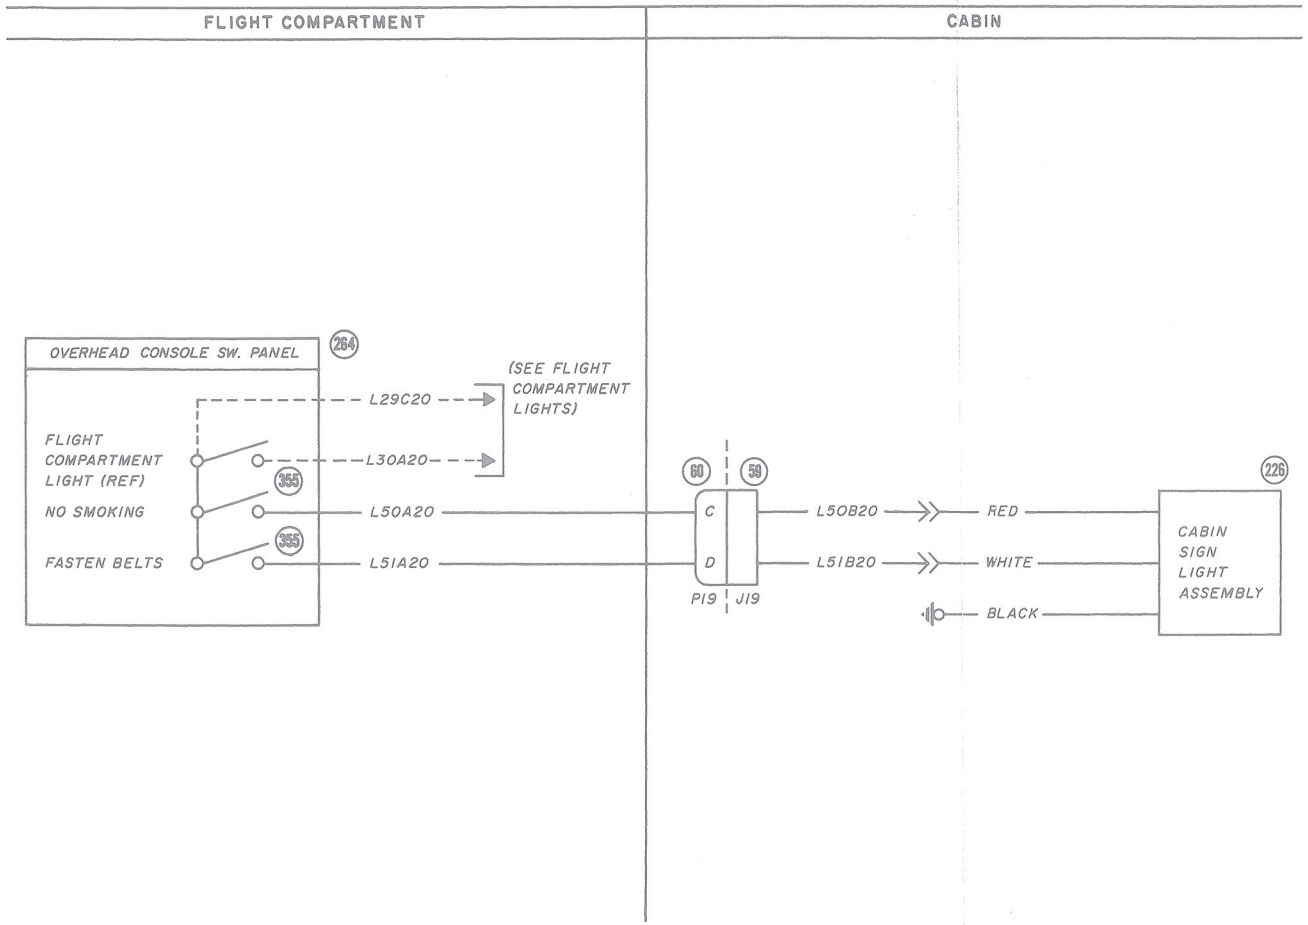

CABIN WARNING SIGN		
C6N1013/M	ISSUE NO.	1

NOTE: Please see the TEMPORARY REVISION that revises this page.

ITEM NO.	DESCRIPTION	PART NO.	MFR.
343	Switch (MS35058-21)	DSC11-21	Cutler Hammer, Honeywell, Micro Switch
344	Switch (MS25068-21)	DSC13-21	Cutler Hammer
345	Switch (MS25068-23)	DSC13-23	Cutler Hammer
346	Switch (MS25068-26)	DSC13-26	Cutler Hammer
347	Switch, Sensitive (Limit)	MS25026-1	
348	Switch (MS25125-C3)	DSC18-4	Cutler Hammer
349	Switch (MS25125-J4)	DSC18-9	Cutler Hammer
350	Switch	CH8859K50	Cutler Hammer
351	Switch (MS25127-J4)	DSC20-9	Cutler Hammer
352	Switch, Limit	MS25253-4	
353	Switch (MS35058-22)	DSC11-22)	
354	Switch (MS35058-23)	DSC11-23)	
355	Switch (MS35058-24)	DSC11-24)	
356	Switch (MS35058-27)	DSC11-27)	
357	Switch (MS35058-28)	DSC11-28)	Cutler Hammer,
358	Switch (MS35059-21)	DSC12-21)	Honeywell, Micro
359	Switch (MS35059-22)	DSC12-22)	Switch
360	Switch (MS35059-23)	DSC12-23)	
361	Switch (MS35059-24)	DSC12-24)	
361A	Switch (MS35059-27)	DSC12-27)	
362	Switch (MS35059-28)	DSC12-28)	
363	Switch (MS35059-31)	DSC12-31)	
364	Switch, Limit	MS25253-4	
365	Switch, Gyro Compass	6AT2	Honeywell
366	Switch, A/P	TPB58	Honeywell
367	Tank Unit	391087-03081 or	Simmonds
	(Mod 6/1420)	391088-002	Simmonds
368	Tank Unit	391087-03082	Simmonds
	(Mod 6/1420)	391088-003	Simmonds
369	Tank Unit	391087-03083 or	Simmonds
	(Mod 6/1420)	391088-004	Simmonds
370	Tank Unit	391087-03084 or	Simmonds
	(Mod 6/1420)	391088-005	Simmonds
371	Tank Unit	391087-03085 or	Simmonds
	(Mod 6/1420)	391088-006	Simmonds
372	Thermocouple, Chromel-Alumel	3012075	U.A.C.
373	Timer, Deicing (Propeller)	3E1150-3	B.F. Goodrich
	(Post Mod 6/1629)	3E1150-10	B.F. Goodrich
374	Timer, Deicing (Airframe) (Pre Mod 6/1779)	42E13-3A	Bendix
	(Mod 6/1779)	42E13-3B	Bendix
375	Transformer	43642	Hammond
376	Transmitter, Fuel Flow	9133-25-B1	Bendix
377	Transmitter, Oil Pressure	C6SC1084-3	DHC
378	Transmitter, Gas Gen Tach	GEU7A	Globe
379A	Transmitter, Torque Pressure (Edison)	318-02020	Edison
380	Transmitter, Aileron Trim Tab	10820-17-1, 31-102	Bourns
381	Terminal Insert	DSC64-2	DHC
382	Terminal Insert	DSC64-3	DHC
383	Terminal Board	MS27212-1-5	
384	Terminal, Ground	A2532	Grimes
385	Valve, Bleed Air Shutoff (Pre Mod 6/1680)	26440051	Vapor Heating
	(Mod 6/1680)	320295-1	Whittaker

ITEM NO.	DESCRIPTION	PART NO.	MFR.
386	Valve, Hot Air Actuator	BLYB9304	Barber-Colman
387	Valve, Fuel Crossfeed & SOV	AV16B1762B	General Controls
388	Valve, Deicing Airframe	1532-3A	Bendix
	(Mod 6/1410)	1532-3C	
389	Voltmeter	DHCSC70022-1	DHC
390	Valve, Air	15328	Wright Components
391	Switch, Synch)	P/O 213433	Woodward
392	Box, Synch Control)		
393	Actuator Prop Synch	213100	Woodward
394	Pickup, Governor (Pre Mod 6/1767)	5430-904	Woodward
	(Mod 6/1767)	210952	Woodward
395	Connector, Governor Pickup	1609-201	Woodward
396	Connector, Prop Synch Control	233032	Woodward
397	Connector, Prop Synch Actuator	233062	Woodward
398	Connector, Skis	PTOP8-4S	Bendix
399	Resistor, Type 250	F208	Ohmite
400	Switch (MS25126-B1)	DSC19-2	Cutler Hammer
401	Switch, Pressure	SW333	Autolite
402	Light, Indicator	MS25041-8	
403	Pump, Aux Fuel	2B6-7 or 2B7-1	Airborne
404	Indicator, Aux Fuel Qty	6430694 or 6432690	AC Spark Plug
405	Transmitter, Aux Fuel Qty	C6G1129-1	DHC
		6427208	AC Spark Plug
	(Mod 6/1569)	C6G1129-7	DHC
406	Valve, Transfer & Refuel/SOV	AV1E1139	
407	Light, Ski Position (Lamp 327)	134-3830-0375-201	Dialco
408	Switch, Limit	BZ-2R55T	Honeywell
409	Panel, Ski Position Indicator	C6NF1103	DHC
410	Resistor	RC42GF271K	
411	Relay, 4-pole	4B3104	Hi-G
412	Air Conditioner, Type 1000	031100	J.B. Systems
413	Limiter, 150 amps	27-442	J.B. Systems
414	Switch	27-407	J.B. Systems
415	Box, Relay - Pressure Refuel	C6G1190-1	DHC
416	Deleted		
417	Panel, Pressure Refuel	C6G1153-1	DHC
418	Connector, J7	KPTMOOE-12-10P	Cannon
419	Connector, J1/J5	6046-1	Dage
420	Connector, J3	6048-1	Dage
421	Connector, J2/J6	6047-1	Dage
422	Connector, J4	6049-1	Dage
423	Connector, P3	6819-1	Dage
424	Connector, P4	6820-1	Dage
425	Relay, K3, K4	DSC35-1	DHC
426	Switch, Fuel Overload (MS25125-C3)	DSC18-4	Cutler Hammer
427	Switch, Master Refuel (MS25126-C3)	DSC19-4	Cutler Hammer
428	Switch, Overload Test (MS35058-27)	DSC11-27	Cutler Hammer, Honeywell, Micro Switch
429	Light, Indicating (Lamp 301)	95-1310-0932-301	Dialco
430	Panel, Circuit Breaker Overhead	C6NF1283	DHC
431	Panel, Circuit Breaker Main	C6NF1284	DHC

ITEM NO.	DESCRIPTION	PART NO.	MFR
432	Panel, Circuit Breaker Radio	C6NF1285	DHC
433	Box, Radio AC	C6NF1287	DHC
434	Solenoid, Eng Intake Deflector	R14S143	G.W. Lisk
435	Resistor 2K 1/2W	RC20GF202J	
436	Resistor 20 ohm 25W	0364B	Ohmite
437	Resistor 6.8K 1/2W	RC20GF682K	
438	Resistor 1K 2W	CLU1021	Ohmite
439	Lamp, Fwd Baggage Compt (Lamp 306)	B5540-306	Grimes
440	Panel, Emer Bus Control	C6NF1291-27	DHC
441	Relay, Undercurrent	R103	A.A.E.
442	Battery (Nicad 22 AH)	CA4	Sonotone
443	Diode	IN3571	
444	Circuit Breaker	MS25244-15	
445	Circuit Breaker	MS25244-25	
446	Switch, Emer Bus	MS25103-23	
447	Light Assy, A/P Disengage (Lamp 327)	40000	Honeywell
448	Relay, Inverter Control	AN3353-2	
449	Inverter, 400VA	DH1030-24-600-CS	Phoenix
450	Connector, Inverter Input	MS3106R22-1S	
451	Connector, Inverter Output	MS3106R22-10P	
452	Resistor, VM 30.1K	DCC30.1K	IRC
453	Transformer	88663	Hammond
454	Switch, Pressure	DHCSC70020-11	DHC
	(Mod 6/1422)	DHCSC70020-13	DHC
	(Mod 6/1470)	C6SC1125	DHC
	(Mod 6/1503	8190026	Hathaway
455	Connector, Torque Switch	MS3126E10-6S	
456	Diode	MR1124	
457	Fuse, 1/2-amp	312.500	Littelfuse
458	Capacitor	CP05A1KC474K3	Sprague
459	Fuse, 1-amp	312001.	Littelfuse
460	Relay, Crystal Can	DSC76-1	
461	Relay, Crystal Can	DSC76-2	
462	Resistor	RW59V901	
463	Switch, Pressure	M4008-15	Hobbs
464	Spare		
465	Indicator, Bleed Air Temp	C6SC1111	Lewis Engineering
466	Connector	KPTM06E10-6S	Cannon
467	Bulb, Temperature	56B17	Lewis Engineering
468	Light, Eyebrow (Lamp 327)	B4850-8 or B4850-1R	Grimes
469	Spare		
470	Switch, Limit	B22RT04	Honeywell
471	Lamp	A-7079B-24	Grimes
472	Voltmeter, ac	6625-21-844-8122	NATO
		or 8AW61LVA218	G.E.
473	Switch	8868K8	Cutler Hammer
474	Hot Cup Timer and Bracket Assy	3B-5502-2-SE	Lacy
475	Lamp	1820 or 1820R	
476	Connector, ac Voltmeter	MS3147E7-50S	
477	Panel Assy, Bleed Resistor	C6NF1330	DHC
478	Indicator, Torque Pressure (Edison)	C6SC1115	DHC

ITEM NO.	DESCRIPTION	PART NO.	MFR.
479	Transmitter, Torque Pressure (Edison)	C6SC1116	DHC
480	Connector, P1	126-196	Amphenol
481	Connector, P2	126-195	Amphenol
482	Resistor, Bleed, 60.4 ohm, 20W	RE70G60R4	Dale Elect
483	Indicator, Battery Temperature (Mod 6/1479)	29088-1	Marathon
484	Switch, Fuel Quantity Ind Test	2PB13	Honeywell
485	Light, Nosewheel Position Ind (Mod 6/1478)	5952-3LH-CW-28	Glarban
486	Panel, Engine and Fuel Instrument	C6JF1290	DHC
487	Flasher Unit	70-0075-1	Grimes
488	Power Supply	60-1755-5	Grimes
489	Left Strobe Light and Position Light	C6NW1049-1	DHC
490	Right Strobe Light and Position Light	C6NW1049-3	DHC
491	Panel Assy, Resistor	C6NF1339-3	DHC
492	Relay, Time Delay	1621-C-2001	Hi-G
493	Switch, Power Lever Test	C6NF1342-1	DHC
494	Light, Beacon	G8400A-24	Grimes
495	Relay, Generator Field Control	C6NF1361-3	DHC
496	Relay, Generator Field Control	C6NF1361-1	DHC
497	Panel, Generator Field Control	C6NF1360	DHC
498	Light, Post	A89708-5-327G MS25036-149	Grimes
499	Limiter, 150 amps.	ANL150	Bussman
500	Limiter, Mounting Assy.	4164	Bussman
501	Connector, J1001	MS3120E14-12SW	
502	Connector, P1001	MS3126E14-12PW	
503	Filter	Type 7718-1	Solar Electronics Co.
504	Resistor	RE65G1500	Dale Elect.
505	Light	134-3830-0373-201	Dialco
506	Connector	CA16371	Cannon
507	Connector	MS3102R16-11P	
508	Connector	MS3102R16-11S	
509	Switch	72820105-007	DHC
510	Resistor	RN60C1503F	Ohmite
511	Resistor	RW59V401	Ohmite
512	Light Assy.	C6SC1032-5	DHC
513	Relay	J-D4L-050	Leach
514	Relay, Time Delay	TDH8002-2002	Leach
515	Connector	MS3121E10-6P	
516	Connector	MS3121E12-10P	
517	Control Box, Caution Lights	C6Z2084-1	DHC
518	Relay Panel, Fuel Transfer	C6Z2040-3	DHC

This Page Intentionally Left Blank

VIKING – Temporary Revision

PSM NO.: 1-63-2W **AIRCRAFT:** DASH–6 **SERIES:** 300

PUBLICATION: WIRING MANUAL **TEMPORARY REVISION NO.:** W14

Insert in 33-40-00 before Page 2

WING INSPECTION LIGHTS (MOD S.O.O. 6006)

REASON FOR ISSUE:
To incorporate Mod 6/2421, Introduction of LED Wing Inspection Lights.

ACTION:
In Section 33-40-00, ignore existing Page 2 and insert revised page, as shown on Page 3 of this Temporary Revision.

RECORDING INSTRUCTIONS:
Record this Temporary Revision No. and the relevant information in the appropriate columns of the TEMPORARY REVISION INDEX provided at the front of the manual.

This Page Intentionally Left Blank

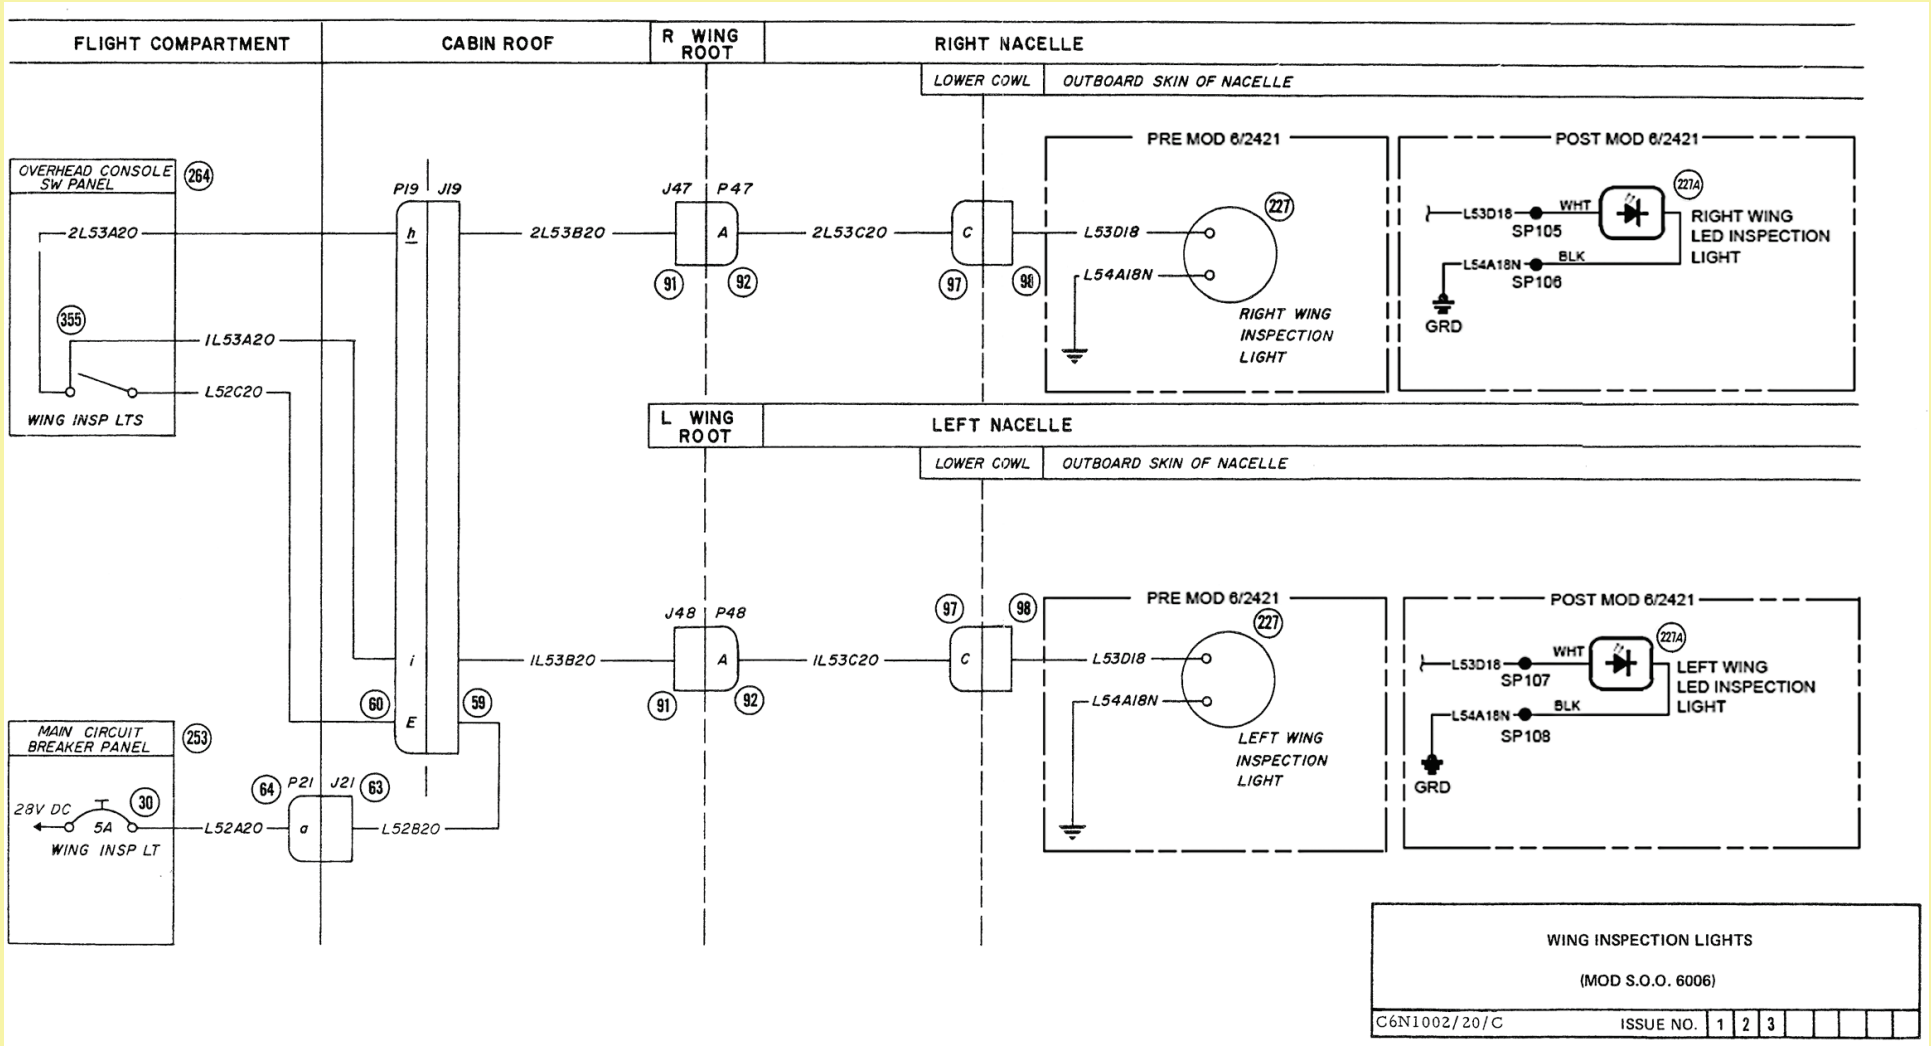
FLIGHT COMPARTMENT
CABIN ROOF
R WING ROOT
RIGHT NACELLE
LOWER COWL
OUTBOARD SKIN OF NACELLE
OVERHEAD CONSOLE SW PANEL
264
2L53A20
355
1L53A20
L52C20
WING INSP LTS
P19
J19
h
2L53B20
J47
P47
A
2L53C20
91
92
C
97
98
PRE MOD 6/2421
227
L53D18
L54A18N
RIGHT WING INSPECTION LIGHT
POST MOD 6/2421
221A
L53D18
WHT
SP105
RIGHT WING LED INSPECTION LIGHT
L54A18N
BLK
SP106
GRD
L WING ROOT
LEFT NACELLE
LOWER COWL
OUTBOARD SKIN OF NACELLE
J48
P48
IL53B20
IL53C20
i
E
60
59
MAIN CIRCUIT BREAKER PANEL
253
28V DC
30
5A
WING INSP LT
64
P21
J21
63
L52A20
a
L52B20
LEFT WING INSPECTION LIGHT
L53D18
SP107
L54A18N
SP108
LEFT WING LED INSPECTION LIGHT
WING INSPECTION LIGHTS
(MOD S.O.O. 6006)
C6N1002/20/C
ISSUE NO. 1 2 3

This Page Intentionally Left Blank

NOTE: Please see the TEMPORARY REVISION that revises this page.

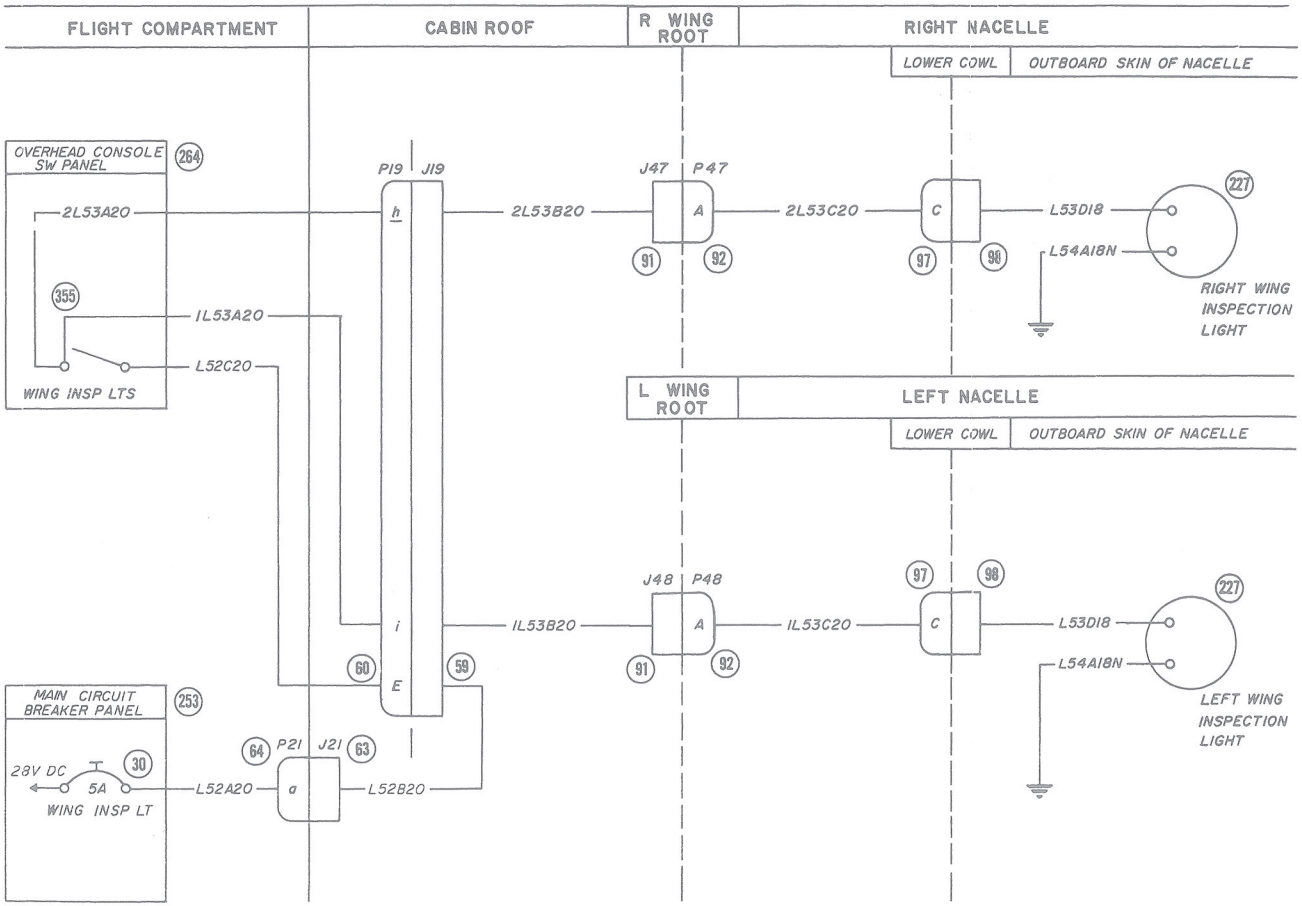

WING INSPECTION LIGHTS

(MOD S.O.O. 6006)

C6N1002/20/C ISSUE NO. 1 2

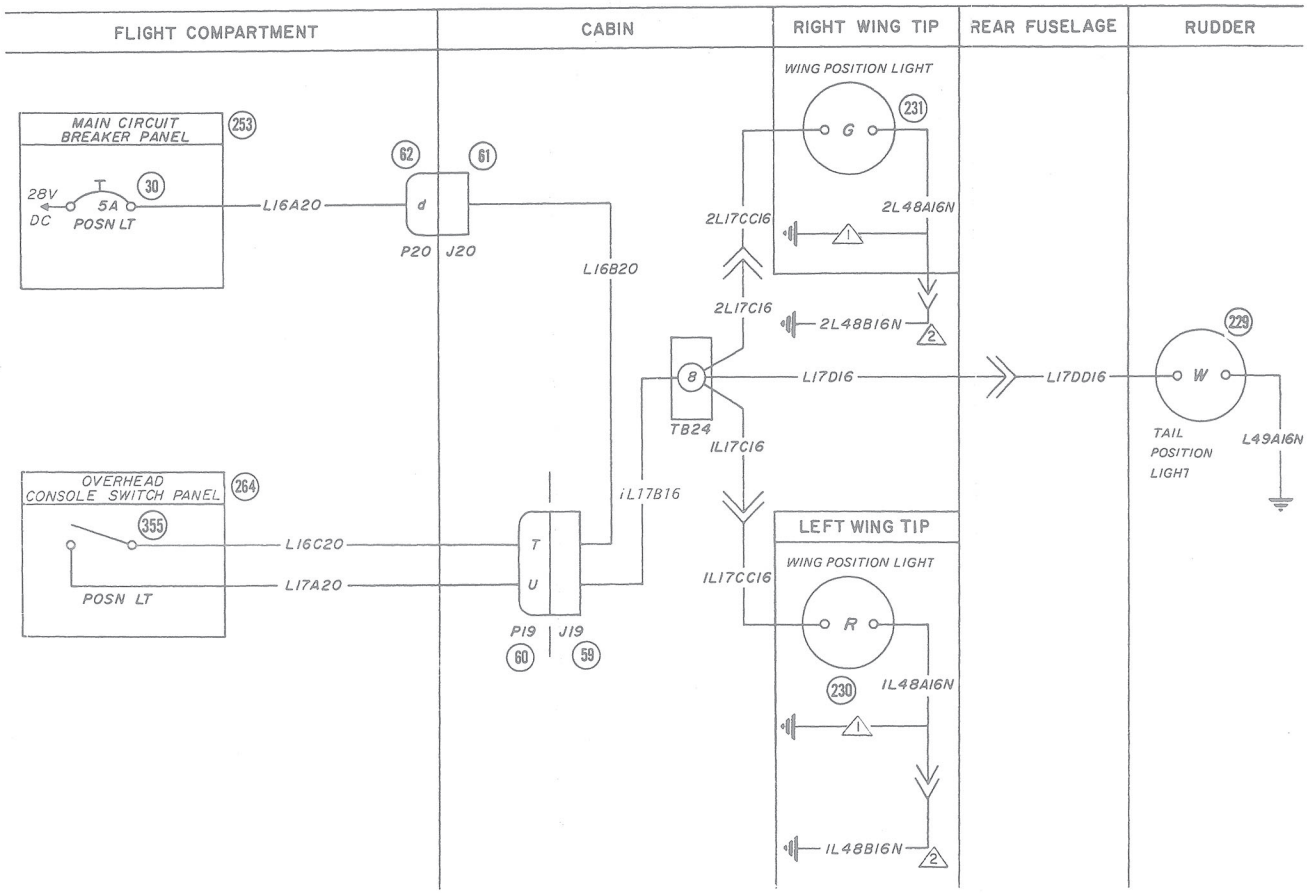

NOTES:
1. ⚠1 PRE MOD 6/1272
2. ⚠2 POST MOD 6/1272

POSITION LIGHTS (PRE MOD 6/1513)									
C6N1002/20/C	ISSUE NO.	1	2	3					

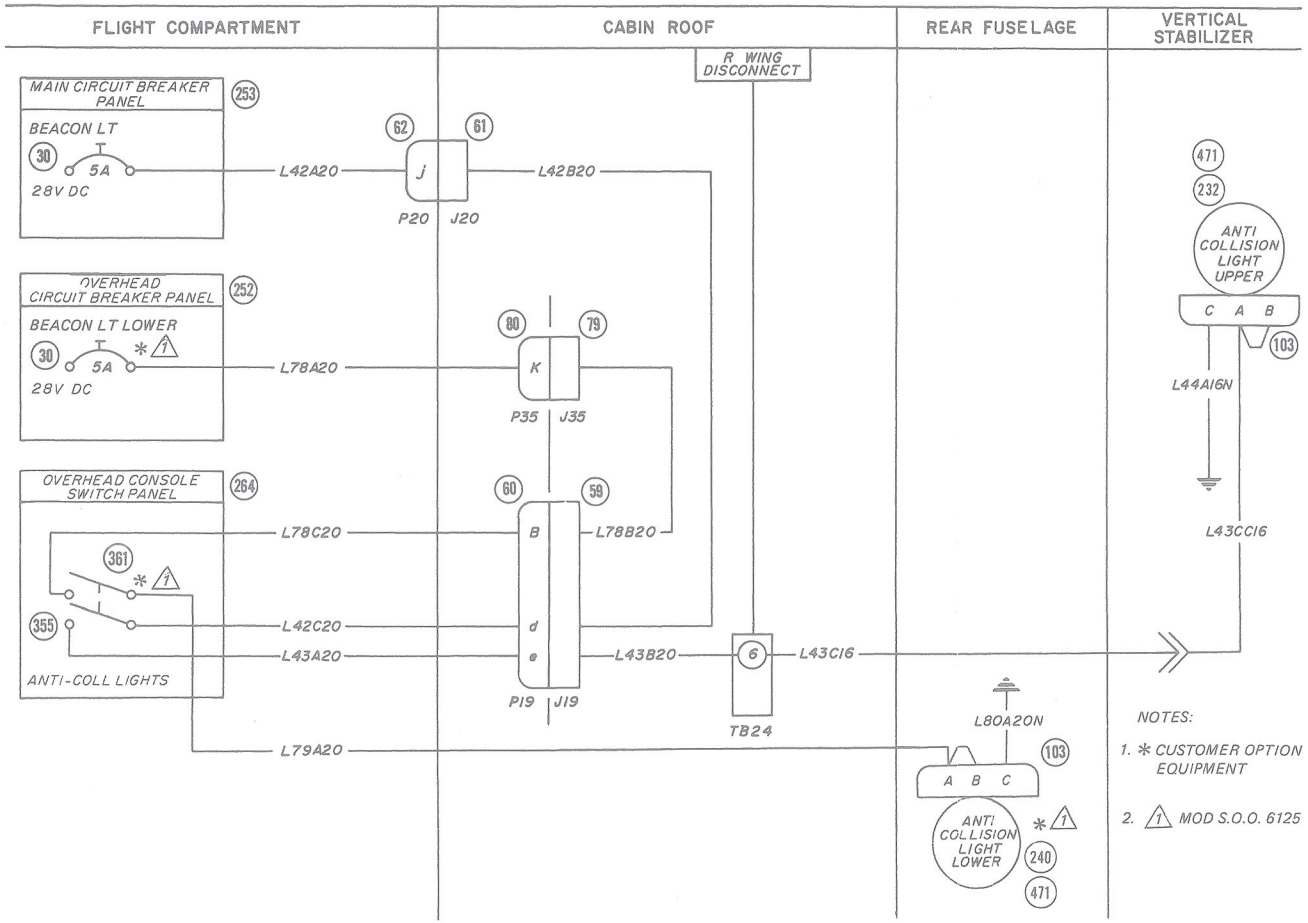

ANTI-COLLISION LIGHTS

(PRE-MOD 6/1513)

CoNI 002 /20/C ISSUE NO. 1 2 3

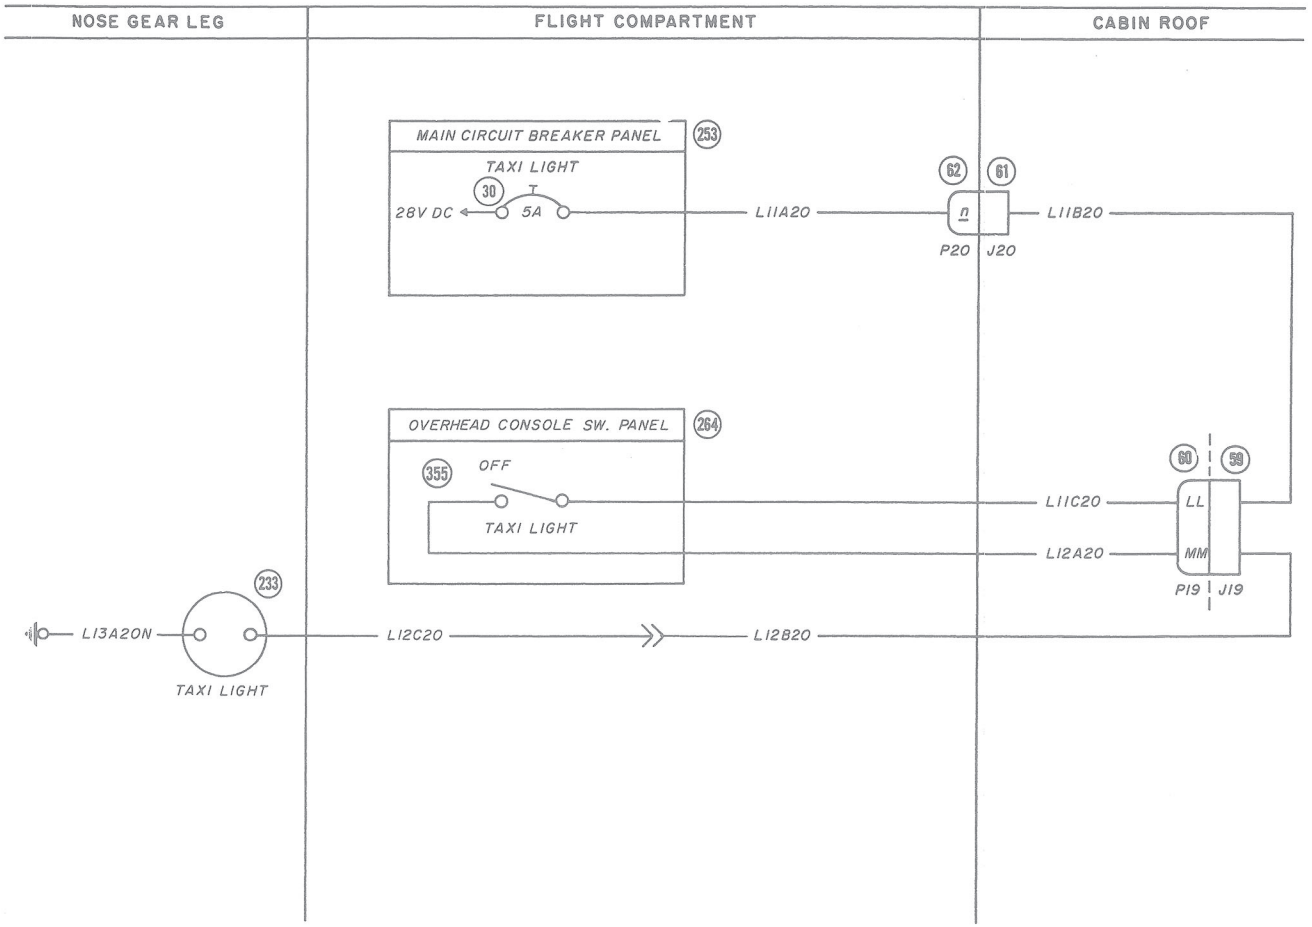

TAXI LIGHT									
(MOD S.O.O. 6012 OR 6/1600)									
C6N1002/20/C	ISSUE NO.	1	2	3	4				

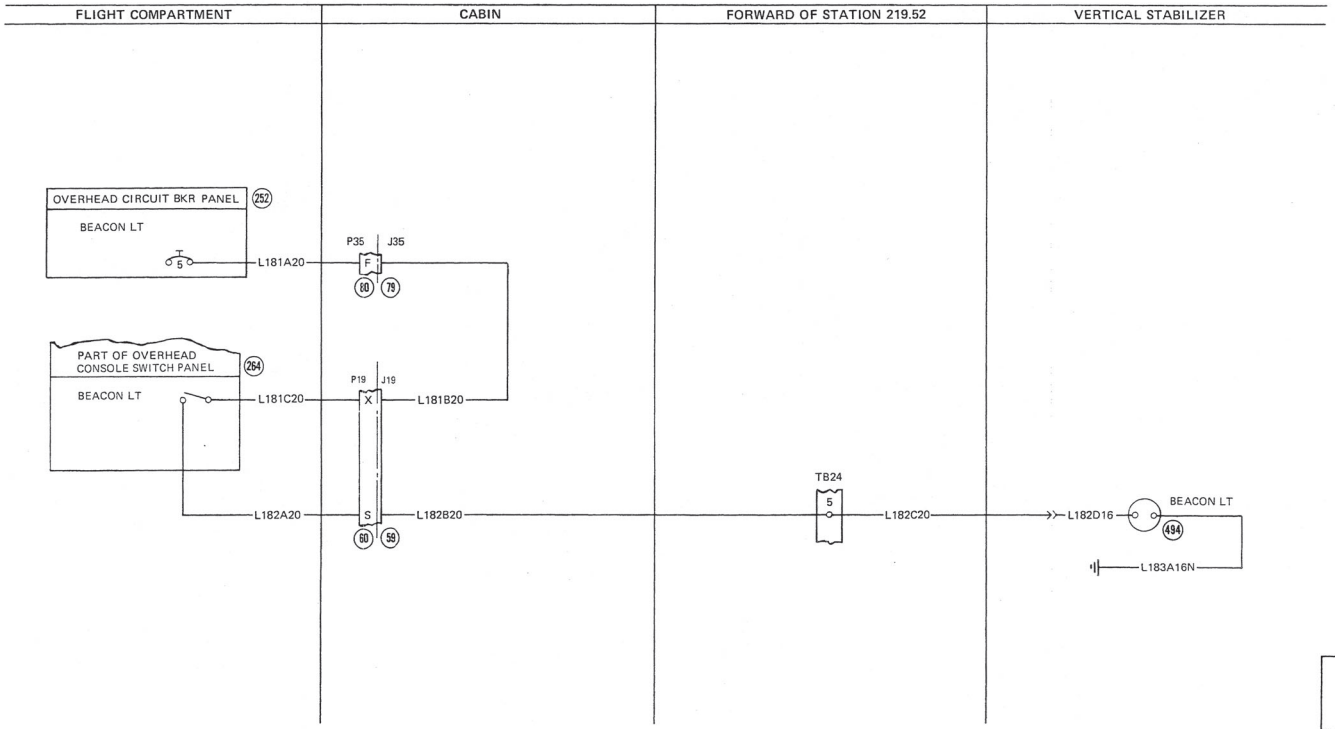

NOTE:

WIRING SHOWN FOR AIRCRAFT WITH MOD 6/1513 INCORPORATED ONLY.

BEACON LIGHTS									
C6N1002/20/D	ISSUE NO.	1	2						

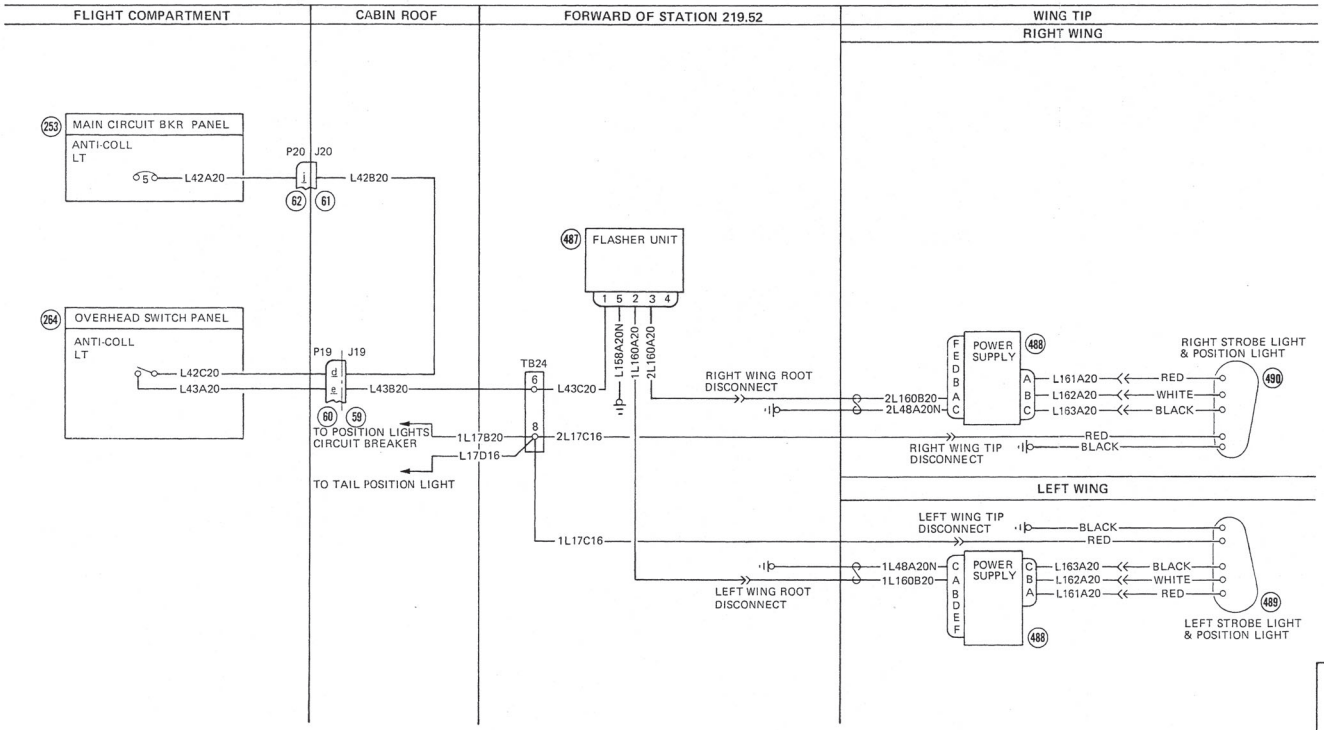

STROBE & WING POSITION LIGHTS

(MOD 6/1513)

C6N1002/52/B ISSUE NO. 1 2