Cabin Compartment – Cabin Upholstery (Mod 6/2013) – General data

1. General

The cabin compartment upholstery (Mod 6/2013) consists of ceiling panels, sidewall panel, station 111 bulkhead padding (Mod 6/2283) and with S.O.O. 6310 installed, custom logo bulkhead padding, a reading light and cold air outlet.

2. Description

A. Ceiling

The ceiling has a centre section made from a high impact abrasion resistant Acrylic PVC thermoplastic sheet and includes lens covers for the main cabin lights and speaker grills for the PA system. These panels are retained by a “H” section aluminum extrusion.

The main ceiling panels, made from the same thermoplastic material, comprises of 10 individual panels retained in place by “H” section aluminum extrusions and High Impact Poly Styrene (HIPS) panel joiners.

B. Cabin Interior Panels

The cabin interior panels, divided into upper and lower panels by an aluminum extrusion, are manufactured from a high impact abrasion resistant Acrylic PVC thermoplastic sheet. The cabin sidewalls and rear bulkhead have a sound deadening foam bonded to the rear surface.

C. Bulkhead (Mod 6/2283)

The lightweight forward bulkhead is a foam sandwich panel, with a moulded thermoplastic fascia bonded to the cabin side. Included on this forward bulkhead is a left and right Padding Assy (Mod 6/2099 and Mod 6/2123) with a magazine pocket on the fascia. An LED type passenger service sign displaying No Smoking and Fasten Seat Belt symbols, is located on the upper right bulkhead. An aluminum channel edges the doorway.

For aircraft incorporating customer standard option S.O.O. 6310, the station 111 bulkhead padding will incorporate custom embroidered logos on the padding cover.

D. Reading Light and Cold Air Outlet

A reading light and cold air outlet, located on the cold air ducts on both sides of the cabin, are provided for each passenger seat. The lights and cold air outlets can be individually controlled by the passengers. (Refer to 33-20-00, Passenger Compartment Lights (Mod 6/2028) – General Data).

E. Light and Switch Cover (Mod 6/2414)

The light and switch cover improves air distribution at cabin gasper vents. The box section ducts house the cabin gaspers and light/switch covers.

3. Removal/Installation

A. Remove Lower Sidewall Panels

1) Lift the lower aft edge of the panel with a flat bladed screwdriver.

2) With the screwdriver sliding over the side mounted seat track, push the lower aft edge of the panel forward.

B. Remove Sidewall Panels – Rear RH Door and Emergency Exits

1) Without removing the door surrounds, carefully remove the sidewall panel from the aluminum extrusions.

2) Gently pull the panel out from under the lip/edge of the door surround.

C. Install Sidewall Panels – Rear RH Door and Emergency Exits

1) Without removing the door surrounds, carefully insert the sidewall panel under the aluminum extrusions.

2) Gently push the panel behind the lip/edge of the door surround.

D. Remove Centre Ceiling Panels

1) Remove screws, nuts, washers and the extrusions on either side of the centre ceiling panel.

2) Remove the aluminum extrusions from each side of the ceiling panel and move the centre ceiling panel.

E. Install Centre Ceiling Panels

1) Position the aluminum extrusions on either side of the centre ceiling panel.

2) Join the aluminum extrusions using the extrusions joiners.

3) Fasten the aluminum extrusions with screws, nuts and washers.

F. Remove Cabin Ceiling

CAUTION **DON'T USE SCREWDRIVERS OR OTHER SHARP OBJECTS AS THIS WILL DAMAGE THE PANELS AND JOINERS.**

Refer to Figure 1 for details.

The easiest method to remove the ceiling panels for maintenance is to remove the left and right #2 panels first. These are located second from the forward bulkhead.

1) Push with the palm of the hand against the outboard radius of the #2 panel.

Note This will pull the panel away from the centre section extrusion and allow removal of the inboard edge with the other hand.

2) Pull down and remove the panel.

Note Once the #2 panel is removed, removal of the remaining panels is easier.

G. Install Cabin Ceiling

Refer to Figure 1 for details.


Install the forward #1 panel first. If the rear left and right #4 and #5 panels were removed, install #4 and #5 left and right then the #3 panel.

Panel installation is best achieved by fitting the outboard edge into the air duct first, then fit the inboard edge to the centre section extrusion.

1) At this stage the ceiling panel should be curved downwards. With the palm of the hand placed in the centre of the panel, push the panel upwards allowing it to spring upwards into position.

2) Install the plastic joining strips to #3 and #4 panels.

3) Install the #2 panels left and right.

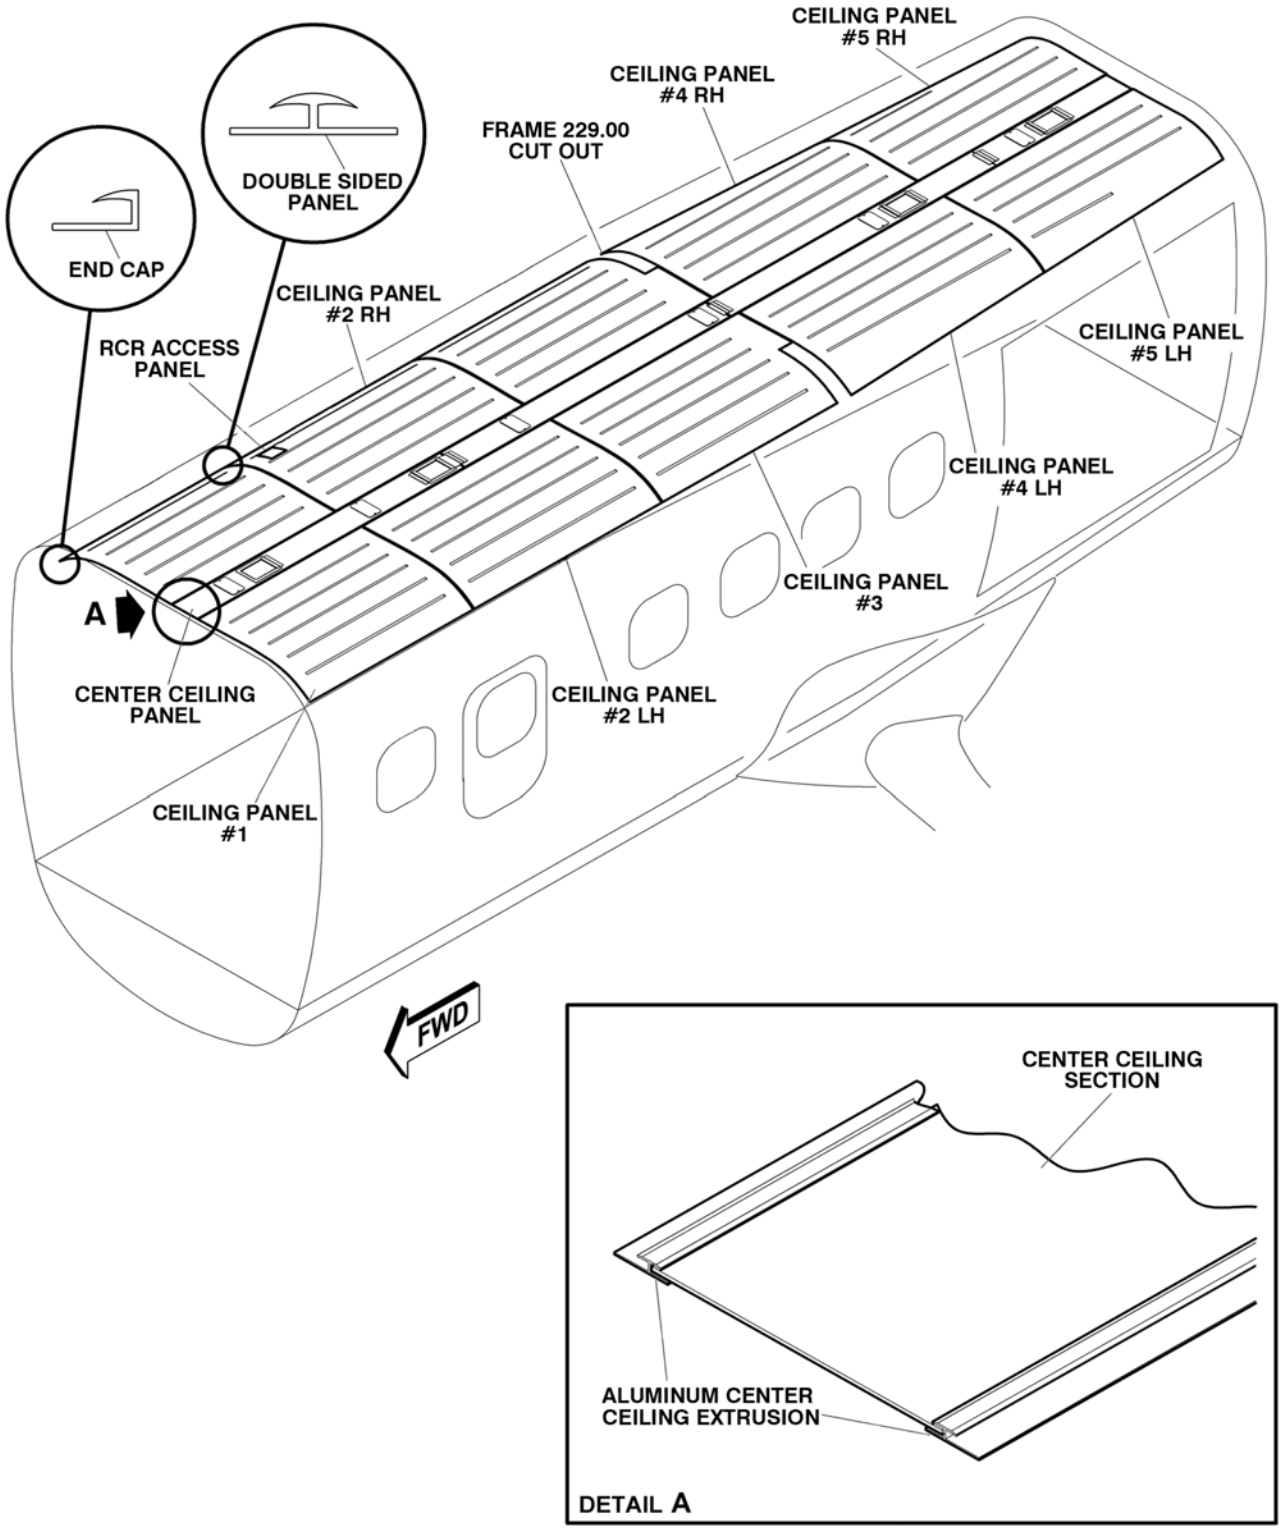

Ceiling Panel Layout
Figure 1

4) Once #2 panel has been installed, install the joining strips as follows:

a) Carefully press the outboard curve over the joint of the two panels.

Note Gently ease the two corners down from the centre section extrusion, not the entire edge. This will allow the joiner to slide down between the two panels.

b) Once the joiner is in place, reapply pressure with the palm of the hand to the outboard radius of the panels and carefully push the inboard corners inwards to return the inboard edge to the groove of the extrusion.

H. Removal of Bulkhead Padding Assembly (STA 111) (Pre Mod 6/2283)

1) Stand aft of the STA 111 bulkhead.

2) Hold the padding assembly near the top and bottom along the inboard edge and carefully pull assembly from sidewall of STA 111 bulkhead.

3) Repeat Para 3.H.2) for other side.

I. Installation of Bulkhead Padding Assembly (STA 111) (Pre Mod 6/2283)

1) Inspect padding assembly for condition and replace if necessary.

2) Align top and bottom edges of assembly with the sidewall of the STA 111 bulkhead.

3) Securely push assembly in place.

4) Repeat Para 3.I.2) and Para 3.I.3) for other side.

J. Removal of Bulkhead Padding Assembly (STA 111) (Post Mod 6/2283)

1) Remove the cockpit soft panels by holding the corner of the panels and carefully pull to separate the hook and loop fasteners on the STA 111 bulkhead, to gain access to the padding assembly retaining fasteners.

2) Remove the four (4) screws and washers that secure the assembly.

3) Remove the assembly.

K. Installation of Bulkhead Padding Assembly (STA 111) (Post Mod 6/2283)

1) Inspect padding assembly for condition and replace if necessary.

2) Position assembly aft of sidewall of STA 111 bulkhead.

3) Locate one mounting screw on the forward side of the STA 111 bulkhead and loosely secure into the standoff of the padding assembly.

4) Locate and install remaining three (3) screws and washers.

CAUTION DO NOT OVER TIGHTEN SCREWS, THIS COULD DAMAGE THE BULKHEAD.

5) Tighten screws to snug to secure.

6) Install the cockpit soft panels by pressing firmly on the edges to secure the hook and loop fastening tape. Ensure panels are secure.

7) Repeat Para 3.K.2) through Para 3.K.6) for other side.

L. Removal of Light/Switch Cover (Mod 6/2414)

1) Carefully remove inboard half duct of the box section ducts.

2) Remove fillet seal around light/switch cover.

3) Disconnect wire in the nearest terminal lug to remove cover.

4) Replace light unit, if required.

M. Installation of Light/Switch Cover (Mod 6/2414)

1) Reconnect wire disconnected in Para 3.L.3).

2) Install cover by re-sealing with DAPCO 2200 sealant.

This Page Intentionally Left Blank