Stretcher Racks (S.O.O. 6208) – General Data

1. General

Provisions have been made to accommodate one stretcher (with double and single seat assemblies, rows 3 through 6 removed) or two stretchers (with double and single seat assemblies, rows 1 through 6 removed), that can be installed on the right hand side of the aircraft fuselage. There are two support assemblies, per stretcher, that can be fitted into the existing floor tracks in the cabin compartment. Each set of support assemblies provide keepers and latches to secure the stretcher for transport.

2. Removal/Installation

A. Removal of Stretcher

Refer to Figure 1 for details.

1) Unlatch the pull action clamps at the forward and aft inboard keepers (undo (4)).

2) Open the forward and aft inboard keepers (undo (3)).

3) Lift the inboard side of the stretcher frame out of the forward and aft inboard keepers (undo (2)).

4) Slide the outboard side of the stretcher frame out of the outboard forward and aft keepers (undo (1)).

5) Remove stretcher from aircraft.

B. Installation of Stretcher

Refer to Figure 1 and Figure 2 for details.

1) Load stretcher onto aircraft. The reclining headboard must be facing forward.

2) Place the outboard side of stretcher frame into the forward and aft outboard keepers ((1)).


3) Lower the inboard side of the stretcher frame into the forward and aft inboard keepers ((2)).

Note Ensure the aft legs of the stretcher bear against the inboard and outboard keepers.


4) Close the forward and aft keepers over the stretcher frame ((3)).

5) Latch the forward and aft keepers to secure the stretcher in place, using the pull action latch clamp ((4)).

6) Ensure that the stretcher is securely attached. Adjust latch clamp as required, per Para 3.A.

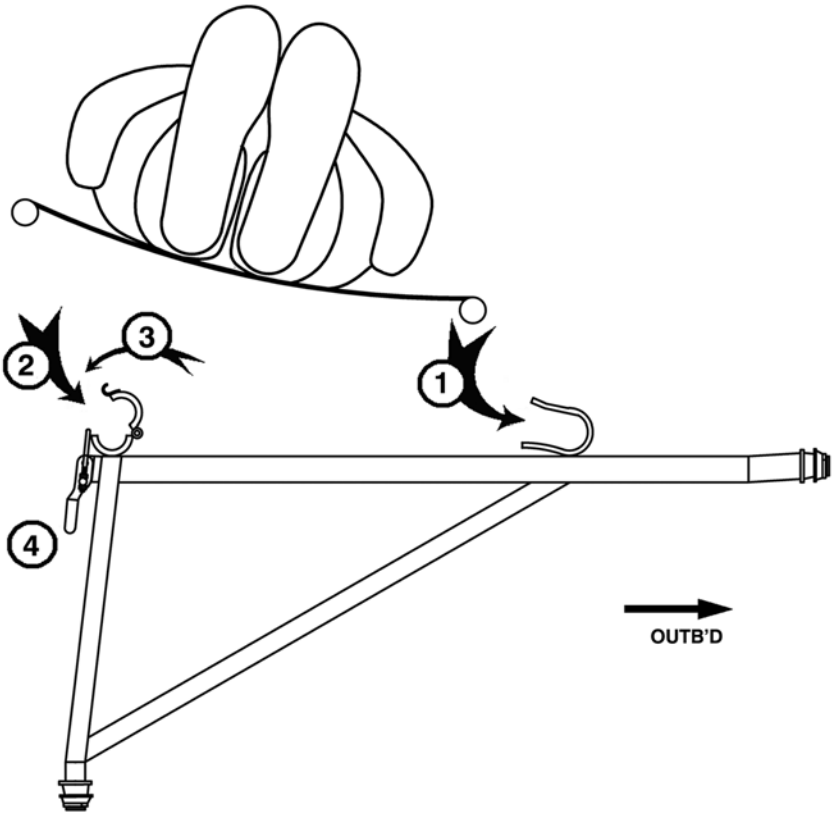

Loading and Securing Stretcher
Figure 1

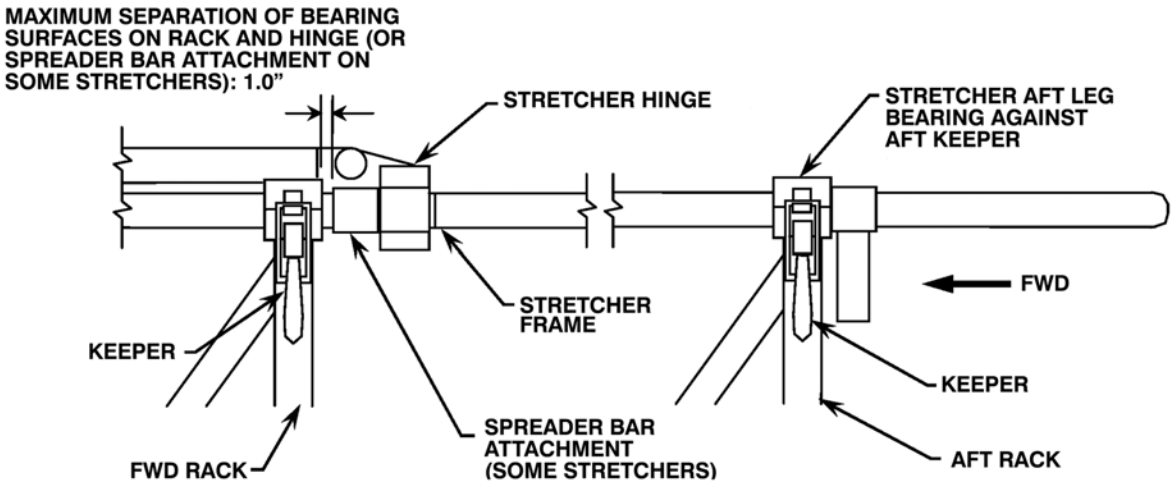

Stretcher Installation
Figure 2

C. Removal of Support Racks

Refer to Figure 3 and Figure 4 for details.

1) Remove the stretcher as per Para 2.A.

2) Pull up and rotate the three spring loaded lock collars on the stretcher support assembly.

3) Slide the stretcher support assembly forward or aft, until the outboard side and the leg supports are clear of the seat retaining tracks.

4) Install seating as per 25-20-01 – Cabin Compartment – Seating Arrangement, Para 3.

D. Installation of Support Racks

Refer to Figure 3 and Figure 4 for details.

Note There are two (2) Stretcher Support Assemblies per stretcher installation.

1) Remove the seating; rows 3 through 6 for a single stretcher configuration, or rows 1 through 6 for a double stretcher configuration, on the right hand side of aircraft, as per 25-20-01 – Cabin Compartment – Seating Arrangement, Para 3.

2) Pull up on the three spring loaded lock collars at the seat track attachments.


3) Slide the Stretcher Support Assemblies into the side and floor seat tracks, in the correct locations.

Note The stretcher support assemblies are installed at side rail attachment points.


- Aft STA 221.0 and 260.0
- Forward STA 141.0 and 180.0

4) Rotate the forward, aft leg and outboard side lock collars to engage the Stretcher Support Assembly in the side and floor tracks.

5) Ensure the Stretcher Support Assembly is secure.

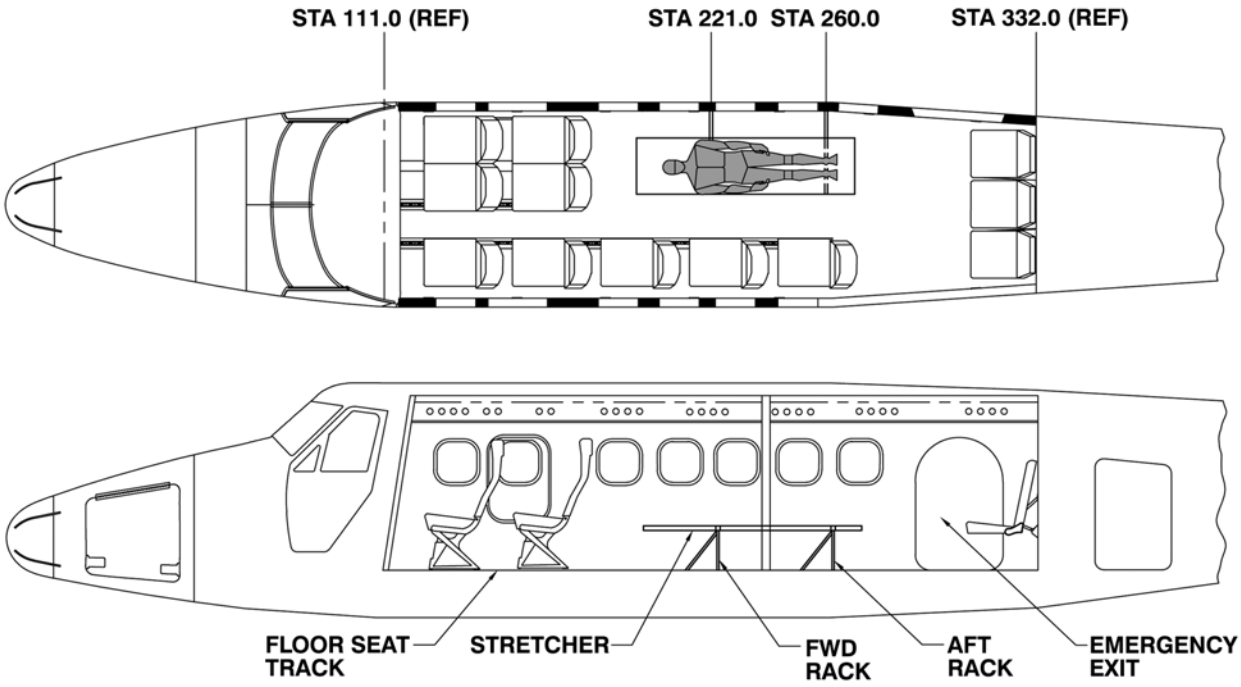

Single Stretcher Configuration
Figure 3

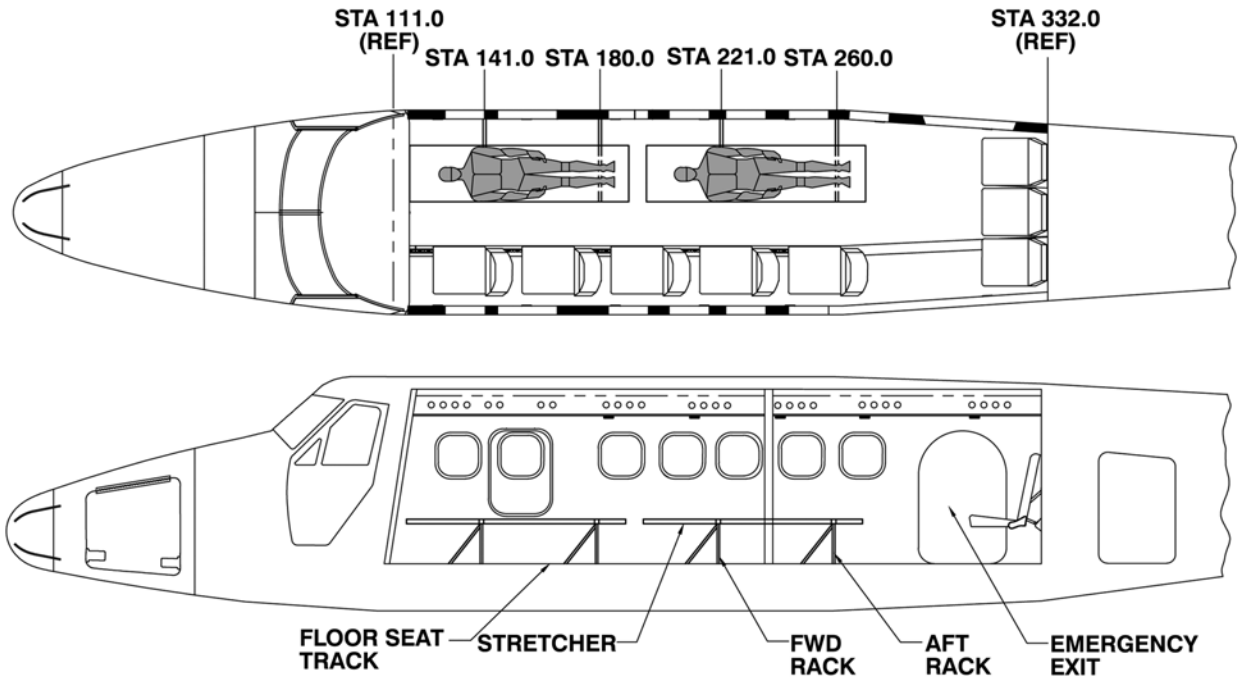

Double Stretcher Configuration
Figure 4

E. Removal of Passenger Restraint

Refer to Figure 5 for details.

1) Unhook all strap latches.

2) Unloop shoulder straps from around the stretcher frame, aft of the wheel attachment.

3) Unloop chest straps from around stretcher frame, aft of the headboard hinges.

4) Unloop lap belt from around stretcher frame, at the center fabric cut-out.

5) Unloop leg belt from around the stretcher frame, at the aft fabric cut-out or foot-end.

F. Installation of Passenger Restraint

Refer to Figure 5 for details.

1) The reclining headboard must be facing forward.


2) The shoulder straps must be looped around the stretcher frame and secured immediately aft of the wheel attachment.

3) The chest straps must be looped around the stretcher frame and secured immediately aft of the headboard hinges.

4) The lap belt must be looped around the stretcher frame and secured in the center fabric cut-out.

5) The leg belt must be looped around the stretcher frame and secured in the aft fabric cut-out or at the foot-end.

6) Connect all strap latches and tighten straps.

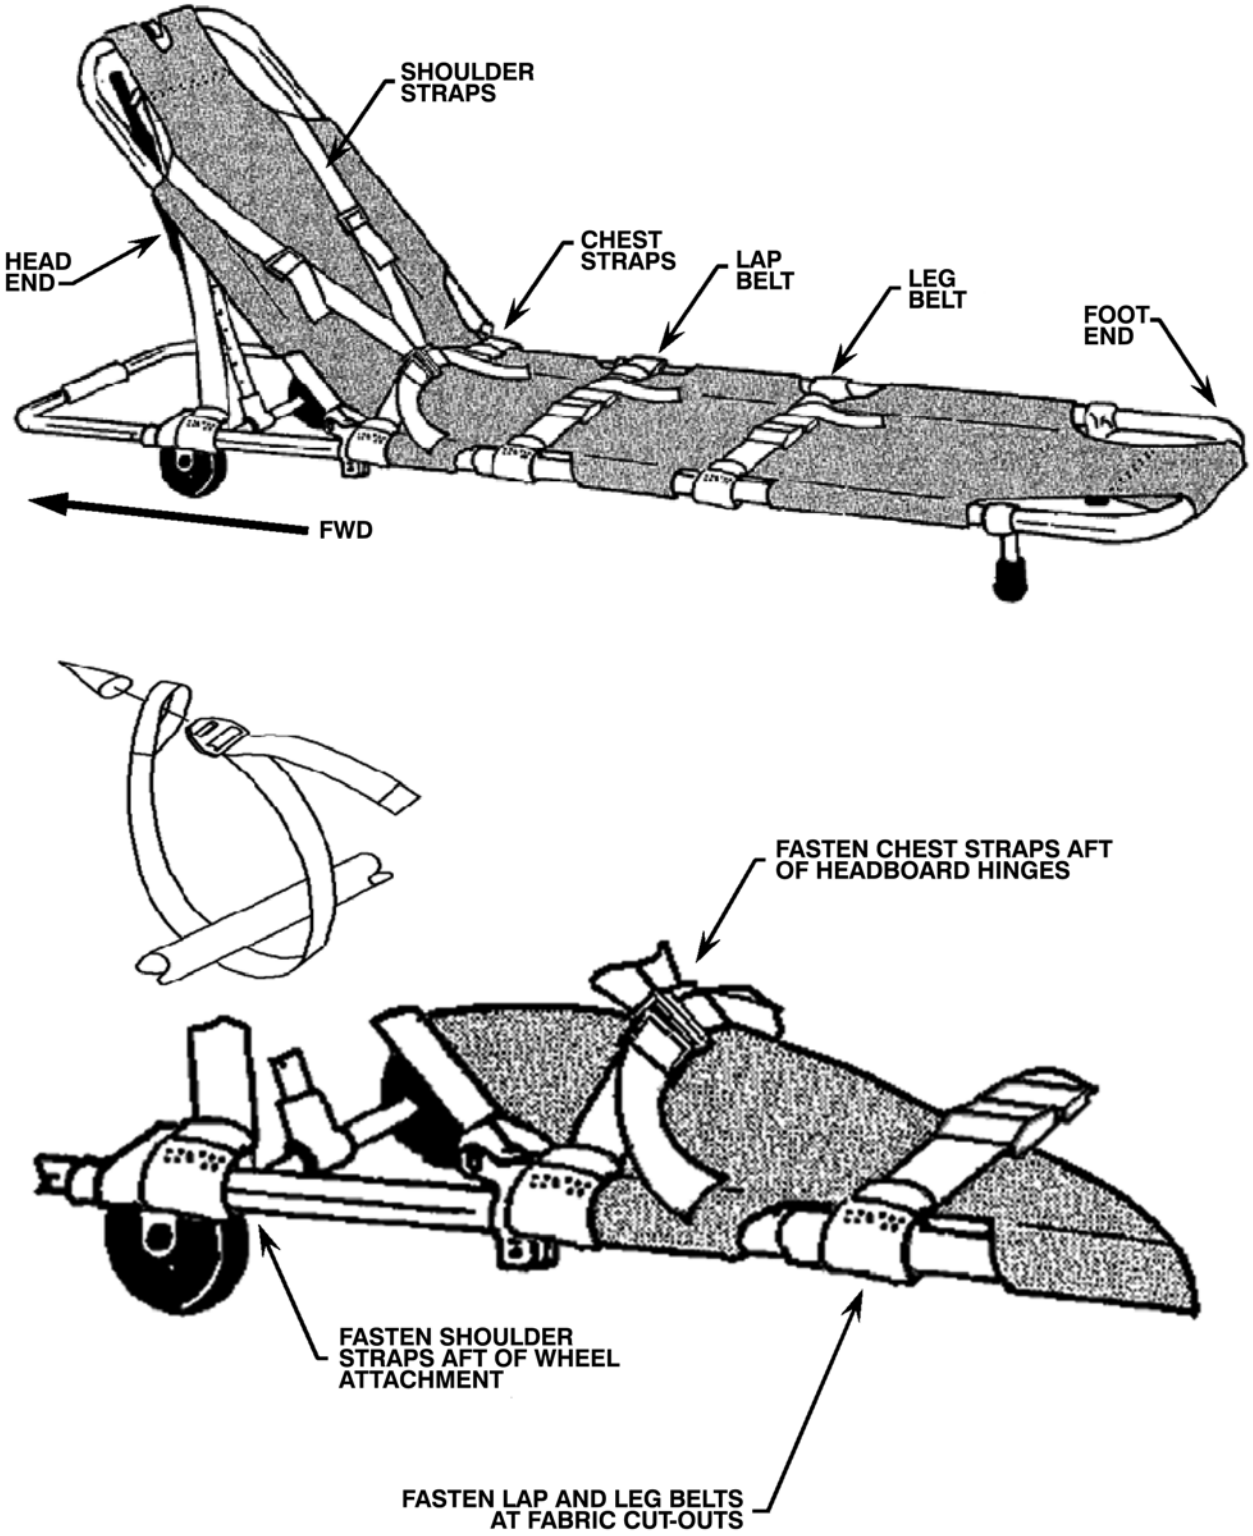

Patient Restraint Attachment
Figure 5

3. Adjustment/Test


A. Pull Action Latch Clamp Adjustment

1) Ensure secure locking of clamp by adjusting clamp into the corresponding overcenter toggle position.

2) Adjust length 'L' (refer to Figure 6) of the U-shaped hook, so that 2 to 3 lbs of force are necessary to move the lever into the overcenter position.

3) Length 'L' can be adjusted by loosening or tightening the locknuts on both sides of the lever.

4) After the locknuts have been adjusted, tighten (snug + 1/4 turn) the opposing nuts to prevent rattling.

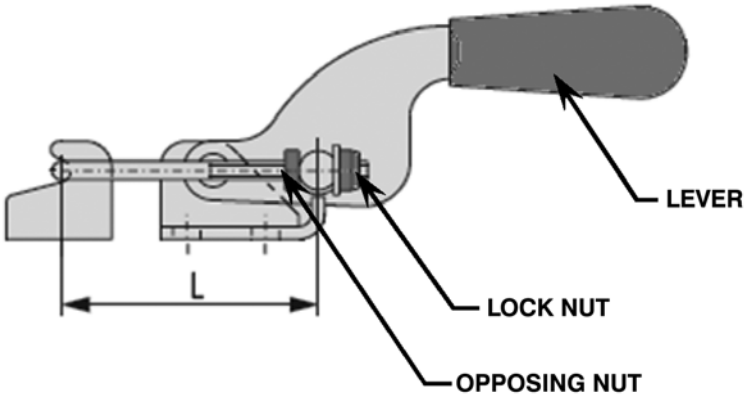

Pull Action Latch Clamp Adjustment
Figure 6

This Page Intentionally Left Blank