Engine Model(s): PT6A

74-20-01

IGNITION CABLES (GLOW PLUGS) - MAINTENANCE PRACTICES

1. General

A. Maintenance personnel should make reference to the INTRODUCTION section and Chapter 70-00-00 STANDARD PRACTICES of this manual to familiarize themselves with general procedures.

B. Install suitable protective caps/covers over all disconnected tubes/lines and component openings.

C. Lockwire shall comply with specification AMS5687, heat and corrosion resistant steel wire MS9226-03, 0.025 inch diameter, and will not be specified in instructions.

2. Consumable Materials

Not Applicable

3. Special Tools

Not Applicable

4. Fixtures, Equipment and Supplier Tools

Not Applicable


5. Removal/Installation

A. Removal of Ignition Cables (Glow Plugs) (Ref. Fig. 201)

Printed on 10/NOV/26 P&WC Proprietary – subject to restrictions in Technical Data Agreement

Figure 201 Removal/Installation of Glow Plug Ignition Cables


(SHEET 1 OF 2)

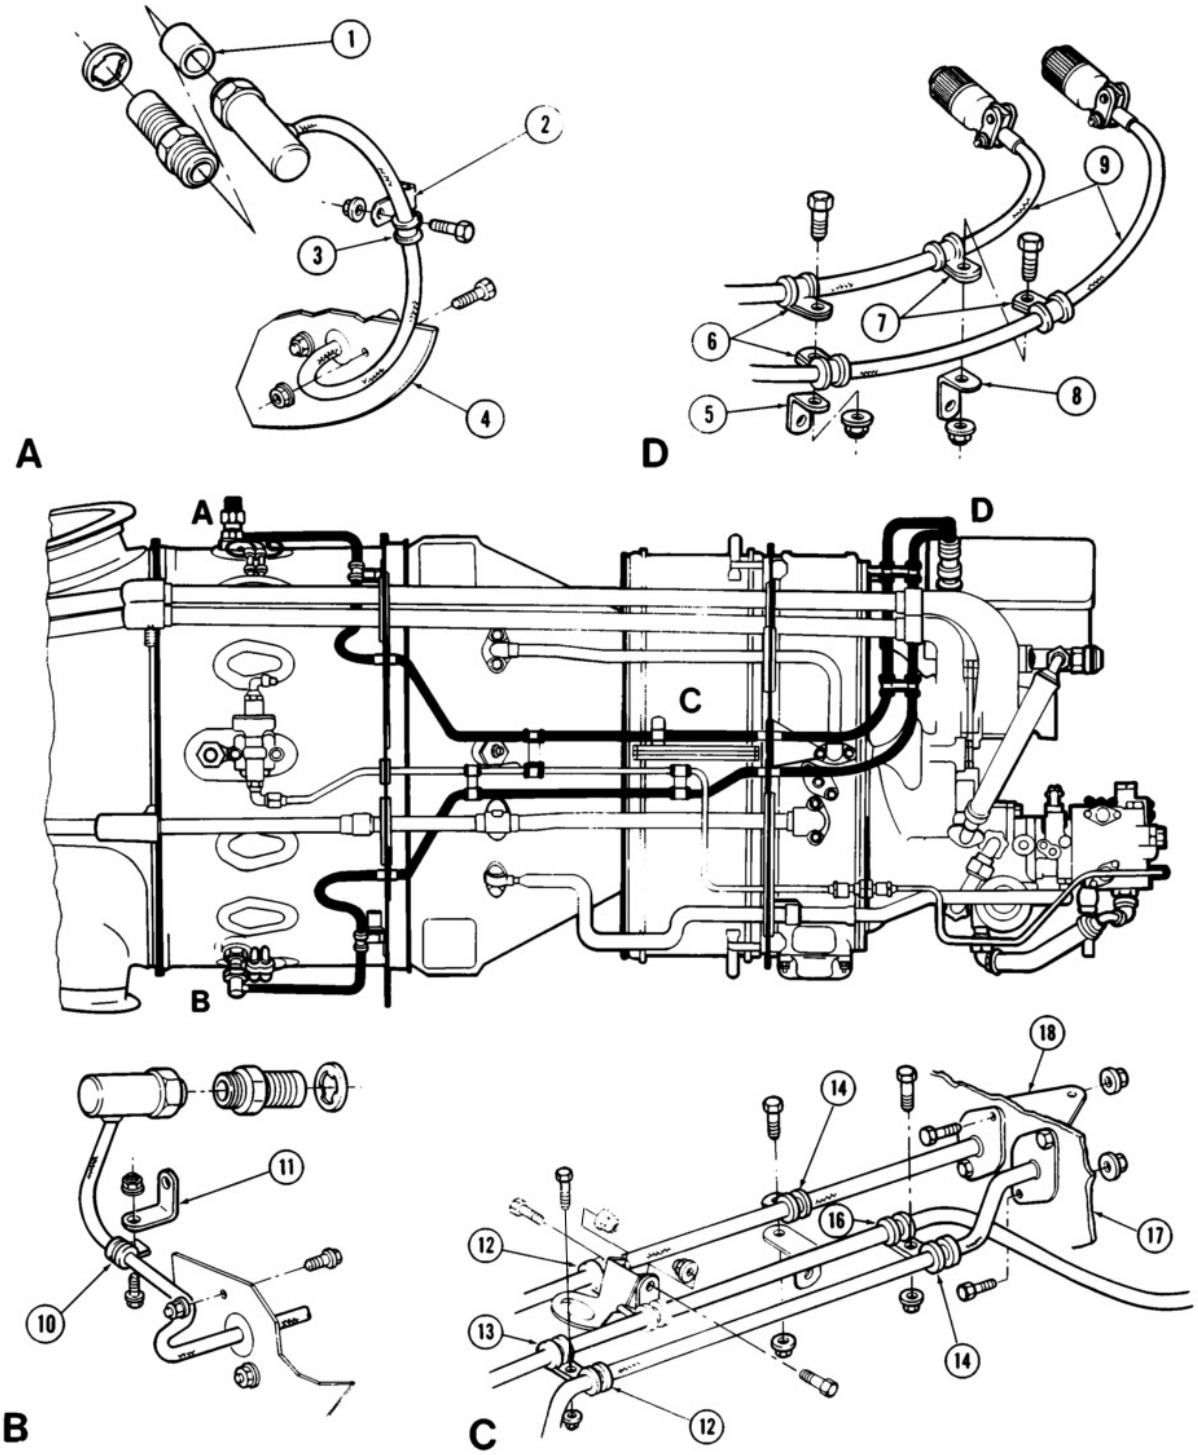

c7912a

(SHEET 2 OF 2)

Printed on 10/NOV/26 P&WC Proprietary – subject to restrictions in Technical Data Agreement

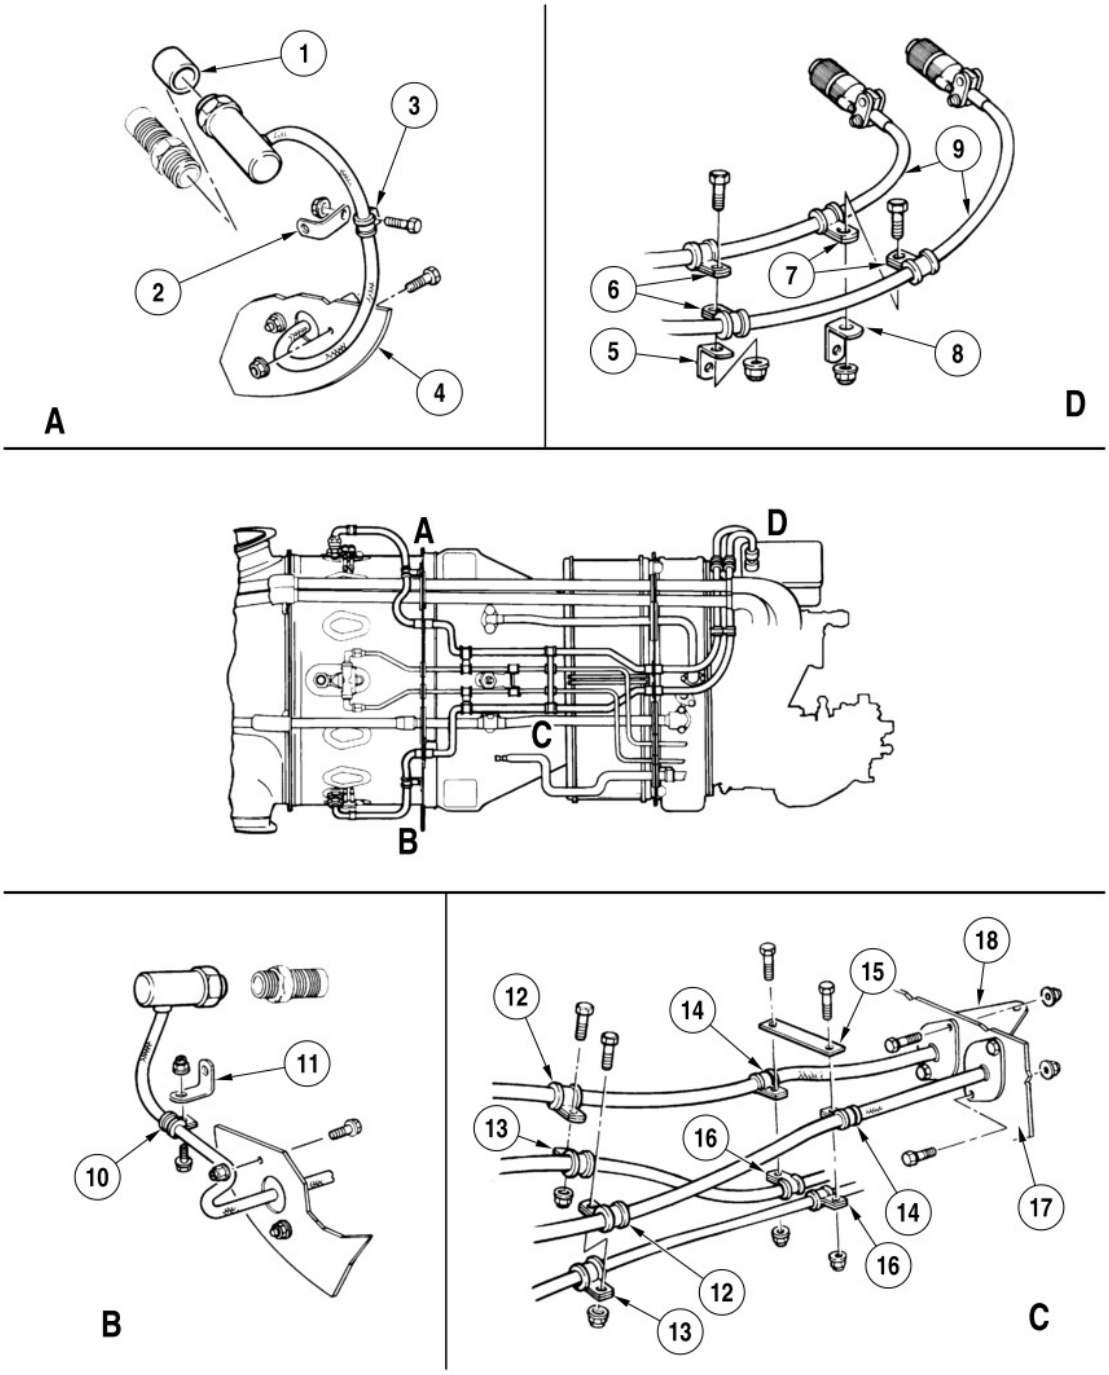

c6965a

Printed on 10/NOV/26 P&WC Proprietary – subject to restrictions in Technical Data Agreement

1. Bushing
2. Bracket
3. Clamp
4. Center Fireseal (Ref.)
5. Bracket
6. Clamps
7. Clamps
8. Bracket
9. Ignition Cables
10. Clamp
11. Bracket
12. Clamps
13. Clamps
14. Clamps
15. Back Plate
16. Clamps
17. Rear Fireseal (Ref.)
18. Fireseal Support Bracket

Printed on 10/NOV/26 P&WC Proprietary – subject to restrictions in Technical Data Agreement

(1) Disconnect the power input cable from the receptacle on the ignition current regulator.

(2) Disconnect the ignition cables (9) from the receptacles on the current regulator.

(3) Disconnect the ignition cables from the respective glow plug (Views A and B). Make sure the bushings (1) are retained within the connector of each cable.

(4) Detach the ignition cables (9) from the engine as follows:

(a) Views A and B: Remove the self-locking nuts and bolts, and remove the clamps (3 and 10) securing the respective cable to the brackets (2 and 11) on the center fireseal.

(b) View C: Remove the self-locking nuts and bolts, and remove the clamps (12) from the respective cable; remove the self-locking nuts and bolts, and remove the back plate (15) and clamps (14). The clamps (13 and 16) may be left on the respective fuel line.

(c) View D: Remove the self-locking nuts and bolts, and remove the clamps (6) and (7) securing the respective cable to the brackets (5 and 8).

(d) Remove the self-locking nuts and bolts securing the mounting flange of each cable at the respective locations on the center and rear fireseals.

(5) Remove the cables (9) by withdrawing rearward from the center fireseal, and forward from the rear fireseal.

B. Installation of Ignition Cables (Glow Plugs) (Ref. Fig. 201)

(1) Install and connect the ignition cables (9):

(a) Pass the elbowed connector of each cable through the center fireseal (from the rear side) and route to the respective glow plug at the 4 and 9 o'clock positions on the gas generator case.

(b) Make sure the bushings (1) are fitted in the connector of each cable, and connect the cables to the glow plugs. Tighten the coupling nuts fingertight plus 45 degrees.

(c) Route the cables rearward and pass through the rear fireseal to the ignition current regulator; connect the cables to the respective receptacle on the regulator. Tighten the connectors fingertight plus 45 degrees.

(2) Secure the ignition cables (9) to the engine:

(a) Secure the mounting flanges of each cable to the respective fireseal with bolts and self-locking nuts. The bolt heads are to be on the air inlet side of the fireseals. The upper bolts also secure the support bracket (18) to the rear fireseal.

(b) Views A and B: Locate the clamps (3 and 10) on the cables and secure the clamps to the brackets (2 and 11) with bolts and self-locking nuts.

(c) View C: Locate the clamps (12) on the cables and secure these clamps to the clamps (13) retained on the fuel lines with bolts and self-locking nuts; locate the clamps (14) on the cables and secure these clamps to the clamps (16) retained on fuel lines with the back plate (15), bolts and self-locking nuts.

(d) View D: Locate the clamps (6 and 7) on the cables and secure these clamps to the

Printed on 10/NOV/26 P&WC Proprietary – subject to restrictions in Technical Data Agreement

respective brackets (5 and 8) with bolts and self-locking nuts.

(e) Tighten all self-locking nuts and torque 36 to 40 lb.in.

(3) Connect the power input cable to the receptacle on the current regulator.

Printed on 10/NOV/26 P&WC Proprietary – subject to restrictions in Technical Data Agreement