Engine Model(s): PT6A


74-20-02

GLOW PLUGS - DESCRIPTION AND OPERATION

1. General (Ref. Fig. 1)

Printed on 10/NOV/26 P&WC Proprietary – subject to restrictions in Technical Data Agreement

Figure 1 Glow Plug Installation (Typical)

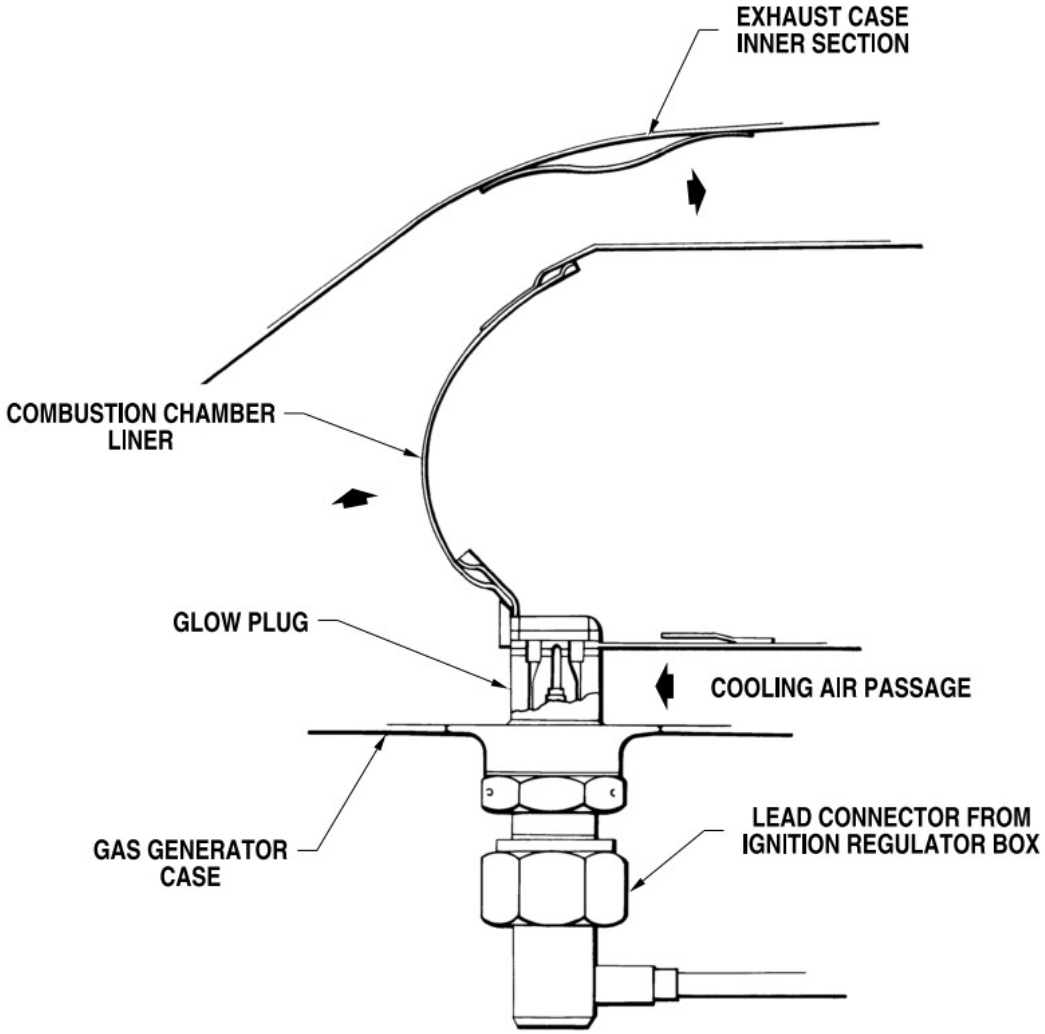

c3785a

Printed on 10/NOV/26 P&WC Proprietary – subject to restrictions in Technical Data Agreement

The glow plugs, located at the 4 and 9 o'clock positions on the gas generator case, adjacent to fuel manifold adapters, consist of a double-threaded body encasing a helically wound coil heating element.

Four holes, equispaced on the periphery of the glow plug body and leading into an annulus below the coil, provide passage of bleed air, derived from compressor discharge air, to promote ignition.

During starting procedure, fuel sprayed by the fuel nozzles runs into the annulus and is vaporized. The combination of bleed air and vaporized fuel is ignited by the hot coil (approximately 1260°C) element, to produce a hot streak or torching effect, which ignites the remainder of the fuel in the combustion chamber area.

Printed on 10/NOV/26 P&WC Proprietary – subject to restrictions in Technical Data Agreement