Engine Model(s): PT6A

74-20-02

GLOW PLUGS - MAINTENANCE PRACTICES

1. General

A. Maintenance personnel should make reference to the INTRODUCTION section and Chapter 70-00-00 STANDARD PRACTICES of this manual to familiarize themselves with general procedures.

B. Install suitable protective caps/covers over all disconnected tubes/lines and component openings.

C. Lockwire shall comply with specification AMS5687, heat and corrosion resistant steel wire MS9226-03, 0.025 inch diameter, and will not be specified in instructions.

2. Consumable Materials

Not Applicable

The consumable materials listed below are used in the following procedures.

Item No.	Name
PWC11-021	DELETED
PWC11-021C	Compound, Cold Carbon Removing

3. Special Tools

Not Applicable

4. Fixtures, Equipment and Supplier Tools


Not Applicable

5. Removal/Installation

A. Removal of Glow Plugs (Pre-SB1196) (Ref. Fig. 201)

Printed on 10/NOV/26 P&WC Proprietary – subject to restrictions in Technical Data Agreement

Figure 201 Removal/Installation of Glow Plugs

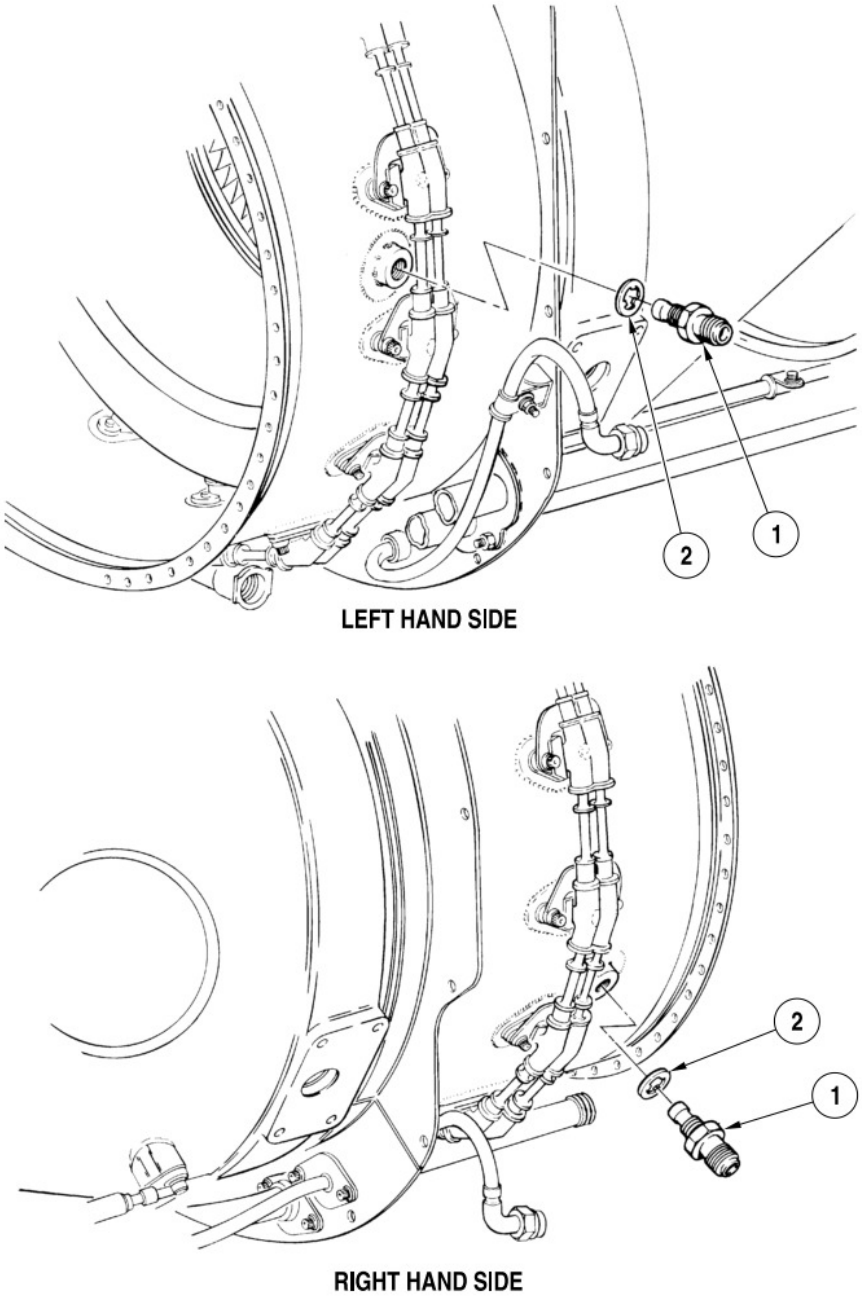

c6977

Printed on 10/NOV/26 P&WC Proprietary – subject to restrictions in Technical Data Agreement

1. Glow Plug
2. Copper Gasket

Printed on 10/NOV/26 P&WC Proprietary – subject to restrictions in Technical Data Agreement

(1) Disconnect the power input cable from the receptacle on the ignition current regulator (Ref. 74-10-01).

(2) Disconnect the ignition cables from the respective glow plug (1) (Ref. 74-20-01).

(3) Remove the glow plugs from the gas generator case and discard the gaskets (2).

B. Installation of Glow Plugs (Pre-SB1196) (Ref. Fig. 201)

(1) Install the glow plugs (1) with gaskets (2), in the bosses at the 4 and 9 o'clock positions on the gas generator case. Tighten the plugs to 300 lb.in., then loosen to zero. Retighten 300 to 360 lb.in. (33.9 to 40.6 Nm).

(2) Connect the ignition cables to the respective glow plug (Ref. 74-20-01).

(3) Connect the power input cable to the receptacle on the current regulator (Ref. 74-10-01).

6. Cleaning/Painting

A. Procedure

(1) Clean the exterior surfaces of the glow plugs with solvent (PWC11-027) or (PWC11-031). Dry with clean low pressure compressed air.

(2) Remove carbon deposits from the coil element as follows:

WARNING: CARBON REMOVING COMPOUND (PWC11-021C) IS TOXIC AND CAUSTIC. EXERCISE ALL PRECAUTIONS TO PREVENT CONTACT WITH SKIN AND EYES, AND INHALATION OF VAPORS.

(a) Put the element end of the glow plug fully into the cold carbon remover (PWC11-021C) for 10 to 30 minutes.

CAUTION: DO NOT USE ABRASIVE BLAST OR HIGH PRESSURE COMPRESSED AIR TO CLEAN THE ELEMENT. SUCH USE CAN CAUSE IRREPAIRABLE DAMAGE TO THE COIL.

(b) Carefully remove the loosened carbon using a soft nylon brush.

(c) Rinse the element end of the plug in hot water and dry with clean, low pressure compressed air.

7. Inspection/Check

A. Inspection

(1) Inspect the glow plugs as follows (Ref. Fig. 202):

Figure 202 Glow Plug Showing Fused Area (Typical)



c222

Printed on 10/NOV/26 P&WC Proprietary – subject to restrictions in Technical Data Agreement

(a) Check the element for evidence of carbon build-up. Clean as necessary (Ref. Para. 6.).

(b) Check the element for the presence of fused area. The maximum fused area must be not more than 0.125 in. x 0.0312 in. (one area only). Plugs with fused area(s) greater than this limit must be discarded.

(c) Inspect the threads on body of the plugs for condition.

B. Check

Prior to installation (Ref. Para. 5. B.), check the operation of the glow plugs as detailed in 74-00-00.

Printed on 10/NOV/26 P&WC Proprietary – subject to restrictions in Technical Data Agreement