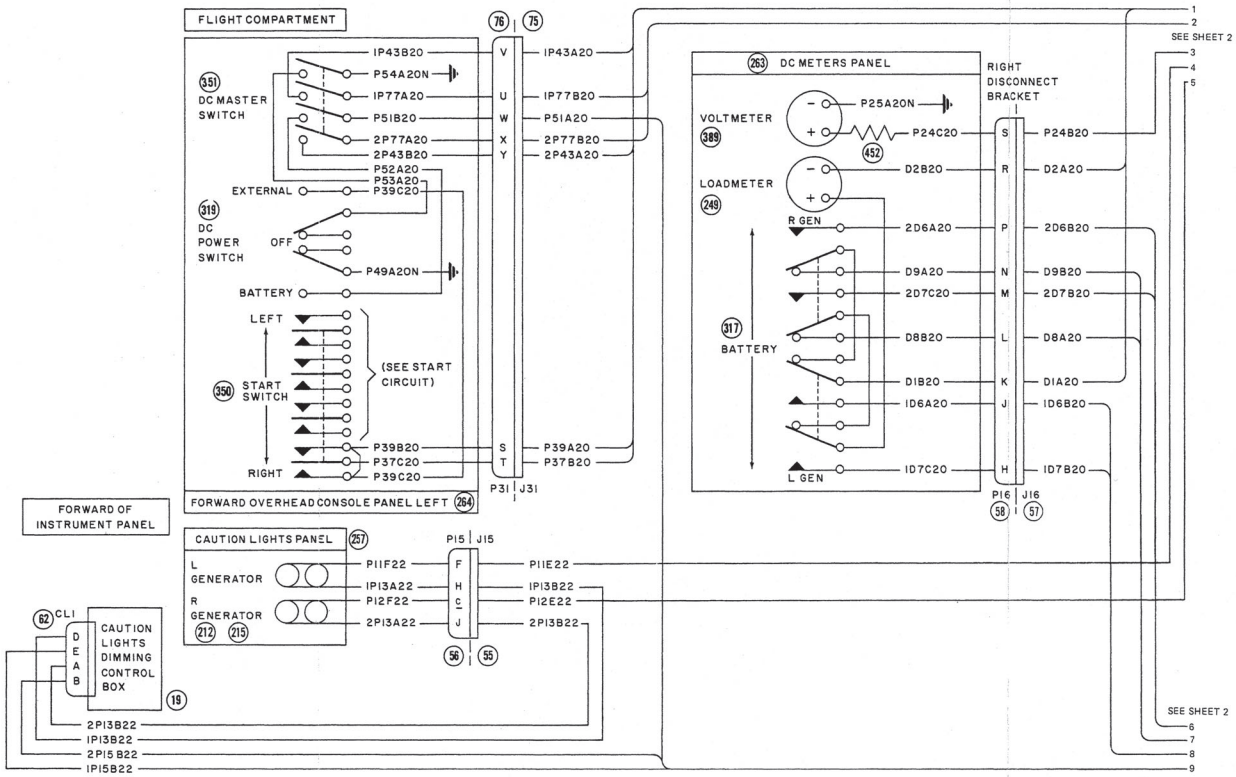



NOTES:

1. ⚠1 PRE MOD 6/1292 AND PRE MOD 6/1372
2. ⚠2 POST MOD 6/1293
3. ⚠3 PRE MOD 6/1274
4. ⚠4 POST MOD 6/1274
5. ⚠5 RETROFIT MOD 6/1274 VARIATIONS
6. ⚠6 PRE MOD 6/1369 OR PRE MOD 6/1274
7. ⚠7 POST MOD 6/1369, PRE MOD 6/1274
8. ⚠8 PRE MOD 6/1390
9. ⚠9 POST MOD S.O.O. 6148
10. ⚠10 DIODES ADDED RETROFIT MOD 6/1283
11. ⚠11 POST MOD 6/1479

DC POWER SUPPLIES

(SHEET 1)

C6N1002/44/C ISSUE NO. 1 2 3 4 5 6 7

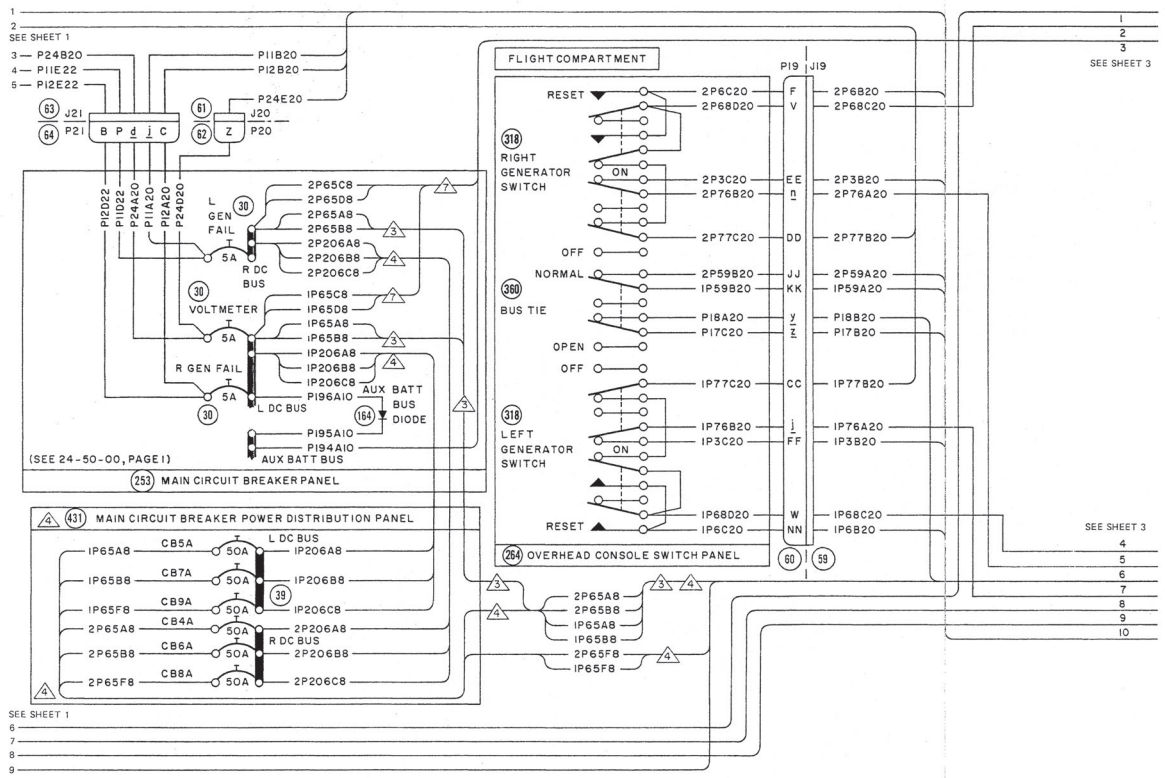

EQUIPMENT LOCATIONS

SWITCH PANELS, DC METER PANEL, CAUTION LTS AND MAIN CIRCUIT BREAKER PANELS *SHEET 1 & 2*
O/H AND REAR CIRCUIT BREAKER PANELS, O/V RELAYS, R STARTER GEN, R VOLT REG, BATTERIES, EXT PWR *SHEET 3 & 4*
PWR DISTR AND GEN CONT BOX, MAIN DISTR BOX, RADIO PWR DISTR, L STARTER GEN, L VOLT REG *SHEET 5 & 6*


NOTES:

1. △1 PRE MOD 6/1292 AND PRE MOD 6/1372
2. △2 POST MOD 6/1293
3. △3 PRE MOD 6/1274
4. △4 POST MOD 6/1274
5. △5 RETROFIT MOD 6/1274 VARIATIONS
6. △6 PRE MOD 6/1369 OR PRE MOD 6/1274
7. △7 POST MOD 6/1369, PRE MOD 6/1274
8. △8 PRE MOD 6/1390
9. △9 POST MOD S.O.O. 6148
10. △10 DIODES ADDED RETROFIT MOD 6/1283
11. △11 POST MOD 6/1479

DC POWER SUPPLIES

(SHEET 2)

C6N1002/44/C ISSUE NO. 1 2 3 4 5 6 7

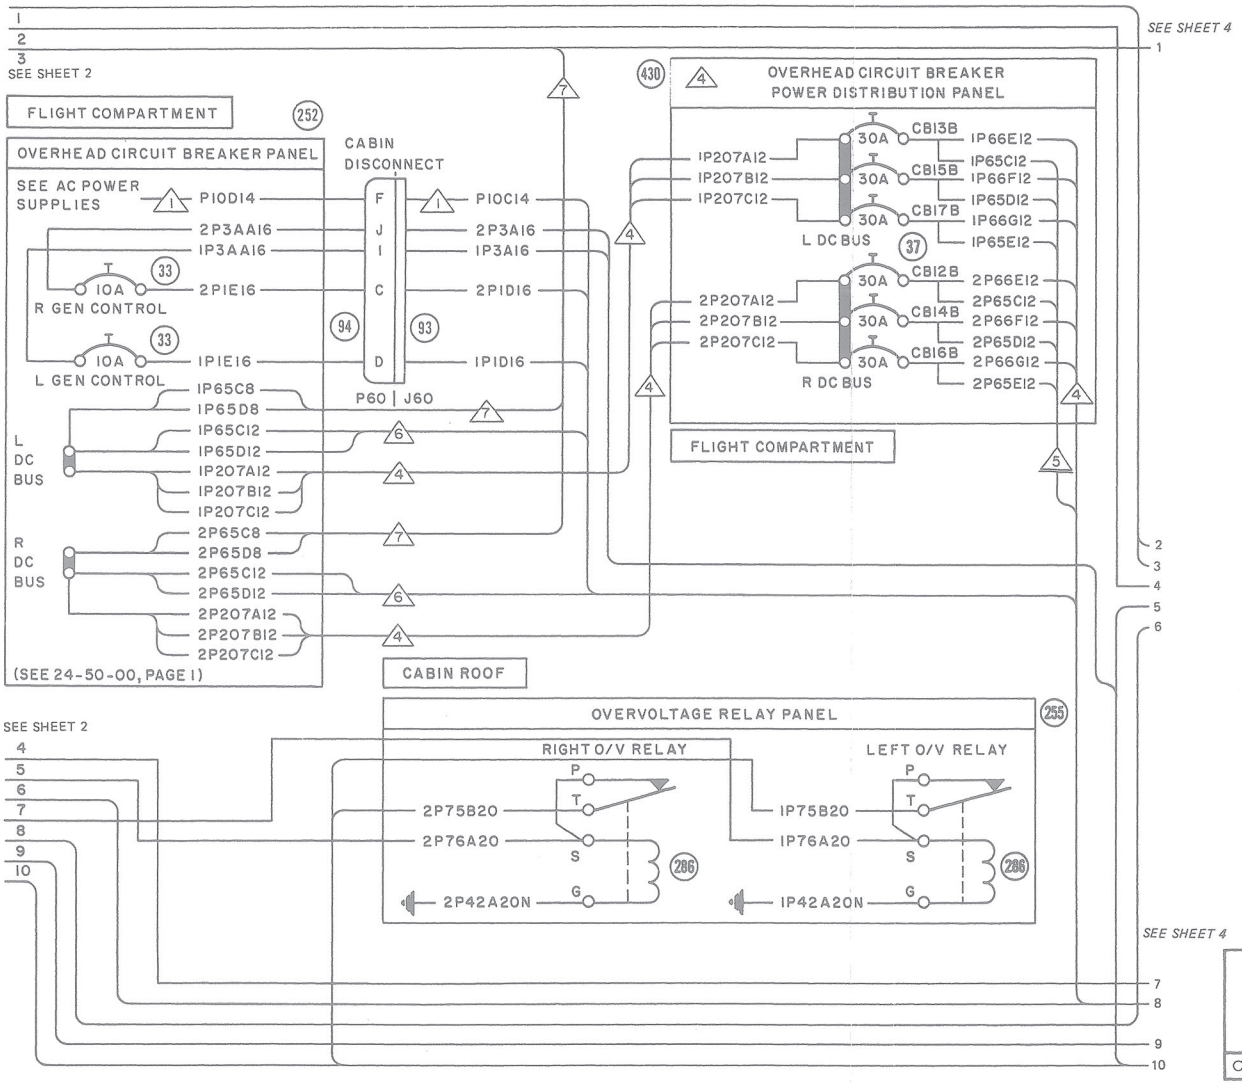


NOTES:

1. PRE MOD 6/1292 AND PRE MOD 6/1372
2. POST MOD 6/1293
3. PRE MOD 6/1274
4. POST MOD 6/1274
5. RETROFIT MOD 6/1274 VARIATIONS
6. PRE MOD 6/1369 OR PRE MOD 6/1274
7. POST MOD 6/1369, PRE MOD 6/1274
8. PRE MOD 6/1390
9. POST MOD S.O.O. 6148
10. DIODES ADDED RETROFIT MOD 6/1283
11. POST MOD 6/1479

DC POWER SUPPLIES

(SHEET 3)


C6N1002/44/C ISSUE NO. 1 2 3 4 5 6 7

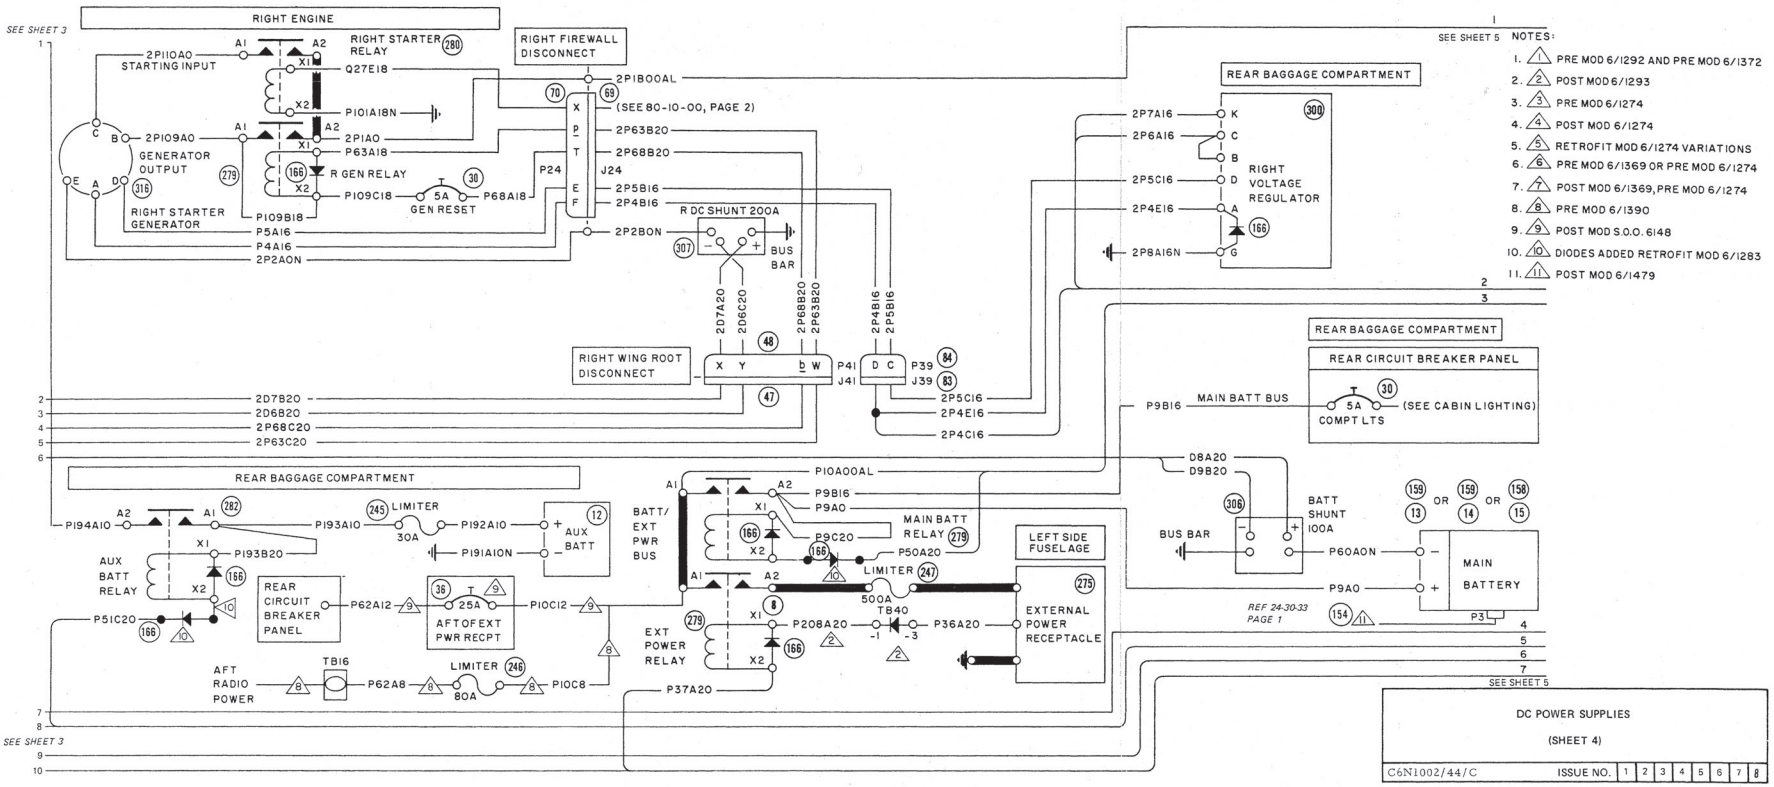

NOTES:
1. PRE MOD 6/1292 AND PRE MOD 6/1372
2. POST MOD 6/1293
3. PRE MOD 6/1274
4. POST MOD 6/1274
5. RETROFIT MOD 6/1274 VARIATIONS
6. PRE MOD 6/1369 OR PRE MOD 6/1274
7. POST MOD 6/1369, PRE MOD 6/1274
8. PRE MOD 6/1390
9. POST MOD S.O.O. 6148
10. DIODES ADDED RETROFIT MOD 6/1283
11. POST MOD 6/1479

DC POWER SUPPLIES
(SHEET 4)

C6N1002/44/C ISSUE NO. 1 2 3 4 5 6 7 8

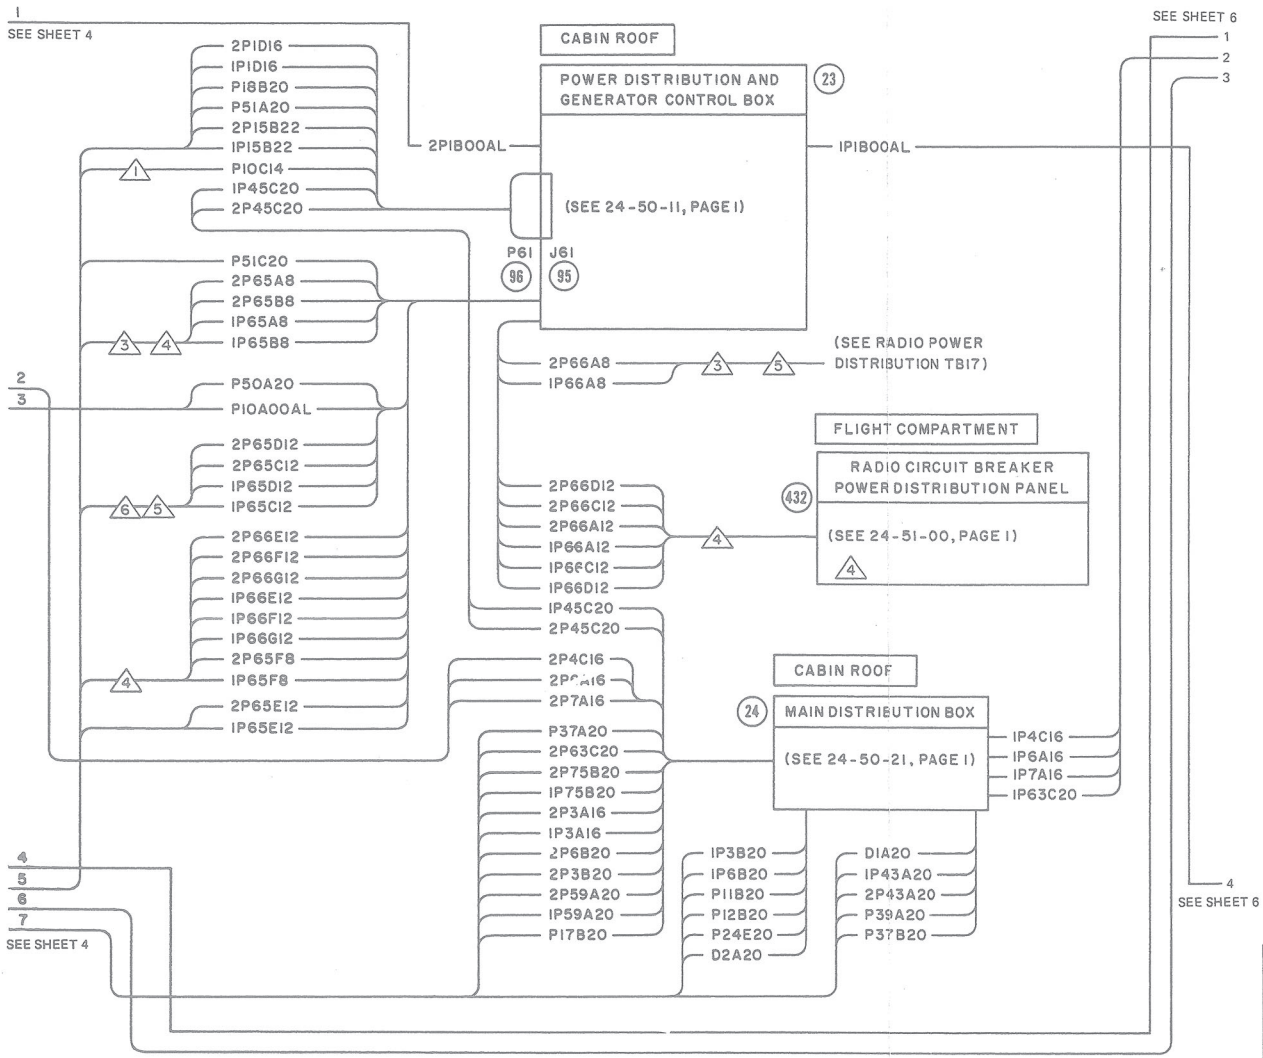


NOTES:

1. PRE MOD 6/1292 AND PRE MOD 6/1372
2. POST MOD 6/1293
3. PRE MOD 6/1274
4. POST MOD 6/1274
5. RETROFIT MOD 6/1274 VARIATIONS
6. PRE MOD 6/1369 OR PRE MOD 6/1274
7. POST MOD 6/1369, PRE MOD 6/1274
8. PRE MOD 6/1390
9. POST MOD S.O.O. 6148
10. DIODES ADDED RETROFIT MOD 6/1283
11. POST MOD 6/1479

DC POWER SUPPLIES

(SHEET 5)

C6N1002/44/C ISSUE NO. 1 2 3 4 5 6 7

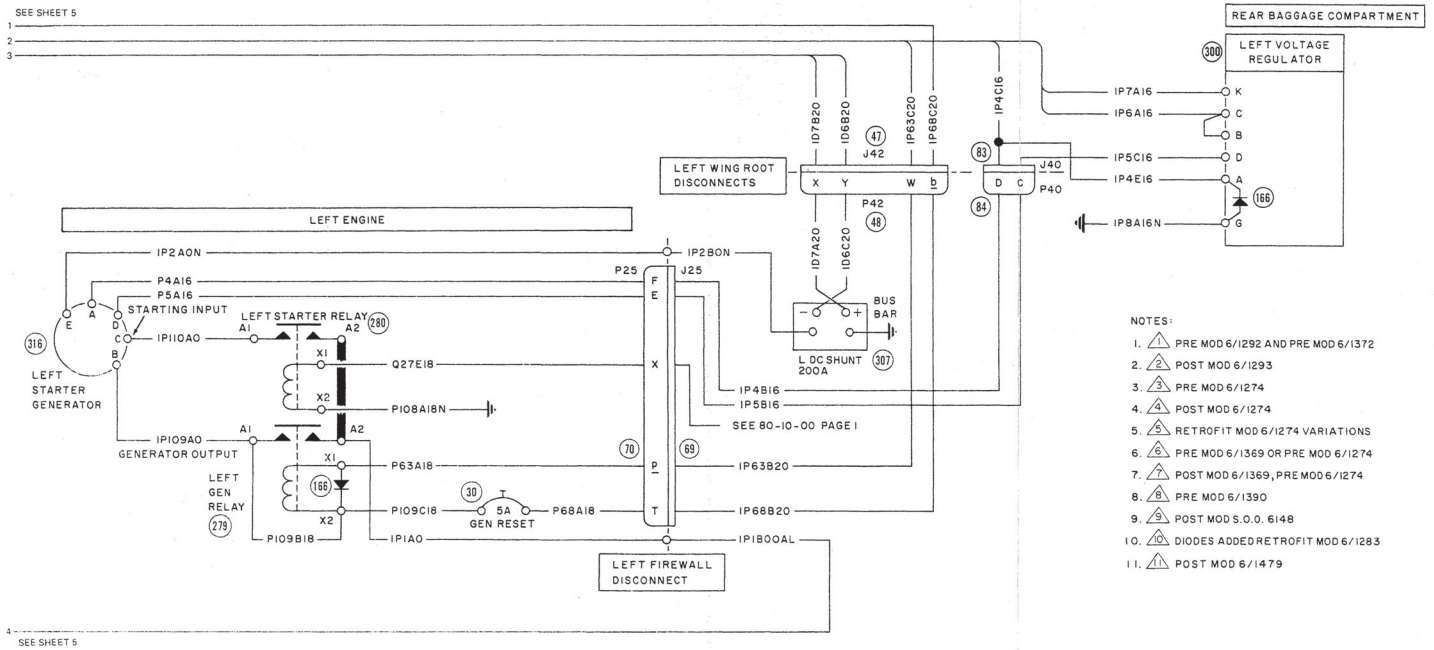


NOTES:

1. ⚠1 PRE MOD 6/1292 AND PRE MOD 6/1372
2. ⚠2 POST MOD 6/1293
3. ⚠3 PRE MOD 6/1274
4. ⚠4 POST MOD 6/1274
5. ⚠5 RETROFIT MOD 6/1274 VARIATIONS
6. ⚠6 PRE MOD 6/1369 OR PRE MOD 6/1274
7. ⚠7 POST MOD 6/1369, PRE MOD 6/1274
8. ⚠8 PRE MOD 6/1390
9. ⚠9 POST MOD S.O.O. 6148
10. ⚠10 DIODES ADDED RETROFIT MOD 6/1283
11. ⚠11 POST MOD 6/1479


DC POWER SUPPLIES


(SHEET 6)

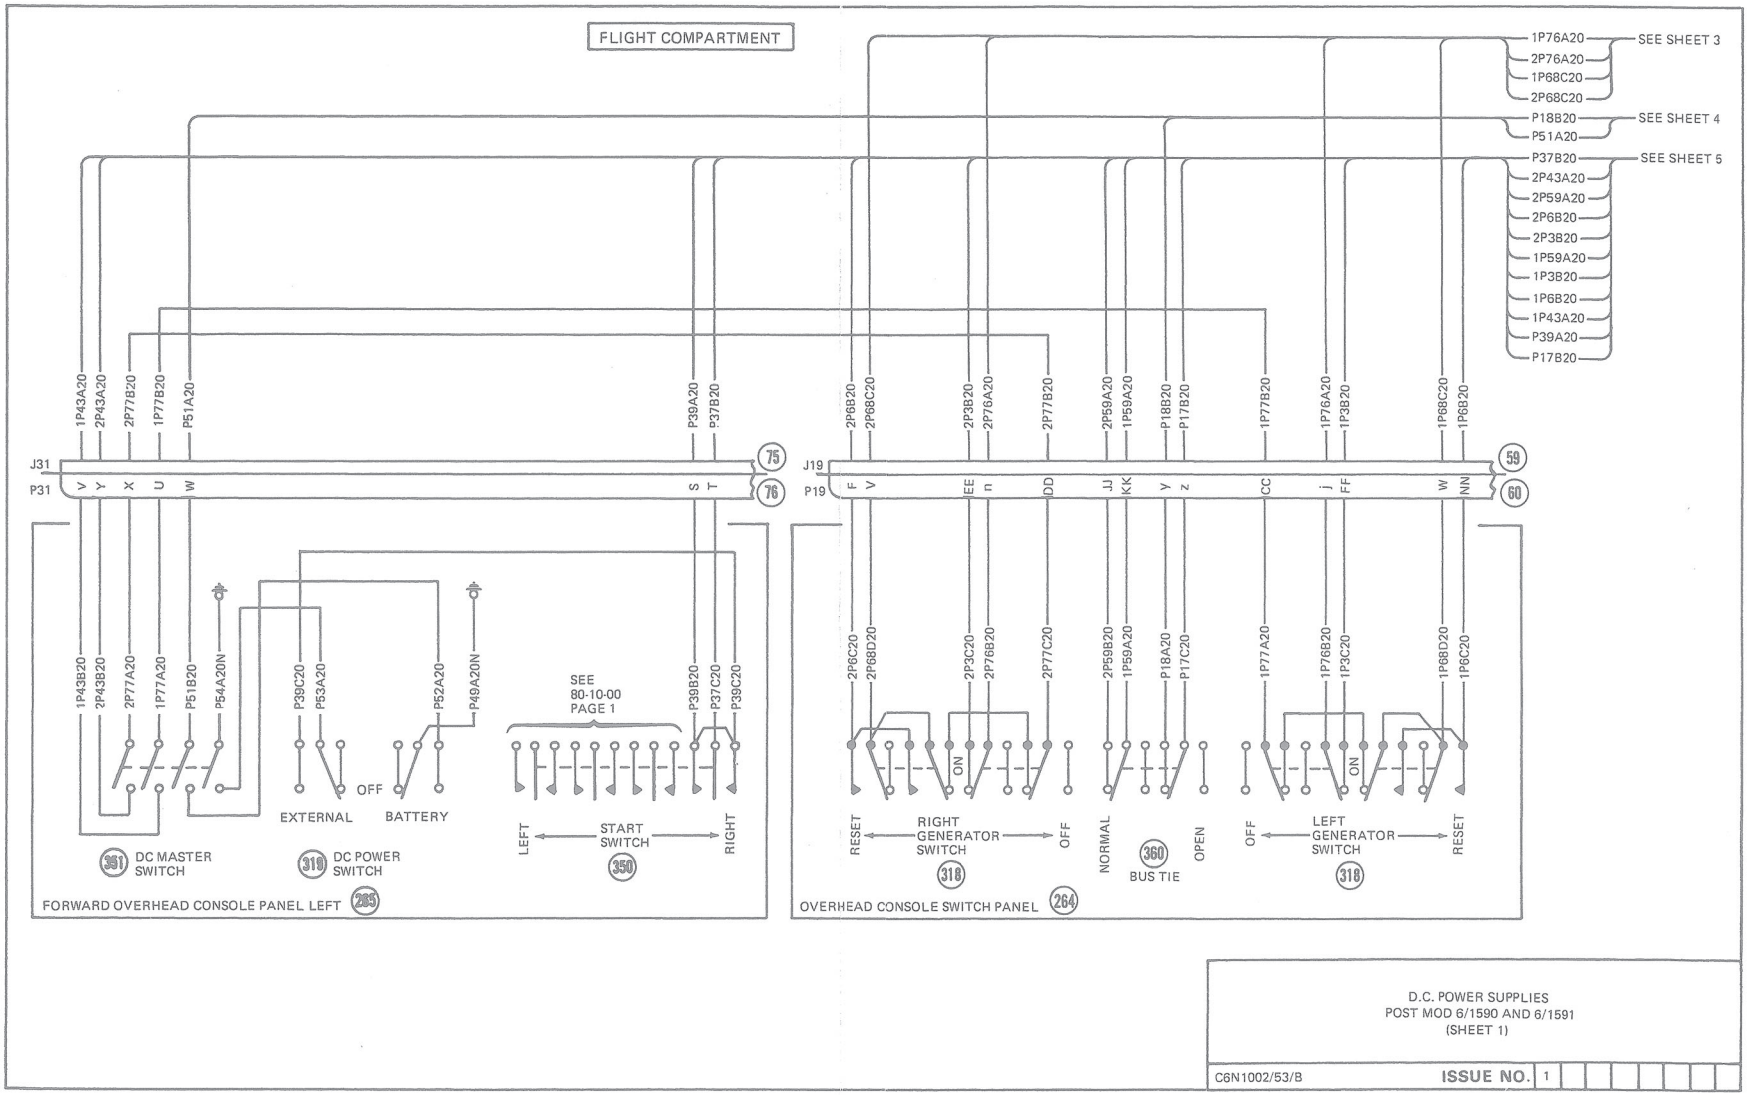


D.C. POWER SUPPLIES
POST MOD 6/1590 AND 6/1591
(SHEET 1)

C6N1002/53/B ISSUE NO. 1

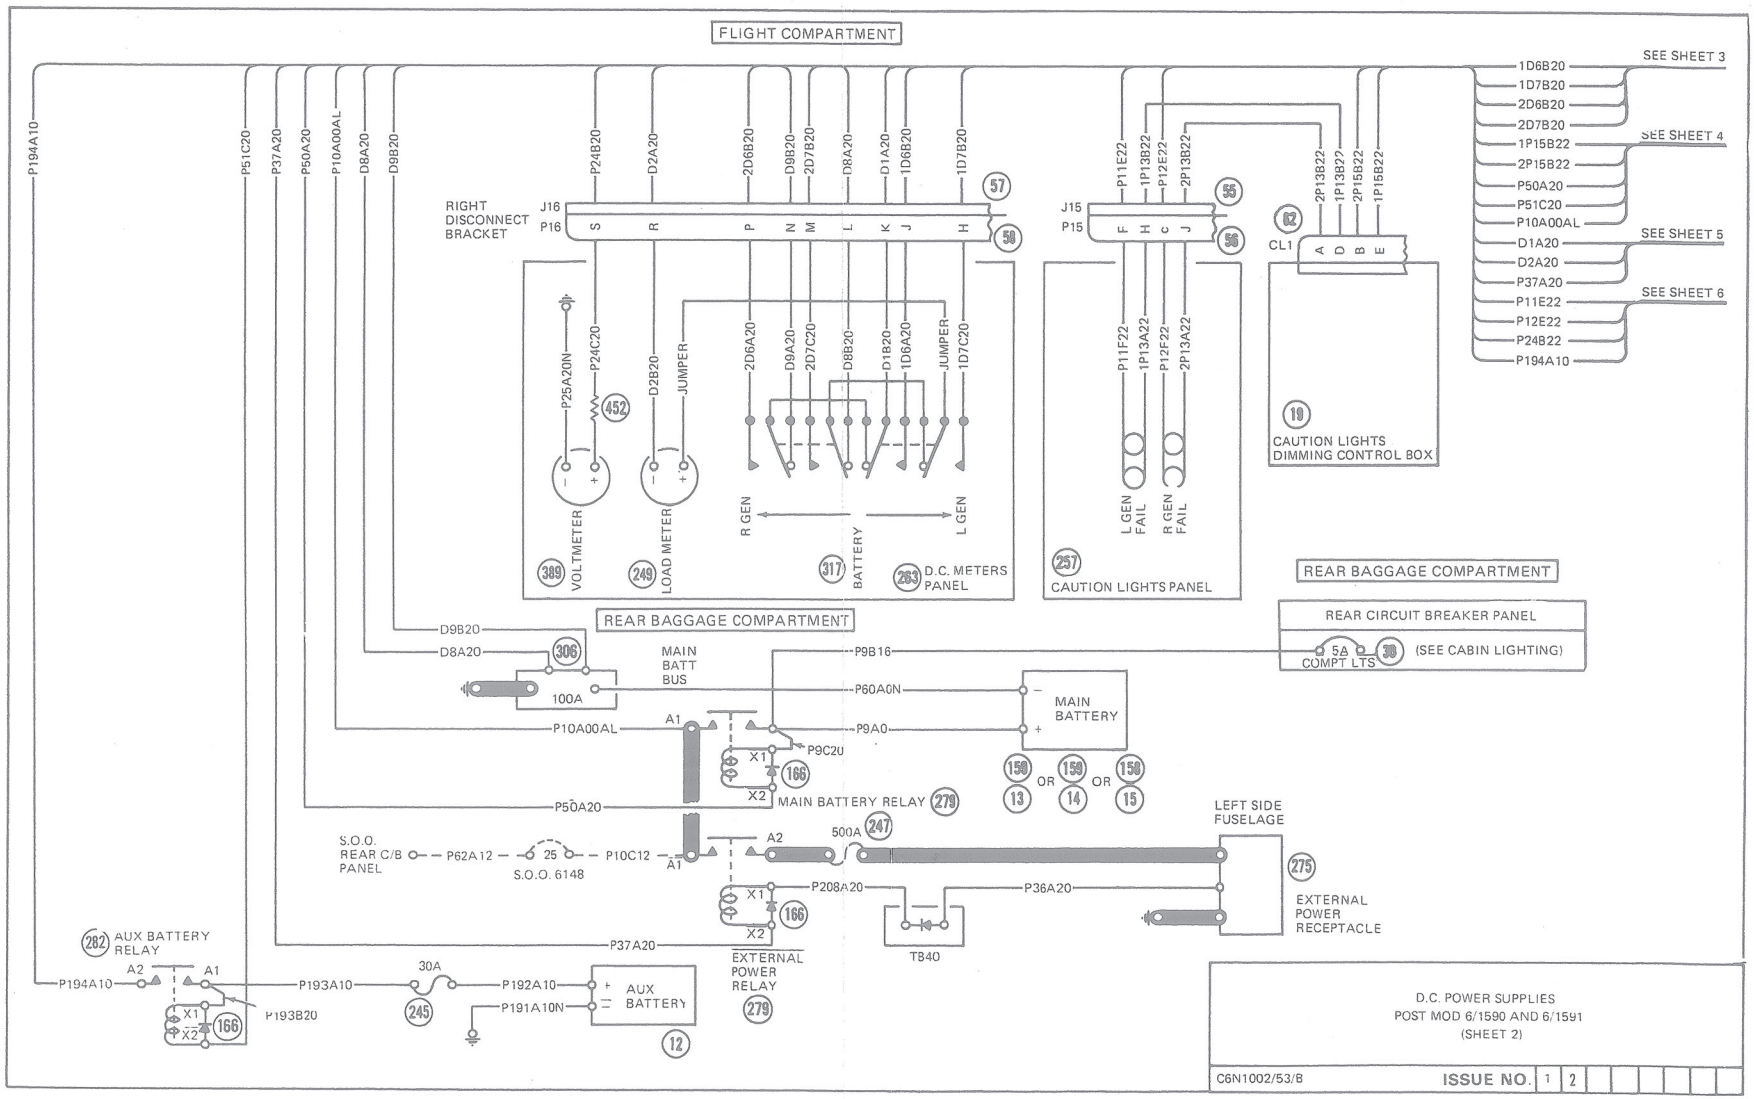

FLIGHT COMPARTMENT
SEE SHEET 3
SEE SHEET 4
SEE SHEET 5
SEE SHEET 6
RIGHT DISCONNECT BRACKET
J16
P16
J15
P15
CL1
CAUTION LIGHTS DIMMING CONTROL BOX
VOLTMETER
LOAD METER
R GEN
L GEN
BATTERY
D.C. METERS PANEL
CAUTION LIGHTS PANEL
L GEN FAIL
R GEN FAIL
REAR BAGGAGE COMPARTMENT
REAR CIRCUIT BREAKER PANEL
5A COMPT LTS
(SEE CABIN LIGHTING)
MAIN BATT BUS
100A
MAIN BATTERY
MAIN BATTERY RELAY
S.O.O. REAR C/B PANEL
S.O.O. 6148
LEFT SIDE FUSELAGE
500A
EXTERNAL POWER RECEPTACLE
T840
EXTERNAL POWER RELAY
AUX BATTERY RELAY
AUX BATTERY
30A
OR
D.C. POWER SUPPLIES
POST MOD 6/1590 AND 6/1591
(SHEET 2)
C6N1002/53/B
ISSUE NO. 1 2

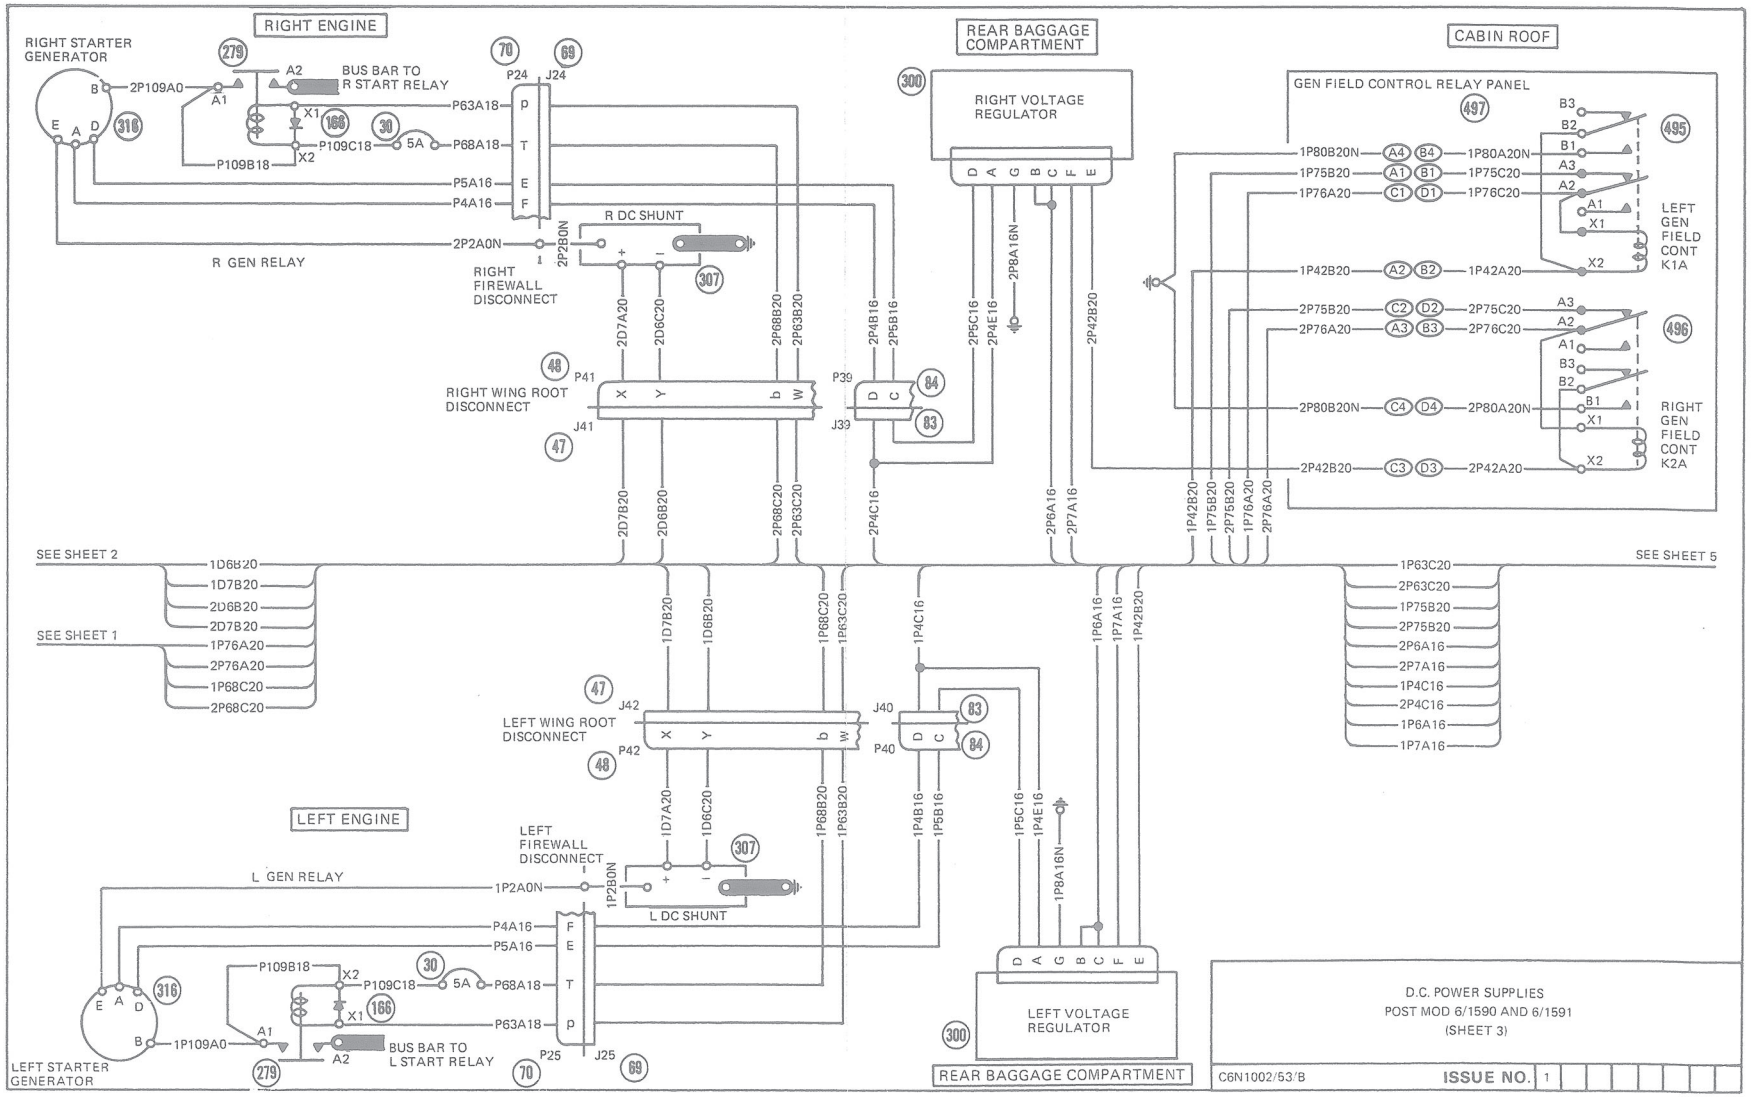
RIGHT ENGINE
RIGHT STARTER GENERATOR
BUS BAR TO R START RELAY
R GEN RELAY
R DC SHUNT
RIGHT FIREWALL DISCONNECT
RIGHT WING ROOT DISCONNECT
REAR BAGGAGE COMPARTMENT
RIGHT VOLTAGE REGULATOR
CABIN ROOF
GEN FIELD CONTROL RELAY PANEL
LEFT GEN FIELD CONT K1A
RIGHT GEN FIELD CONT K2A
SEE SHEET 2
SEE SHEET 1
SEE SHEET 5
LEFT WING ROOT DISCONNECT
LEFT ENGINE
LEFT FIREWALL DISCONNECT
L GEN RELAY
L DC SHUNT
BUS BAR TO L START RELAY
LEFT STARTER GENERATOR
LEFT VOLTAGE REGULATOR
REAR BAGGAGE COMPARTMENT
D.C. POWER SUPPLIES
POST MOD 6/1590 AND 6/1591
(SHEET 3)
C6N1002/53/B
ISSUE NO. 1

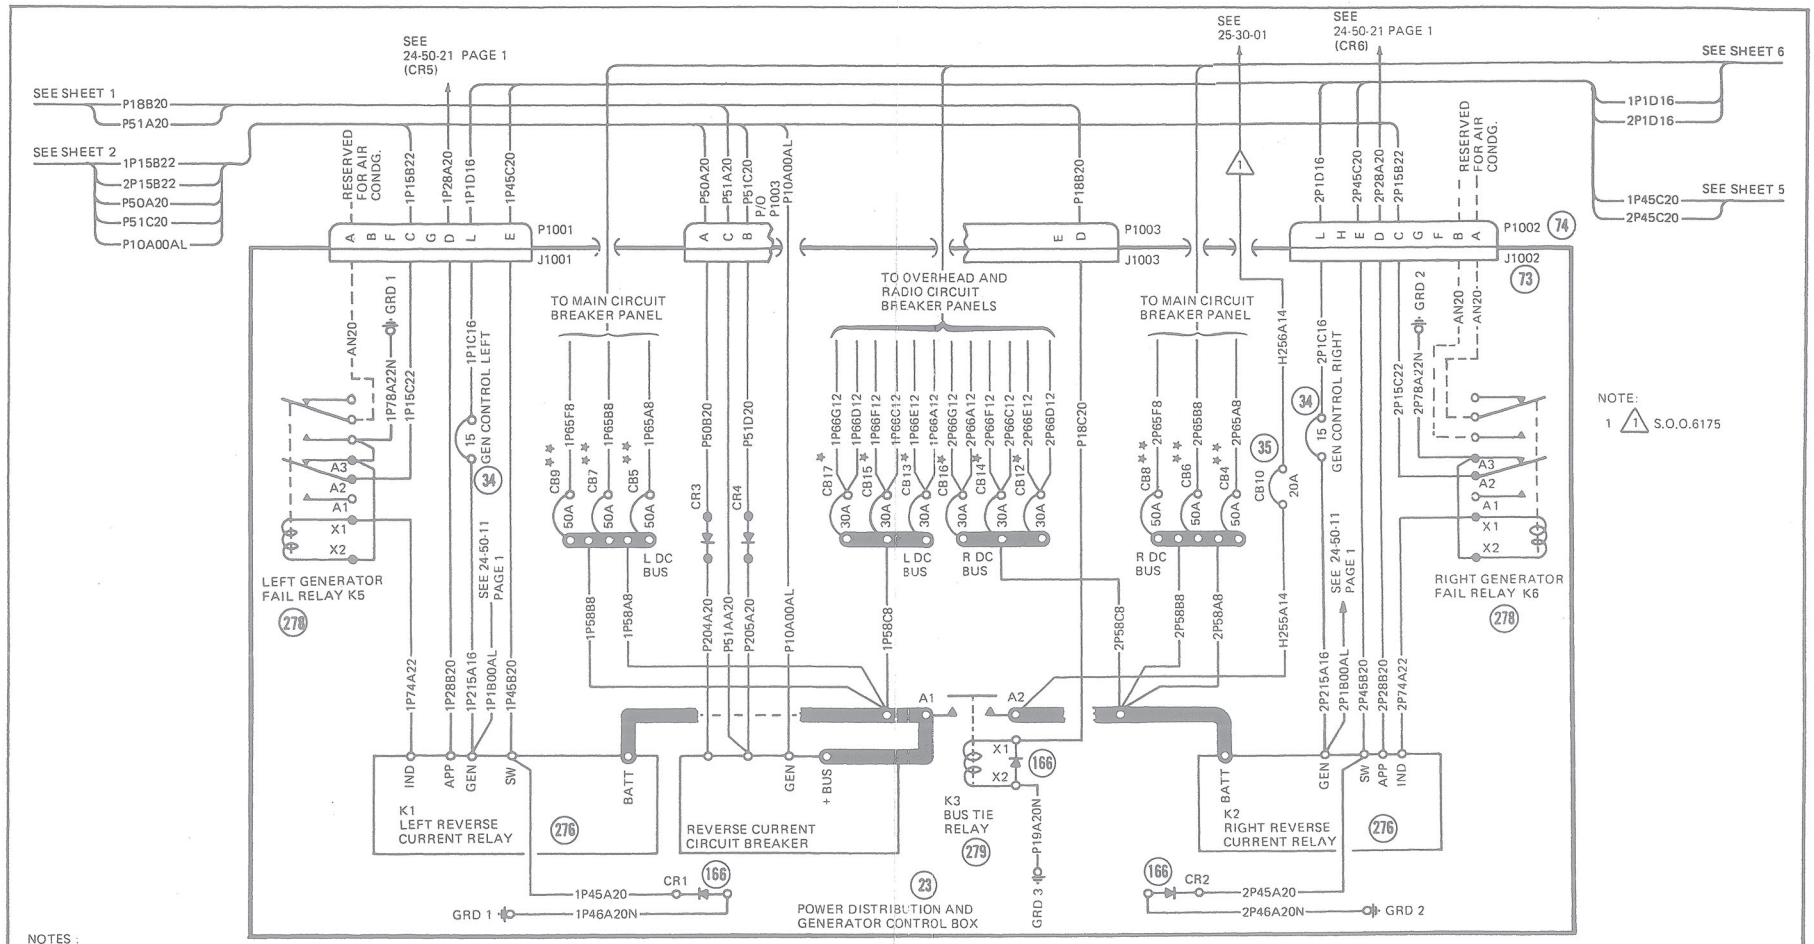


D.C. POWER SUPPLIES
POST MOD 6/1590 AND 6/1591
(SHEET 4)

C6N1002/53/C AND C6Z2030/--/-- ISSUE NO. 1 2 3

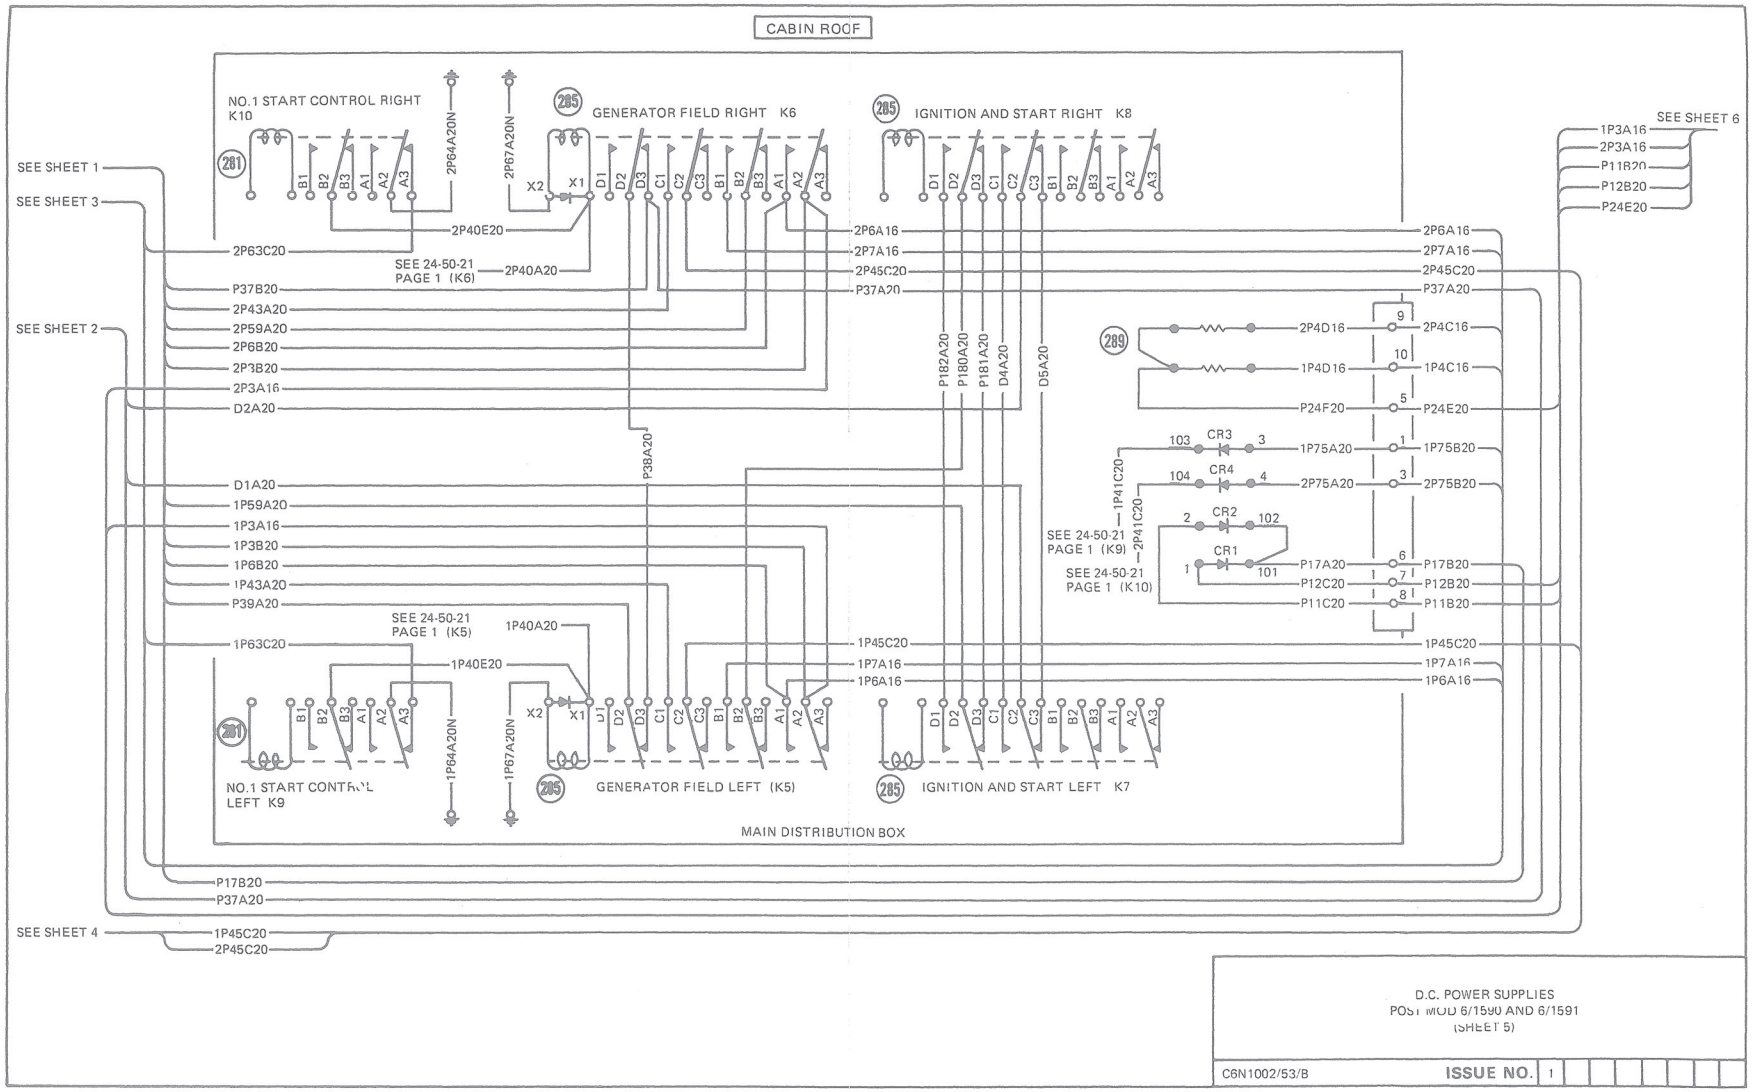


D.C. POWER SUPPLIES
POST MOD 6/1590 AND 6/1591
(SHEET 5)

C6N1002/53/B ISSUE NO. 1

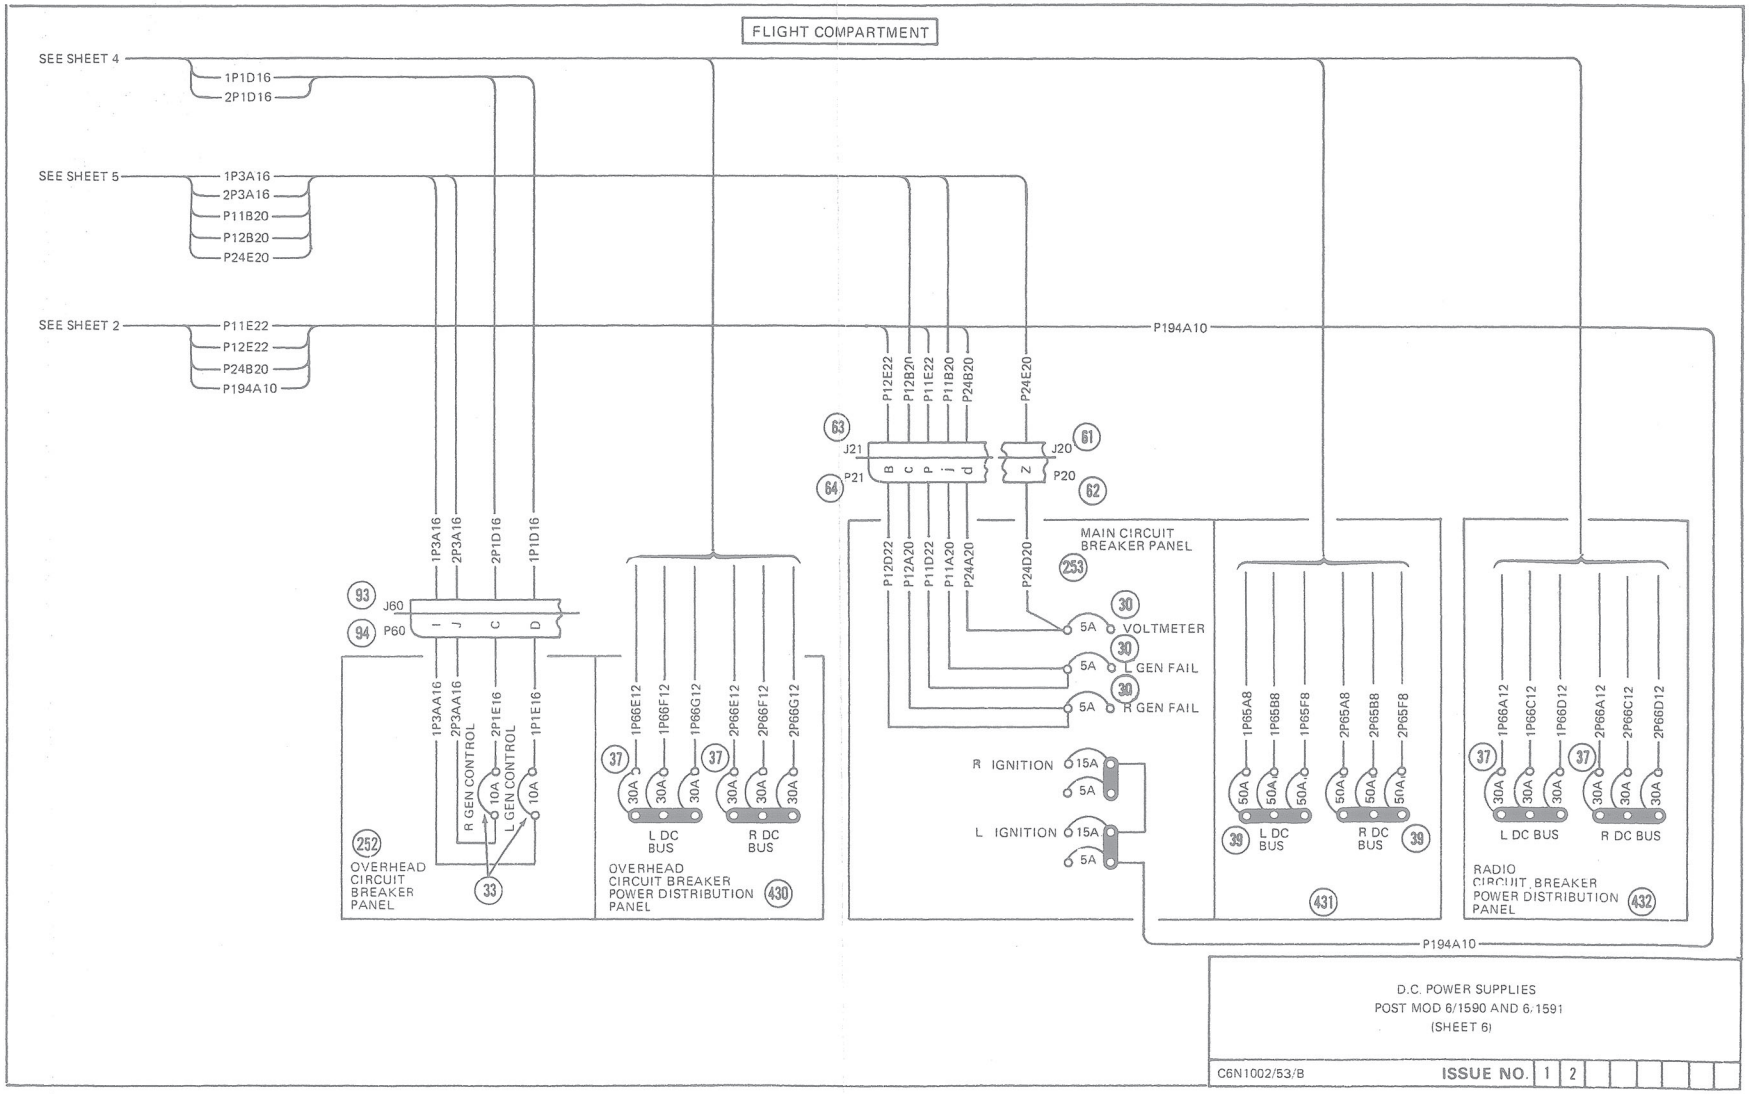


D.C. POWER SUPPLIES
POST MOD 6/1590 AND 6/1591
(SHEET 6)


C6N1002/53/B ISSUE NO. 1 2

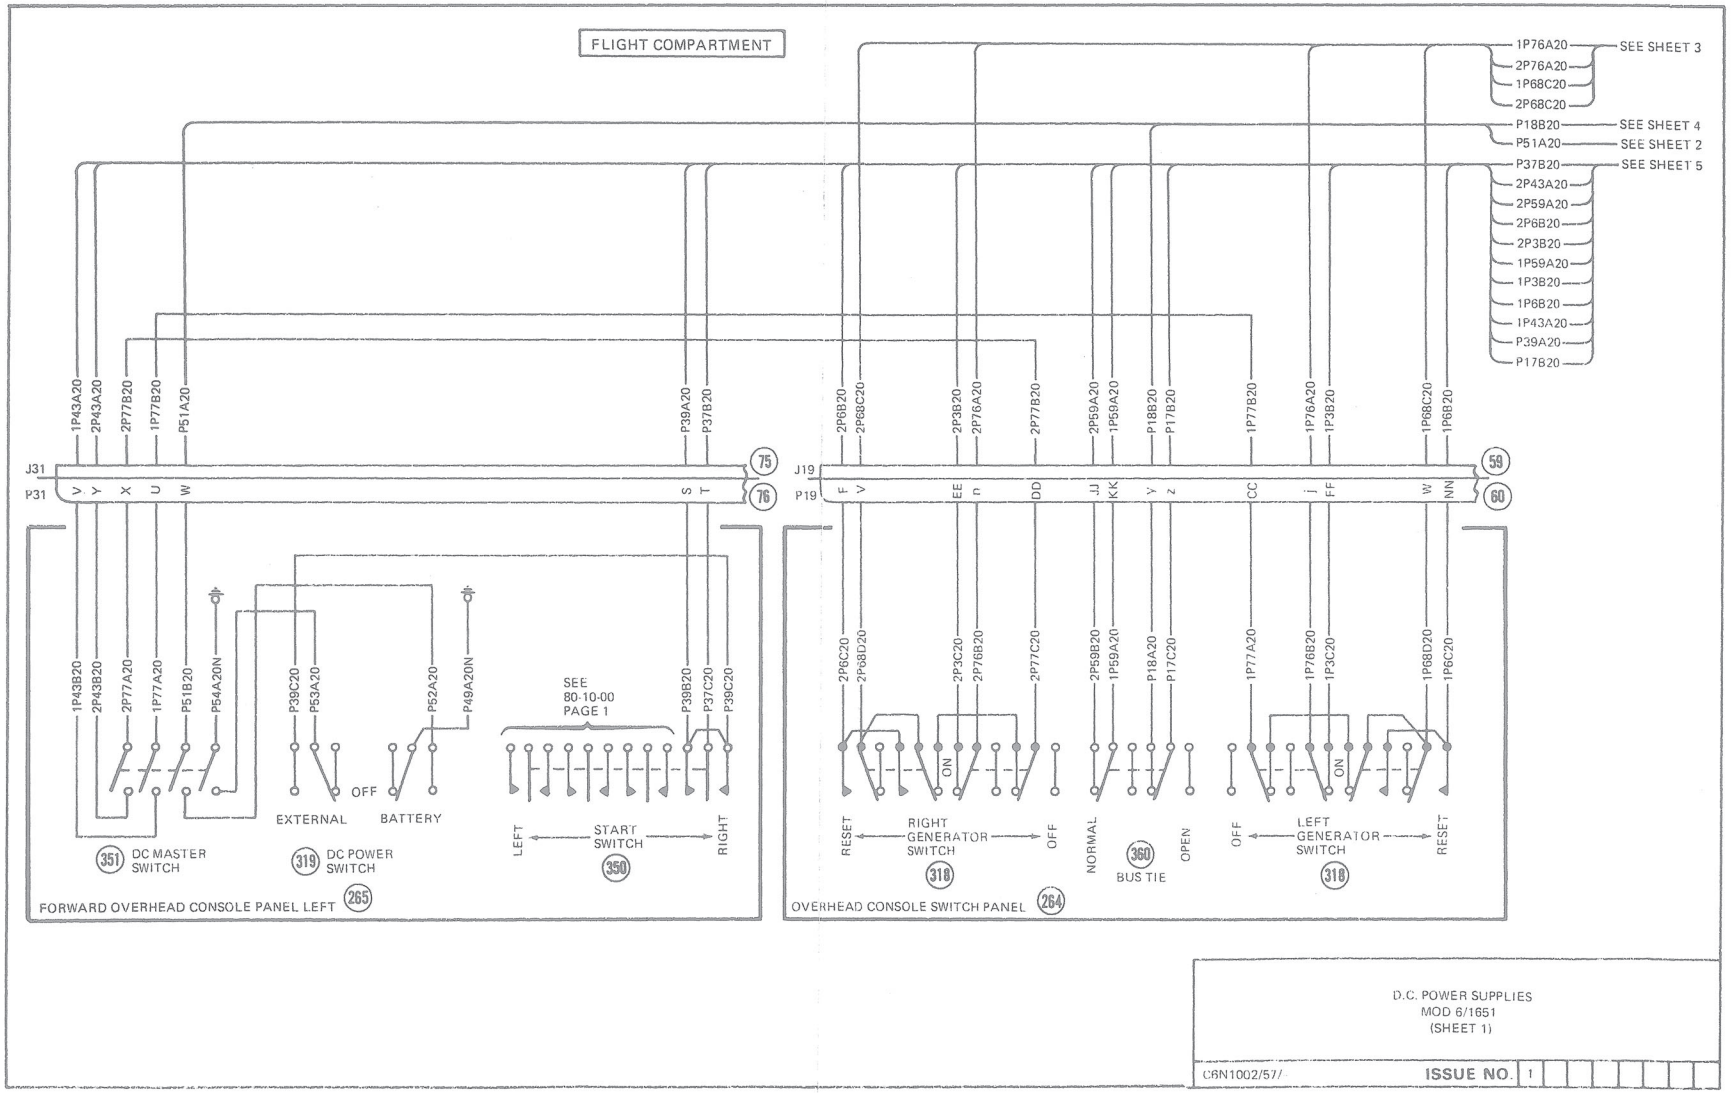


D.C. POWER SUPPLIES
MOD 6/1651
(SHEET 1)

C6N1002/57/- ISSUE NO. 1

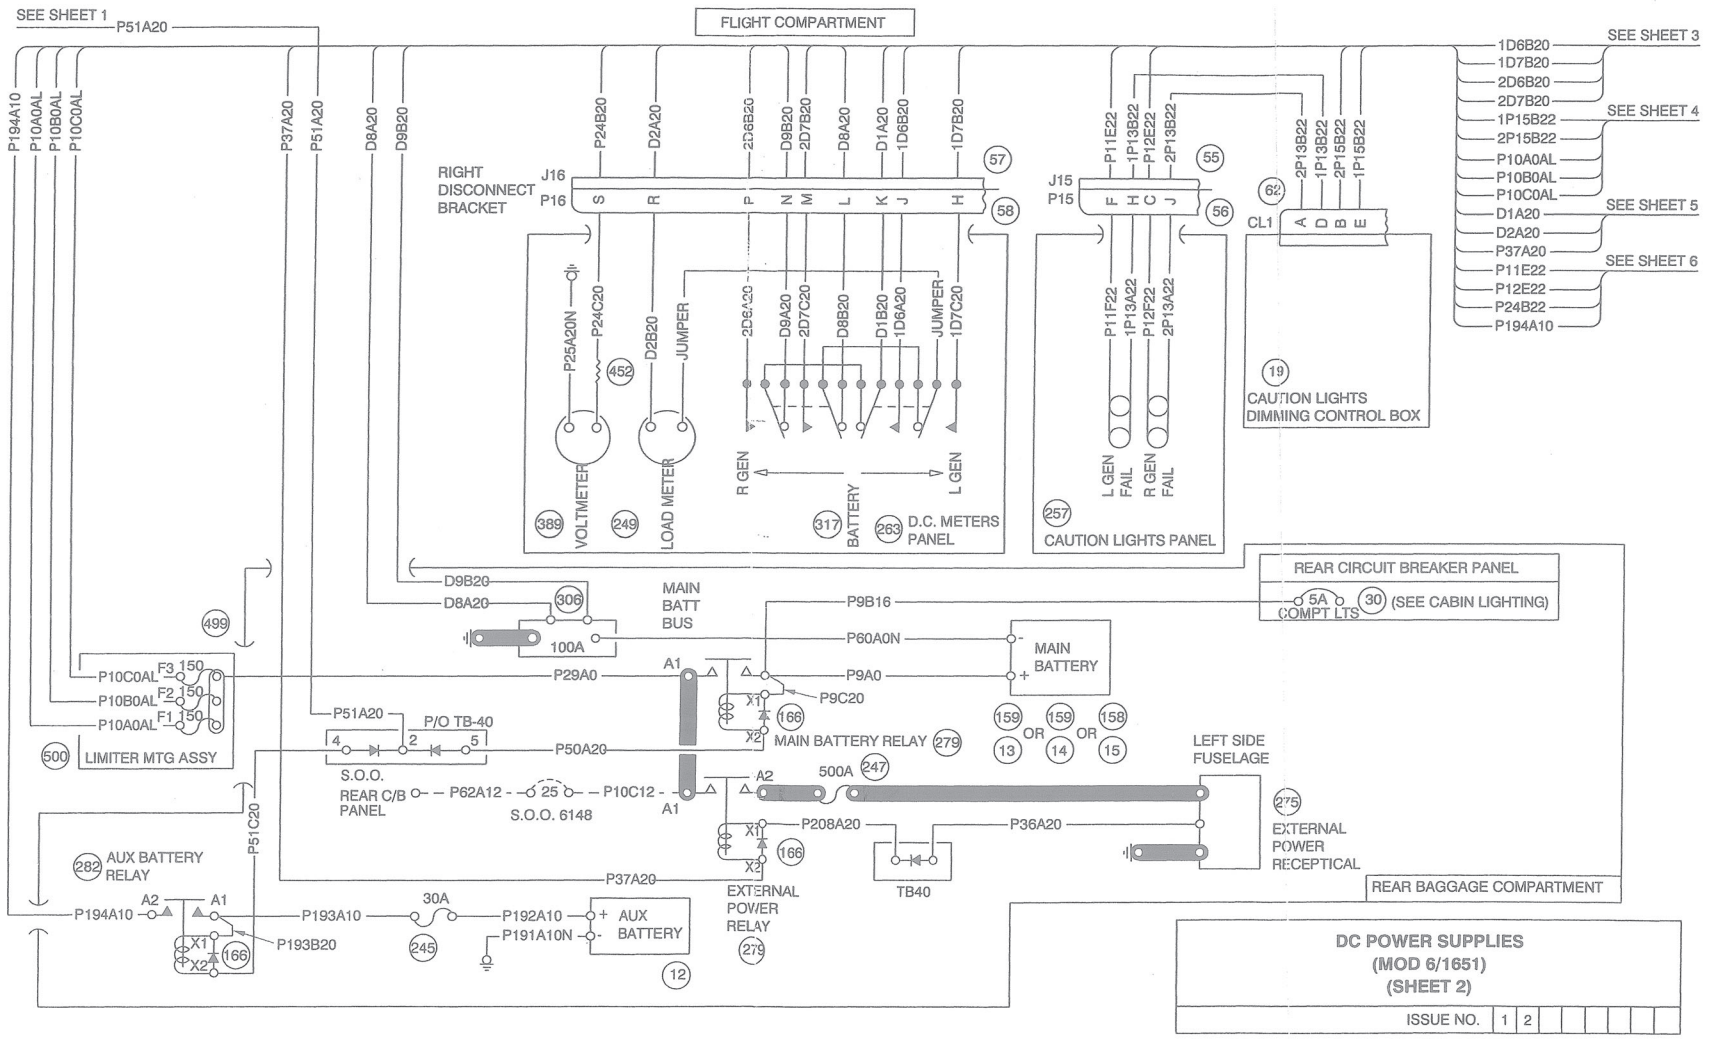
SEE SHEET 1
P51A20
FLIGHT COMPARTMENT
P194A10
P10A0AL
P10B0AL
P10C0AL
P37A20
P51A20
D8A20
D9B20
RIGHT DISCONNECT BRACKET
J16
P16
P24B20
D2A20
2D6B20
D9B20
2D7B20
D8A20
D1A20
1D6B20
1D7B20
57
58
S
R
P
N
M
L
K
J
H
J15
P15
P11E22
1P13B22
P12E22
2P13B22
55
56
F
H
C
J
62
CL1
2P13B22
1P13B22
2P15B22
1P15B22
A
D
B
E
1D6B20
1D7B20
2D6B20
2D7B20
1P15B22
2P15B22
P10A0AL
P10B0AL
P10C0AL
D1A20
D2A20
P37A20
P11E22
P12E22
P24B22
P194A10
SEE SHEET 3
SEE SHEET 4
SEE SHEET 5
SEE SHEET 6
P25A20N
P24C20
452
D2B20
JUMPER
2D6A20
D9A20
2D7C20
D8B20
D1B20
1D6A20
JUMPER
1D7C20
P11F22
1P13A22
P12F22
2P13A22
19
CAUTION LIGHTS DIMMING CONTROL BOX
VOLTMETER
LOAD METER
R GEN
L GEN
BATTERY
389
249
317
263
D.C. METERS PANEL
L GEN FAIL
R GEN FAIL
257
CAUTION LIGHTS PANEL
REAR CIRCUIT BREAKER PANEL
5A
COMPT LTS
30
(SEE CABIN LIGHTING)
D9B20
D8A20
306
MAIN BATT BUS
100A
P9B16
P60A0N
MAIN BATTERY
499
P10C0AL
P10B0AL
P10A0AL
F3
F2
F1
150
P29A0
A1
P9A0
P9C20
X1
X2
166
MAIN BATTERY RELAY
279
159
OR
159
OR
158
13
14
15
500
LIMITER MTG ASSY
P51A20
P/O TB-40
4
2
5
P50A20
S.O.O.
REAR C/B PANEL
P62A12
25
S.O.O. 6148
P10C12
A1
A2
500A
247
LEFT SIDE FUSELAGE
P208A20
P36A20
275
EXTERNAL POWER RECEPTICAL
P51C20
282
AUX BATTERY RELAY
P37A20
EXTERNAL POWER RELAY
TB40
REAR BAGGAGE COMPARTMENT
A2
A1
P194A10
P193A10
30A
P192A10
AUX BATTERY
P191A10N
P193B20
245
12
DC POWER SUPPLIES
(MOD 6/1651)
(SHEET 2)
ISSUE NO.
1
2
DHC-6_WDM_24_0001

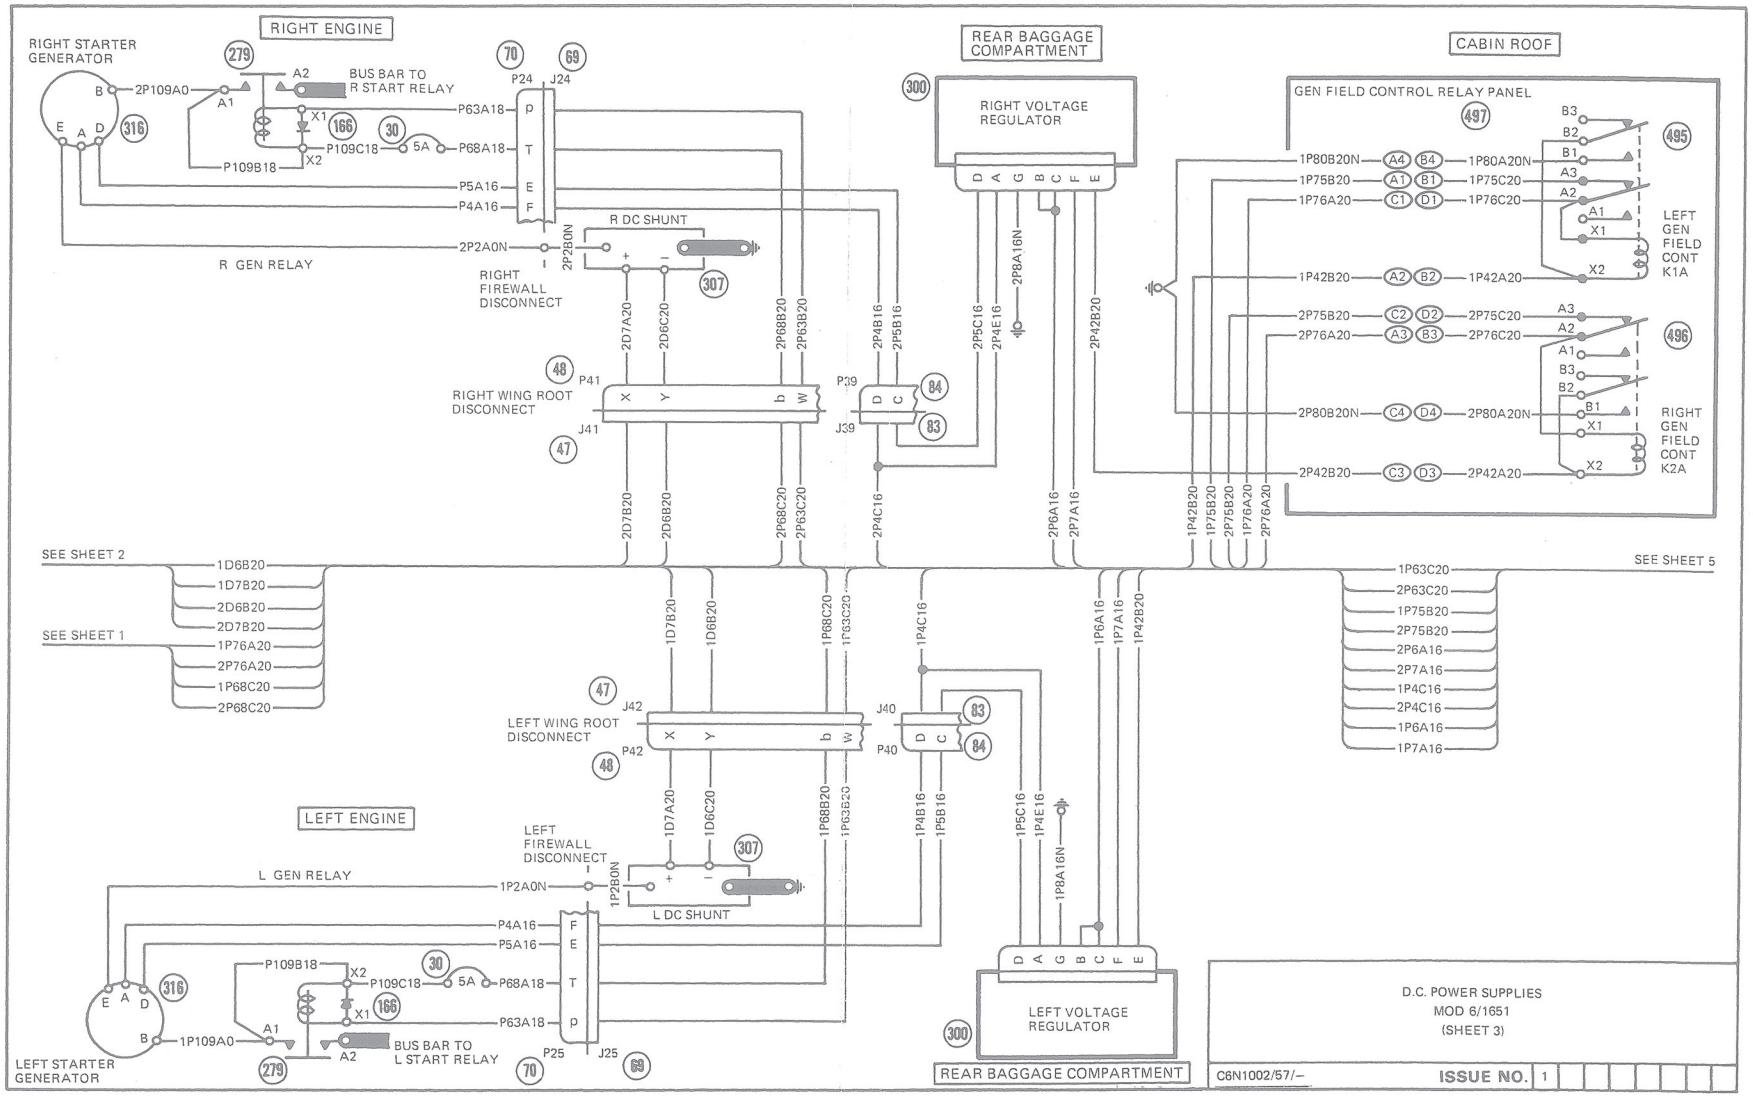
RIGHT ENGINE
RIGHT STARTER GENERATOR
BUS BAR TO R START RELAY
R GEN RELAY
R DC SHUNT
RIGHT FIREWALL DISCONNECT
RIGHT WING ROOT DISCONNECT
REAR BAGGAGE COMPARTMENT
RIGHT VOLTAGE REGULATOR
CABIN ROOF
GEN FIELD CONTROL RELAY PANEL
LEFT GEN FIELD CONT K1A
RIGHT GEN FIELD CONT K2A
SEE SHEET 2
SEE SHEET 1
SEE SHEET 5
LEFT WING ROOT DISCONNECT
LEFT ENGINE
LEFT STARTER GENERATOR
L GEN RELAY
L DC SHUNT
LEFT FIREWALL DISCONNECT
BUS BAR TO L START RELAY
LEFT VOLTAGE REGULATOR
REAR BAGGAGE COMPARTMENT
D.C. POWER SUPPLIES
MOD 6/1651
(SHEET 3)
C6N1002/57/–
ISSUE NO. 1

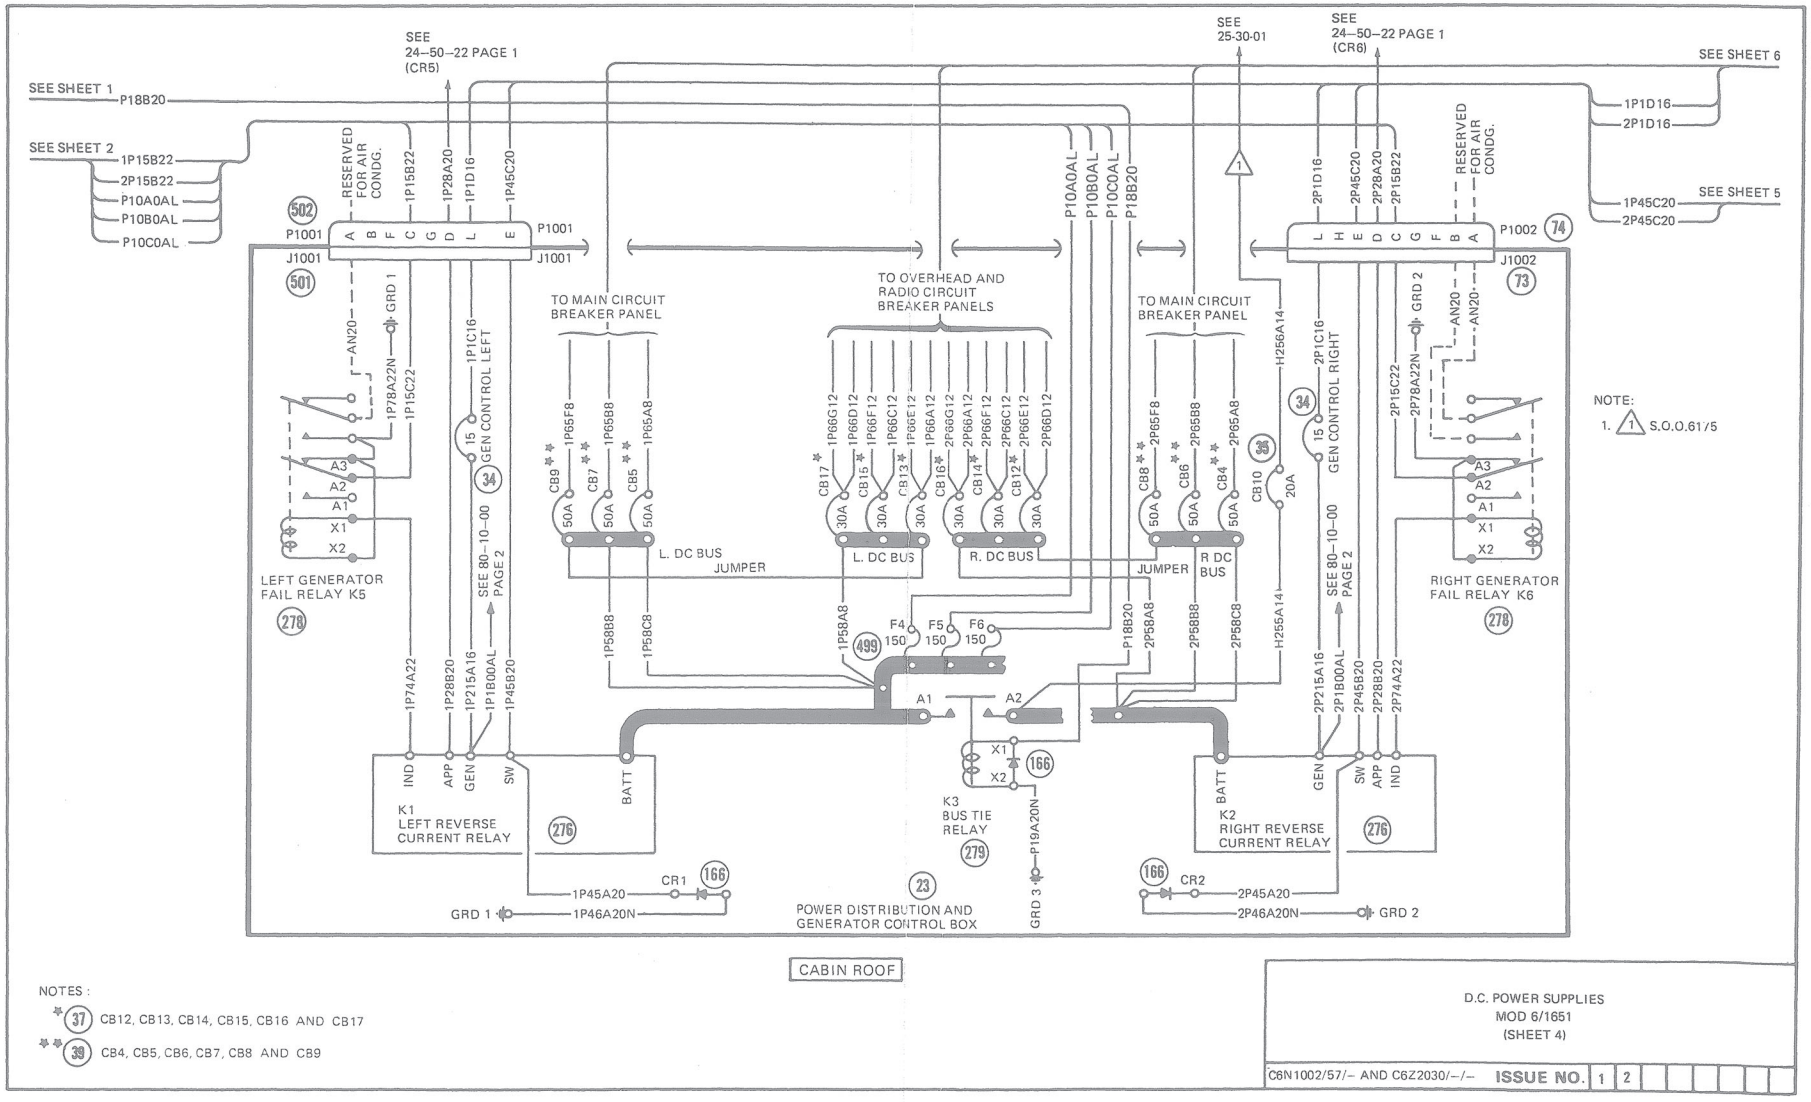


NOTES :


(37) CB12, CB13, CB14, CB15, CB16 AND CB17

(39) CB4, CB5, CB6, CB7, CB8 AND CB9

D.C. POWER SUPPLIES
MOD 6/1651
(SHEET 4)

C6N1002/57/– AND C6Z2030/–/– ISSUE NO. 1 2

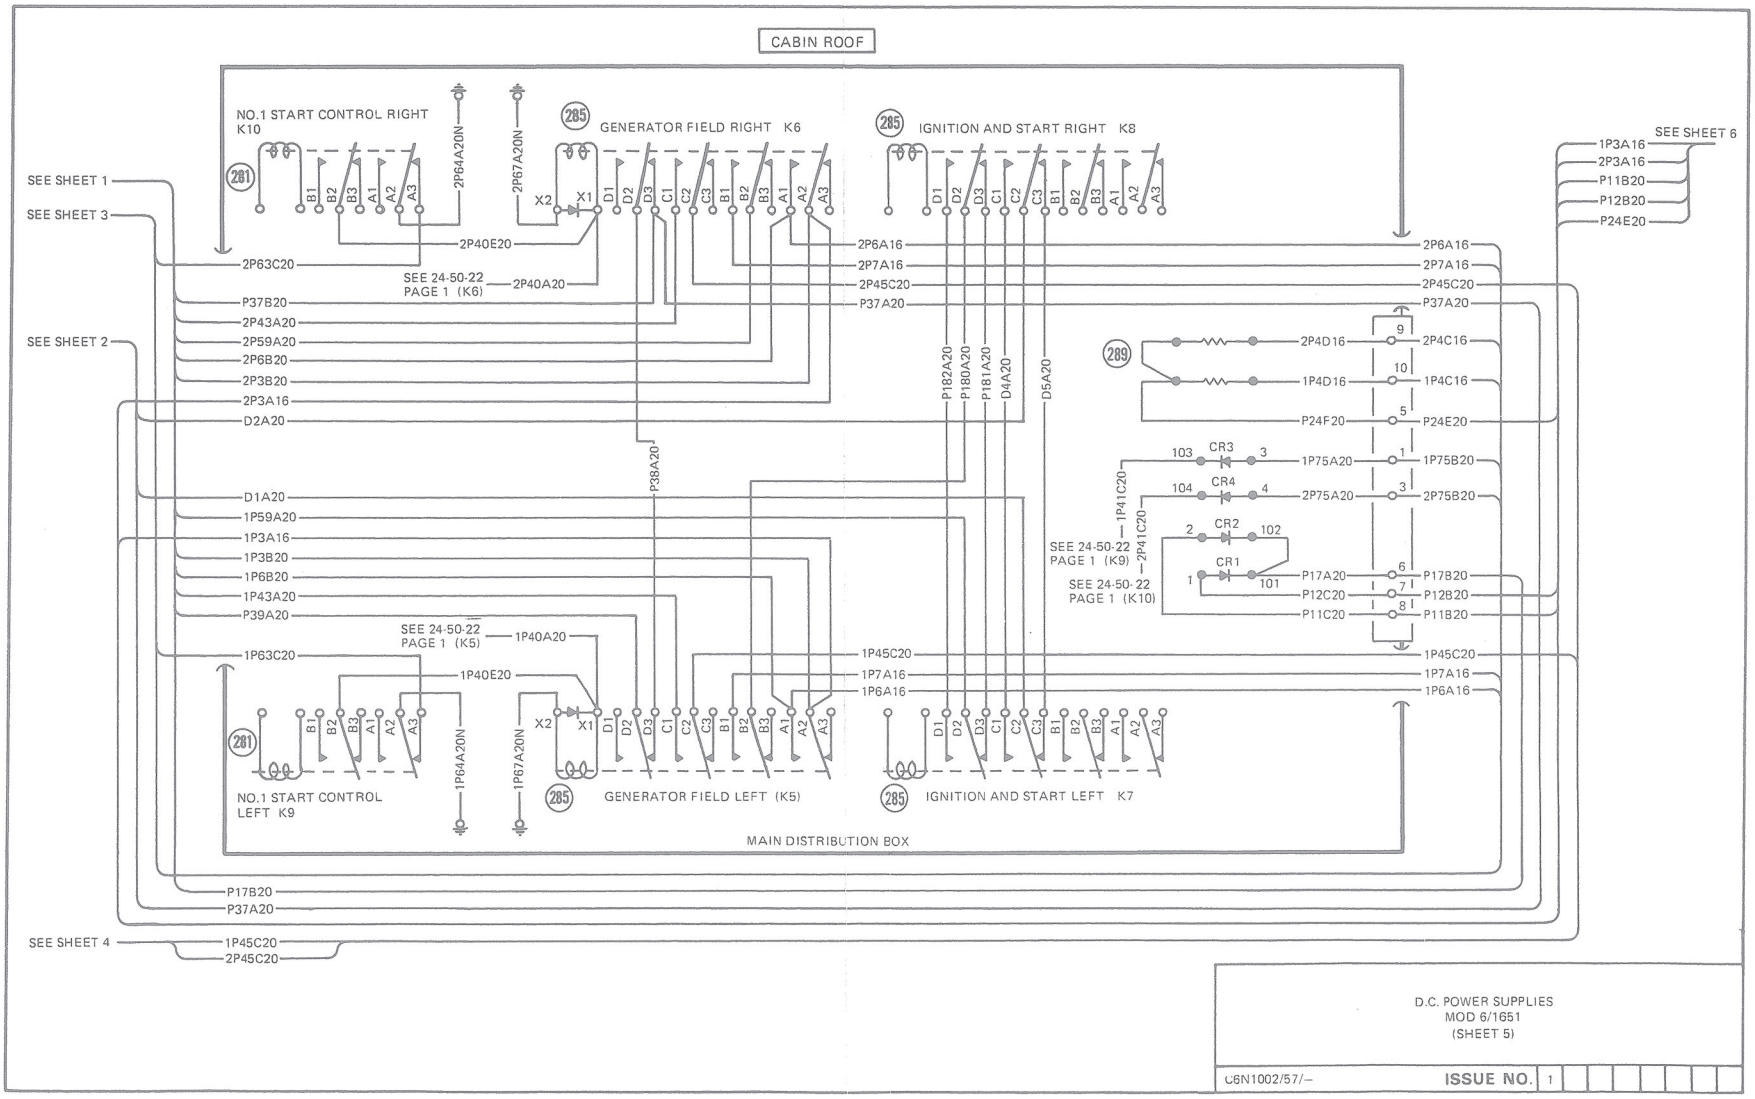
CABIN ROOF
NO.1 START CONTROL RIGHT K10
GENERATOR FIELD RIGHT K6
IGNITION AND START RIGHT K8
SEE SHEET 1
SEE SHEET 3
SEE SHEET 2
SEE SHEET 4
SEE SHEET 6
SEE 24-50-22 PAGE 1 (K6)
SEE 24-50-22 PAGE 1 (K5)
SEE 24-50-22 PAGE 1 (K9)
SEE 24-50-22 PAGE 1 (K10)
NO.1 START CONTROL LEFT K9
GENERATOR FIELD LEFT (K5)
IGNITION AND START LEFT K7
MAIN DISTRIBUTION BOX
2P64A20N
2P67A20N
2P40E20
2P63C20
2P40A20
P37B20
2P43A20
2P59A20
2P6B20
2P3B20
2P3A16
D2A20
D1A20
1P59A20
1P3A16
1P3B20
1P6B20
1P43A20
P39A20
1P63C20
1P40E20
1P40A20
1P64A20N
1P67A20N
P17B20
P37A20
1P45C20
2P45C20
P38A20
P182A20
P180A20
P181A20
D4A20
D5A20
2P6A16
2P7A16
2P45C20
P37A20
1P7A16
1P6A16
2P4D16
1P4D16
P24F20
2P4C16
1P4C16
P24E20
1P75A20
2P75A20
1P75B20
2P75B20
1P41C20
2P41C20
CR1
CR2
CR3
CR4
P17A20
P12C20
P11C20
P17B20
P12B20
P11B20
1P3A16
2P3A16
P11B20
P12B20
P24E20
D.C. POWER SUPPLIES
MOD 6/1651
(SHEET 5)
U6N1002/57/–
ISSUE NO. 1

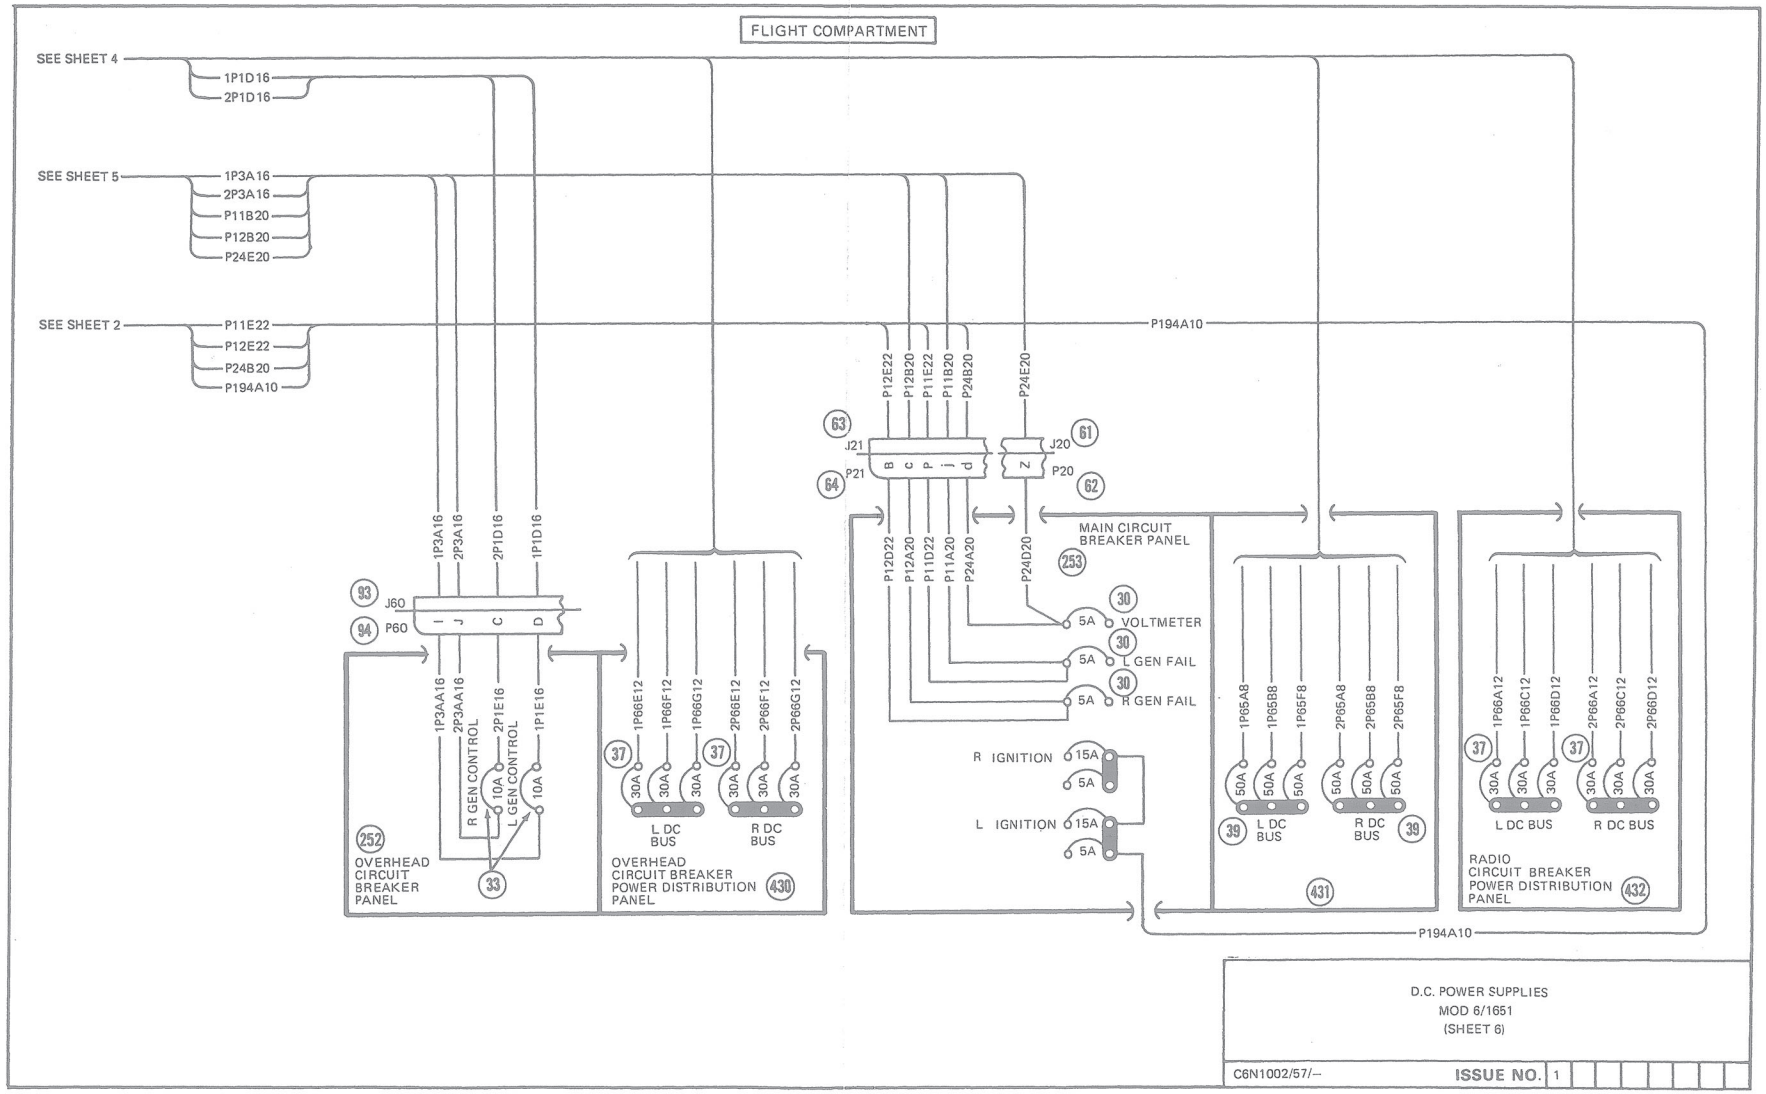


D.C. POWER SUPPLIES
MOD 6/1651
(SHEET 6)


C6N1002/57/-- ISSUE NO. 1

NOTES:

1. ⚠1 INDICATOR SUPPLIED AS PART OF MARATHON TEMPERATURE MONITOR KIT 29088 (MOD 6/1479)
2. ⚠2 LAMP AND METER SENSORS SUPPLIED AS PART OF MARATHON TEMPERATURE MONITOR KIT 29088 (MOD 6/1479)

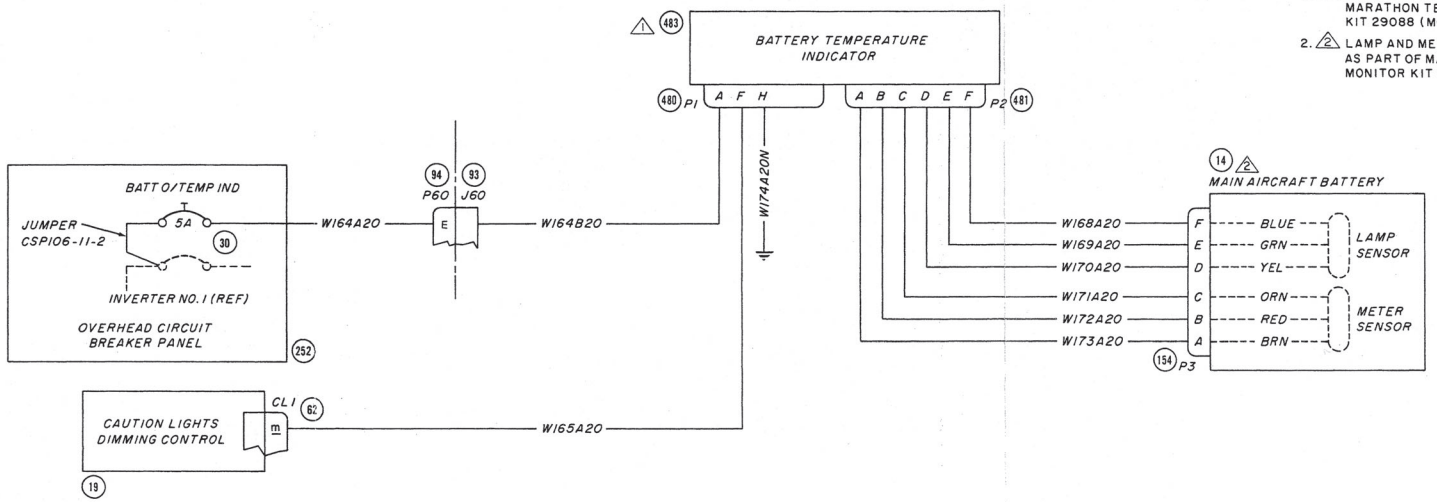


BATTERY OVER TEMPERATURE INDICATION (MOD 6/1479)	
C6N1002/51/-	ISSUE NO. 1 2

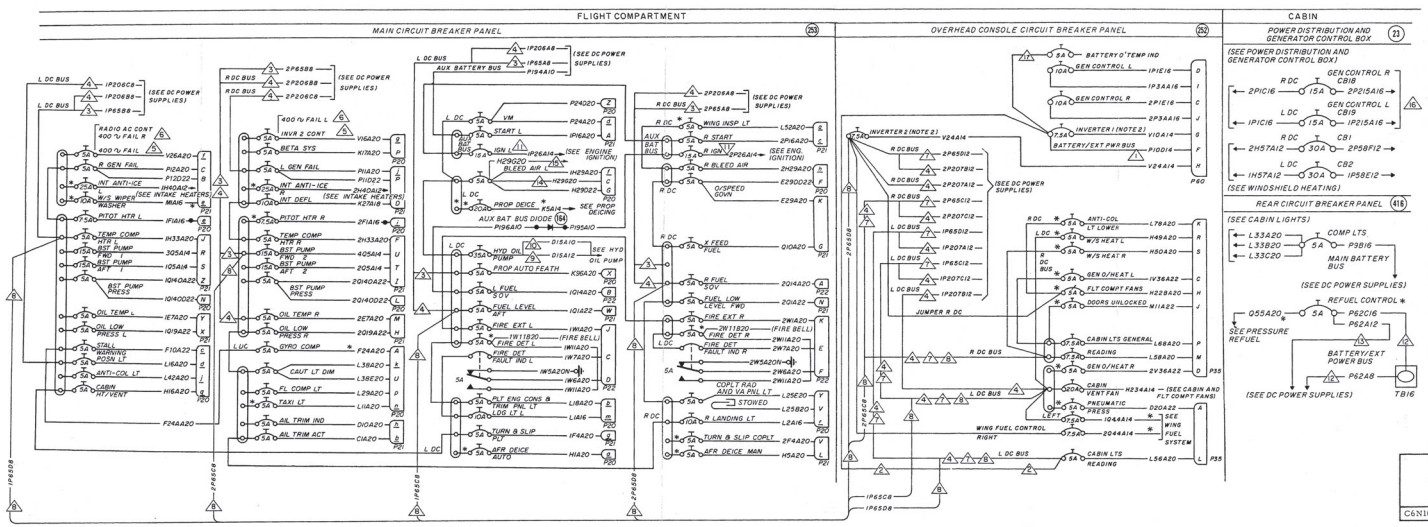

NOTES:

1. * CUSTOMER OPTION CIRCUITS. (THE LENGTH OF BUS BARS VARIES AND JUMPER WIRES ARE ADDED ACCORDING TO REQUIREMENTS).
2. WHEN 250VA INVERTERS ARE INSTALLED, CIRCUIT BREAKER RATING IS 20A
3. (1) PRE MOD 6/1292 AND PRE MOD 6/1372, (2) POST MOD 6/1292 OR POST MOD 6/1372
4. (3) PRE MOD 6/1274, (4) POST MOD 6/1274
5. (5) PRE MOD S.O.O. 6142, (6) POST MOD S.O.O. 6142
6. (7) PRE MOD 6/1369 AND PRE MOD 6/1274, OR, (8) POST MOD 6/1369, PRE MOD 6/1274
7. (9) PRE OR, (10) POST MOD 6/1370
8. (11) 20A PRE MOD 6/1371
9. (12) PRE MOD 6/1390
10. (13) POST MOD S.O.O. 6148
11. (14) POST MOD 6/1266
12. (15) RETROFIT MOD 6/1266
13. (16) POST MOD 6/1389
14. (17) POST MOD 6/1479

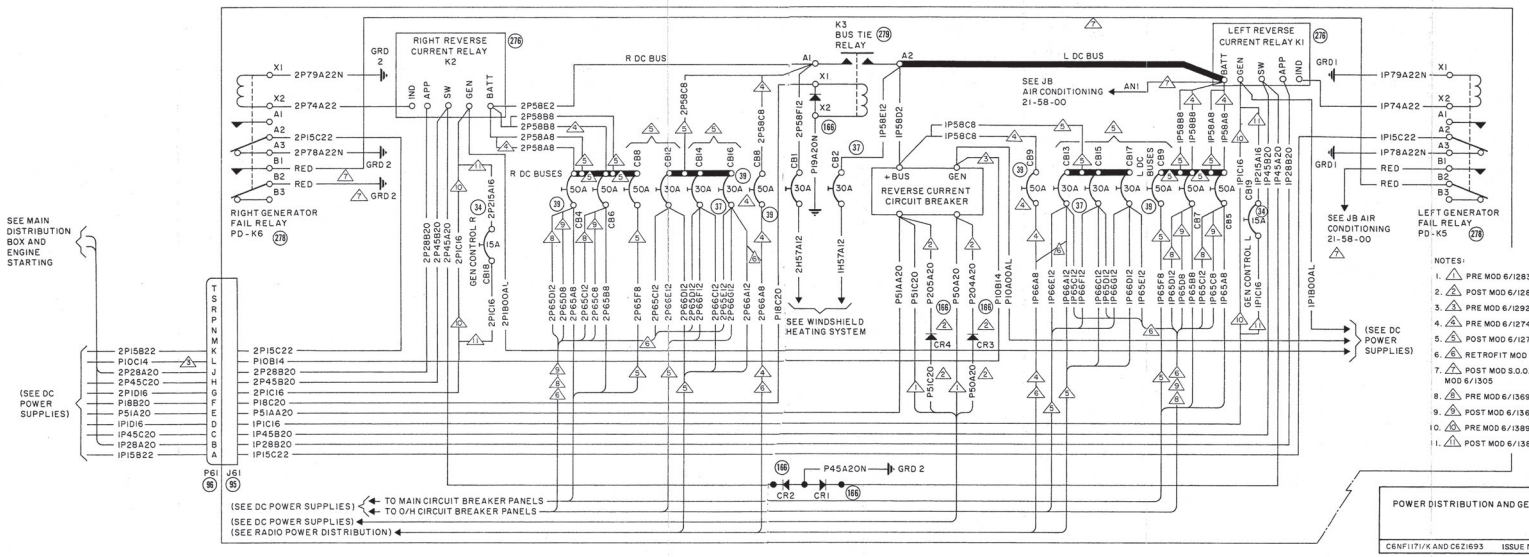



NOTES:

1. △1 PRE MOD 6/1283
2. △2 POST MOD 6/1283
3. △3 PRE MOD 6/1292 AND PRE MOD 6/1372
4. △4 PRE MOD 6/1274
5. △5 POST MOD 6/1274
6. △6 RETROFIT MOD 6/1274 VARIATIONS
7. △7 POST MOD S.O.O. 6109 OR POST MOD 6/1305
8. △8 PRE MOD 6/1369 AND PRE MOD 6/1274
9. △9 POST MOD 6/1369, PRE MOD 6/1274
10. △10 PRE MOD 6/1389
11. △11 POST MOD 6/1389

POWER DISTRIBUTION AND GENERATOR CONTROL BOX

C6NF117/K AND C6ZI693 ISSUE NO. 1 2 3 4 5 6

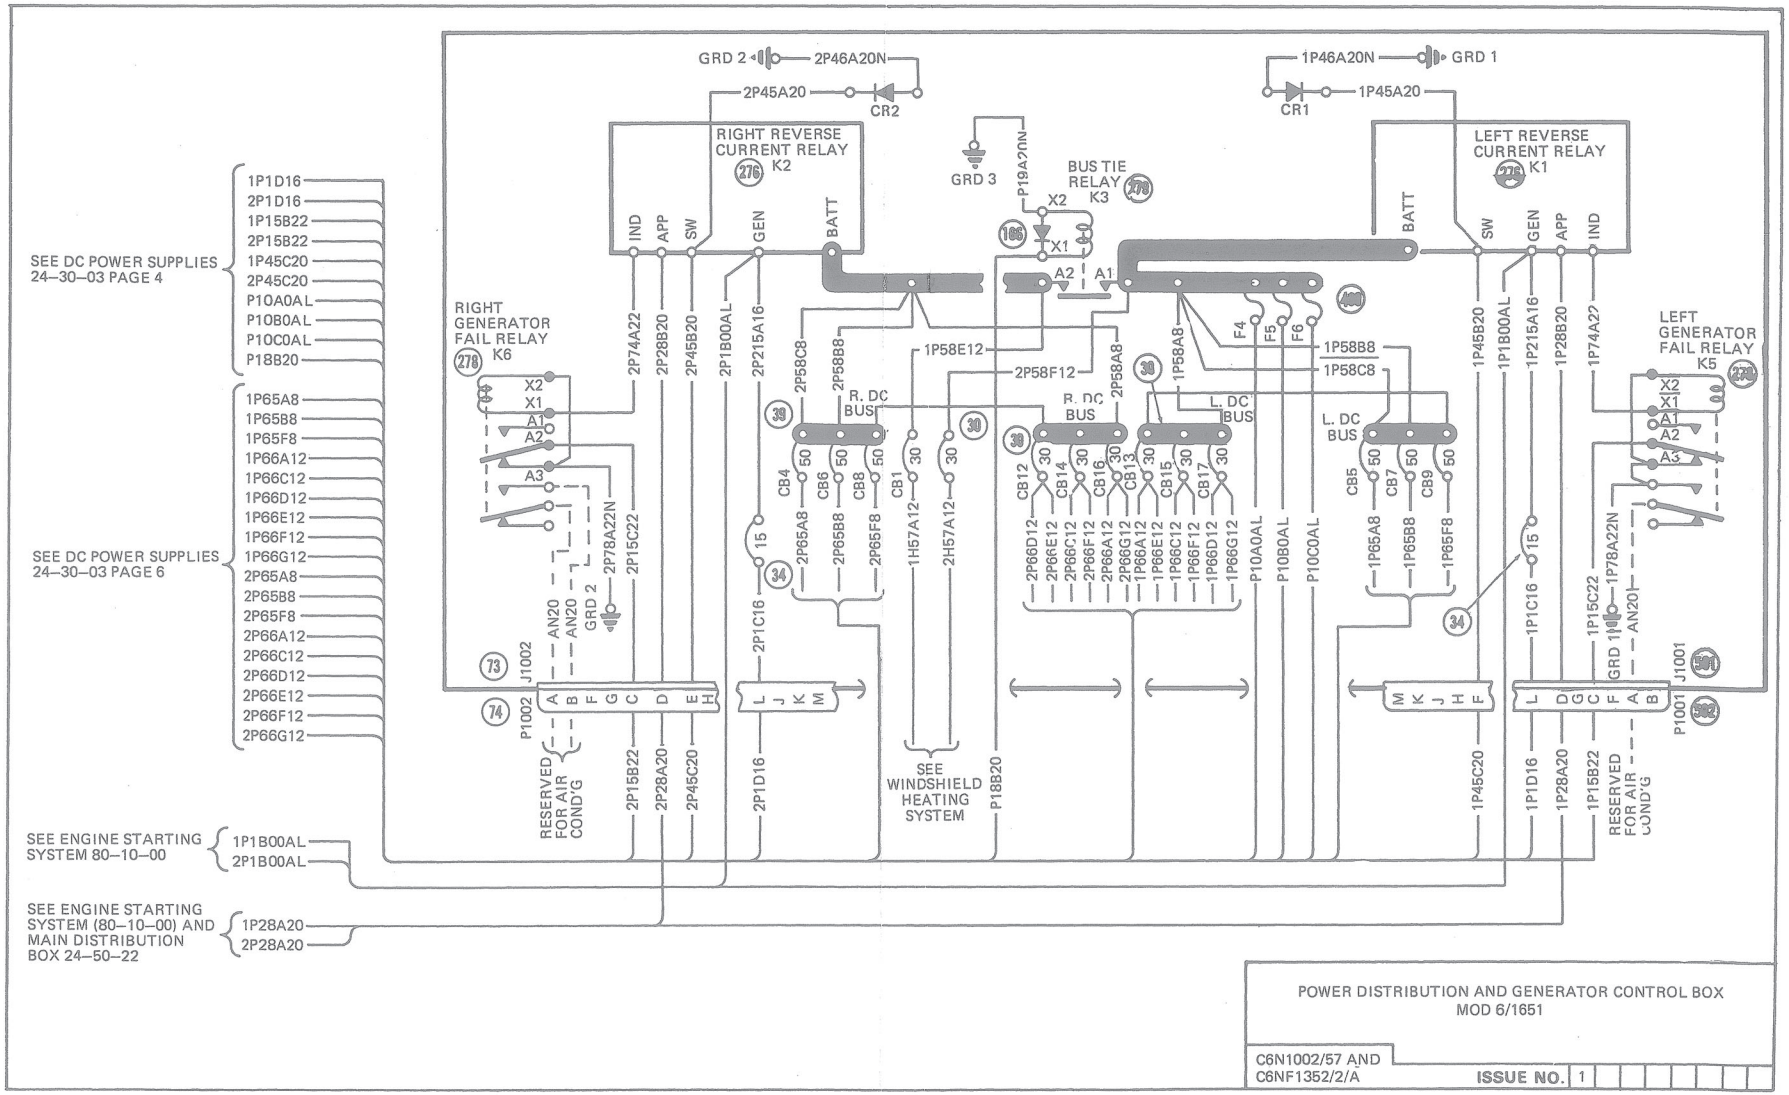

SEE DC POWER SUPPLIES 24–30–03 PAGE 4
1P1D16
2P1D16
1P15B22
2P15B22
1P45C20
2P45C20
P10A0AL
P10B0AL
P10C0AL
P18B20
SEE DC POWER SUPPLIES 24–30–03 PAGE 6
1P65A8
1P65B8
1P65F8
1P66A12
1P66C12
1P66D12
1P66E12
1P66F12
1P66G12
2P65A8
2P65B8
2P65F8
2P66A12
2P66C12
2P66D12
2P66E12
2P66F12
2P66G12
SEE ENGINE STARTING SYSTEM 80–10–00
1P1B00AL
2P1B00AL
SEE ENGINE STARTING SYSTEM (80–10–00) AND MAIN DISTRIBUTION BOX 24–50–22
1P28A20
2P28A20
GRD 2
2P46A20N
2P45A20
CR2
1P46A20N
GRD 1
CR1
1P45A20
RIGHT REVERSE CURRENT RELAY
276
K2
LEFT REVERSE CURRENT RELAY
276
K1
GRD 3
P19A20N
BUS TIE RELAY
279
K3
X2
X1
A2
A1
IND
APP
SW
GEN
BATT
RIGHT GENERATOR FAIL RELAY
278
K6
LEFT GENERATOR FAIL RELAY
278
K5
X2
X1
A1
A2
A3
2P74A22
2P28B20
2P45B20
2P1B00AL
2P215A16
2P58C8
2P58B8
2P58A8
1P58E12
2P58F12
1P58A8
1P58B8
1P58C8
F4
F5
F6
1P45B20
1P1B00AL
1P215A16
1P28B20
1P74A22
R. DC BUS
L. DC BUS
CB4
CB6
CB8
CB1
CB12
CB14
CB16
CB13
CB15
CB17
CB5
CB7
CB9
50
30
15
2P65A8
2P65B8
2P65F8
1H57A12
2H57A12
2P66D12
2P66E12
2P66C12
2P66F12
2P66A12
2P66G12
1P66A12
1P66E12
1P66C12
1P66F12
1P66D12
1P66G12
P10A0AL
P10B0AL
P10C0AL
1P65A8
1P65B8
1P65F8
2P1C16
1P1C16
1P15C22
1P78A22N
GRD 1
AN20
J1002
P1002
J1001
P1001
A
B
F
G
C
D
E
H
L
J
K
M
RESERVED FOR AIR COND'G
2P15B22
2P28A20
2P45C20
2P1D16
SEE WINDSHIELD HEATING SYSTEM
P18B20
1P45C20
1P1D16
1P28A20
1P15B22
RESERVED FOR AIR COND'G
POWER DISTRIBUTION AND GENERATOR CONTROL BOX
MOD 6/1651
C6N1002/57 AND
C6NF1352/2/A
ISSUE NO. 1

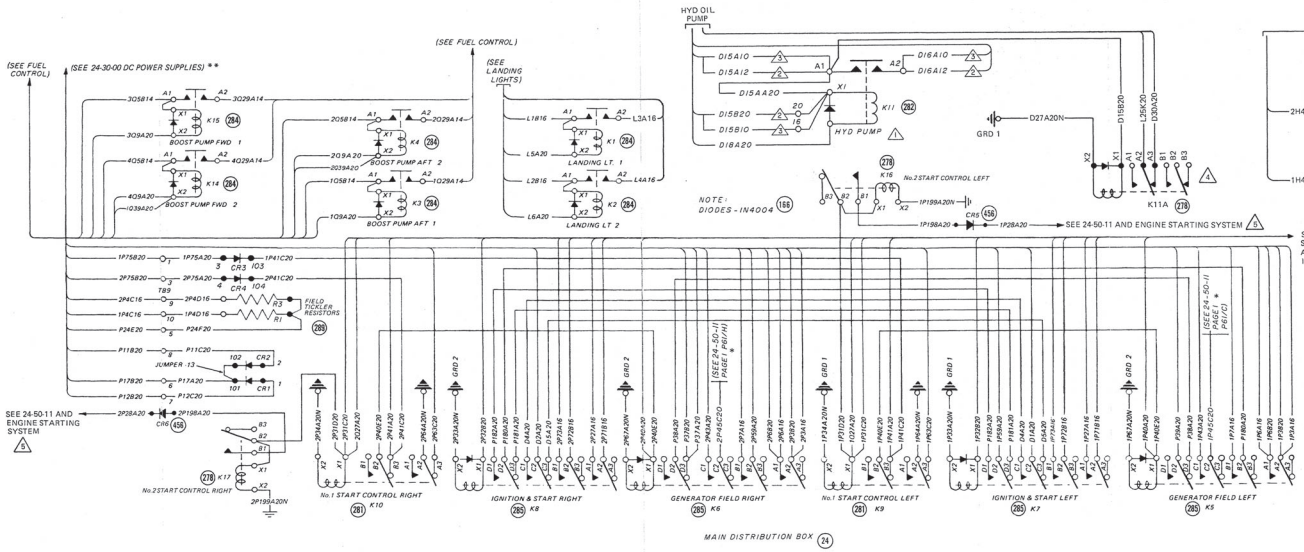

NOTES


1. S.O.O. MOD 6113
2. WIRE SIZES PRE MOD 6/1370
3. WIRE SIZES MOD 6/1370
4. MOD 6/1606
5. FOR AIRCRAFT WITH MOD 6/1651 INCORPORATED SEE 24-50-12 AND ENGINE STARTING SYSTEM
* FOR AIRCRAFT WITH MOD 6/1651 INCORPORATED SEE 24-50-12
** FOR AIRCRAFT WITH MOD 6/1651 INCORPORATED SEE 24-30-03


MAIN DISTRIBUTION BOX								
C6NF1012/2/M	ISSUE NO.	1	2	3	4			

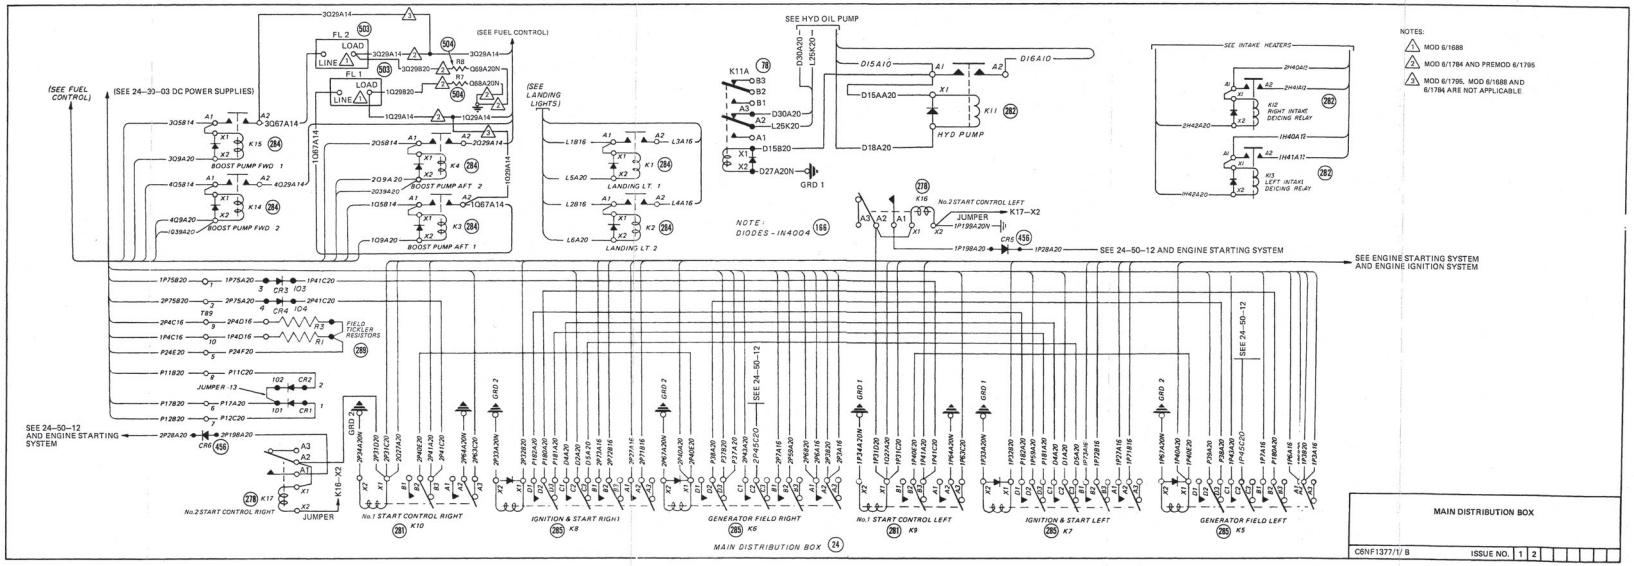

MAIN DISTRIBUTION BOX

C6NF1377/1/ B ISSUE NO. 1 2

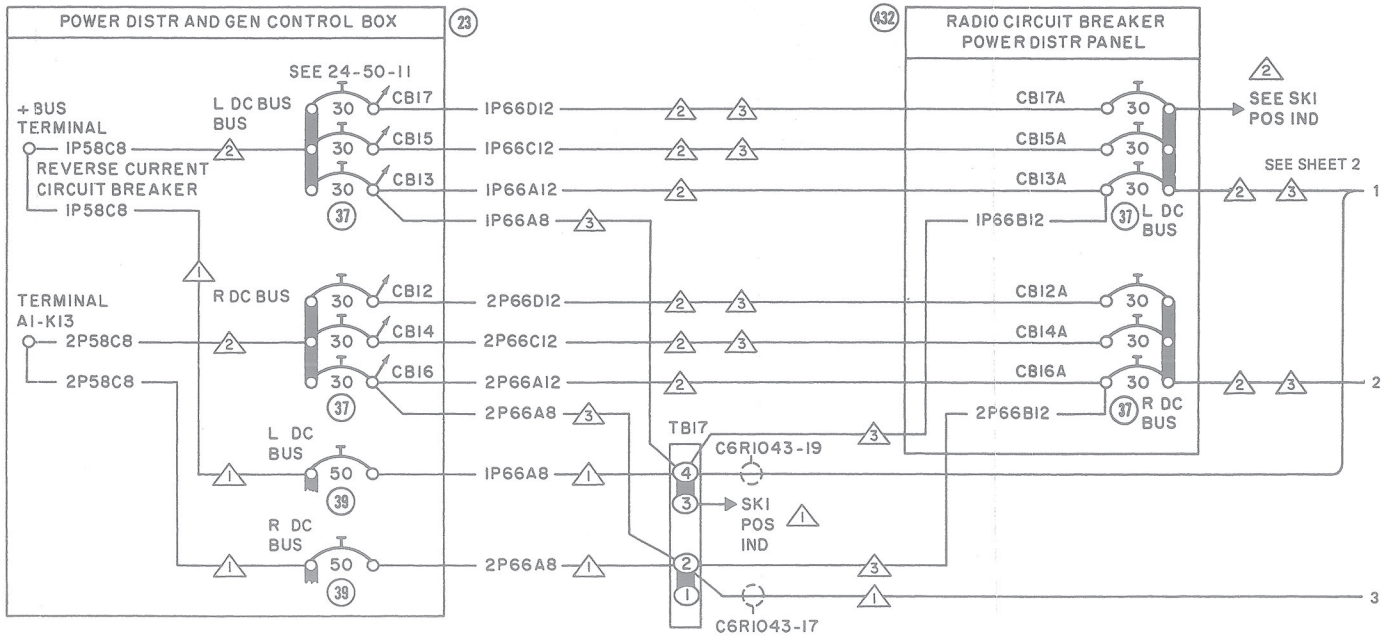


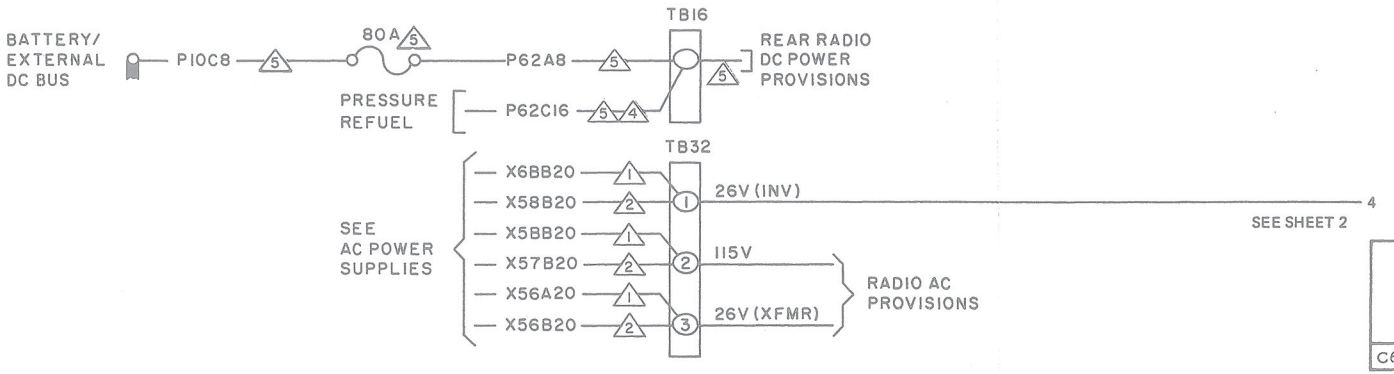

NOTES:
1. ⚠1 PRE MOD 6/1274
2. ⚠2 POST MOD 6/1274
3. ⚠3 RETROFIT MOD 6/1274
4. ⚠4 S.O.O. MOD 6111
5. ⚠5 PRE MOD 6/1390

RADIO POWER DISTRIBUTION SYSTEM
(SHEET 1)

C6N1002/46/A ISSUE NO. 1 2 3 4

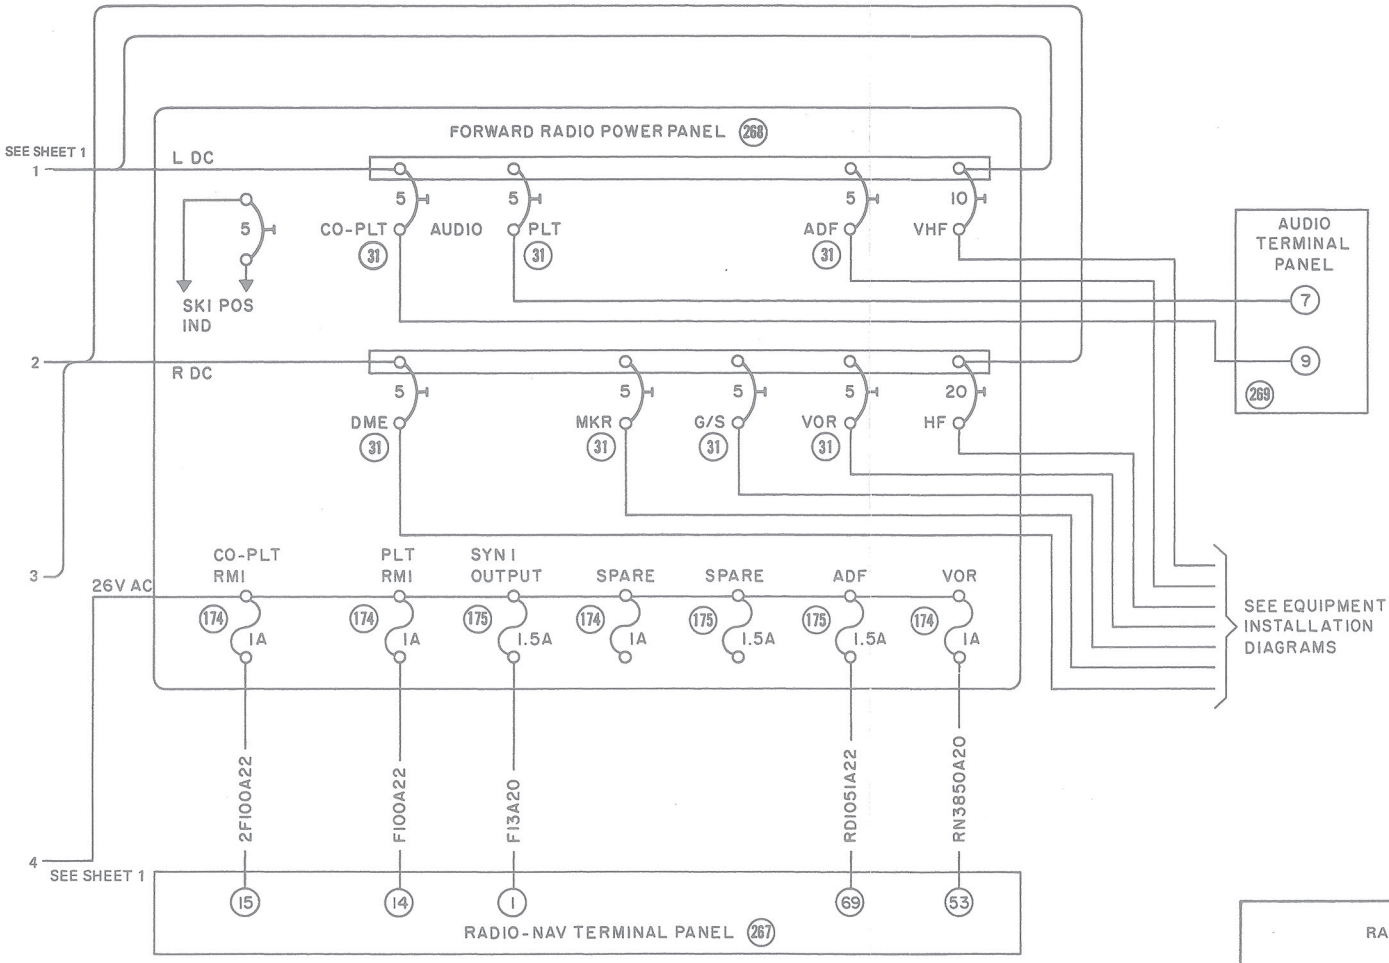

NOTES:

1. ⚠1 PRE MOD 6/1274
2. ⚠2 POST MOD 6/1274
3. ⚠3 RETROFIT MOD 6/1274
4. ⚠4 S.O.O. MOD 6111
5. ⚠5 PRE MOD 6/1390

RADIO POWER DISTRIBUTION SYSTEM (SHEET 2)									
C6N1002/46/A	ISSUE NO.	1	2	3	4				

LIST OF EFFECTIVE PAGES: CHAPTER 25: FURNISHINGS


Reference	Page	Date
Contents	1	May 7/82
25-30-01	1	May 7/82

DHC-6 TWIN OTTER SERIES 300
WIRING DIAGRAM MANUAL

CHAPTER 25 - FURNISHINGS

TABLE OF CONTENTS

Subject	Chapter Section Subject	Page
REFRESHMENT CABINET (S.O.O. 6175)	25-30-01	1

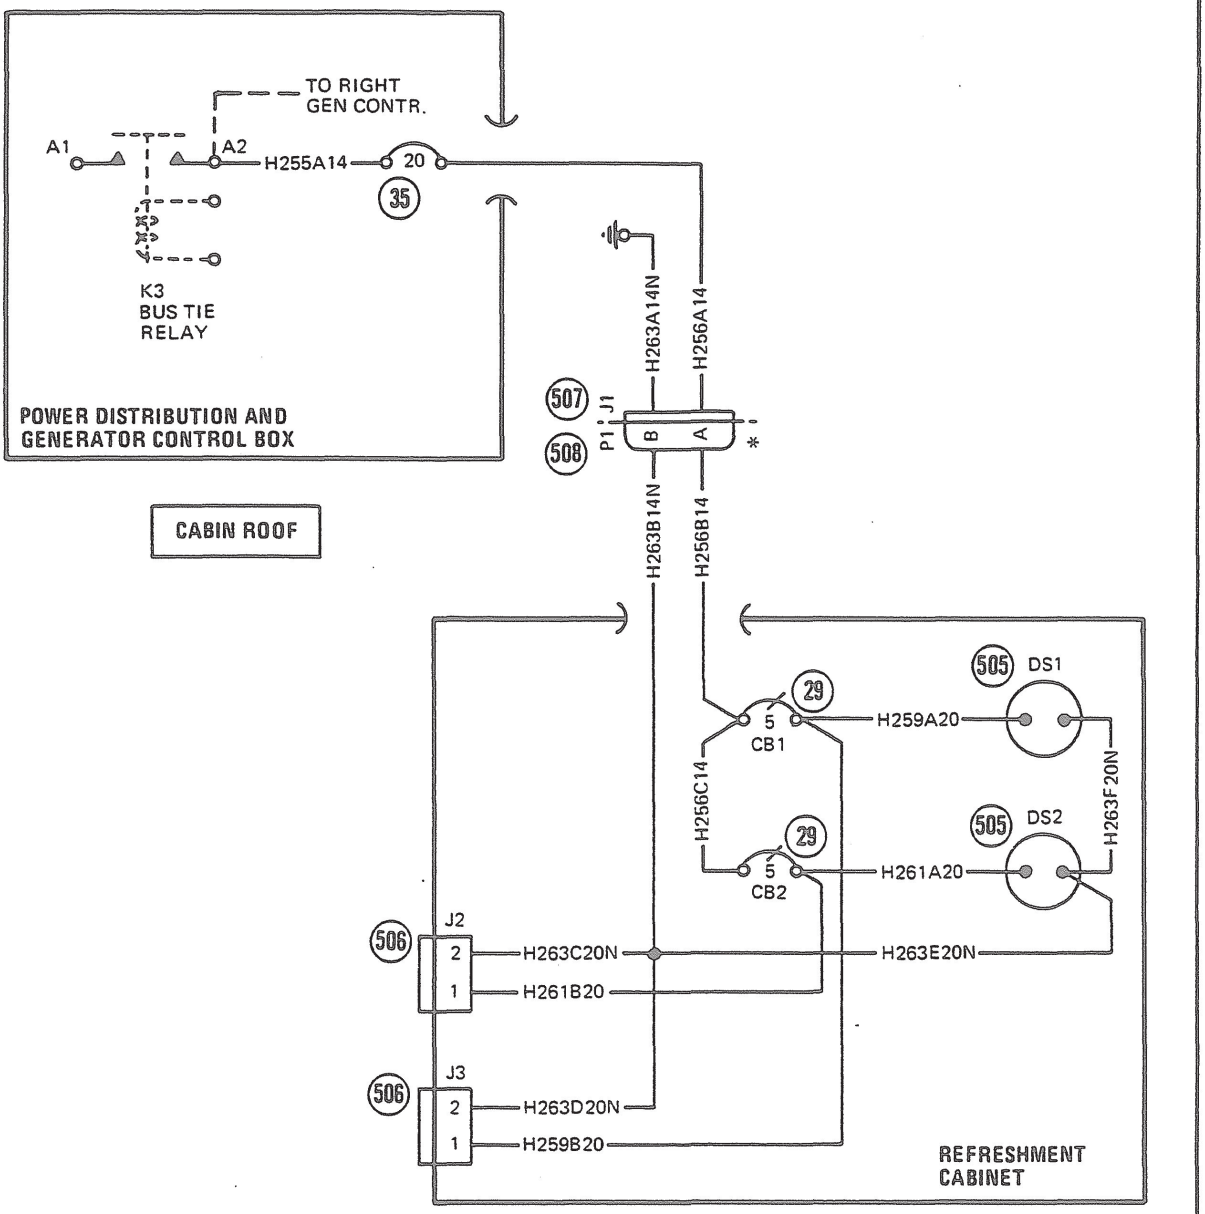

* LOCATION VARIES DEPENDING UPON AIRCRAFT CONFIGURATION. GENERAL LOCATION IS CABIN AREA

REFRESHMENT CABINET
S.O.O. 6175

C6Z2030/-/- ISSUE NO. 1

LIST OF EFFECTIVE PAGES: CHAPTER 26: FIRE PROTECTION

Reference	Page	Date
Contents	1	Mar 1/69
26-10-00	*1	Oct 18/73
26-20-00	1	Jul 1/69


The asterisk (*) indicates pages revised, added or deleted by current revision.

DHC-6 TWIN OTTER SERIES 300
WIRING DIAGRAM MANUAL

CHAPTER 26 - FIRE PROTECTION

TABLE OF CONTENTS

Subject	Chapter Section Subject	Page
DETECTION	26-10-00	
Engine Fire Detection System		1
EXTINGUISHING	26-20-00	
Engine Fire Extinguishing System		1

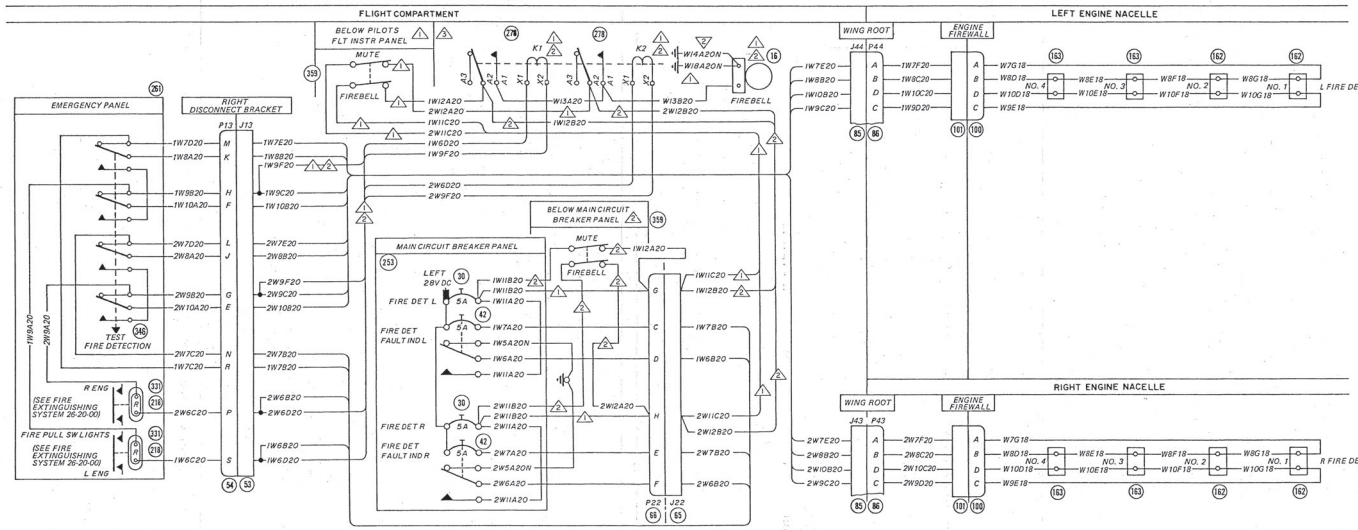


NOTES:

1. ⚠1 POST MOD 6/1277 OR
2. ⚠2 RETROFIT MOD 6/1277 OR MOD S.O.O. 6123
3. ⚠3 SWITCH ON FUSE PANEL STRUCTURE FOR EARLY RETROFIT WITH WIRE ROUTING AS ⚠1

ENGINE FIRE DETECTION SYSTEM

C6N1002/43/- OR C6N1002/13/A AND C6Z1585/D

ISSUE NO. 1 2 3 4

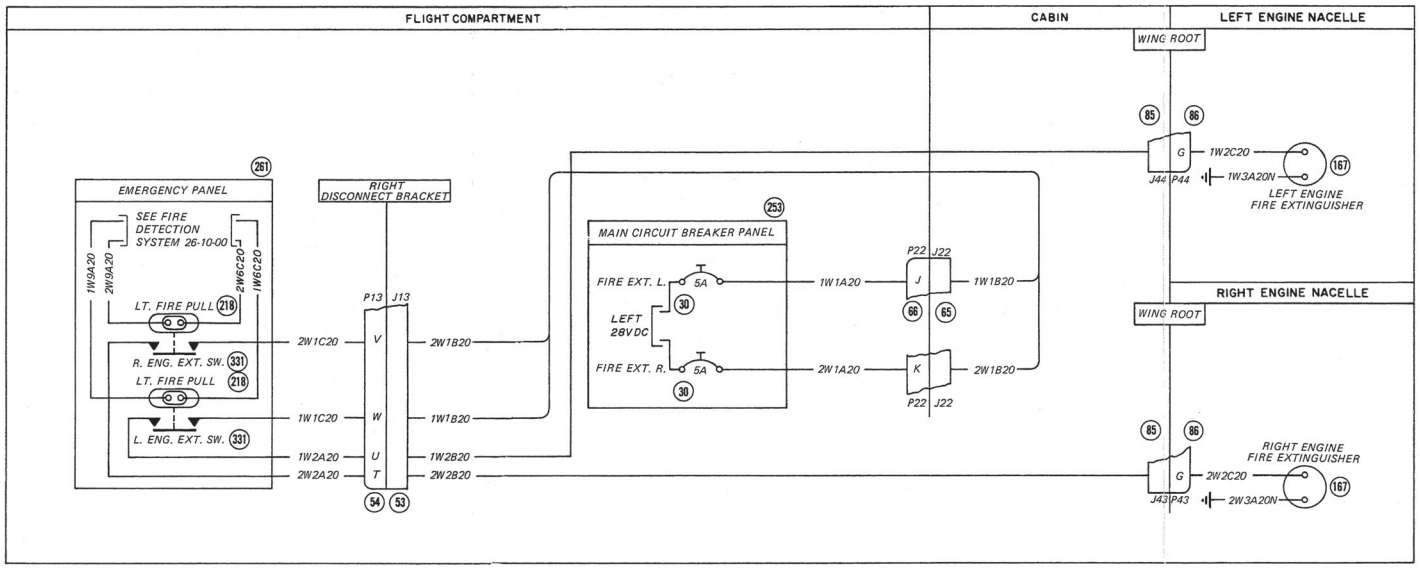

ENGINE FIRE EXTINGUISHING

C6N1002/13/- ISSUE NO. 1 2

LIST OF EFFECTIVE PAGES: CHAPTER 27: FLIGHT CONTROLS

Reference	Page	Date
Contents	1	Mar 1/69
27-13-00	1	Mar 1/69
27-38-00	*1	Mar 10/76


The asterisk (*) indicates pages revised, added or deleted by current revision.

DHC-6 TWIN OTTER SERIES 300
WIRING DIAGRAM MANUAL

CHAPTER 27 - FLIGHT CONTROLS


TABLE OF CONTENTS

Subject	Chapter Section Subject	Page
AILERON AND TAB	27-10-00	
Aileron Trim System	27-13-00	1
ELEVATOR AND TAB	27-30-00	
Stall Warning System	27-38-00	1

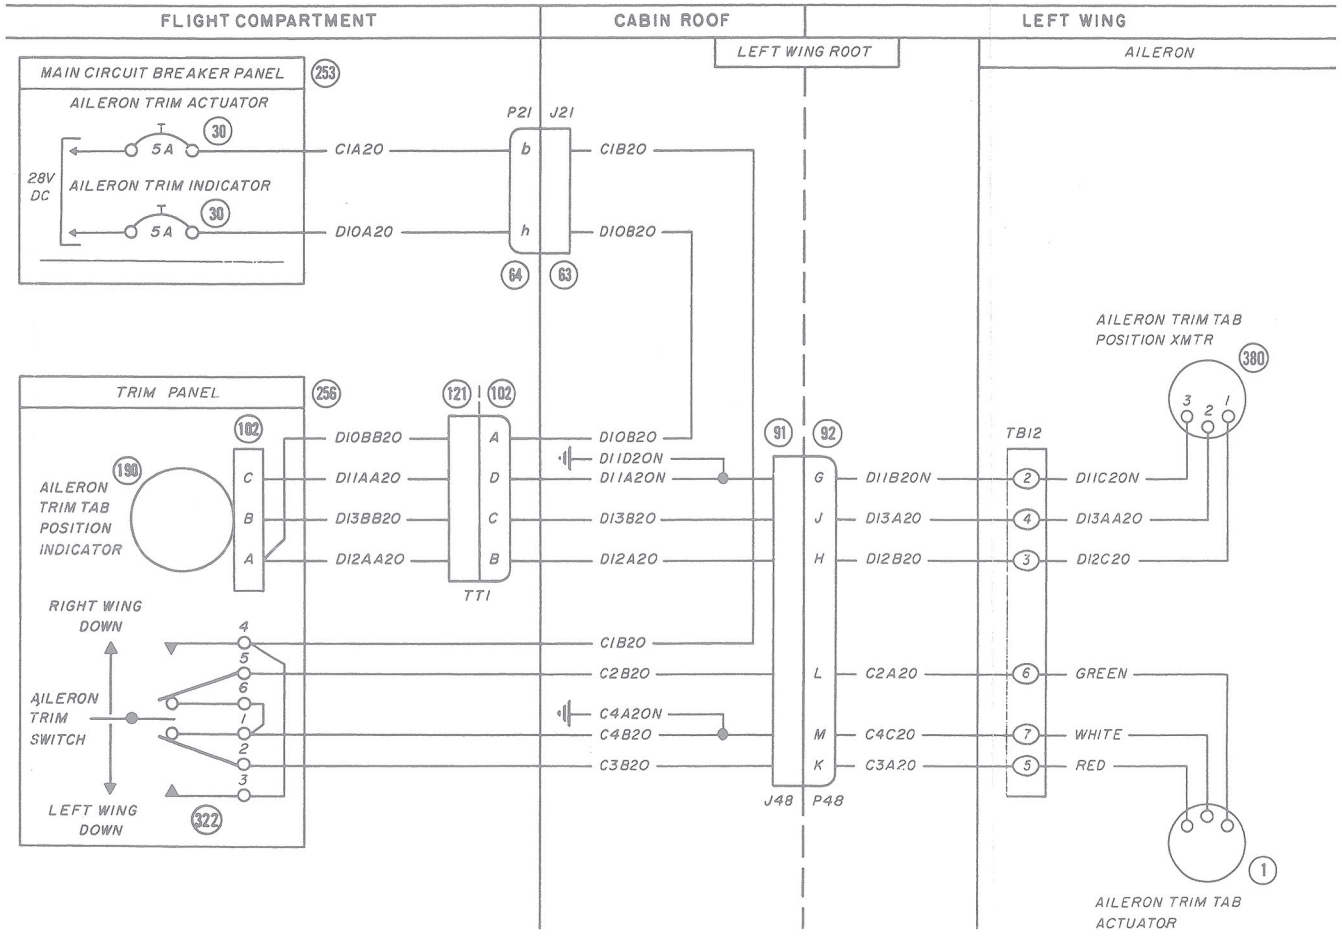

AILERON TRIM SYSTEM

C6N1002/17/ ISSUE NO. 1

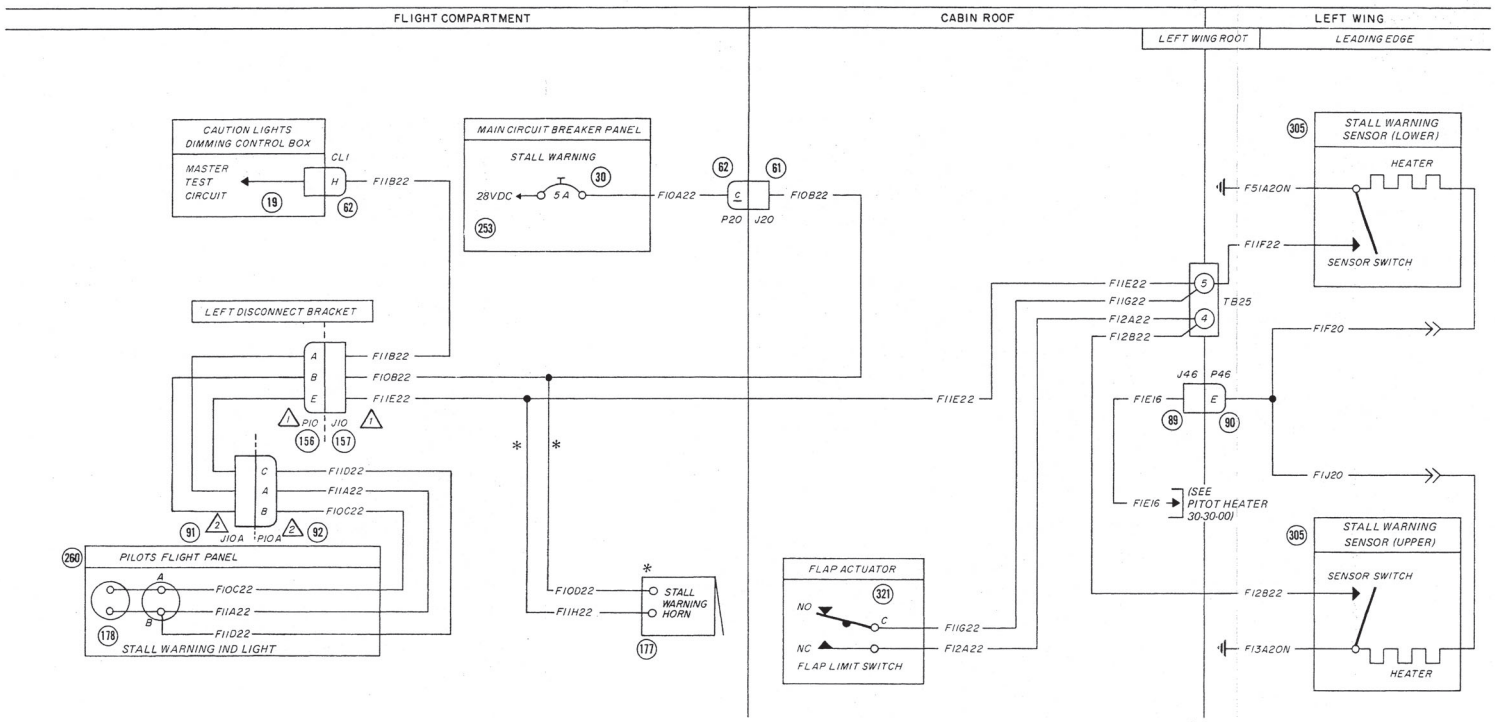

NOTES:
1. * CUSTOMER OPTION MOD S.O.O. 6155 OR MOD 6/1277
2. ⚠1 PRE MOD 6/1475
3. ⚠2 MOD 6/1475

STALL WARNING SYSTEM

C6N1002/16/B AND ISSUE NO. 1 2 3 4 5
*C6Z1585/E

LIST OF EFFECTIVE PAGES: CHAPTER 28: FUEL

Reference	Page	Date
Contents	*1	May 7/82
28-00-01	1	Oct 18/73
	2	Oct 18/73
28-00-02	*1	May 7/82
	*2	May 7/82
	*3	May 7/82
28-20-00	*1	May 7/82
	2	Mar 1/69
28-25-00	1	Jun 8/71
28-42-00	1	Mar 10/76
28-44-00	1	Mar 10/76
28-48-00	1	Mar 10/76


The asterisk (*) indicates pages revised, added or deleted by current revision.

DHC-6 TWIN OTTER SERIES 300
WIRING DIAGRAM MANUAL

CHAPTER 28 - FUEL

TABLE OF CONTENTS

Subject	Chapter Section Subject	Page
GENERAL	28-00-01	
Wing Fuel Tank System (Mod S.O.O. 6095, Pre Mod 6/1421)		1
Wing Fuel Tank System (Mod S.O.O. 6095, Post Mod 6/1421)		2
Wing Fuel Tank System	28-00-02	
(S.O.O. 6095 to E.O. 68893) - Sheet 1		1
Wing Fuel Tank System		
(S.O.O. 6095 to E.O. 68893) - Sheet 2		2
Wing Fuel Tank System		
(S.O.O. 6095 to E.O. 68893) - Sheet 3		3
DISTRIBUTION	28-20-00	
Fuel Control System - Sheet 1		1
Fuel Control System - Sheet 2		2
Pressure Refueling System (Mod S.O.O. 6111)	28-25-00	1
INDICATING	28-40-00	
Fuel Quantity Indicating System	28-42-00	1
Fuel Low Level Warning System	28-44-00	1
Fuel Crossfeed Valve Position Indicator (Mod S.O.O. 6035)	28-48-00	1

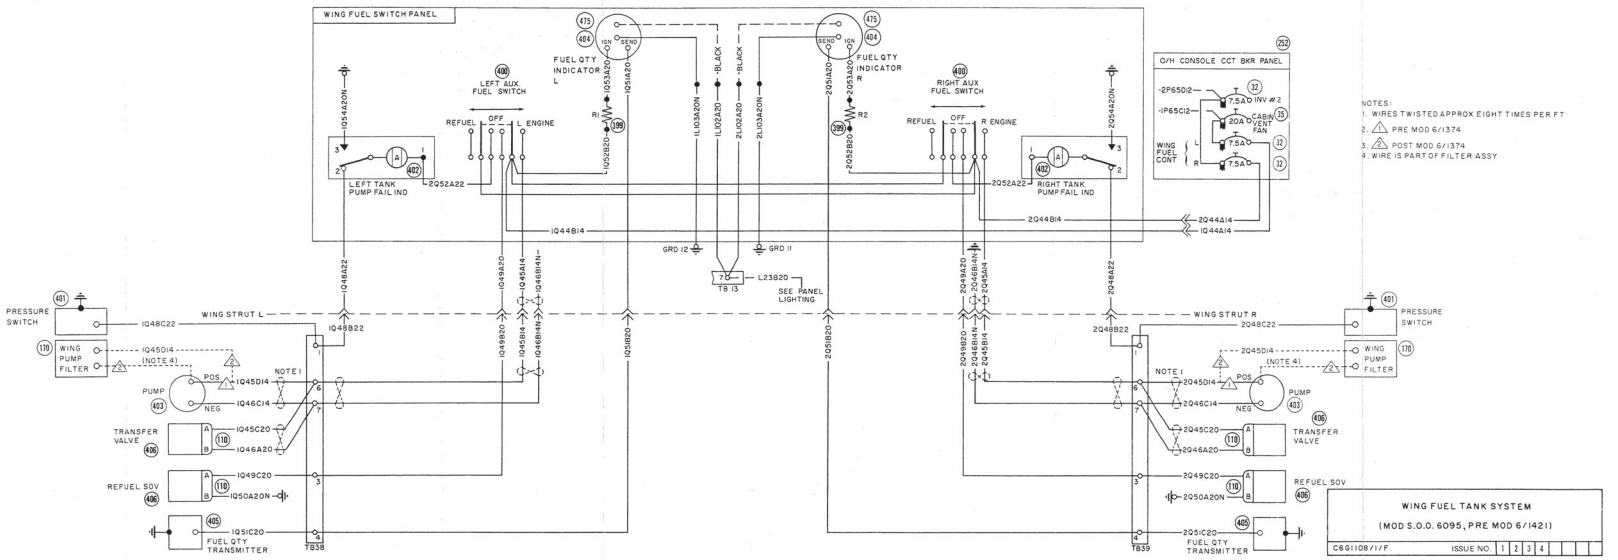


NOTES:
1. WIRES TWISTED APPROX EIGHT TIMES PER FT
2. △1 PRE MOD 6/1374
3. △2 POST MOD 6/1374
4. WIRE IS PART OF FILTER ASSY

WING FUEL TANK SYSTEM

(MOD S.O.O. 6095, PRE MOD 6/1421)

C6G1108/1/F — ISSUE NO. 1 2 3 4

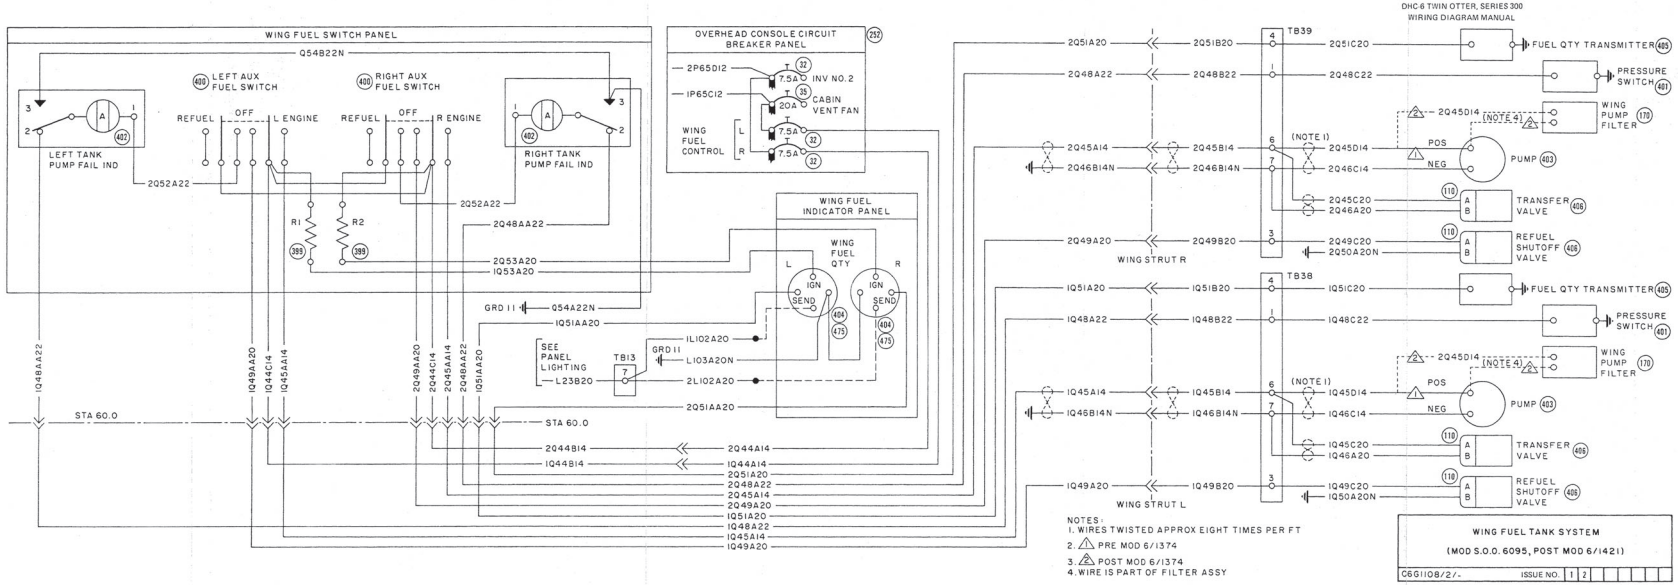



NOTES:
1. WIRES TWISTED APPROX EIGHT TIMES PER FT
2. △1 PRE MOD 6/1374
3. △2 POST MOD 6/1374
4. WIRE IS PART OF FILTER ASSY

WING FUEL TANK SYSTEM

(MOD S.O.O. 6095, POST MOD 6/1421)

C6G1108/2/-. ISSUE NO. 1 2

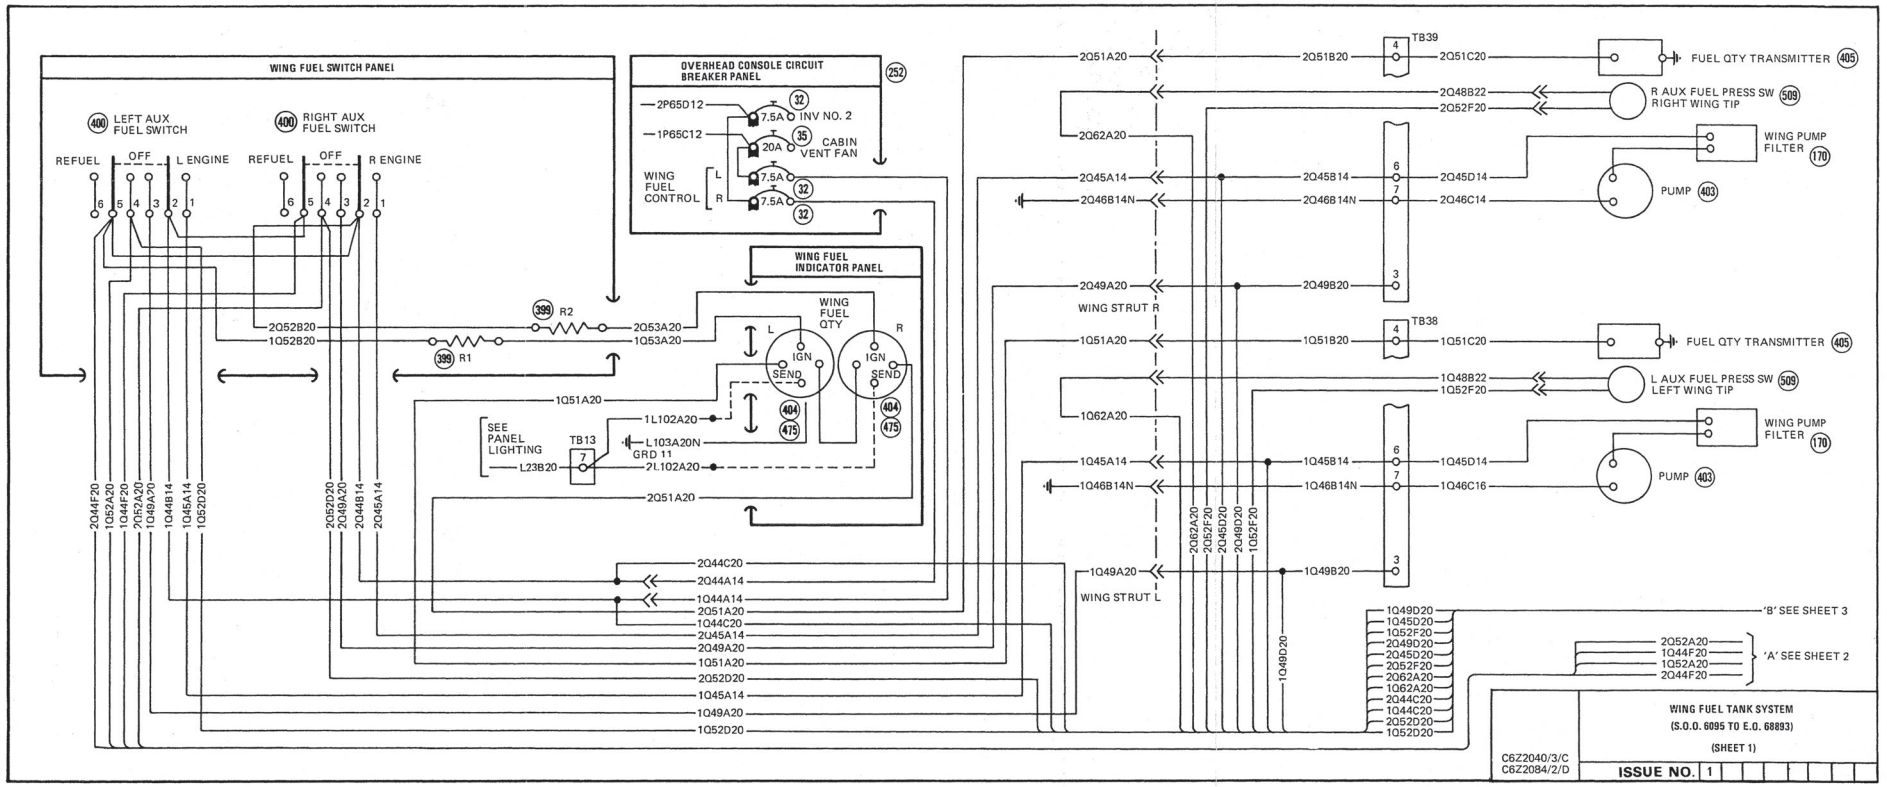

WING FUEL SWITCH PANEL
(400) LEFT AUX FUEL SWITCH
(400) RIGHT AUX FUEL SWITCH
REFUEL
OFF
L ENGINE
R ENGINE
OVERHEAD CONSOLE CIRCUIT BREAKER PANEL
(252)
2P65D12
1P65C12
7.5A
INV NO. 2
20A
CABIN VENT FAN
WING FUEL CONTROL
WING FUEL INDICATOR PANEL
WING FUEL QTY
IGN
SEND
(399) R2
(399) R1
SEE PANEL LIGHTING
TB13
L23B20
L103A20N
GRD 11
2L102A20
1L102A20
(404)
(475)
TB39
TB38
FUEL QTY TRANSMITTER (405)
R AUX FUEL PRESS SW (509)
RIGHT WING TIP
L AUX FUEL PRESS SW (509)
LEFT WING TIP
WING PUMP FILTER (170)
PUMP (403)
WING STRUT R
WING STRUT L
'B' SEE SHEET 3
'A' SEE SHEET 2
C6Z2040/3/C
C6Z2084/2/D
WING FUEL TANK SYSTEM
(S.O.O. 6095 TO E.O. 68893)
(SHEET 1)
ISSUE NO. 1

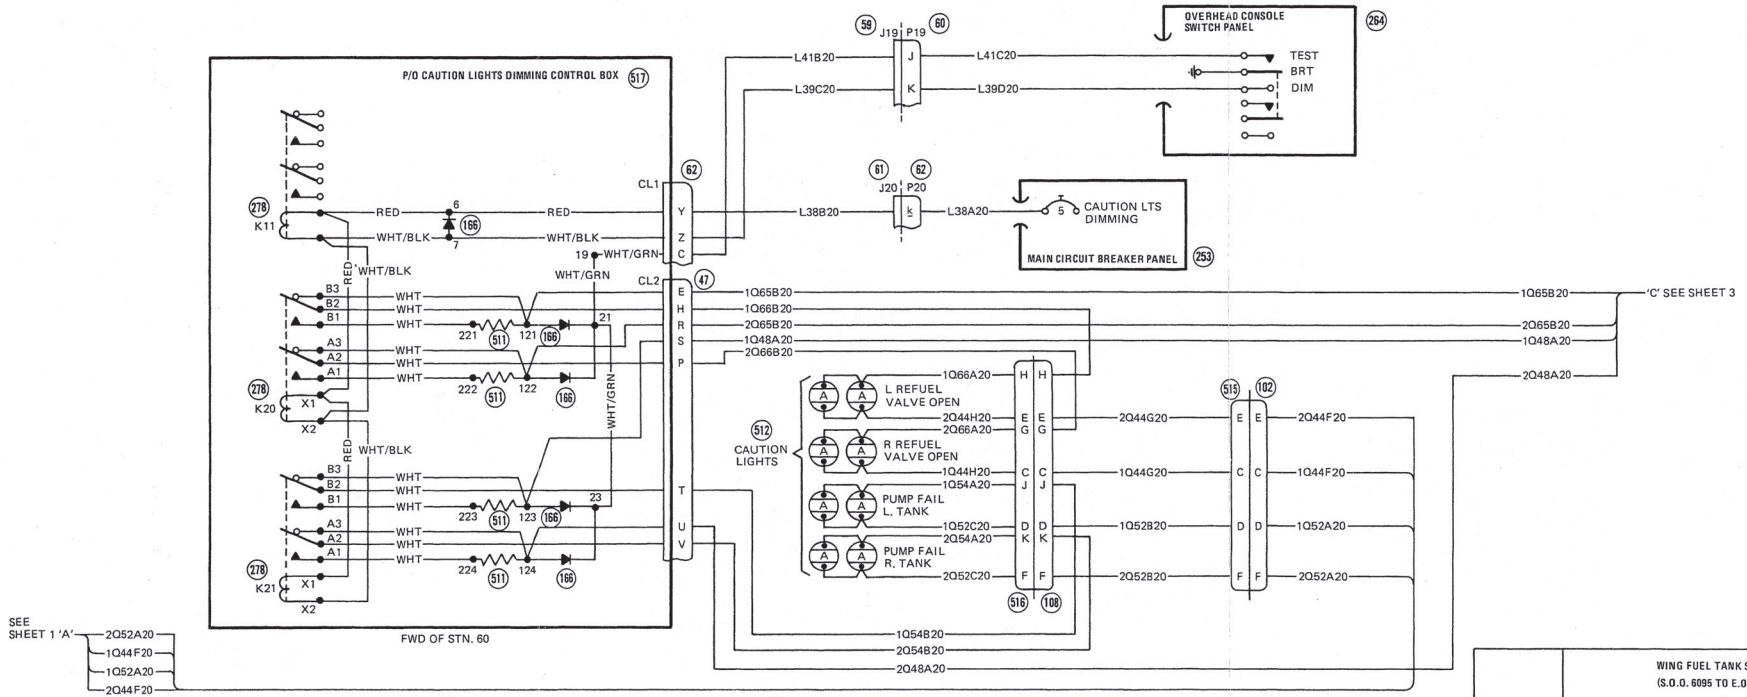

C6Z2040/3/C
C6Z2084/2/D

WING FUEL TANK SYSTEM
(S.O.O. 6095 TO E.O. 68893)
(SHEET 2)

ISSUE NO. 1

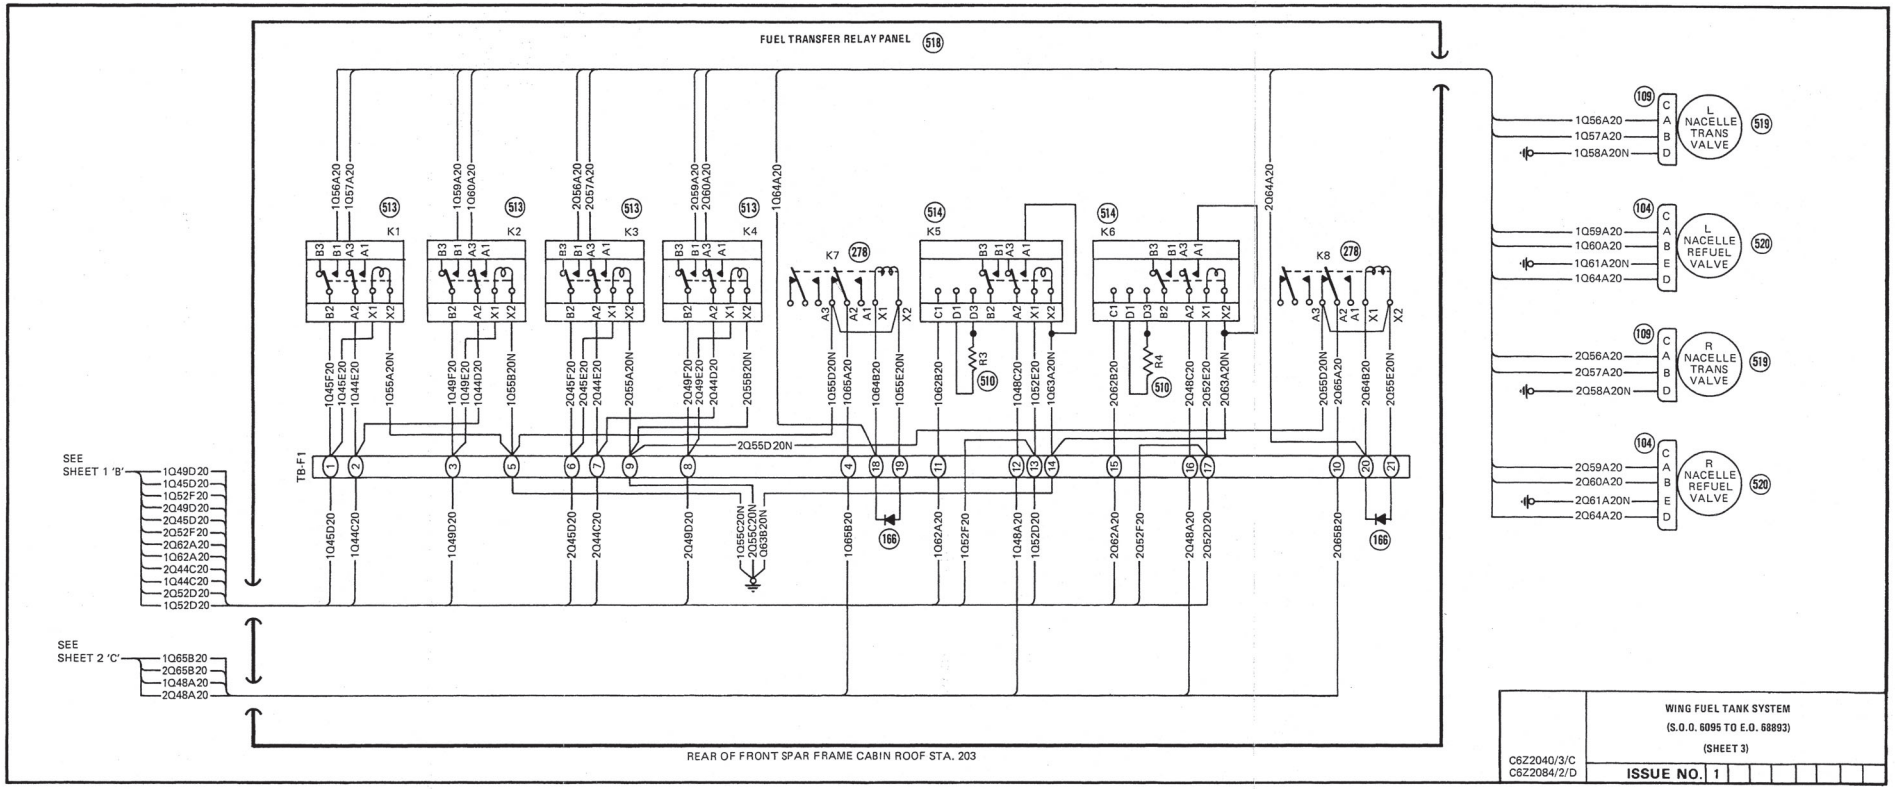

WING FUEL TANK SYSTEM
(S.O.O. 6095 TO E.O. 68893)
(SHEET 3)

C6Z2040/3/C
C6Z2084/2/D

ISSUE NO. 1

VIKING – Temporary Revision

PSM NO.: 1–63–2W **AIRCRAFT:** DHC–6 **SERIES:** 300

PUBLICATION: WIRING DIAGRAM MANUAL **TEMPORARY REVISION NO.:** W22

Insert in 28-20-00, before Page 1

FUEL CONTROL SYSTEM


THIS TEMPORARY REVISION SUPERSEDES TR NO. W10

REASON FOR ISSUE:
To introduce Mod 6/2464, Fuel Pressure Switch Replacement.

ACTION:
In PSM 1–63–2W, Section 28-20-00, remove the existing Temporary Revision (TR W10) and replace with new Temporary Revision (TR W22).


RECORDING INSTRUCTIONS:
Record this Temporary Revision No. and the relevant information in the appropriate columns of the TEMPORARY REVISION INDEX provided at the front of the manual.

This Page Intentionally Left Blank

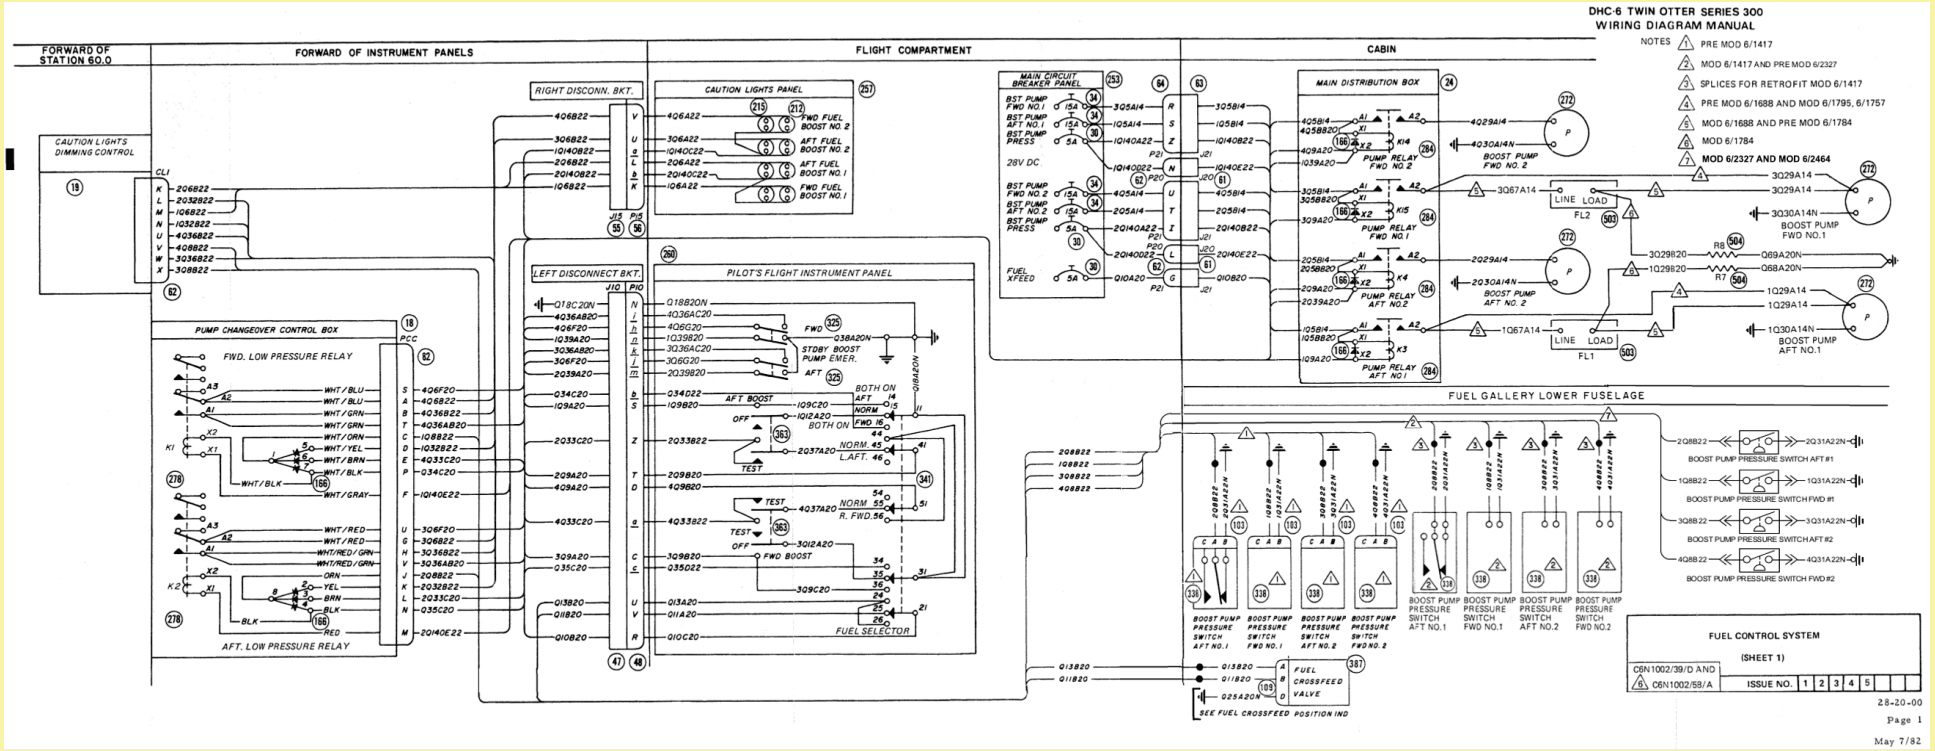
DHC-6 TWIN OTTER SERIES 300
WIRING DIAGRAM MANUAL
FORWARD OF STATION 60.0
FORWARD OF INSTRUMENT PANELS
FLIGHT COMPARTMENT
CABIN
CAUTION LIGHTS DIMMING CONTROL
RIGHT DISCONN. BKT.
CAUTION LIGHTS PANEL
MAIN CIRCUIT BREAKER PANEL
MAIN DISTRIBUTION BOX
PUMP CHANGEOVER CONTROL BOX
FWD. LOW PRESSURE RELAY
AFT. LOW PRESSURE RELAY
LEFT DISCONNECT BKT.
PILOT'S FLIGHT INSTRUMENT PANEL
FUEL SELECTOR
FUEL GALLERY LOWER FUSELAGE
BOOST PUMP PRESSURE SWITCH AFT NO.1
BOOST PUMP PRESSURE SWITCH FWD NO.1
BOOST PUMP PRESSURE SWITCH AFT NO.2
BOOST PUMP PRESSURE SWITCH FWD NO.2
FUEL CROSSFEED VALVE
SEE FUEL CROSSFEED POSITION IND
NOTES
1 PRE MOD 6/1417
2 MOD 6/1417 AND PRE MOD 6/2327
3 SPLICES FOR RETROFIT MOD 6/1417
4 PRE MOD 6/1688 AND MOD 6/1795, 6/1757
5 MOD 6/1688 AND PRE MOD 6/1784
6 MOD 6/1784
7 MOD 6/2327 AND MOD 6/2464
FUEL CONTROL SYSTEM
(SHEET 1)
C6N1002/39/D AND C6N1002/58/A
ISSUE NO. 1 2 3 4 5
28-20-00
Page 1
May 7/82

This Page Intentionally Left Blank


NOTE: Please see the TEMPORARY REVISION that revises this page.

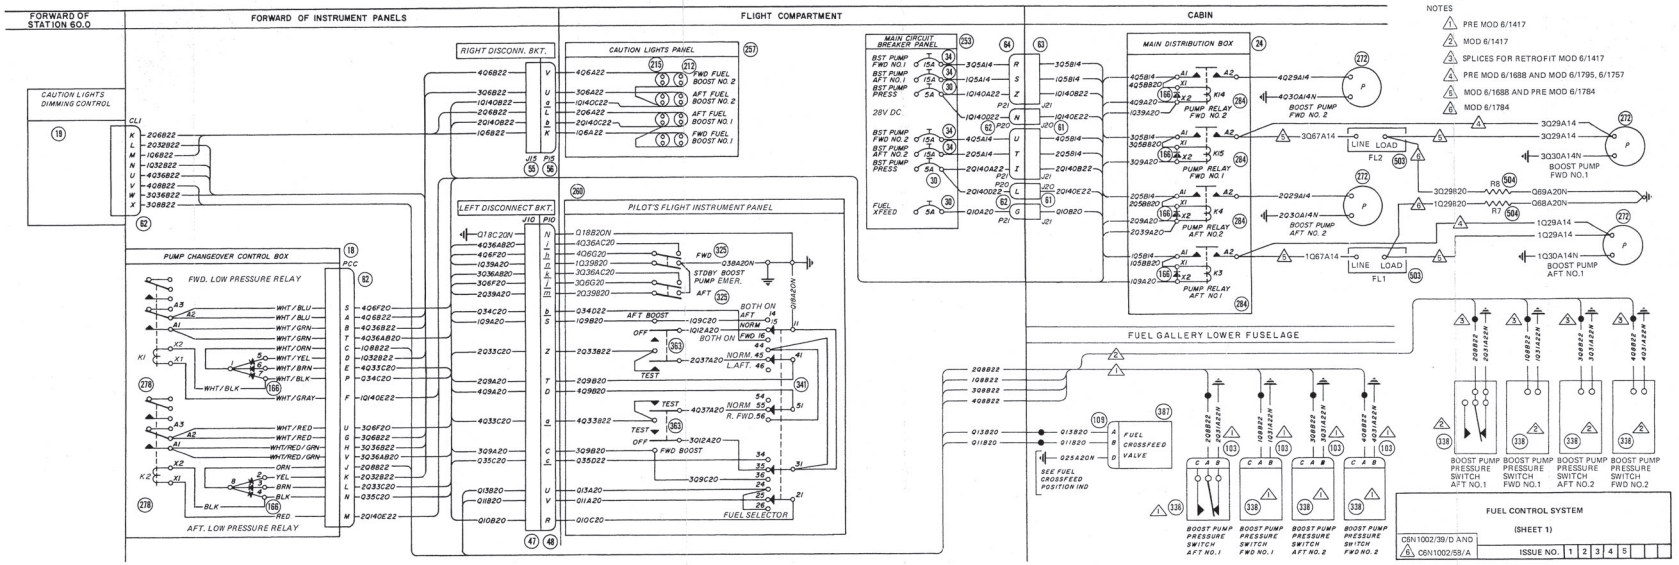

FUEL CONTROL SYSTEM
(SHEET 1)

C6N1002/39/D AND
6 C6N1002/58/A

ISSUE NO. 1 2 3 4 5

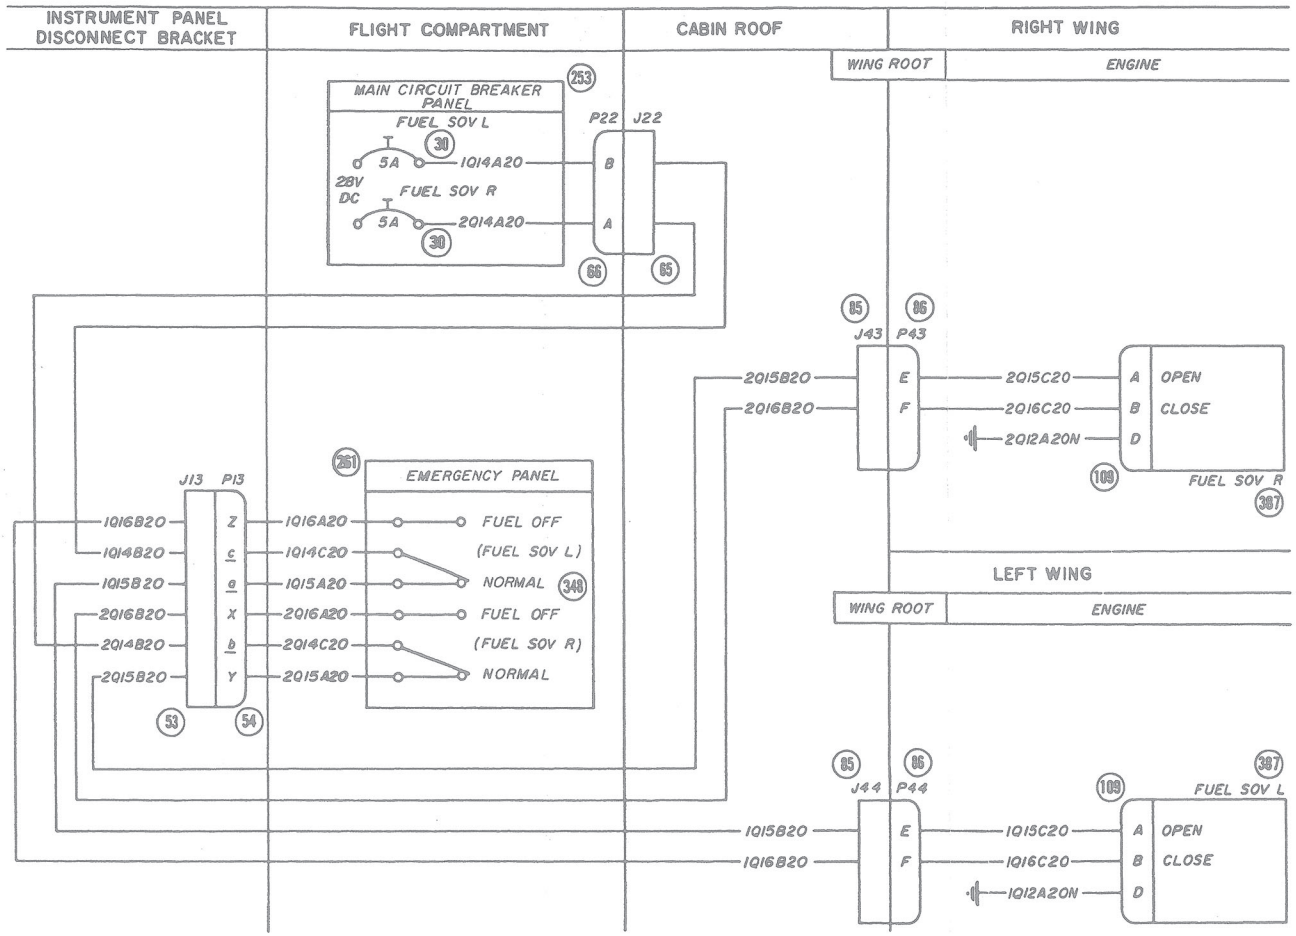

FUEL CONTROL SYSTEM - SHEET 2

C6N1002/12 ISSUE NO. 1