



PETG DOME COVER INSTALLATION MANUAL

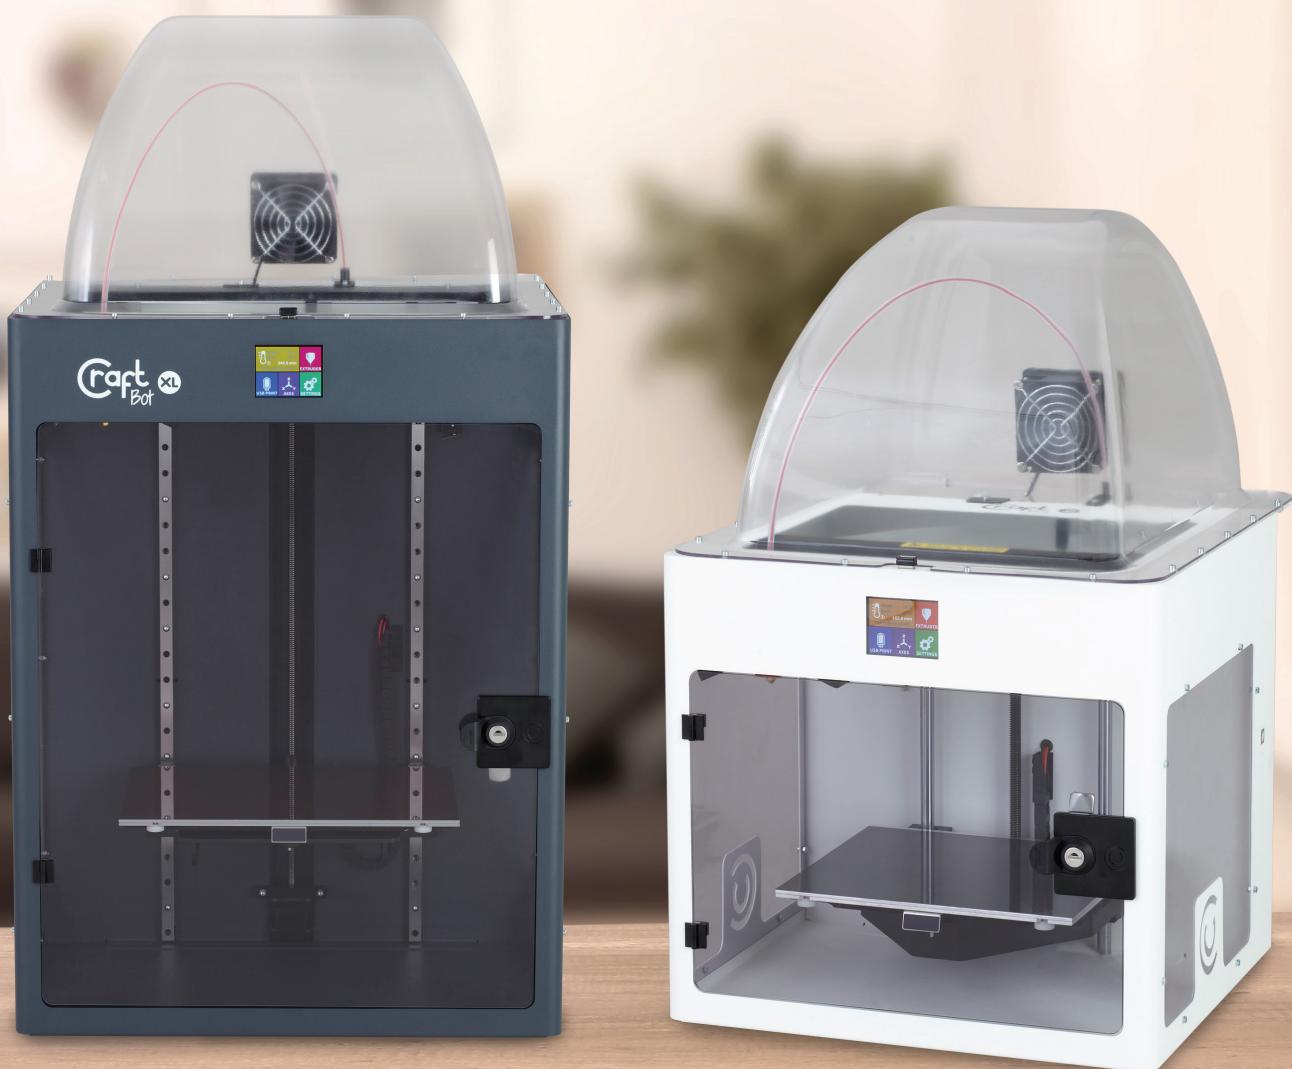


Craft
Unique

HARDWARE

1. First, unplug the machine. Then, carefully remove the rear panel of the printer, using care with the case fan cable (red-black-yellow). Place the dome cover on top of the machine, but do not screw it together yet.

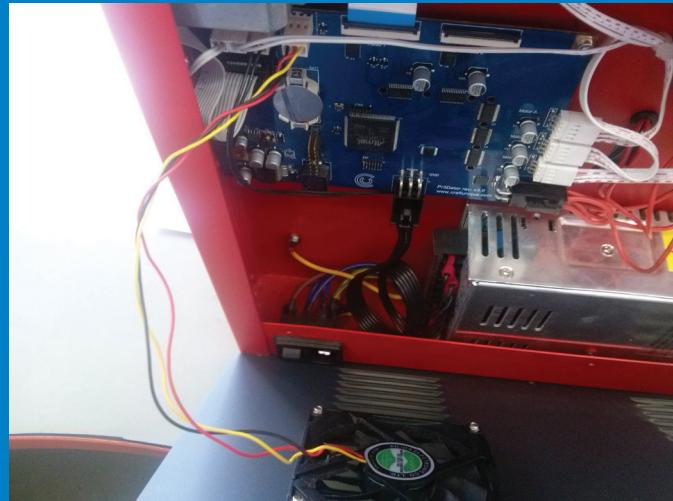

2. The next step is to disconnect the case fan.

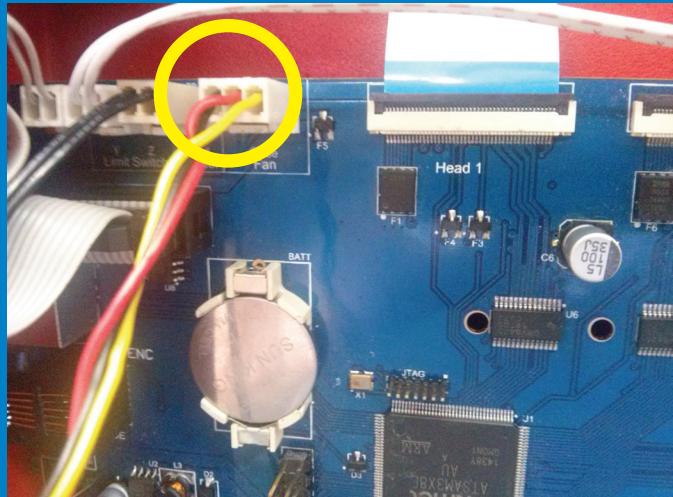


3. Connect the appropriate end of the "Y" wire of the dome cover fan to the case fan socket.



4. After that, connect the case fan connector to the other end of the "Y" wire.



- Finally, screw in the rear panel and the dome cover. The correct location of the filament guide tube and the fan wiring are shown in the following figures.

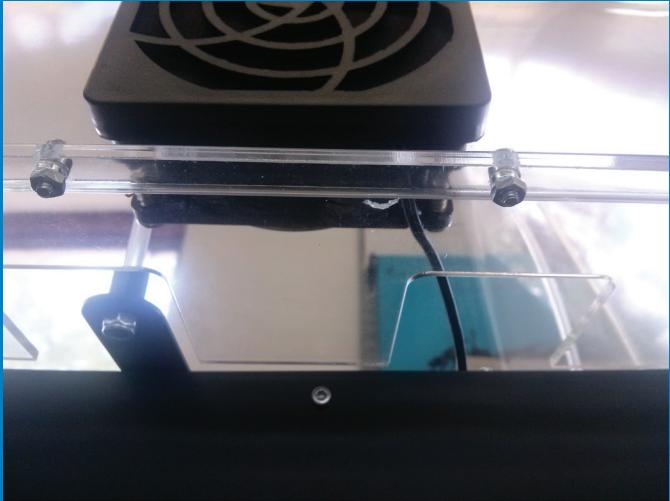

FIRMWARE SETTINGS

- In the temperature setting menu, by pressing the ☁ icon, the dome cover settings menu will be displayed.
- Here, with the ON / OFF button, you can enable or disable the operation of the dome fan. This feature setting will not change when the printer is turned off and on.

