





11、前舱线束

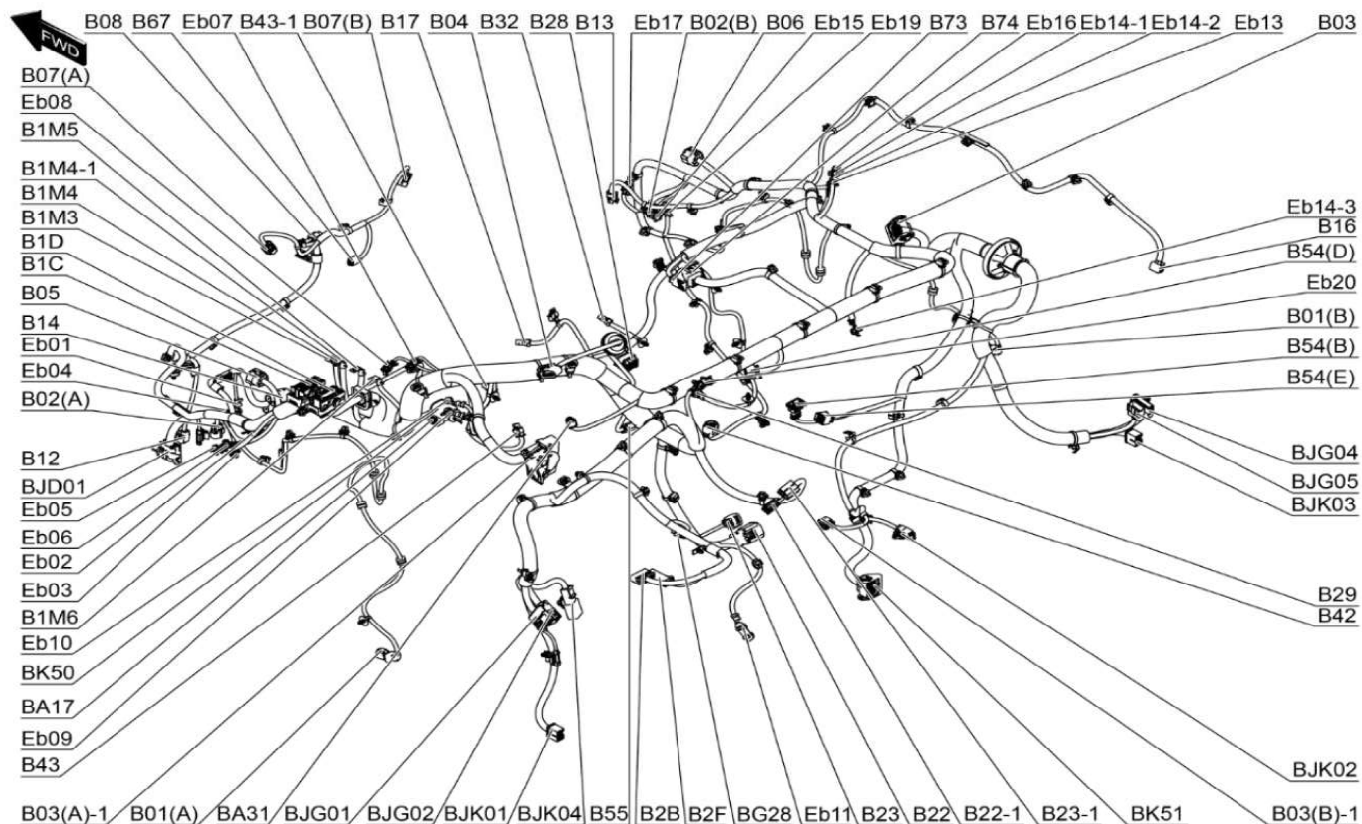


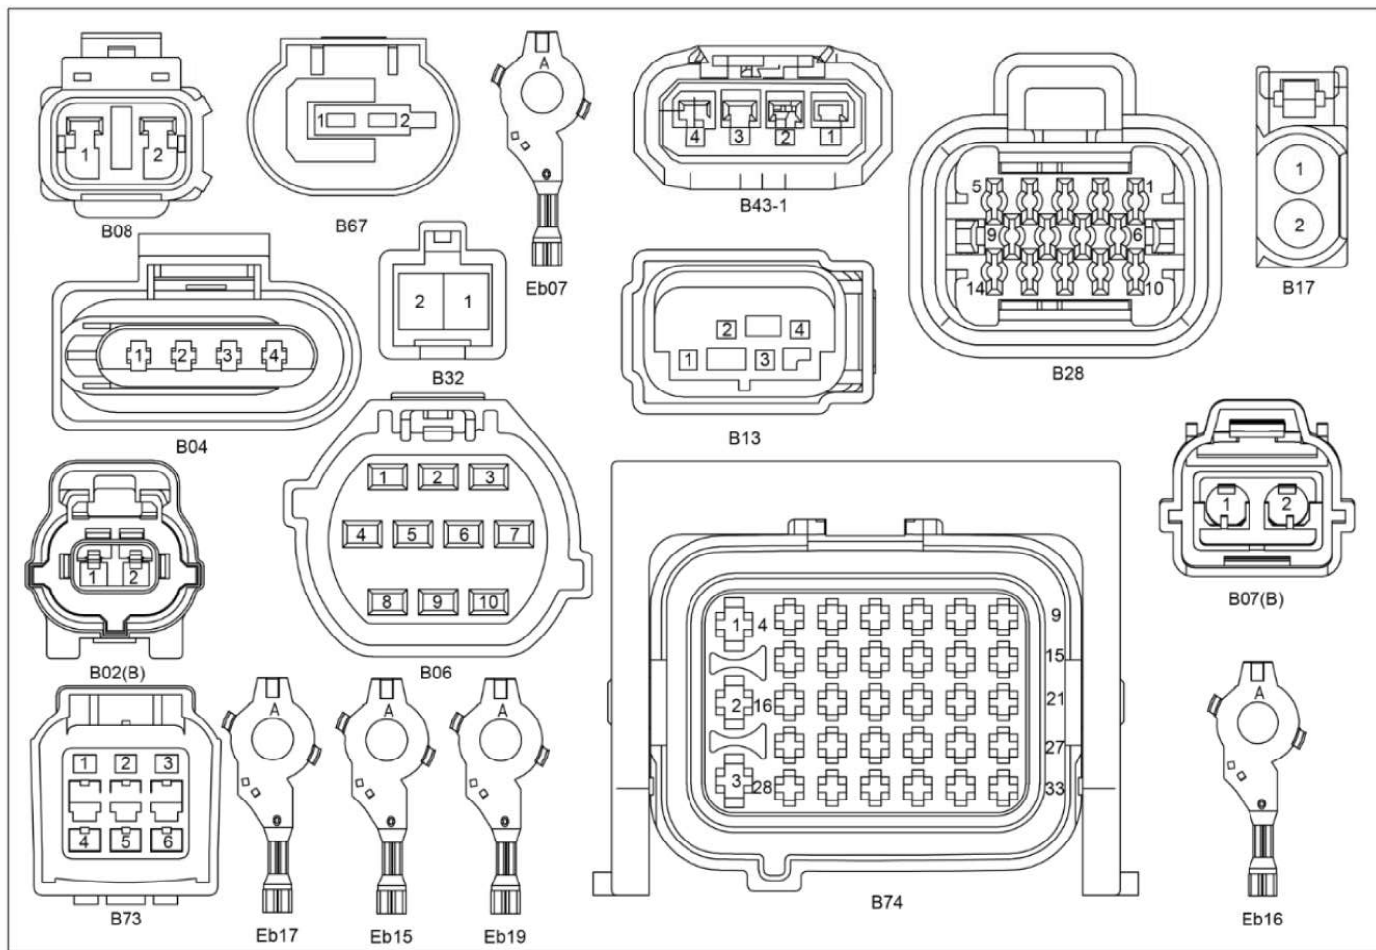

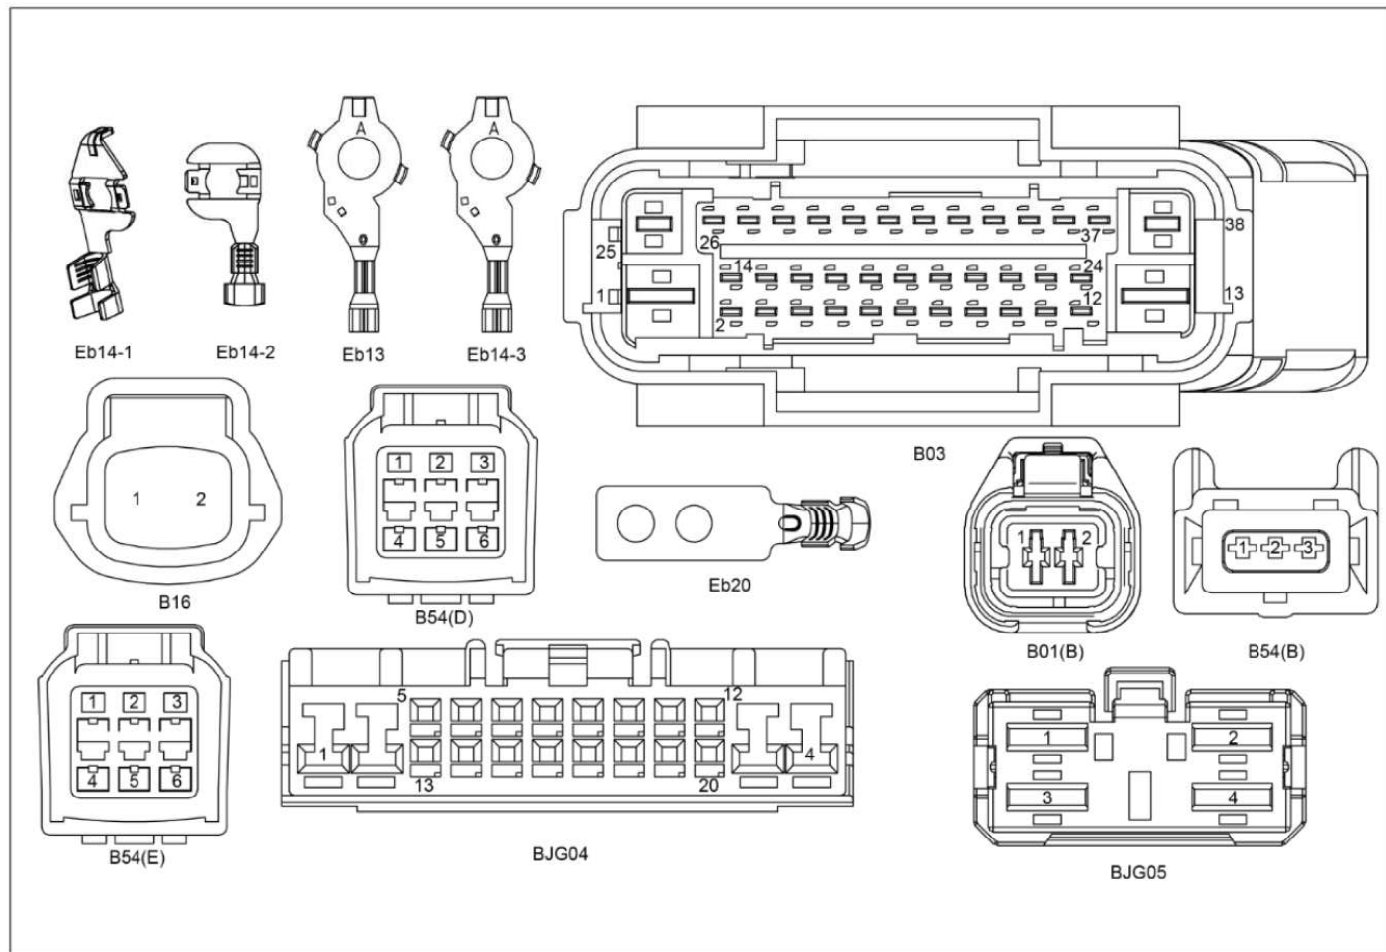


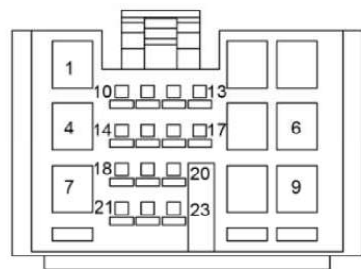


BJK03

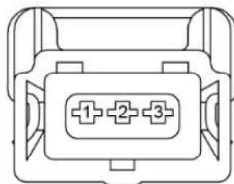


B29

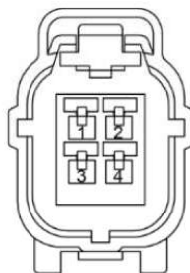


B42

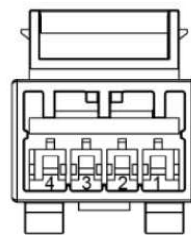


BJK02

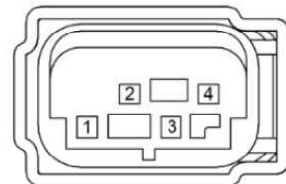


B03(B)-1

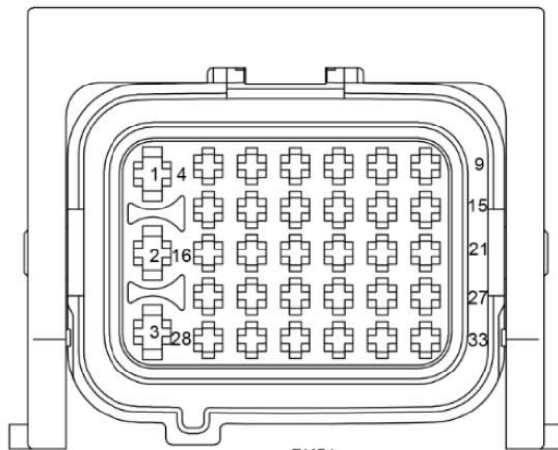


BK51

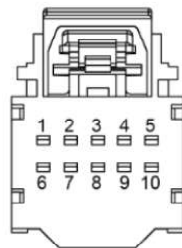


B23-1

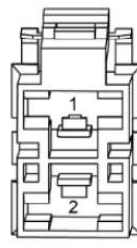

B22-1

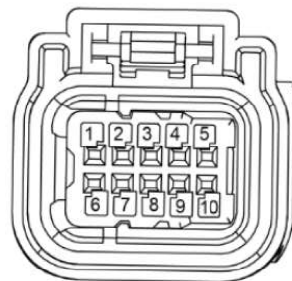


B23

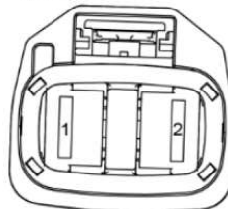



B22



Eb11

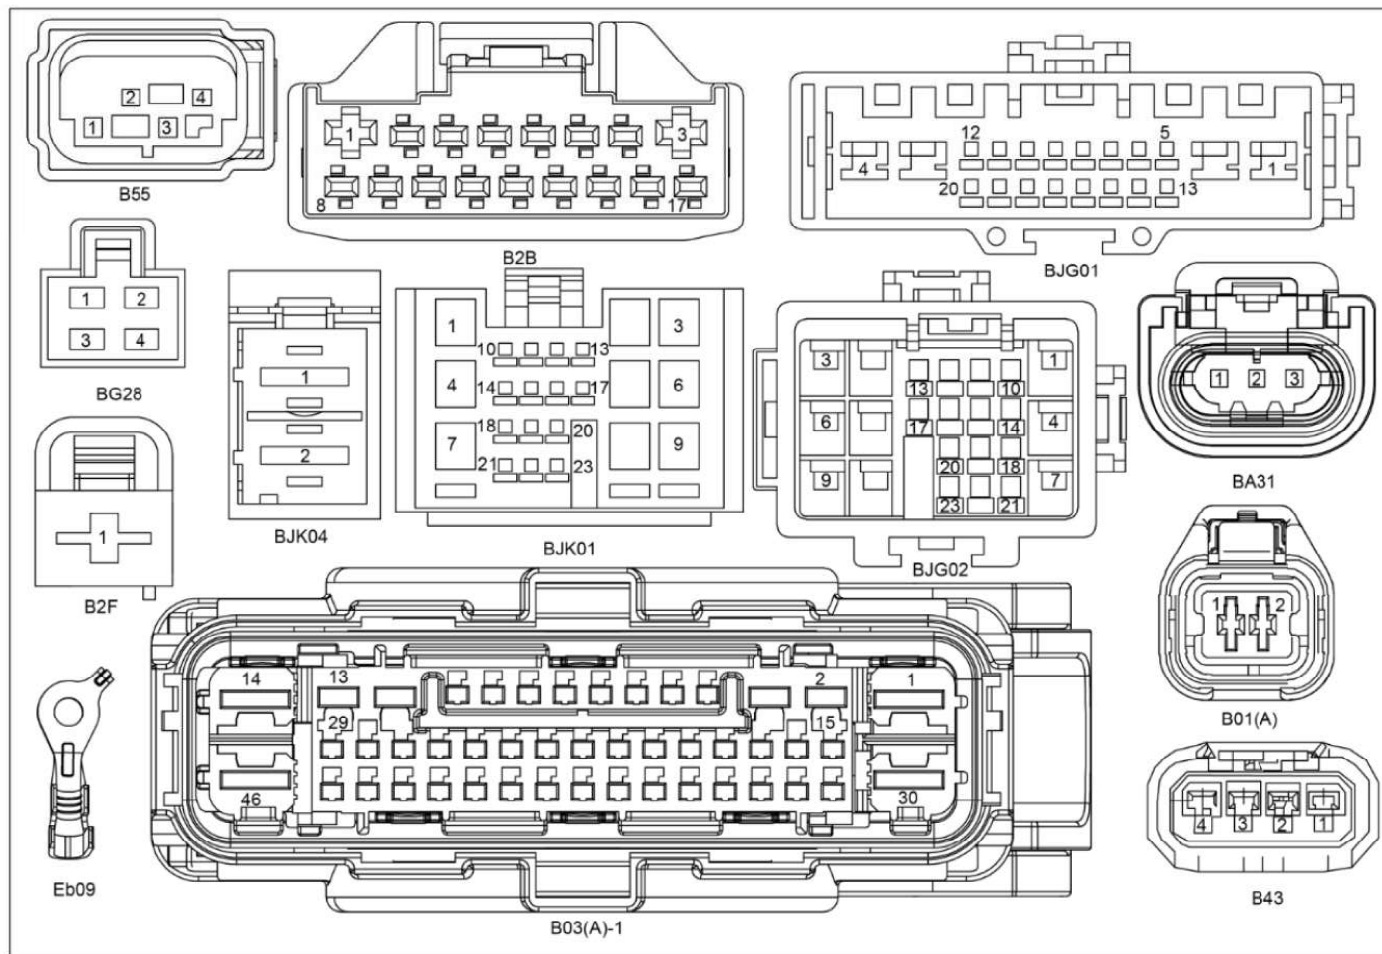

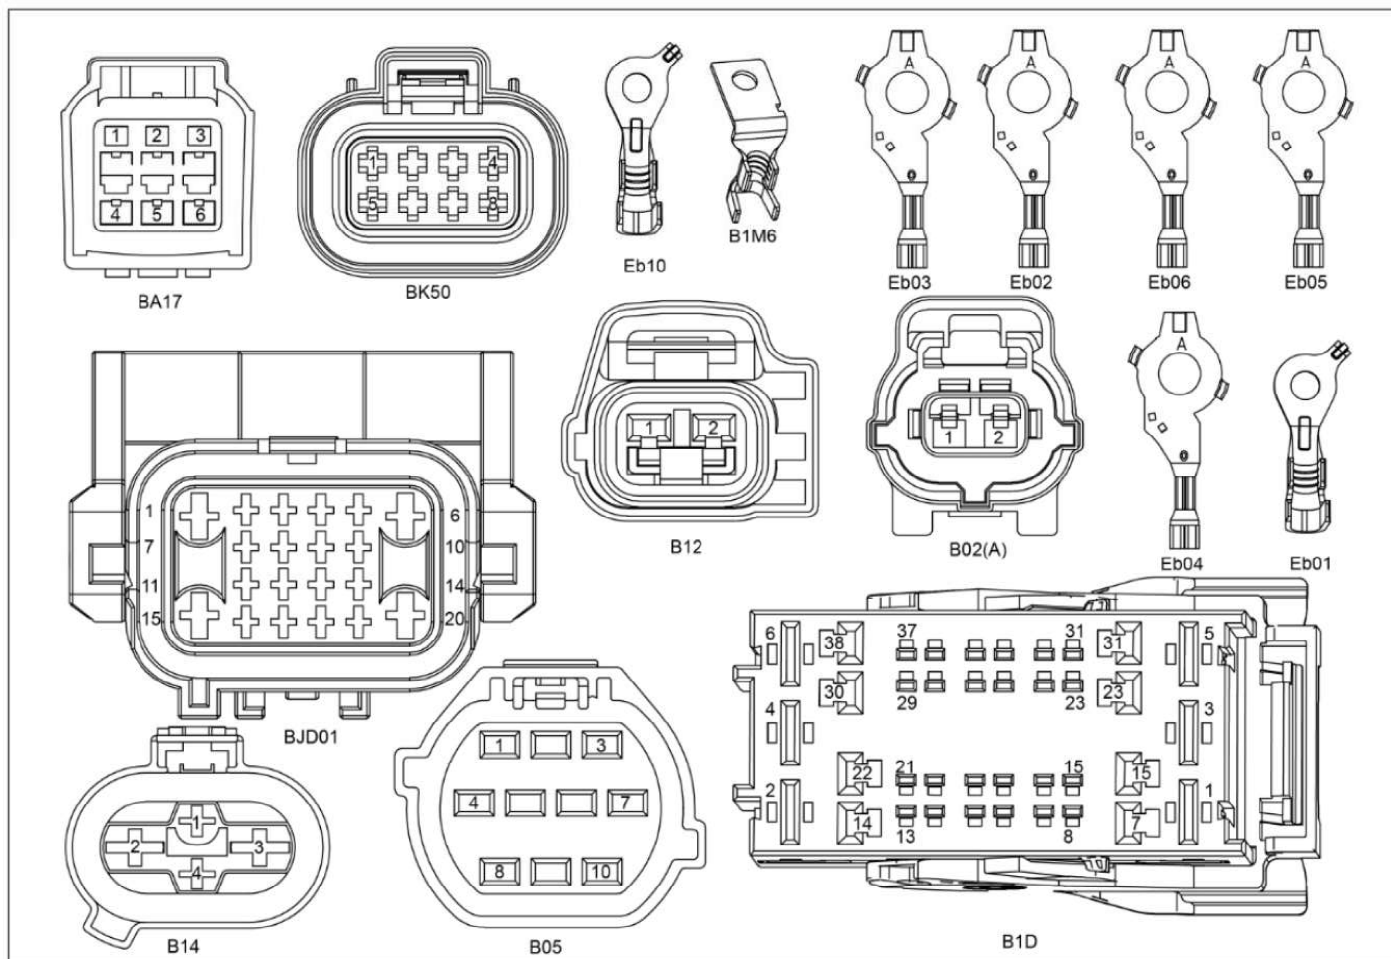


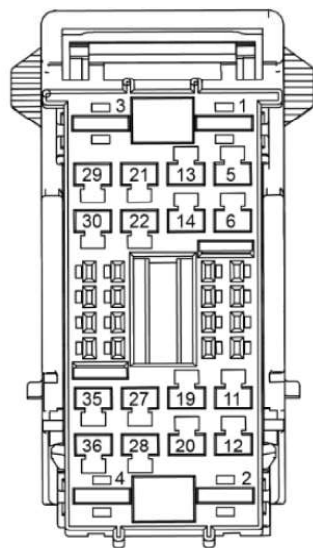

B1C



B1M3

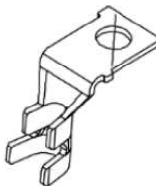

B1M5




B1M4



B1M4-1



Eb08

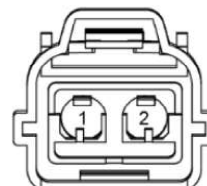

B07(A)

序号 No.	零件编号 Part No.	名 称 Description		数量 Qty	备注 Rem
		中 文 Chinese	英 文 English		
01	B08	接前舱锁内微动开关			
02	B67	接引擎模拟器			
03	Eb07	接 7 搭铁			
04	B43-1	接电机冷却水泵			
05	B07(B)	接右侧高低音蜗牛喇叭			
06	B17	接制动液位开关			
07	B04	接前雨刮电机			
08	B32	接电动真空泵			
09	B28	接二合一电控			
10	B13	接空调压力传感器			
11	Eb17	接 17 搭铁			
12	B02(B)	接右前碰撞传感器			
13	B06	接左前组合灯			
14	Eb15	接 15 搭铁			
15	Eb19	接 19 搭铁			
16	B73	接电池包加热器(低压)			
17	B74	接充配电总成			
18	Eb16	接 16 搭铁			
19	Eb14-1	接 14 搭铁			
20	Eb14-2	接 14 搭铁			



21	Eb13	接 13 搭铁			
22	B03	接 ESPECU			
23	Eb14-3	接 12 搭铁			
24	B16	接前洗涤电机			
25	B54(D)	接电子膨胀阀 3			
26	Eb20	接 20 搭铁			
27	B01(B)	接右前轮速传感器			
28	B54(B)	接板换水温传感器			
29	B54(E)	接电子膨胀阀 2			
30	BJG04	接仪表线束			
31	BJG05	接仪表线束			
32	BJK03	接地板线束			
33	B29	接板式换热器水温度传感器			
34	B42	接热管理水泵			
35	BJK02	接地板线束			
36	B03(B)-1	接偏航率传感器			
37	BK51	接电池包			
38	B23-1	接 C-EPS ECU			
39	B22-1	接 C-EPS 电源			
40	B22	接 R-EPS 电源			
41	B23	接 R-EPS ECU			
42	Eb11	接 11 搭铁			
43	BG28	接制动灯开关			
44	B2F	接仪表配电盒 F 口			
45	B2B	接仪表配电盒 B 口			

46	B55	接温度压力传感器			
47	BJK04	接仪表线束			
48	BJK01	接地板线束			
49	BJG02	接仪表线束			
50	BJG01	接仪表线束			
51	BA31	接制动真空压力传感器			
52	B01(A)	接左前轮速传感器			
53	B03(A)-1	接 IPB 1			
54	B43	接电机冷却水泵			
55	Eb09	接 9 搭铁			
56	BA17	接电动压缩机			
57	BK50	接铁电池			
58	Eb10	接 10 搭铁			
59	B1M6	接前舱配电盒(后配保险)			
60	Eb03	接 3 搭铁			
61	Eb02	接 2 搭铁			
62	Eb06	接 6 搭铁			
63	Eb05	接 5 搭铁			
64	BJD01	接前保小线			
65	B12	接车外温度传感器			
66	B02(A)	接左前碰撞传感器			
67	Eb04	接 4 搭铁			
68	Eb01	接 1 搭铁			
69	B14	接无极风扇			
70	B05	接左前组合灯			

71	B1C	接前舱配电箱 C 口			
72	B1D	接前舱配电箱 D 口			
73	B1M3	接前舱配电箱(电子风扇保险)			
74	B1M4	接前舱配电箱(REPS 保险)			
75	B1M4-1	接前舱配电箱(CEPS 保险)			
76	B1M5	接前舱配电箱(仪配保险)			
77	Eb08	接 8 搭铁			
78	B07(A)	接左侧高低音蜗牛喇叭			