



FOREWORD

To the best of our knowledge, the illustrations, technical information, data and descriptions in this issue were correct at the time of going to print. The right to change prices, specifications, equipment and maintenance instructions at any time without notice is reserved as part of FORD policy of continuous development and improvement for the benefit of our customers.

No part of this publication may be reproduced, stored in a data processing system or transmitted in any form, electronic, mechanical, photocopy, recording, translation or by any other means without prior permission of Ford-Werke Aktiengesellschaft. No liability can be accepted for any inaccuracies in this publication, although every possible care has been taken to make it as complete and accurate as possible.

Copyright ©

www.obdviethnam.vn



2011.50 Ranger

Wiring Diagrams



Table of Contents

PAGE 1 OF 2

GROUP 1 General Information

Service Information

General Information 100-00

GROUP 2 Chassis

Driveline

Rear Drive Axle/Differential 205-02

Brake System

Parking Brake and Actuation 206-05
Hydraulic Brake Actuation 206-06
Anti-Lock Control 206-09A
Anti-Lock Control - Stability Assist 206-09B
Anti-Lock Brake System (ABS) and Stability Control 206-09C

Steering System

Steering Column Switches 211-05

GROUP 3 Powertrain

Engine

Engine Cooling 303-03
Fuel Charging and Controls - 2.5L Duratec-HE (122kW/165PS) - MI4 303-04A
Fuel Charging and Controls - 2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma 303-04B
Fuel Charging and Controls - 3.2L Duratorq-TDCi (148kW/200PS) - Puma 303-04C

Fuel Charging and Controls - Turbocharger 303-04D
Starting System - 2.5L Duratec-HE (122kW/165PS) - MI4 303-06A
Starting System - 2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma/3.2L Duratorq-TDCi (148kW/200PS) - Puma 303-06B
Engine Ignition - 2.5L Duratec-HE (122kW/165PS) - MI4 303-07A
Glow Plug System - 2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma 303-07B
Glow Plug System - 3.2L Duratorq-TDCi (148kW/200PS) - Puma 303-07C
Engine Emission Control - 2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma/3.2L Duratorq-TDCi (148kW/200PS) - Puma 303-08
Evaporative Emissions 303-13
Electronic Engine Controls - 2.5L Duratec-HE (122kW/165PS) - MI4 303-14A
Electronic Engine Controls - 2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma/3.2L Duratorq-TDCi (148kW/200PS) - Puma 303-14B

PAGE 2 OF 2

Automatic Transmission/Transaxle

Automatic Transmission/Transaxle - Vehicles With: 6-Speed Automatic Transaxle - 6R80	307-01
Automatic Transmission/Transaxle External Controls	307-05

Manual Transmission/Transaxle, Clutch and Transfer Case

Four-Wheel Drive Systems	308-07
--------------------------	--------

Exhaust System

Exhaust System - 2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma/3.2L Duratorq-TDCi (148kW/200PS) - Puma	309-00
--	--------

Fuel System - General Information

Fuel System - General Information - 2.5L Duratec-HE (122kW/165PS) - M14	310-00A
Fuel System - General Information - 2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma/3.2L Duratorq-TDCi (148kW/200PS) - Puma	310-00B
Fuel Tank and Lines	310-01A
Fuel Tank and Lines - 2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma/3.2L Duratorq-TDCi (148kW/200PS) - Puma	310-01B
Speed Control	310-03

GROUP 4 Electrical**Climate Control System**

Climate Control	412-01
-----------------	--------

Instrumentation and Warning Systems

Instrument Cluster	413-01
Horn	413-06
Information and Message Center	413-08
Warning Devices	413-09
Parking Aid	413-13

Tachograph	413-17
------------	--------

Battery and Charging System

Battery, Mounting and Cables	414-01
Generator and Regulator	414-02

Information and Entertainment Systems

Information and Entertainment System	415-01
--------------------------------------	--------

Lighting

Exterior Lighting	417-01
Interior Lighting	417-02
Daytime Running Lamps (DRL)	417-04

Electrical Distribution

Module Communications Network	418-00
-------------------------------	--------

Electronic Feature Group

Anti-Theft - Active	419-01A
Anti-Theft - Passive	419-01B
Cruise Control	419-03
Multifunction Electronic Modules	419-10

GROUP 5 Body and Paint**Body and Paint**

Rear View Mirrors	501-09
Seating	501-10
Glass, Frames and Mechanisms	501-11
Instrument Panel and Console	501-12
Handles, Locks, Latches and Entry Systems	501-14
Wipers and Washers	501-16
Safety Belt System	501-20A
Supplemental Restraint System	501-20B

GROUP 7 General Wiring Information**Wiring Information**

General Information	700-00
Fuse and Relay Information	700-01
Power Distribution	700-02
Grounding Strategy	700-03
Electrical Connectors	700-04

Index

GROUP

1

General Information

SECTION TITLE

PAGE

Service Information

General Information.....100-00

www.obdvietsnam.vn



SECTION 100-00 General Information

VEHICLE APPLICATION: 2012.0Ranger

CONTENTS

PAGE

DESCRIPTION AND OPERATION

About This Manual.....	100-00-2
How to Use This Manual.....	100-00-2
Circuit Code.....	100-00-2
Wire Insulation Specification (Temperature).....	100-00-6
Connector Code - Component, GND and Splice.....	100-00-6
Connector Code - Harness Connectors.....	100-00-7
Wire Color Code.....	100-00-7
Symbols Glossary.....	100-00-8

www.obdvietsnam.vn



DESCRIPTION AND OPERATION

About This Manual


How to Use This Manual

This manual is structured into Systems, Groups and Sections. A System covers a specific portion of the vehicle. The manual is divided into six Systems: General Information, Chassis, Powertrain, Electrical, Body and Paint and General Wiring Information. Each System contains a number of Groups that contain a number of

Sections relating to specific vehicle systems. Each Section contains a wiring diagram containing all of the information relating to the specific vehicle system. Some Sections contain a number of wiring diagrams that cover a number of different vehicle variants. Connector location information and connector face views are provided through links within the wiring diagram for each vehicle system.

Example: Chassis > Brake System > Anti-Lock Control (System > Group > Section)

Wiring Diagram Format

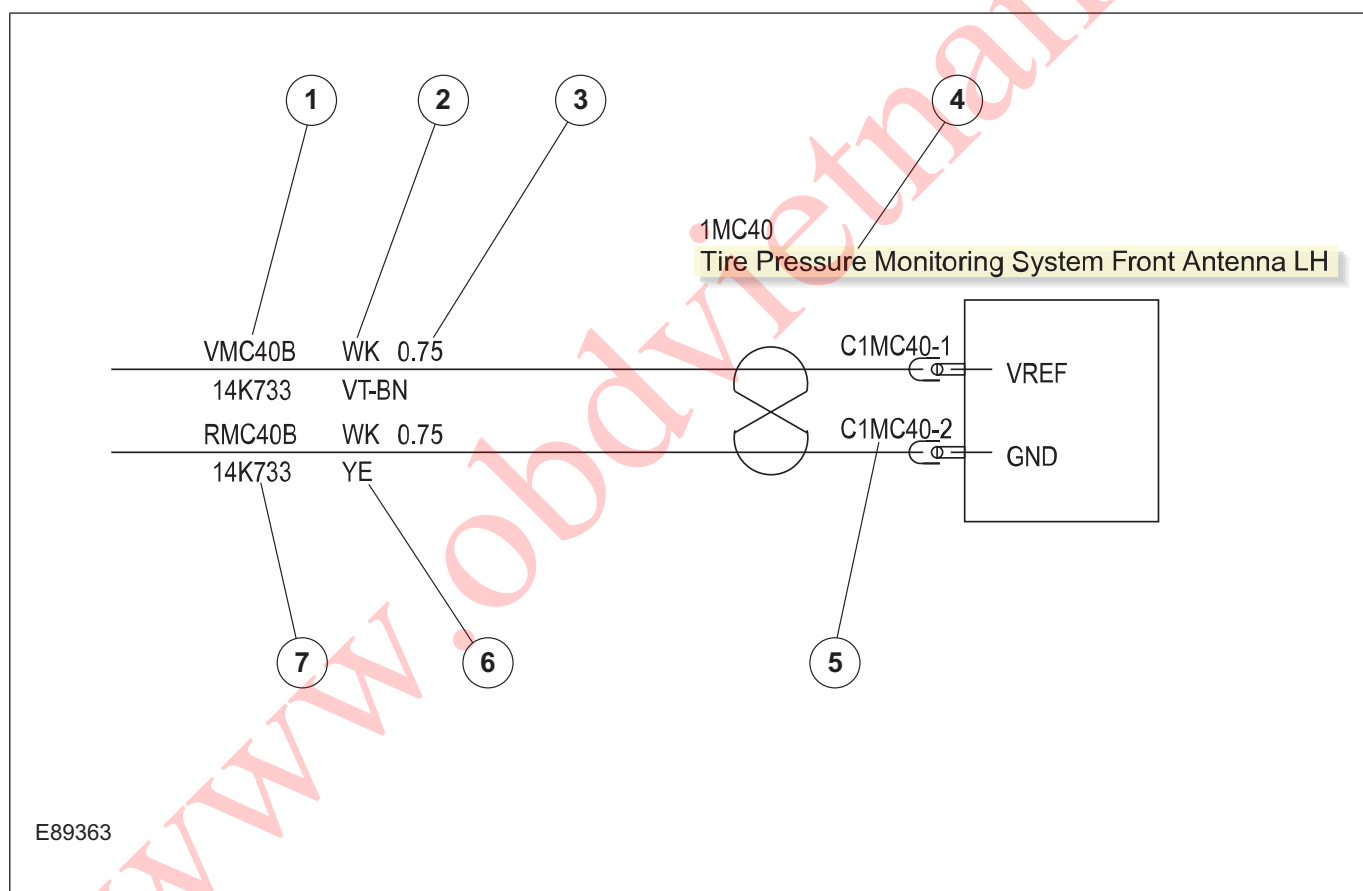

Item	Description
1	Circuit code
2	Wire insulation specification (temperature)
3	Wire diameter (mm ²)

Item	Description
4	Component name
5	Connector code
6	Wire color code
7	Wiring harness code

Circuit Code

DESCRIPTION AND OPERATION

Position	Description
1	Electrical potential
2	System
3	Sub-system
4 and 5	Function
Some circuit codes also have a suffix. Suffixes are used when parts of a circuit are separated with a connector.	

Position 1: Potential

Code	Description
G	GND (ground)
S	Standard voltage
H	Higher than standard voltage
C	Changing or switched
V	Variable signal
L	Lower than standard voltage
R	Return or reference
D	Drain wire
Z	Any of the above with a temporary function

Position 2: System

Code	Description
A	Special vehicle
B	Circuit protection
C	Chassis
D	Electrical distribution
E	Engine and transmission
H	Heating
L	Lighting
M	Multimedia (Information and entertainment)
P	Power convenience
R	Supplemental restraints
Y	Hybrid electric powertrain

DESCRIPTION AND OPERATION

Position 3: Sub-system

System Code	Sub-system Code	Description
A	1	Temporary functions for any sub-system
A	2	Temporary functions for any sub-system
A	3	Temporary functions for any sub-system
A	A	Ambulance
A	C	Customer access
A	P	Police
A	T	Trailer tow
A	X	Taxi
B	1	AJB (auxiliary junction box)
B	B	BJB (battery junction box), EJB (engine junction box)
B	F	Pre-fuse box
B	K	Power pack circuit protection
B	P	CJB (central junction box)
B	R	RJB (rear junction box)
B	X	Special power circuits
C	A	Anti-lock control, traction control, stability assist
C	B	Brake system
C	D	Adaptive damping
C	F	Four-wheel drive
C	L	Suspension
C	S	Power steering
D	1	GND points
D	9	Special GND and return circuits
D	B	Diagnostic bus
D	C	Charging, starting, cigar lighter, power outlet socket
D	F	Fuse link wires, mega fuse
E	1	PCM (powertrain control module)
E	2	PCM
E	3	PCM
E	4	PCM
E	5	Powertrain controller, diode, driver, monitor, pump
E	6	Powertrain relay, resistor, runner

DESCRIPTION AND OPERATION

System Code	Sub-system Code	Description
E	7	Powertrain sensor
E	8	Powertrain sensor
E	9	Powertrain switch, transducer, valve
E	C	Engine cooling
E	S	Speed control
E	T	Transmission/transaxle, differential, axle
H	1	Climate control module
H	2	Climate control module
H	3	Climate controls
H	4	Climate control relay, resistor, sensor, switch, transducer
H	A	Auxiliary climate control
H	C	Engine block heater
H	F	Fuel fired booster heater
H	P	Electric booster heater
H	S	Heated seats
L	F	Front lamps
L	N	Interior lamps, courtesy lamps, instrument panel illumination
L	S	Rear lamps, turn signal lamps
M	C	Instrument cluster, information and message center, tachograph
M	E	Information and entertainment
M	F	Forward collision avoidance
M	M	Communication, cellular phone, voice control
M	N	Navigation
M	P	Parking aid
M	R	Rear passenger entertainment
M	T	Telematics
P	K	Keyless vehicle
P	L	Locks
P	M	Rear view mirrors
P	P	Adjustable pedals, steering column
P	R	Power roof, doors, side steps
P	S	Power seats

DESCRIPTION AND OPERATION

System Code	Sub-system Code	Description
P	W	Power windows
R	1	RCM (restraints control module), air bag module, side air curtain module
R	2	Impact sensor, PAD (passenger air bag deactivation) switch
R	B	Blind spot monitoring
R	D	Heated windshield, rear window, mirrors, washer jets
R	H	Horn
R	P	Pedestrian protection
R	T	Anti-theft
R	W	Windshield wipers and washers, rear window wiper and washer, headlamp washers
Y	A	DC (direct current)/AC (alternating current) inverter
Y	B	Traction battery
Y	D	DC/AC converter
Y	T	Hybrid power split transmission/transaxle

Wire Insulation Specification (Temperature)

Code	Temperature
WA	100°C
WK	125°C
WE	150°C

Connector Code - Component, GND and Splice

Code Position	Description
1	C = connector, G = GND and S = splice
2	Connector location
3	System
4	Sub-system
5	Function
6	Function
7	Suffix (only used if multiple connectors exist)

Connector locations are shown graphically and displayed by selecting the appropriate link on the wiring diagram.

DESCRIPTION AND OPERATION

Connector Code - Harness Connectors


Code Position	Description
1	C = connector
2	Connector location
3	Location of the connected system
4	Suffix (only used if multiple connectors exist)
Connector locations are shown graphically and displayed by selecting the appropriate link on the wiring diagram.	

Wire Color Code

Code	Color
BK	Black
BN	Brown
BU	Blue
GN	Green
GY	Gray
LG	Light green
NA	Natural
OG	Orange
PK	Pink
RD	Red
SR	Silver
VT	Purple
WH	White
YE	Yellow

DESCRIPTION AND OPERATION

Symbols Glossary

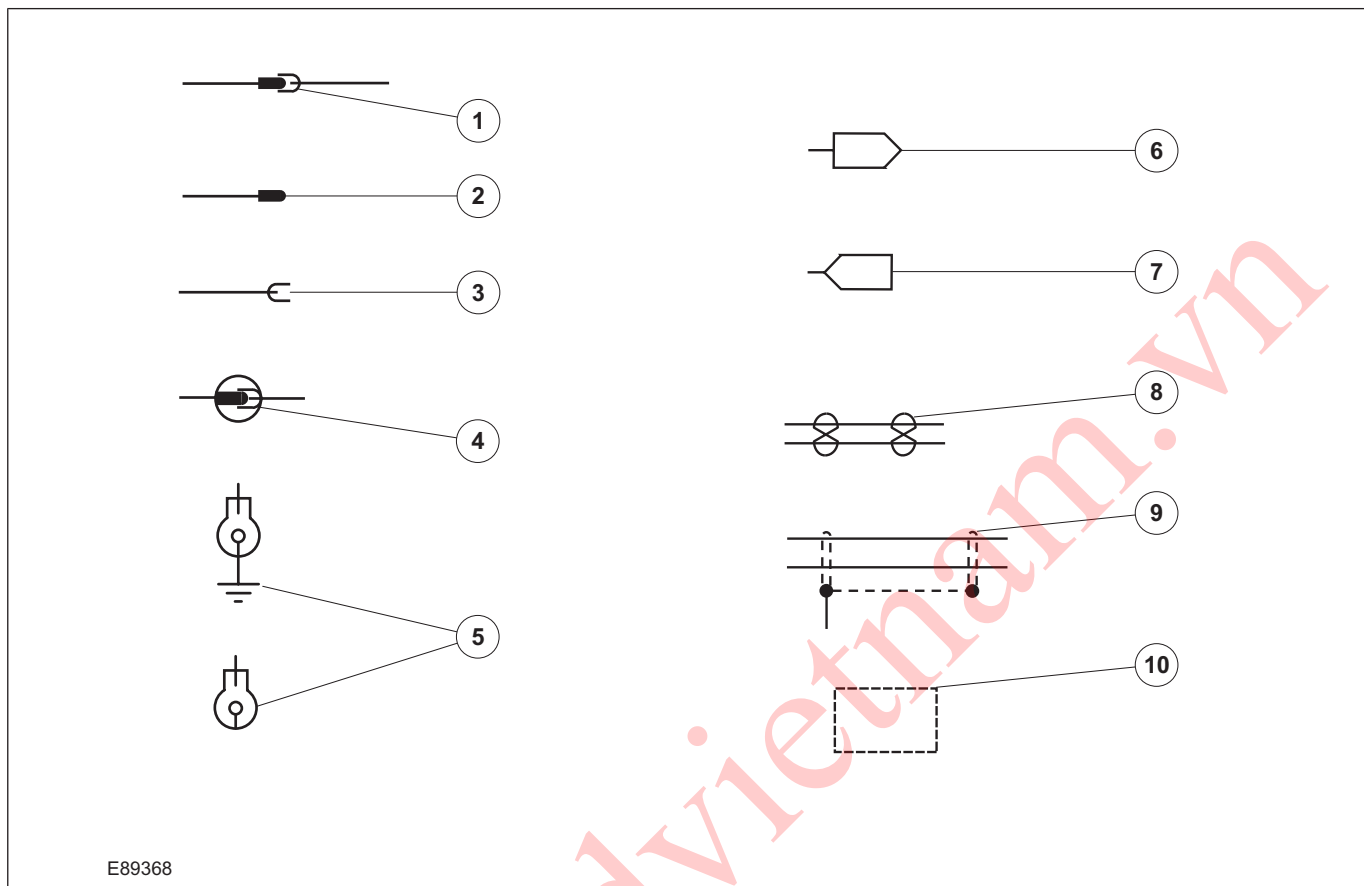

Item	Description
1	In-line connector
2	Male connector
3	Female connector
4	Pins with special coating (e.g. gold)
5	Ground
6	Off-page reference (to)
7	Off-page reference (from)
8	Twisted pair
9	Screened cables
10	Part of a component

GROUP

Chassis

2

SECTION TITLE	PAGE
Driveline	
Rear Drive Axle/Differential.....	205-02
Brake System	
Parking Brake and Actuation.....	206-05
Hydraulic Brake Actuation.....	206-06
Anti-Lock Control.....	206-09A
Anti-Lock Control - Stability Assist.....	206-09B
Anti-Lock Brake System (ABS) and Stability Control.....	206-09C
Steering System	
Steering Column Switches.....	211-05

SECTION 205-02 Rear Drive Axle/Differential

VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS

PAGE


ELECTRICAL CONNECTORS

Electronic Locking Differential (ELD) Solenoid.....	205-02-2
---	----------

www.obdviethnam.vn

205-02-2

Electronic Locking Differential (ELD) Solenoid (G1438393)



1 CBB23B BN-YE 2TCD 0.75 + CBB23D BN-YE 2TCD 0.75
2 GD476L BK-WH 2TCD 0.75

XR3T-14A464-AA

C4CF31

TO DIFF LOCK SOLENOID

HARNESS 14A333

SECTION 206-05 Parking Brake and Actuation

VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS

PAGE

ELECTRICAL CONNECTORS

Parking Brake Warning Indicator Switch.....	206-05-2
---	----------

www.obdviethnam.vn

206-05-2

Parking Brake Warning Indicator Switch (G1403890)

 1 CMC25 WH-VT 2TAD 0.5

81AG-14488-ACA

C3MC25

TO PARK BRAKE SWITCH

HARNESS 14A005

www.obdviethnam.vn

SECTION 206-06 Hydraulic Brake Actuation

VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS


PAGE

ELECTRICAL CONNECTORS


Low Brake Fluid Warning Indicator Switch.....	206-06-2
Low Brake Fluid Warning Indicator Switch — A.....	206-06-2

206-06-2

Low Brake Fluid Warning Indicator Switch (G1403892)

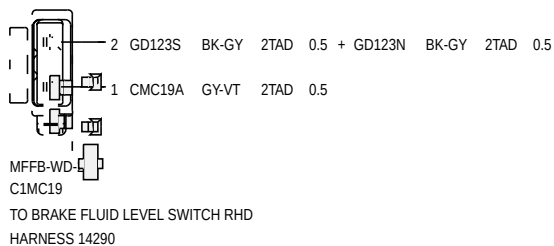

Low Brake Fluid Warning Indicator Switch—A (G1403894)

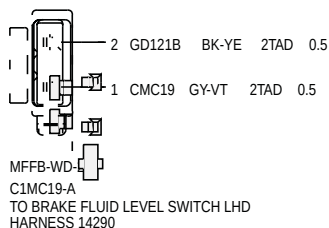

SECTION 206-09A Anti-Lock Control

VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS

PAGE


ELECTRICAL SCHEMATICS

Anti-Lock Control..... 206-09A-2


ELECTRICAL CONNECTORS

Anti-Lock Brake System (ABS) Module..... 206-09A-4
Front Wheel Speed Sensor LH..... 206-09A-4
Front Wheel Speed Sensor RH..... 206-09A-5
Rear Wheel Speed Sensor LH..... 206-09A-5
Rear Wheel Speed Sensor RH..... 206-09A-5

206-09A-2 Anti-Lock Control

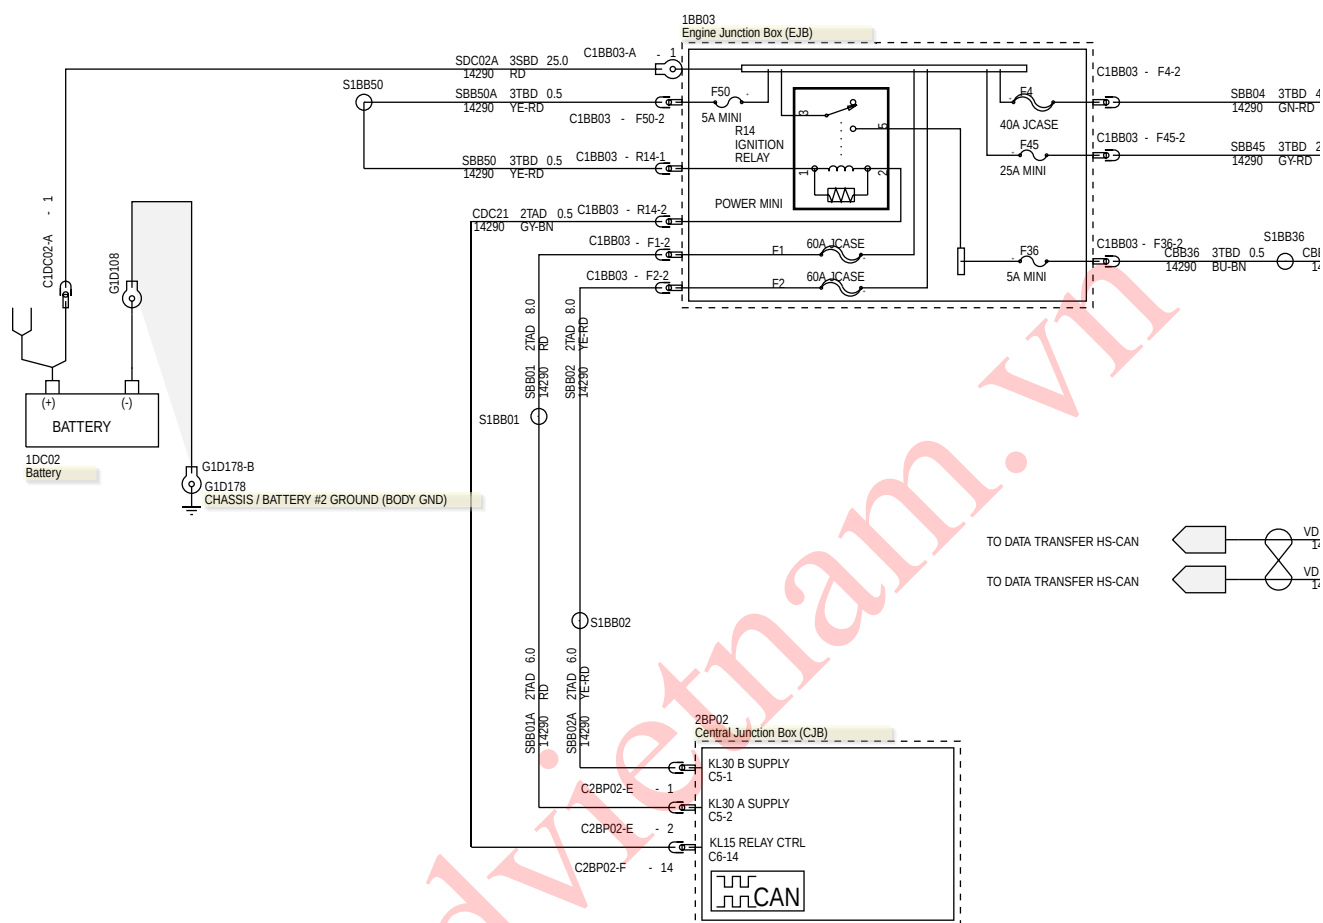


206-09A-3 Anti-Lock Control

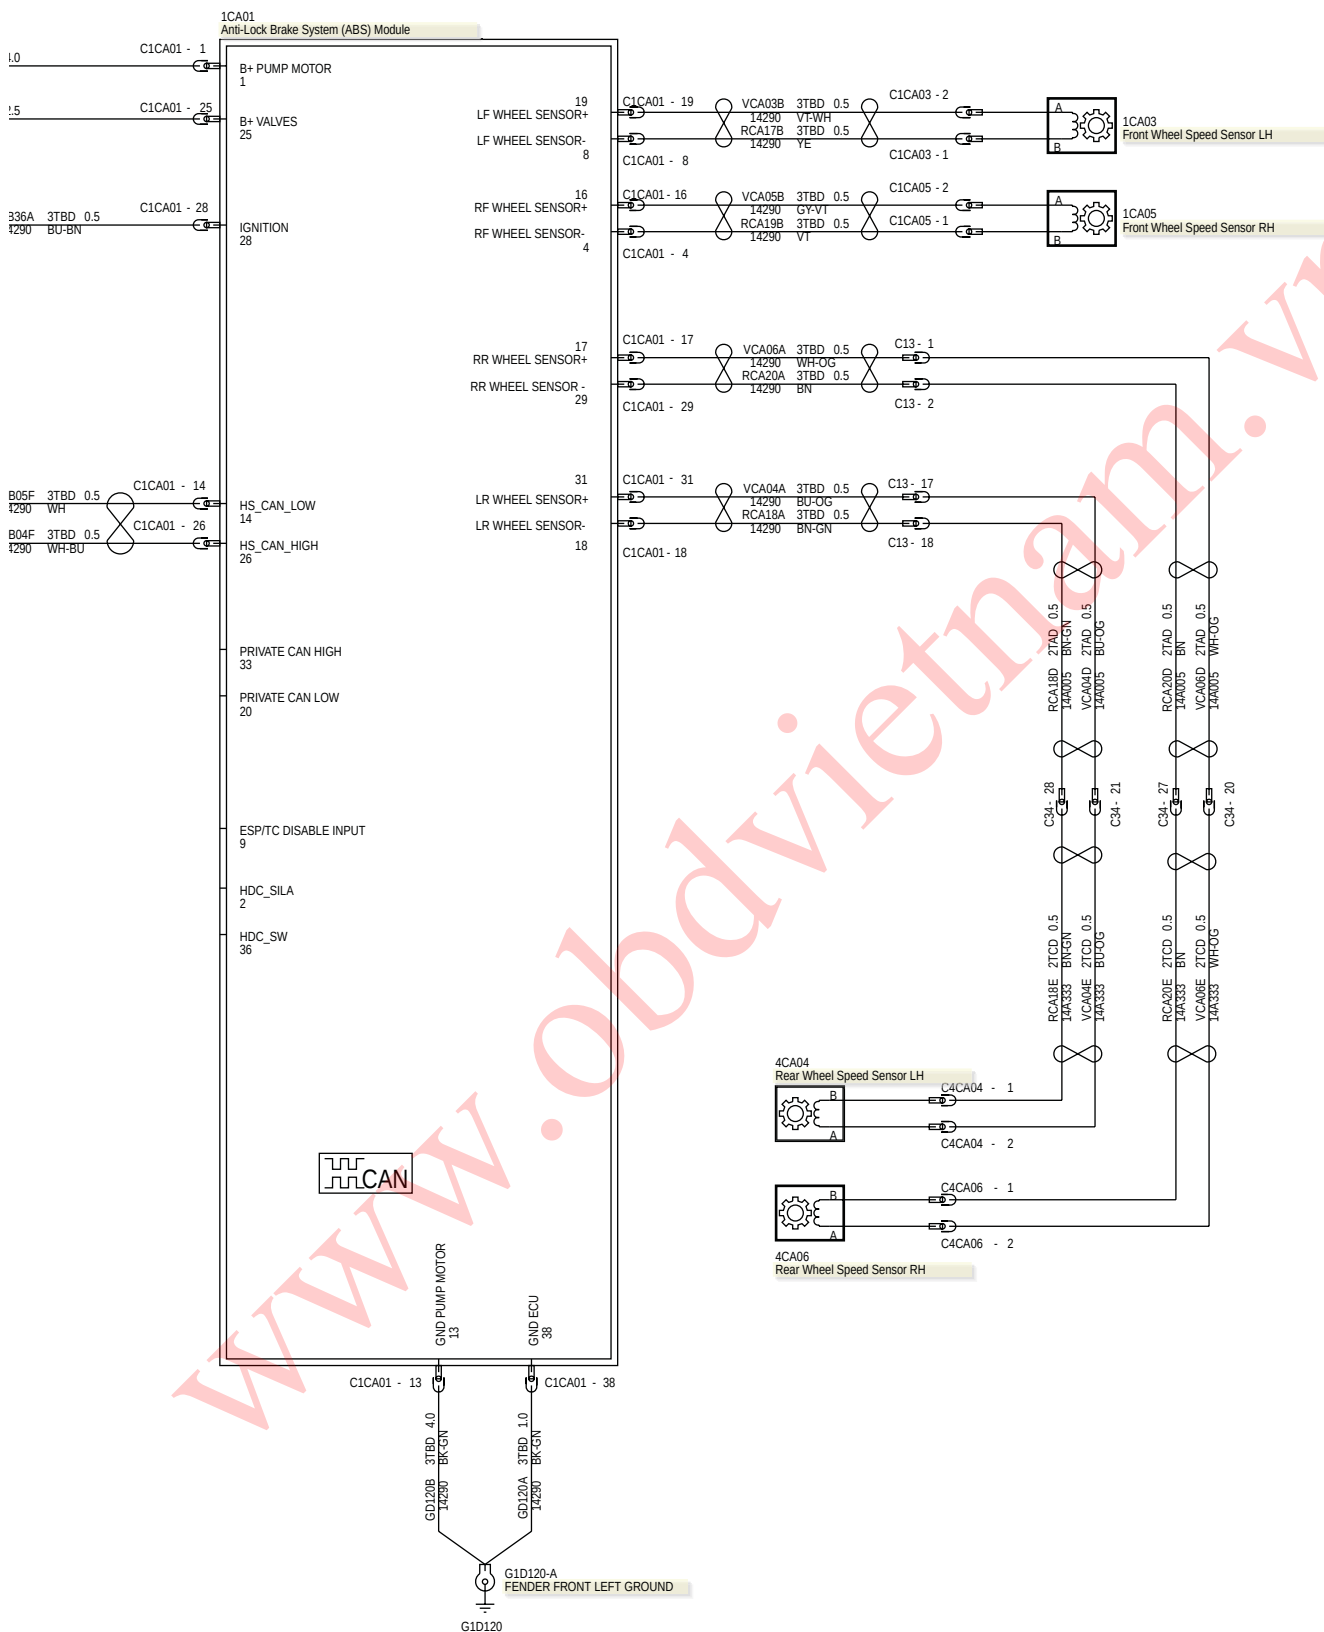

206-09A-4

Anti-Lock Brake System (ABS) Module (G1403900)

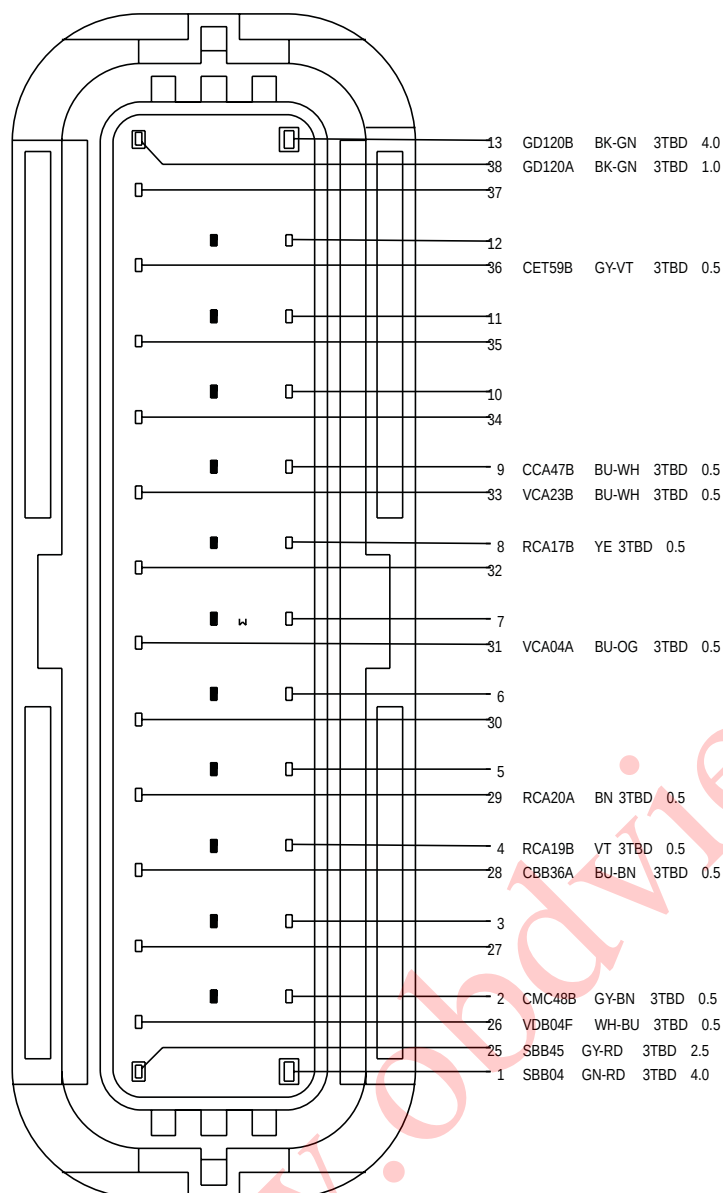


6G9T-14A464-VZA(000)

C1CA01

TO ABS MODULE

HARNESS 14290

Front Wheel Speed Sensor LH (G1403901)

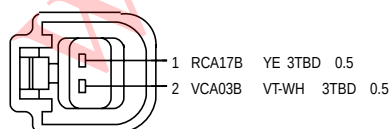

6E5T-14A464-NA


C1CA03

TO FLYLEAD ABS WHEEL SENSOR LF

HARNESS 14290

206-09A-5


Front Wheel Speed Sensor RH (G1403902)

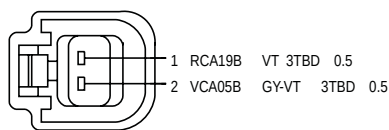

6E5T-14A464-NA

C1CA05
TO FLYLEAD ABS WHEEL SENSOR RF
HARNESS 14290


Rear Wheel Speed Sensor LH (G1403903)

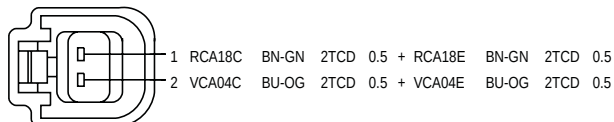

6E5T-14A464-NA

C4CA04
TO FLYLEAD ABS WHEEL SENSOR LR
HARNESS 14A333

Rear Wheel Speed Sensor RH (G1403904)

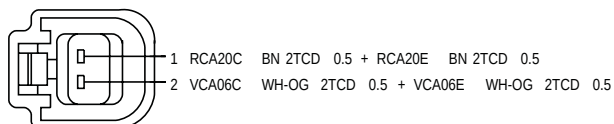

6E5T-14A464-NA

C4CA06
TO FLYLEAD ABS WHEEL SENSOR RR
HARNESS 14A333

SECTION 206-09B Anti-Lock Control - Stability Assist

VEHICLE APPLICATION: **2012.0 Ranger**

CONTENTS

PAGE

ELECTRICAL SCHEMATICS

Anti-Lock Control - Stability Assist..... 206-09B-2

ELECTRICAL CONNECTORS


Steering Wheel Rotation Sensor..... 206-09B-4

Stability Assist/Traction Control Switch..... 206-09B-4

Nâng tầm người thợ Việt
2012.0 Ranger (G1420065)




206-09B-3 Anti-Lock Control - Stability Assist

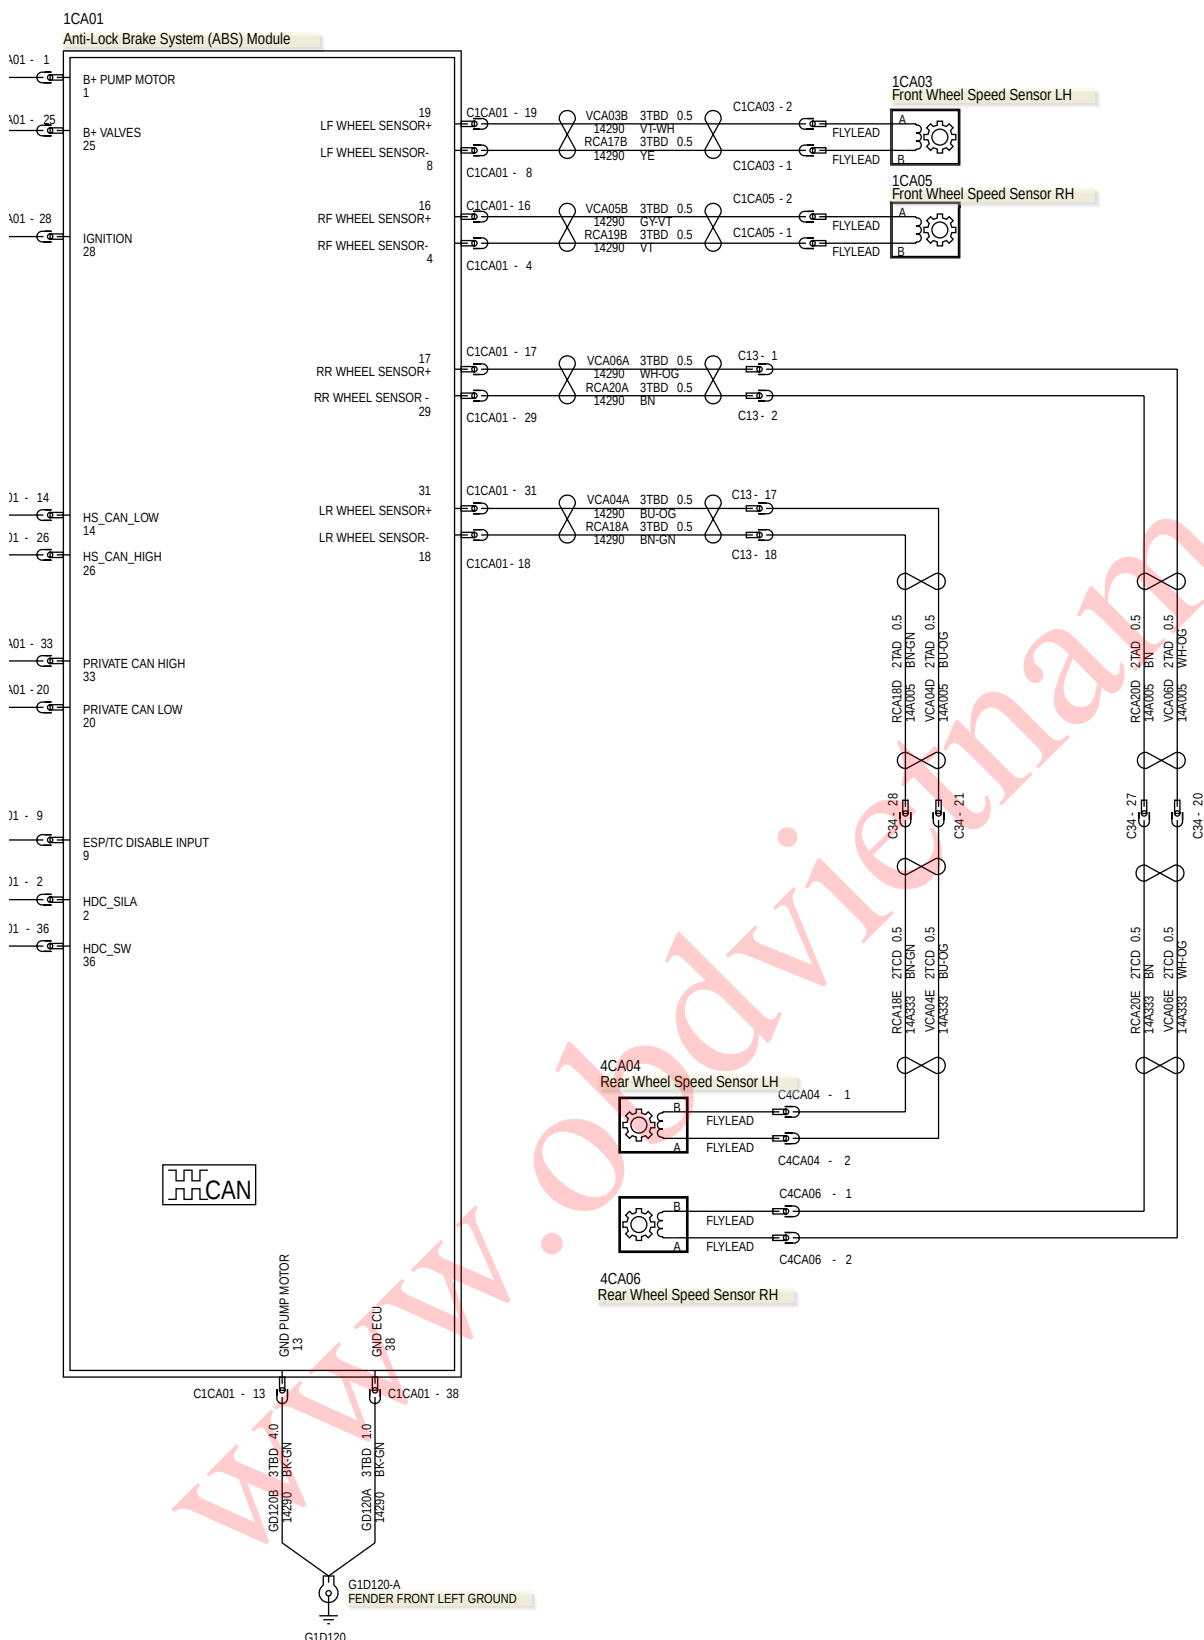

206-09B-4

Steering Wheel Rotation Sensor (G1405431)

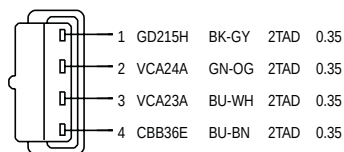


2R8T-14489-DA

C2CA41

TO STEERING WHEEL ANGLE SENSOR

HARNESS 14401

Stability Assist/Traction Control Switch (G1414539)

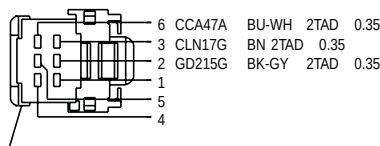

4S7T-14489-CA

C2CA15

TO ESP SWITCH

HARNESS 14401

SECTION 206-09C Anti-Lock Brake System (ABS) and Stability Control

VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS


PAGE

ELECTRICAL CONNECTORS

Anti-Lock Brake System (ABS) Module.....	206-09C-2
Front Wheel Speed Sensor LH.....	206-09C-2
Front Wheel Speed Sensor RH.....	206-09C-3
Rear Wheel Speed Sensor LH.....	206-09C-3
Rear Wheel Speed Sensor RH.....	206-09C-3
Steering Wheel Rotation Sensor.....	206-09C-3
Stability Assist/Traction Control Switch.....	206-09C-3

206-09C-2

Anti-Lock Brake System (ABS) Module (G1425334)

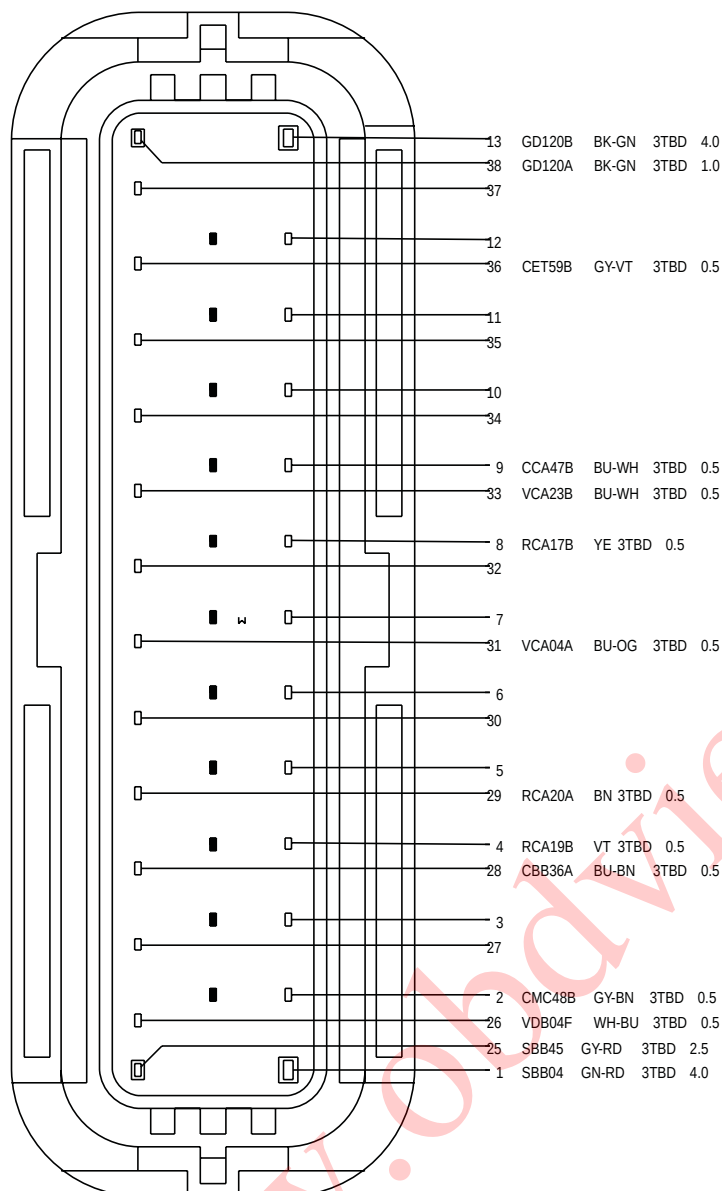


6G9T-14A464-VZA(000)

C1CA01

TO ABS MODULE

HARNESS 14290

Front Wheel Speed Sensor LH (G1425371)

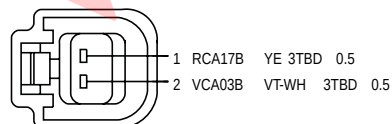

6E5T-14A464-NA


C1CA03

TO FLYLEAD ABS WHEEL SENSOR LF

HARNESS 14290

206-09C-3


Front Wheel Speed Sensor RH (G1425372)

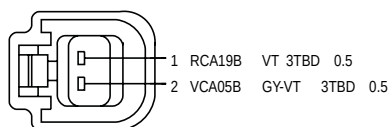

6E5T-14A464-NA

C1CA05
TO FLYLEAD ABS WHEEL SENSOR RF
HARNESS 14290


Rear Wheel Speed Sensor LH (G1425373)

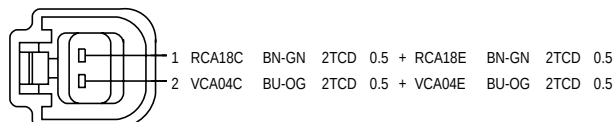

6E5T-14A464-NA

C4CA04
TO FLYLEAD ABS WHEEL SENSOR LR
HARNESS 14A333


Rear Wheel Speed Sensor RH (G1425374)

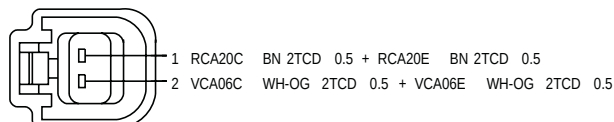

6E5T-14A464-NA

C4CA06
TO FLYLEAD ABS WHEEL SENSOR RR
HARNESS 14A333


Steering Wheel Rotation Sensor (G1425375)

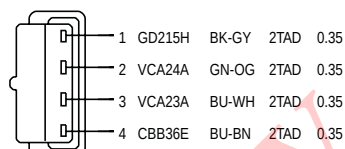

2R8T-14489-DA

C2CA41
TO STEERING WHEEL ANGLE SENSOR
HARNESS 14401

Stability Assist/Traction Control Switch (G1425376)

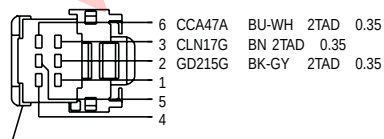

4S7T-14489-CA

C2CA15
TO ESP SWITCH
HARNESS 14401

SECTION 211-05 Steering Column Switches

VEHICLE APPLICATION: **2012.0 Ranger**

CONTENTS

PAGE

ELECTRICAL CONNECTORS

Hazard Flasher Switch.....	211-05-2
Ignition Switch.....	211-05-2
Steering Column Multifunction Switch.....	211-05-2
Steering Column Multifunction Switch — A.....	211-05-2

GROUP

3

Powertrain

PAGE 1 OF 2

SECTION TITLE	PAGE
Engine	
Engine Cooling.....	303-03
Fuel Charging and Controls2.5L Duratec-HE (122kW/165PS) - MI4.....	303-04A
Fuel Charging and Controls2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma.....	303-04B
Fuel Charging and Controls3.2L Duratorq-TDCi (148kW/200PS) - Puma.....	303-04C
Fuel Charging and Controls - Turbocharger.....	303-04D
Starting System2.5L Duratec-HE (122kW/165PS) - MI4.....	303-06A
Starting System2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma/3.2L Duratorq-TDCi (148kW/200PS) - Puma.....	303-06B
Engine Ignition2.5L Duratec-HE (122kW/165PS) - MI4.....	303-07A
Glow Plug System2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma.....	303-07B
Glow Plug System3.2L Duratorq-TDCi (148kW/200PS) - Puma.....	303-07C
Engine Emission Control2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma/3.2L Duratorq-TDCi (148kW/200PS) - Puma.....	303-08
Evaporative Emissions.....	303-13
Electronic Engine Controls2.5L Duratec-HE (122kW/165PS) - MI4.....	303-14A
Electronic Engine Controls2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma/3.2L Duratorq-TDCi (148kW/200PS) - Puma.....	303-14B
Automatic Transmission/Transaxle	
Automatic Transmission/TransaxleVehicles With: 6-Speed Automatic Transaxle - 6R80.....	307-01
Automatic Transmission/Transaxle External Controls.....	307-05
Manual Transmission/Transaxle, Clutch and Transfer Case	
Four-Wheel Drive Systems.....	308-07
Exhaust System	
Exhaust System2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma/3.2L Duratorq-TDCi (148kW/200PS) - Puma.....	309-00
Fuel System - General Information	
Fuel System - General Information2.5L Duratec-HE (122kW/165PS) - MI4.....	310-00A
Fuel System - General Information2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma/3.2L Duratorq-TDCi (148kW/200PS) - Puma.....	310-00B

PAGE 1 OF 2

Fuel Tank and Lines.....	310-01A
Fuel Tank and Lines 2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma/3.2L Duratorq-TDCi (148kW/200PS) - Puma.....	310-01B
Speed Control.....	310-03

www.obdvietnam.vn

SECTION 303-03 Engine Cooling — 2.5L Duratec-HE (122kW/165PS) - M14

VEHICLE APPLICATION: **2012.0 Ranger**

CONTENTS

PAGE


ELECTRICAL CONNECTORS

Cooling Fan Motor..... 303-03-2

www.obdviethnam.vn

303-03-2

Cooling Fan Motor (G1403923)



1212-4685

C1EC01
TO FLYLEAD ELECTRIC COOLING FAN ASSY
HARNESS 14290

www.obdviethnam.vn

SECTION 303-04A Fuel Charging and Controls — 2.5L

Duratec-HE (122kW/165PS) - MI4

VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS


PAGE

ELECTRICAL CONNECTORS

Fuel Injector 1 — A.....	303-04A-2
Fuel Injector 2 — A.....	303-04A-2
Fuel Injector 3 — A.....	303-04A-2
Fuel Injector 4 — A.....	303-04A-2

303-04A-2


Fuel Injector 1—A (G1403958)



1	CE205D	GN-BU	3TBD	0.5	GOLD
2	CBB22E	GN-OG	3TBD	0.75	GOLD

4W7T-14A464-BB
C1E205-A
TO FUEL INJECTOR1 PETROL
HARNESS 12B637


Fuel Injector 2—A (G1403959)



1	CE206D	GY-YE	3TBD	0.5	GOLD
2	CBB22F	GN-OG	3TBD	0.75	GOLD

4W7T-14A464-BB
C1E206-A
TO FUEL INJECTOR2 PETROL
HARNESS 12B637


Fuel Injector 3—A (G1403960)



1	CE207D	VT-GY	3TBD	0.5	GOLD
2	CBB22G	GN-OG	3TBD	0.75	GOLD

4W7T-14A464-BB
C1E207-A
TO FUEL INJECTOR3 PETROL
HARNESS 12B637

Fuel Injector 4—A (G1403961)



1	CE208D	YE-OG	3TBD	0.5	GOLD
2	CBB22H	GN-OG	3TBD	0.75	GOLD

4W7T-14A464-BB
C1E208-A
TO FUEL INJECTOR4 PETROL
HARNESS 12B637

SECTION 303-04B Fuel Charging and Controls — 2.2L

Duratorq-TDCi (Puma) Diesel

VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS


PAGE

ELECTRICAL CONNECTORS

Fuel Injector 1.....	303-04B-2
Fuel Injector 2.....	303-04B-2
Fuel Injector 3.....	303-04B-2
Fuel Injector 4.....	303-04B-2
Fuel Metering Valve.....	303-04B-3

303-04B-2

Fuel Injector 1 (G1403932)

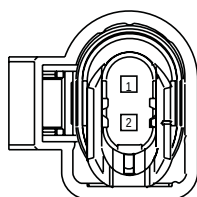


- 1 CE205A GN-BU 3TBD 1.0 SILVER
- 2 RE205A YE-BU 3TBD 1.0 SILVER

BU5T-14A464-BBA \ /
C1E205
TO FUEL INJECTOR1 DIESEL
HARNESS 12B637

Fuel Injector 2 (G1403933)

PIN 1 => CE206A GY-YE 1.0 3TBD
PIN 2 => RE206A BU-OG 1.0 3TBD

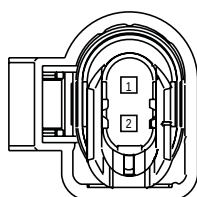


- 1 CE206AA GY-YE 3TBD 1.0 SILVER
- 2 RE206AA BU-OG 3TBD 1.0 SILVER

BU5T-14A464-BBA \ /
C1E206
TO FUEL INJECTOR2 DIESEL
HARNESS 12B637

Fuel Injector 3 (G1403934)

PIN 1 => CE207A VT-GY 1.0 3TBD
PIN 2 => RE207 GN-VT 1.0 3TBD

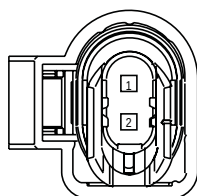


- 1 CE207AA VT-GY 3TBD 1.0 SILVER
- 2 RE207A GN-VT 3TBD 1.0 SILVER

BU5T-14A464-BBA \ /
C1E207
TO FUEL INJECTOR3 DIESEL
HARNESS 12B637

Fuel Injector 4 (G1403935)

PIN 1 => CE208A YE-OG 1.0 3TBD
PIN 2 => RE208A BU 1.0 3TBD

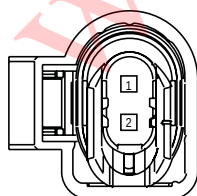


- 1 CE208AA YE-OG 3TBD 1.0 SILVER
- 2 RE208AA BU 3TBD 1.0 SILVER

BU5T-14A464-BBA \ /
C1E208
TO FUEL INJECTOR4 DIESEL
HARNESS 12B637

303-04B-3

Fuel Metering Valve (G1403936)

PIN 1 => CBB25T WH-OG 0.75 3TBD

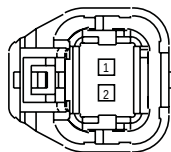

1	CBB25R	WH-OG 3TBD 0.75	+ CBB25T	WH-OG 3TBD 0.75	GOLD
2	VE350A	GY 3TBD 0.75	GOLD		

AU5T-14A464-BBA

C1E518

TO VOLUMETRIC CTRL VALVE

HARNESS 12B637

SECTION 303-04C Fuel Charging and Controls — 3.2L

Duratorq-TDCi (Puma) Diesel

VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS


PAGE

ELECTRICAL CONNECTORS

Fuel Injector 1.....	303-04C-2
Fuel Injector 2.....	303-04C-2
Fuel Injector 3.....	303-04C-2
Fuel Injector 4.....	303-04C-2
Fuel Injector 5.....	303-04C-3
Fuel Metering Valve.....	303-04C-3

303-04C-2

Fuel Injector 1 (G1403932)

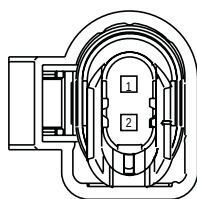


- 1 CE205A GN-BU 3TBD 1.0 SILVER
- 2 RE205A YE-BU 3TBD 1.0 SILVER

BU5T-14A464-BBA \ /
C1E205
TO FUEL INJECTOR1 DIESEL
HARNESS 12B637

Fuel Injector 2 (G1403933)

PIN 1 => CE206A GY-YE 1.0 3TBD
PIN 2 => RE206A BU-OG 1.0 3TBD

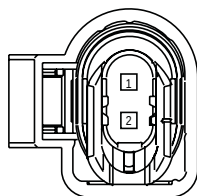


- 1 CE206AA GY-YE 3TBD 1.0 SILVER
- 2 RE206AA BU-OG 3TBD 1.0 SILVER

BU5T-14A464-BBA \ /
C1E206
TO FUEL INJECTOR2 DIESEL
HARNESS 12B637

Fuel Injector 3 (G1403934)

PIN 1 => CE207A VT-GY 1.0 3TBD
PIN 2 => RE207 GN-VT 1.0 3TBD

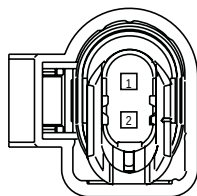


- 1 CE207AA VT-GY 3TBD 1.0 SILVER
- 2 RE207A GN-VT 3TBD 1.0 SILVER

BU5T-14A464-BBA \ /
C1E207
TO FUEL INJECTOR3 DIESEL
HARNESS 12B637

Fuel Injector 4 (G1403935)

PIN 1 => CE208A YE-OG 1.0 3TBD
PIN 2 => RE208A BU 1.0 3TBD

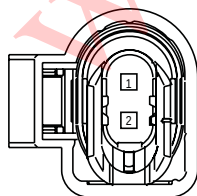


- 1 CE208AA YE-OG 3TBD 1.0 SILVER
- 2 RE208AA BU 3TBD 1.0 SILVER

BU5T-14A464-BBA \ /
C1E208
TO FUEL INJECTOR4 DIESEL
HARNESS 12B637

303-04C-3

Fuel Injector 5 (G1403947)

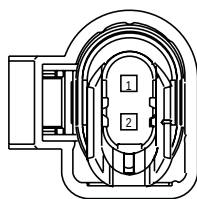


- 1 CE209A BN 3TBD 1.0 SILVER
- 2 RE209A WH-GN 3TBD 1.0 SILVER

BU5T-14A464-BBA \ /
C1E209
TO FUEL INJECTOR5 DIESEL
HARNESS 12B637

Fuel Metering Valve (G1403936)

PIN 1 => CBB25T WH-OG 0.75 3TBD

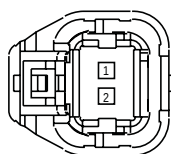

- 1 CBB25R WH-OG 3TBD 0.75 + CBB25T WH-OG 3TBD 0.75 GOLD
- 2 VE350A GY 3TBD 0.75 GOLD

AU5T-14A464-BBA
C1E518
TO VOLUMETRIC CTRL VALVE
HARNESS 12B637

SECTION 303-04D Fuel Charging and Controls - Turbocharger

VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS

PAGE

ELECTRICAL CONNECTORS

Turbocharger Variable Vane Actuator.....	303-04D-2
Wastegate Position Sensor.....	303-04D-2

303-04D-2

Turbocharger Variable Vane Actuator (G1408840)



1	CE431B	WH 3SCD	0.75
2	CE432A	BU 3SCD	0.75
3	RE437A	GY 3SCD	0.75
4	VE837A	WH 3SCD	0.75
5	LE437A	YE 3SCD	0.75

6R8Q-14A464-AA

C1E432

TO VNT ACTUATOR & FEEDBACK SENSOR

HARNESS 12B637

Wastegate Position Sensor (G1425325)



3	LE437AA	YE 3SCD	0.75
2	RE437AA	GY 3SCD	0.75
1	VE836A	VT-GN 3SCD	0.75

3M5T-14A464-RCA

C1E836

TO FIXED GEOMETRY TURBO

HARNESS 12B637

SECTION 303-06A Starting System — 2.5L Duratec-HE (122kW/165PS) -

MI4

VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS

PAGE

ELECTRICAL SCHEMATICS


Starting System — Vehicles With: 5-Speed Manual Transmission - MT75..... 303-06A-2

ELECTRICAL CONNECTORS


Starter Motor — A..... 303-06A-4

Starter Motor — B..... 303-06A-4

303-06A-2 Starting System—Vehicles With: 5-Speed Manual Transmission - MT75

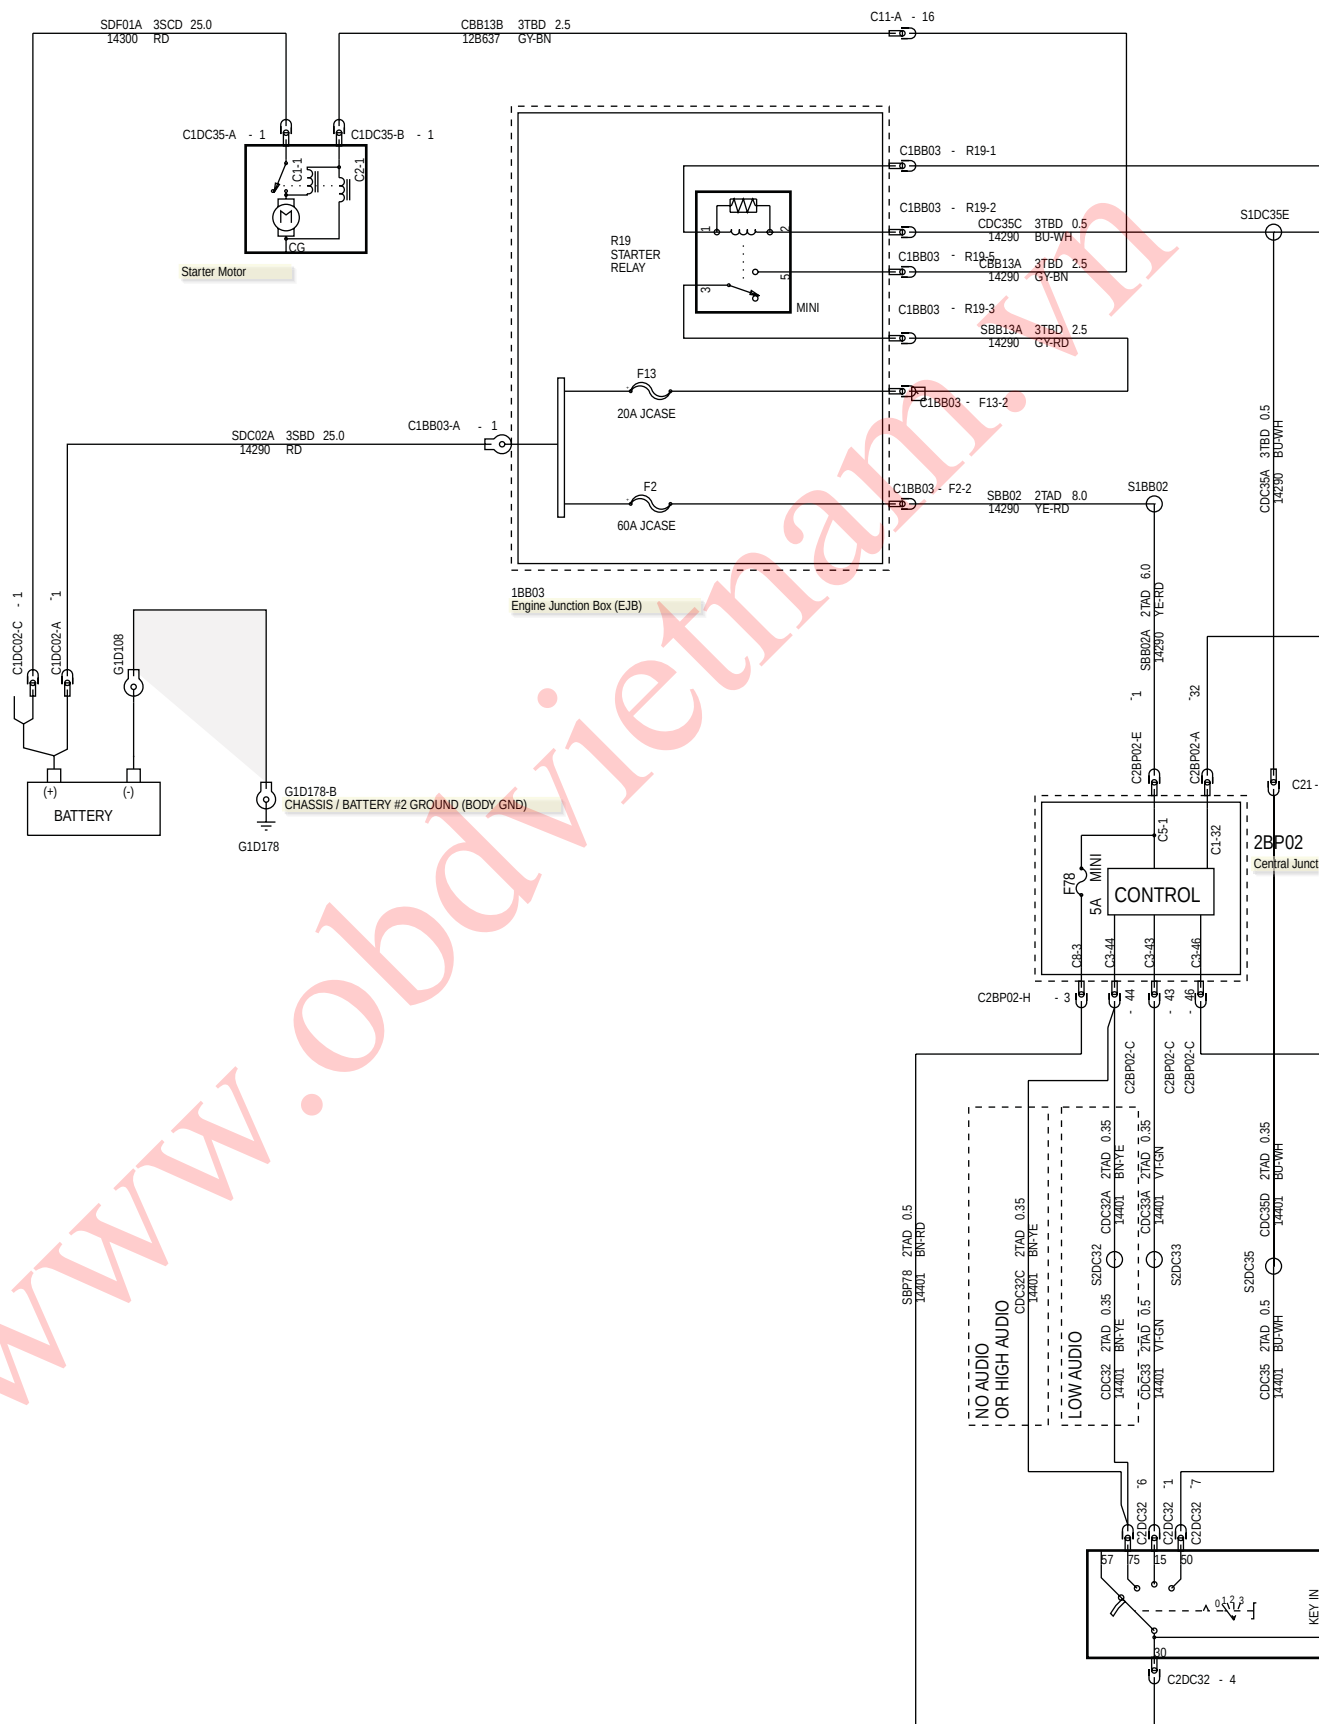


303-06A-3 Starting System—Vehicles With: 5-Speed Manual Transmission - MT75

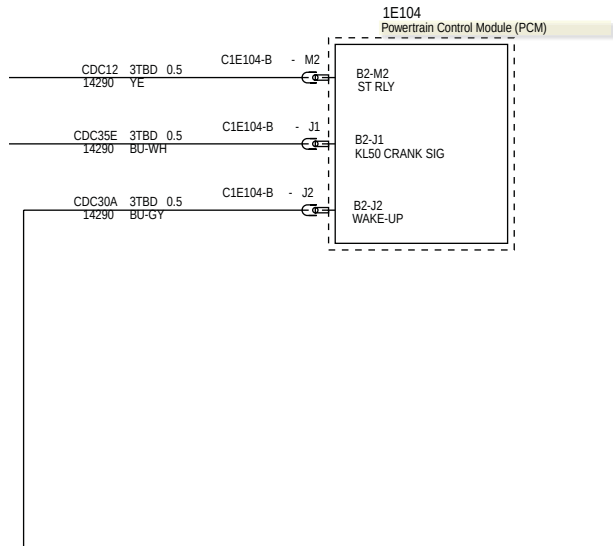


4

ion Box (CJB)

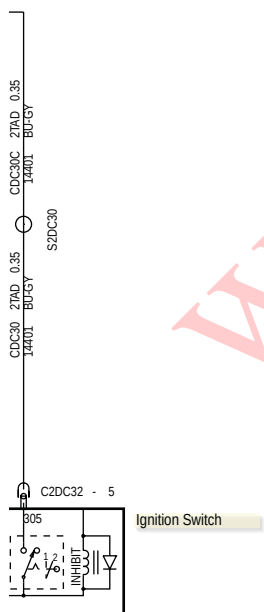


303-06A-4

Starter Motor—A (G1403964)

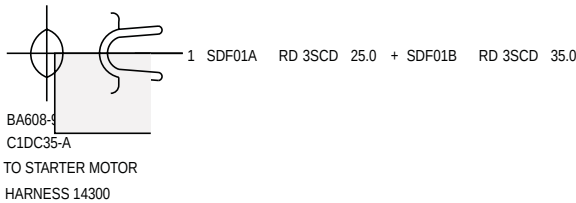

Starter Motor—B (G1403965)

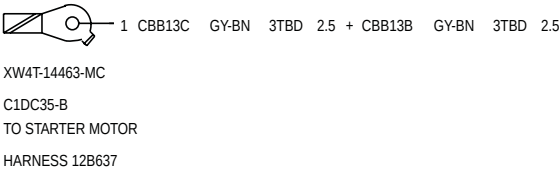

www.obdviethnam.vn

SECTION 303-06B Starting System — 2.2L Duratorq-TDCi (Puma)

Diesel/3.2L Duratorq-TDCi (Puma) Diesel

VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS

PAGE


ELECTRICAL SCHEMATICS

Starting System — Vehicles With: 5-Speed Manual Transmission - MT75/6-Speed Manual Transmission - MT82.....	303-06B-2
Starting System — Vehicles With: 6-Speed Automatic Transaxle - 6R80, LHD 4WD/LHD RWD.....	303-06B-4
Starting System — Vehicles With: 6-Speed Automatic Transaxle - 6R80, RHD 4WD/RHD RWD.....	303-06B-6


ELECTRICAL CONNECTORS

Starter Motor — A.....	303-06B-8
Starter Motor — B.....	303-06B-8

303-06B-2 Starting System—Vehicles With: 5-Speed Manual Transmission - MT75/6-Speed Manual Transmission - MT82

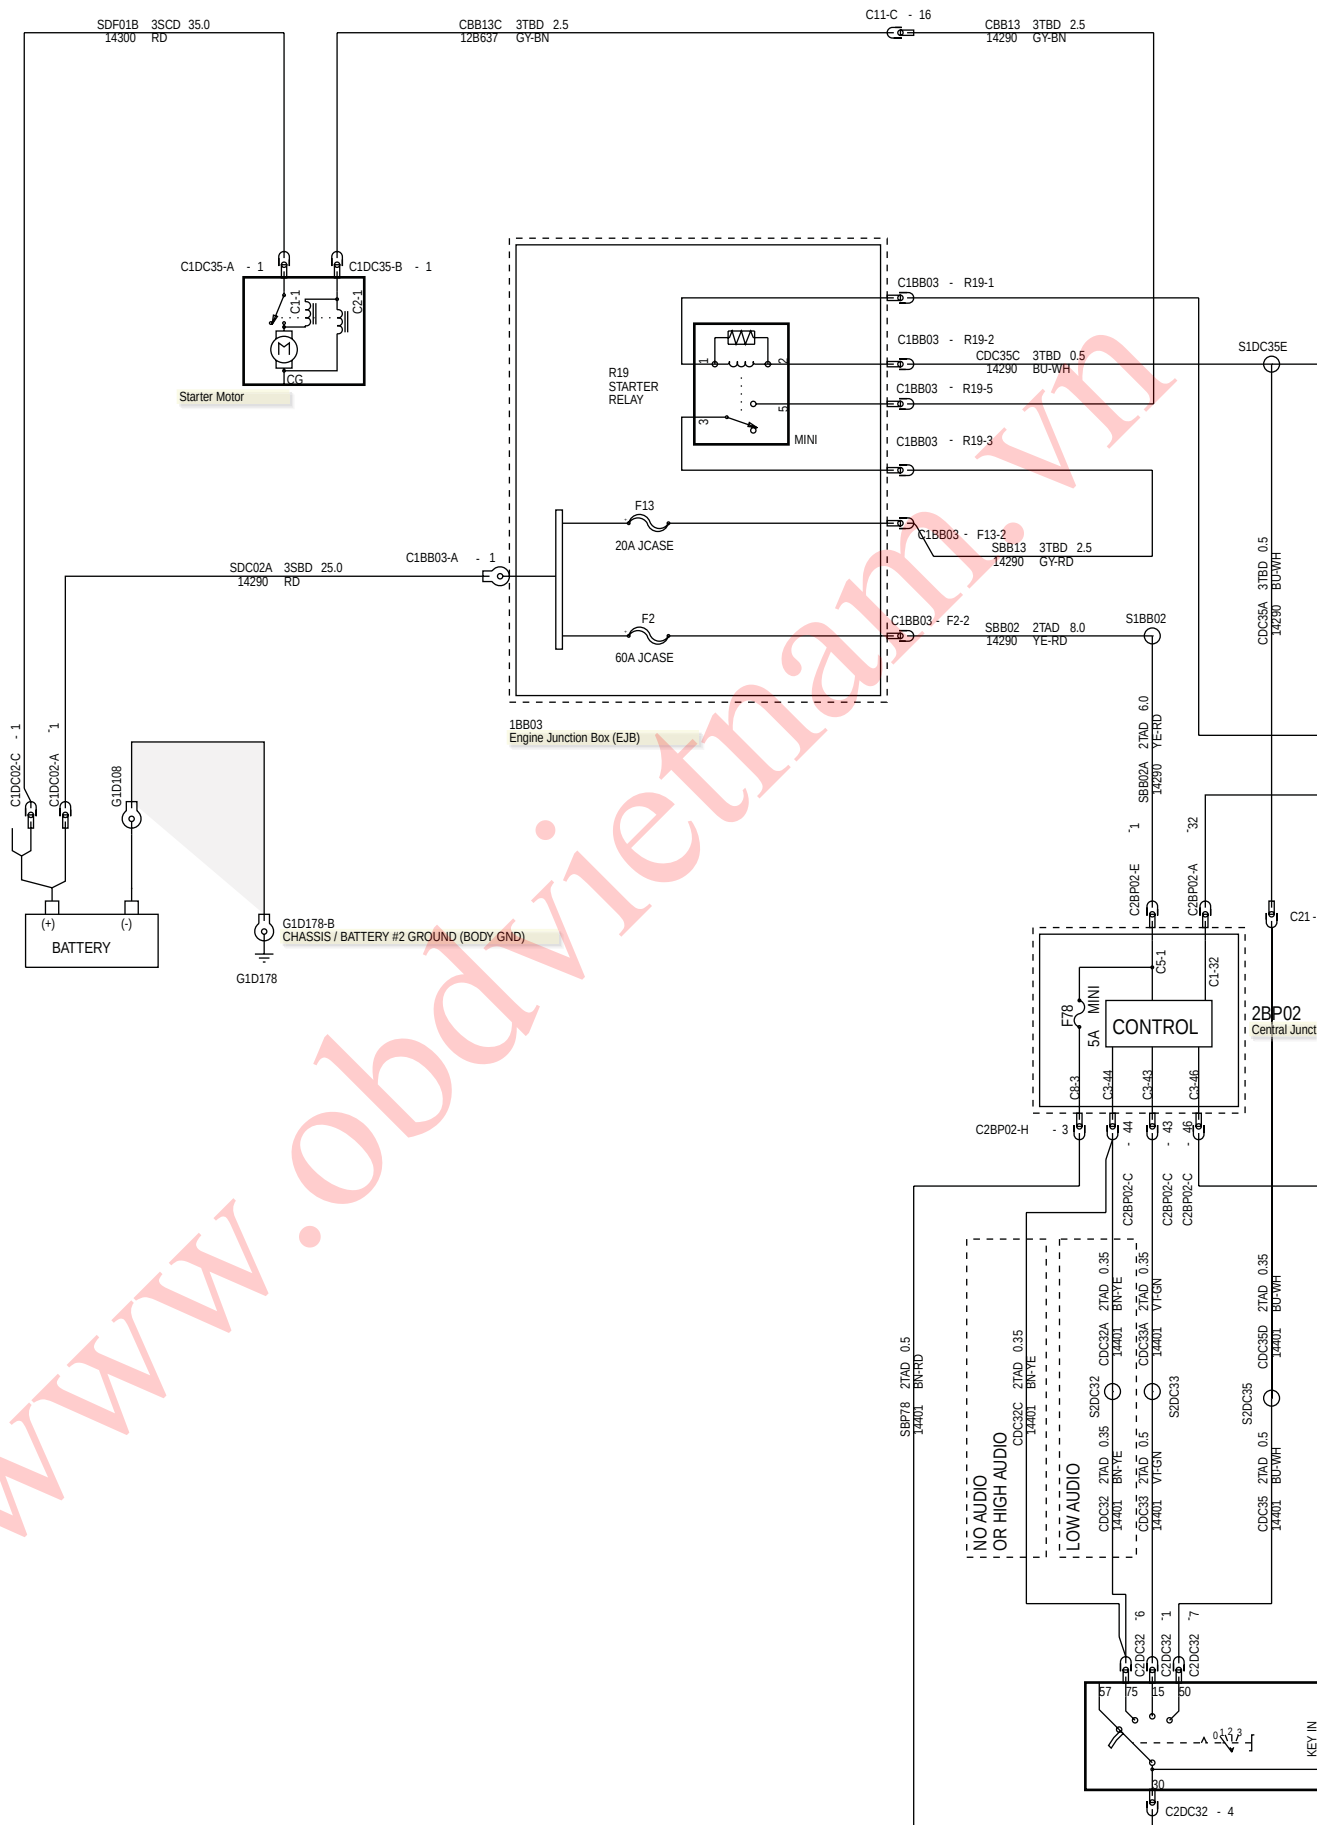


303-06B-3 Starting System—Vehicles With: 5-Speed Manual Transmission - MT75/6-Speed Manual Transmission - MT82

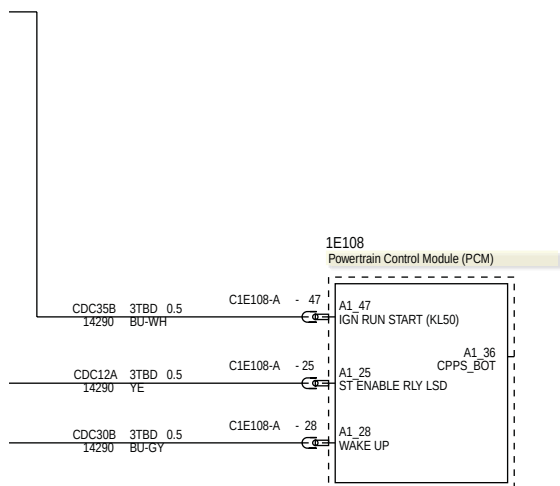


4


ion Box (CJB)

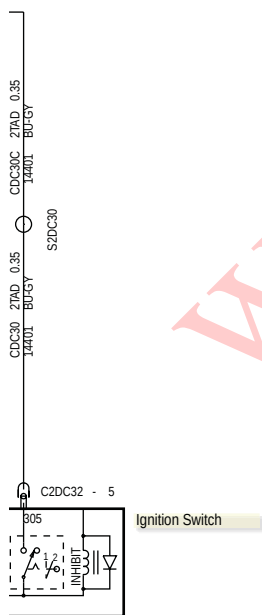


303-06B-4 Starting System—Vehicles With: 6-Speed Automatic Transaxle - 6R80, LHD 4WD/LHD RWD

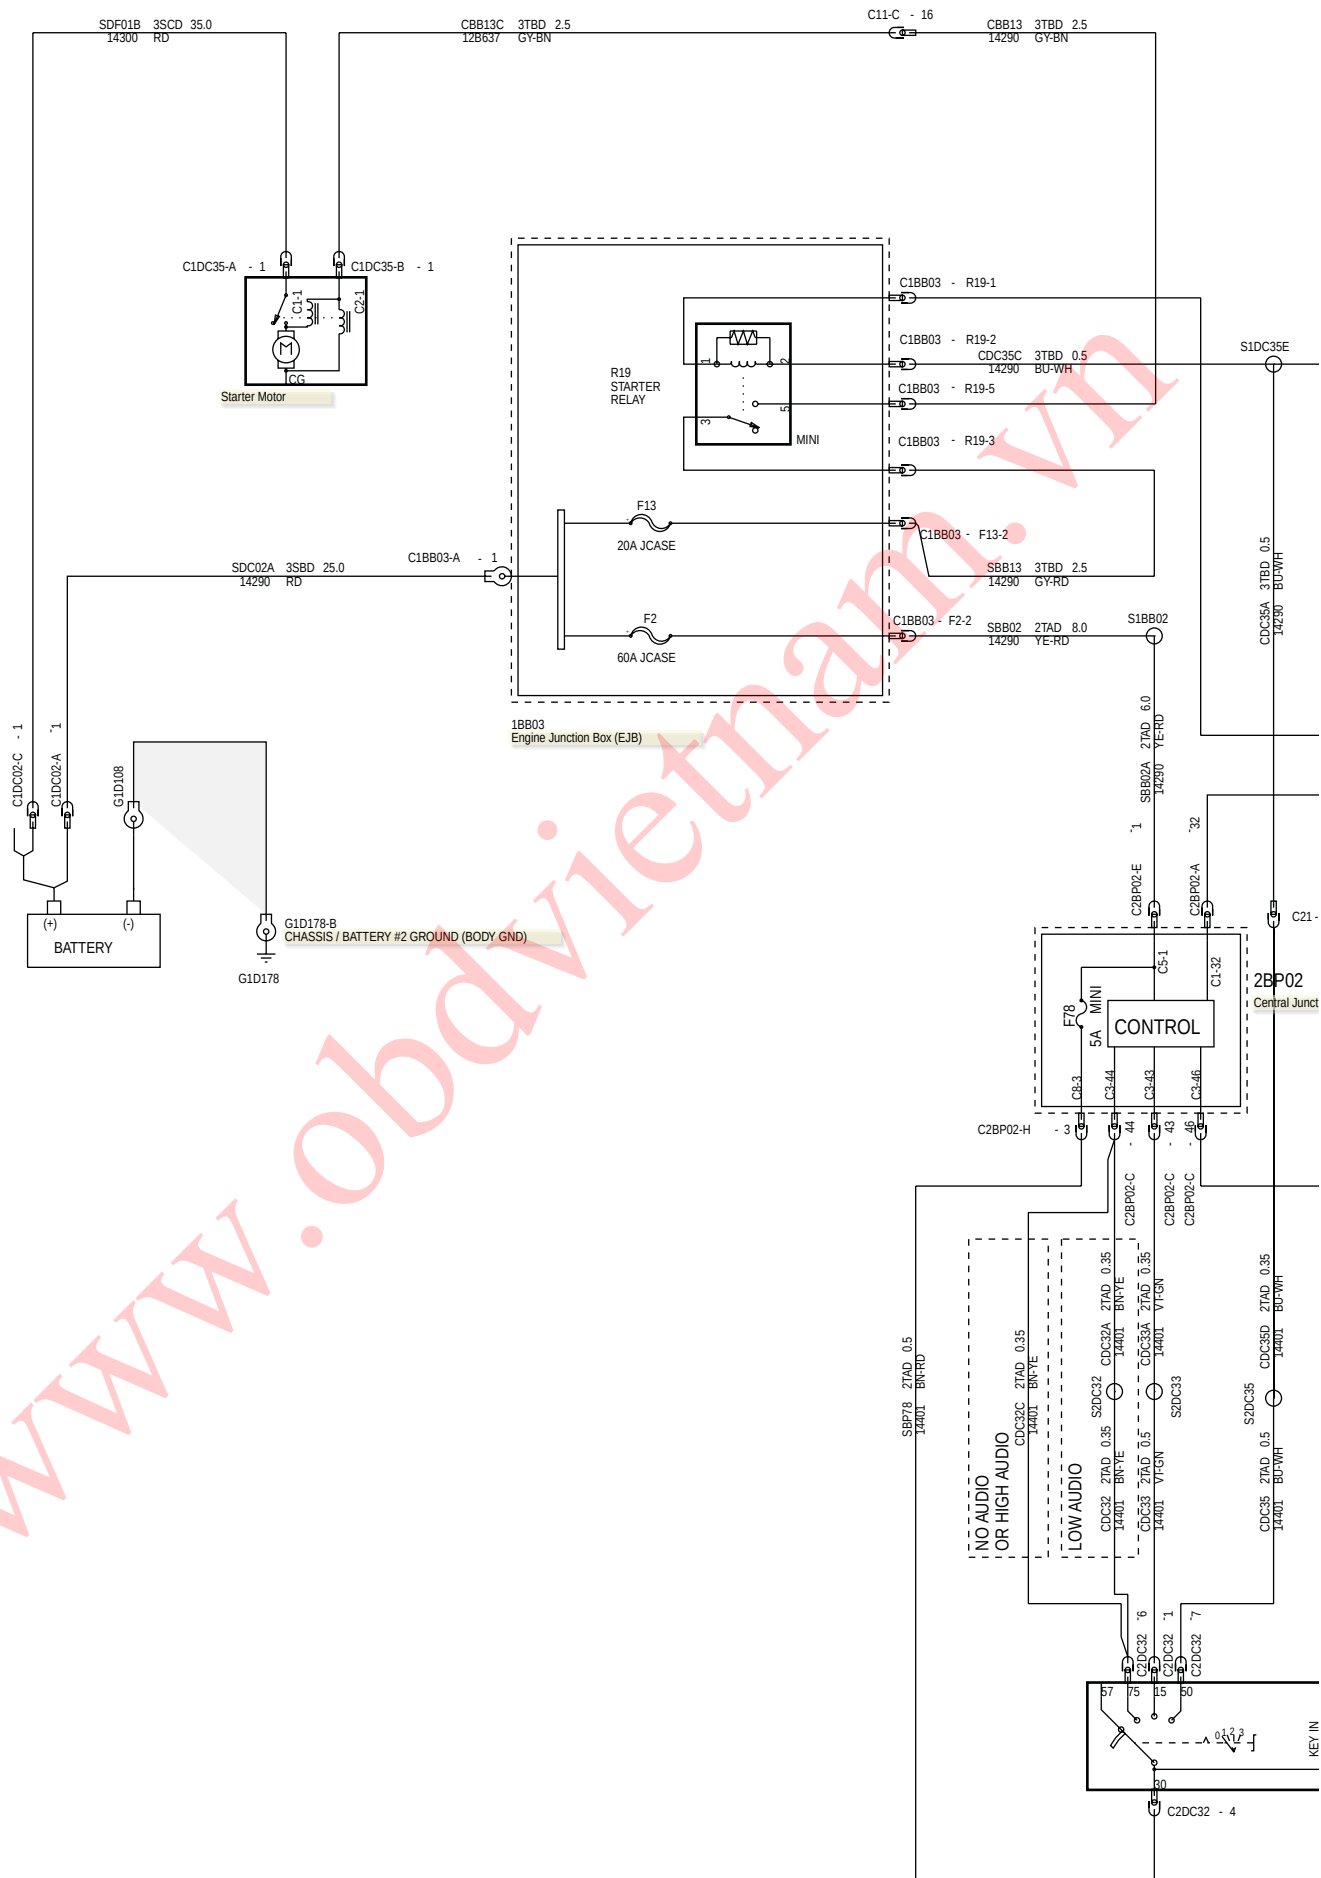


303-06B-5 Starting System—Vehicles With: 6-Speed Automatic Transaxle - 6R80, LHD 4WD/LHD RWD

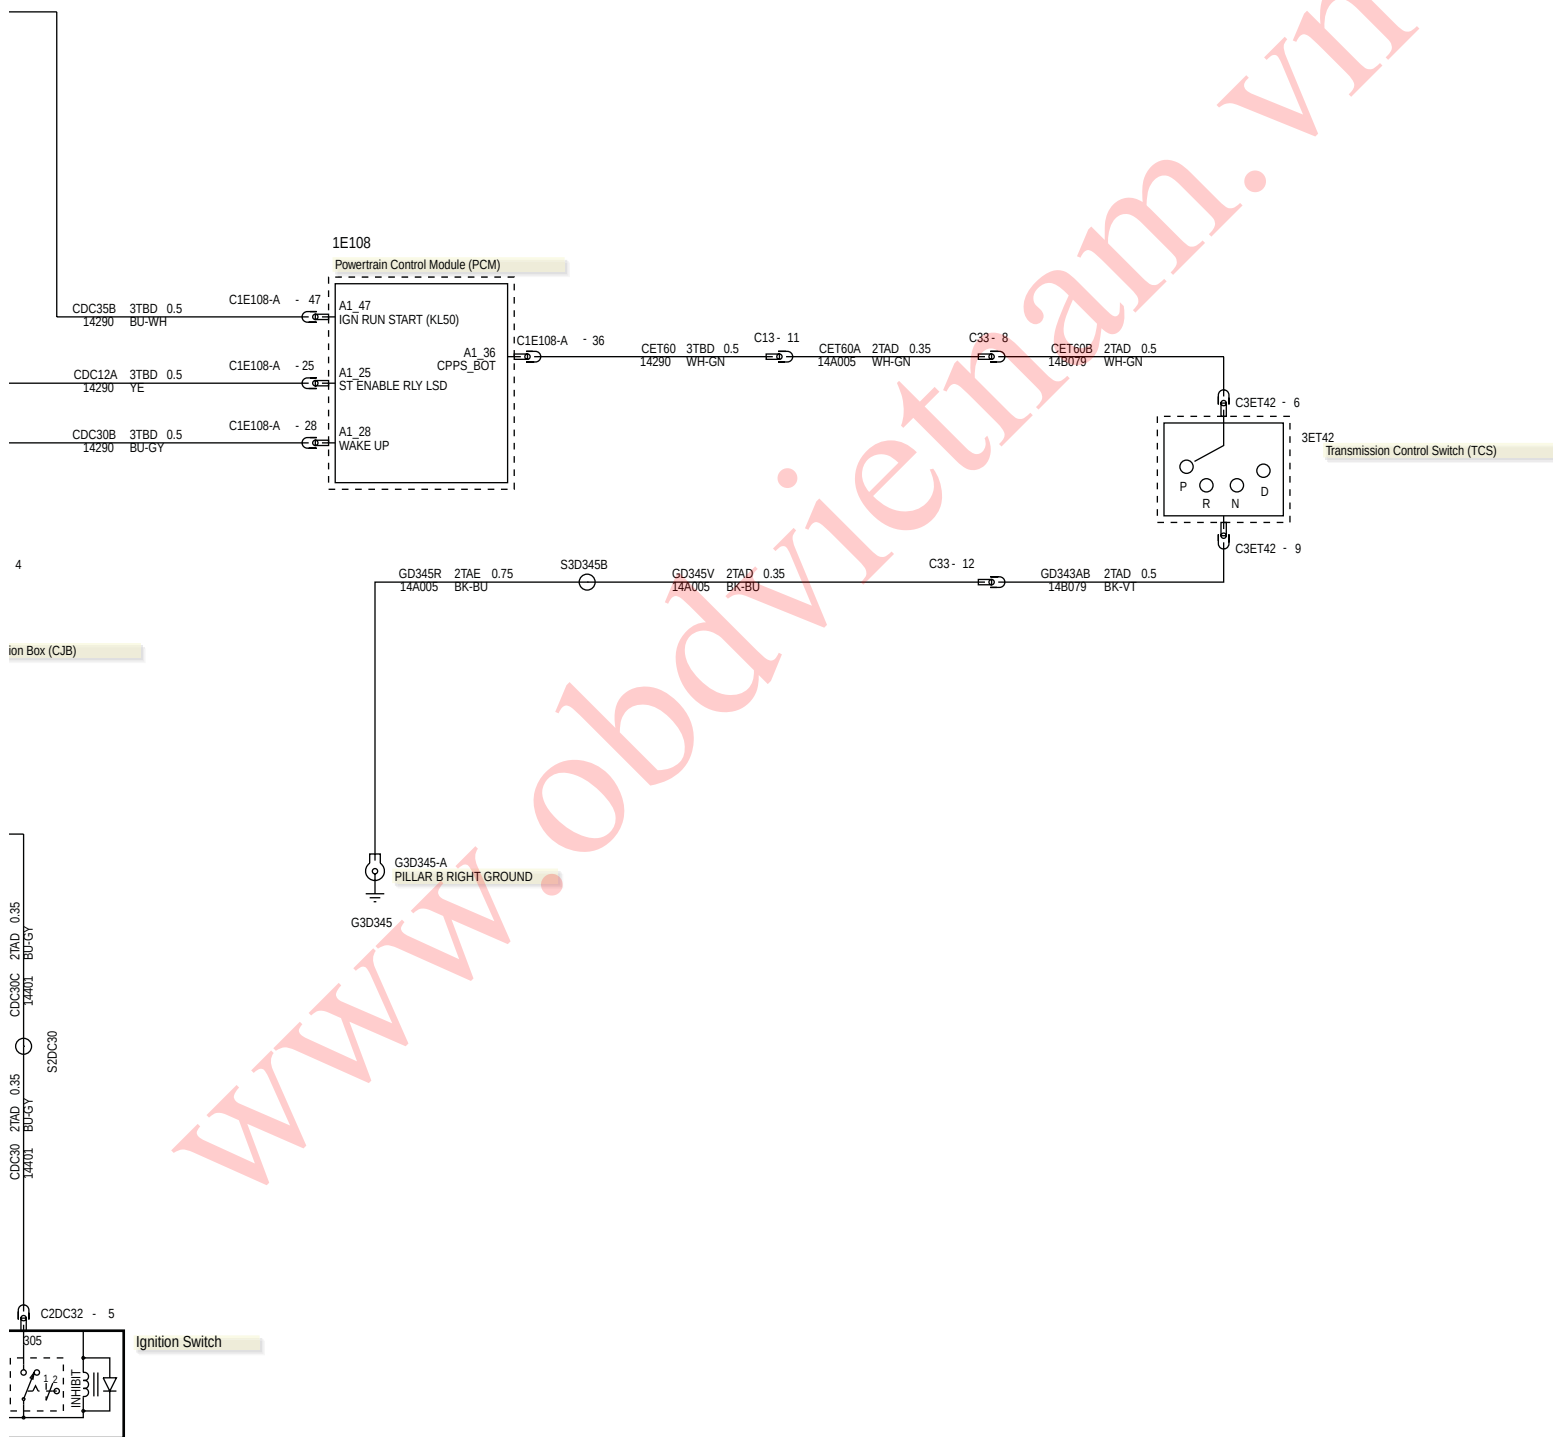


303-06B-6 Starting System—Vehicles With: 6-Speed Automatic Transaxle - 6R80, RHD 4WD/RHD RWD

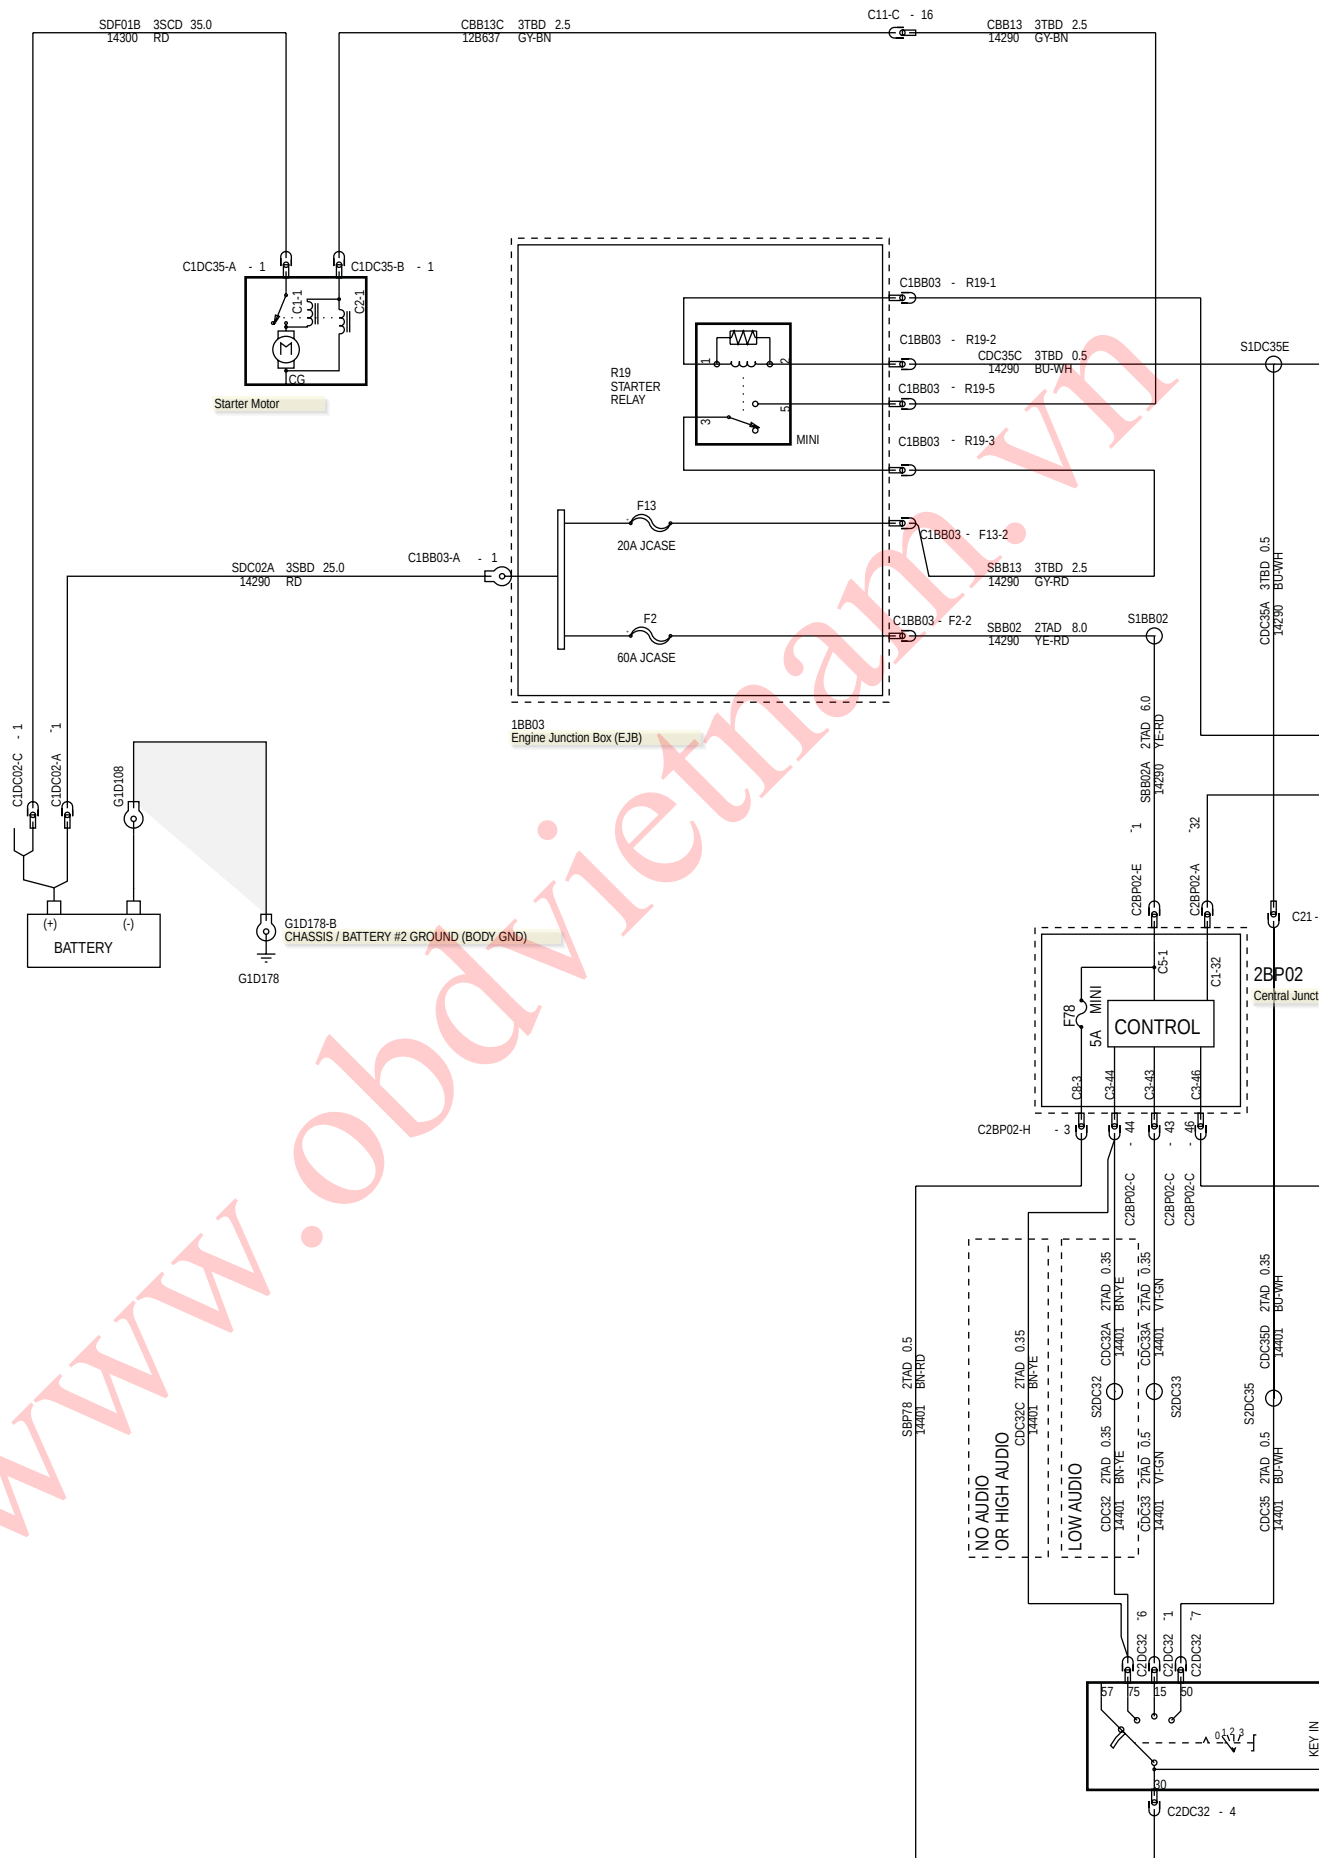

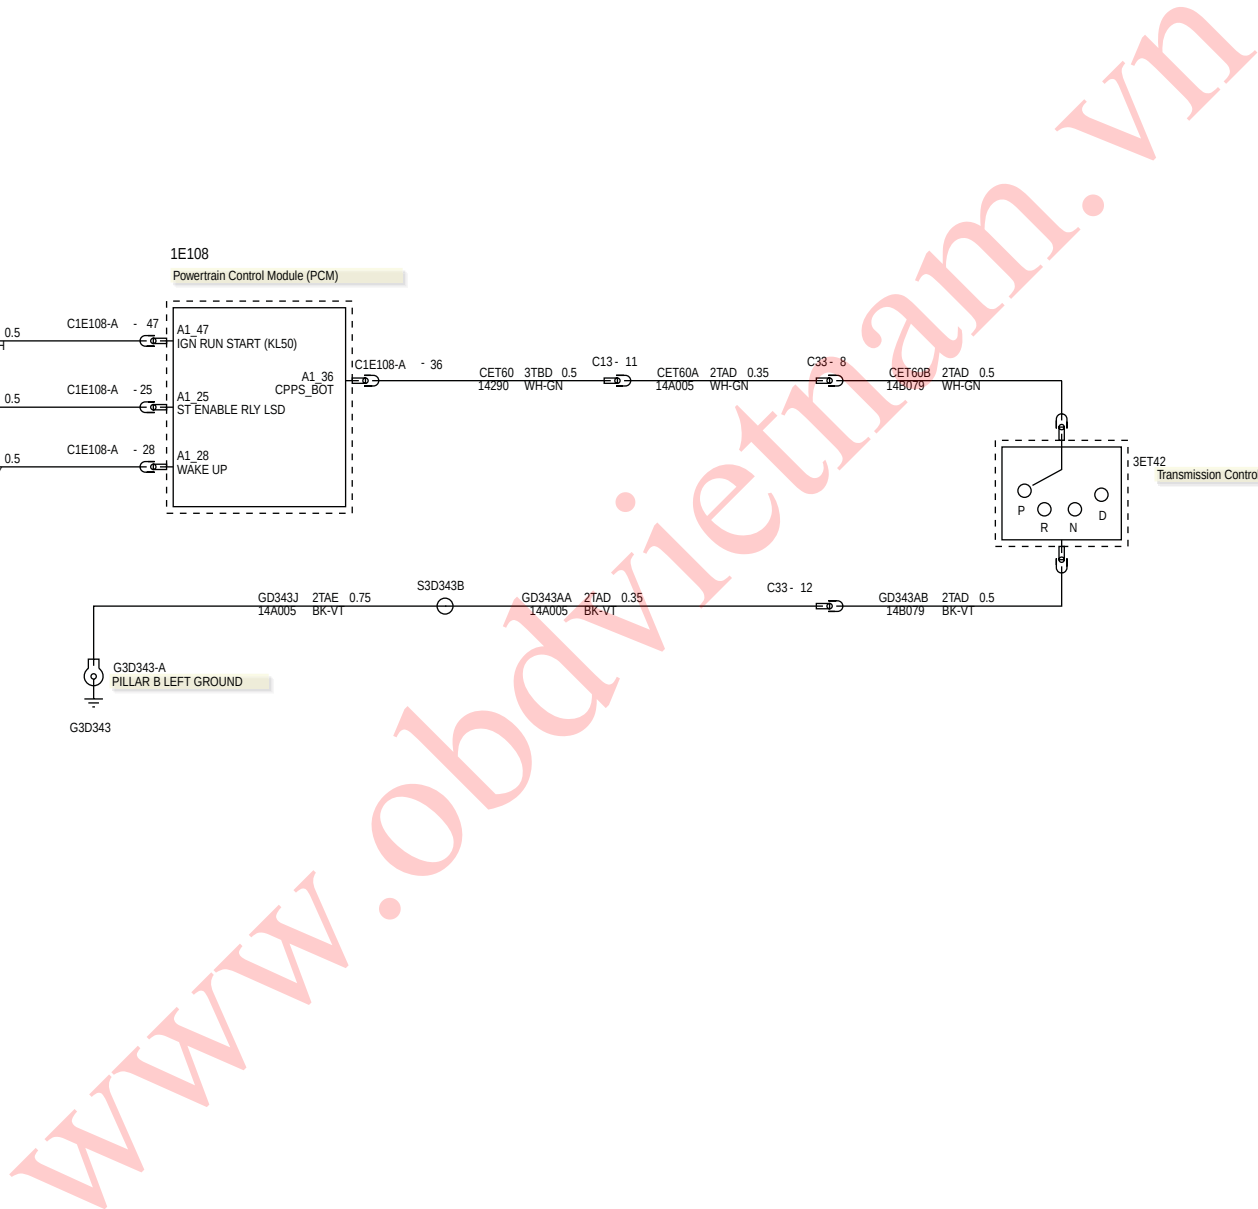


303-06B-8

Starter Motor—A (G1403964)

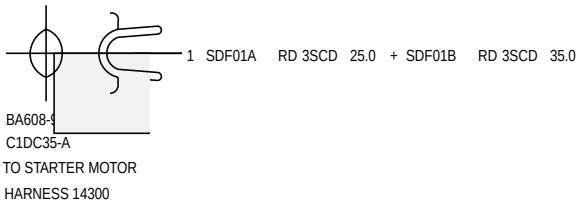

Starter Motor—B (G1403965)

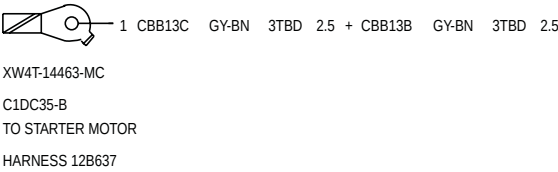

www.obdviethnam.vn

SECTION 303-07A Engine Ignition — 2.5L Duratec-HE (122kW/165PS) -

MI4

VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS


PAGE

ELECTRICAL CONNECTORS

Ignition Coil-On-Plug 1.....	303-07A-2
Ignition Coil-On-Plug 2.....	303-07A-2
Ignition Coil-On-Plug 3.....	303-07A-2
Ignition Coil-On-Plug 4.....	303-07A-2

303-07A-2


Ignition Coil-On-Plug 1 (G1403973)

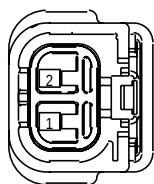

2	CBB25B	WH-OG	3TBD	1.0	GOLD
1	CE303A	WH-VT	3TBD	1.5	GOLD

AU5T-14A464-SCB
C1E303
TO IGNITION COIL1
HARNESS 12B637


Ignition Coil-On-Plug 2 (G1403974)

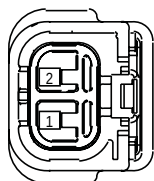

2	CBB25C	WH-OG	3TBD	1.0	GOLD
1	CE304A	YE-BU	3TBD	1.5	GOLD

AU5T-14A464-SCB
C1E304
TO IGNITION COIL2
HARNESS 12B637


Ignition Coil-On-Plug 3 (G1403975)

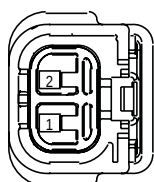

2	CBB25D	WH-OG	3TBD	1.0	GOLD
1	CE305A	BU-OG	3TBD	1.5	GOLD

AU5T-14A464-SCB
C1E305
TO IGNITION COIL3
HARNESS 12B637

Ignition Coil-On-Plug 4 (G1403976)

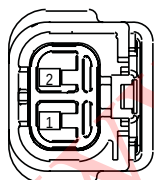

2	CBB25E	WH-OG	3TBD	1.0	GOLD
1	CE306A	GN-VT	3TBD	1.5	GOLD

AU5T-14A464-SCB
C1E306
TO IGNITION COIL4
HARNESS 12B637

SECTION 303-07B Glow Plug System — 2.2L Duratorq-TDCi (Puma)

Diesel

VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS

PAGE

ELECTRICAL CONNECTORS

Glow Plug 1.....	303-07B-2
Glow Plug 2.....	303-07B-2
Glow Plug 3.....	303-07B-2
Glow Plug 4.....	303-07B-2
Glow Plug Module.....	303-07B-3
Glow Plug Module — B.....	303-07B-3

303-07B-2

Glow Plug 1 (G1403983)


PIN 1 => CE243 GY-VT 2.5 3TBD



3201515F6
C1E243
TO PRE GLOW HEATER1
HARNESS 6M091

Glow Plug 2 (G1403984)


PIN 1 => CE244 BU-BN 2.5 3TBD

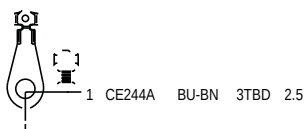

3201515F6
C1E244
TO PRE GLOW HEATER2
HARNESS 6M091

Glow Plug 3 (G1403985)


PIN 1 => CE245 VT-WH 2.5 3TBD

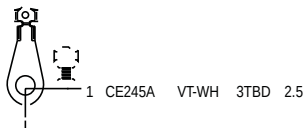

3201515F6
C1E245
TO PRE GLOW HEATER3
HARNESS 6M091

Glow Plug 4 (G1403986)


PIN 1 => CE246 YE-BU 2.5 3TBD

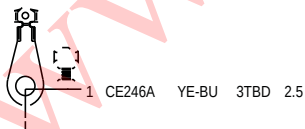

3201515F6
C1E246
TO PRE GLOW HEATER4
HARNESS 6M091

303-07B-3

Glow Plug Module (G1403987)

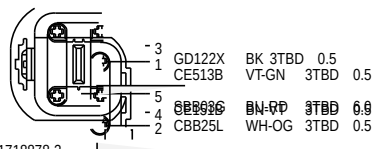


1718878-2

C1E513

TO GLOW PLUG CONTROL MODULE I4

HARNESS 70G239

Glow Plug Module—B (G1403988)

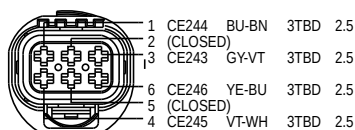

1452327-2

C1E513-B

TO GLOW PLUG CONTROL MODULE I4(GP)

HARNESS 6M091

SECTION 303-07C Glow Plug System — 3.2L Duratorq-TDCi (Puma)

Diesel

VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS

PAGE

ELECTRICAL CONNECTORS

Glow Plug 1.....	303-07C-2
Glow Plug 2.....	303-07C-2
Glow Plug 3.....	303-07C-2
Glow Plug 4.....	303-07C-2
Glow Plug 5.....	303-07C-3
Glow Plug Module — A.....	303-07C-3
Glow Plug Module — C.....	303-07C-3

303-07C-2

Glow Plug 1 (G1403983)


PIN 1 => CE243 GY-VT 2.5 3TBD



3201515F6
C1E243
TO PRE GLOW HEATER1
HARNESS 6M091

Glow Plug 2 (G1403984)


PIN 1 => CE244 BU-BN 2.5 3TBD

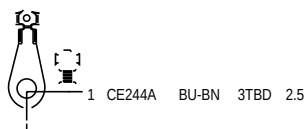

3201515F6
C1E244
TO PRE GLOW HEATER2
HARNESS 6M091

Glow Plug 3 (G1403985)


PIN 1 => CE245 VT-WH 2.5 3TBD

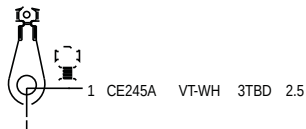

3201515F6
C1E245
TO PRE GLOW HEATER3
HARNESS 6M091

Glow Plug 4 (G1403986)


PIN 1 => CE246 YE-BU 2.5 3TBD

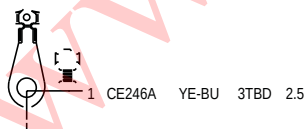

3201515F6
C1E246
TO PRE GLOW HEATER4
HARNESS 6M091


303-07C-3

Glow Plug 5 (G1406832)

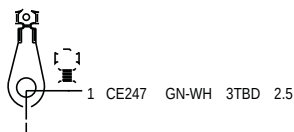


3201515F6
C1E247
TO PRE GLOW HEATER5
HARNESS 6M091

Glow Plug Module—A (G1403995)

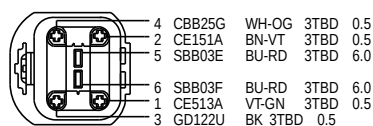

1703661-1
C1E513-A
TO GLOW PLUG CONTROL MODULE I5
HARNESS 70G239

Glow Plug Module—C (G1403996)

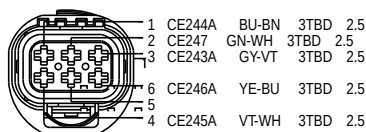

AW9T-14A464-AA
C1E513-C
TO GLOW PLUG CONTROL MODULE I5(GP)
HARNESS 6M091

SECTION 303-08 Engine Emission Control — 2.2L Duratorq-TDCi

(Puma) Diesel/3.2L Duratorq-TDCi (Puma) Diesel

VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS

PAGE


ELECTRICAL CONNECTORS

Exhaust Gas Recirculation (EGR) Valve..... 303-08-2

www.obdvietsnam.vn

303-08-2

Exhaust Gas Recirculation (EGR) Valve (G1403998)

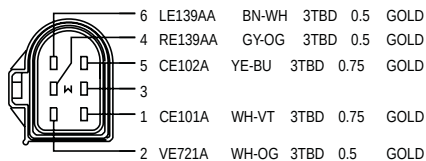

3M5T-14A464-DZA
C1E139
TO EGR VALVE-DC MOTOR POSITION FEEDBACK
HARNESS 12B637

SECTION 303-13 Evaporative Emissions

VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS

PAGE

ELECTRICAL CONNECTORS

Evaporative Emission Canister Purge Valve.....	303-13-2
--	----------

www.obdviethnam.vn

303-13-2

Evaporative Emission Canister Purge Valve (G1404000)



2	CBB22L	GN-OG	3TBD	0.75
1	CE408A	GY-BN	3TBD	0.75

3S7T-14A464-MA

C1E135

TO CANISTER PURGE SOLENOID

HARNESS 12B637

www.obdvietsnam.vn

SECTION 303-14A Electronic Engine Controls — 2.5L

Duratec-HE (122kW/165PS) - MI4

VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS

PAGE


ELECTRICAL SCHEMATICS

Engine Control..... 303-14A-2


ELECTRICAL CONNECTORS

Accelerator Pedal Position (APP) Sensor..... 303-14A-6
Brake Pedal Position (BPP) Switch..... 303-14A-6
Clutch Pedal Position (CPP) Switch..... 303-14A-6
Clutch Pedal Position (CPP) Switch..... 303-14A-6
Vehicle Speed Sensor 1 (VSS1)..... 303-14A-6
Catalyst Monitor Sensor..... 303-14A-7
Crankshaft Position (CKP) Sensor..... 303-14A-7
Engine Coolant Temperature (ECT) Sensor — A..... 303-14A-7
Engine Oil Pressure (EOP) Switch..... 303-14A-7
Heated Oxygen Sensor (HO2S)..... 303-14A-7
Intake Camshaft Position (CMP) Sensor..... 303-14A-8
Intake Variable Valve Timing (VVT) Oil Control Solenoid..... 303-14A-8
Knock Sensor (KS)..... 303-14A-8
Manifold Absolute Pressure and Temperature (MAPT) Sensor..... 303-14A-8
Powertrain Control Module (PCM) — A..... 303-14A-9
Powertrain Control Module (PCM) — B..... 303-14A-9
Powertrain Control Module (PCM) — C..... 303-14A-10
Power Steering Pressure (PSP) Switch..... 303-14A-10
Throttle Control Unit..... 303-14A-10


2012.0 Ranger (G1420067)

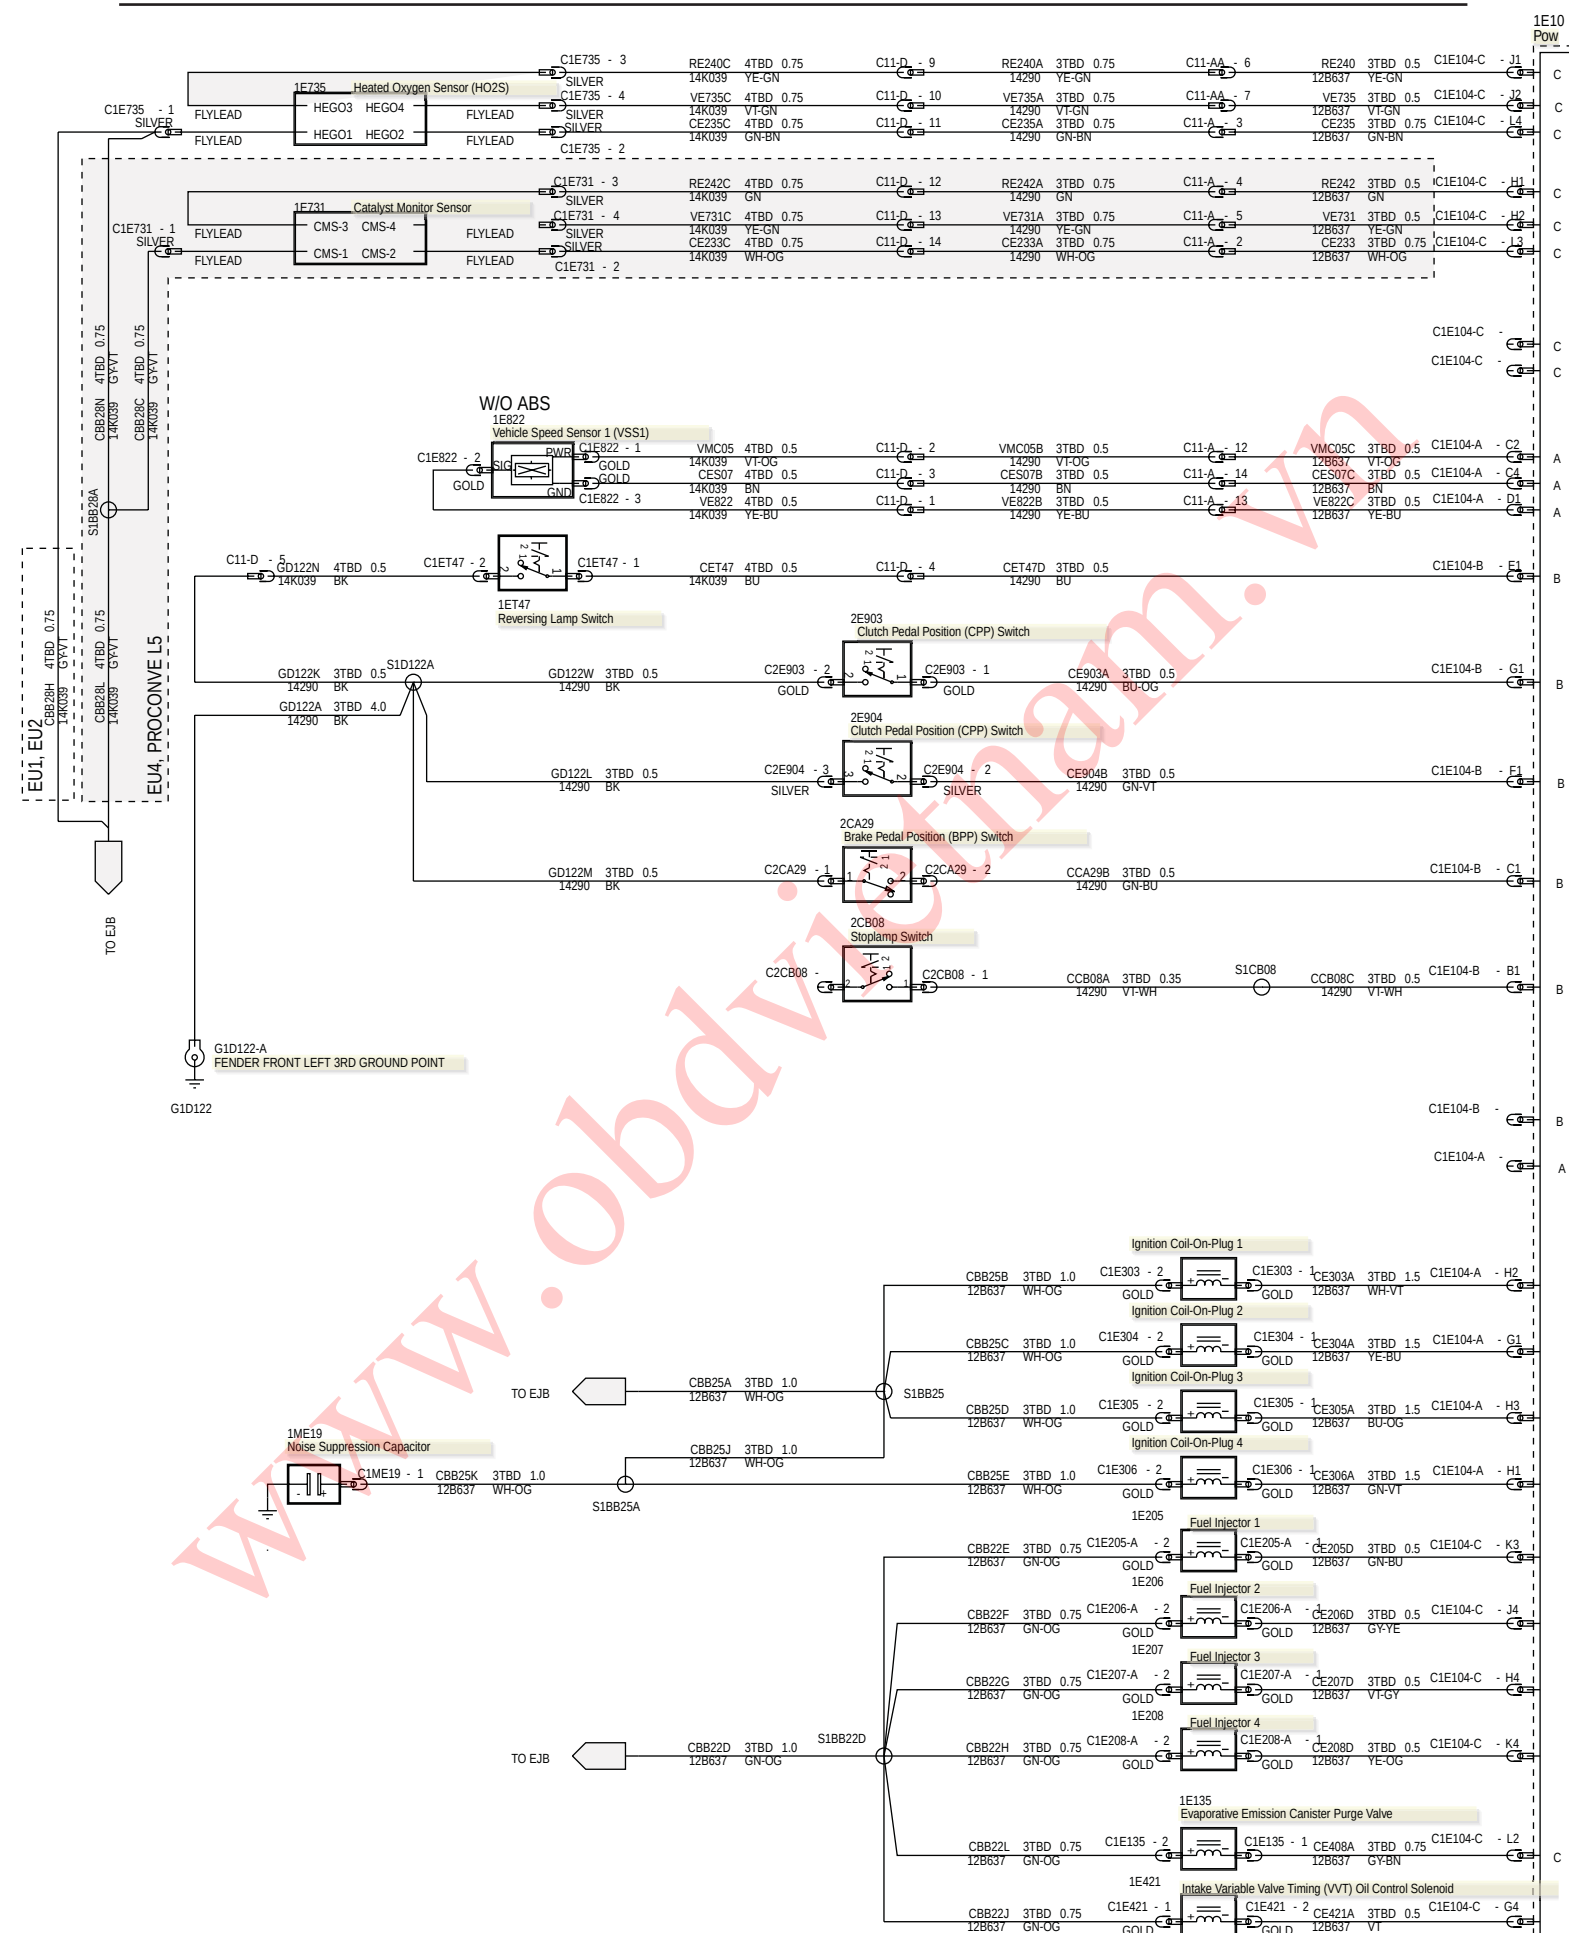


303-14A-3 Engine Control

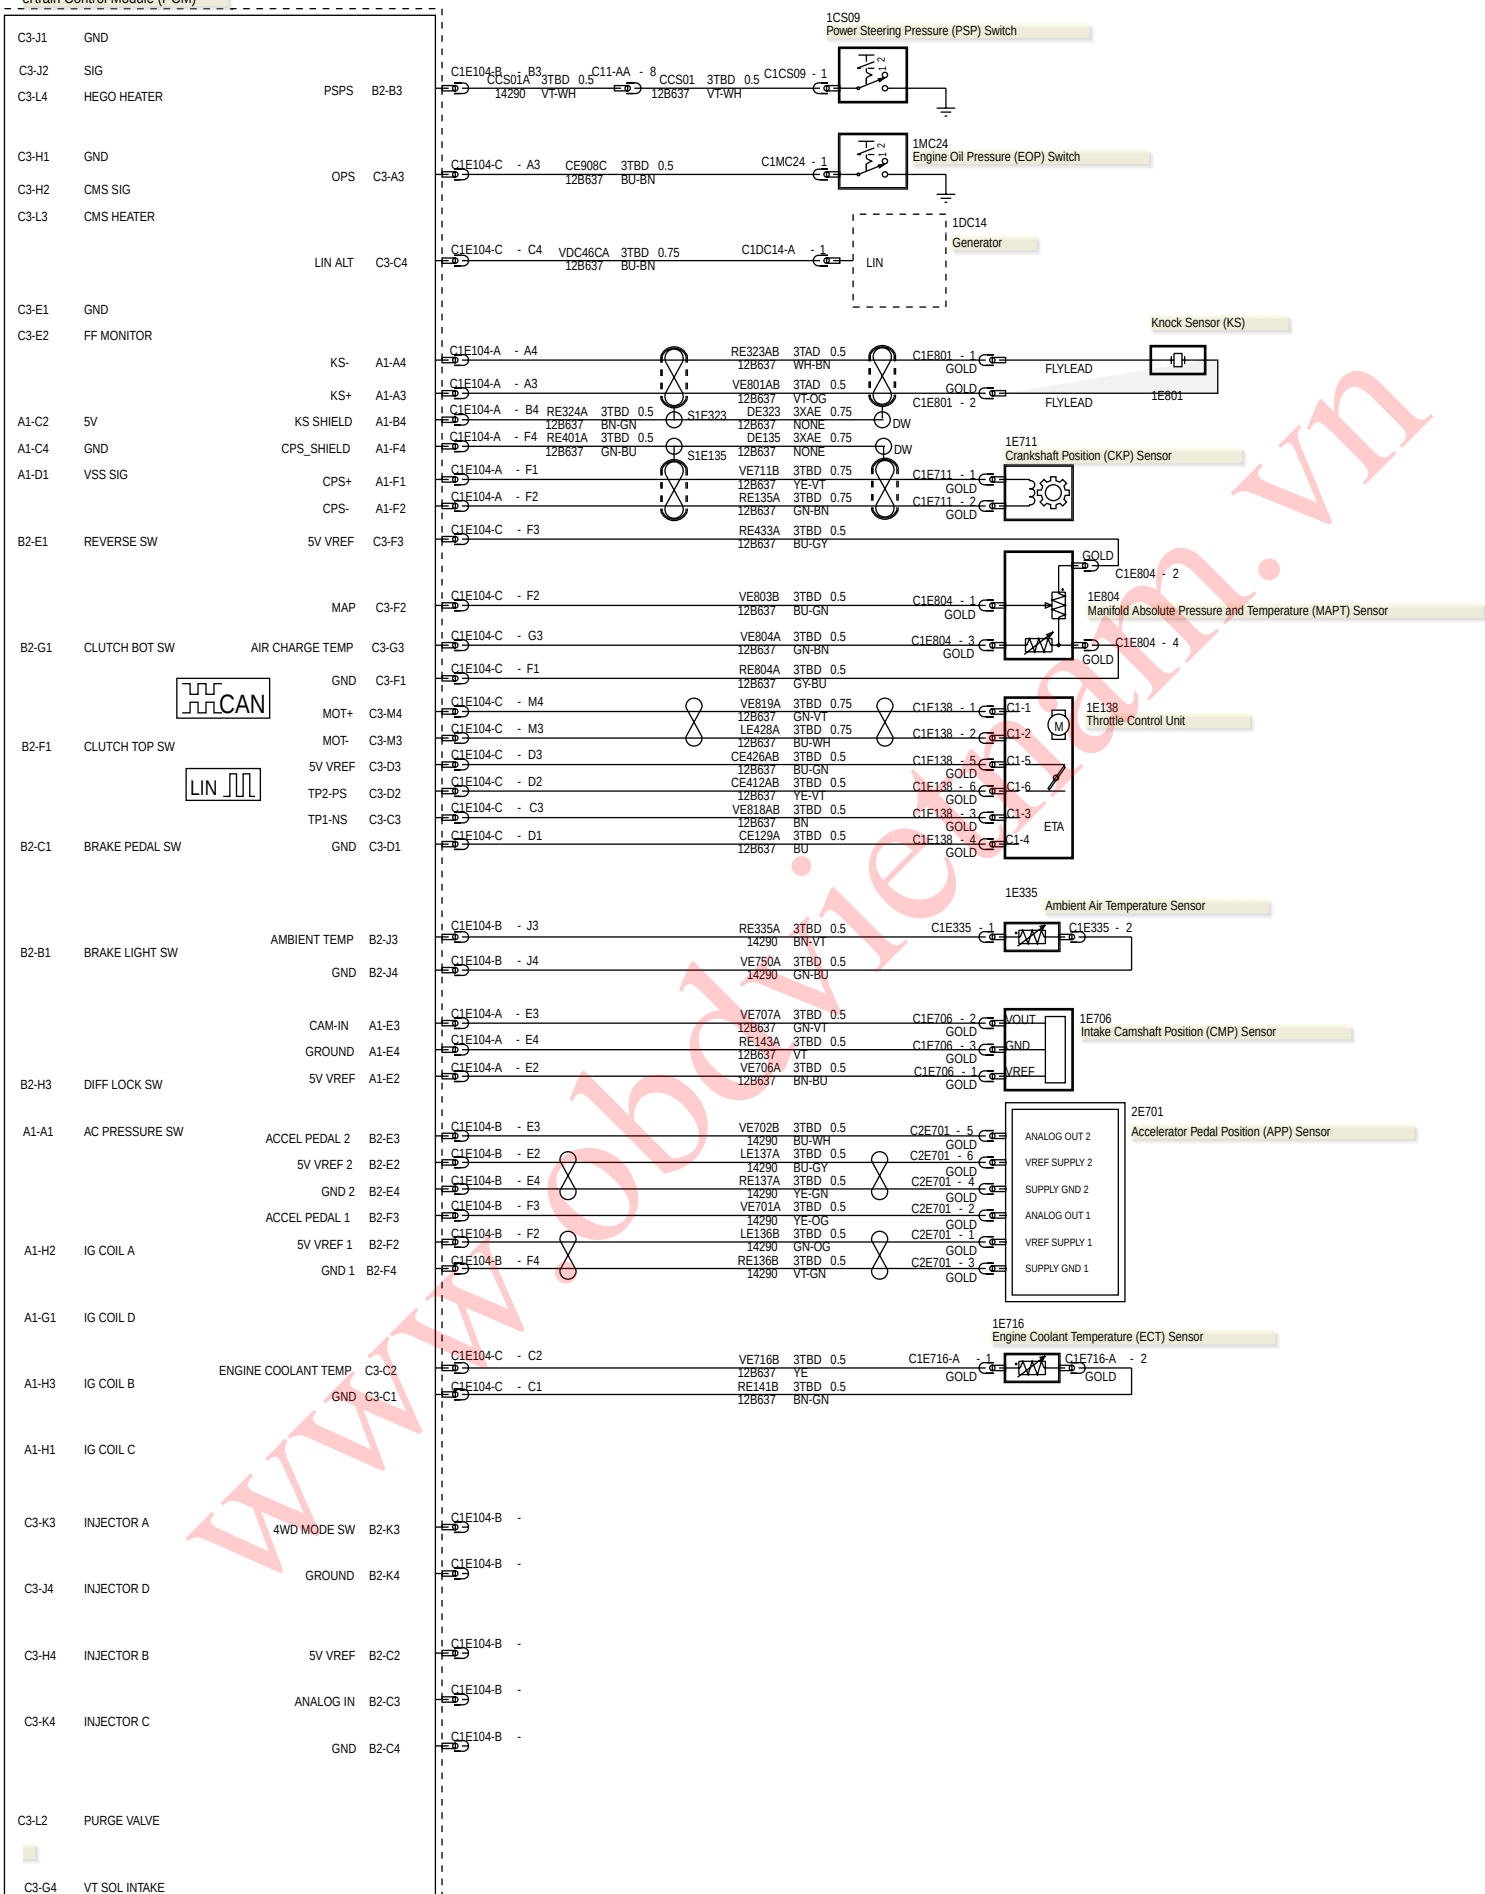04
ertrain Control Module (PCM)

303-14A-4 Engine Control

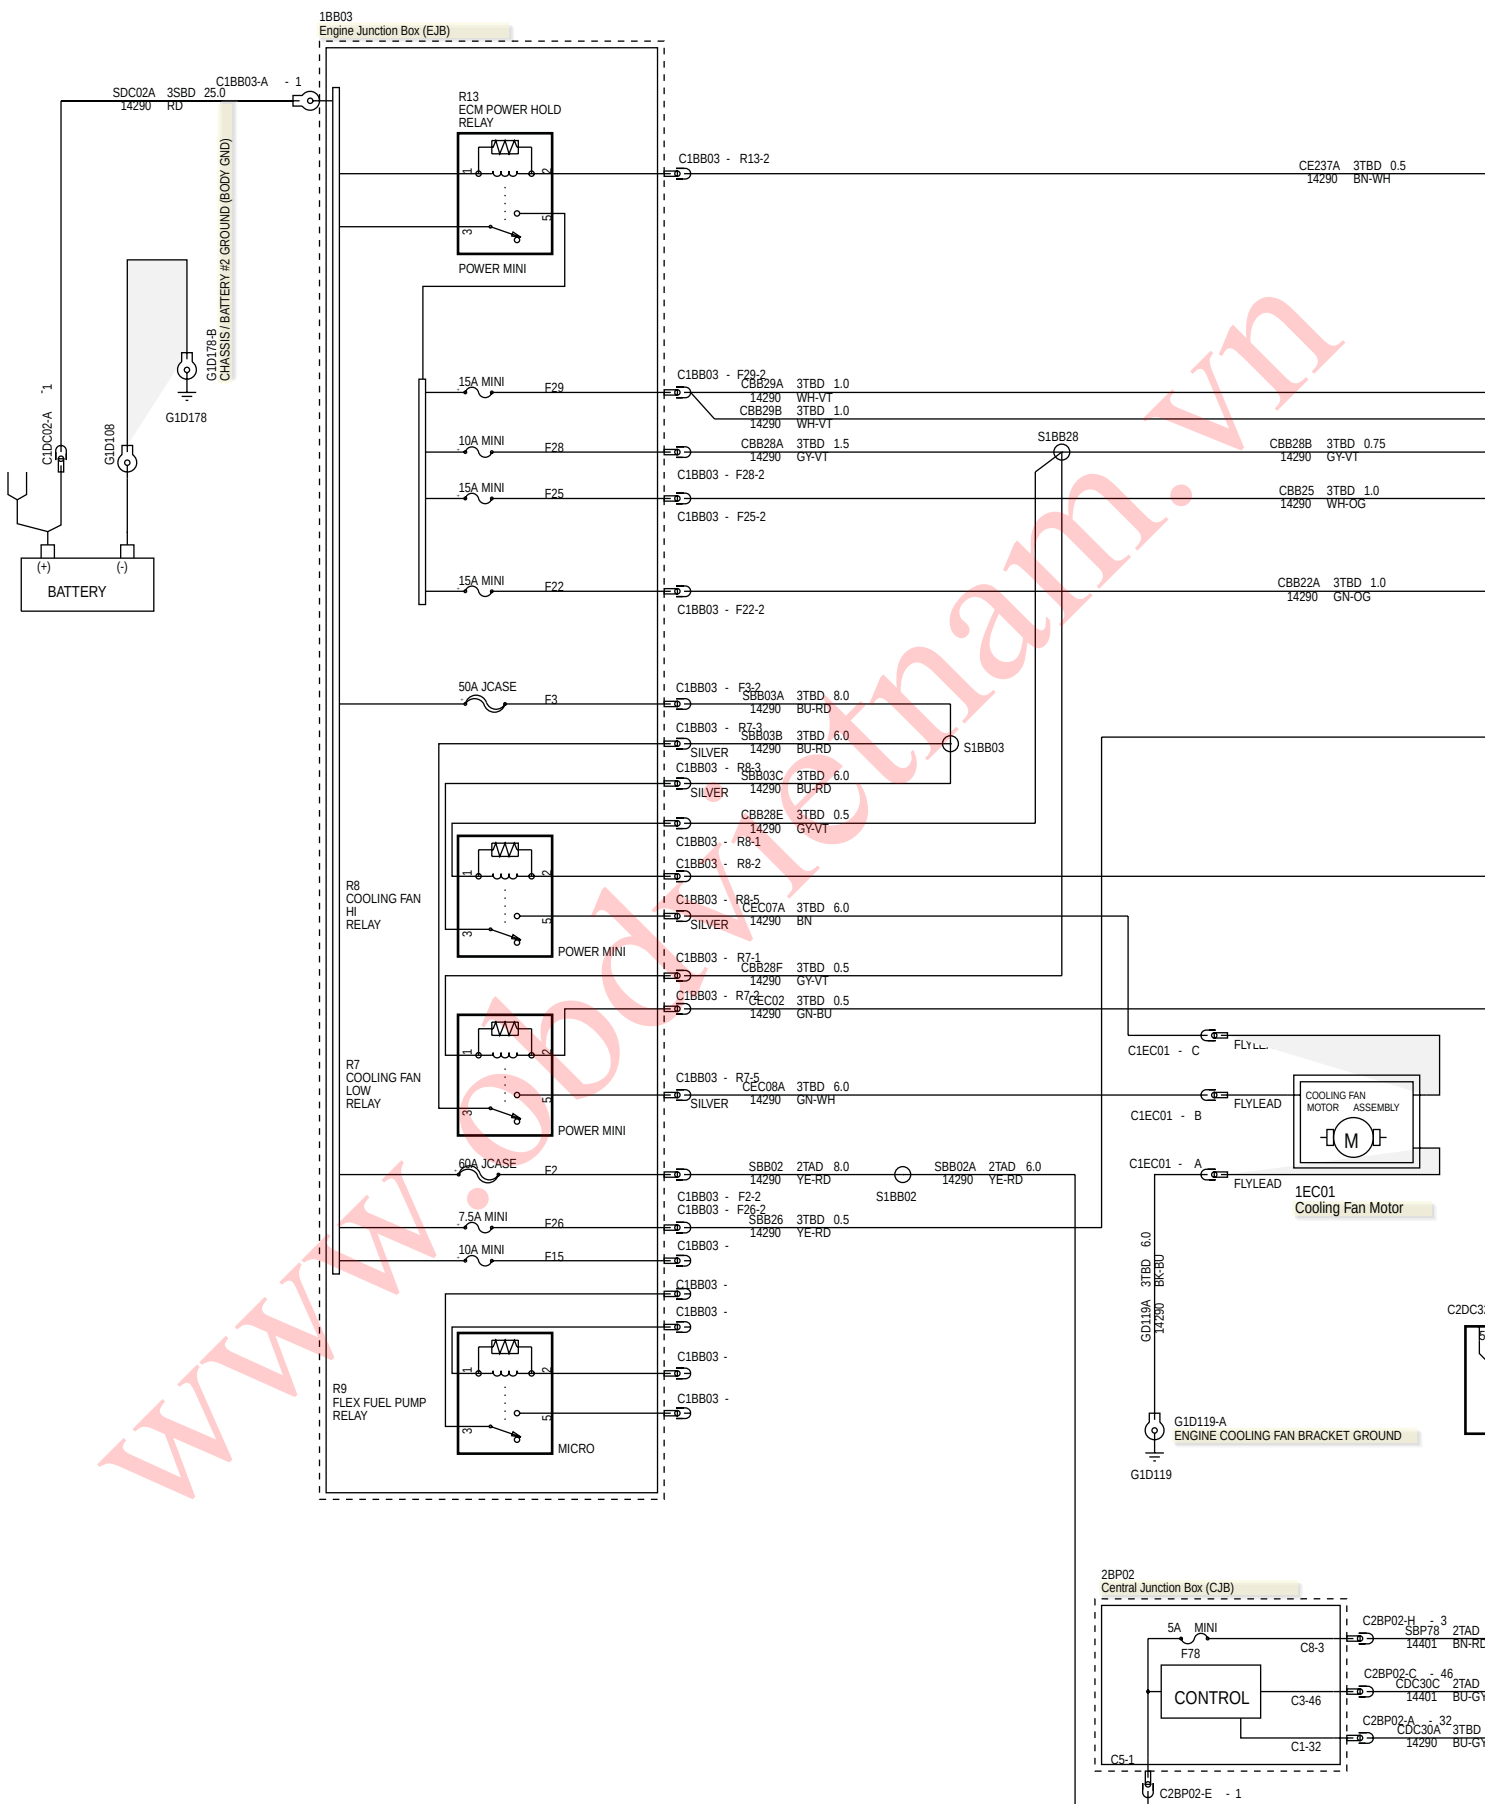


303-14A-5 Engine Control

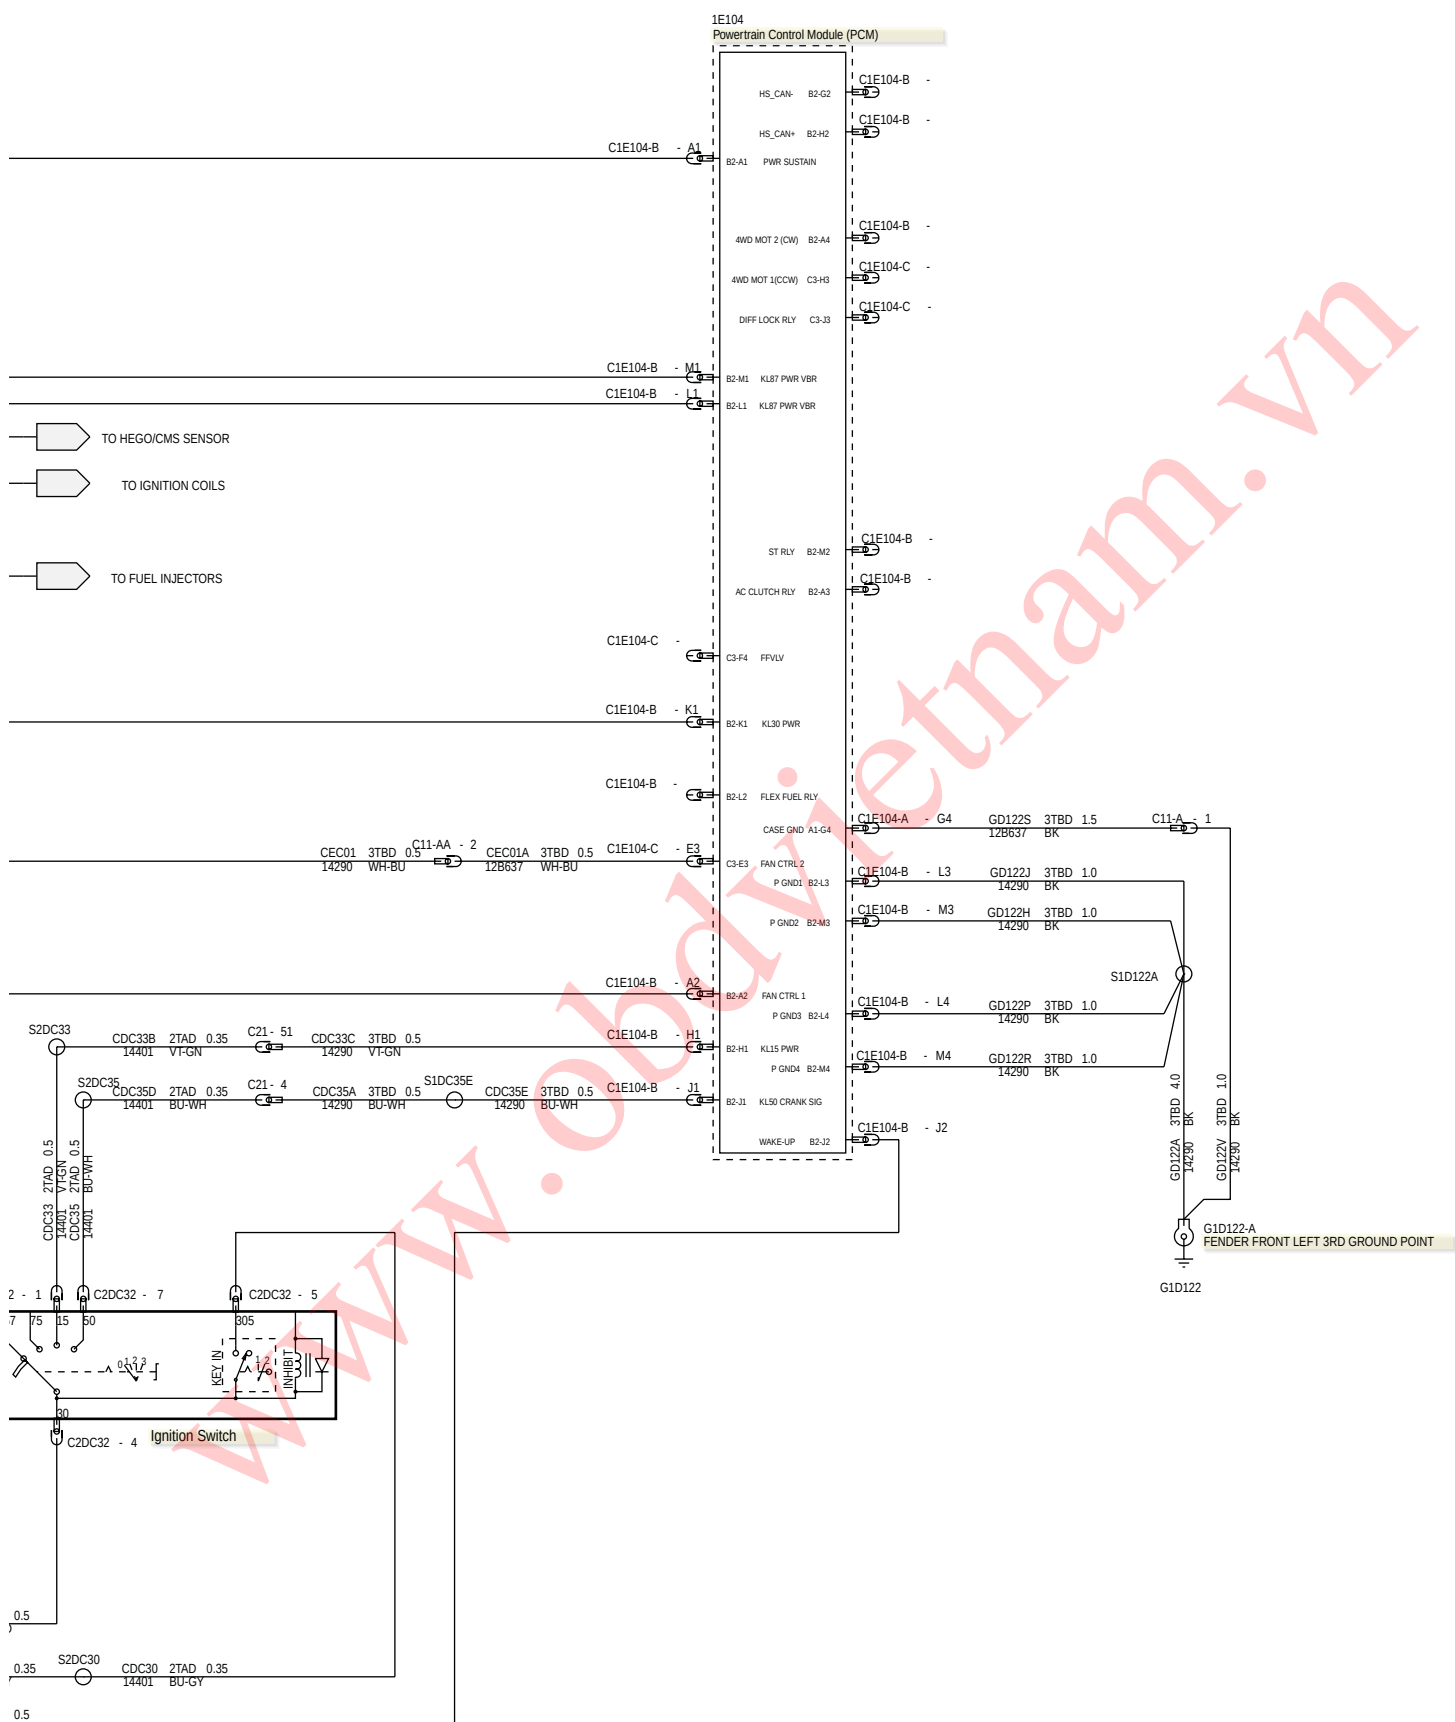

303-14A-6

Accelerator Pedal Position (APP) Sensor (G1404002)

PIN 1 => LE136A GN-OG 0.5 3TBD
 PIN 2 => VE701B YE-OG 0.5 3TBD
 PIN 3 => RE136A VT-GN 0.5 3TBD
 PIN 4 => RE137B YE-GN 0.5 3TBD
 PIN 5 => VE702A BU-WH 0.5 3TBD
 PIN 6 => LE137B BU-GY 0.5 3TBD

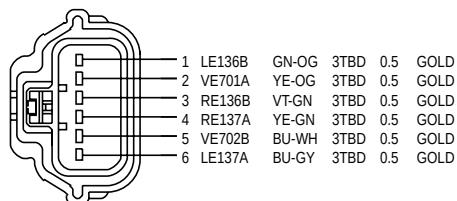

8U5T-14A464-JAA(000)


C2E701

TO ACCELERATOR PEDAL

HARNESS 14290

Brake Pedal Position (BPP) Switch (G1404158)

PIN 2 => CCA29A GN-BU 0.5 3TBD



F5LB-14489-BA


C2CA29

TO SPEED CONTROL INHIBIT SWITCH

HARNESS 14290

Clutch Pedal Position (CPP) Switch (G1404159)

PIN 1 => CE903B BU-OG 0.5 3TBD



97BG-14489-YBB


C2E903

TO CPP-BT

HARNESS 14290

Clutch Pedal Position (CPP) Switch (G1404160)

PIN 2 => CE904A GN-VT 0.5 3TBD




1L2T-14489-GC

C2E904

TO CPP-TT

HARNESS 14290

Vehicle Speed Sensor 1 (VSS1) (G1404208)

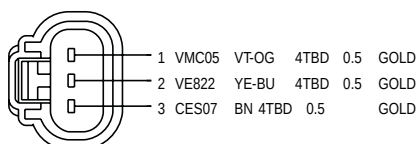

2L1T-14A464-ZA

C1E822


TO VEHICLE SPEED SENSOR

HARNESS 14K039

303-14A-7

Catalyst Monitor Sensor (G1404226)

VE731C	YE-GN	4TBD	0.75	SILVER	4
CE233C	WH-OG	4TBD	0.75	SILVER	2
CBB28C	GY-VT	4TBD	0.75	SILVER	1
RE242C	GN	4TBD	0.75	SILVER	3




7U5T-14A624-BA(000)

C1E731

TO FLYLEAD CMS

HARNESS 14K039

Crankshaft Position (CKP) Sensor (G1404227)

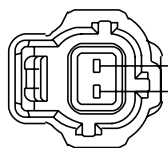

2	RE135A	GN-BN	3TBD	0.75	GOLD
1	VE711B	YE-VT	3TBD	0.75	GOLD


F7RB-14A464-AA

C1E711

TO CRANKSHAFT POSITION SENSOR PETROL

HARNESS 12B637

Engine Coolant Temperature (ECT) Sensor—A (G1404228)

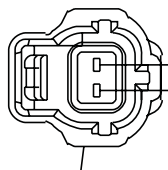

2	RE141B	BN-GN	3TBD	0.5	GOLD
1	VE716B	YE	3TBD	0.5	GOLD


F5AB-14A464-BB

C1E716-A

TO ENGINE COOLANT TEMP SENSOR

HARNESS 12B637

Engine Oil Pressure (EOP) Switch (G1404229)

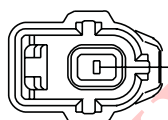

1	CE908C	BU-BN	3TBD	0.5
---	--------	-------	------	-----

F65B-14A464-CA


C1MC24

TO OIL PRESSURE SWITCH PETROL

HARNESS 12B637

Heated Oxygen Sensor (HO2S) (G1404252)

VE735C	VT-GN	4TBD	0.75	SILVER	4
CE235C	GN-BN	4TBD	0.75	SILVER	2
CBB28H	GY-VT	4TBD	0.75	SILVER	1
RE240C	YE-GN	4TBD	0.75	SILVER	3



7U5T-14A624-CA(000)


C1E735

TO FLYLEAD HEGO

HARNESS 14K039

303-14A-8

Intake Camshaft Position (CMP) Sensor (G1404253)

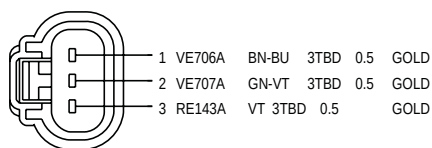


2L1T-14A464-ZA

C1E706

TO CAMSHAFT POSITION SENSOR PETROL

HARNESS 12B637

Intake Variable Valve Timing (VVT) Oil Control Solenoid (G1404254)




XF2T-14A464-YC

C1E421

TO IVCT CONTROL VALVE

HARNESS 12B637

Knock Sensor (KS) (G1404255)




98AG-14A624-ABB

C1E801

TO FLYLEAD KNOCK SENSOR

HARNESS 12B637

Manifold Absolute Pressure and Temperature (MAPT) Sensor (G1404256)

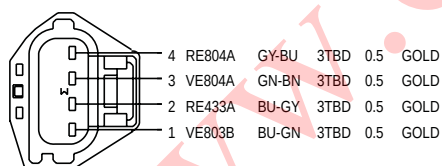

4M5T-14A464-YDA


C1E804

TO TEMP MANIFOLD ABSOLUTE PRESSURE SENSOR

HARNESS 12B637

303-14A-9

Powertrain Control Module (PCM)—A (G1404272)

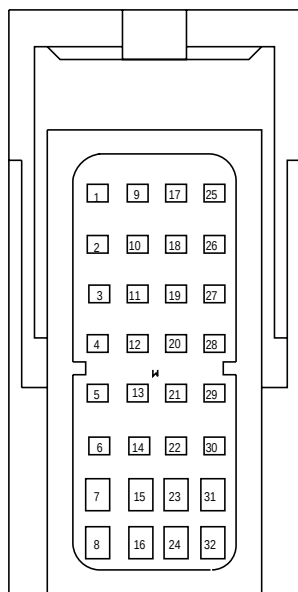


7V6N-14A464-RA(099)

C1E104-A
TO ECM1 PETROL
HARNESS 12B637

1	CH423A YE 3TBD 0.5
2	
3	
4	VE822C YE-BU 3TBD 0.5
5	
6	VE711B YE-VT 3TBD 0.75
7	CE304A YE-BU 3TBD 1.5
8	CE306A GN-VT 3TBD 1.5
9	
10	
11	VMC05C VT-OG 3TBD 0.5
12	
13	VE706A BN-BU 3TBD 0.5
14	RE135A GN-BN 3TBD 0.75
15	
16	CE303A WH-VT 3TBD 1.5
17	VE801AB VT-OG 3TAD 0.5
18	
19	
20	
21	VE707A GN-VT 3TBD 0.5
22	
23	
24	CE305A BU-OG 3TBD 1.5
25	RE323AB WH-BN 3TAD 0.5
26	RE324A BN-GN 3TBD 0.5
27	CE307C BN 3TBD 0.5
28	
29	RE143A VT 3TBD 0.5
30	RE401A GN-BU 3TBD 0.5
31	GD122S BK 3TBD 1.5
32	

Powertrain Control Module (PCM)—B (G1404273)

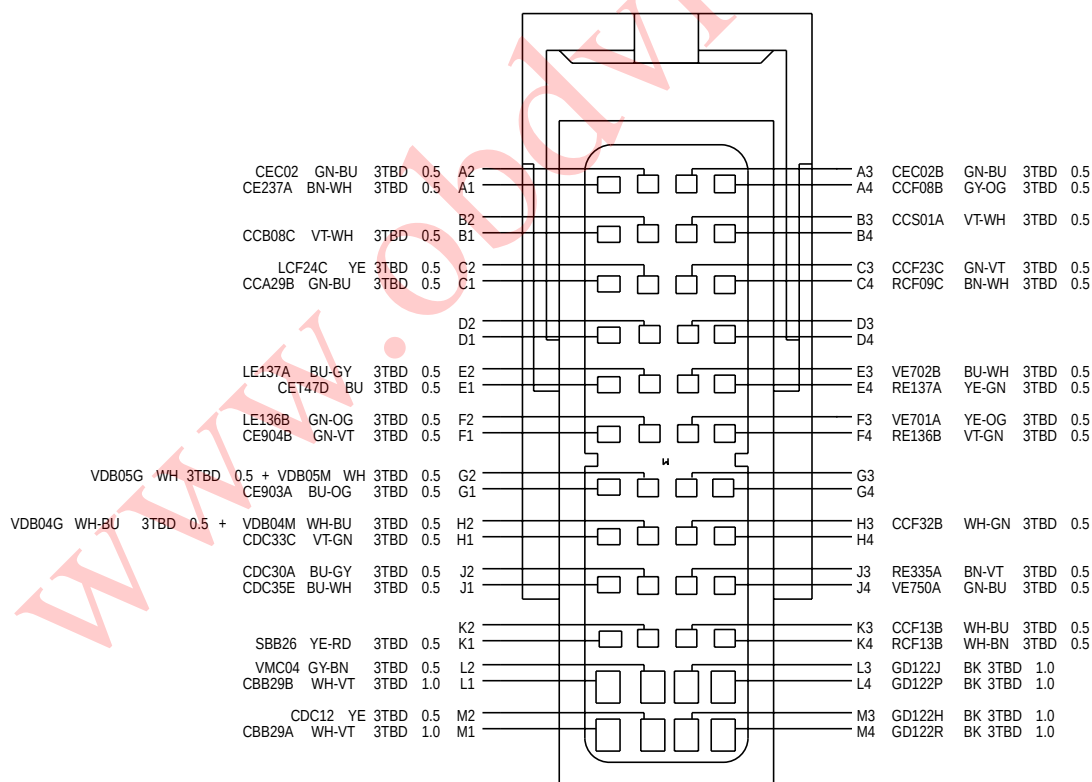


CEC02 GN-BU 3TBD 0.5	A2	CEC02B GN-BU 3TBD 0.5
CE237A BN-WH 3TBD 0.5	A1	CCF08B GY-OG 3TBD 0.5
	B2	
CCB08C VT-WH 3TBD 0.5	B1	B3 CCS01A VT-WH 3TBD 0.5
		B4
LCF24C YE 3TBD 0.5	C2	C3 CCF23C GN-VT 3TBD 0.5
CCA29B GN-BU 3TBD 0.5	C1	C4 RCF09C BN-WH 3TBD 0.5
	D2	
	D1	D3
		D4
LE137A BU-GY 3TBD 0.5	E2	E3 VE702B BU-WH 3TBD 0.5
CET47D BU 3TBD 0.5	E1	E4 RE137A YE-GN 3TBD 0.5
LE136B GN-OG 3TBD 0.5	F2	F3 VE701A YE-OG 3TBD 0.5
CE904B GN-VT 3TBD 0.5	F1	F4 RE136B VT-GN 3TBD 0.5
VDB05G WH 3TBD 0.5 + VDB05M WH 3TBD 0.5	G2	G3
CE903A BU-OG 3TBD 0.5	G1	G4
VDB04G WH-BU 3TBD 0.5 + VDB04M WH-BU 3TBD 0.5	H2	H3 CCF32B WH-GN 3TBD 0.5
CDC33C VT-GN 3TBD 0.5	H1	H4
CDC30A BU-GY 3TBD 0.5	J2	J3 RE335A BN-VT 3TBD 0.5
CDC35E BU-WH 3TBD 0.5	J1	J4 VE750A GN-BU 3TBD 0.5
SBB26 YE-RD 3TBD 0.5	K2	K3 CCF13B WH-BU 3TBD 0.5
VMC04 GY-BN 3TBD 0.5	K1	K4 RCF13B WH-BN 3TBD 0.5
CBB29B WH-VT 3TBD 1.0	L2	L3 GD122J BK 3TBD 1.0
	L1	L4 GD122P BK 3TBD 1.0
CDC12 YE 3TBD 0.5	M2	M3 GD122H BK 3TBD 1.0
CBB29A WH-VT 3TBD 1.0	M1	M4 GD122R BK 3TBD 1.0

7V6N-14A464-VA(099)

C1E104-B
TO ECM2 PETROL
HARNESS 14290

303-14A-10

Powertrain Control Module (PCM)—C (G1404274)

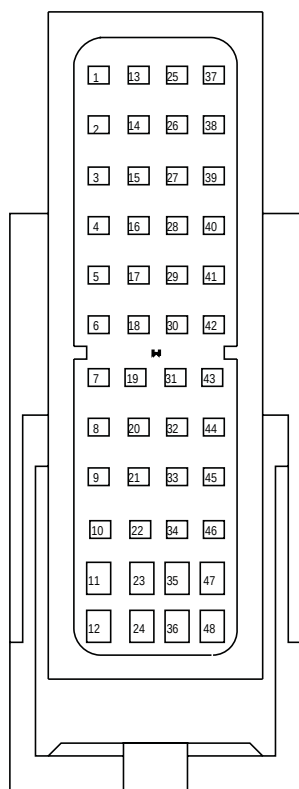

7V6N-14A464-TA(099)

C1E104-C
TO ECM3 PETROL
HARNESS 12B637

- 1
- 2
- 3 VDC46CA BU-BN 3TBD 0.75
- 4
- 5
- 6 CE930B WH-GN 3TBD 0.5
- 7 CE421A VT 3TBD 0.5
- 8 CE207D VT-GY 3TBD 0.5
- 9 CE206D GY-YE 3TBD 0.5
- 10 CE208D YE-OG 3TBD 0.75
- 11 CE235 GN-BN 3TBD 0.5
- 12 VE819A GN-VT 3TBD 0.75
- 13 CE908C BU-BN 3TBD 0.5
- 14
- 15 VE818AB BN 3TBD 0.5
- 16 CE426AB BU-GN 3TBD 0.5
- 17 CEC01A WH-BU 3TBD 0.5
- 18 RE433A BU-GY 3TBD 0.5
- 19 VE804A GN-BN 3TBD 0.5
- 20 CCF07C BN-GN 3TBD 0.5
- 21 VET68A VT-OG 3TBD 0.5
- 22 CE205D GN-BU 3TBD 0.5
- 23 CE233 WH-OG 3TBD 0.75
- 24 LE428A BU-WH 3TBD 0.75
- 25
- 26
- 27 VE716B YE 3TBD 0.5
- 28 CE412AB YE-VT 3TBD 0.5
- 29 VE724A GY 3TBD 0.5
- 30 VE803B BU-GN 3TBD 0.5
- 31
- 32 VE731 YE-GN 3TBD 0.5
- 33 VE735 VT-GN 3TBD 0.5
- 34
- 35 CE408A GY-BN 3TBD 0.75
- 36
- 37
- 38
- 39 RE141B BN-GN 3TBD 0.5
- 40 CE129A BU 3TBD 0.5
- 41 VMC04A GY-BN 3TBD 0.5
- 42 RE804A GY-BU 3TBD 0.5
- 43
- 44 RE242 GN 3TBD 0.5
- 45 RE240 YE-GN 3TBD 0.5
- 46
- 47
- 48

Power Steering Pressure (PSP) Switch (G1404275)




1 CCS01 VT-WH 3TBD 0.5

6E5T-14489-UA

C1CS09
TO POWER STEERING PRESSURE SWITCH
HARNESS 12B637

Throttle Control Unit (G1405433)

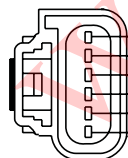

- 1 VE819A GN-VT 3TBD 0.75
- 2 LE428A BU-WH 3TBD 0.75
- 3 VE818AB BN 3TBD 0.5 GOLD
- 4 CE129A BU 3TBD 0.5 GOLD
- 5 CE426AB BU-GN 3TBD 0.5 GOLD
- 6 CE412AB YE-VT 3TBD 0.5 GOLD

3L2T-14A464-BA(000)

C1E138
TO ELECTRONIC THROTTLE BODY PETROL
HARNESS 12B637

SECTION 303-14B Electronic Engine Controls — 2.2L

Duratorq-TDCi (Puma) Diesel/3.2L Duratorq-TDCi (Puma) Diesel

VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS

PAGE


ELECTRICAL SCHEMATICS

Engine Control — 2.2L Duratorq-TDCi (88kW/120PS) - Puma.....	303-14B-2
Engine Control — 2.2L Duratorq-TDCi (110kW/150PS) - Puma, Vehicles With: 6-Speed Automatic Transaxle - 6R80, Emission Requirements: DGA Emissions.....	303-14B-6
Engine Control — 2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma, Vehicles With: 5-Speed Manual Transmission - MT75/6-Speed Manual Transmission - MT82.....	303-14B-10
Engine Control — 2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma, Vehicles With: 6-Speed Automatic Transaxle - 6R80.....	303-14B-14
Engine Control — 3.2L Duratorq-TDCi (148kW/200PS) - Puma, Vehicles With: 6-Speed Manual Transmission - MT82.....	303-14B-18
Engine Control — 3.2L Duratorq-TDCi (148kW/200PS) - Puma, Vehicles With: 6-Speed Automatic Transaxle - 6R80.....	303-14B-22


ELECTRICAL CONNECTORS

Accelerator Pedal Position (APP) Sensor.....	303-14B-26
Brake Pedal Position (BPP) Switch.....	303-14B-26
Clutch Pedal Position (CPP) Switch.....	303-14B-26
Clutch Pedal Position (CPP) Switch.....	303-14B-26
Crankshaft Position (CKP) Sensor — A.....	303-14B-26
Diesel Particulate Filter (DPF) Differential Pressure Sensor.....	303-14B-27
Engine Coolant Temperature (ECT) Sensor.....	303-14B-27
Engine Oil Pressure (EOP) Switch — A.....	303-14B-27
Exhaust Gas Temperature Sensor.....	303-14B-27
Fuel Rail Temperature Sensor.....	303-14B-27
Fuel Temperature Sensor.....	303-14B-28
Heated Oxygen Sensor (HO2S).....	303-14B-28
Intake Air Temperature (IAT) Sensor.....	303-14B-28
Intake Camshaft Position (CMP) Sensor — A.....	303-14B-28
Manifold Absolute Pressure (MAP) Sensor.....	303-14B-28
Mass Air Flow and Temperature (MAFT) Sensor.....	303-14B-29
Post DPF Exhaust Gas Temperature Sensor.....	303-14B-29
Powertrain Control Module (PCM) — A.....	303-14B-29
Powertrain Control Module (PCM) — B.....	303-14B-30
Powertrain Control Module (PCM) — C.....	303-14B-30
Pre DPF Exhaust Gas Temperature Sensor.....	303-14B-31
Throttle Control Unit — A.....	303-14B-31
Vehicle Speed Sensor 1 (VSS1).....	303-14B-31
Wastegate Control Solenoid.....	303-14B-31


303-14B-2 Engine Control—2.2L Duratorq-TDCi (88kW/120PS) - Puma

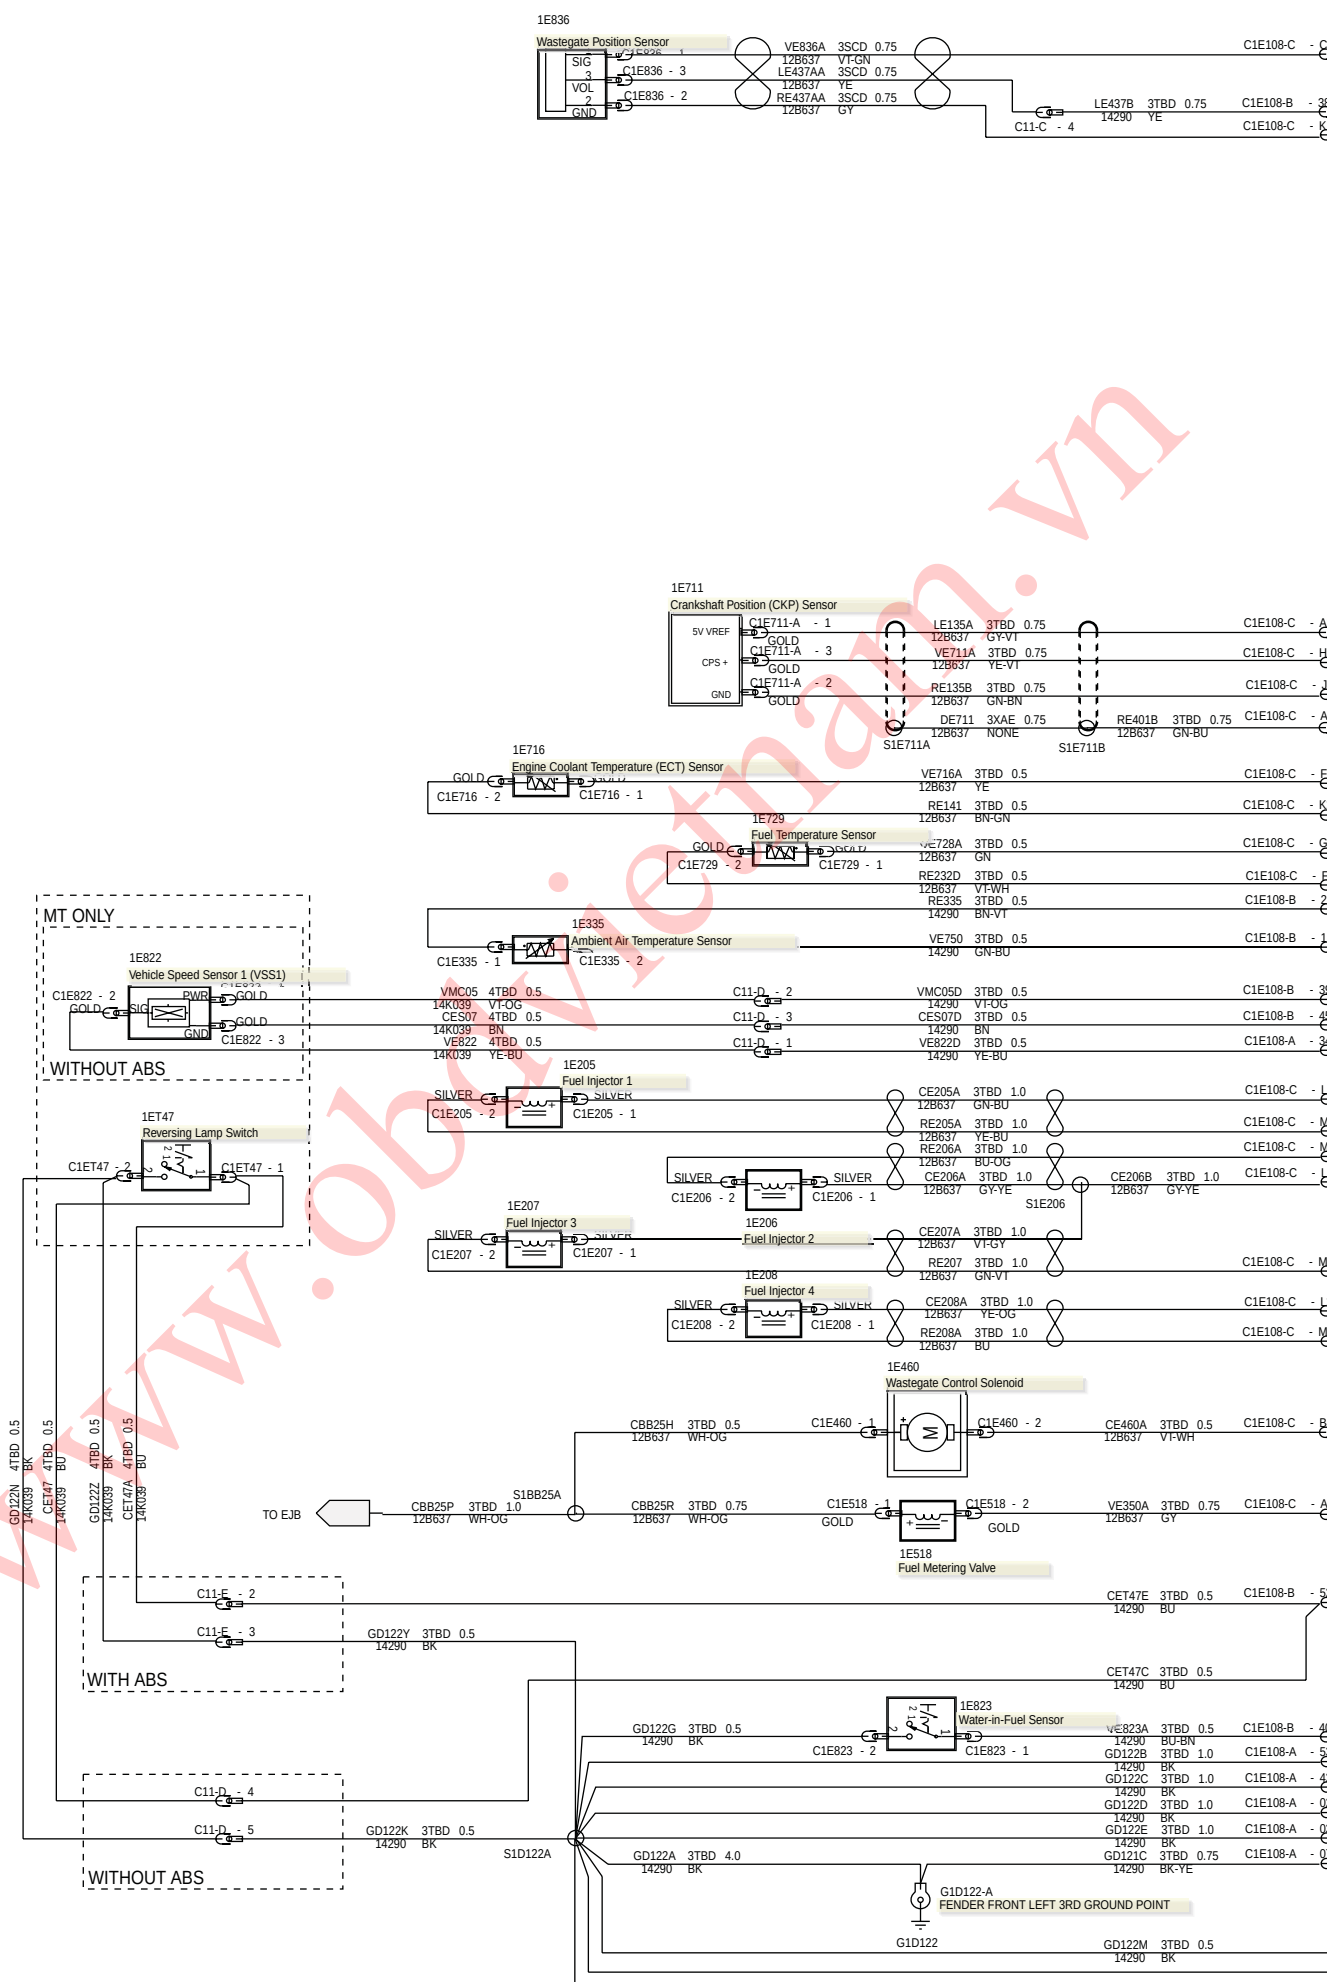


2012.0 Ranger (G1405522)

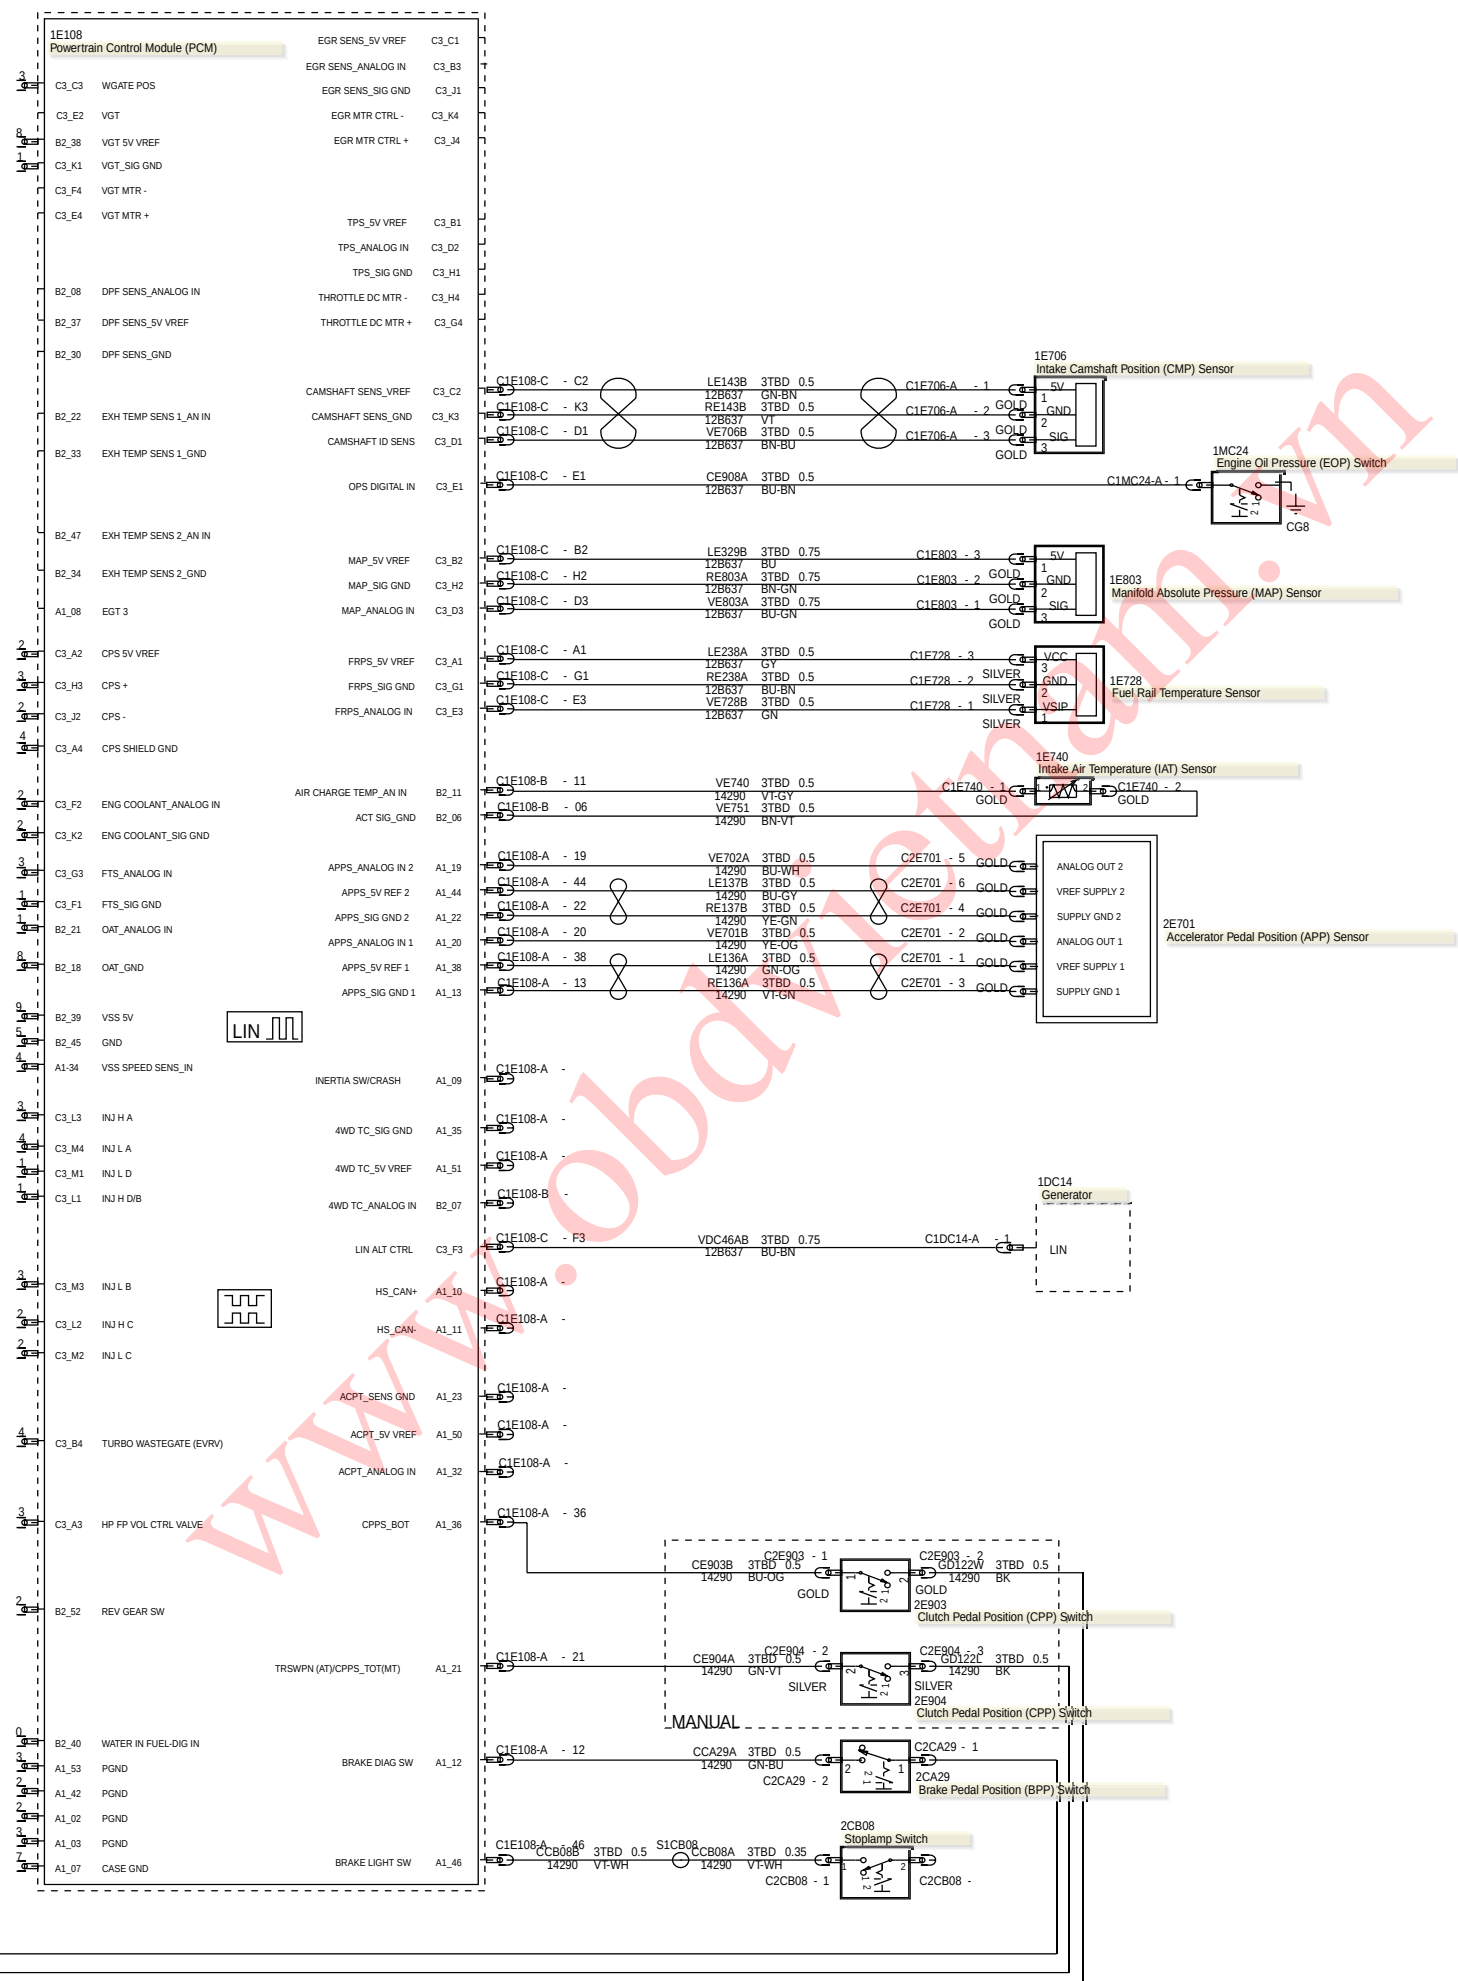

303-14B-4 Engine Control—2.2L Duratorq-TDCi (88kW/120PS) - Puma

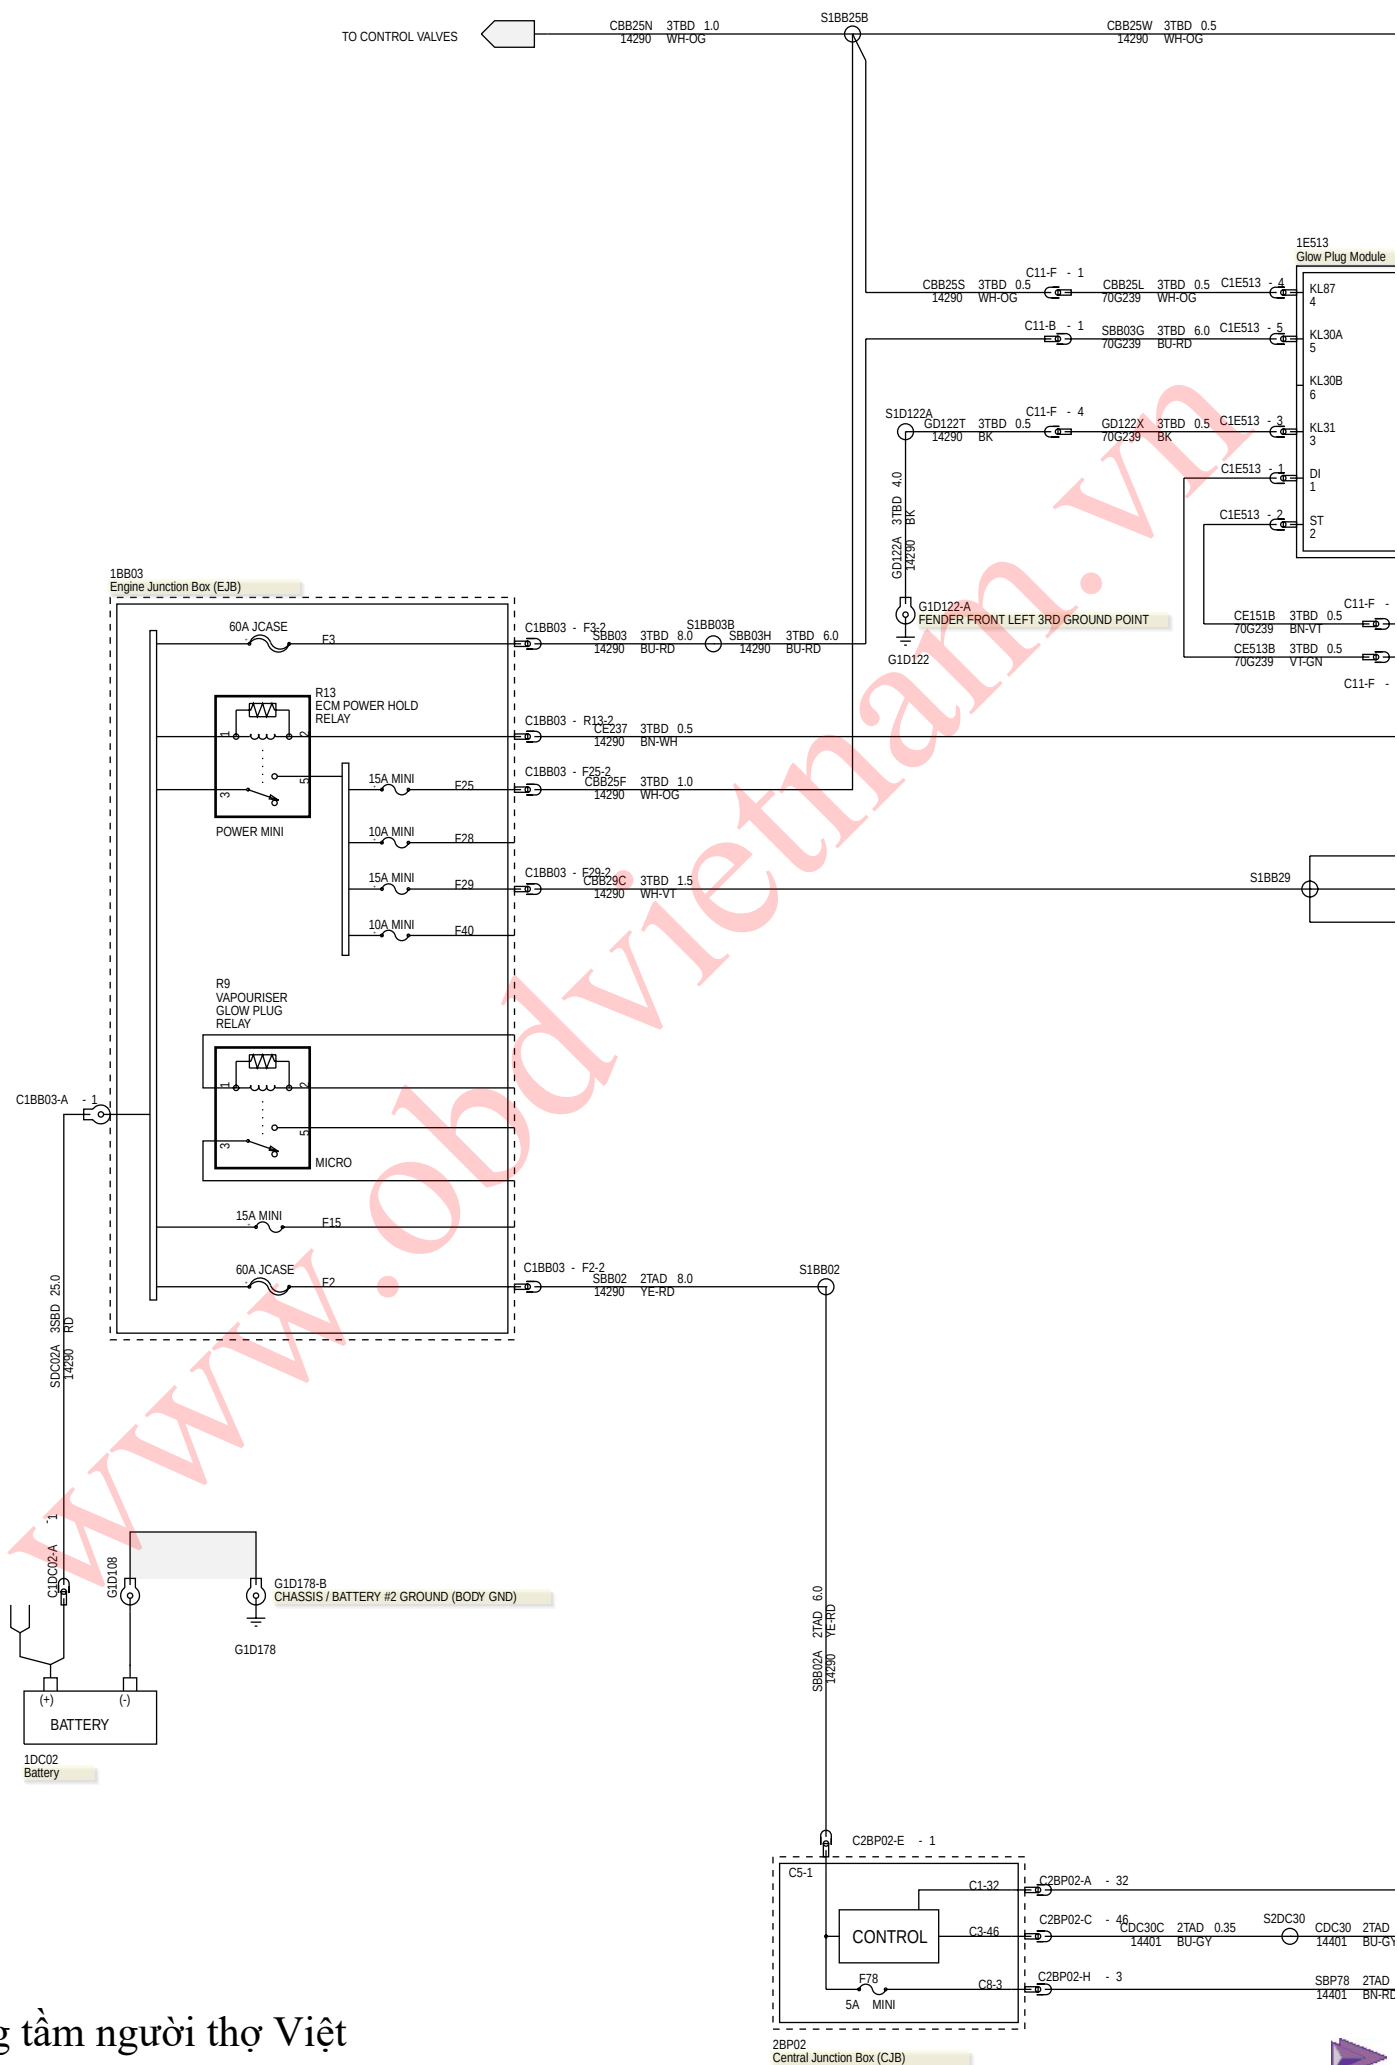

303-14B-5 Engine Control—2.2L Duratorq-TDCi (88kW/120PS) - Puma

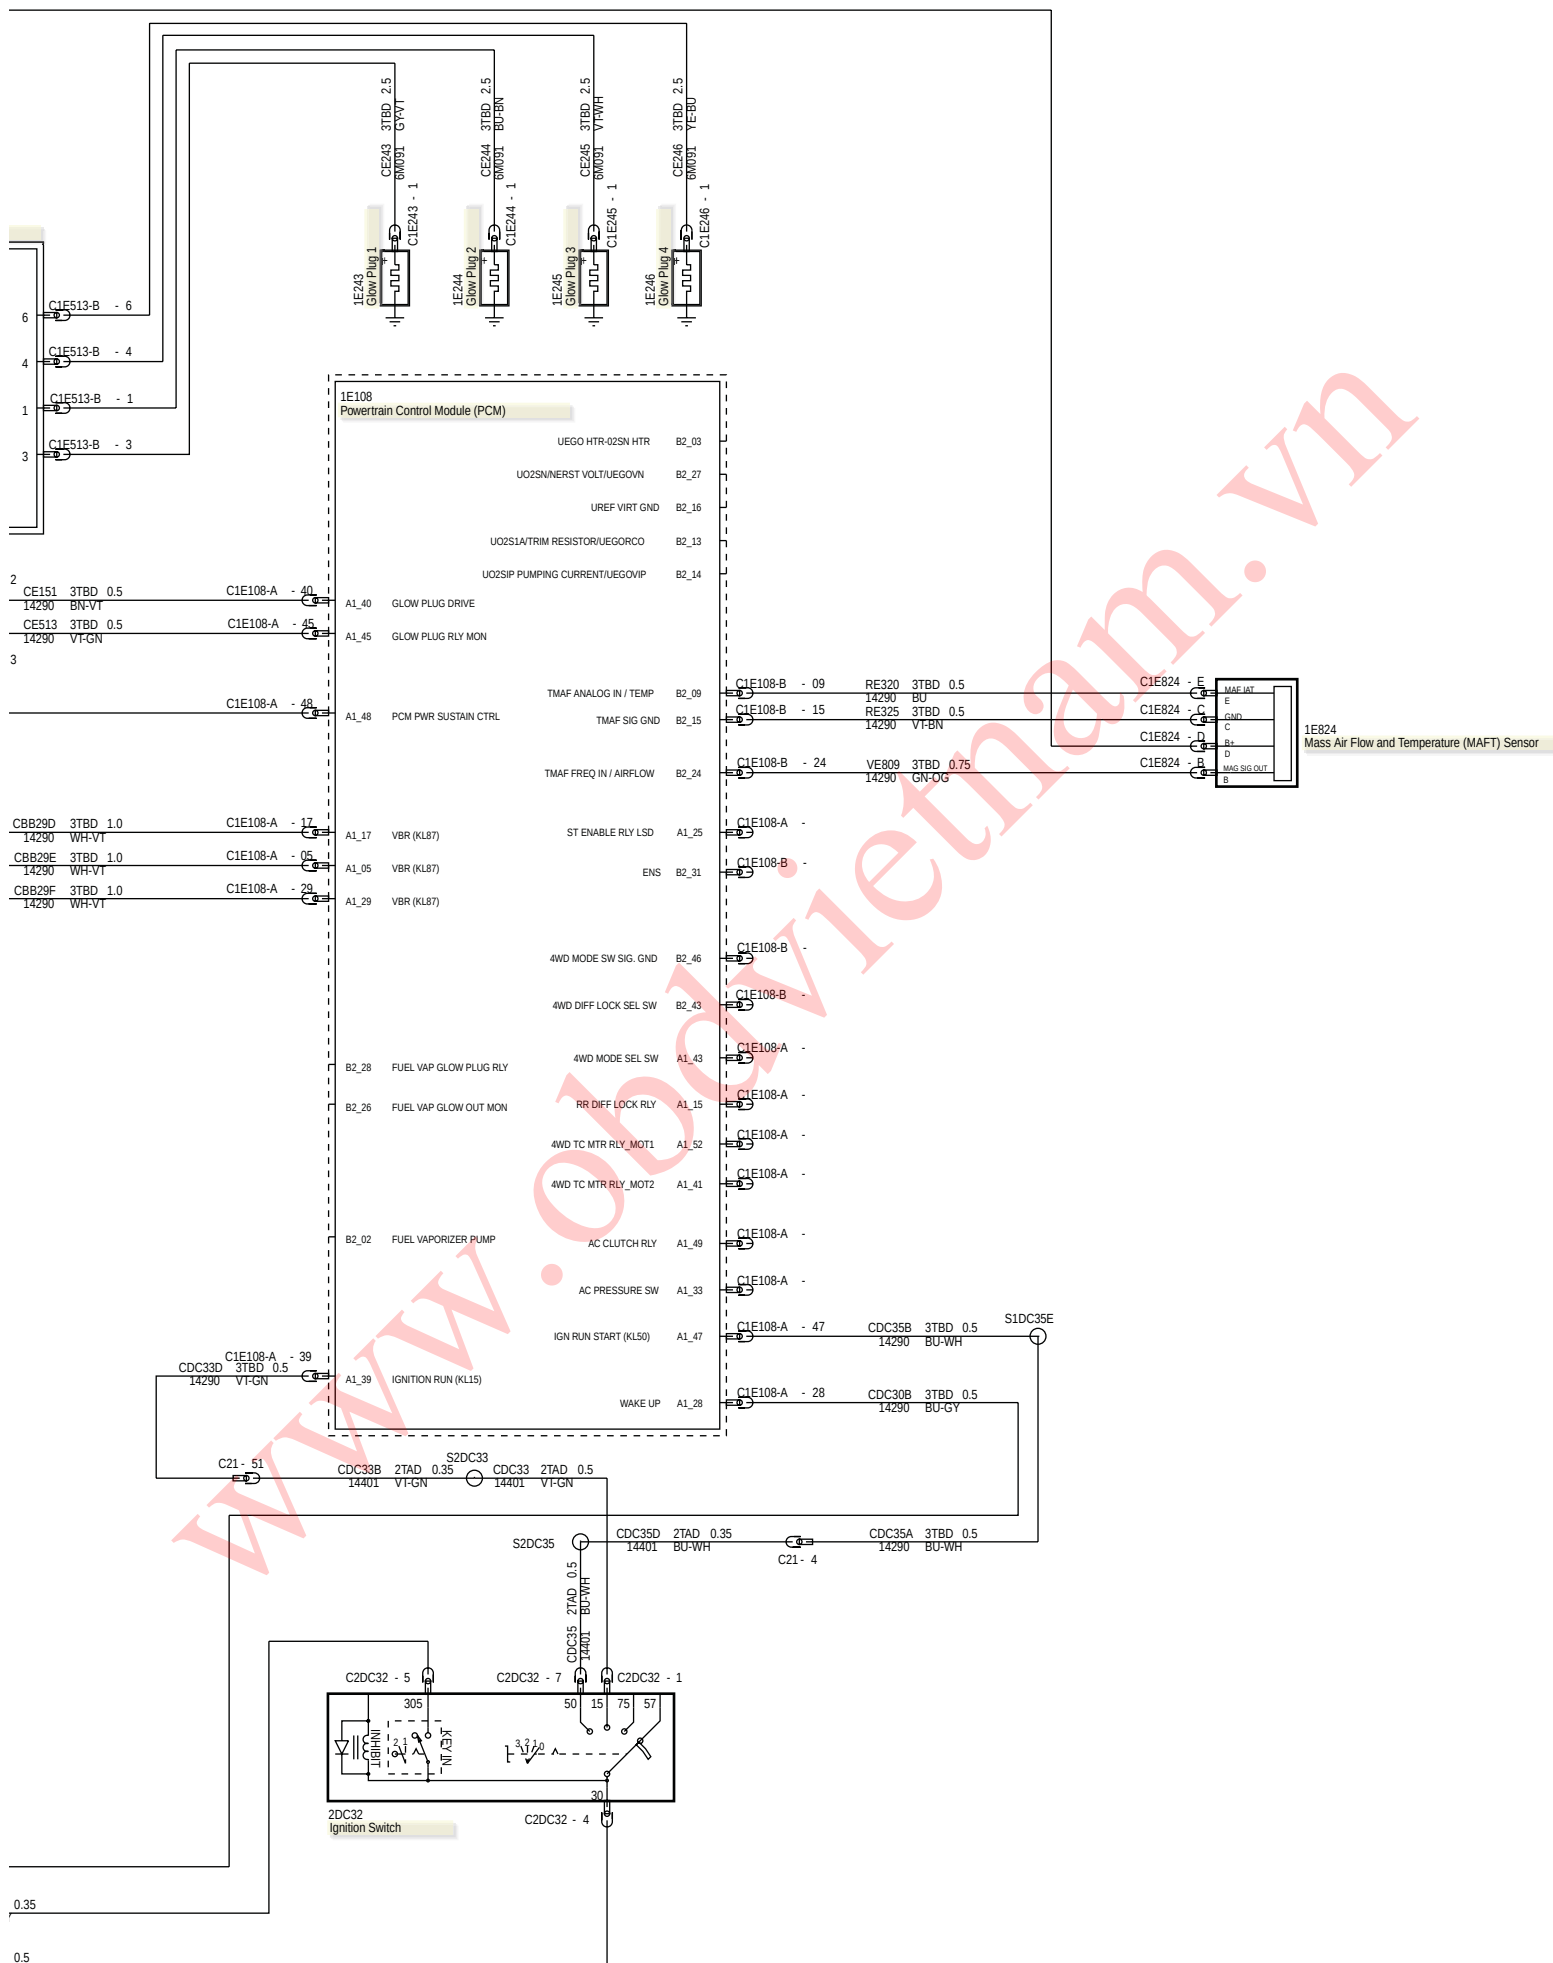


DGA Emissions




303-14B-8 Engine Control—2.2L Duratorq-TDCi (110kW/150PS) - Puma, Vehicles With: 6-Speed Automatic Transaxle - 6R80, Emission Requirements:

DGA Emissions

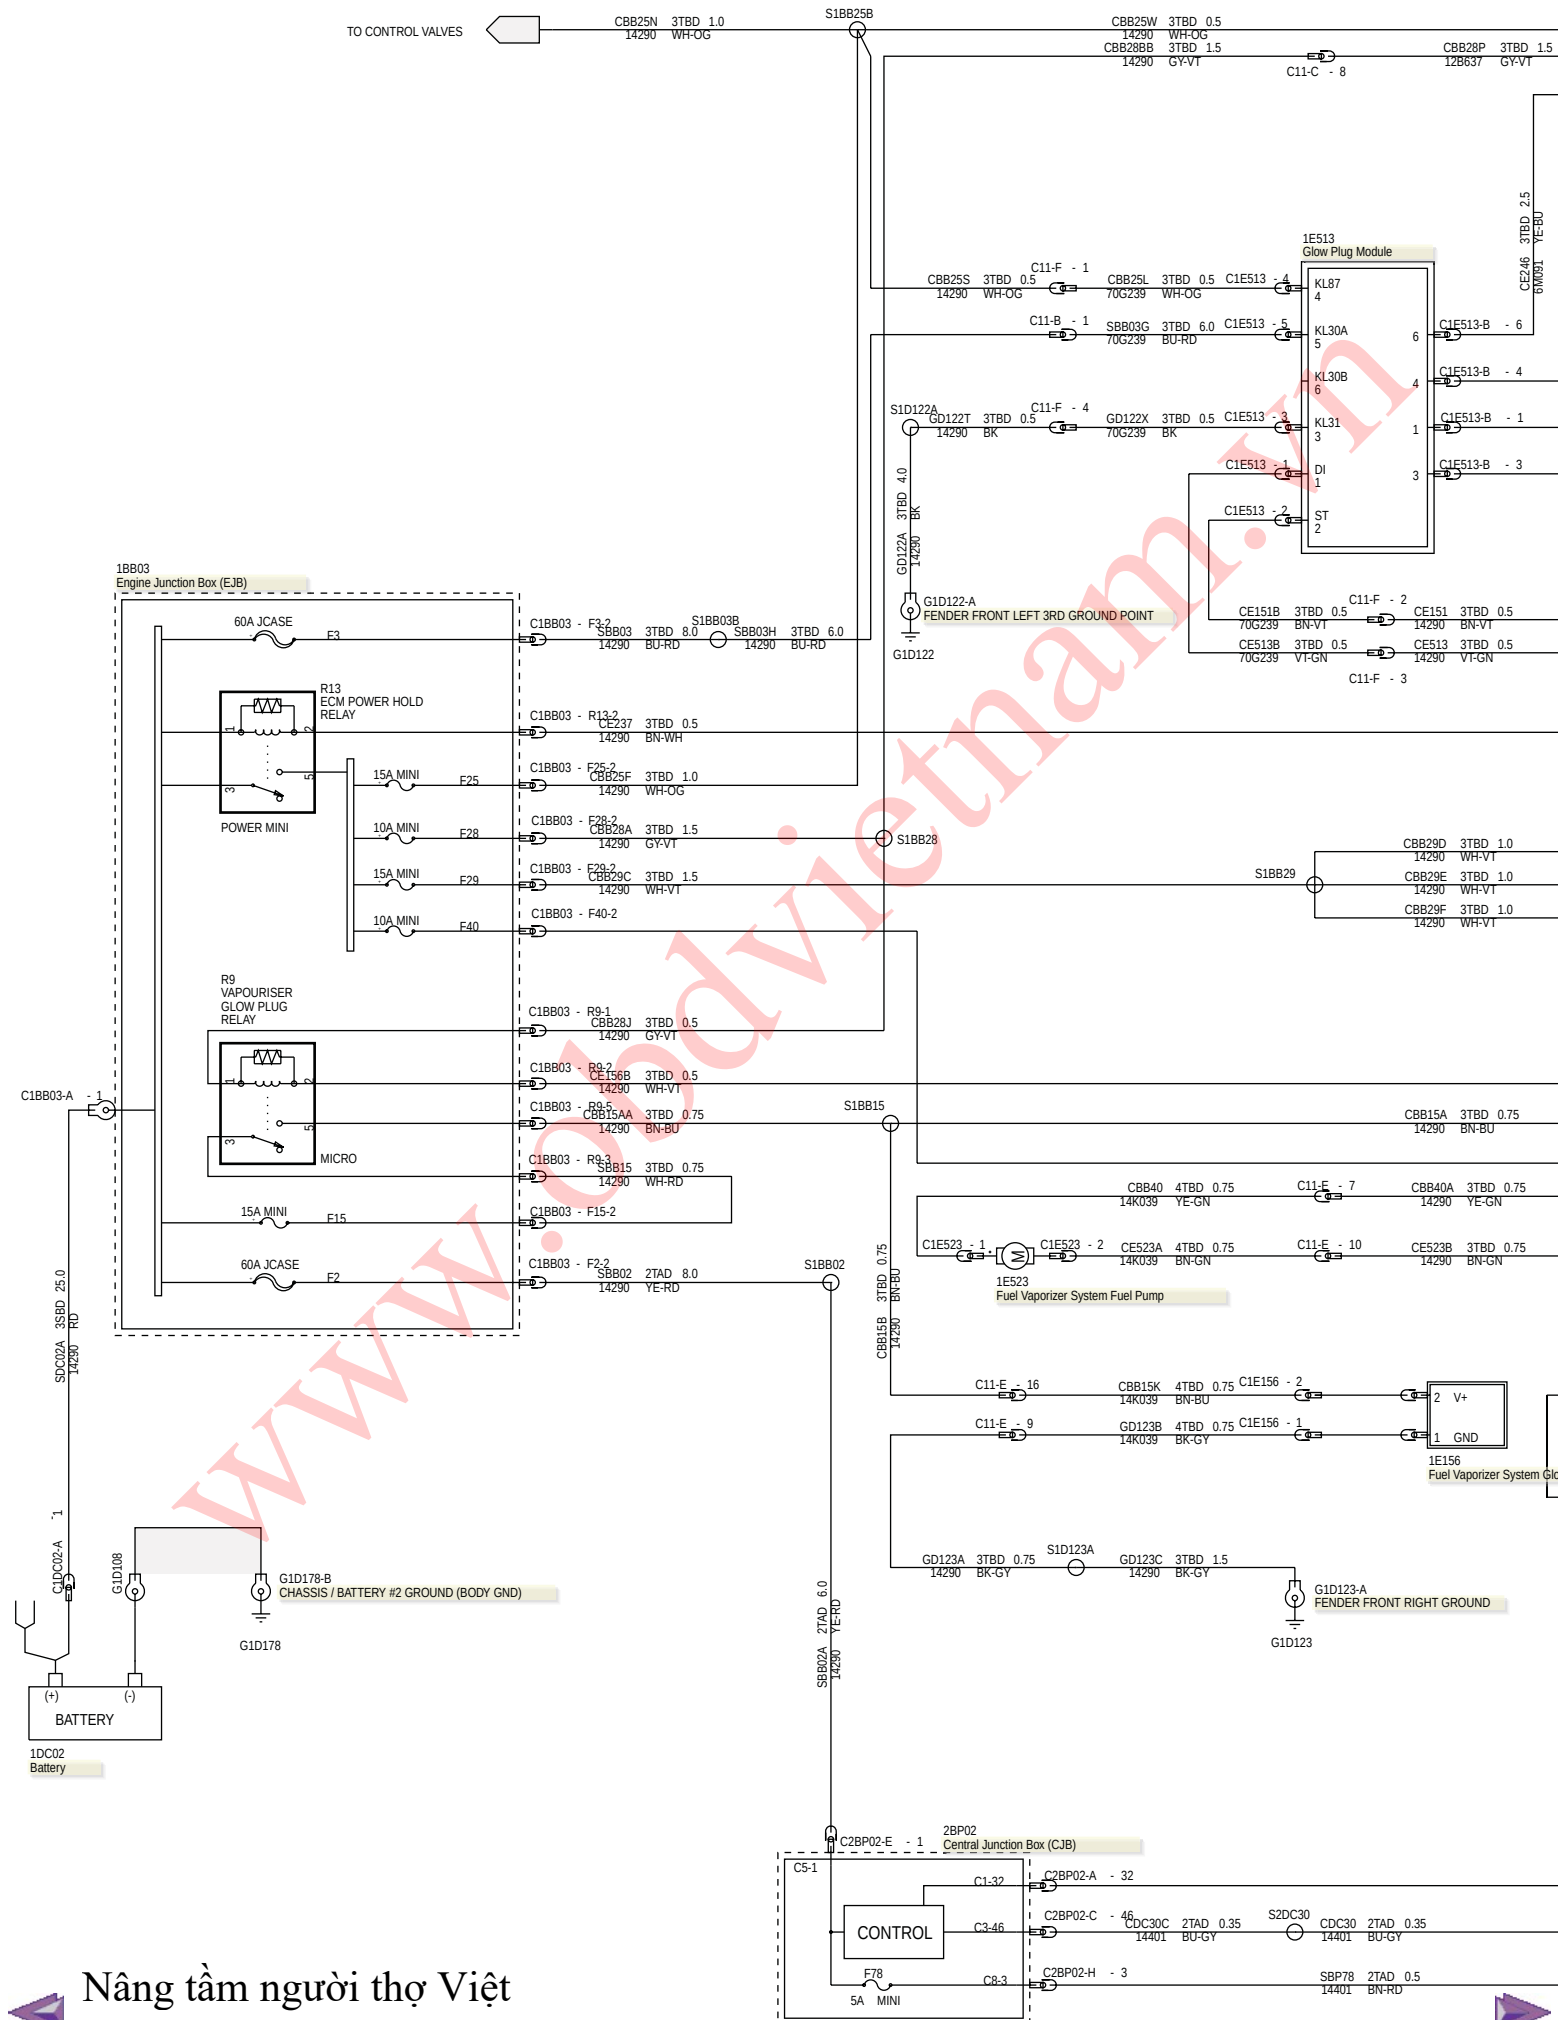


DGA Emissions

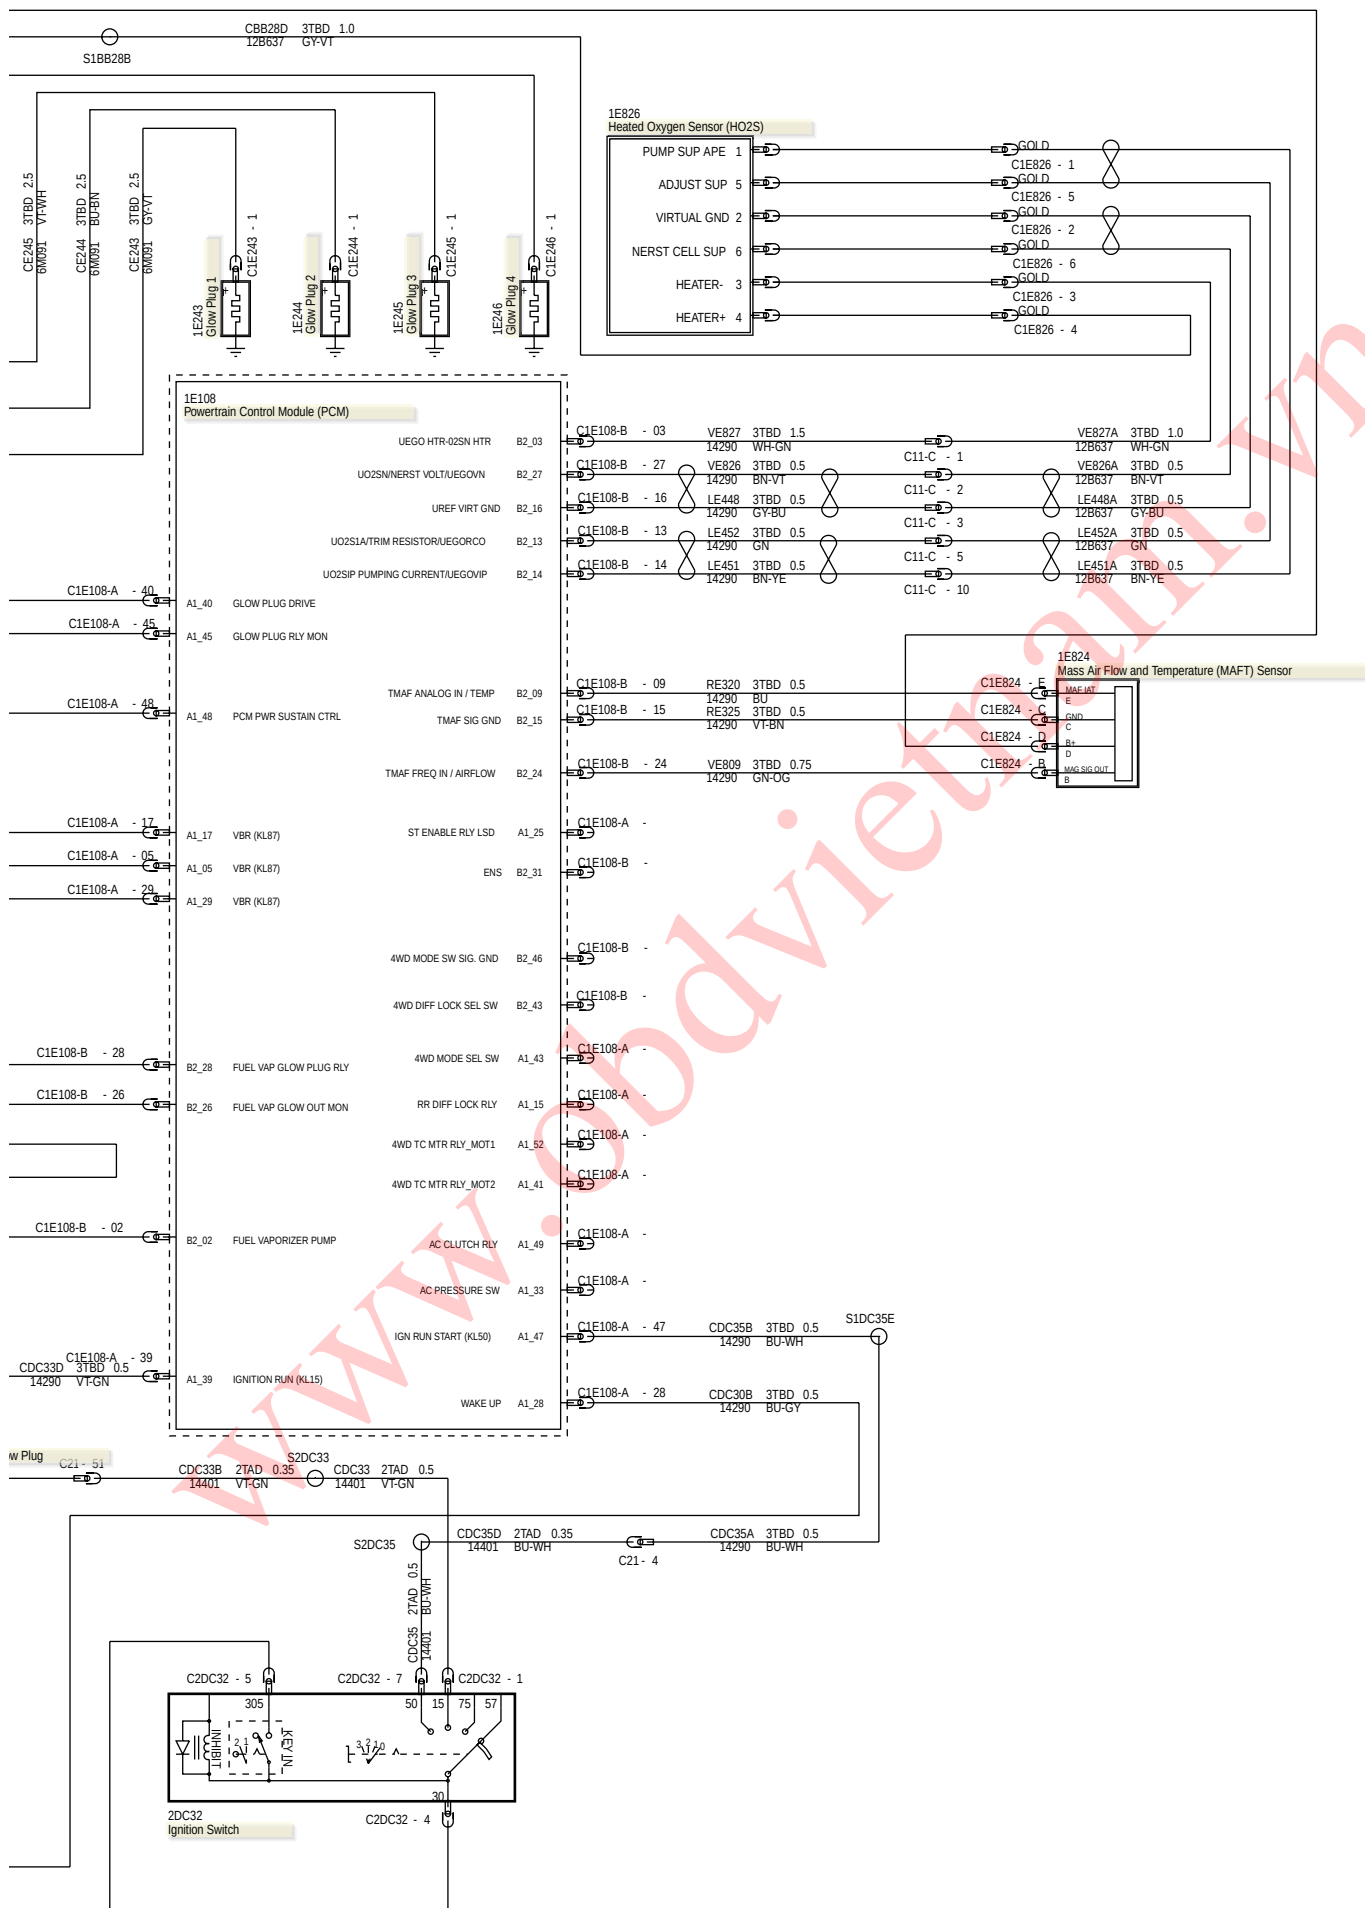


- Puma. Vehicles With: 5-Speed Manual Transmission - MT75/6-Speed Manual Transmission - MT82



303-14B-11 Engine Control—2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS)
- Puma, Vehicles With: 5-Speed Manual Transmission - MT75/6-Speed Manual Transmission - MT82

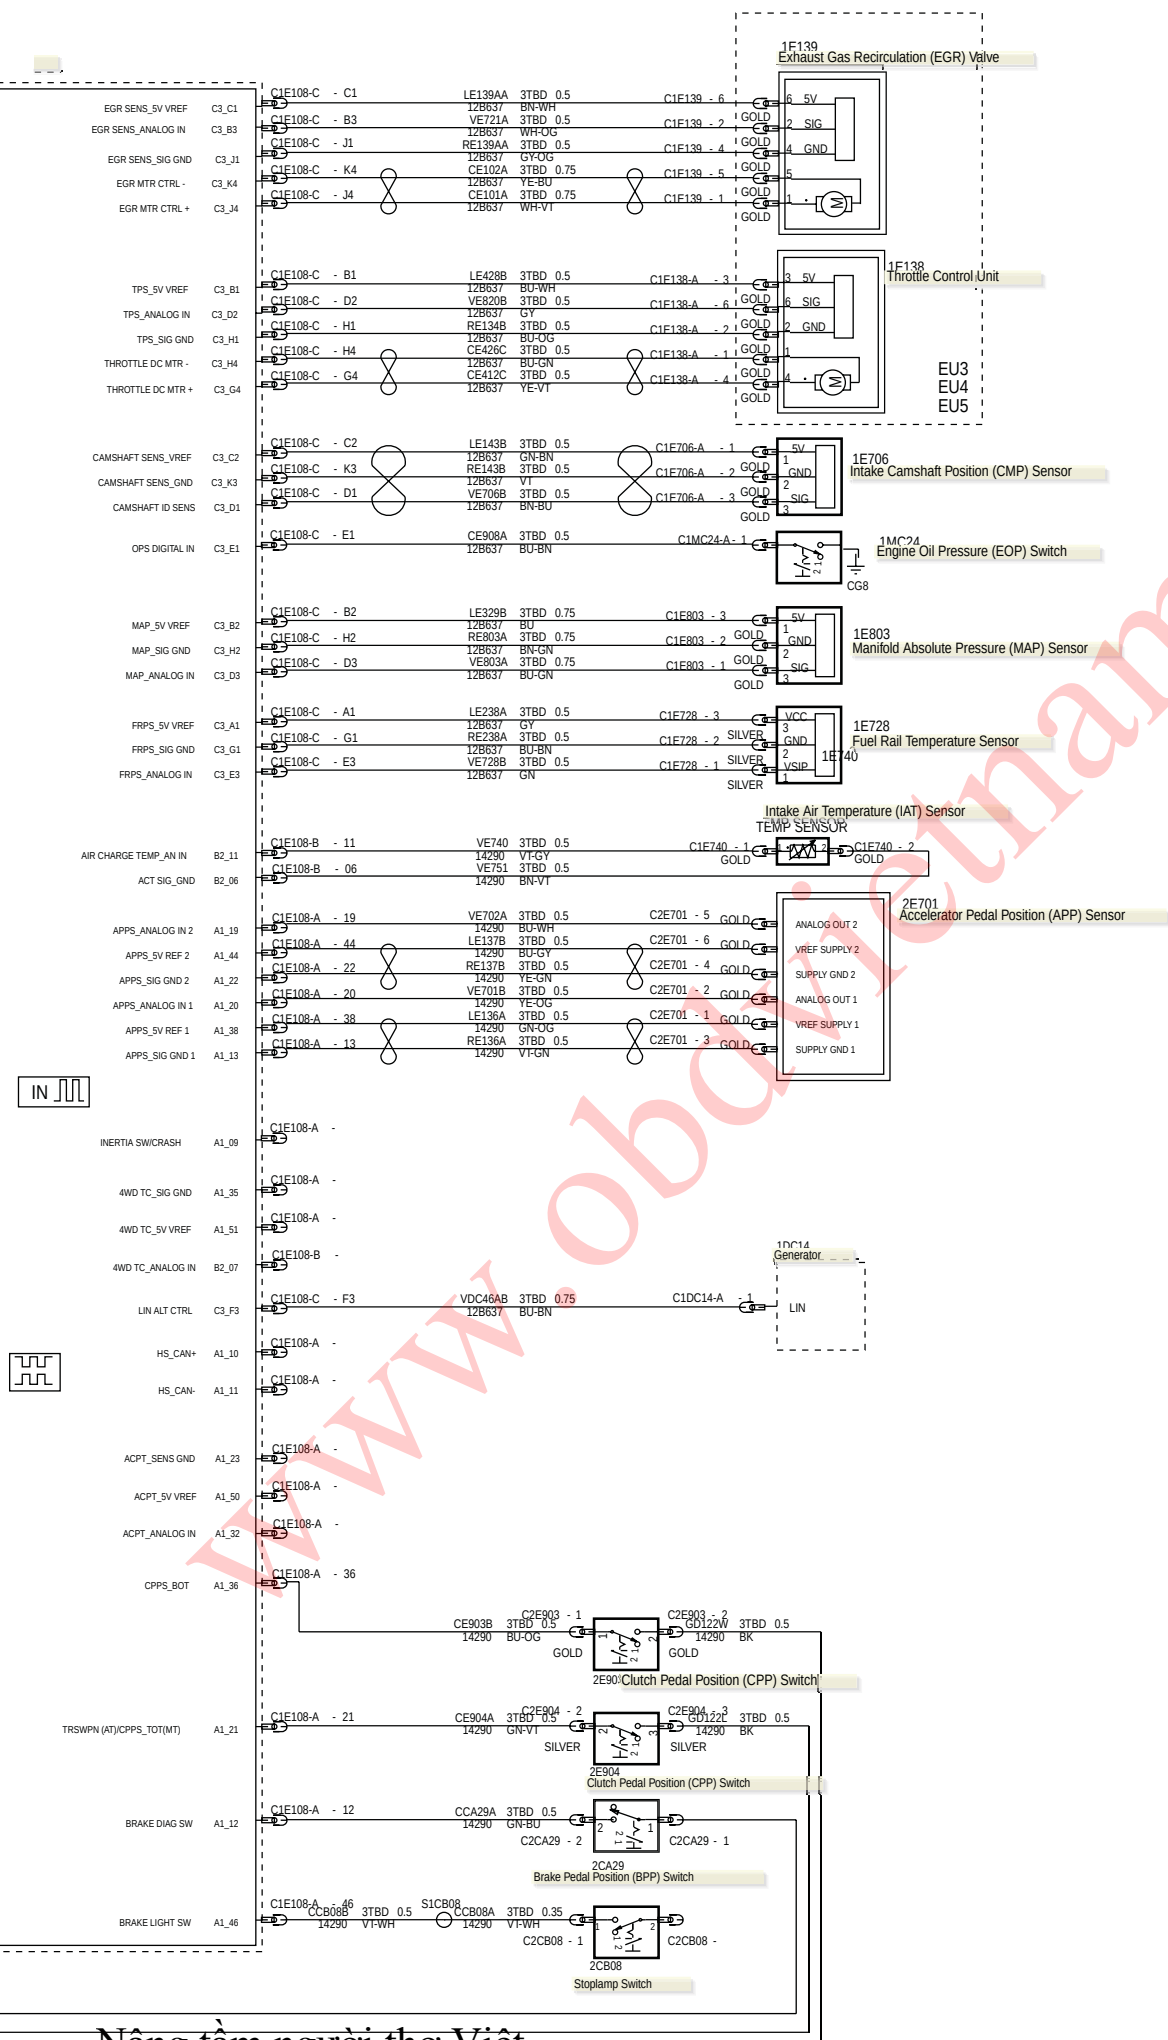


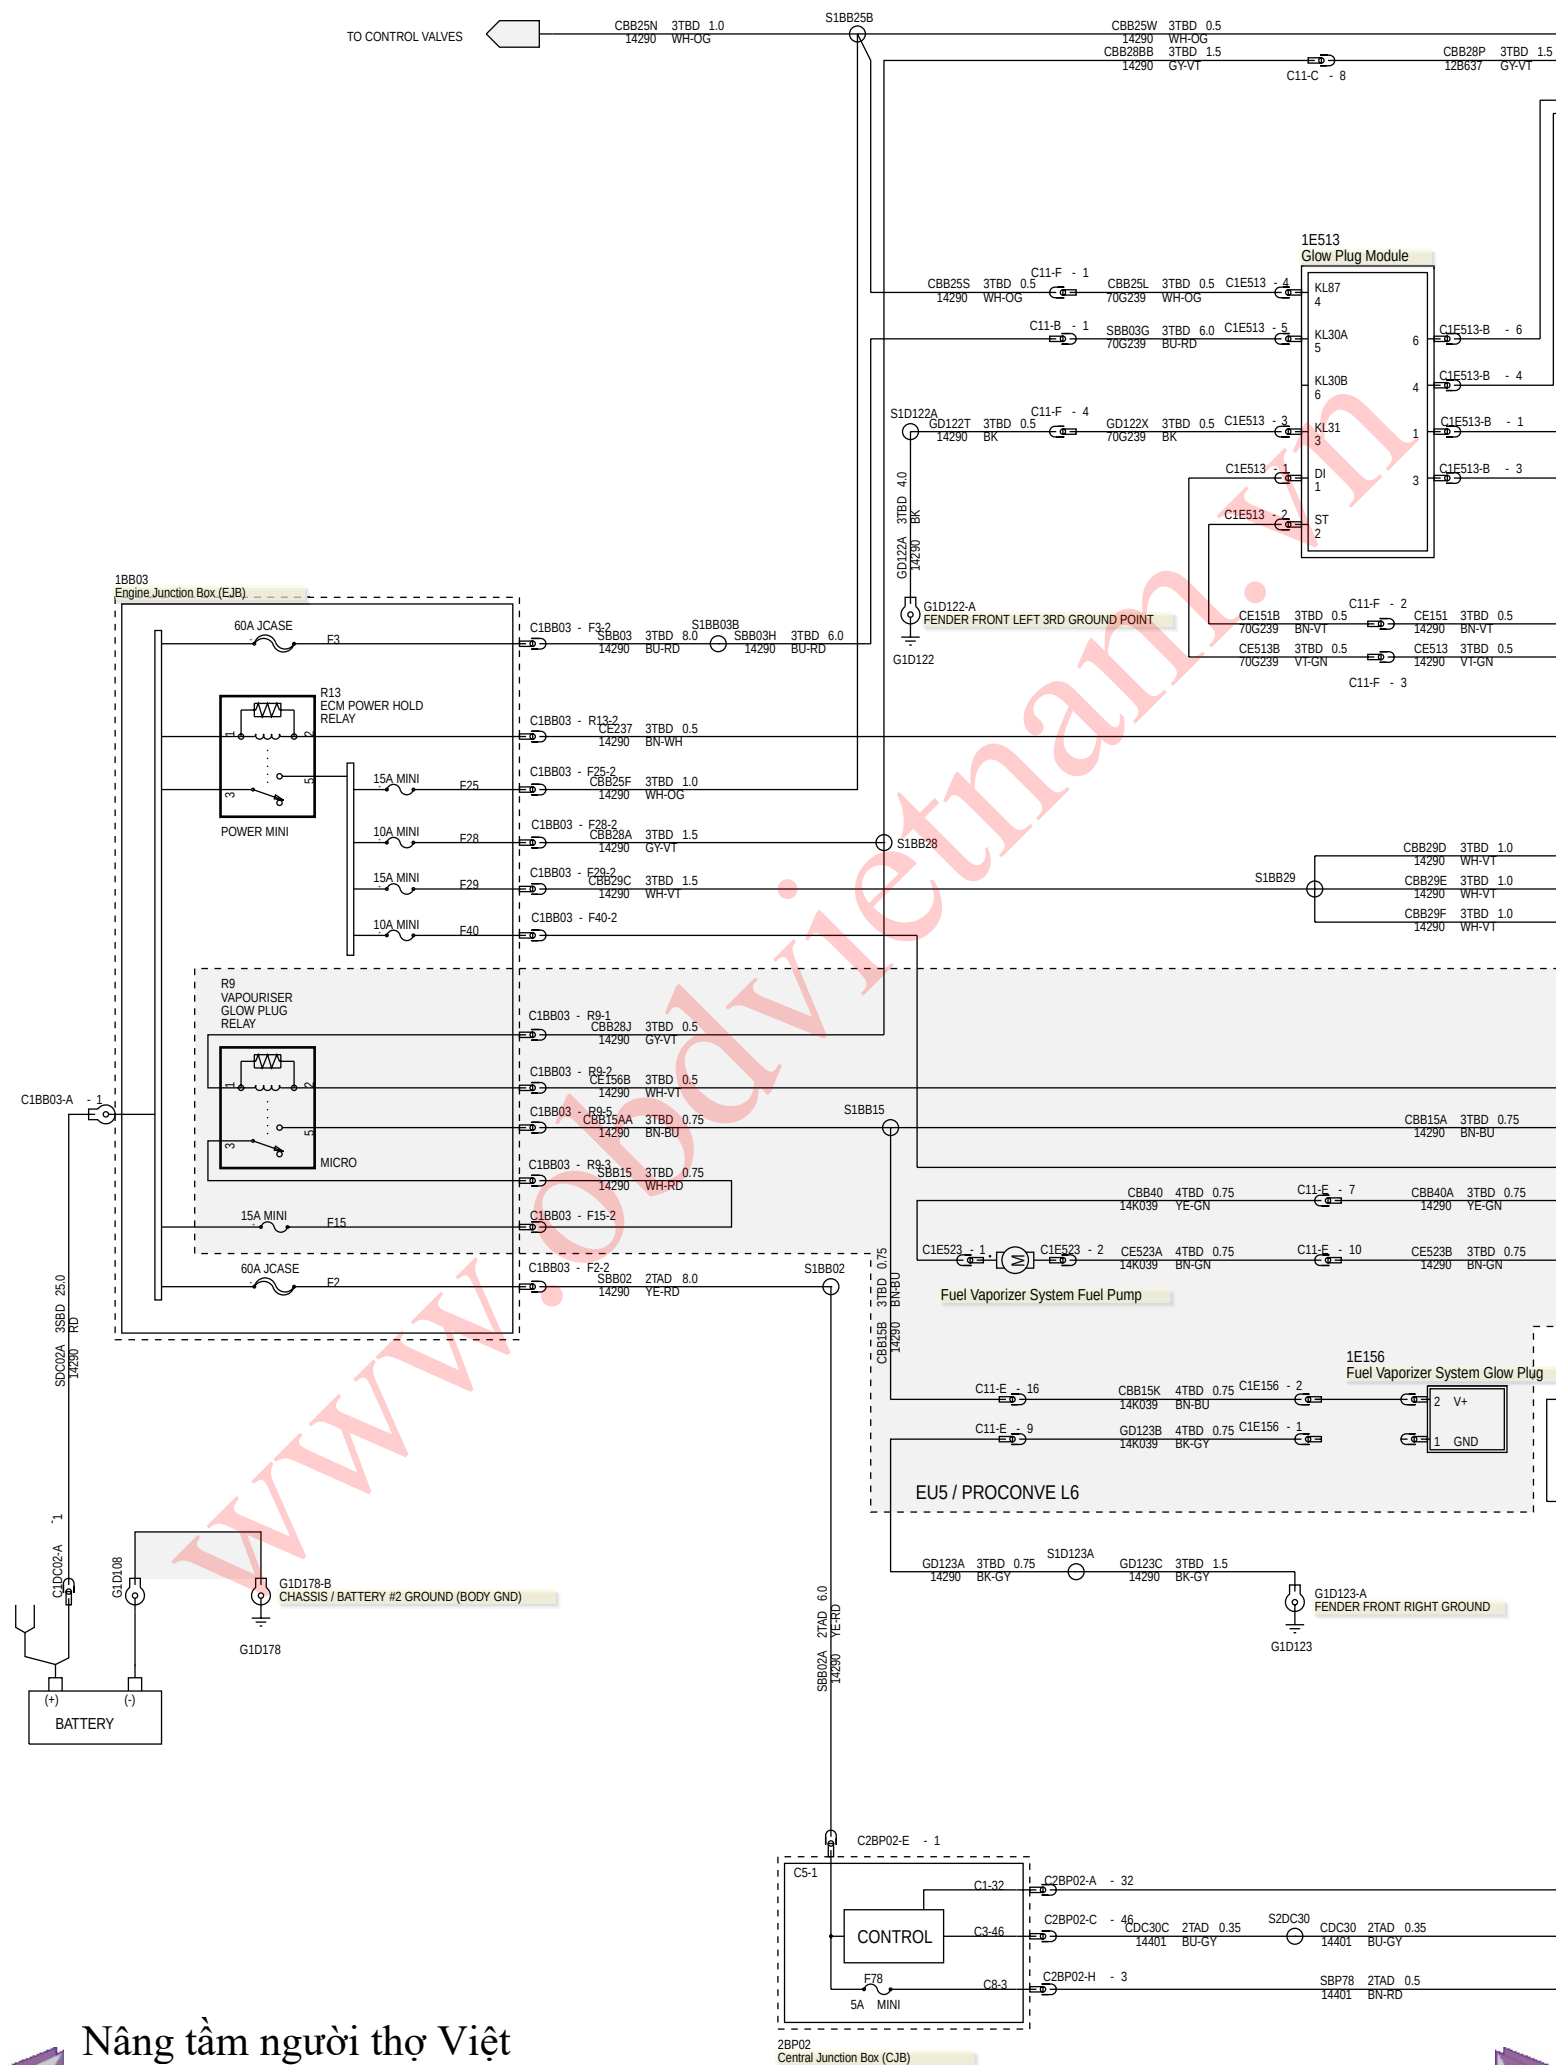



Duratorq-TDCi 110kw/150PS - Puma, Vehicles With: 5-Speed Manual Transmission - MT75/6-Speed Manual Transmission - MT82

2012.0 Ranger (G1425318)

- Puma, Vehicles With: 6-Speed Automatic Transaxle - 6R80

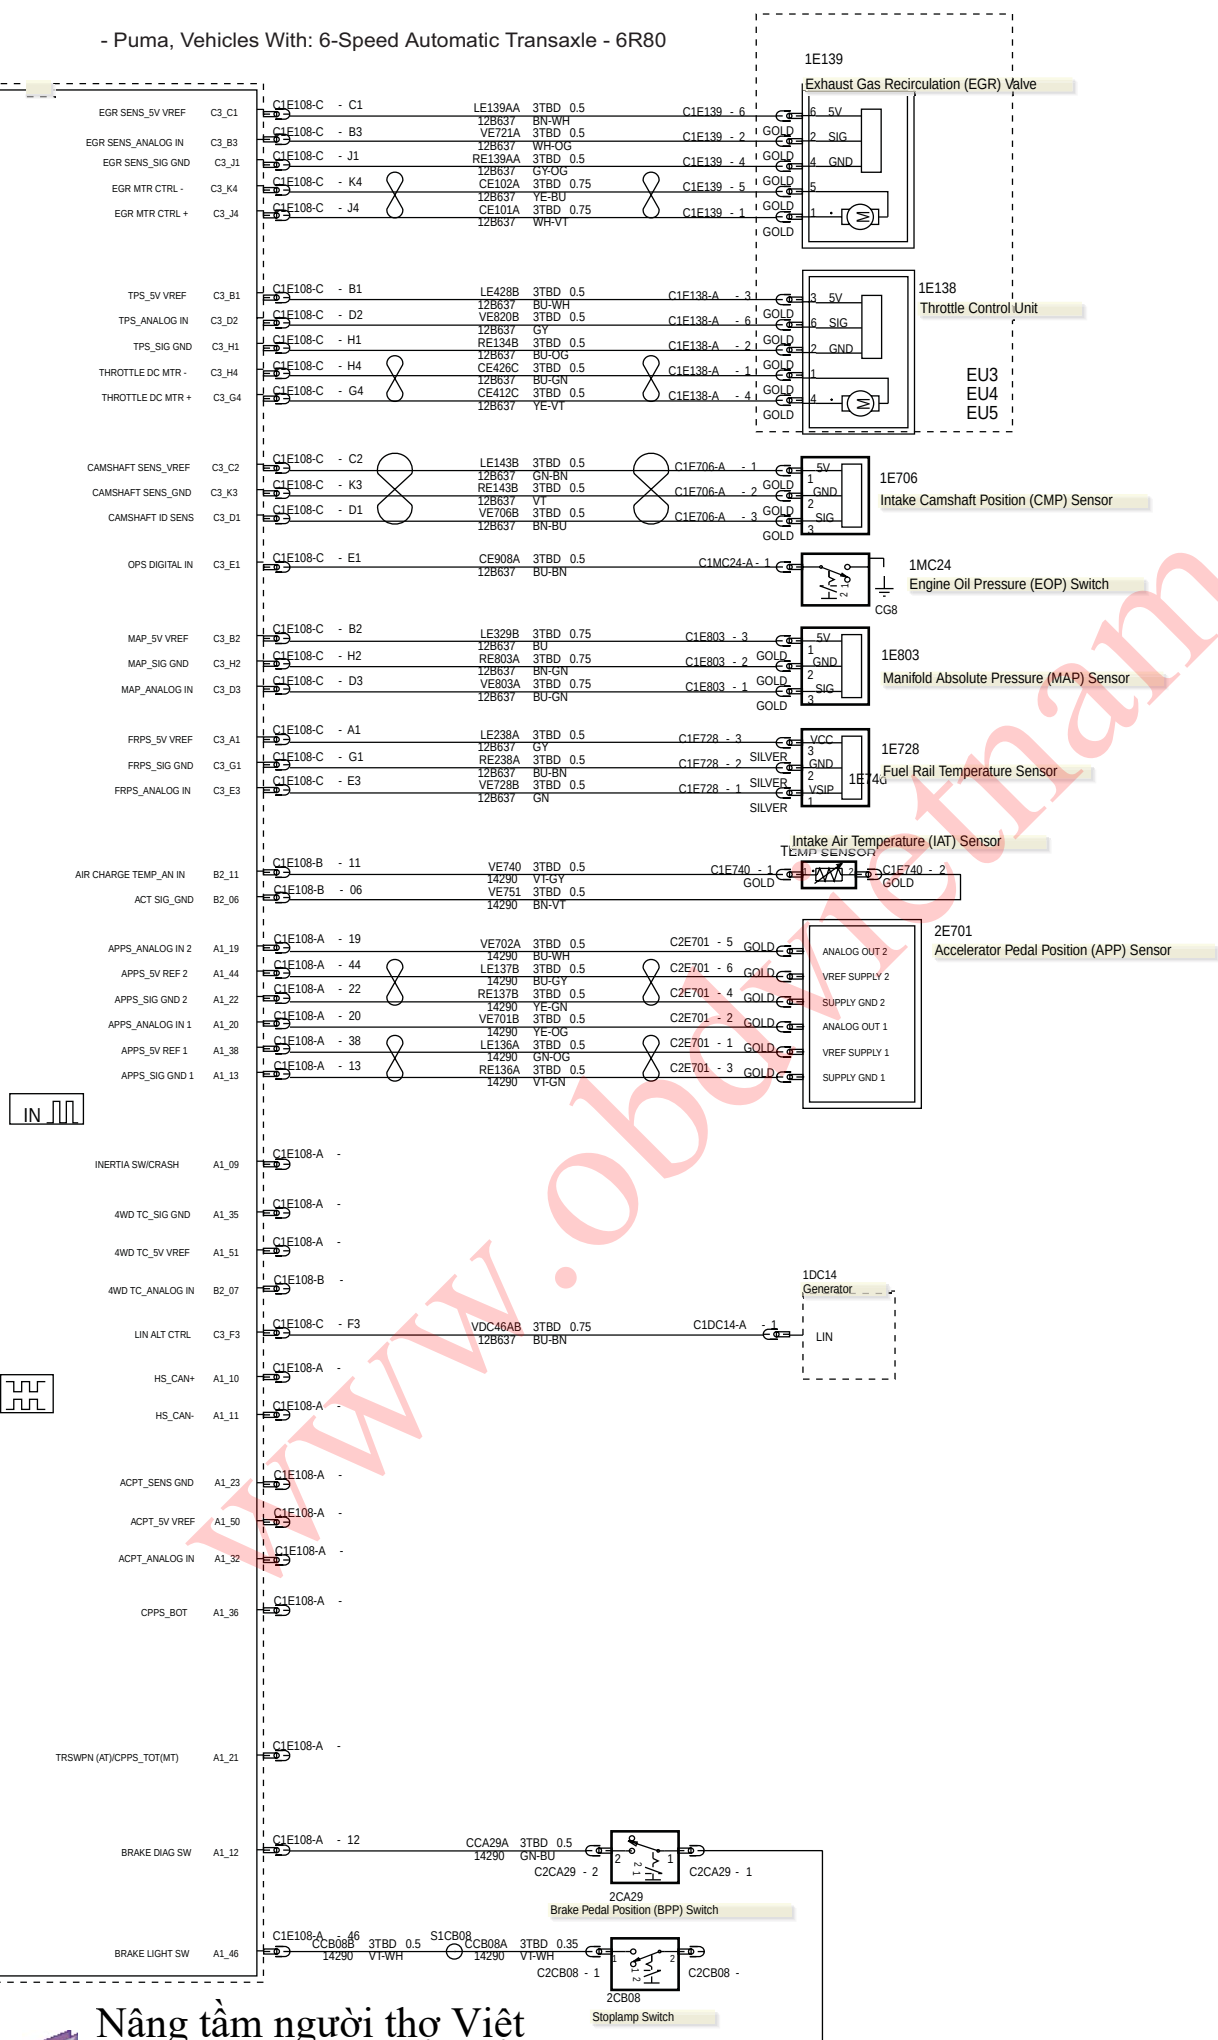

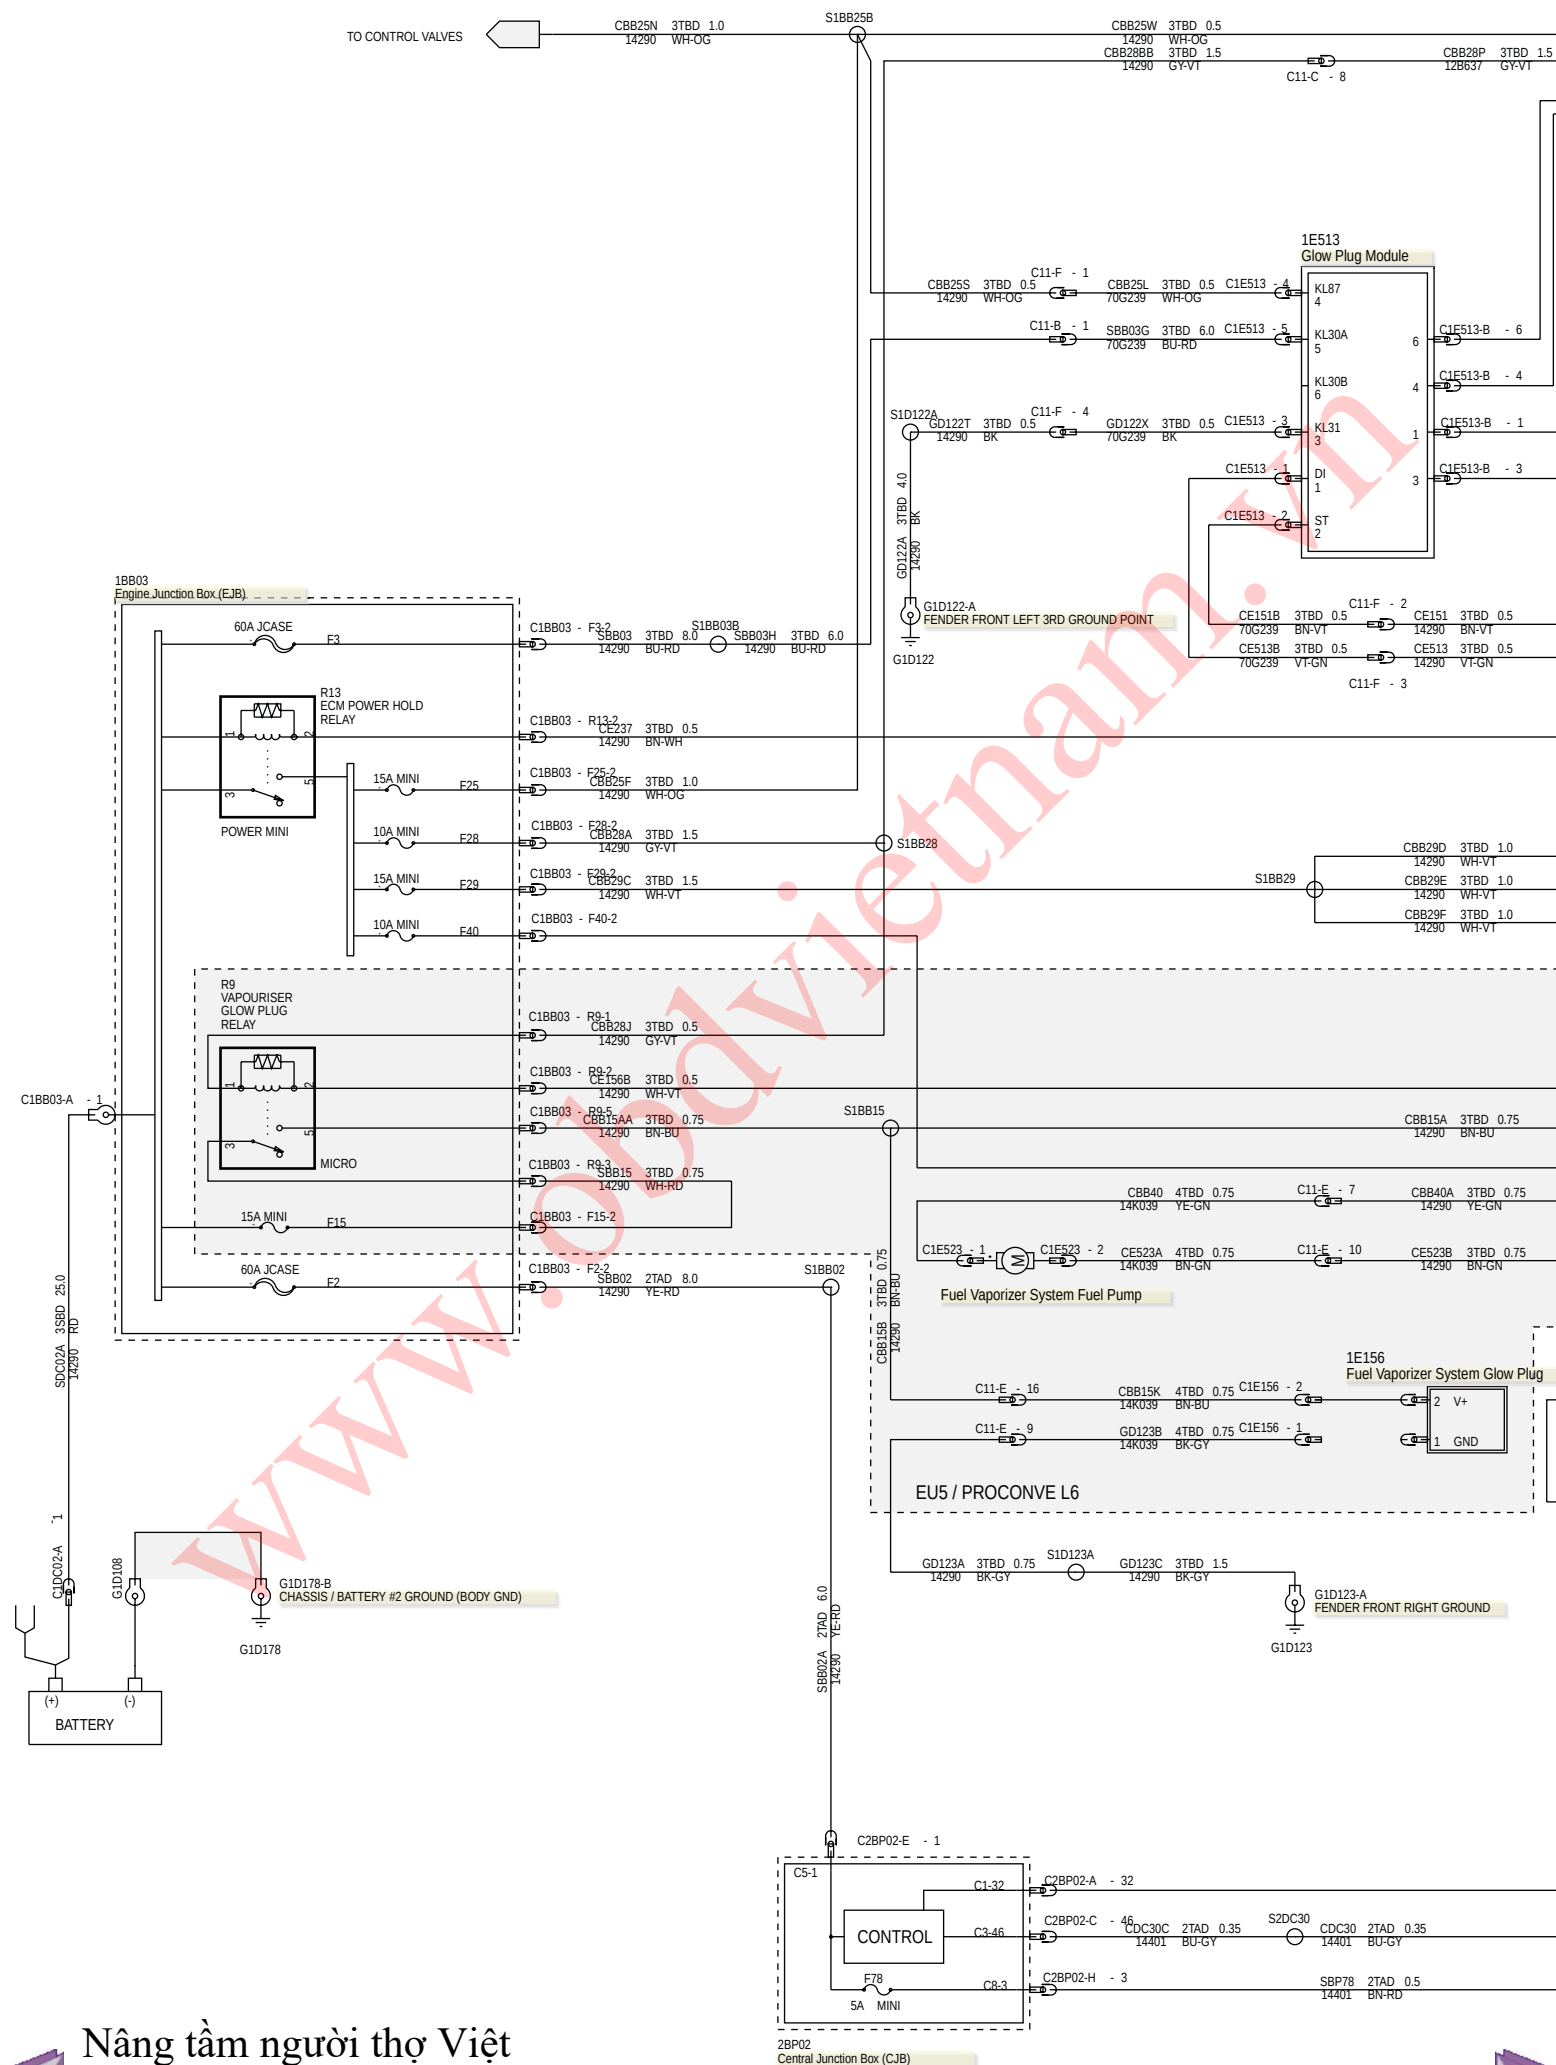

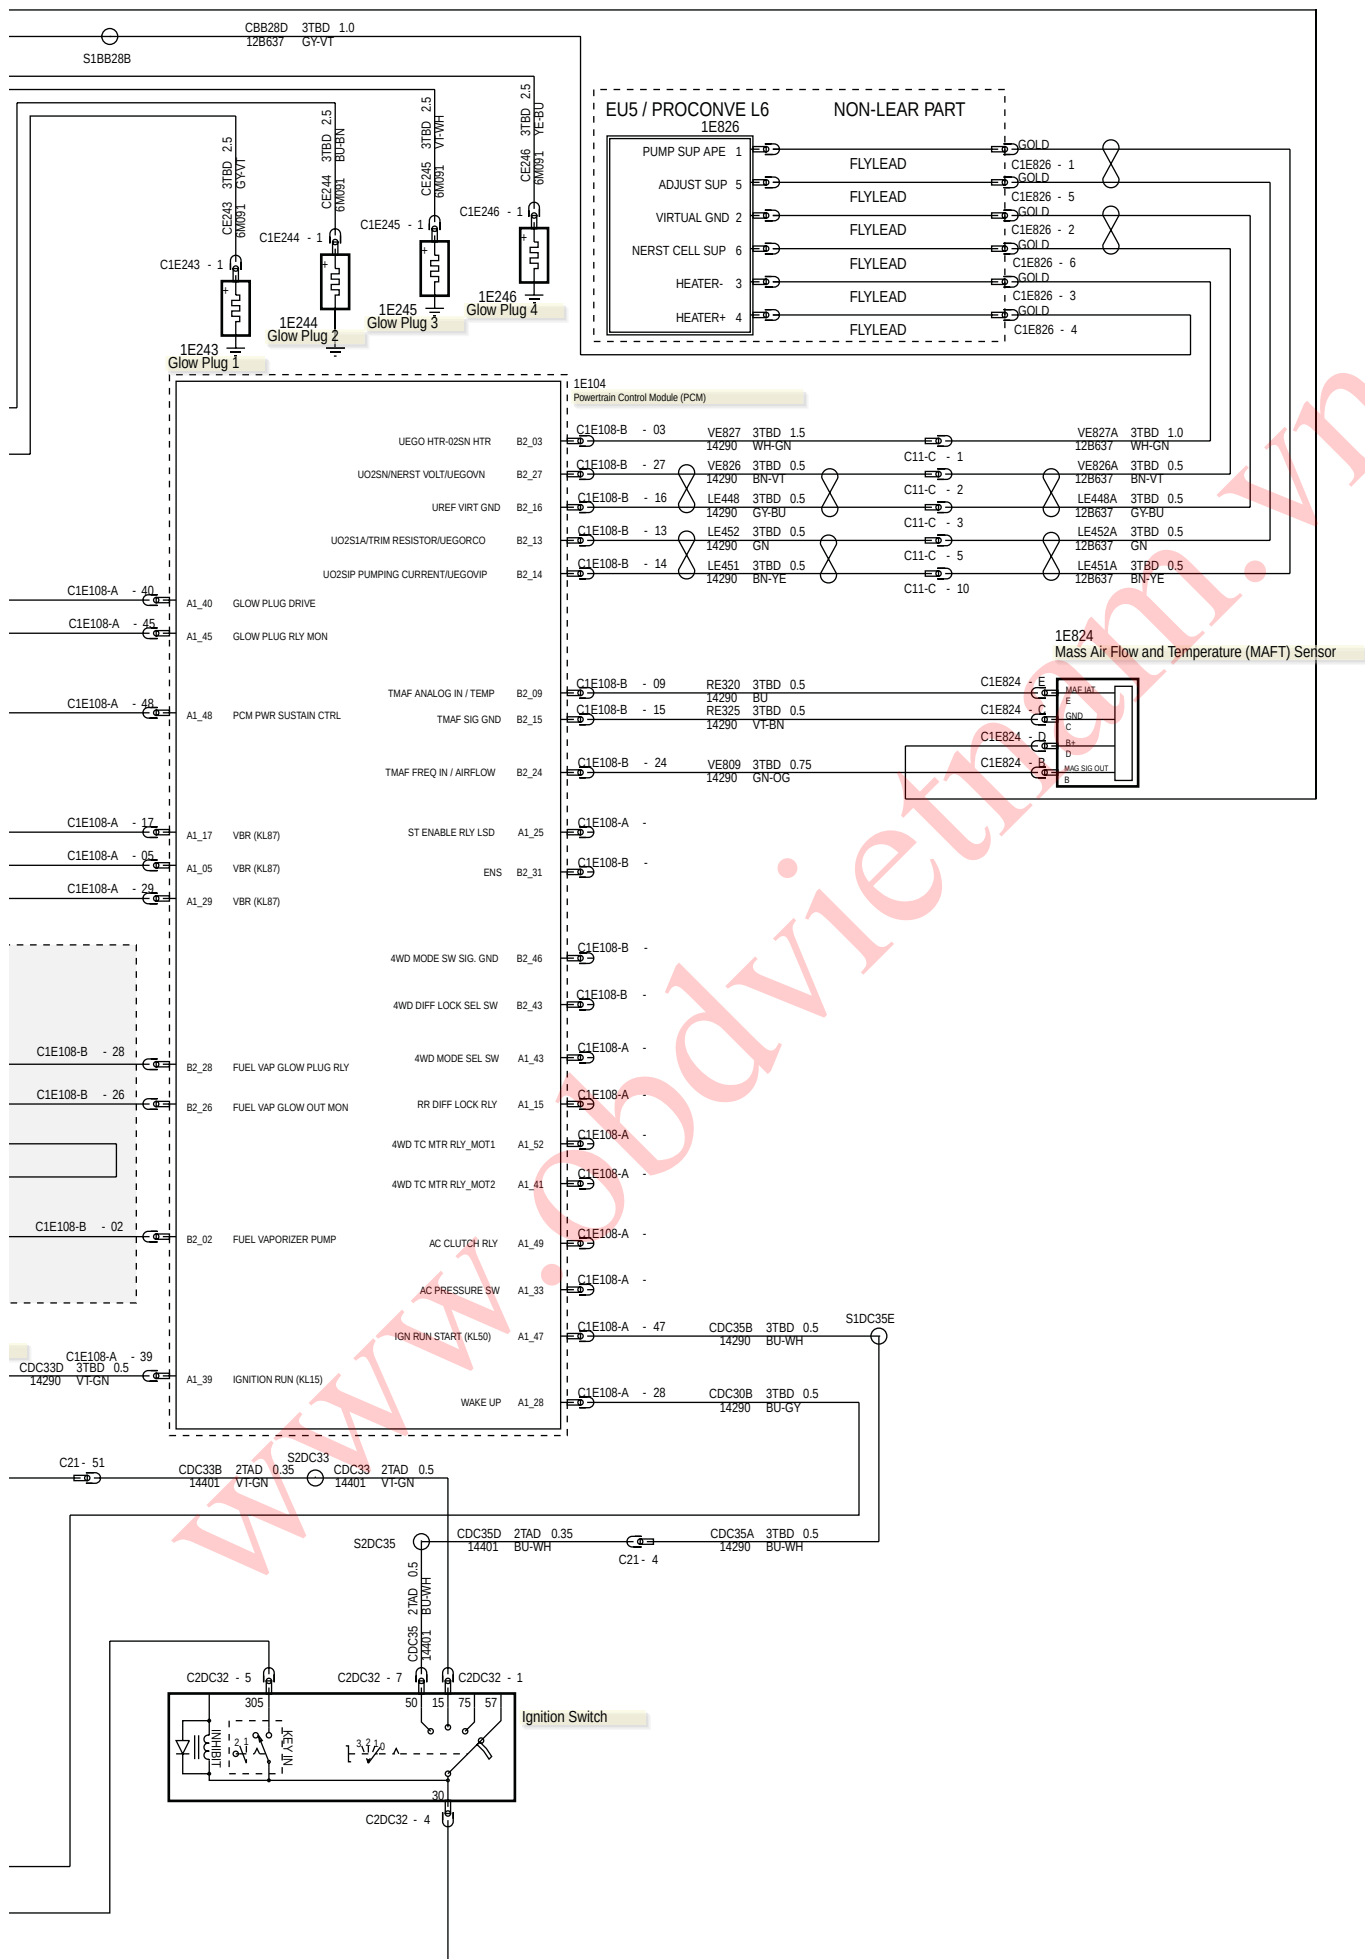

































































































































































































































































































































































303-14B-19 Engine Control—3.2L Duratorq-TDCi (148kW/200PS) - Puma, Vehicles With: 6-Speed Manual Transmission - MT82

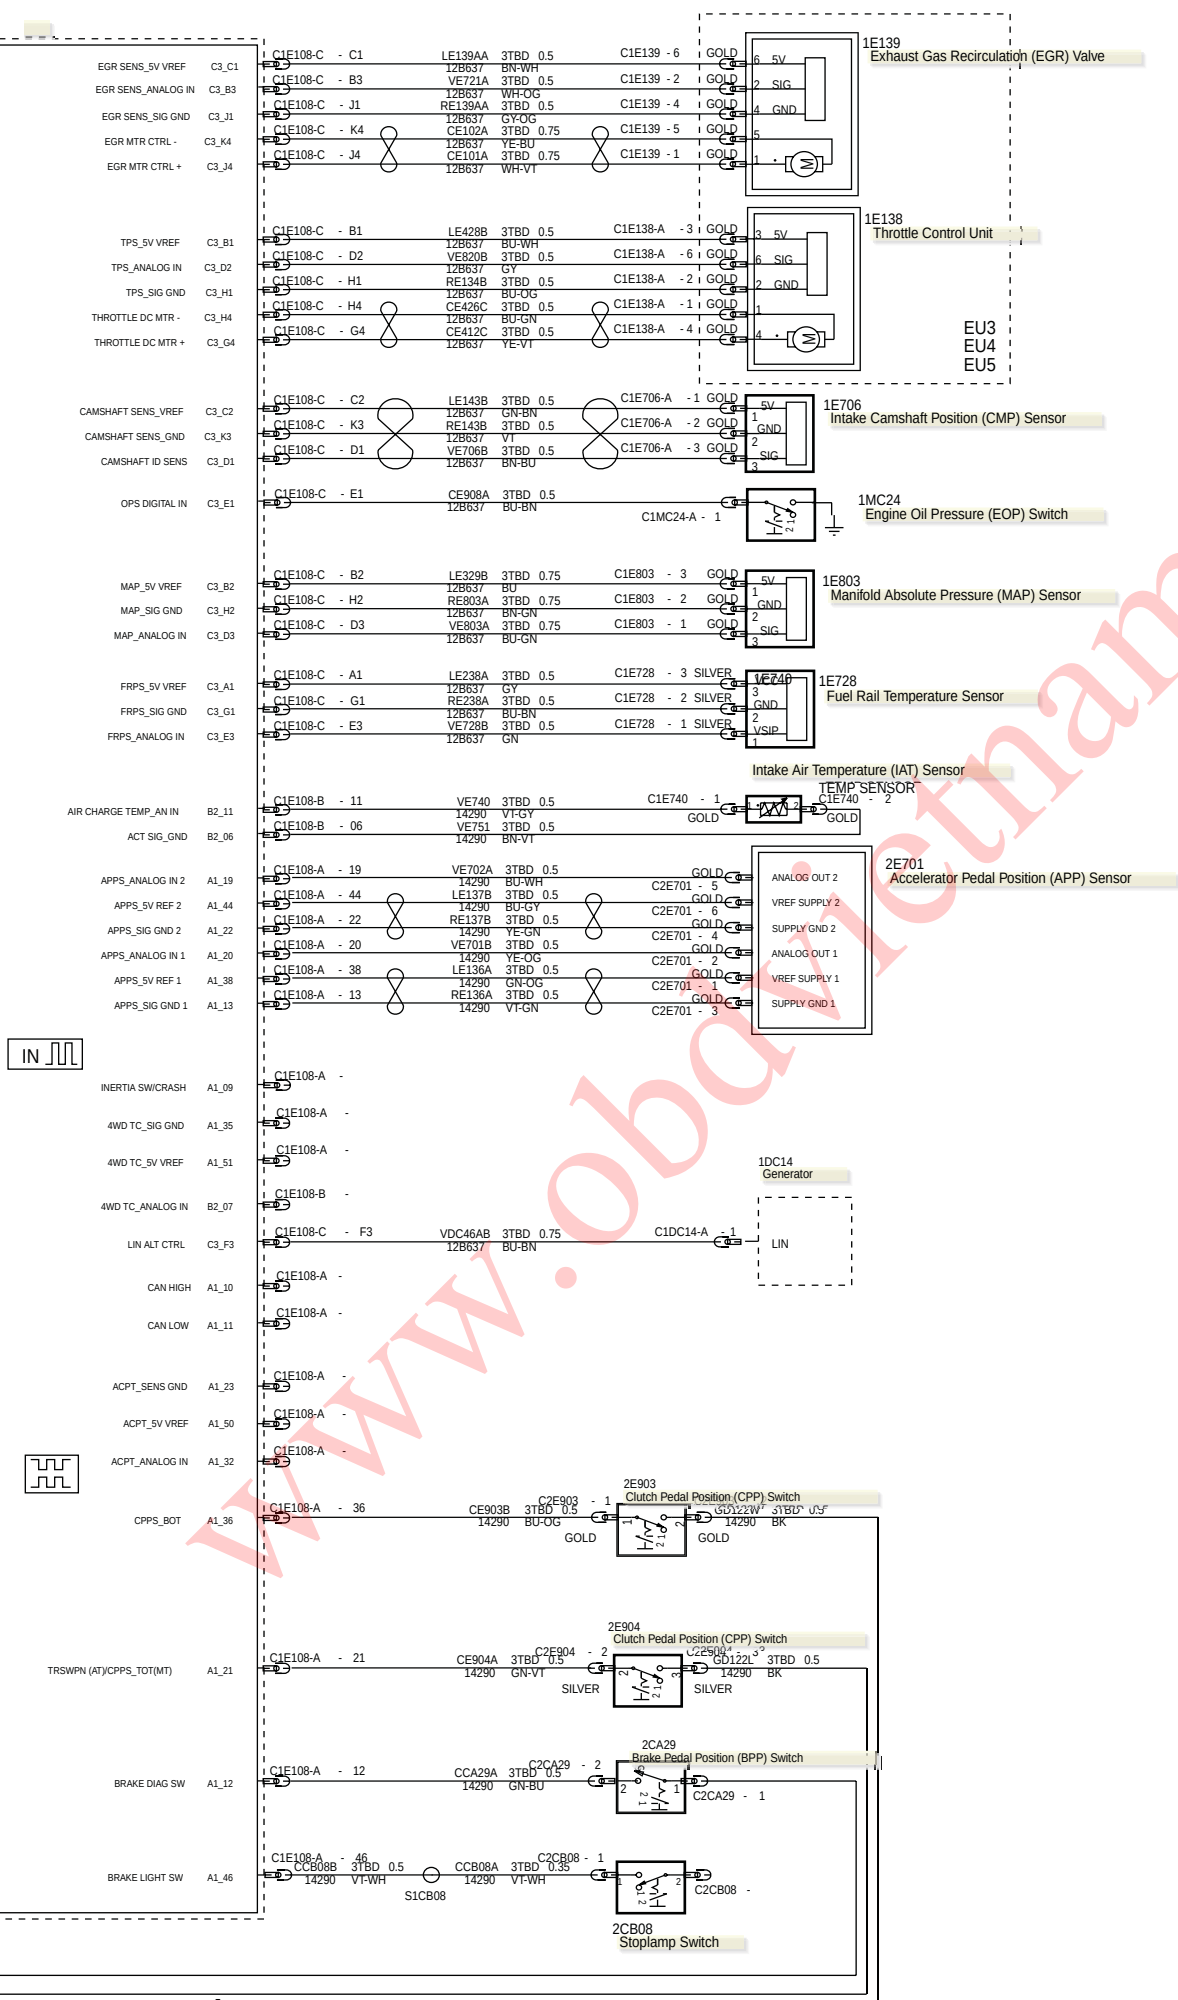


303-14B-21 Engine Control—3.2L Duratorq-TDCi (148kW/200PS) - Puma, Vehicles With: 6-Speed Manual Transmission - MT82

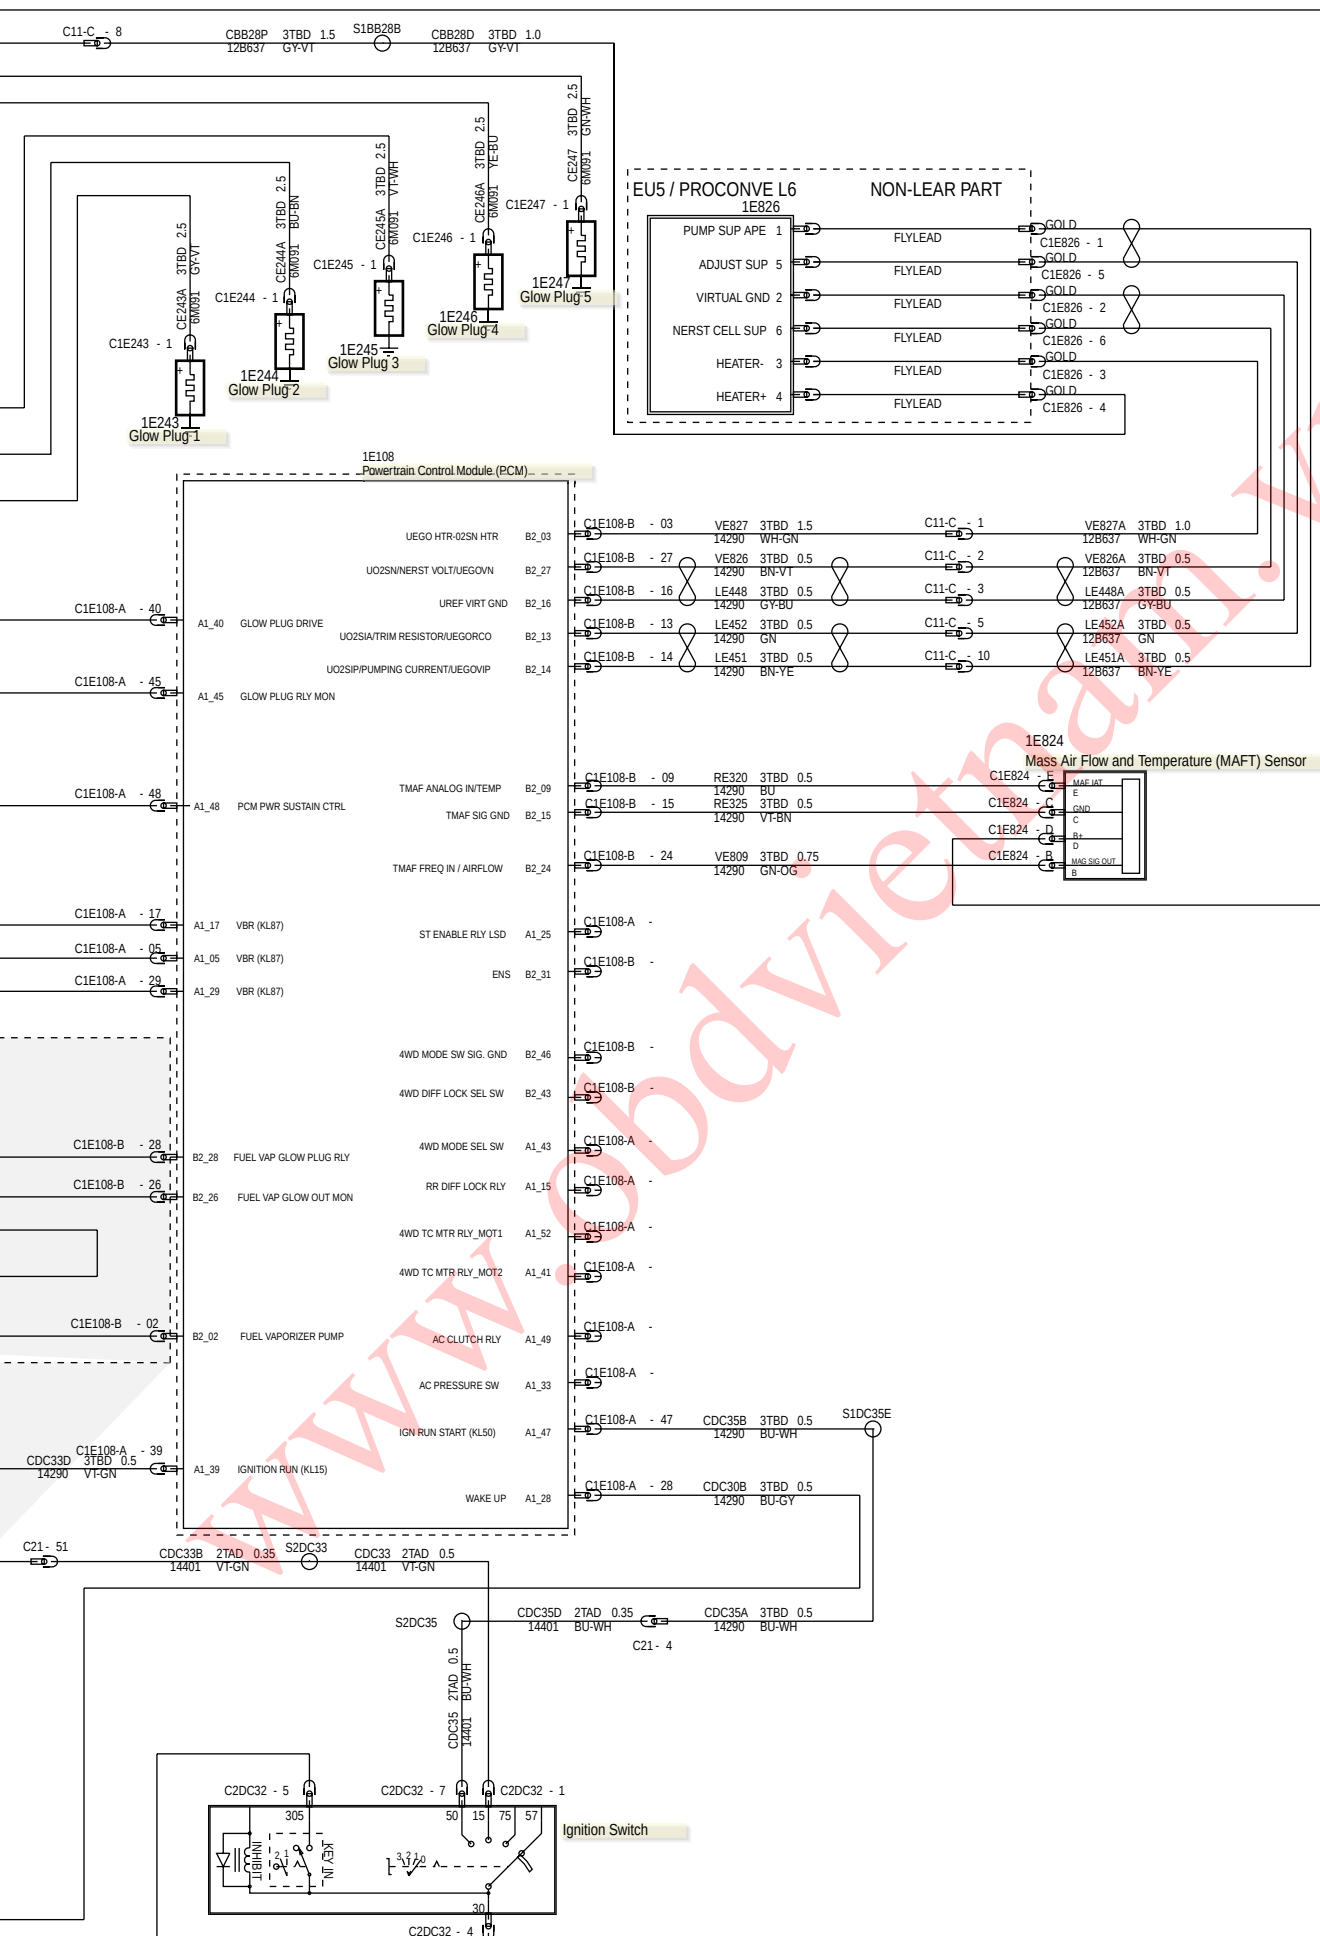

303-14B-22 Engine Control—3.2L Duratorq-TDCi (148kW/200PS) - Puma, Vehicles With: 6-Speed Automatic Transaxle - 6R80

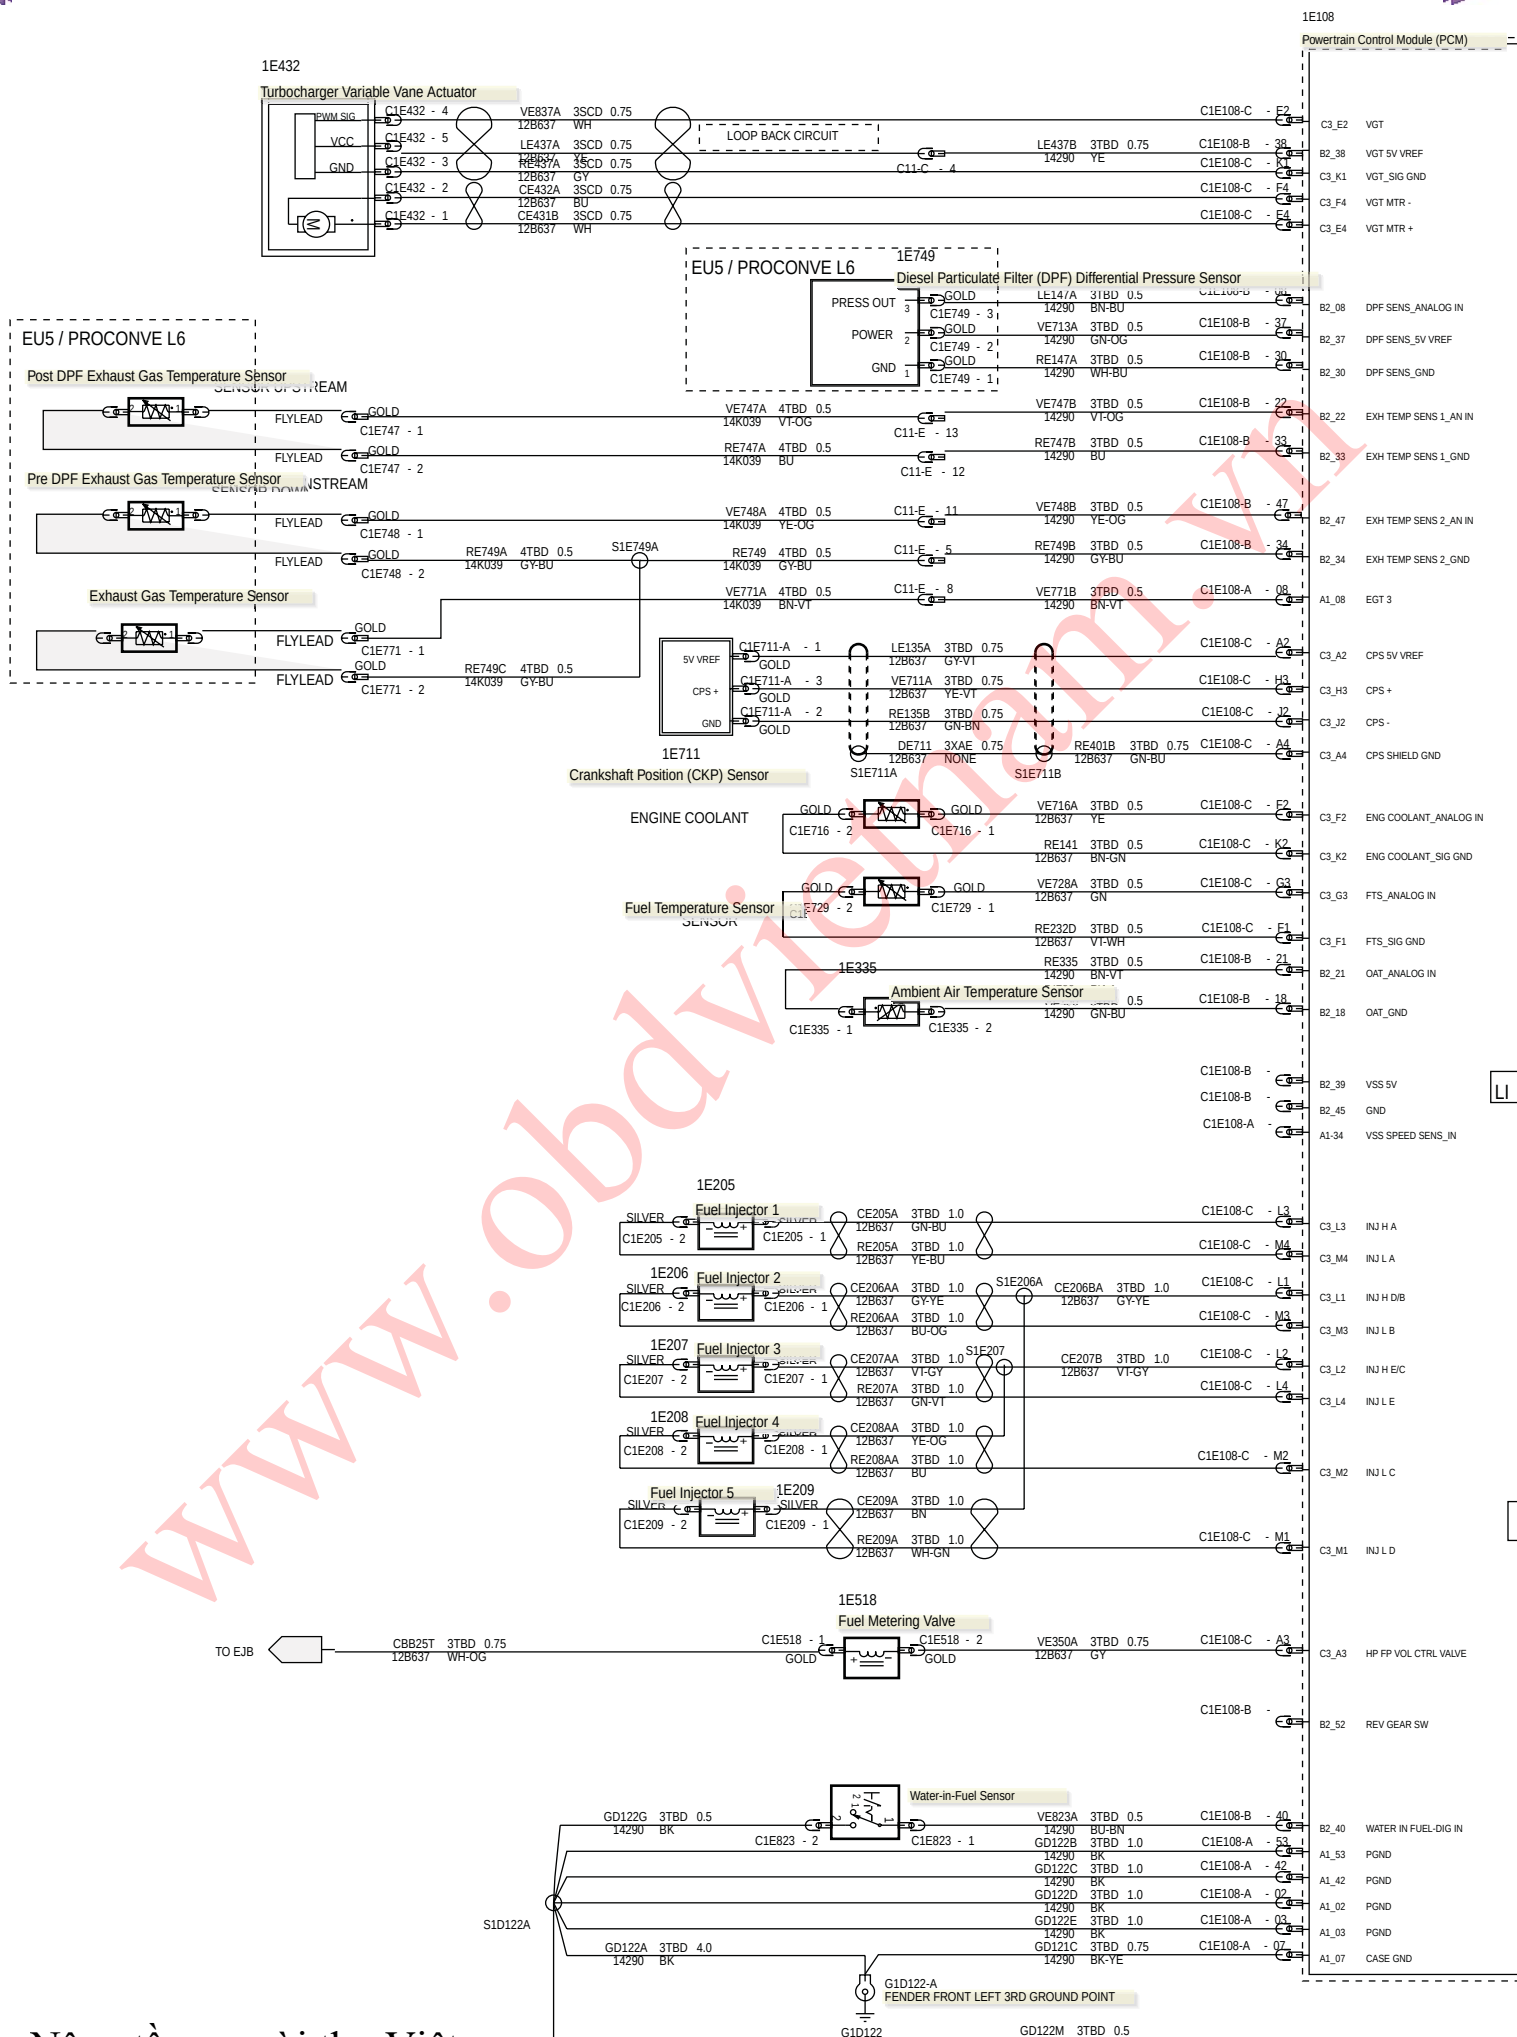

303-14B-23 Engine Control—3.2L Duratorq-TDCi (148kW/200PS) - Puma, Vehicles With: 6-Speed Automatic Transaxle - 6R80

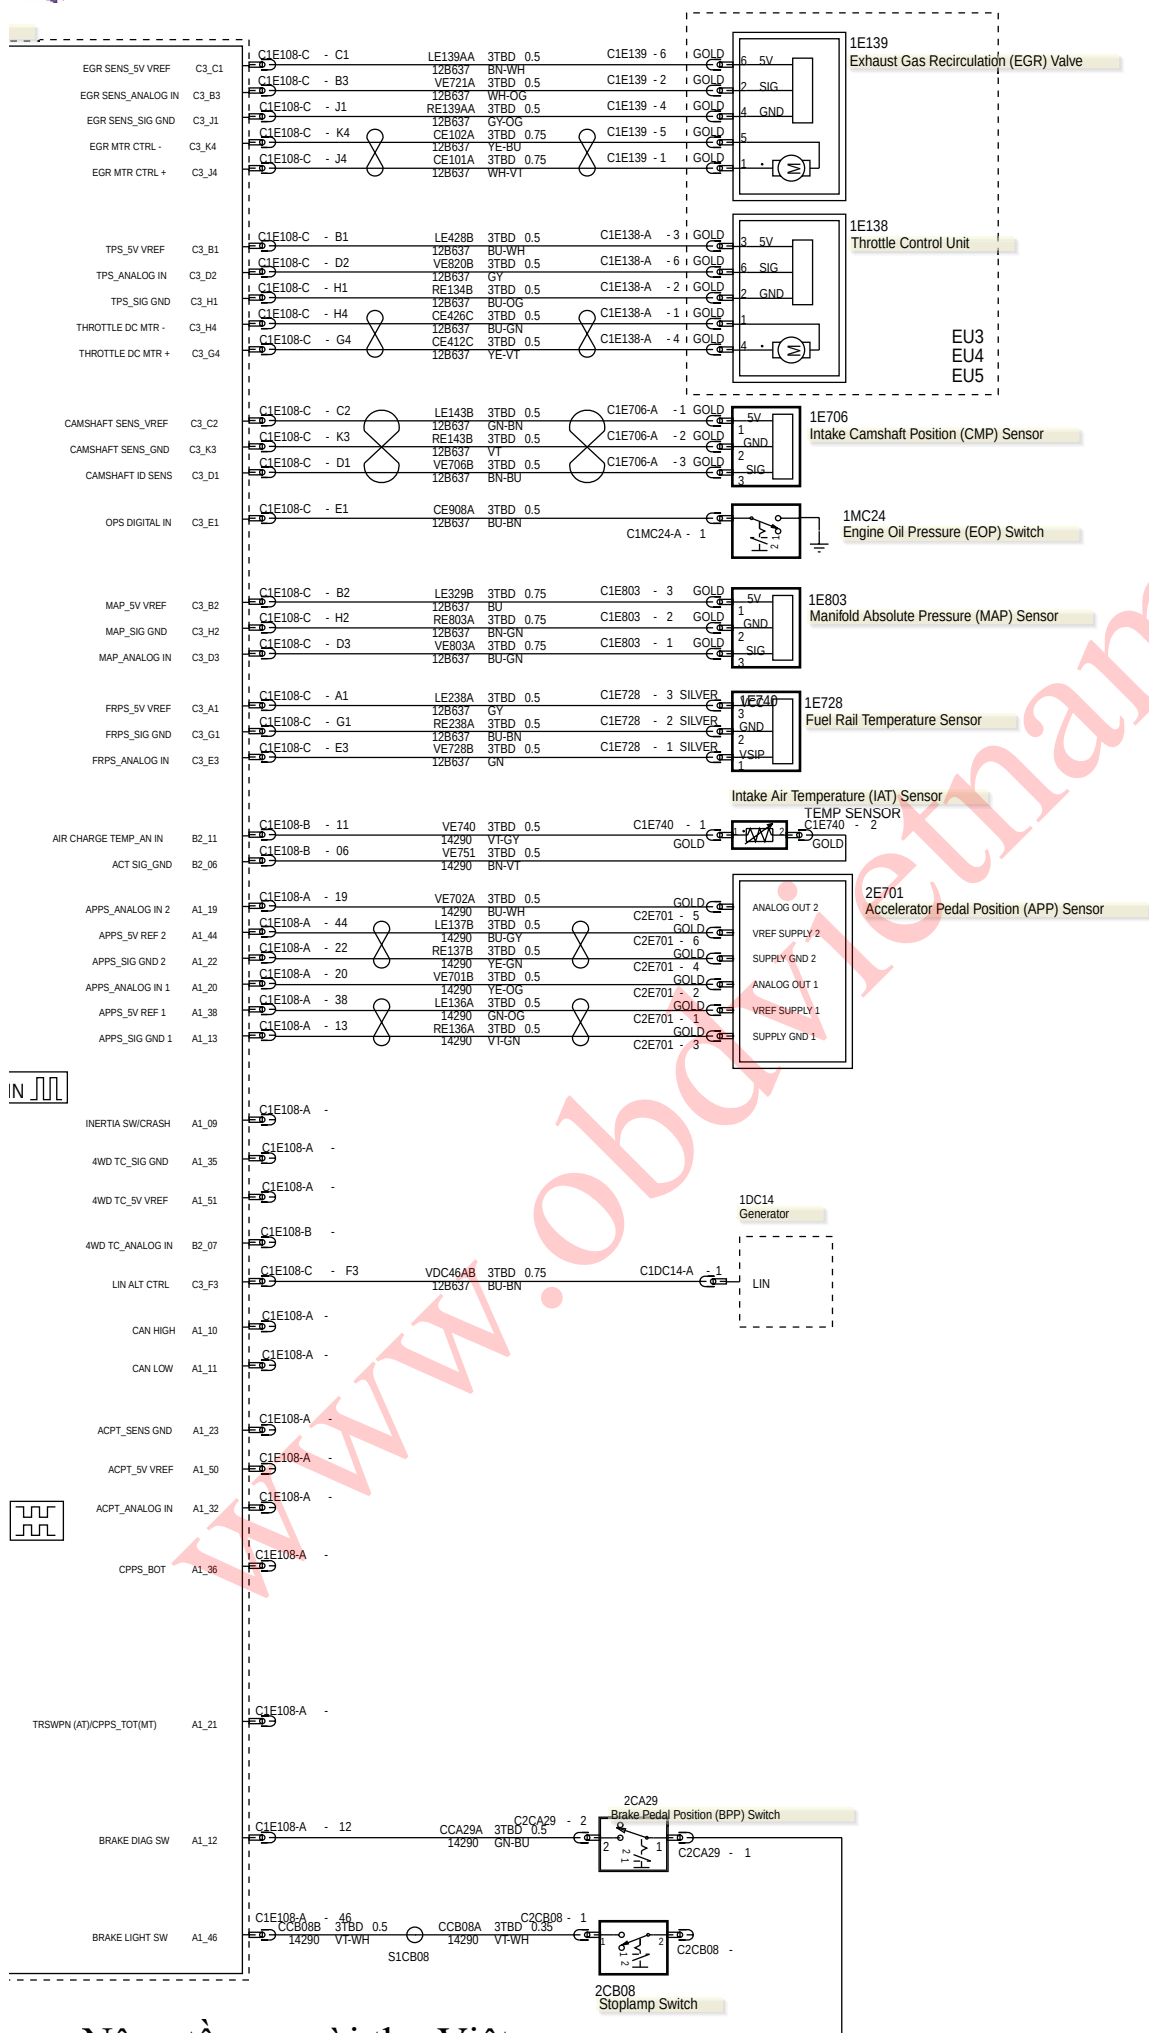




303-14B-26

Accelerator Pedal Position (APP) Sensor (G1404002)

PIN 1 => LE136A GN-OG 0.5 3TBD
 PIN 2 => VE701B YE-OG 0.5 3TBD
 PIN 3 => RE136A VT-GN 0.5 3TBD
 PIN 4 => RE137B YE-GN 0.5 3TBD
 PIN 5 => VE702A BU-WH 0.5 3TBD
 PIN 6 => LE137B BU-GY 0.5 3TBD

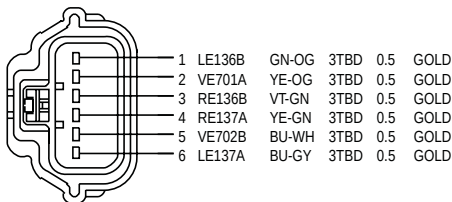

8U5T-14A464-JAA(000)

C2E701

TO ACCELERATOR PEDAL

HARNESS 14290

Brake Pedal Position (BPP) Switch (G1404158)

PIN 2 => CCA29A GN-BU 0.5 3TBD



F5LB-14489-BA


C2CA29

TO SPEED CONTROL INHIBIT SWITCH

HARNESS 14290

Clutch Pedal Position (CPP) Switch (G1404159)

PIN 1 => CE903B BU-OG 0.5 3TBD



97BG-14489-YBB


C2E903

TO CPP-BT

HARNESS 14290

Clutch Pedal Position (CPP) Switch (G1404160)

PIN 2 => CE904A GN-VT 0.5 3TBD




1L2T-14489-GC

C2E904

TO CPP-TT

HARNESS 14290

Crankshaft Position (CKP) Sensor—A (G1404161)

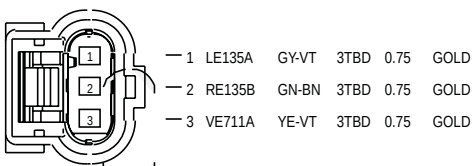

AU5T-14A464-VC


C1E711-A

TO BI-DIRECTIONAL CRANKSHAFT POSITION SENSOR

HARNESS 12B637

303-14B-27

Diesel Particulate Filter (DPF) Differential Pressure Sensor (G1404169)

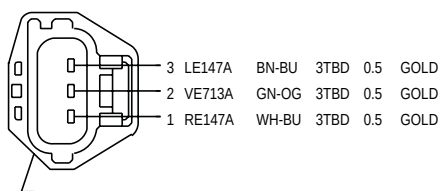


XW4T-14A464-FB

C1E749

TO DPF DELTA PRESSURE SENSOR ASSY

HARNESS 14290

Engine Coolant Temperature (ECT) Sensor (G1404170)

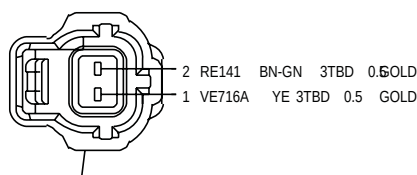


F5AB-14A464-BB

C1E716

TO ENGINE COOLANT TEMPERATURE SENSOR

HARNESS 12B637

Engine Oil Pressure (EOP) Switch—A (G1404171)

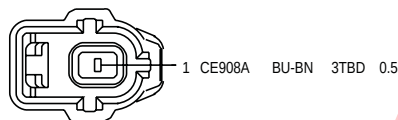


F65B-14A464-CA

C1MC24-A

TO OIL PRESSURE SWITCH DIESEL

HARNESS 12B637

Exhaust Gas Temperature Sensor (G1408808)

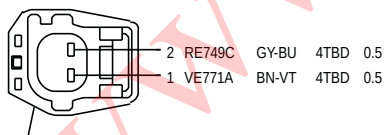


XW4T-14A464-AJB

C1E771

TO FLYLEAD EGT3 SENSOR

HARNESS 14K039

Fuel Rail Temperature Sensor (G1404176)



4R8Q-14A464-DB


C1E728

TO FUEL RAIL PRESSURE TRANSDUCER

HARNESS 12B637

303-14B-28

Fuel Temperature Sensor (G1404177)

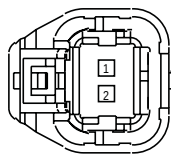


1	VE728A	GN	3TBD	0.5	GOLD
2	RE232D	VT-WH	3TBD	0.5	GOLD

AU5T-14A464-DBA
C1E729
TO FUEL TEMPERATURE SENSOR
HARNESS 12B637

Heated Oxygen Sensor (HO2S) (G1408809)

W



6	VE826A	BN-VT	3TBD	0.5	GOLD
4	CBB28D	GY-VT	3TBD	1.0	GOLD
5	LE452A	GN	3TBD	0.5	GOLD
3	VE827A	WH-GN	3TBD	1.0	GOLD
1	LE451A	BN-YE	3TBD	0.5	GOLD
2	LE448A	GY-BU	3TBD	0.5	GOLD

6G9T-14A464-XDA
C1E826
TO FLYLEAD UHEGO
HARNESS 12B637


Intake Air Temperature (IAT) Sensor (G1404178)



2	VE751	BN-VT	3TBD	0.5	GOLD
1	VE740	VT-GY	3TBD	0.5	GOLD

6M5T-14A464-FBA
C1E740
TO AIRCHARGE TEMP SENSOR
HARNESS 14290


Intake Camshaft Position (CMP) Sensor—A (G1404179)



3	VE706B	BN-BU	3TBD	0.5	GOLD
2	RE143B	VT	3TBD	0.5	GOLD
1	LE143B	GN-BN	3TBD	0.5	GOLD

1W7T-14A464-MA
C1E706-A
TO CAMSHAFT POSITION SENSOR DIESEL
HARNESS 12B637

Manifold Absolute Pressure (MAP) Sensor (G1404184)




1	VE803A	BU-GN	3TBD	0.75	GOLD
2	RE803A	BN-GN	3TBD	0.75	GOLD
3	LE329B	BU	3TBD	0.75	GOLD

8U5T-14A464-GAC
C1E803
TO MANIFOLD ABSOLUTE PRESSURE
HARNESS 12B637

303-14B-29 Duratorq-TDCi

Mass Air Flow and Temperature (MAFT) Sensor (G1404185)

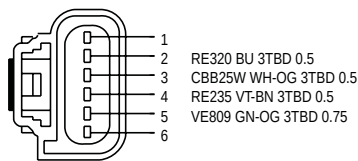


3W4T-14A464-VA(002)

C1E824

TO TEMPERATURE MASS AIR FLOW SENSOR

HARNESS 14290

Post DPF Exhaust Gas Temperature Sensor (G1404186)

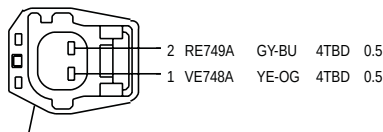

XW4T-14A464-AJB


C1E748

TO FLYLEAD DPF EXHAUST TEMPERATURE SENSOR DOWNSTREAM

HARNESS 14K039

Powertrain Control Module (PCM)—A (G1404187)

PIN 36 => CE903B BU-OG 0.5 3TBD

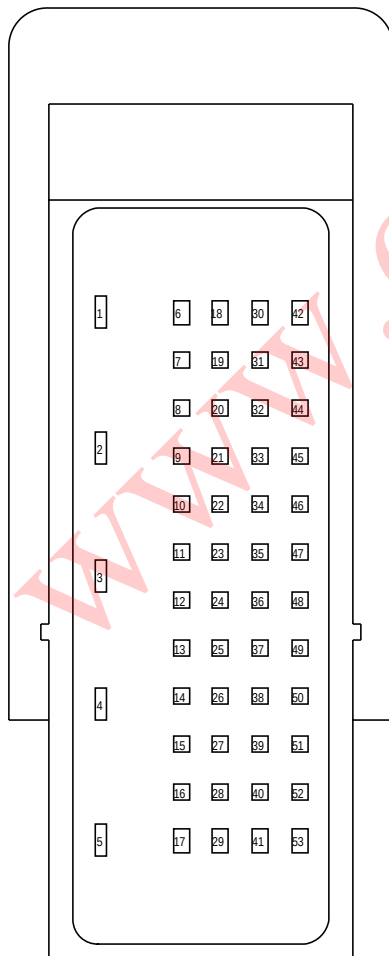

AB3N-14A464-AA

C1E108-A

TO ECM1 DIESEL


HARNESS 14290

1				
2				
3				
4				
5				
6				
7				
8				
9				
10	VDB04E	WH-BU 3TBD 0.5	+ VDB04P	WH-BU 3TBD 0.5
11	VDB05N	WH3TBD 0.5	+ VDB05P	WH3TBD 0.5
12	CCA29A	GN-BU 3TBD 0.5		
13	RE136A	VT-GN 3TBD 0.5		
14				
15	VET68B	VT-OG 3TBD 0.5		
16				
17	CBB29D	WH-VT 3TBD 1.0		
18				
19	VE702A	BU-WH 3TBD 0.5		
20	VE701B	YE-OG 3TBD 0.5		
21	CE904A	GN-VT 3TBD 0.5		
22	RE137B	YE-GN 3TBD 0.5		
23	RH433A	BU-GY 3TBD 0.5		
24				
25	CDC12A	YE 3TBD 0.5		
26				
27				
28	CDC30B	BU-GY 3TBD 0.5		
29	CBB29F	WH-VT 3TBD 1.0		
30				
31				
32	VH433B	VT-OG 3TBD 0.5		
33	CH423C	YE 3TBD 0.5		
34	VE822D	YE-BU 3TBD 0.5		
35	RCF09	BN-WH 3TBD 0.5		
36	CET60	WH-GN 3TBD 0.5		
37				
38	LE136A	GN-OG 3TBD 0.5		
39	CDC33D	VT-GN 3TBD 0.5		
40	CE151	BN-VT 3TBD 0.5		
41	CCF08A	GY-OG 3TBD 0.5		
42	GD122C	BK 3TBD 1.0		
43	CCF13	WH-BU 3TBD 0.5		
44	LE137B	BU-GY 3TBD 0.5		
45	CE513	VT-GN 3TBD 0.5		
46	CCB08B	VT-WH 3TBD 0.5		
47	CDC35B	BU-WH 3TBD 0.5		
48	CE237	BN-WH 3TBD 0.5		
49	CEC02A	GN-BU 3TBD 0.5		
50	CH445A	YE-GY 3TBD 0.5		
51	LCF24	YE 3TBD 0.5		
52	CCF07A	BN-GN 3TBD 0.5		
53	GD122B	BK 3TBD 1.0		

303-14B-30

Powertrain Control Module (PCM)—B (G1404189)


PIN 52 => CET47C BU 0.5 3TBD + CET47E BU 0.5 3TBD

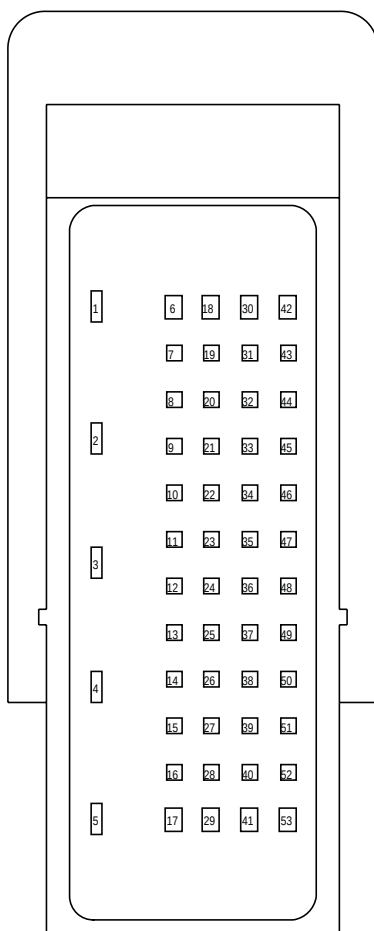

AB3N-14A464-CA
C1E108-B
TO ECM2 DIESEL
HARNESS 14290

1			
2			
3			
4			
5			
6			
7			
8			
9			
10			
11	VE740	VT-GY	3TBD 0.5
12			
13	LE452	GN	3TBD 0.5
14	LE451	BN-YE	3TBD 0.5
15	RE325	VT-BN	3TBD 0.5
16	LE448	GY-BU	3TBD 0.5
17			
18	VE750	GN-BU	3TBD 0.5
19			
20			
21	RE335	BN-VT	3TBD 0.5
22	VE747B	VT-OG	3TBD 0.5
23			
24	VE809	GN-OG	3TBD 0.75
25			
26	CBB15A	BN-BU	3TBD 0.75
27	VE826	BN-VT	3TBD 0.5
28	CE156B	WH-VT	3TBD 0.5
29			
30	RE147A	WH-BU	3TBD 0.5
31	CR115D	BN	3TBE 0.5
32			
33	RE747B	BU	3TBD 0.5
34	RE749B	GY-BU	3TBD 0.5
35			
36			
37	VE713A	GN-OG	3TBD 0.5
38	LE437B	YE	3TBD 0.75
39	VMC05D	VT-OG	3TBD 0.5
40	VE823A	BU-BN	3TBD 0.5
41			
42			
43	RET68	YE-GY	3TBD 0.5
44			
45	CES07D	BN	3TBD 0.5
46	RCF13	WH-BN	3TBD 0.5
47	VE748B	YE-OG	3TBD 0.5
48			
49			
50			
51			
52	CET47E	BU	3TBD 0.5 + CET47C BU 3TBD 0.5
53			

Powertrain Control Module (PCM)—C (G1404205)

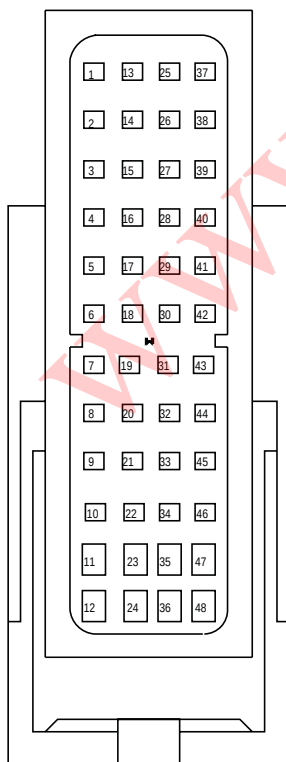


7V6N-14A464-TA(099)
C1E108-C
TO ECM3 DIESEL
HARNESS 12B637

1	RE401B	GN-BU	3TBD 0.75
2	CE460A	VT-WH	3TBD 0.5
3			
4			
5	CE431B	WH	3SCD 0.75
6	CE432A	BU	3SCD 0.75
7	CE412C	YE-VT	3TBD 0.5
8	CE426C	BU-GN	3TBD 0.5
9	CE101A	WH-VT	3TBD 0.75
10	CE102A	YE-BU	3TBD 0.75
11	RE207A	GN-VT	3TBD 1
12	RE205A	YE-BU	3TBD 1
13	VE350A	GY	3TBD 0.75
14	VE721A	WH-OG	3TBD 0.5
15	VE836A	VT-GN	3SCD 0.75
16	VE803A	BU-GN	3TBD 0.75
17	VE728B	GN	3TBD 0.5
18	VDC46AB	BU-BN	3TBD 0.75
19	VE728A	GN	3TBD 0.5
20	VE711A	YE-VT	3TBD 0.75
21			
22	RE143B	VT	3TBD 0.5
23	CE205A	GN-BU	3TBD 1
24	RE206AA	BU-OG	3TBD 1 / RE207 GN-VT 3TBD 1
25	LE135A	GY-VT	3TBD 0.75
26	LE329B	BU	3TBD 0.75
27	LE143B	GN-BN	3TBD 0.5
28	VE820B	GY	3TBD 0.5
29	VE837A	WH	3SCD 0.75
30	VE716A	YE	3TBD 0.5
31			
32	RE803A	BN-GN	3TBD 0.75
33	RE135B	GN-BN	3TBD 0.75
34	RE141	BN-GN	3TBD 0.5
35	CE207B	VT-GY	3TBD 1 / CE208A YE-OG 3TBD 1
36	RE208A	BU	3TBD 1 / RE208AA BU 3TBD 1
37	LE238A	GY	3TBD 0.5
38	LE428B	BU-WH	3TBD 0.5
39	LE139AA	BN-WH	3TBD 0.5
40	VE706B	BN-BU	3TBD 0.5
41	CE908A	BU-BN	3TBD 0.5
42	RE232D	VT-WH	3TBD 0.5
43	RE238A	BU-BN	3TBD 0.5
44	RE134B	BU-OG	3TBD 0.5
45	RE139AA	GY-OG	3TBD 0.5
46	RE437A	GY	3SCD 0.75 / RE437AA GY 3SCD 0.75
47	CE206B	GY-YE	3TBD 1 / CE206BA GY-YE 3TBD 1
48	RE206A	BU-OG	3TBD 1 / RE209A WH-GN 3TBD 1

303-14B-31

Pre DPF Exhaust Gas Temperature Sensor (G1404206)




XW4T-14A464-AHB

C1E747

TO FLYLEAD DPF EXHAUST TEMPERATURE SENSOR UPSTREAM

HARNESS 14K039

Throttle Control Unit—A (G1404207)

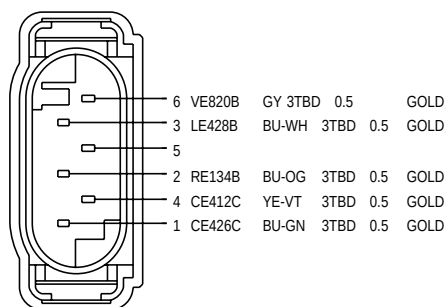


2L1T-14A464-YA

C1E138-A

TO ELECTRONIC THROTTLE BODY DIESEL

HARNESS 12B637

Vehicle Speed Sensor 1 (VSS1) (G1404208)

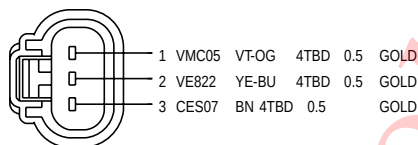


2L1T-14A464-ZA

C1E822

TO VEHICLE SPEED SENSOR

HARNESS 14K039

Wastegate Control Solenoid (G1404209)

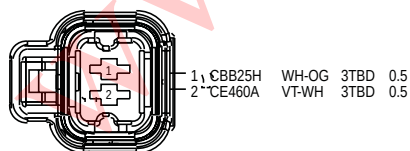

4M5T-14A464-KKA

C1E460

TO EVRV

HARNESS 12B637

SECTION 307-01 Automatic Transmission/Transaxle

— Vehicles With: 6-Speed Automatic Transaxle - 6R80

VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS

PAGE

ELECTRICAL SCHEMATICS

Automatic Transmission/Transaxle — LHD 4WD/LHD RWD..... 307-01-2


Automatic Transmission/Transaxle — RHD 4WD/RHD RWD..... 307-01-4

ELECTRICAL CONNECTORS


Transmission Control Module (TCM)..... 307-01-6

Transmission Control Unit Solenoids..... 307-01-6

307-01-2 Automatic Transmission/Transaxle—LHD 4WD/LHD RWD

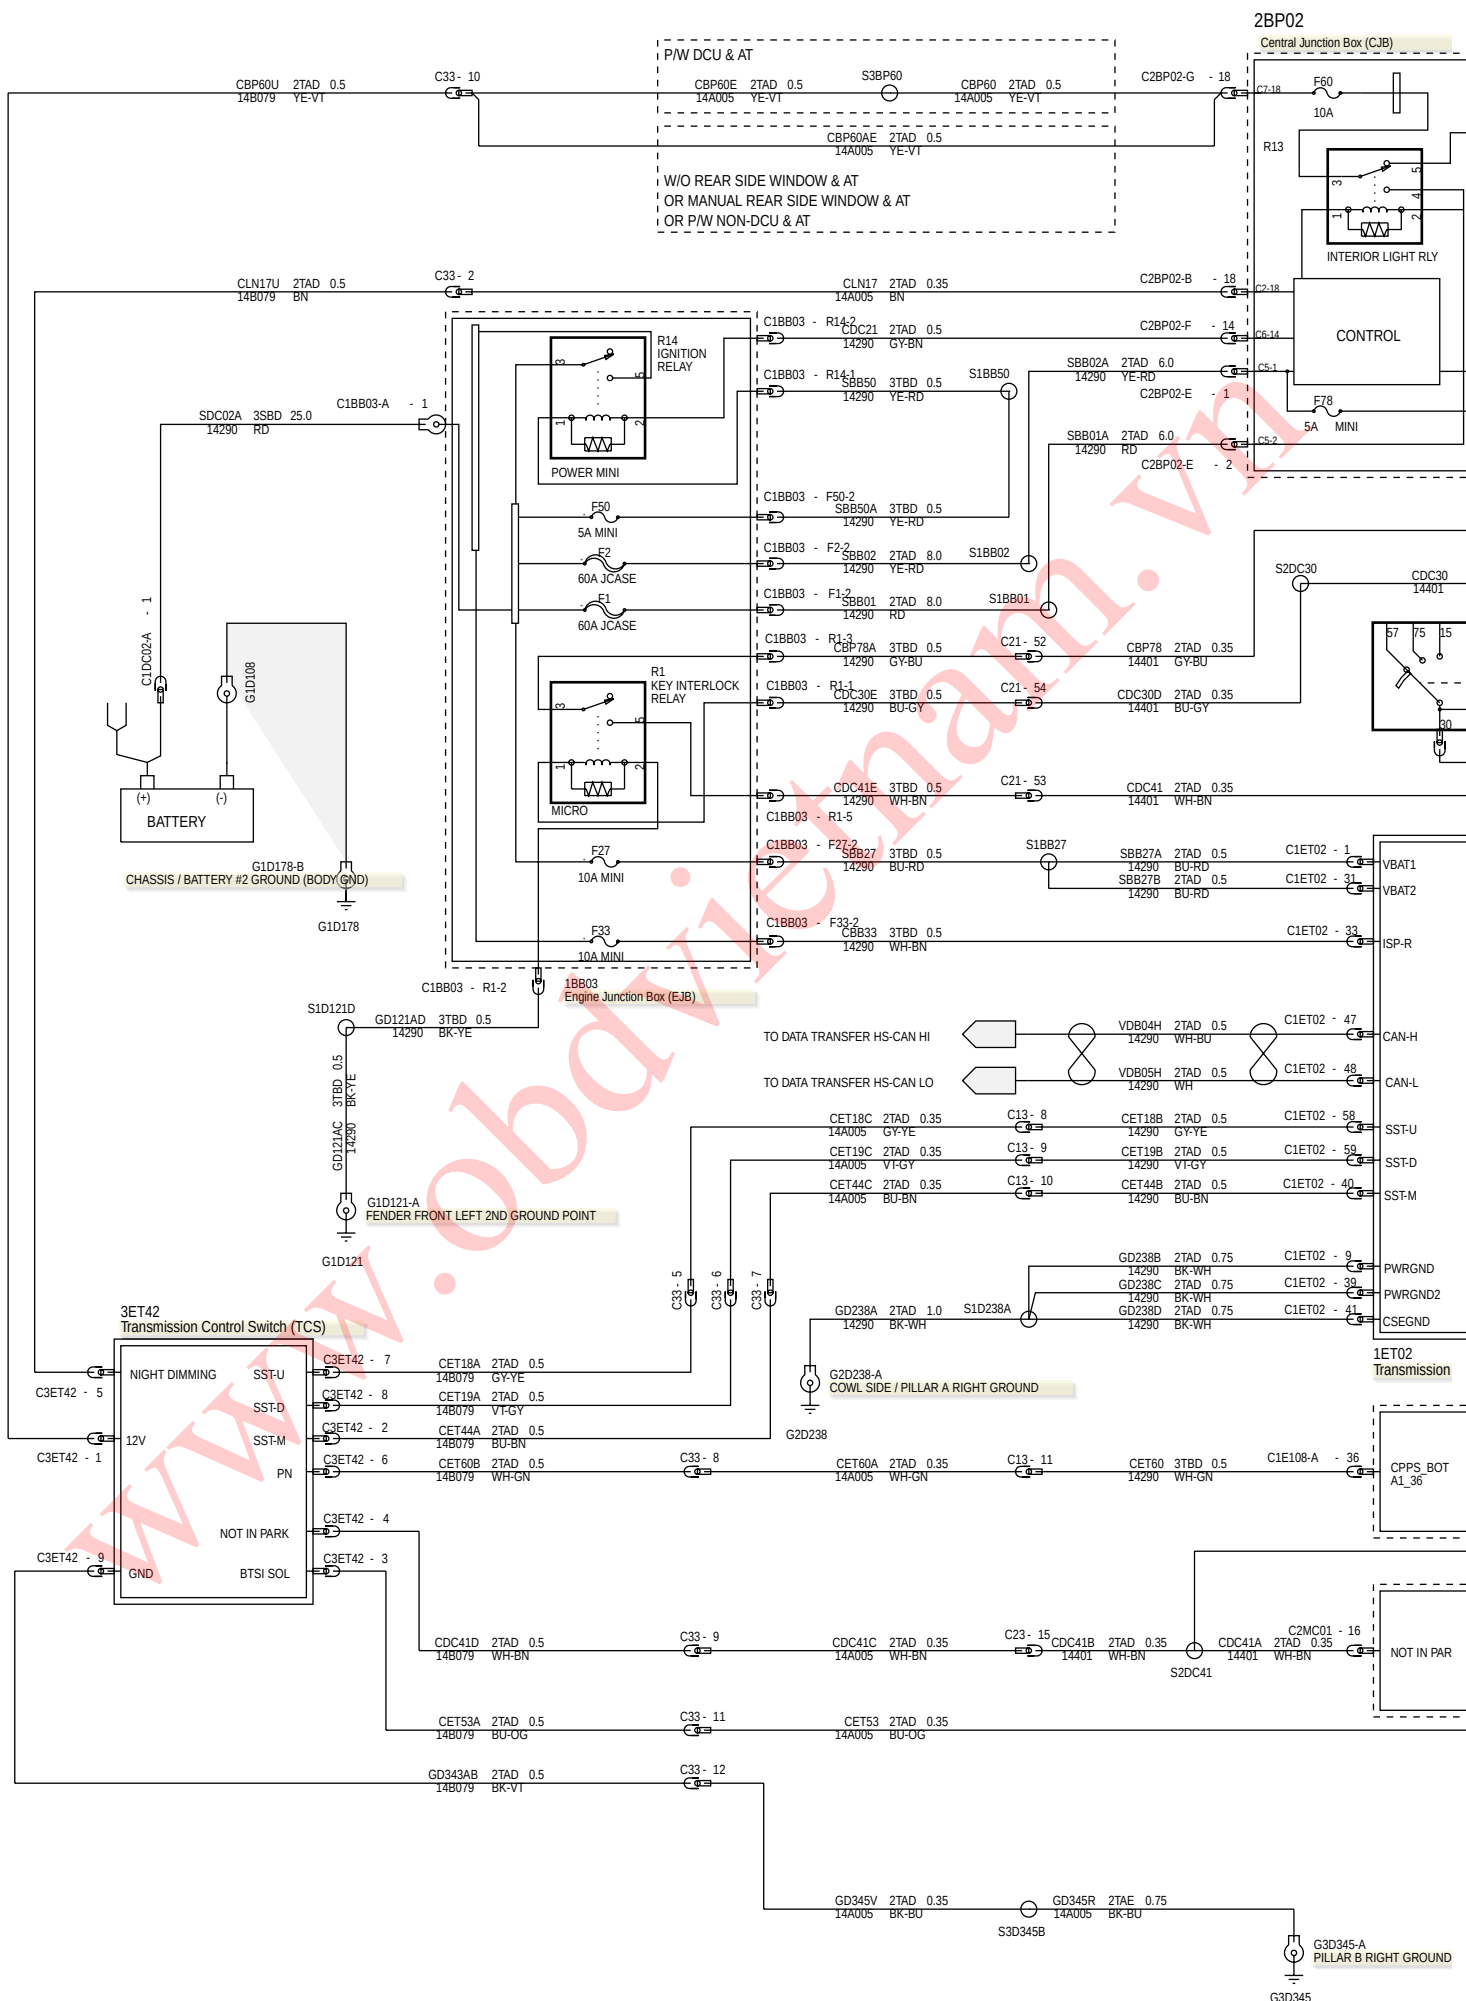


307-01-3 Automatic Transmission/Transaxle—LHD 4WD/LHD RWD

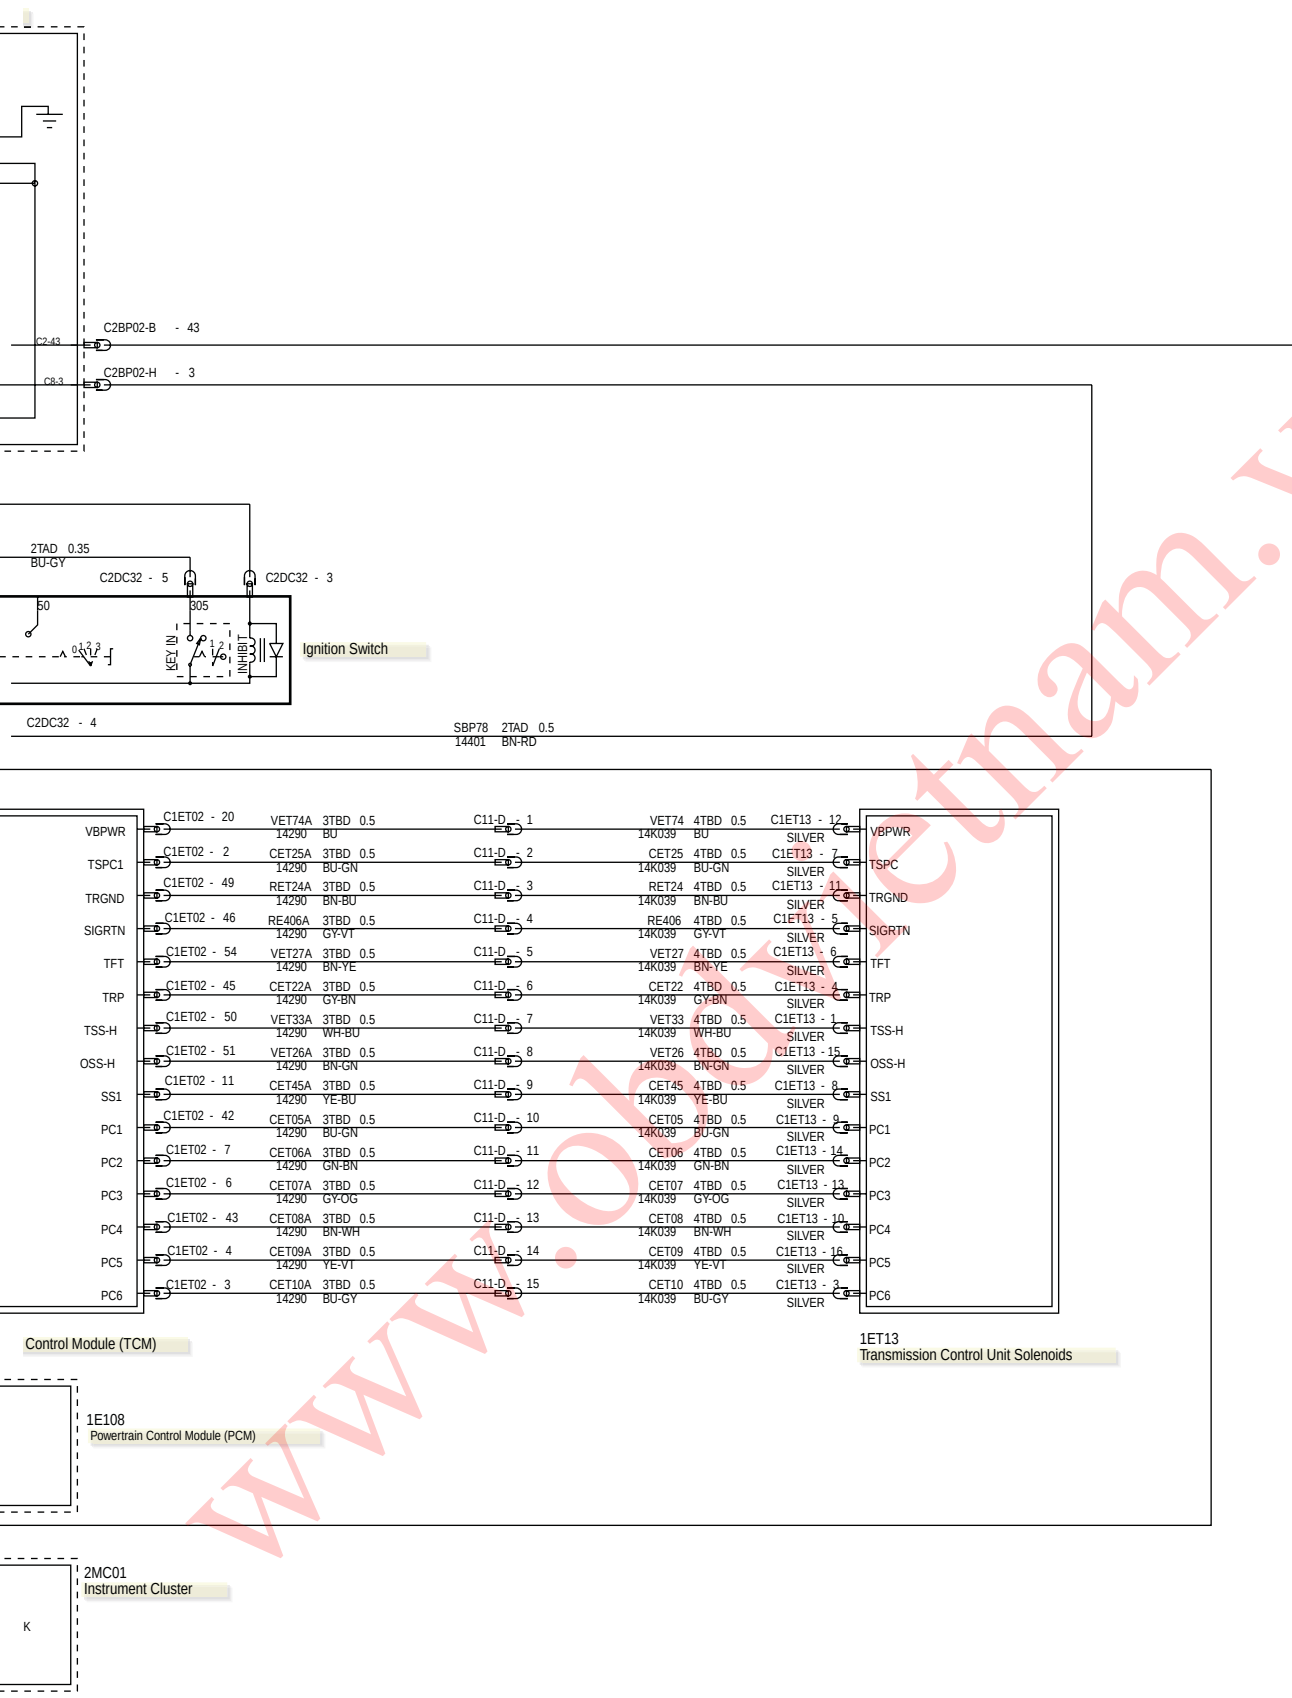

2BP02




307-01-5 Automatic Transmission/Transaxle—RHD 4WD/RHD RWD

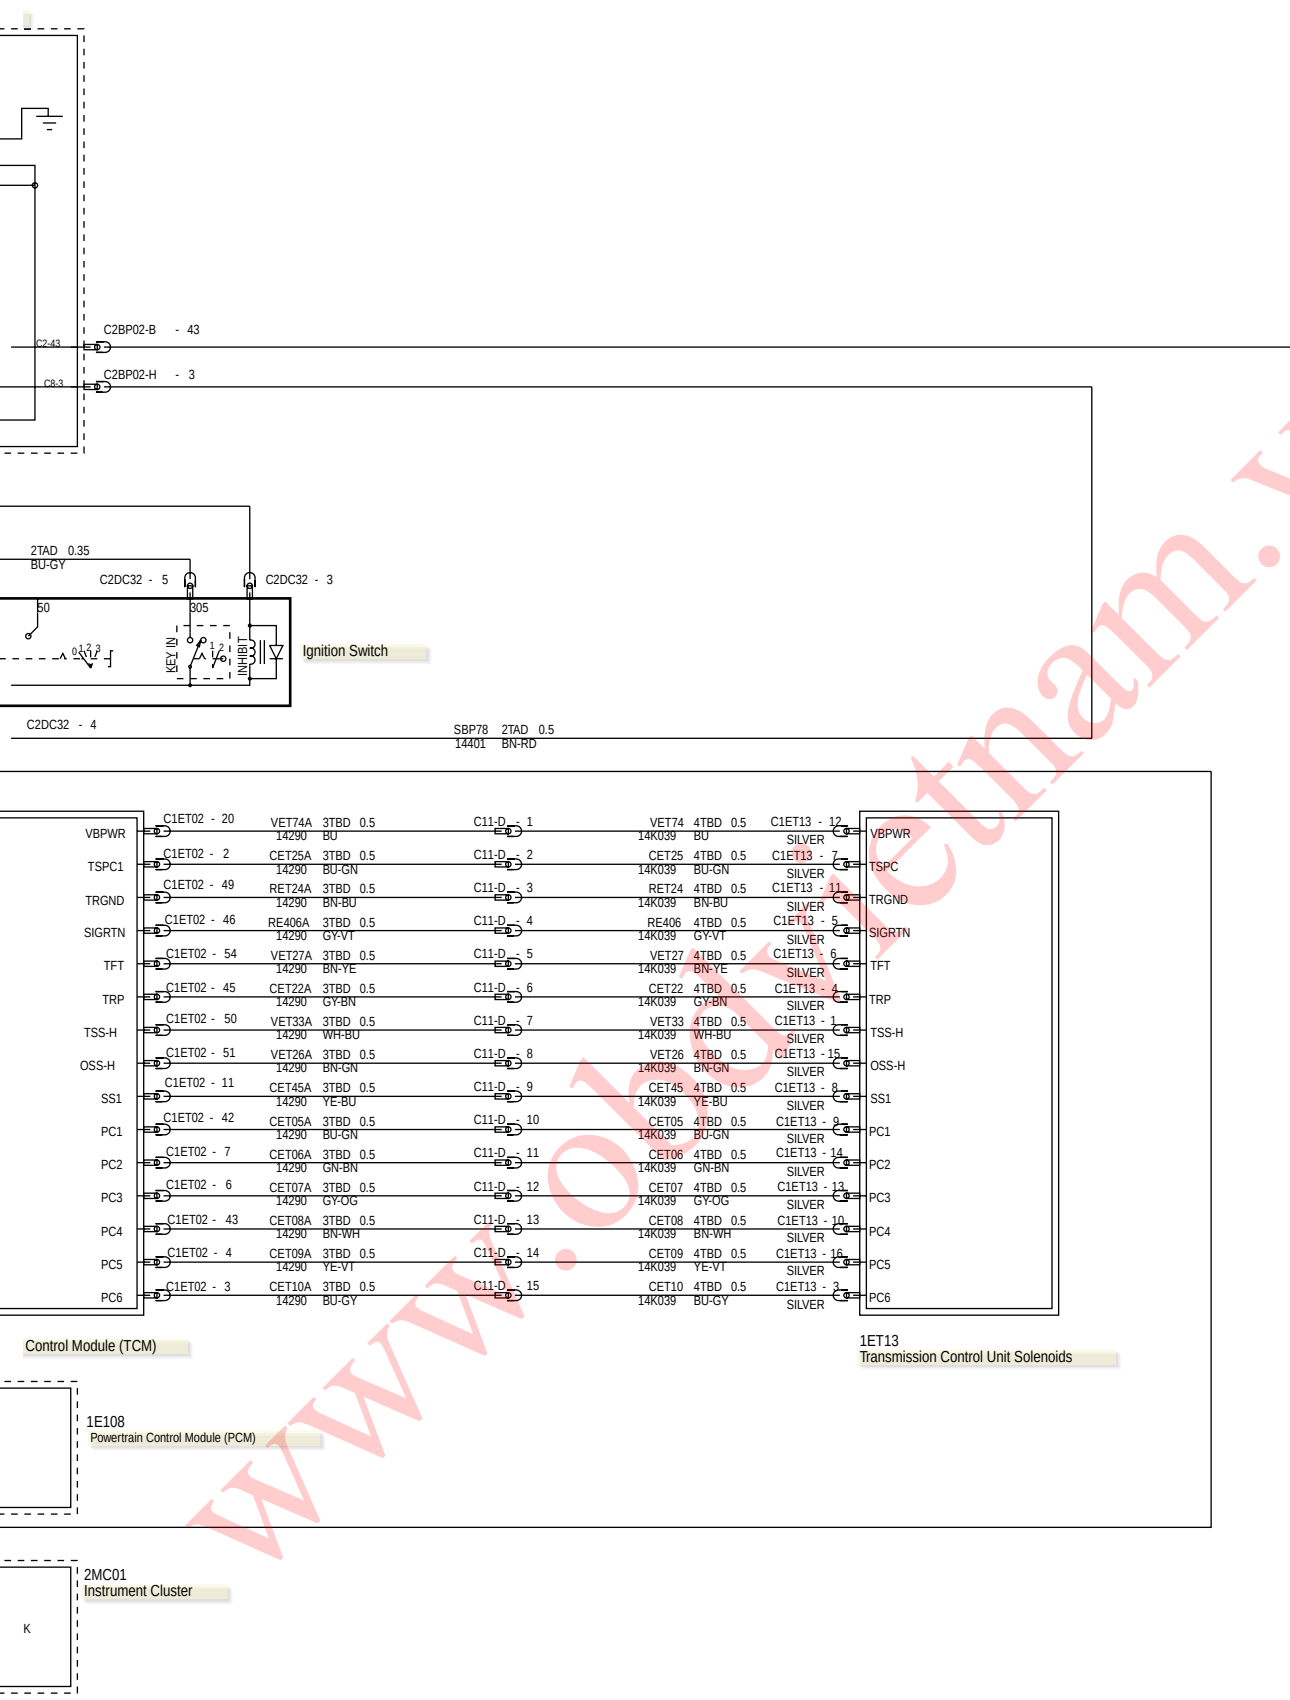

307-01-6

Transmission Control Module (TCM) (G1404277)

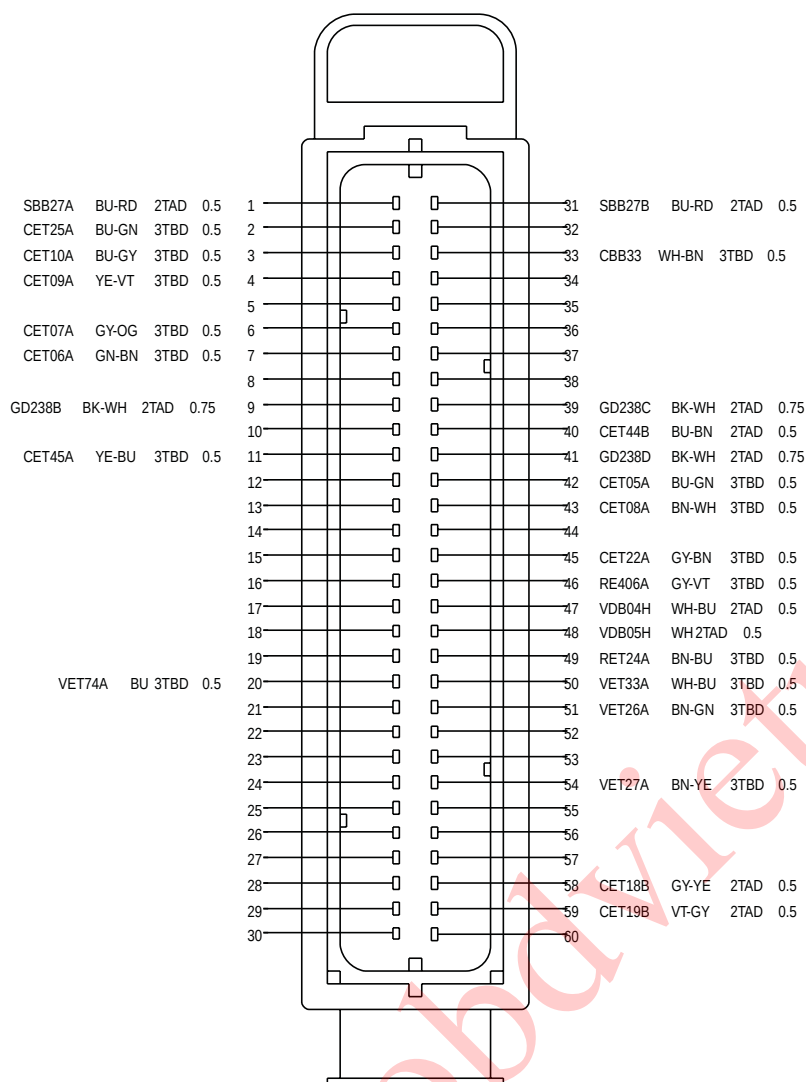


7C3T-14A464-AA(000)

C1ET02

TO TRANSMISSION CONTROL MODULE

HARNESS 14290

Transmission Control Unit Solenoids (G1405435)

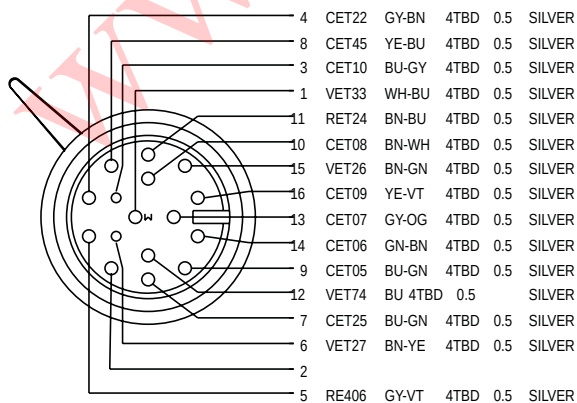

2R8T-14A464-DB

C1ET13

TO TRANSMISSION CONNECTION (AUTO)

HARNESS 14K039

SECTION 307-05 Automatic Transmission/Transaxle External Controls

VEHICLE APPLICATION: **2012.0 Ranger**

CONTENTS

PAGE


ELECTRICAL CONNECTORS

Transmission Control Switch (TCS).....	307-05-2
--	----------

www.obdviethnam.vn

307-05-2

Transmission Control Switch (TCS) (G1404279)

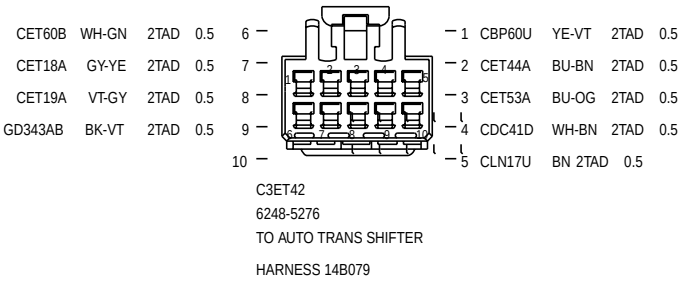


www.obdvietsnam.vn

SECTION 308-07 Four-Wheel Drive Systems

VEHICLE APPLICATION: 2012.0 Ranger


CONTENTS	PAGE
ELECTRICAL SCHEMATICS	
Four-Wheel Drive Systems — 2.5L Duratec-HE (122kW/165PS) - M14, Vehicles With: Electronic Locking Differential (ELD).....	308-07-2
Four-Wheel Drive Systems — 2.5L Duratec-HE (122kW/165PS) - M14, Vehicles Without: Electronic Locking Differential (ELD).....	308-07-4
Four-Wheel Drive Systems — 2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma/3.2L Duratorq-TDCi (148kW/200PS) - Puma, Vehicles With: Electronic Locking Differential (ELD).....	308-07-6
Four-Wheel Drive Systems — 2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma/3.2L Duratorq-TDCi (148kW/200PS) - Puma, Vehicles Without: Electronic Locking Differential (ELD).....	308-07-8
ELECTRICAL CONNECTORS	
Mode Select Switch (MSS).....	308-07-10
Transfer Case Shift Motor.....	308-07-10

308-07-2 Four-Wheel Drive Systems—2.5L Duratec-HE (122kW/165PS) - M14, Vehicles With: Electronic Locking Differential (ELD)

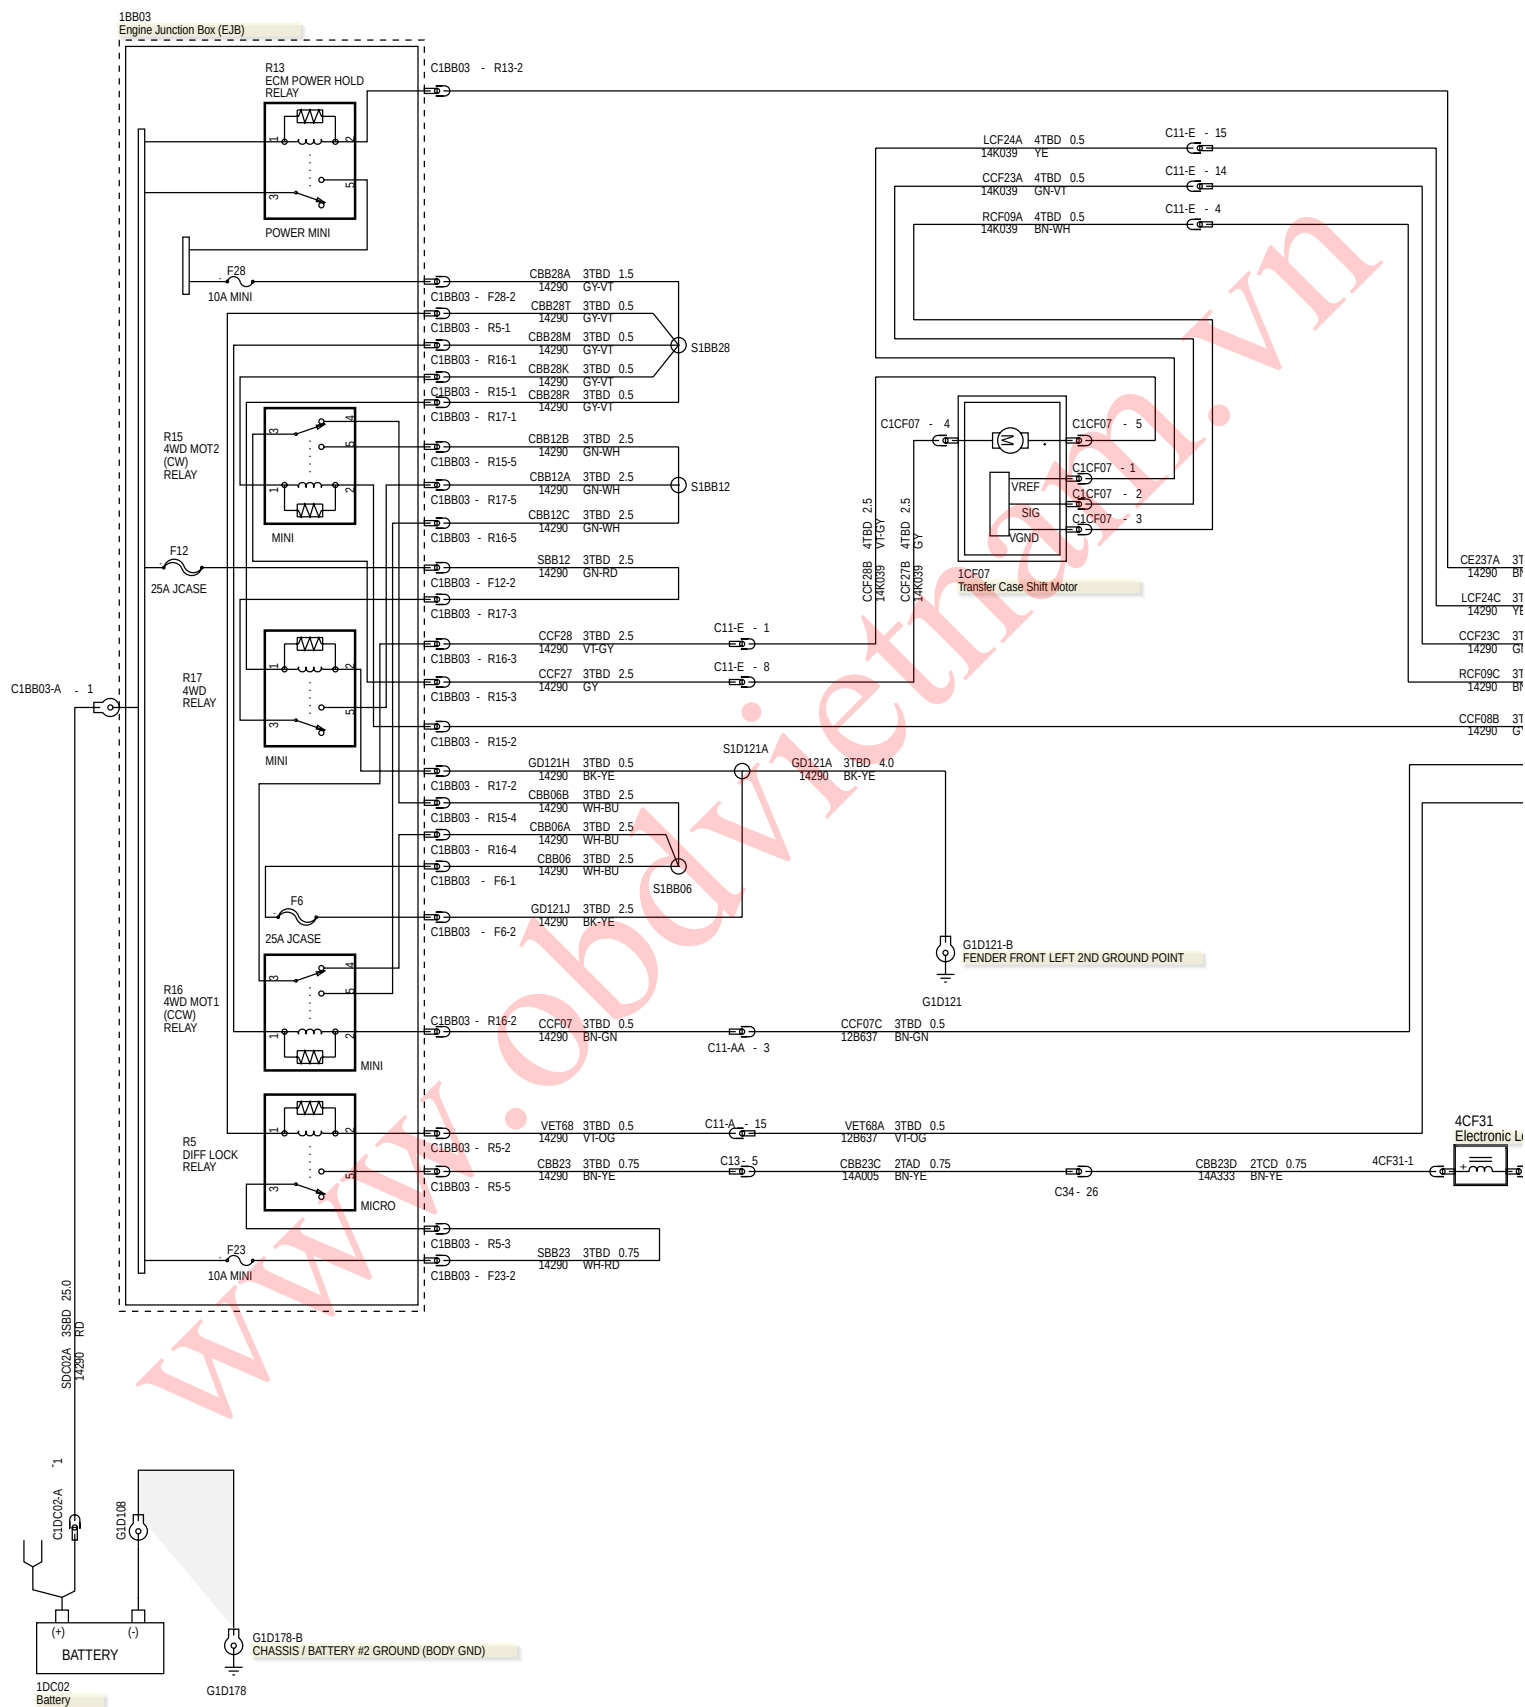





308-07-4 Four-Wheel Drive Systems—2.5L Duratec-HE (122kW/165PS) - MI4, Vehicles Without: Electronic Locking Differential (ELD)

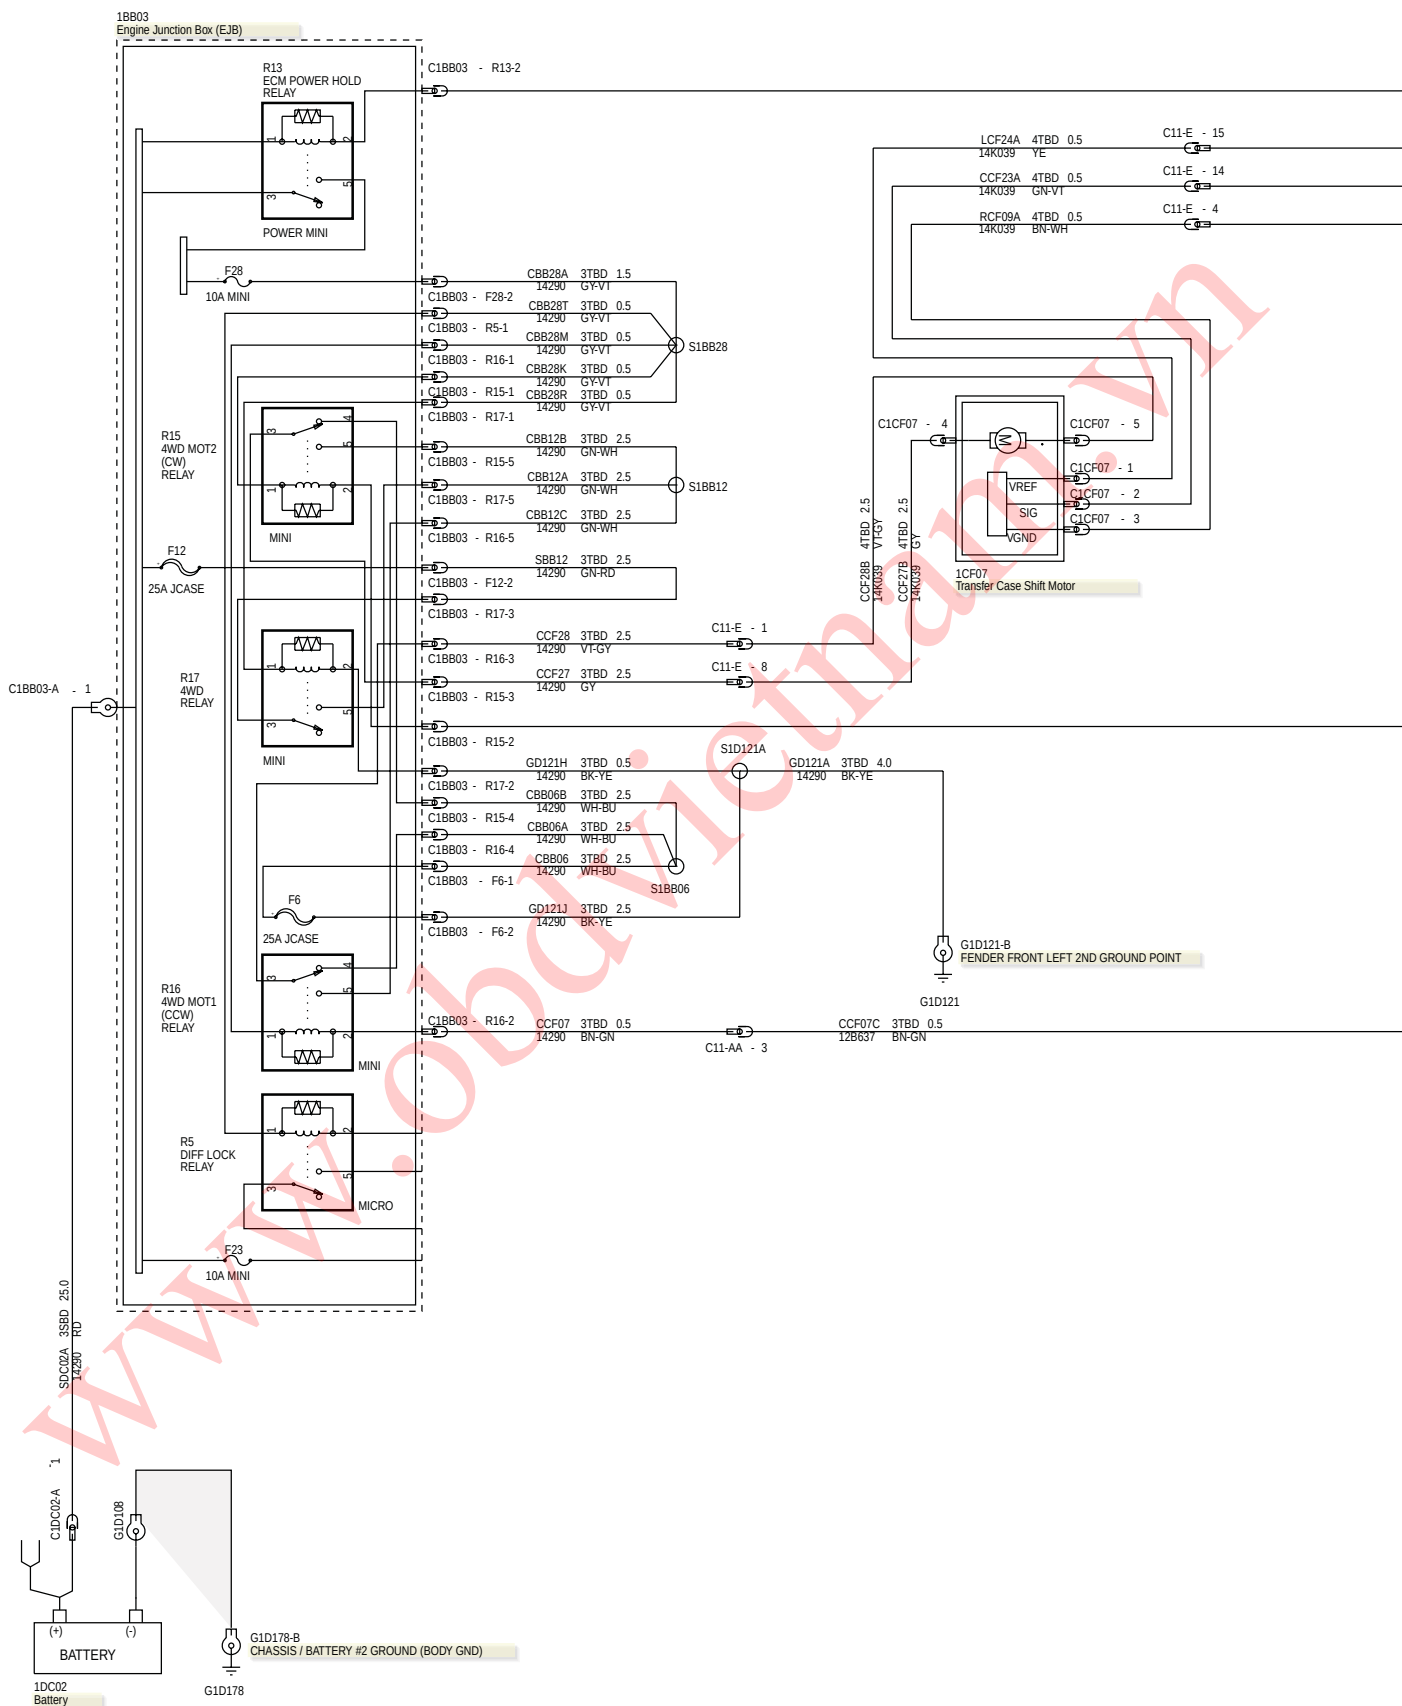

308-07-5 Four-Wheel Drive Systems—2.5L Duratec-HE (122kW/165PS) - M14, Vehicles Without: Electronic Locking Differential (ELD)

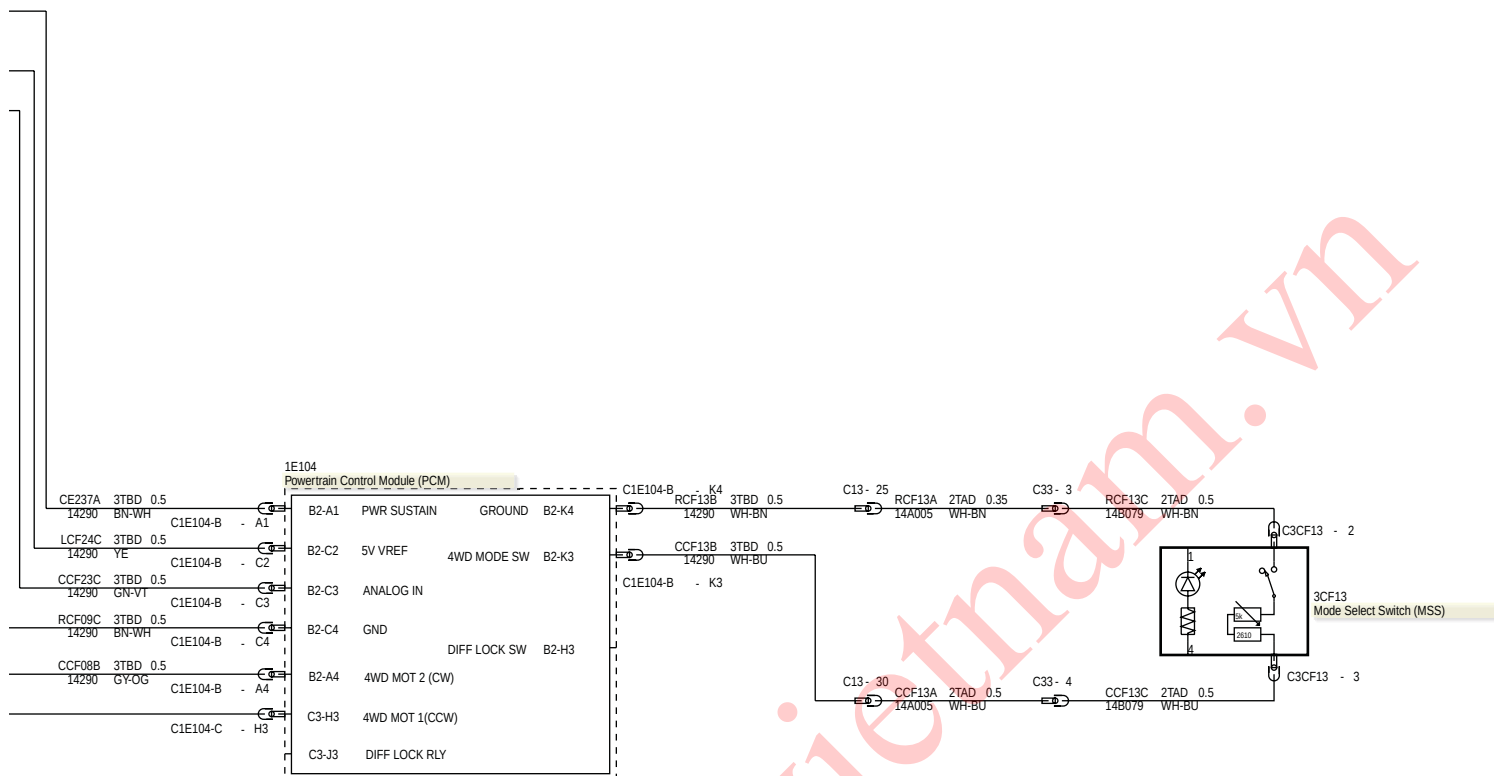


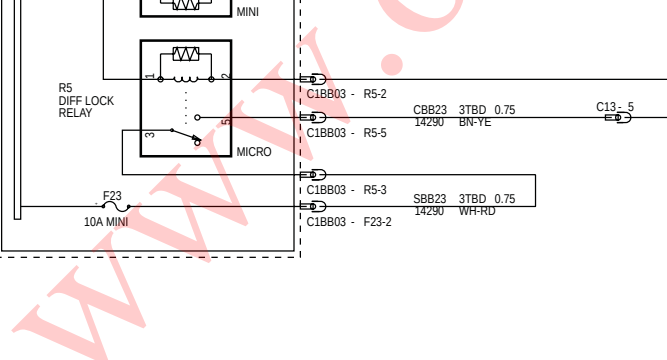


Tổng đài hỗ trợ: 02871.088.881



308-07-8 Four-Wheel Drive Systems—2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma/3.2L Duratorq-TDCi (148kW/200PS) - Puma, Vehicles Without: Electronic Locking Differential (ELD)

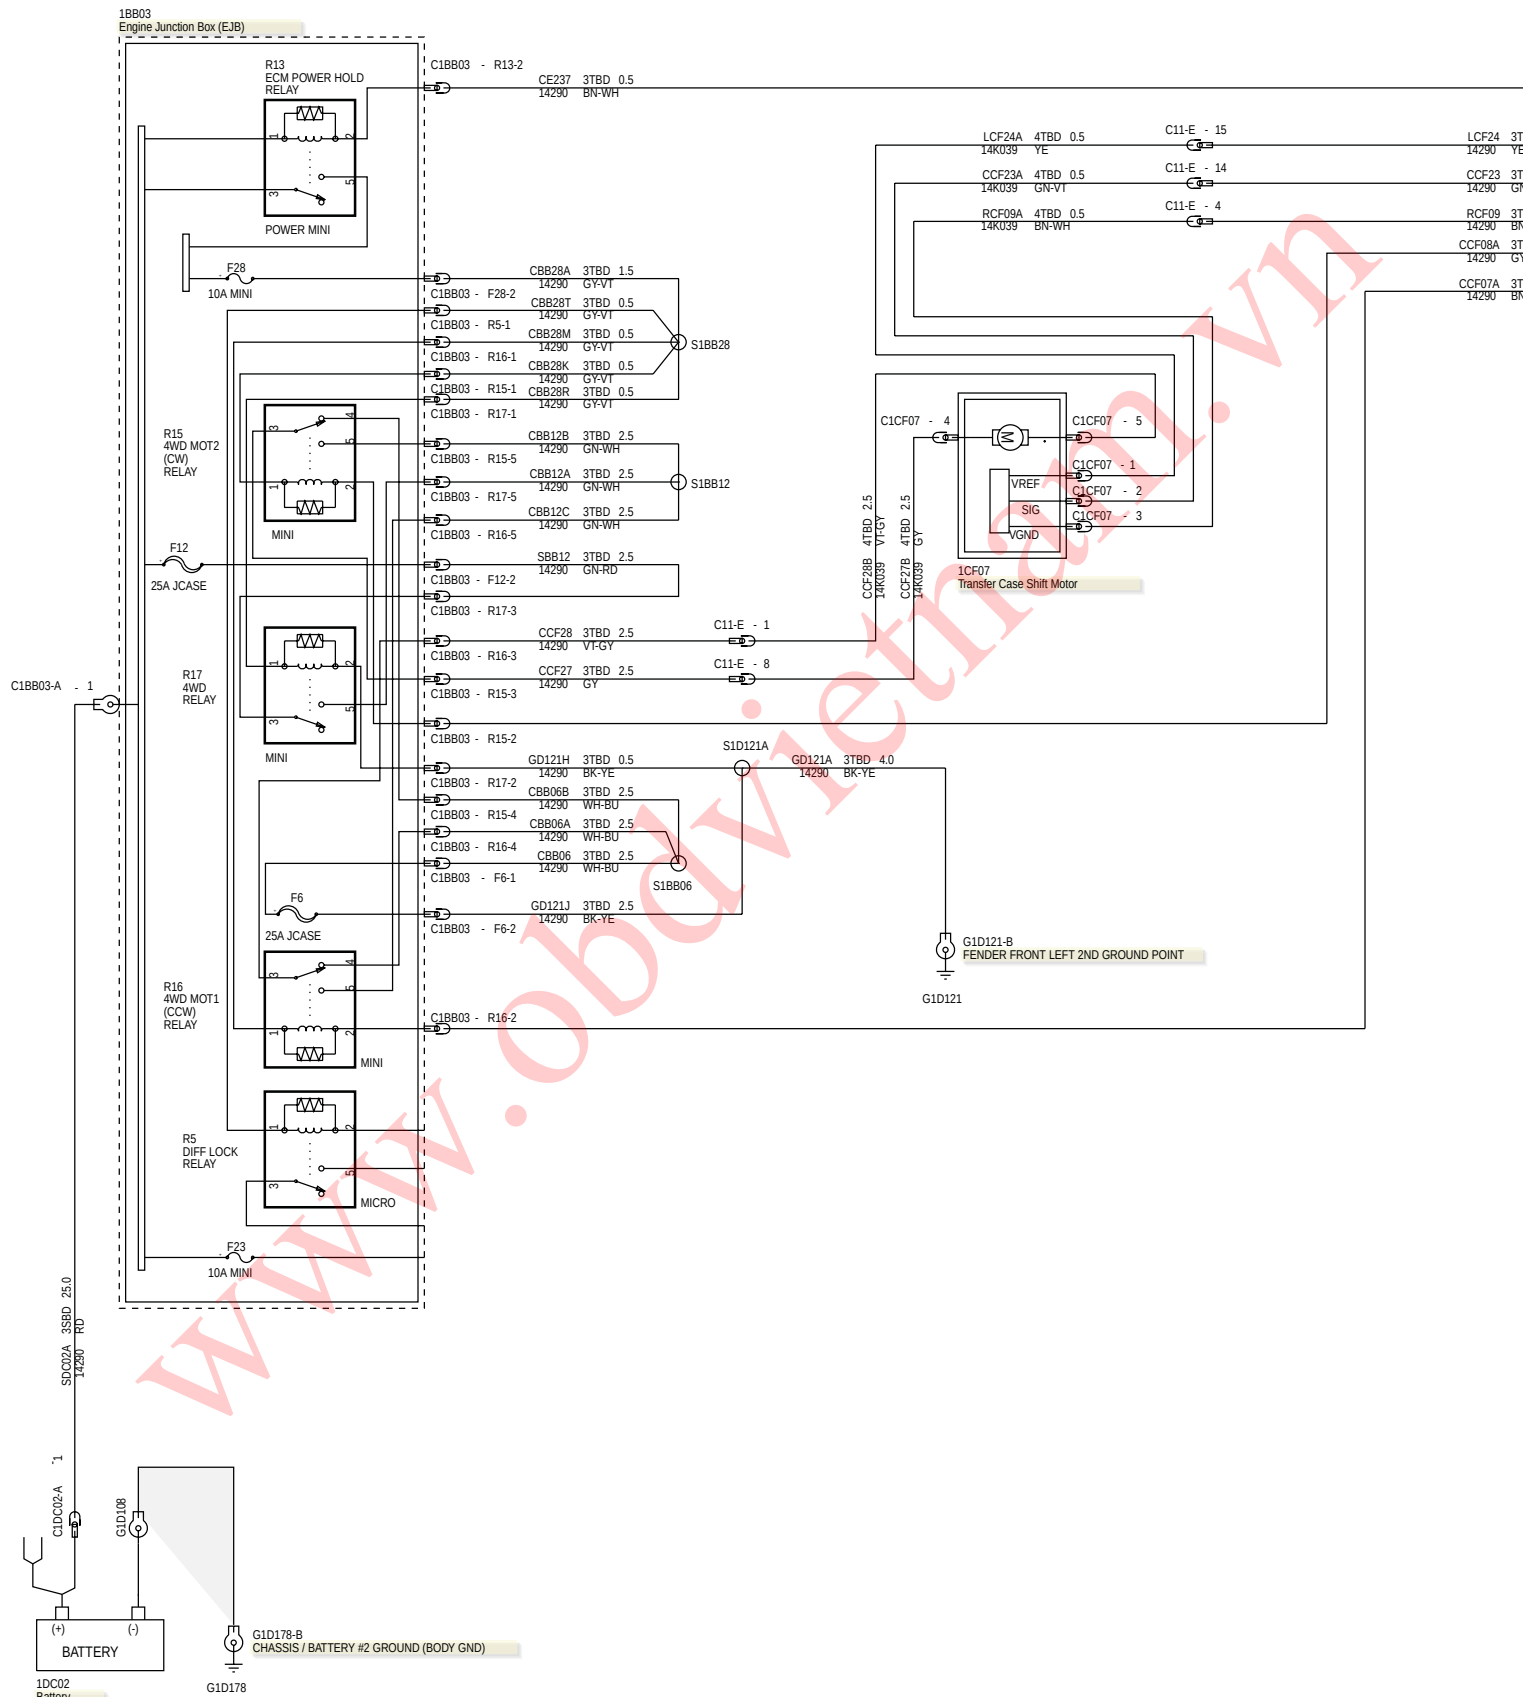


308-07-9 Four-Wheel Drive Systems—2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2 Duratorq - TDCi (110kW/150PS) - Puma/3.2L Duratorq-TDCi (148kW/200PS) - Puma, Vehicles Without: Electronic Locking Differential (ELD)

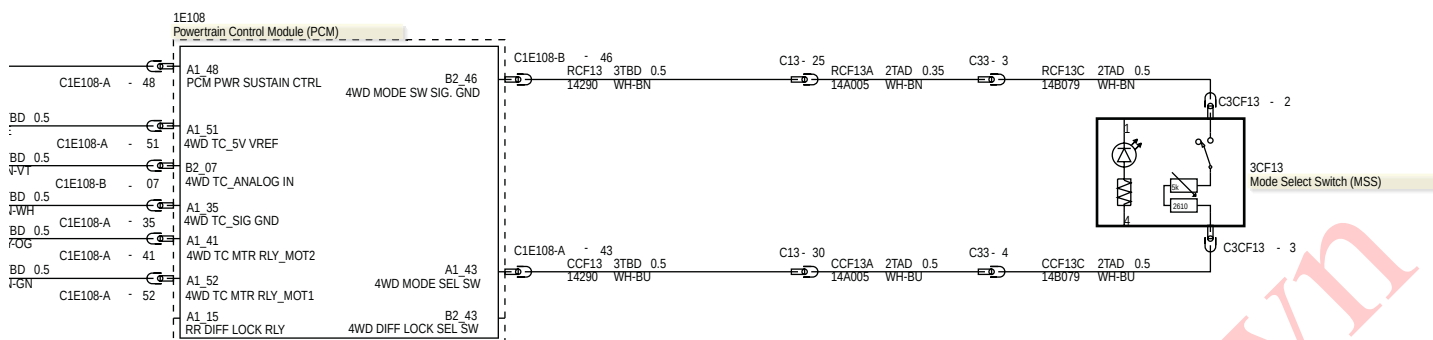

308-07-10

Mode Select Switch (MSS) (G1405439)



- 1 GD343AD BK-VT 2TAD 0.5
- 2 RCF13C WH-BN 2TAD 0.5
- 3 CCF13C WH-BU 2TAD 0.5
- 4 CLN17S BN 2TAD 0.5


1L2T-14489-GC

C3CF13

TO 4WD MODE SWITCH

HARNESS 14B079

Transfer Case Shift Motor (G1405440)

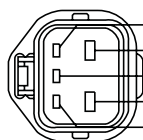

- 1 LCF24A YE 4TBD 0.5
- 4 CCF27B GY 4TBD 2.5
- 2 CCF23A GN-VT 4TBD 0.5
- 5 CCF28B VT-GY 4TBD 2.5
- 3 RCF09A BN-WH 4TBD 0.5

4W7T-14A464-AA

C1CF07

TO 4WD TRANSFER CASE

HARNESS 14K039

SECTION 309-00 Exhaust System — 2.2L Duratorq-TDCi (Puma) Diesel/3.2L

Duratorq-TDCi (Puma) Diesel

VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS


PAGE

ELECTRICAL CONNECTORS

Fuel Vaporizer System Glow Plug.....	309-00-2
Fuel Vaporizer System Fuel Pump.....	309-00-2

309-00-2

Fuel Vaporizer System Glow Plug (G1404284)

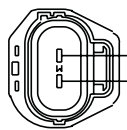

2	CBB15K	BN-BU	4TBD	0.75
1	GD123B	BK-GY	4TBD	0.75


97BG-14A464-VBB

C1E156

TO FLYLEAD VAPOURISER GLOW PLUG

HARNESS 14K039

Fuel Vaporizer System Fuel Pump (G1404285)



1	CBB40	YE-GN	4TBD	0.75
2	CE523A	BN-GN	4TBD	0.75

AU5T-14A464-PA

C1E523

TO VAPOURISER PUMP

HARNESS 14K039

SECTION 310-00A Fuel System - General Information

— 2.5L Duratec-HE (122kW/165PS) - MI4


VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS



PAGE

ELECTRICAL SCHEMATICS

Fuel Supply..... 310-00A-2

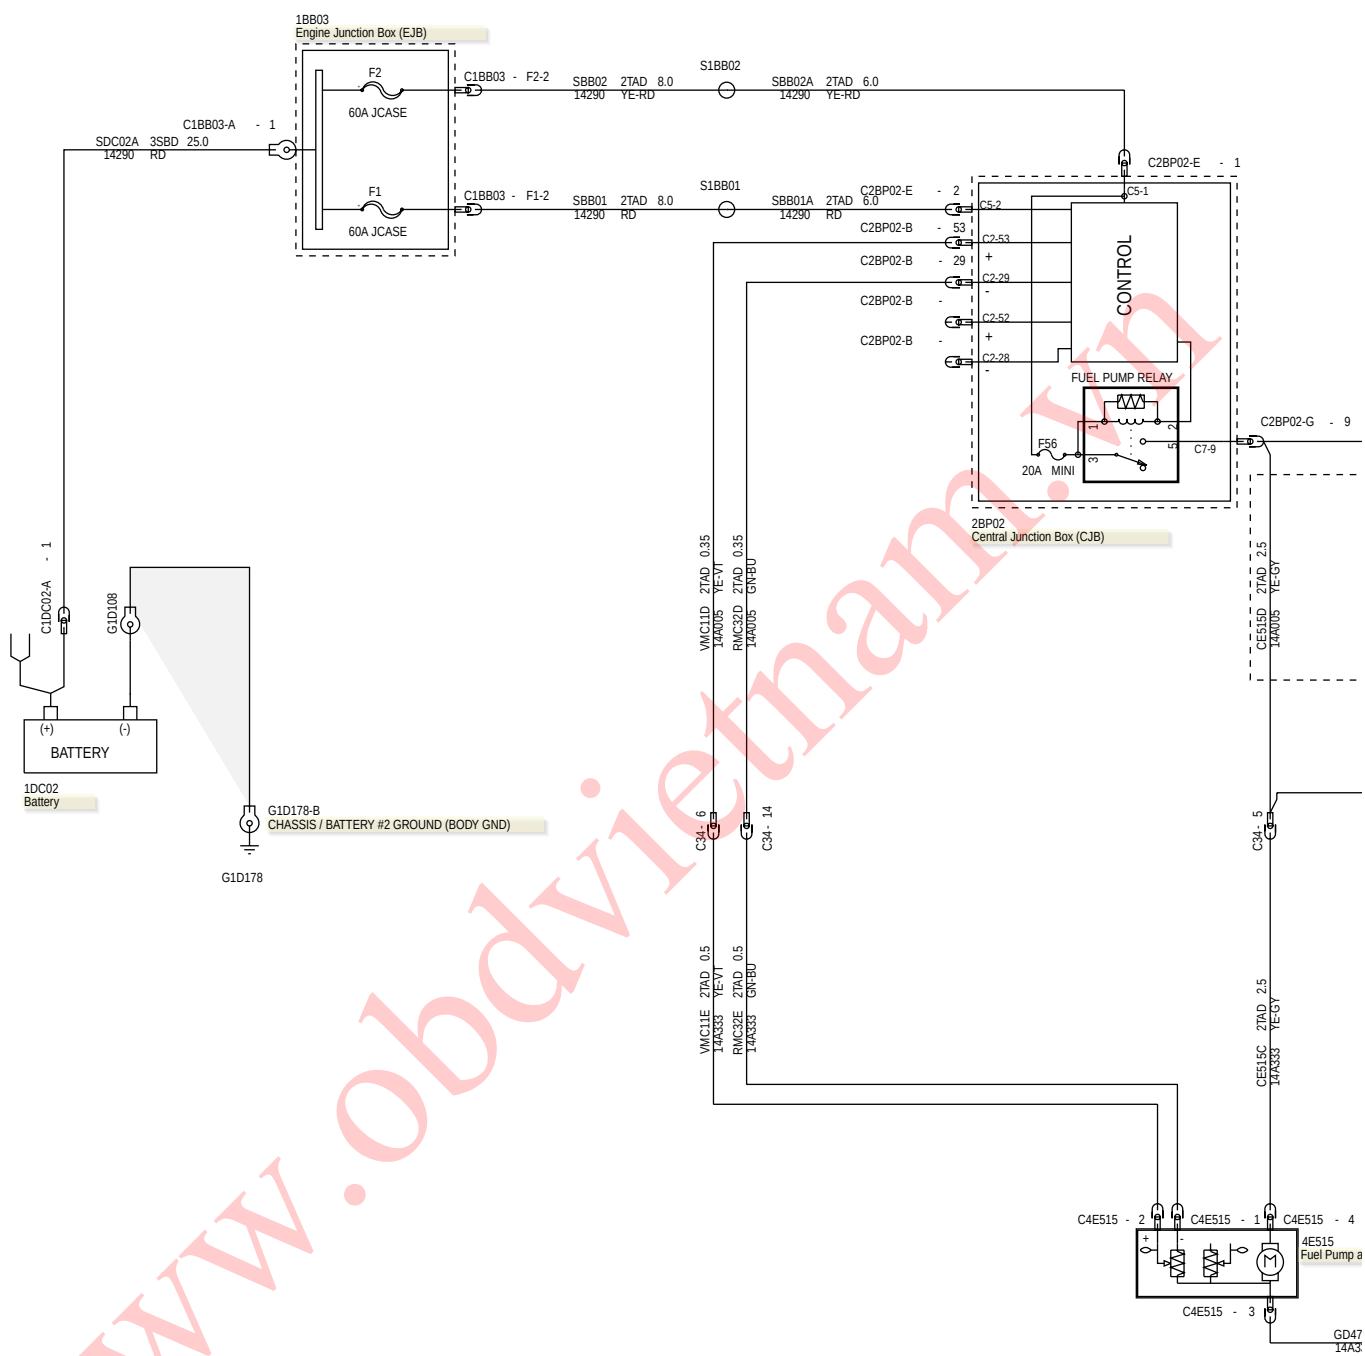

310-00A-3 Fuel Supply

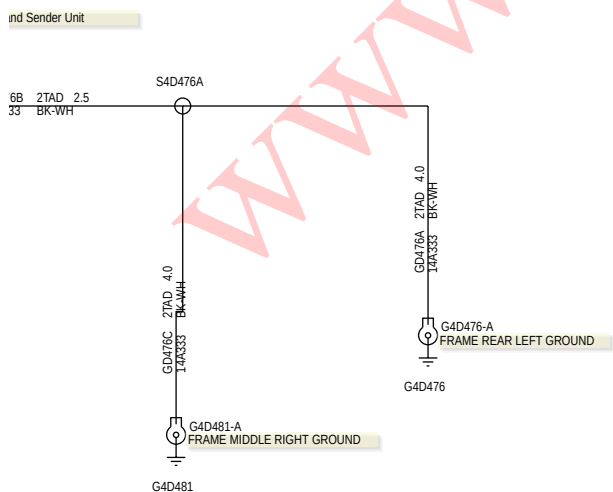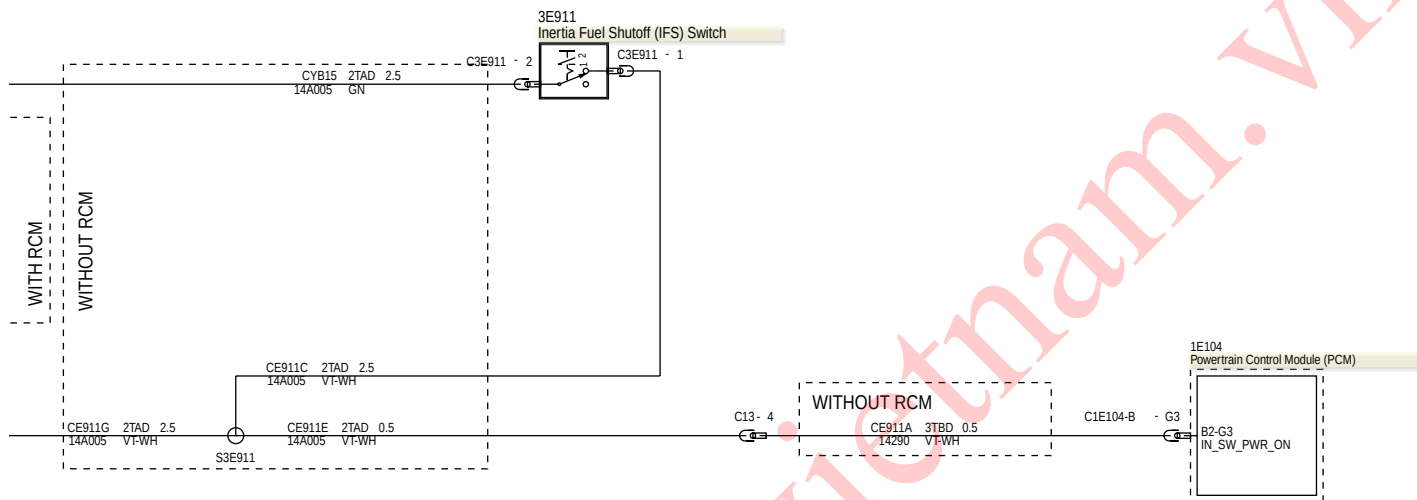

SECTION 310-00B Fuel System - General Information

— 2.2L Duratorq-TDCi (Puma) Diesel/3.2L Duratorq-TDCi (Puma) Diesel


VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS


PAGE

ELECTRICAL SCHEMATICS

Fuel Supply..... 310-00B-2

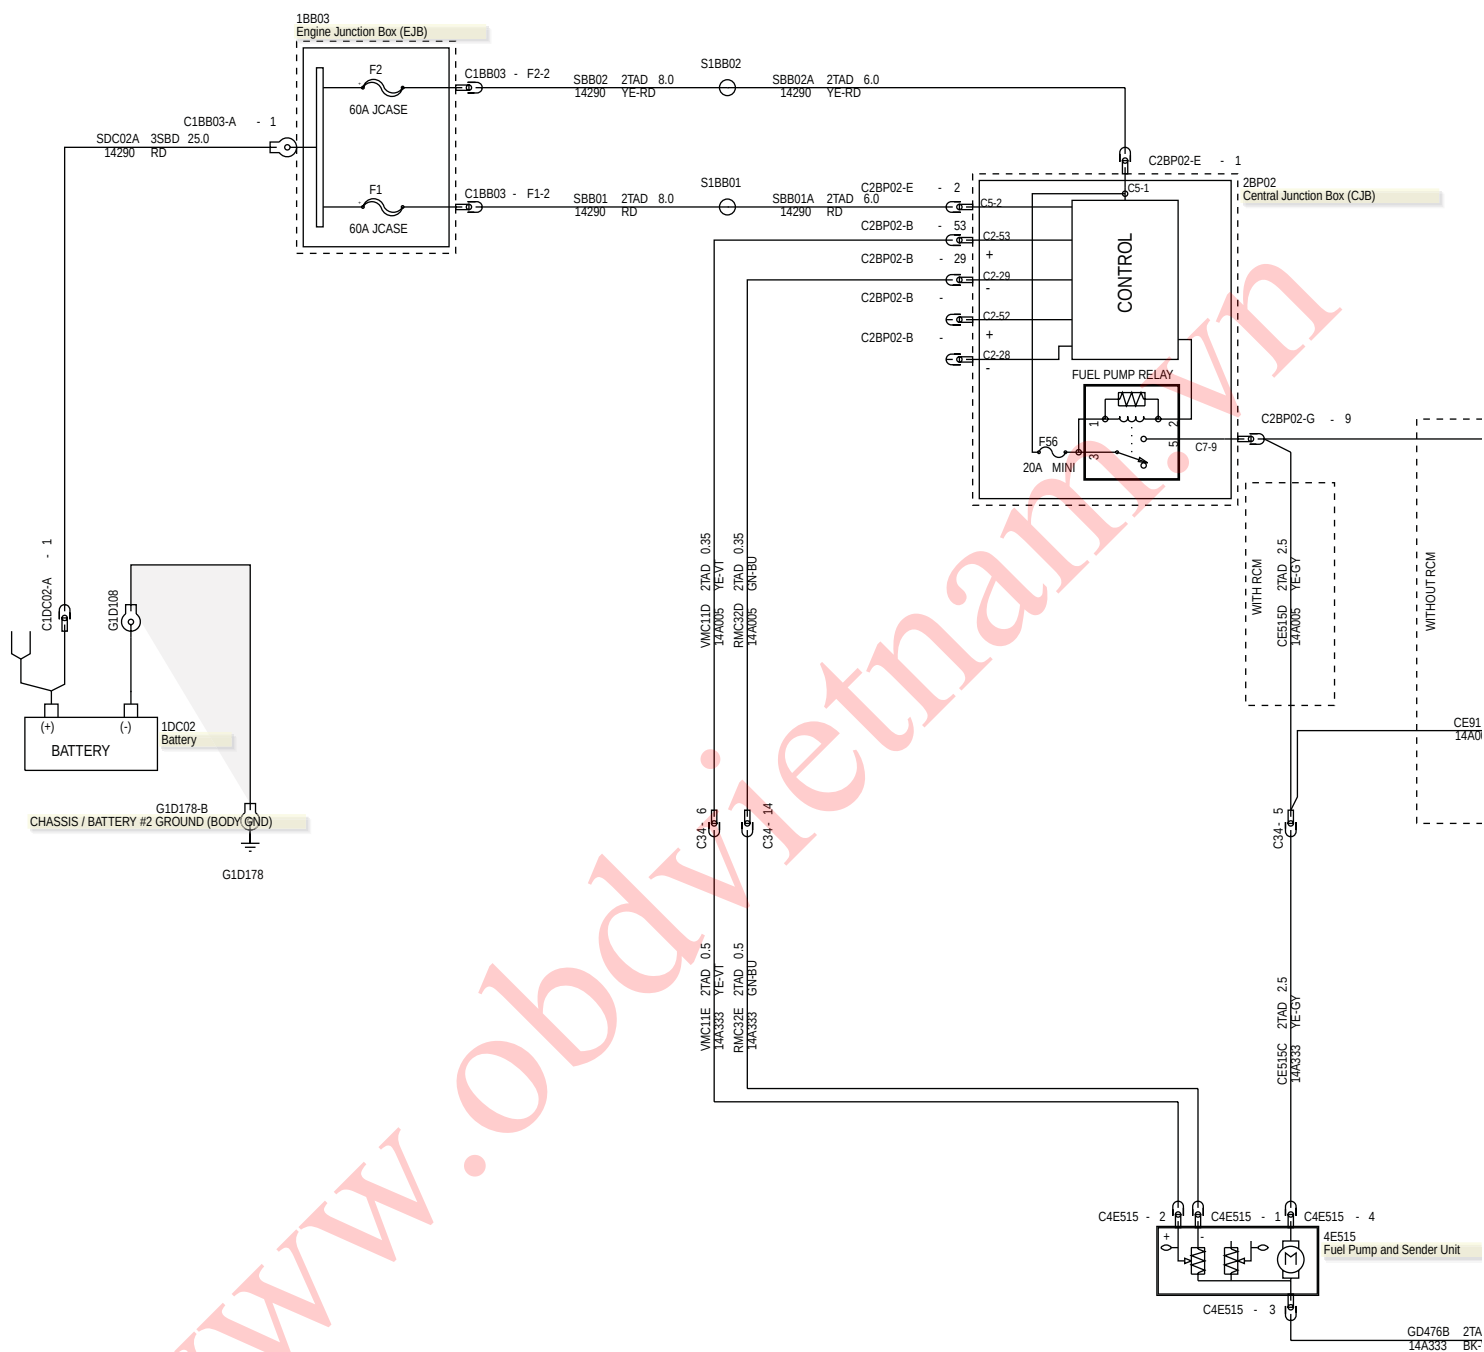

310-00B-3 Fuel Supply

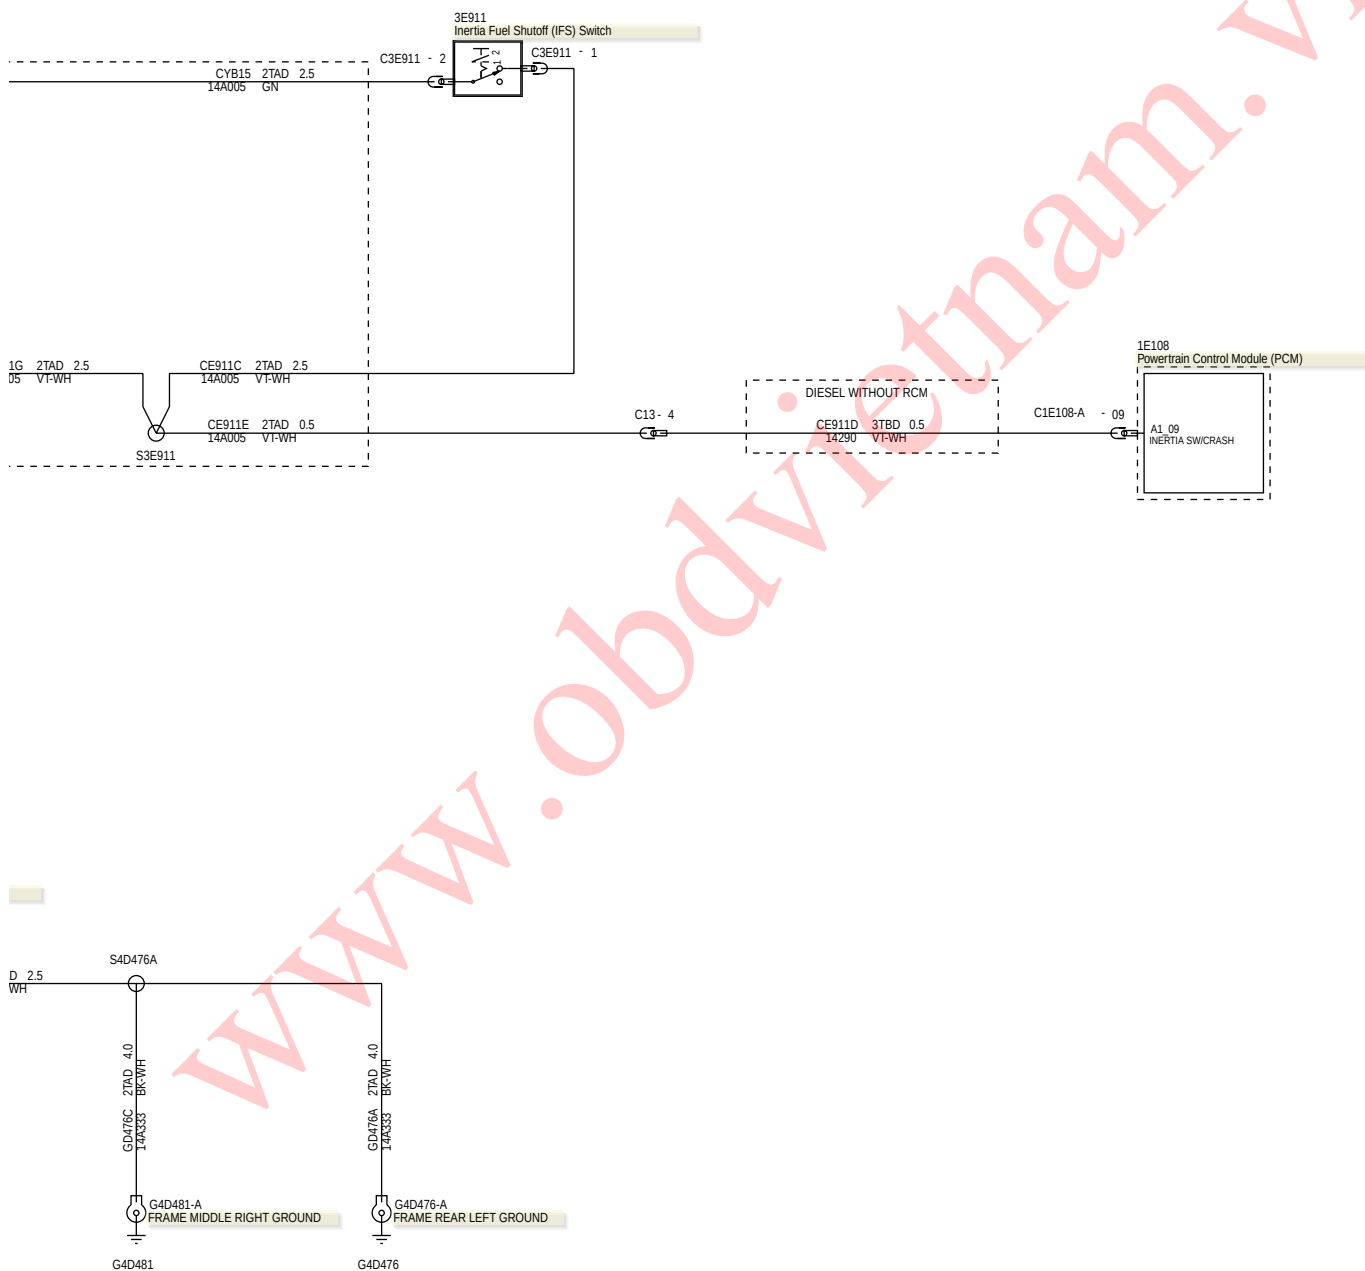

SECTION 310-01A Fuel Tank and Lines

VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS


PAGE

ELECTRICAL CONNECTORS

Fuel Pump and Sender Unit.....	310-01A-2
Fuel Level Sensor — A.....	310-01A-2
Inertia Fuel Shutoff (IFS) Switch.....	310-01A-2

310-01A-2

Fuel Pump and Sender Unit (G1404288)



1	RMC32E	GN-BU	2TAD	0.5	+	RMC32A	GN-BU	2TAD	0.5
2	VMC11E	YE-VT	2TAD	0.5	+	VMC11A	YE-VT	2TAD	0.5
3	GD476B	BK-WH	2TAD	2.5					
4	CE515A	YE-GY	2TAD	2.5	+	CE515C	YE-GY	2TAD	2.5
5									
6									


3M5T-14A464-DGB

C4E515

TO FUEL DELIVERY MODULE

HARNESS 14A333

Fuel Level Sensor—A (G1414537)

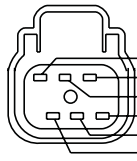

3	CE930A	WH-GN	3TBD	0.75
1	CBB15	BN-BU	3TBD	0.75
2	VE724	GY	3TBD	0.5
4	CBB22K	GN-OG	3TBD	0.75
5	VMC04AA	GY-BN	3TBD	0.5
6	GD121L	BK-YE	3TBD	0.75


YC1T-14A464-EA

C1E724-A

TO FLYLEAD FLEX FUEL

HARNESS 14290

Inertia Fuel Shutoff (IFS) Switch (G1405442)



3			
2	CYB15	GN	2TAD 2.5
1	CE911C	VT-WH	2TAD 2.5

E8AB-14489-AA

C3E911

TO FUEL CUTOFF SWITCH

HARNESS 14A005

SECTION 310-01B Fuel Tank and Lines — 2.2L Duratorq-TDCi (Puma)

Diesel/3.2L Duratorq-TDCi (Puma) Diesel

VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS


PAGE

ELECTRICAL CONNECTORS


Fuel Pump and Sender Unit.....	310-01B-2
Inertia Fuel Shutoff (IFS) Switch.....	310-01B-2
Water-in-Fuel Sensor.....	310-01B-2

310-01B-2


Fuel Pump and Sender Unit (G1404288)

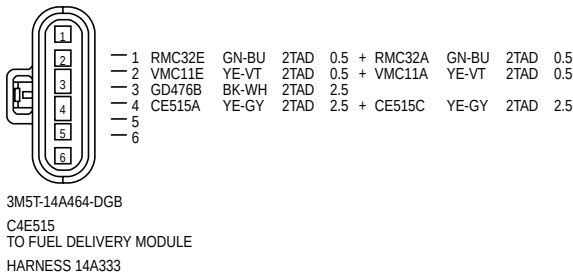

Inertia Fuel Shutoff (IFS) Switch (G1405442)

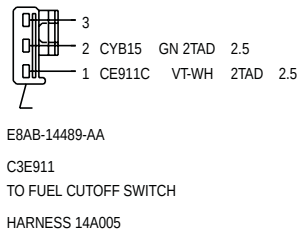

Water-in-Fuel Sensor (G1404289)

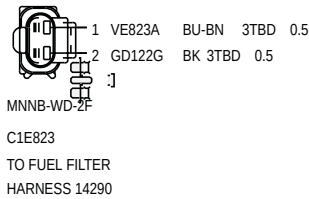

www.obdviethnam.vn



SECTION 310-03 Speed Control

VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS

PAGE


ELECTRICAL SCHEMATICS

Speed Control..... 310-03-2

www.obdviethnam.vn



310-03-2 Speed Control

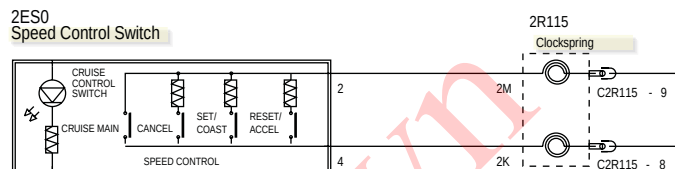

310-03-3 Speed Control



www.obdviethnam.vn



GROUP

4

Electrical

SECTION TITLE	PAGE
Climate Control System	
Climate Control.....	412-01
Instrumentation and Warning Systems	
Instrument Cluster.....	413-01
Horn.....	413-06
Information and Message Center.....	413-08
Warning Devices.....	413-09
Parking Aid.....	413-13
Tachograph.....	413-17
Battery and Charging System	
Battery, Mounting and Cables.....	414-01
Generator and Regulator.....	414-02
Information and Entertainment Systems	
Information and Entertainment System.....	415-01
Lighting	
Exterior Lighting.....	417-01
Interior Lighting.....	417-02
Daytime Running Lamps (DRL).....	417-04
Electrical Distribution	
Module Communications Network.....	418-00
Electronic Feature Group	
Anti-Theft - Active.....	419-01A
Anti-Theft - Passive.....	419-01B
Cruise Control.....	419-03
Multifunction Electronic Modules.....	419-10

SECTION 412-01 Climate Control

VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS

PAGE

PAGE 1 OF 2

ELECTRICAL SCHEMATICS

Climate Control — 2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma/3.2L Duratorq-TDCi (148kW/200PS) - Puma, LHD 4WD/LHD RWD, Vehicles With: Dual Automatic Temperature Control.....	412-01-3
Climate Control — 2.5L Duratec-HE (122kW/165PS) - MI4, LHD 4WD/LHD RWD, Vehicles With: Dual Automatic Temperature Control.....	412-01-5
Climate Control — 2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma/3.2L Duratorq-TDCi (148kW/200PS) - Puma, RHD 4WD/RHD RWD, Vehicles With: Dual Automatic Temperature Control.....	412-01-7
Climate Control — 2.5L Duratec-HE (122kW/165PS) - MI4, RHD 4WD/RHD RWD, Vehicles With: Dual Automatic Temperature Control.....	412-01-9
Climate Control — LHD 4WD/LHD RWD, Vehicles Without: Air Conditioning.....	412-01-11
Climate Control — RHD 4WD/RHD RWD, Vehicles Without: Air Conditioning.....	412-01-13
Climate Control — 2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma/3.2L Duratorq-TDCi (148kW/200PS) - Puma, LHD 4WD/LHD RWD, Vehicles With: Manual Temperature Control.....	412-01-15
Climate Control — 2.5L Duratec-HE (122kW/165PS) - MI4, LHD 4WD/LHD RWD, Vehicles With: Manual Temperature Control.....	412-01-17
Climate Control — 2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma/3.2L Duratorq-TDCi (148kW/200PS) - Puma, RHD 4WD/RHD RWD, Vehicles With: Manual Temperature Control.....	412-01-19
Climate Control — 2.5L Duratec-HE (122kW/165PS) - MI4, RHD 4WD/RHD RWD, Vehicles With: Manual Temperature Control.....	412-01-21

ELECTRICAL CONNECTORS


Air Conditioning (A/C) Dual Pressure Switch.....	412-01-23
Air Conditioning (A/C) Pressure Transducer.....	412-01-23
Ambient Air Temperature Sensor.....	412-01-23
Blower Motor.....	412-01-23
Blower Motor Control Module.....	412-01-24
Blower Motor Resistor.....	412-01-24
Climate Control Module.....	412-01-24
Climate Control Module — A.....	412-01-24
Climate Control Module — B.....	412-01-25
Clutch and Clutch Field Coil.....	412-01-25
Defrost Vent/Register/Footwell Blend Door Actuator.....	412-01-26
Defrost Vent/Register/Footwell Blend Door Actuator — A.....	412-01-26
Evaporator Temperature Sensor.....	412-01-26

PAGE 2 OF 2


Evaporator Temperature Sensor — A.....	412-01-26
Recirculation Blend Door Actuator.....	412-01-27
Recirculation Blend Door Actuator — A.....	412-01-27
Sunload Sensor.....	412-01-27
Temperature Blend Door Actuator.....	412-01-27
Temperature Blend Door Actuator LH.....	412-01-28
Temperature Blend Door Actuator RH.....	412-01-28

www.obdviethnam.vn


412-01-3 Climate Control—2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma/3.2L Duratorq-TDCi (148kW/200PS) - Puma, LHD 4WD/LHD RWD, Vehicles With: Dual Automatic Temperature Control

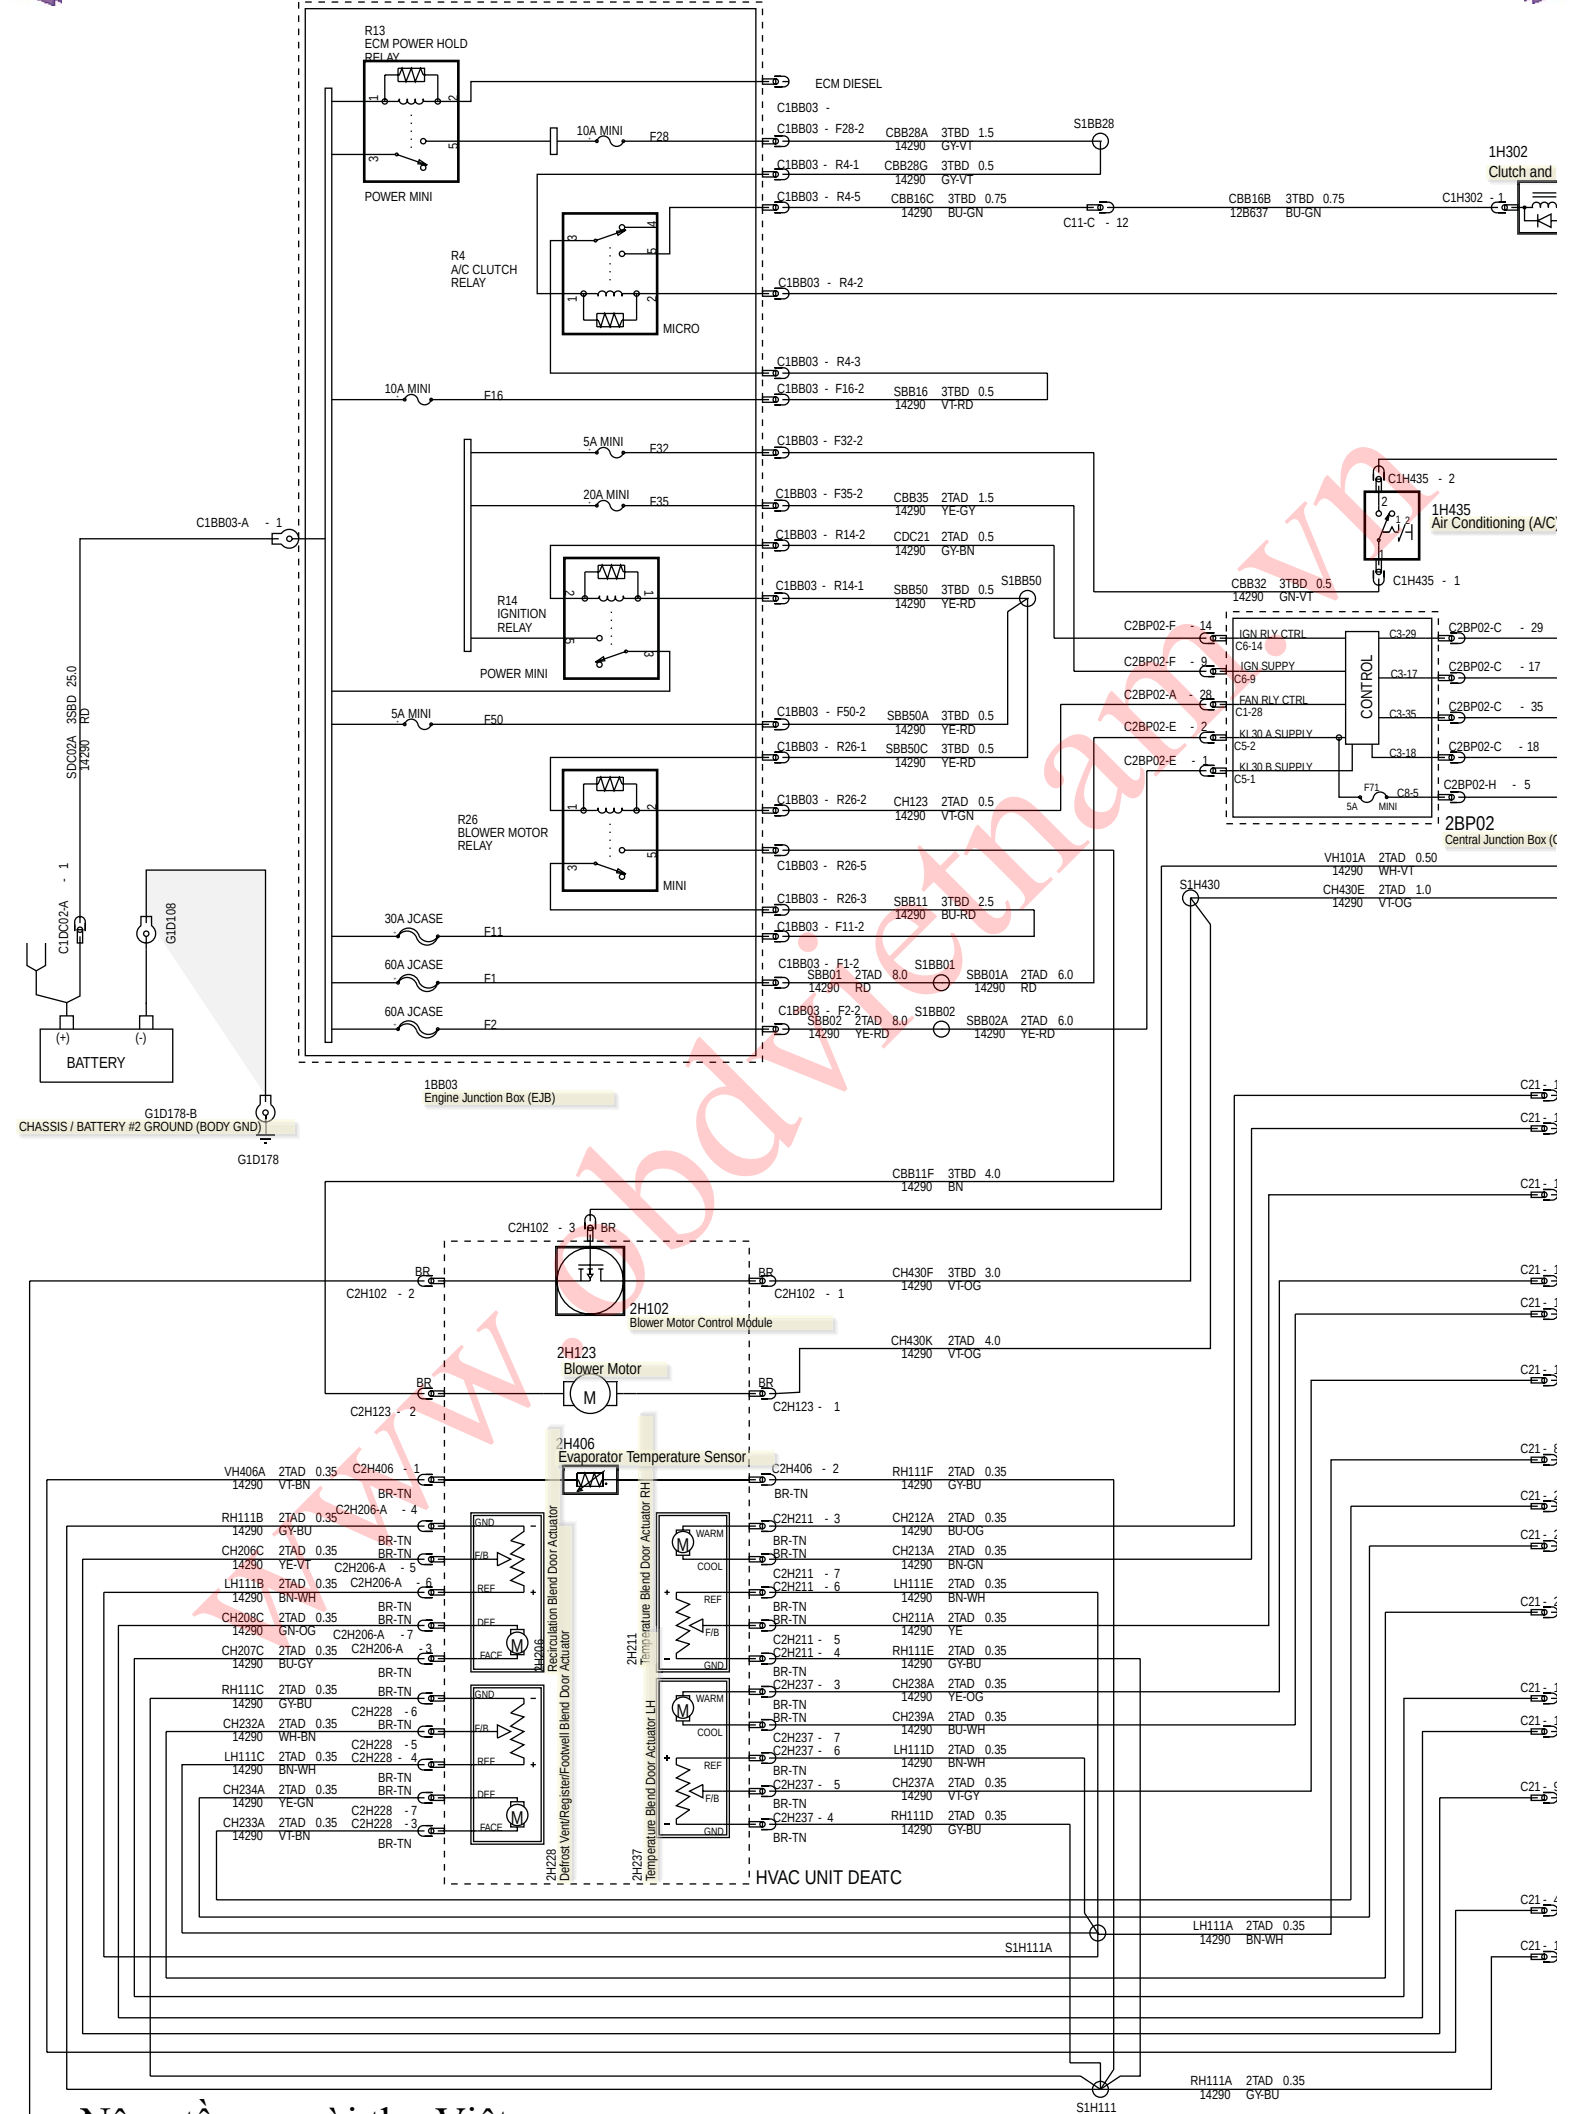





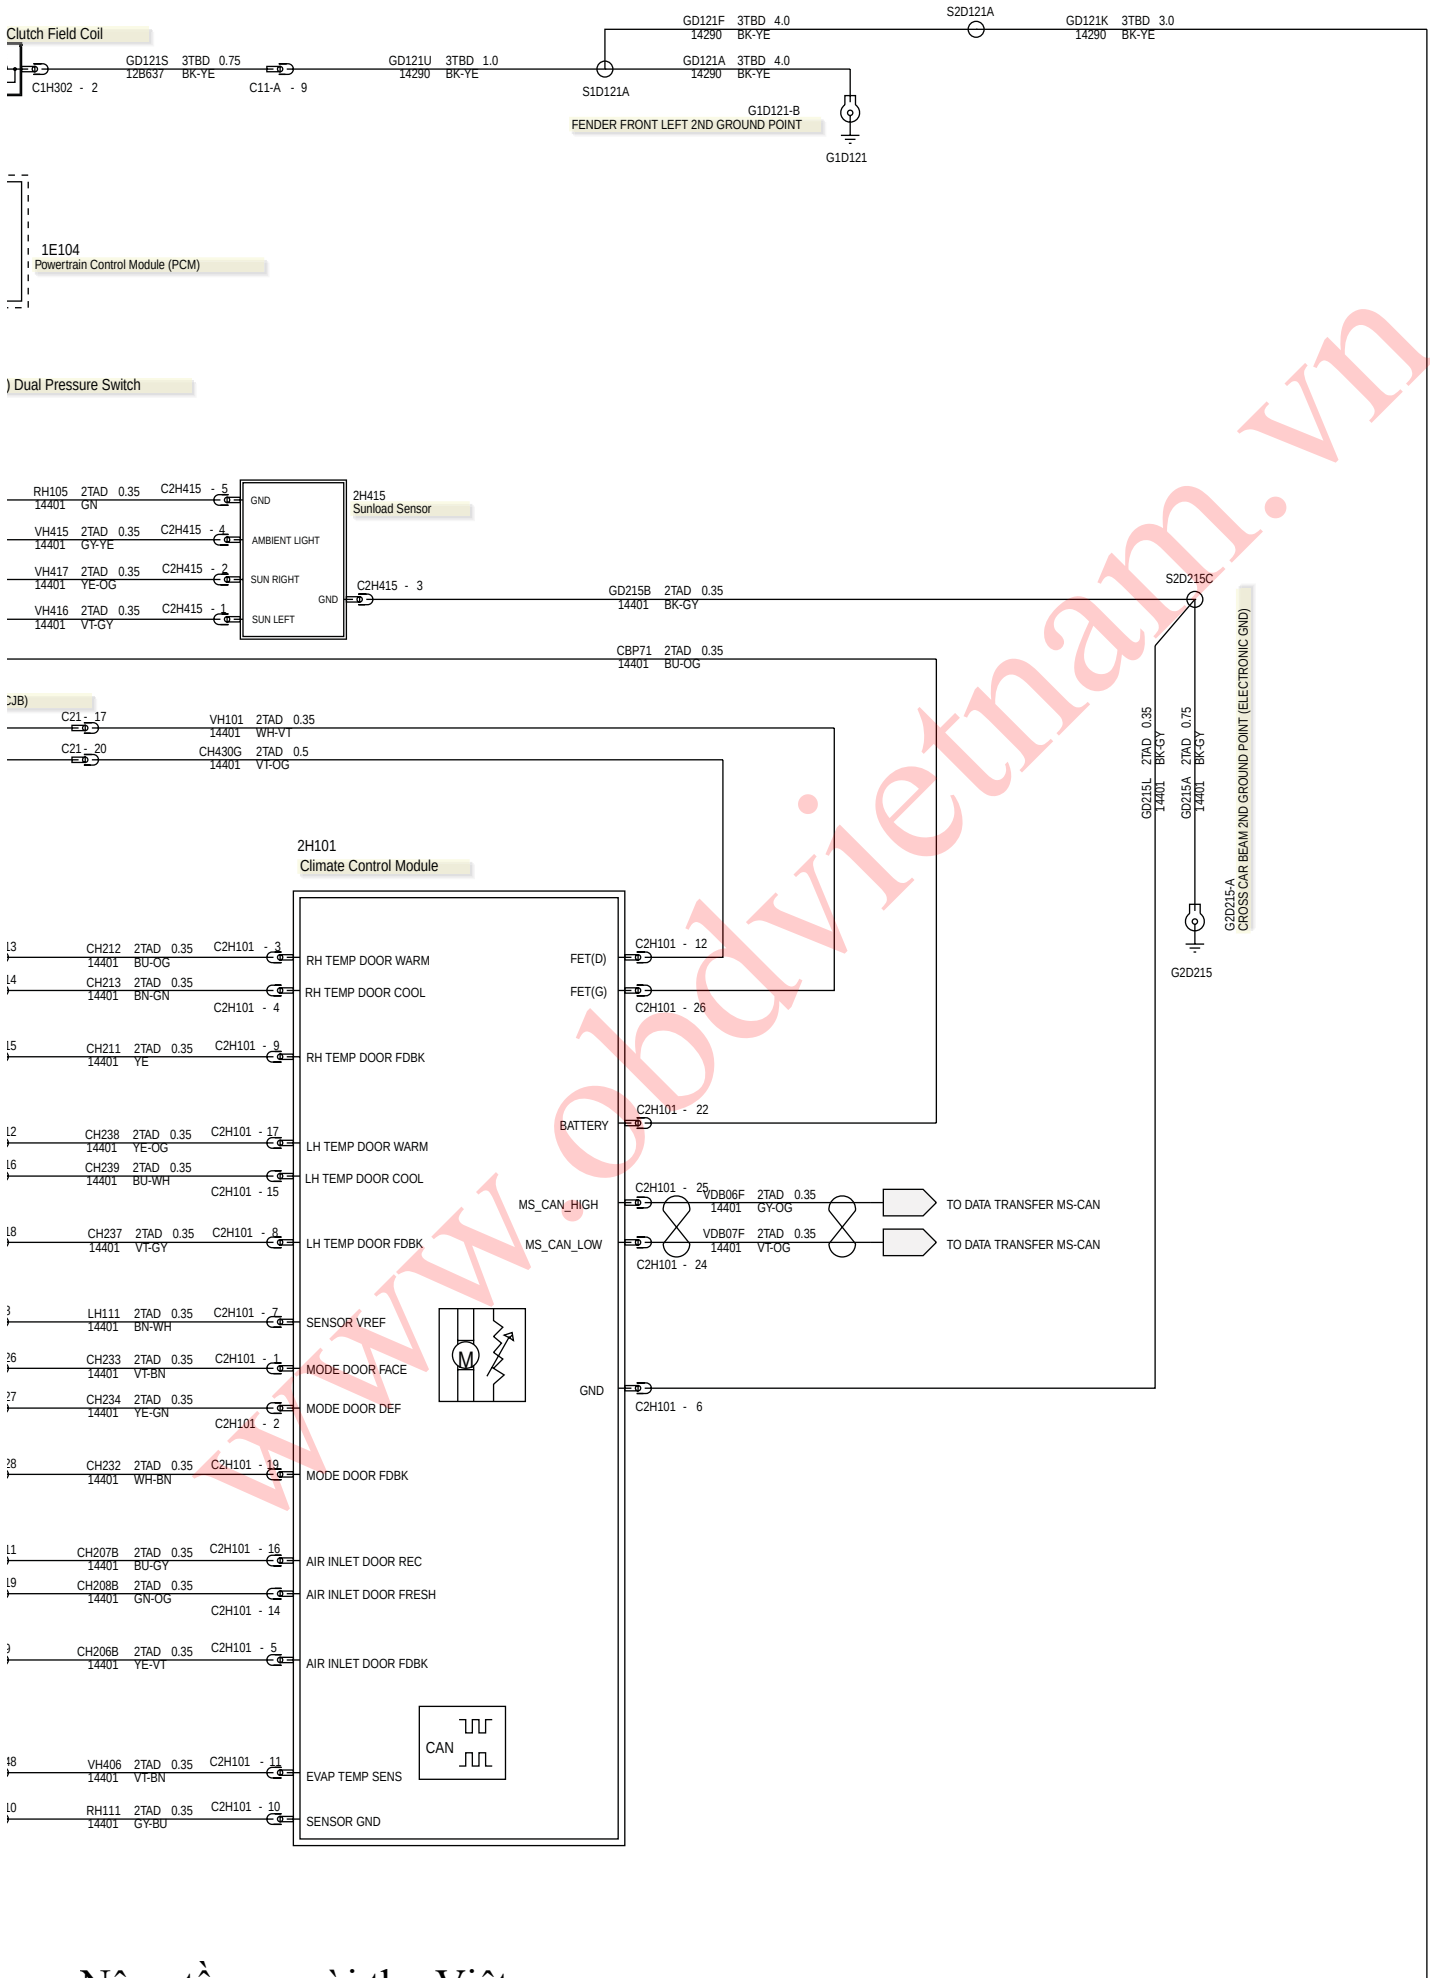



412-01-7 Climate Control—2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma/3.2L Duratorq-TDCi (148kW/200PS) - Puma, RHD 4WD/RHD RWD, Vehicles With: Dual Automatic Temperature Control

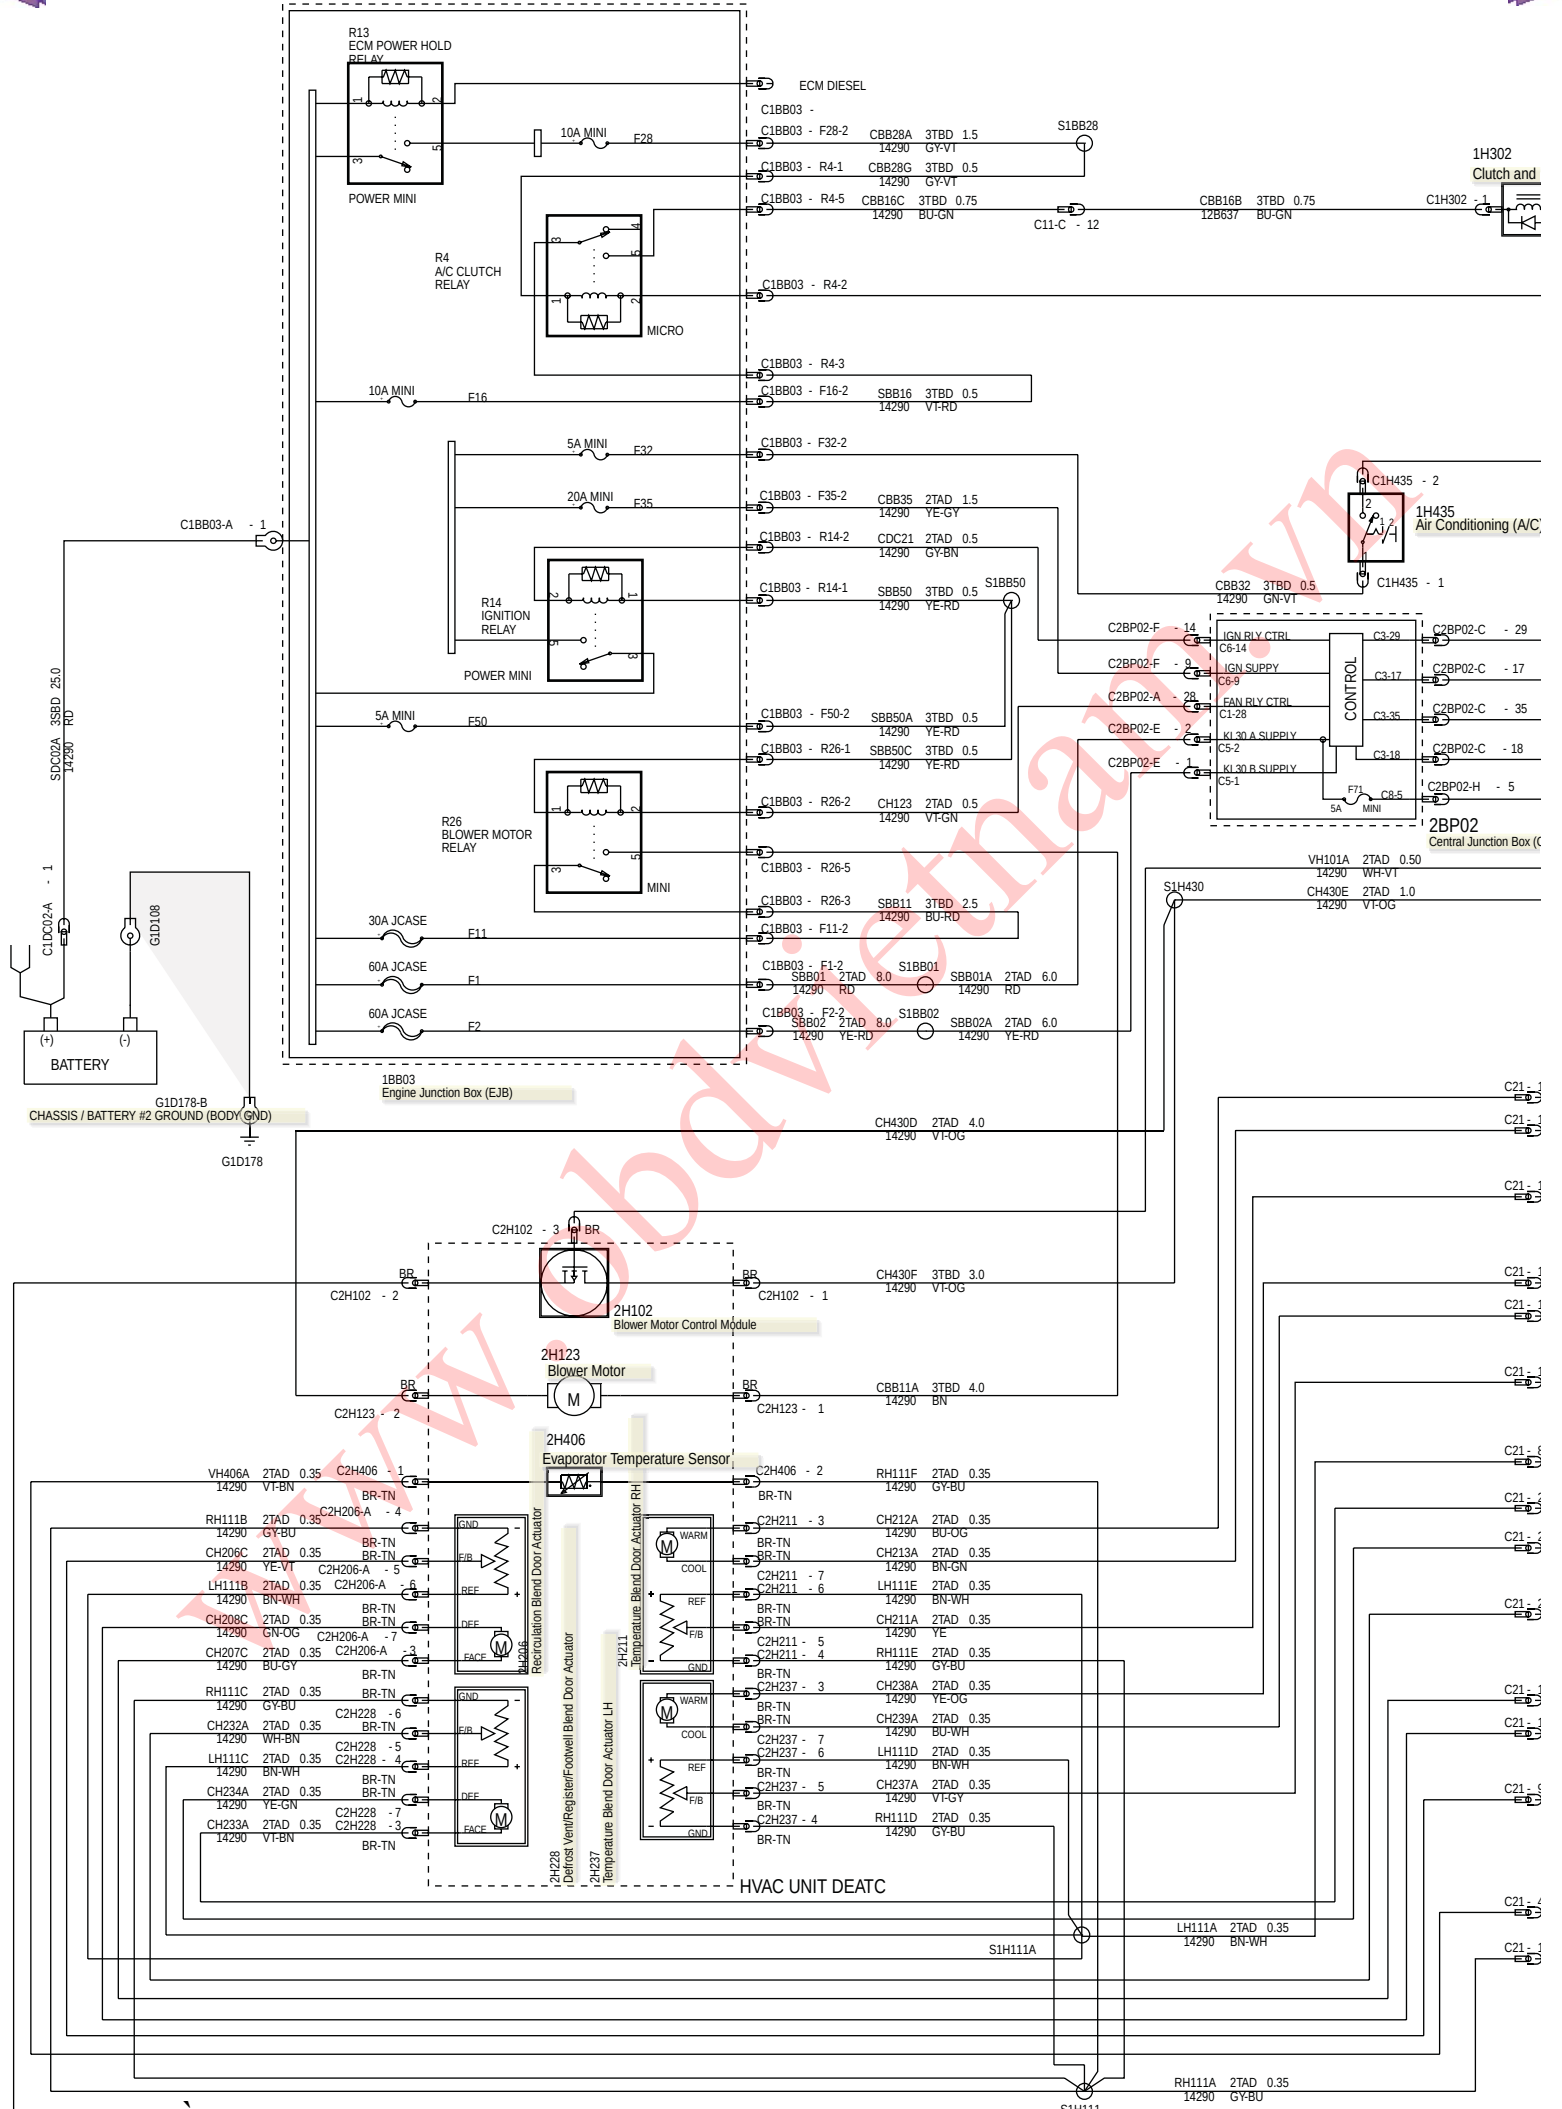


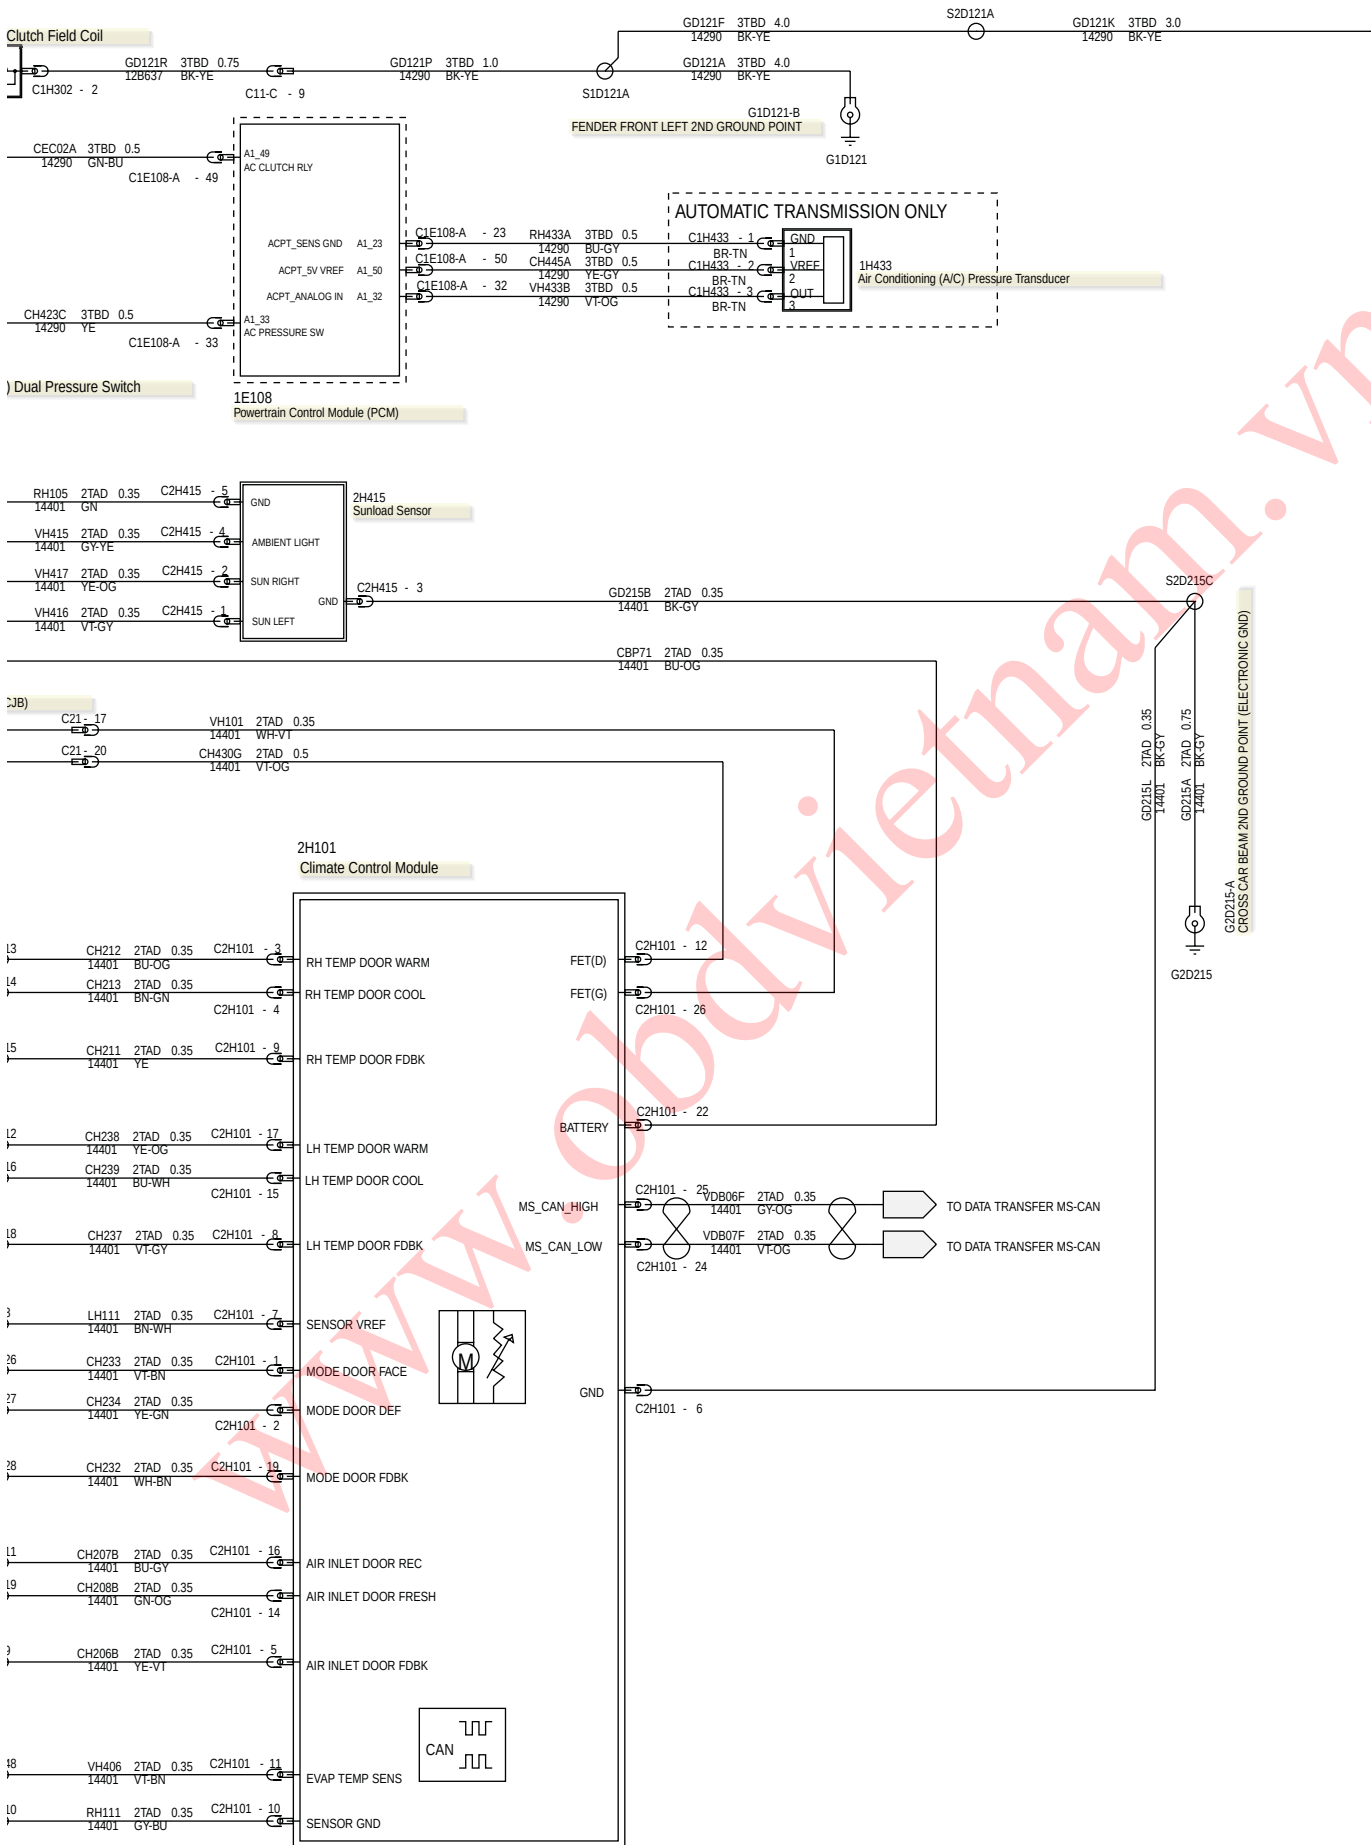


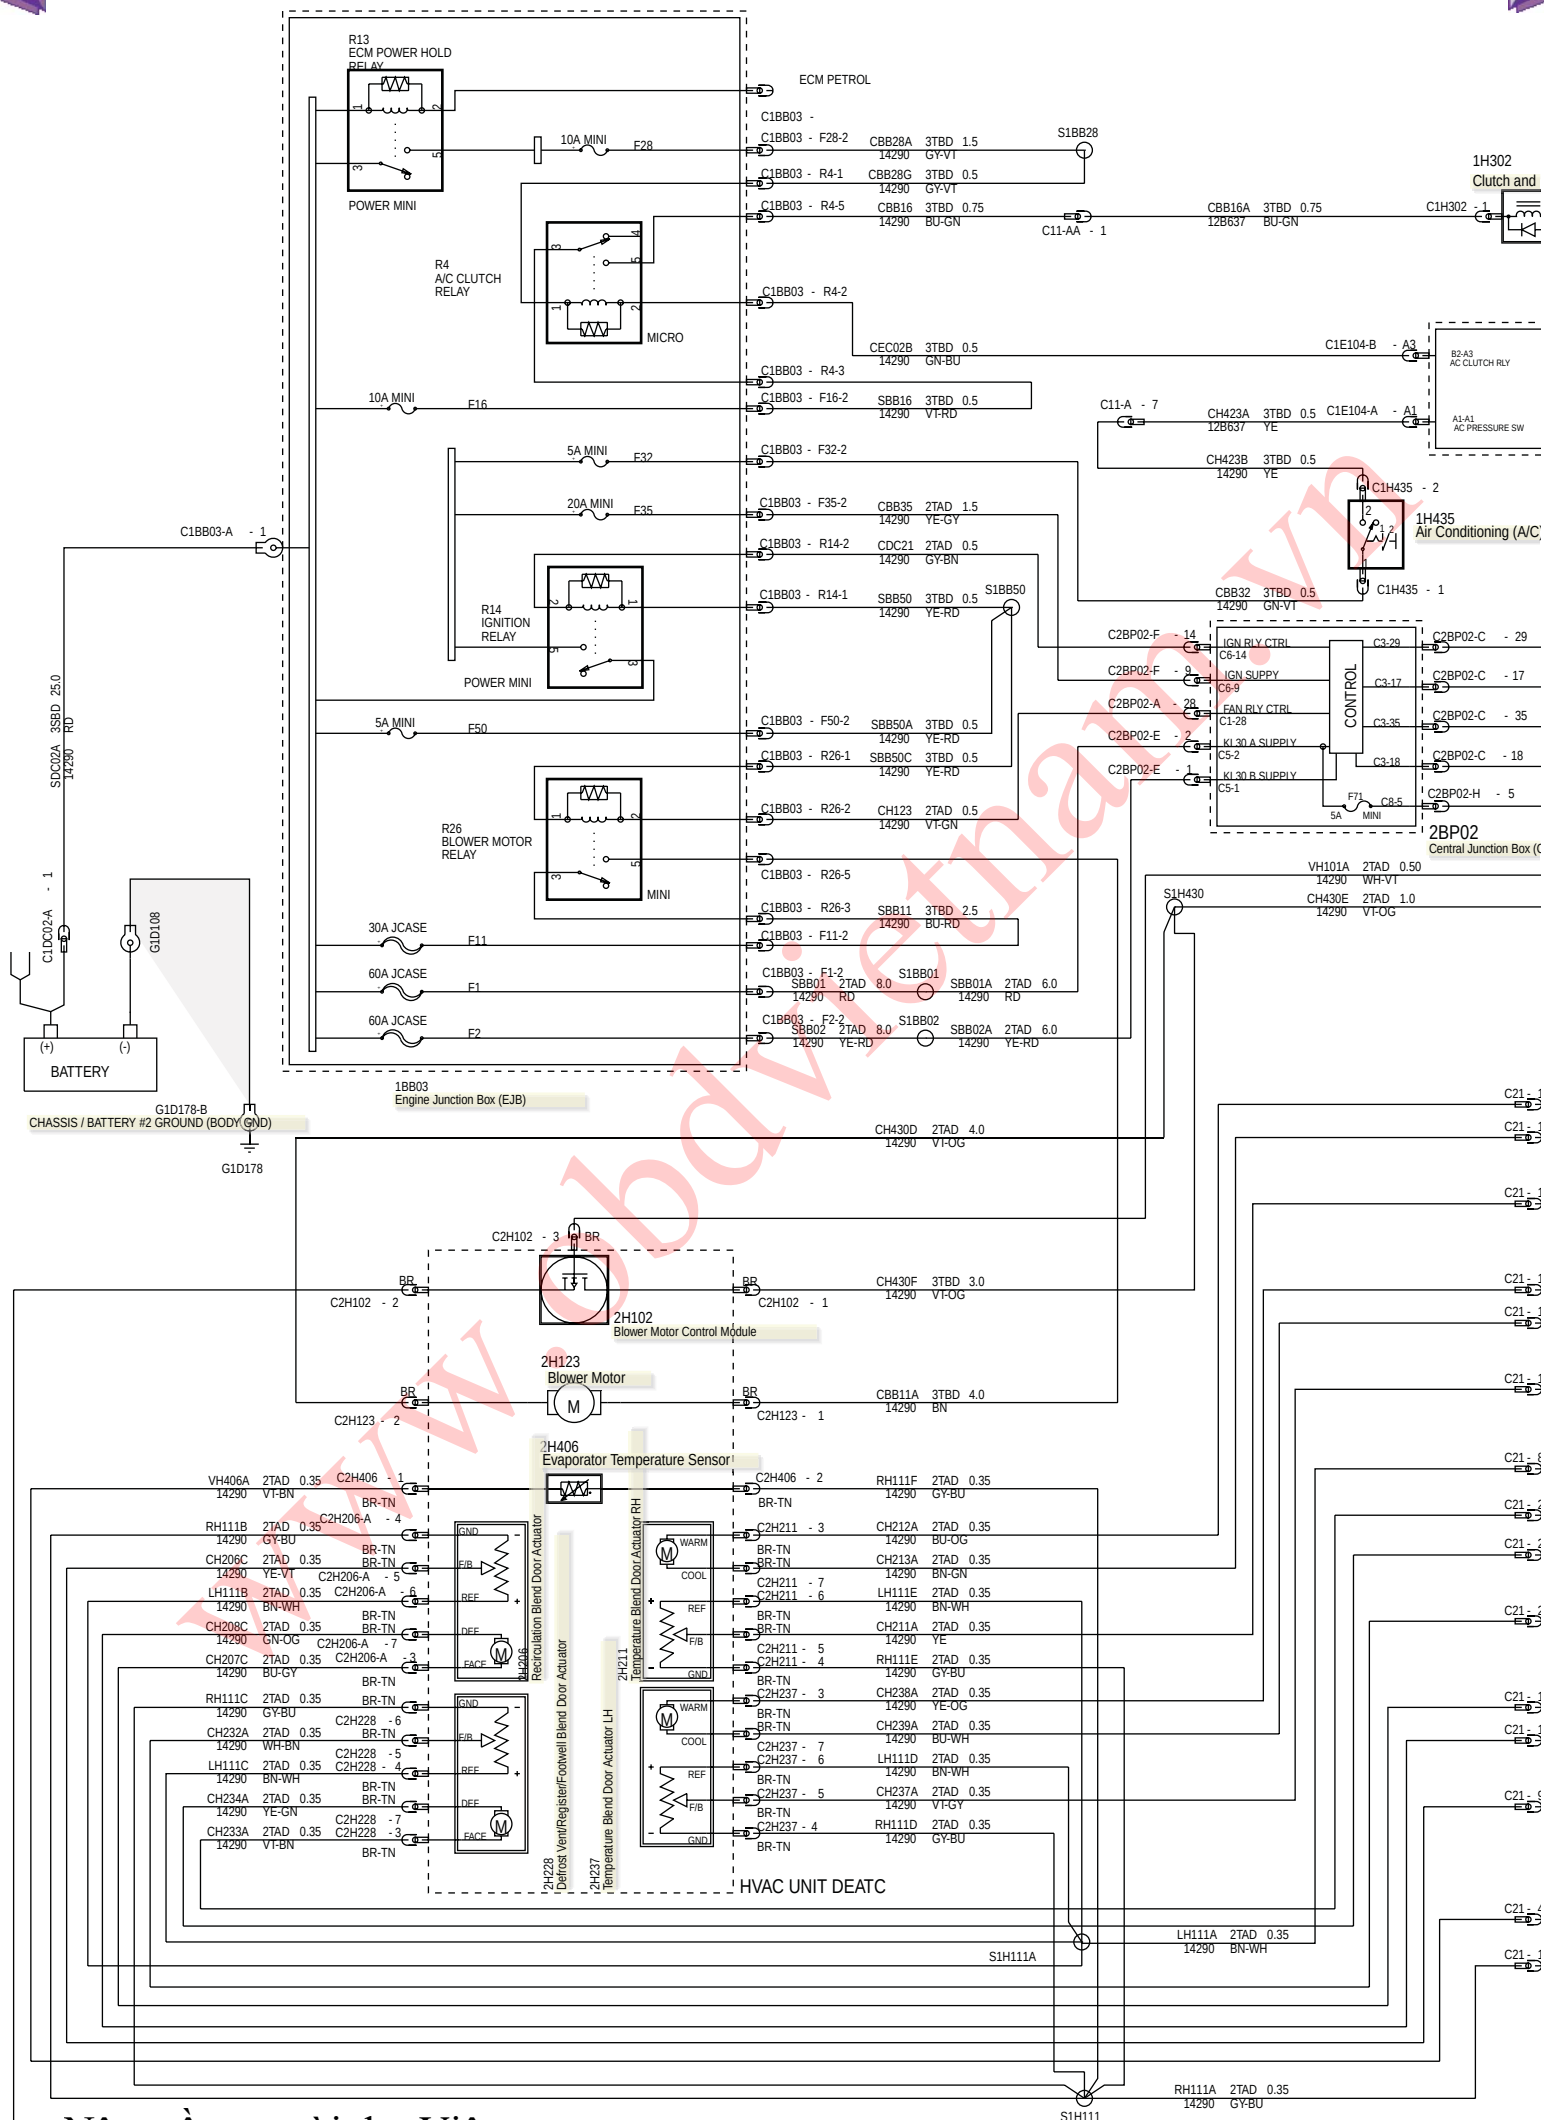

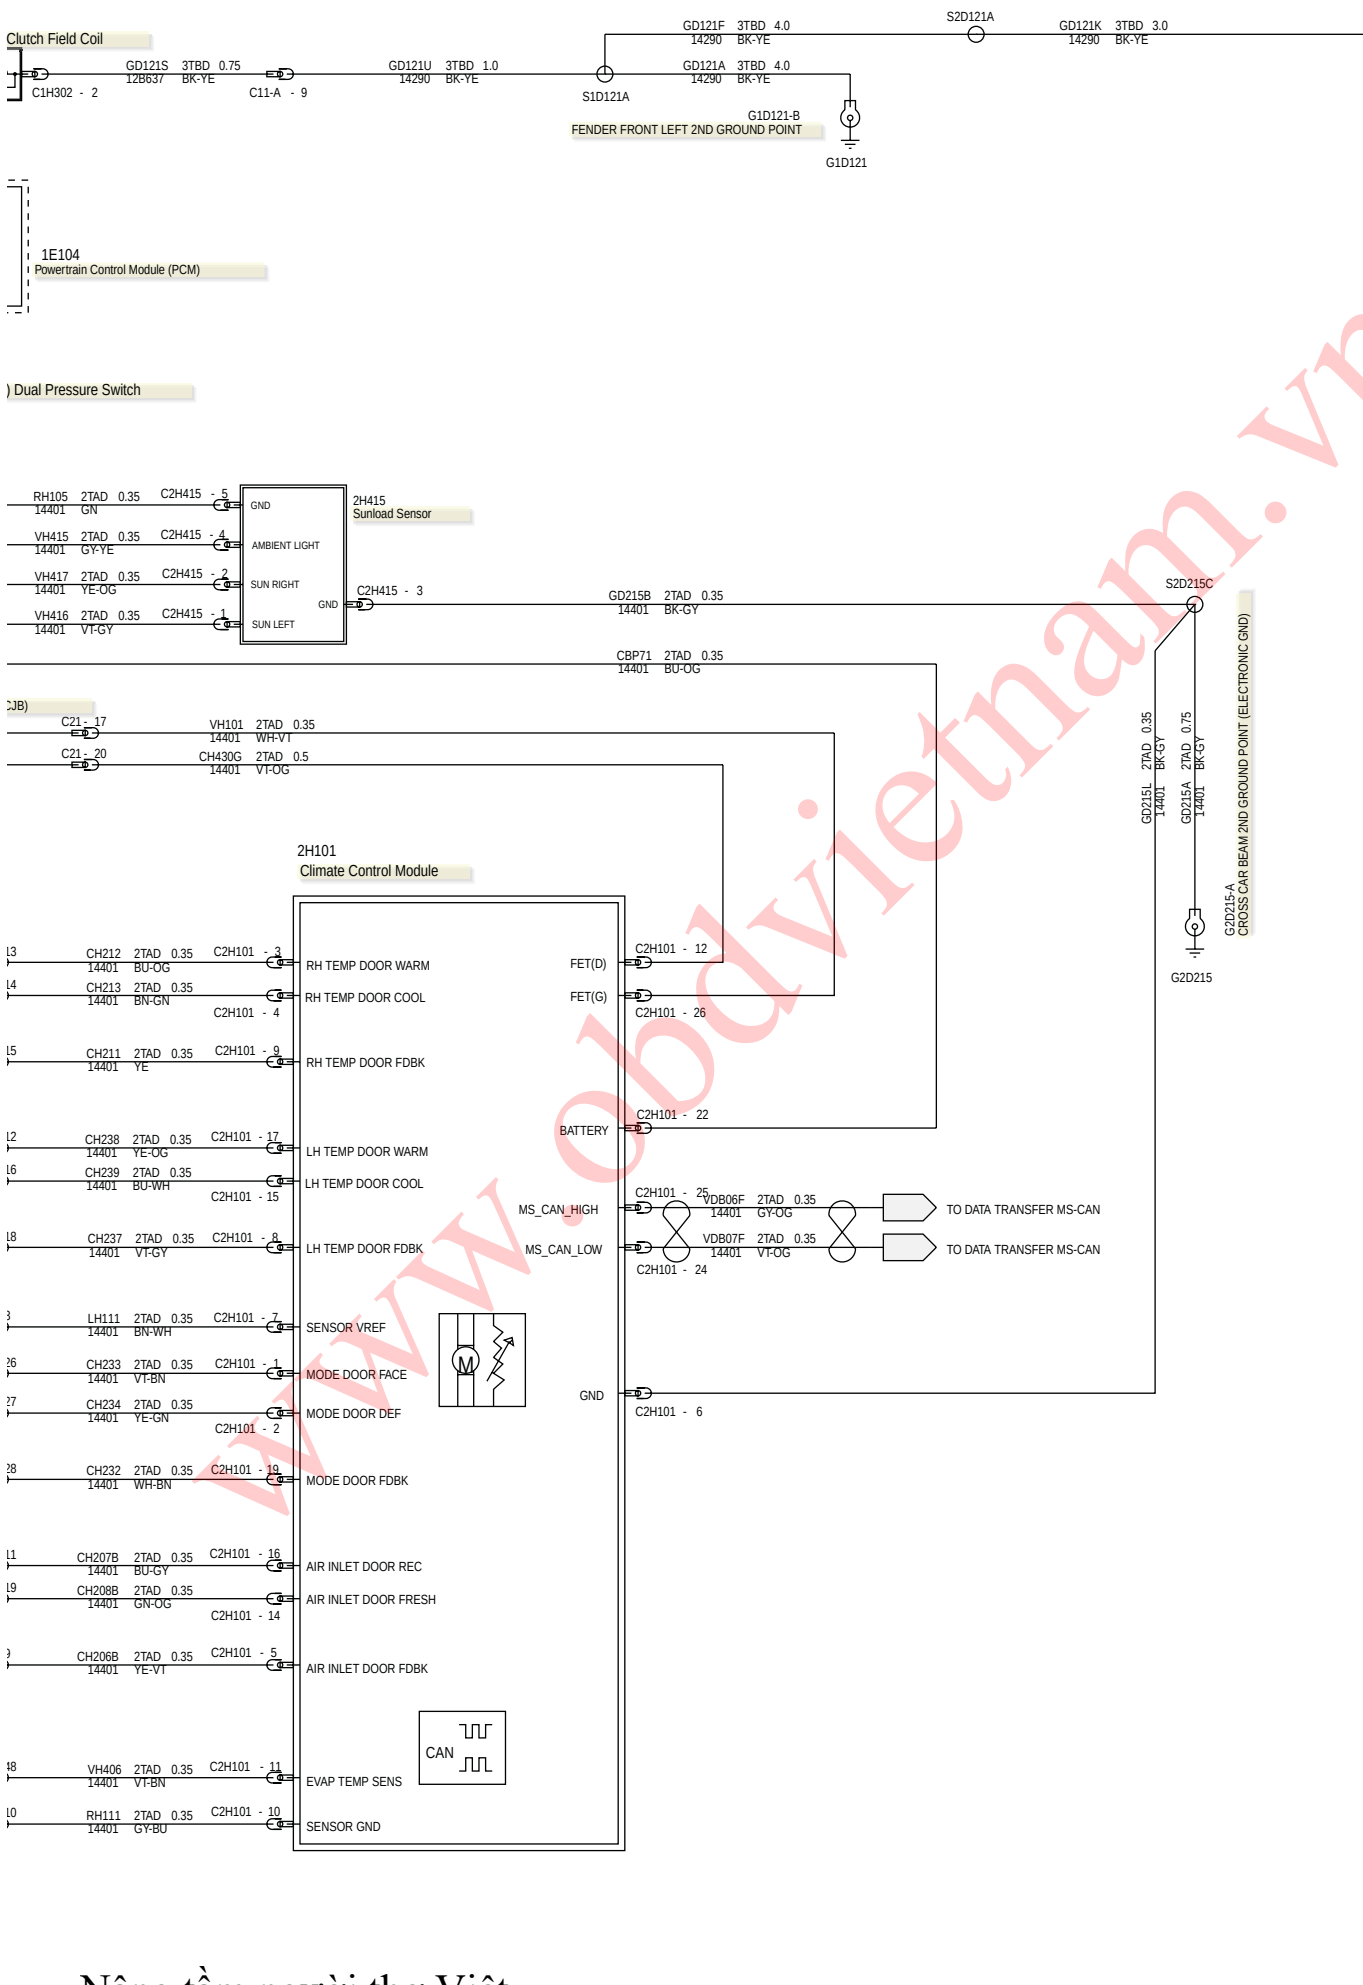

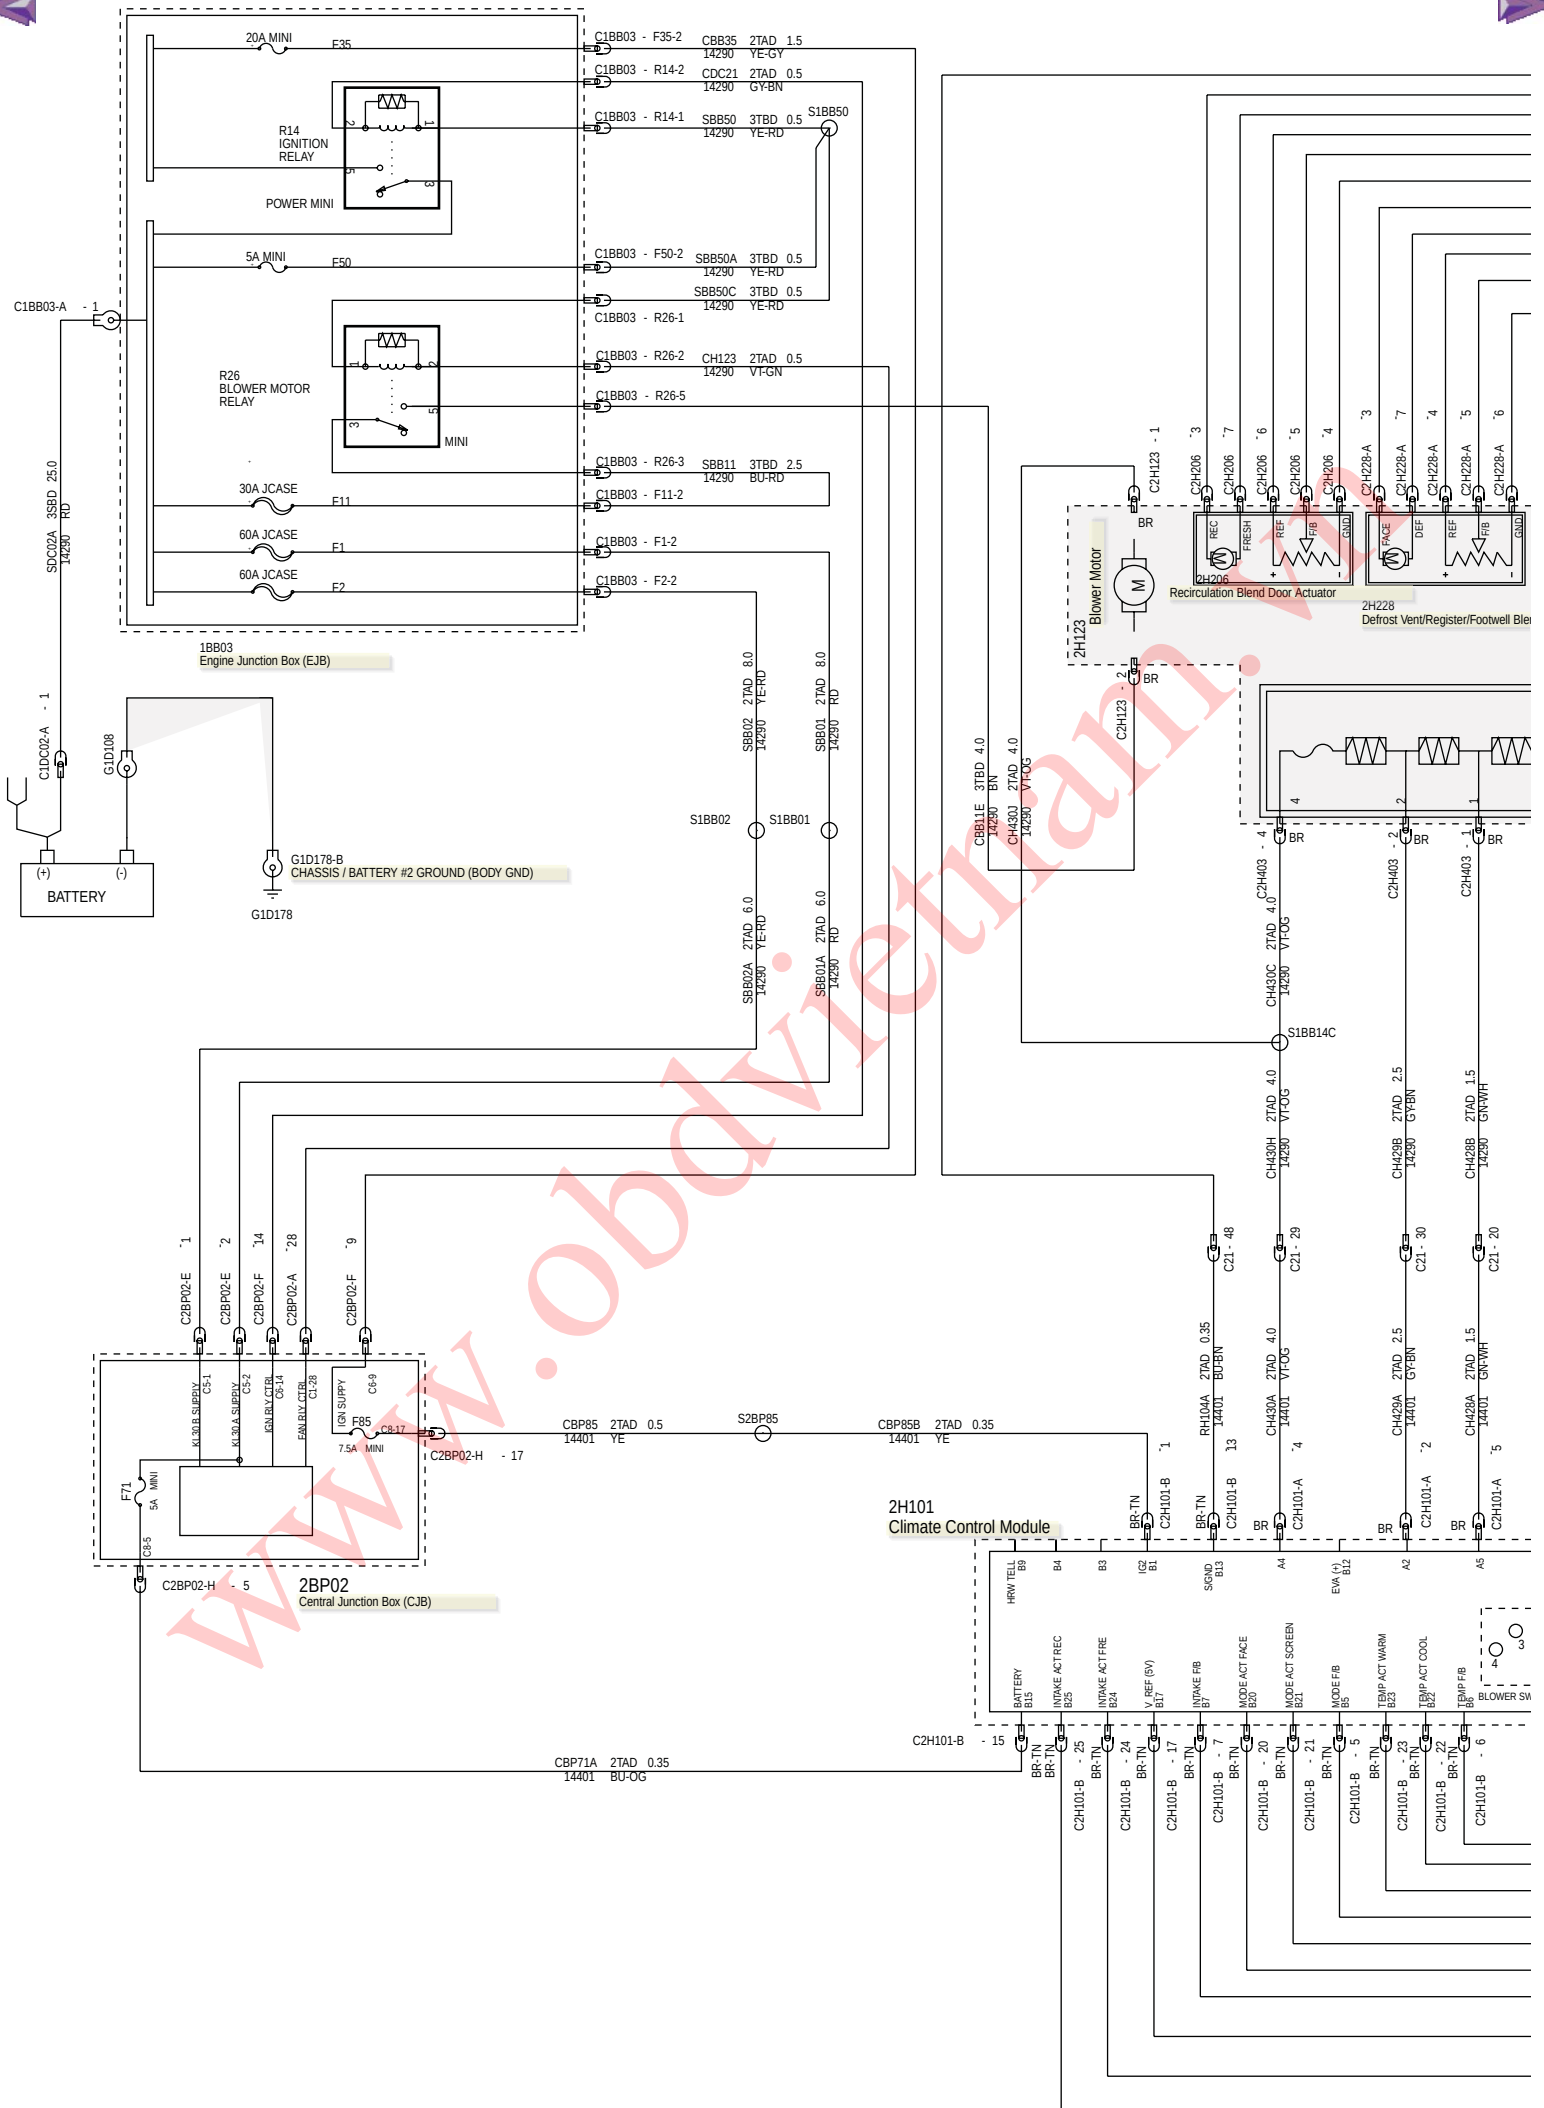


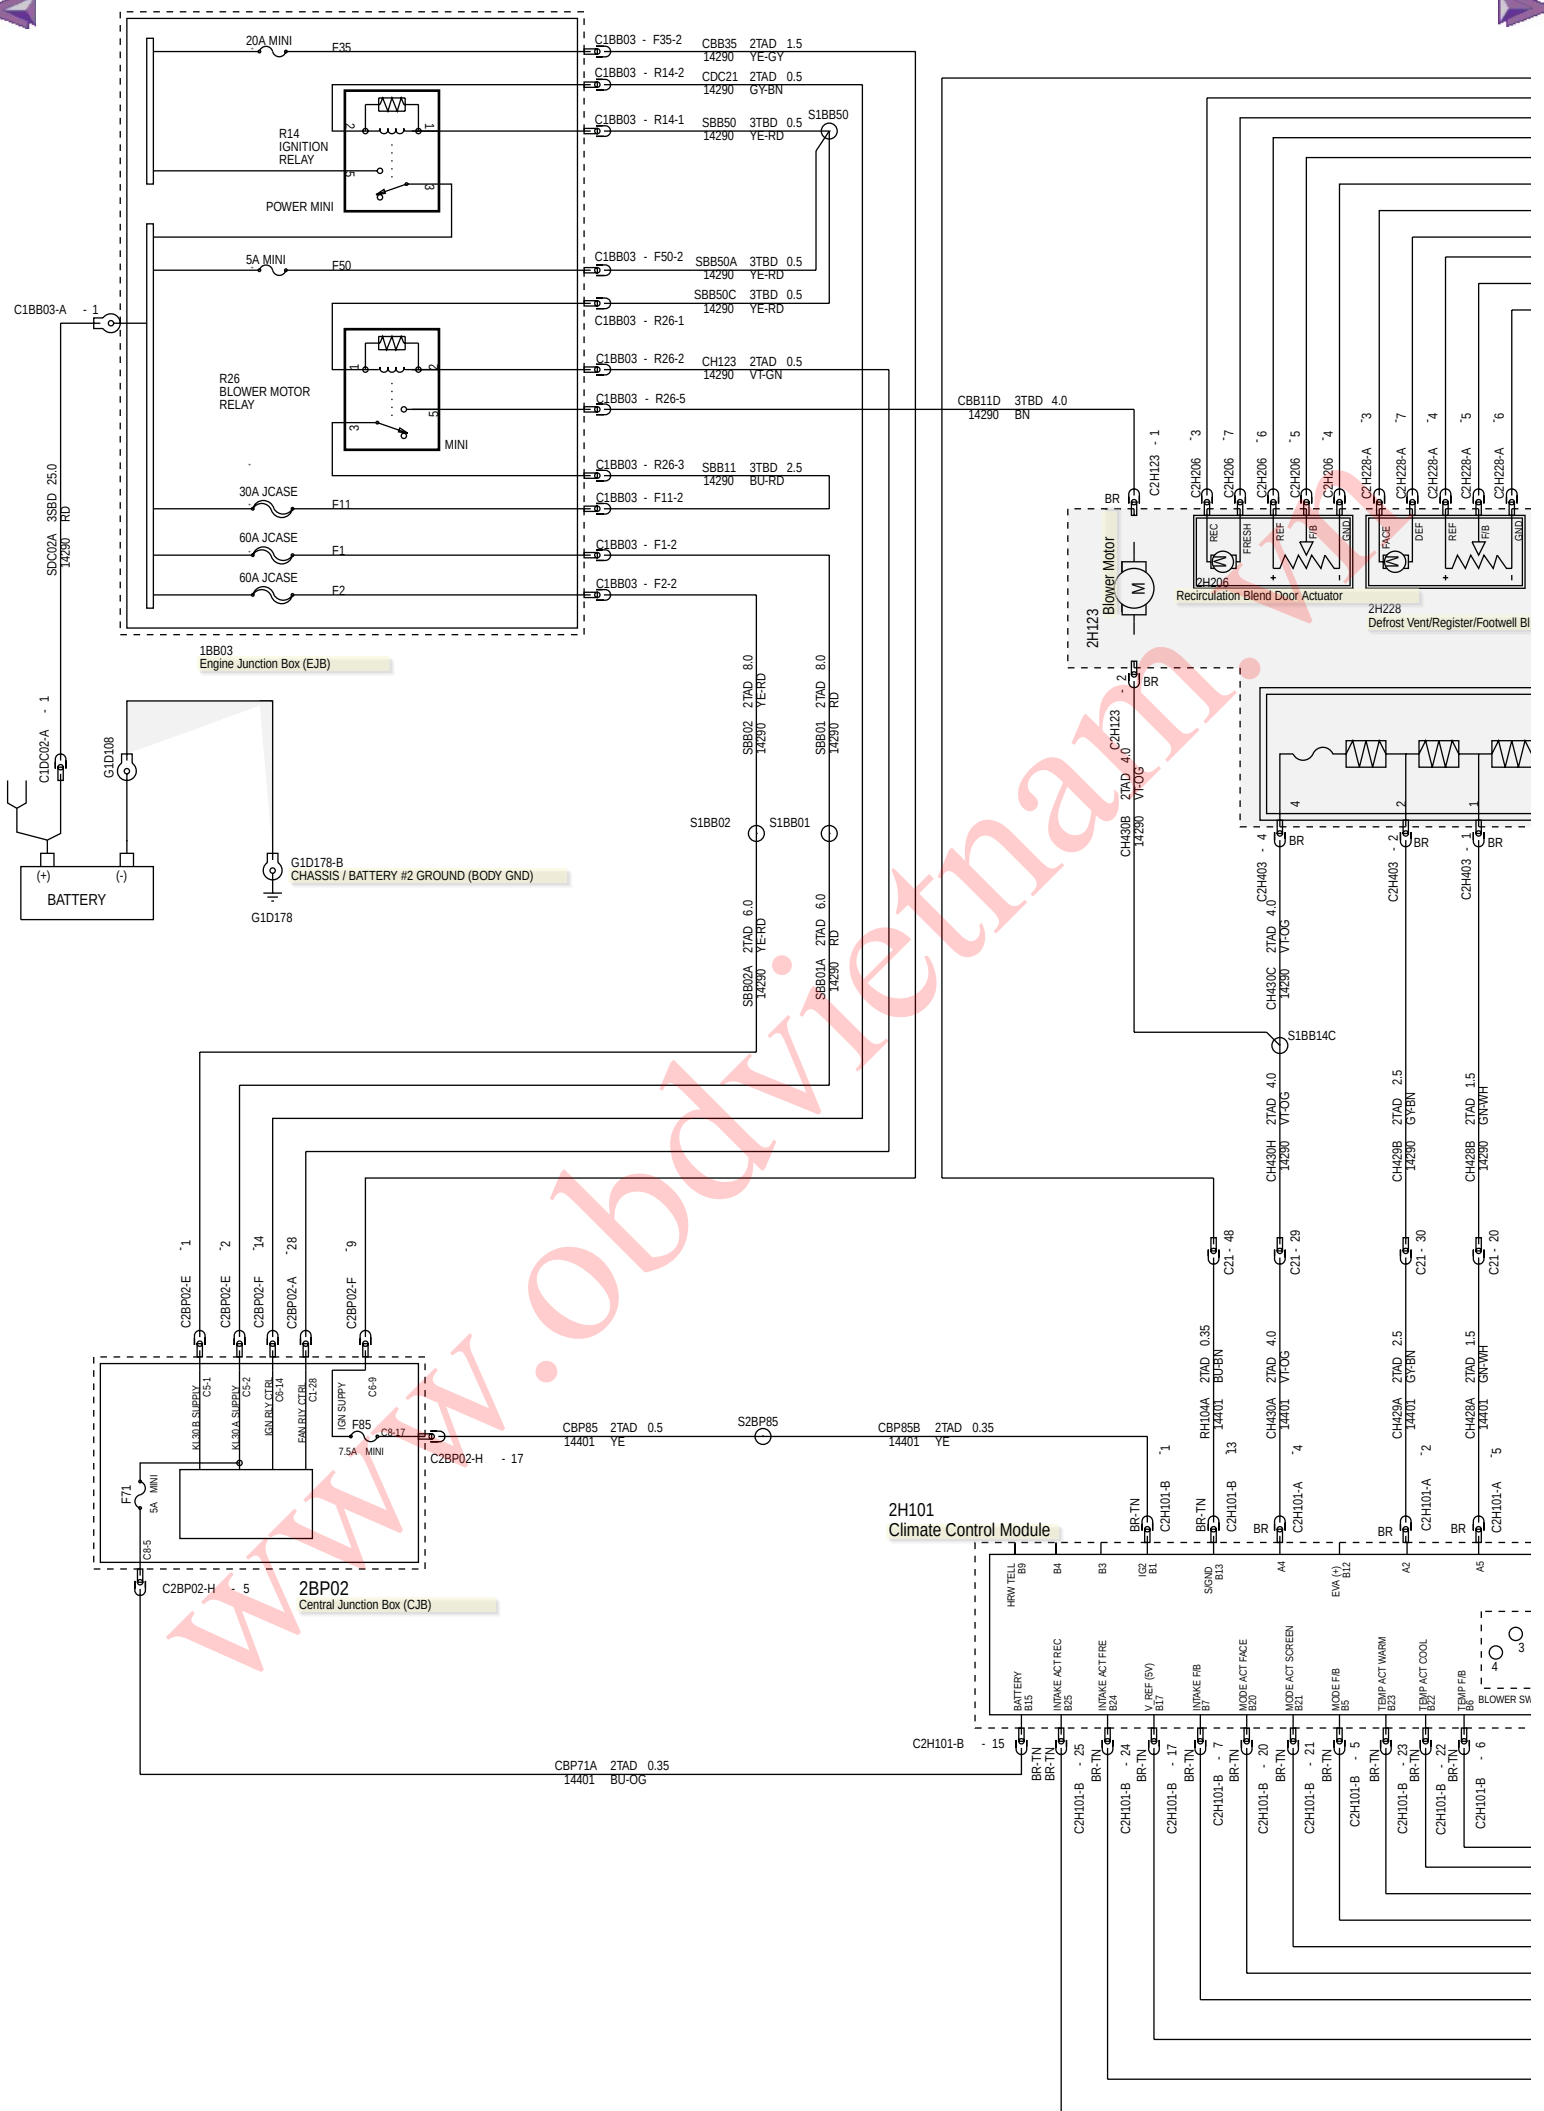


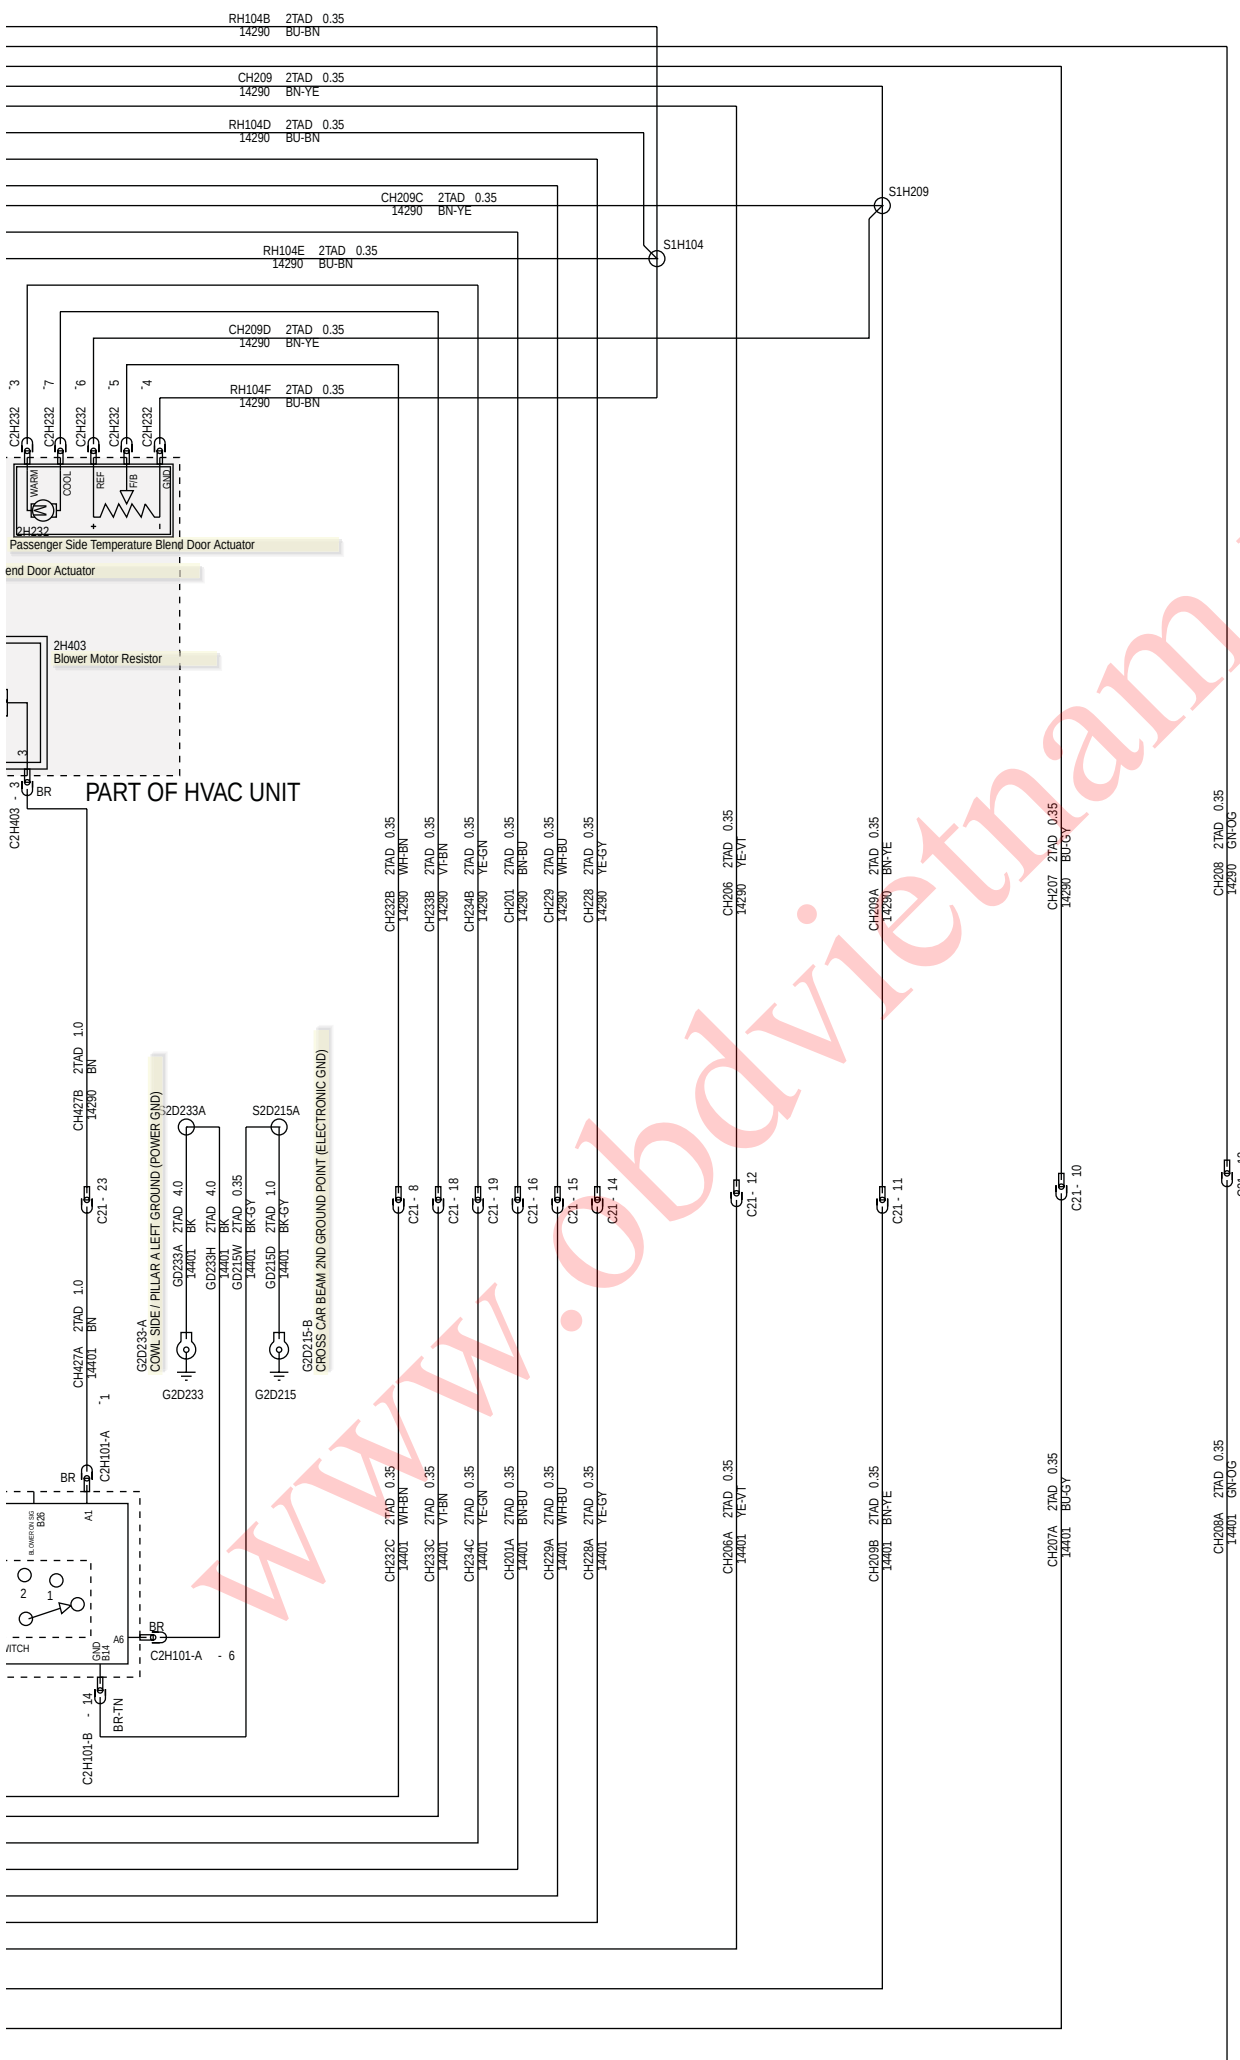


- Puma/3.2L Duratorq-TDCi (148kW/200PS) - Puma, LHD 4WD/LHD RWD, Vehicles With: Manual Temperature Control




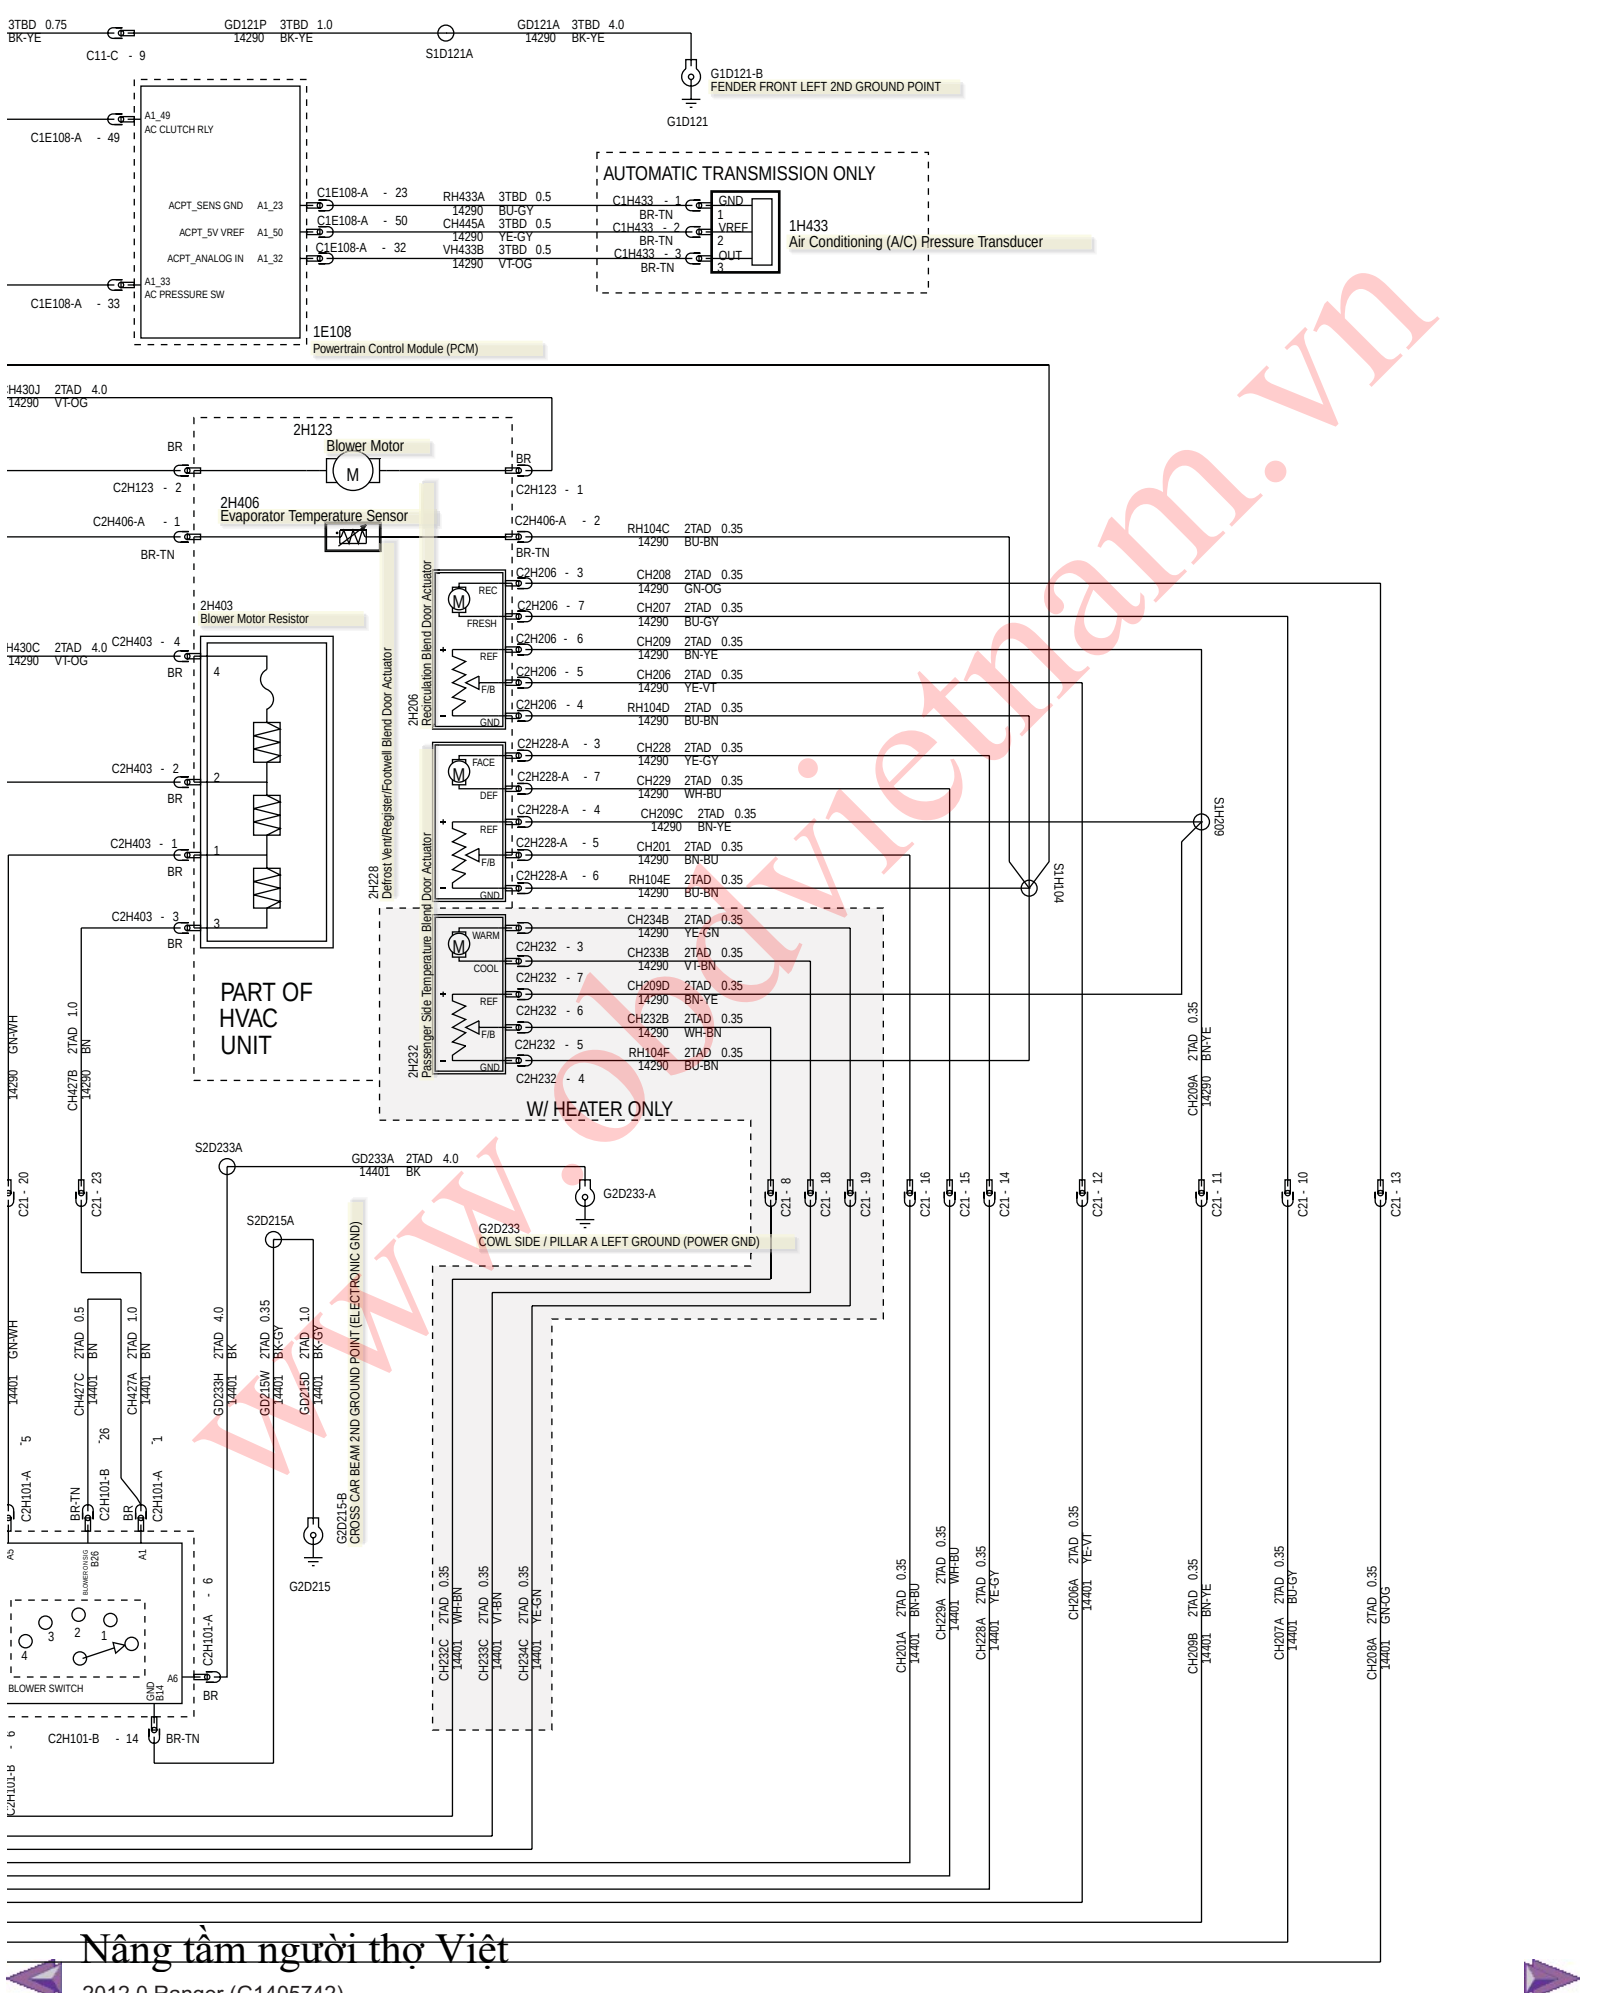

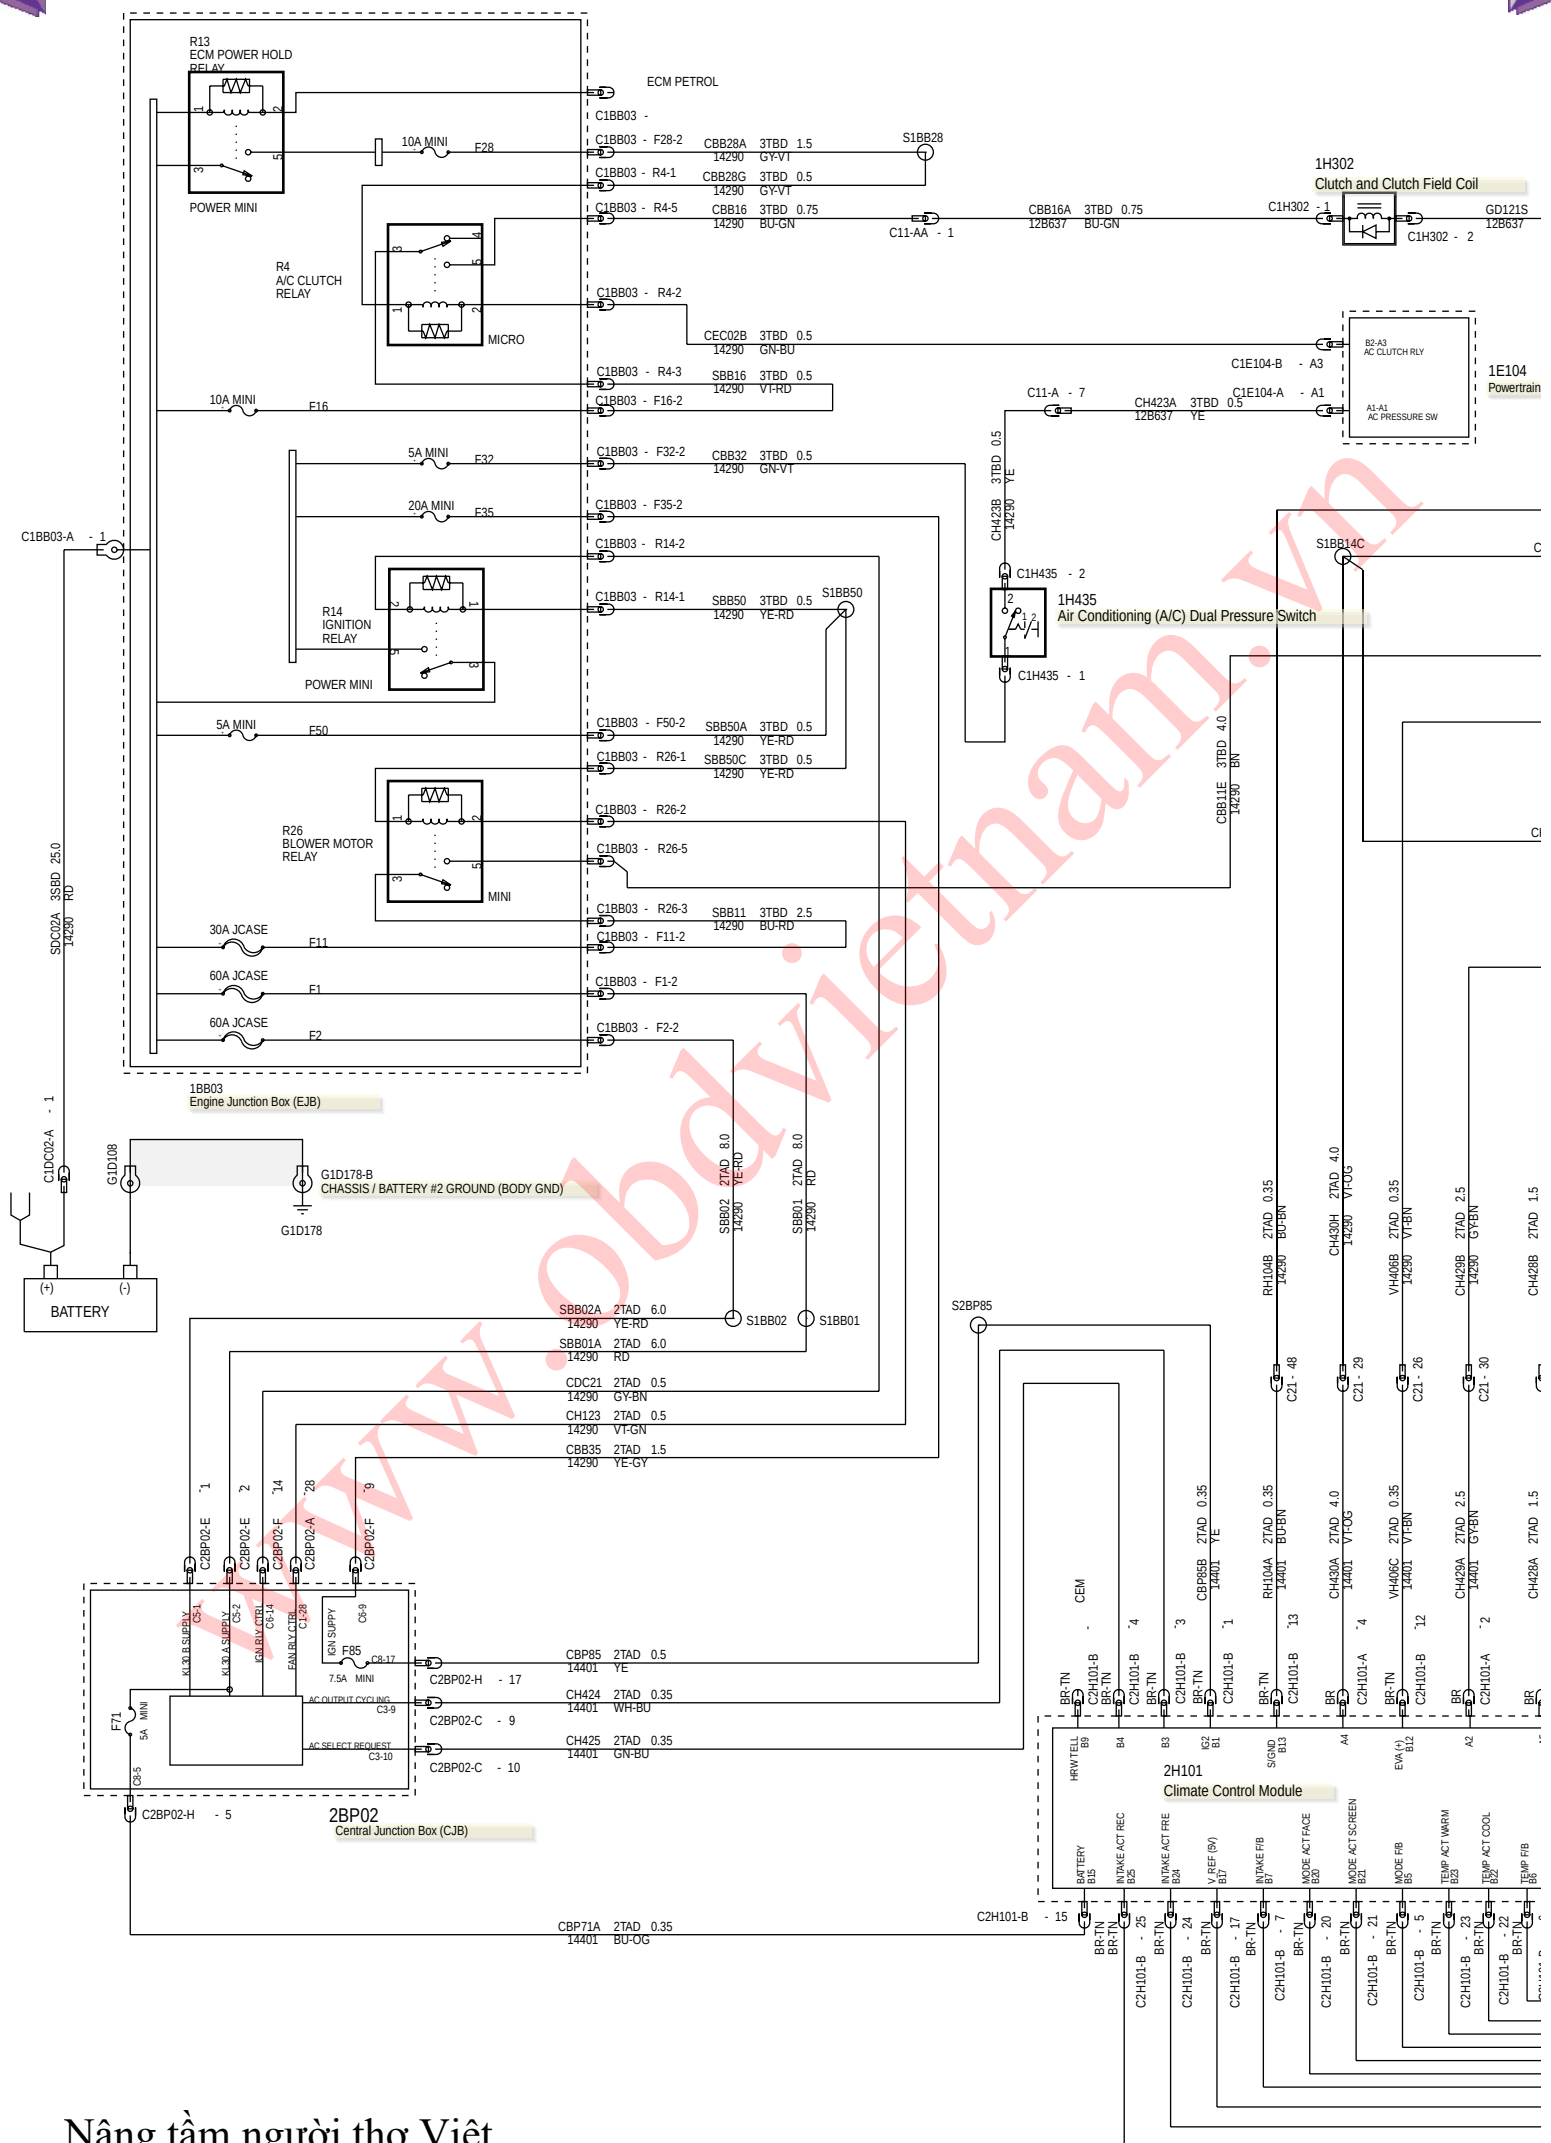


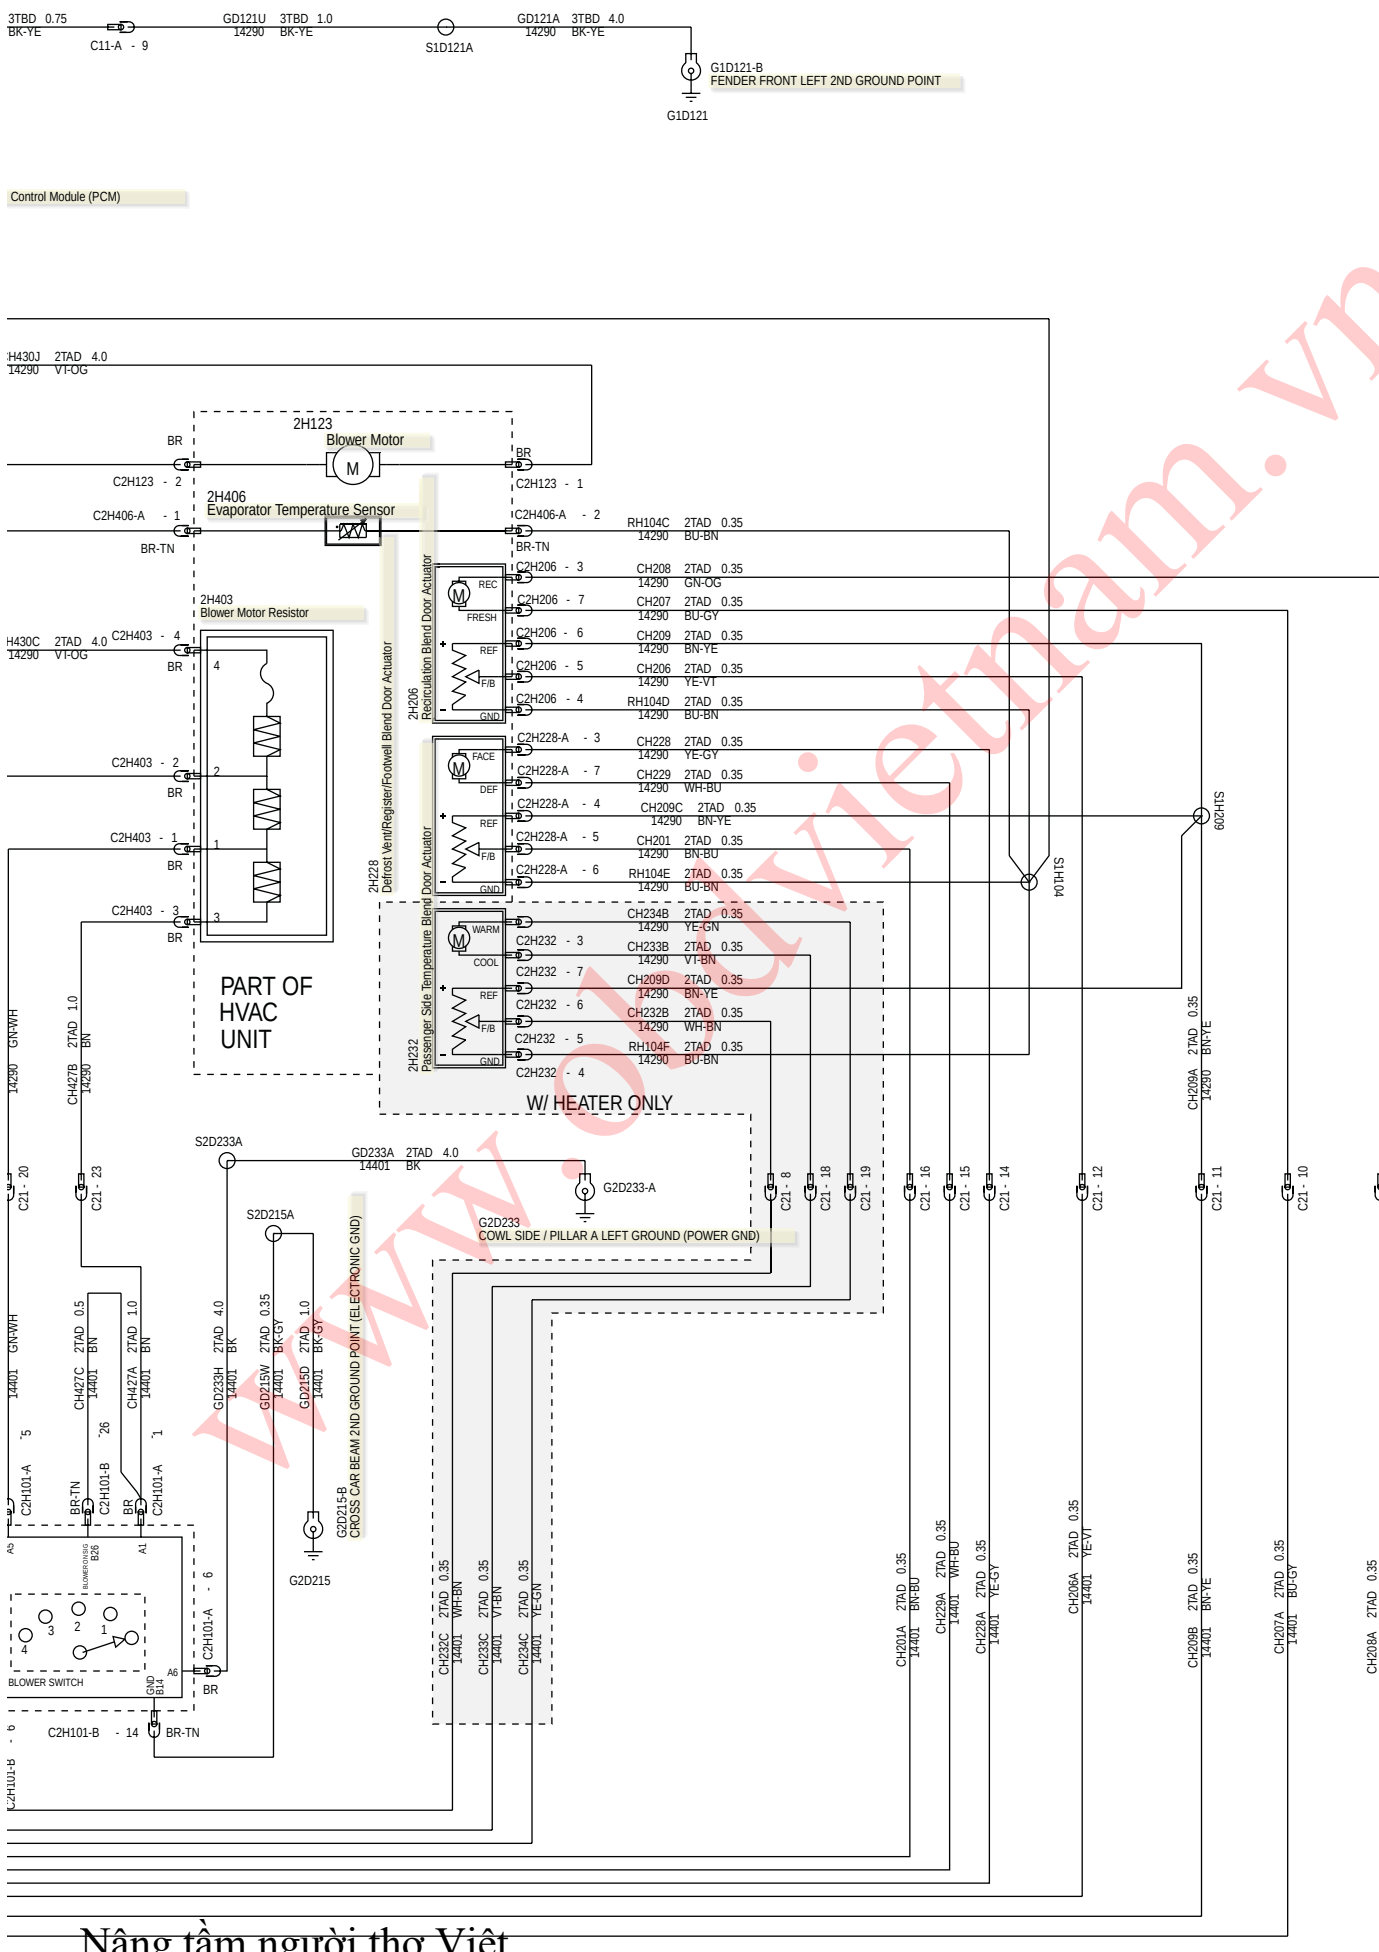



412-01-19 Climate Control - 2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma/3.2L Duratorq-TDCi (148kW/200PS) - Puma, RHD 4WD/RHD RWD, Vehicles With: Manual Temperature Control

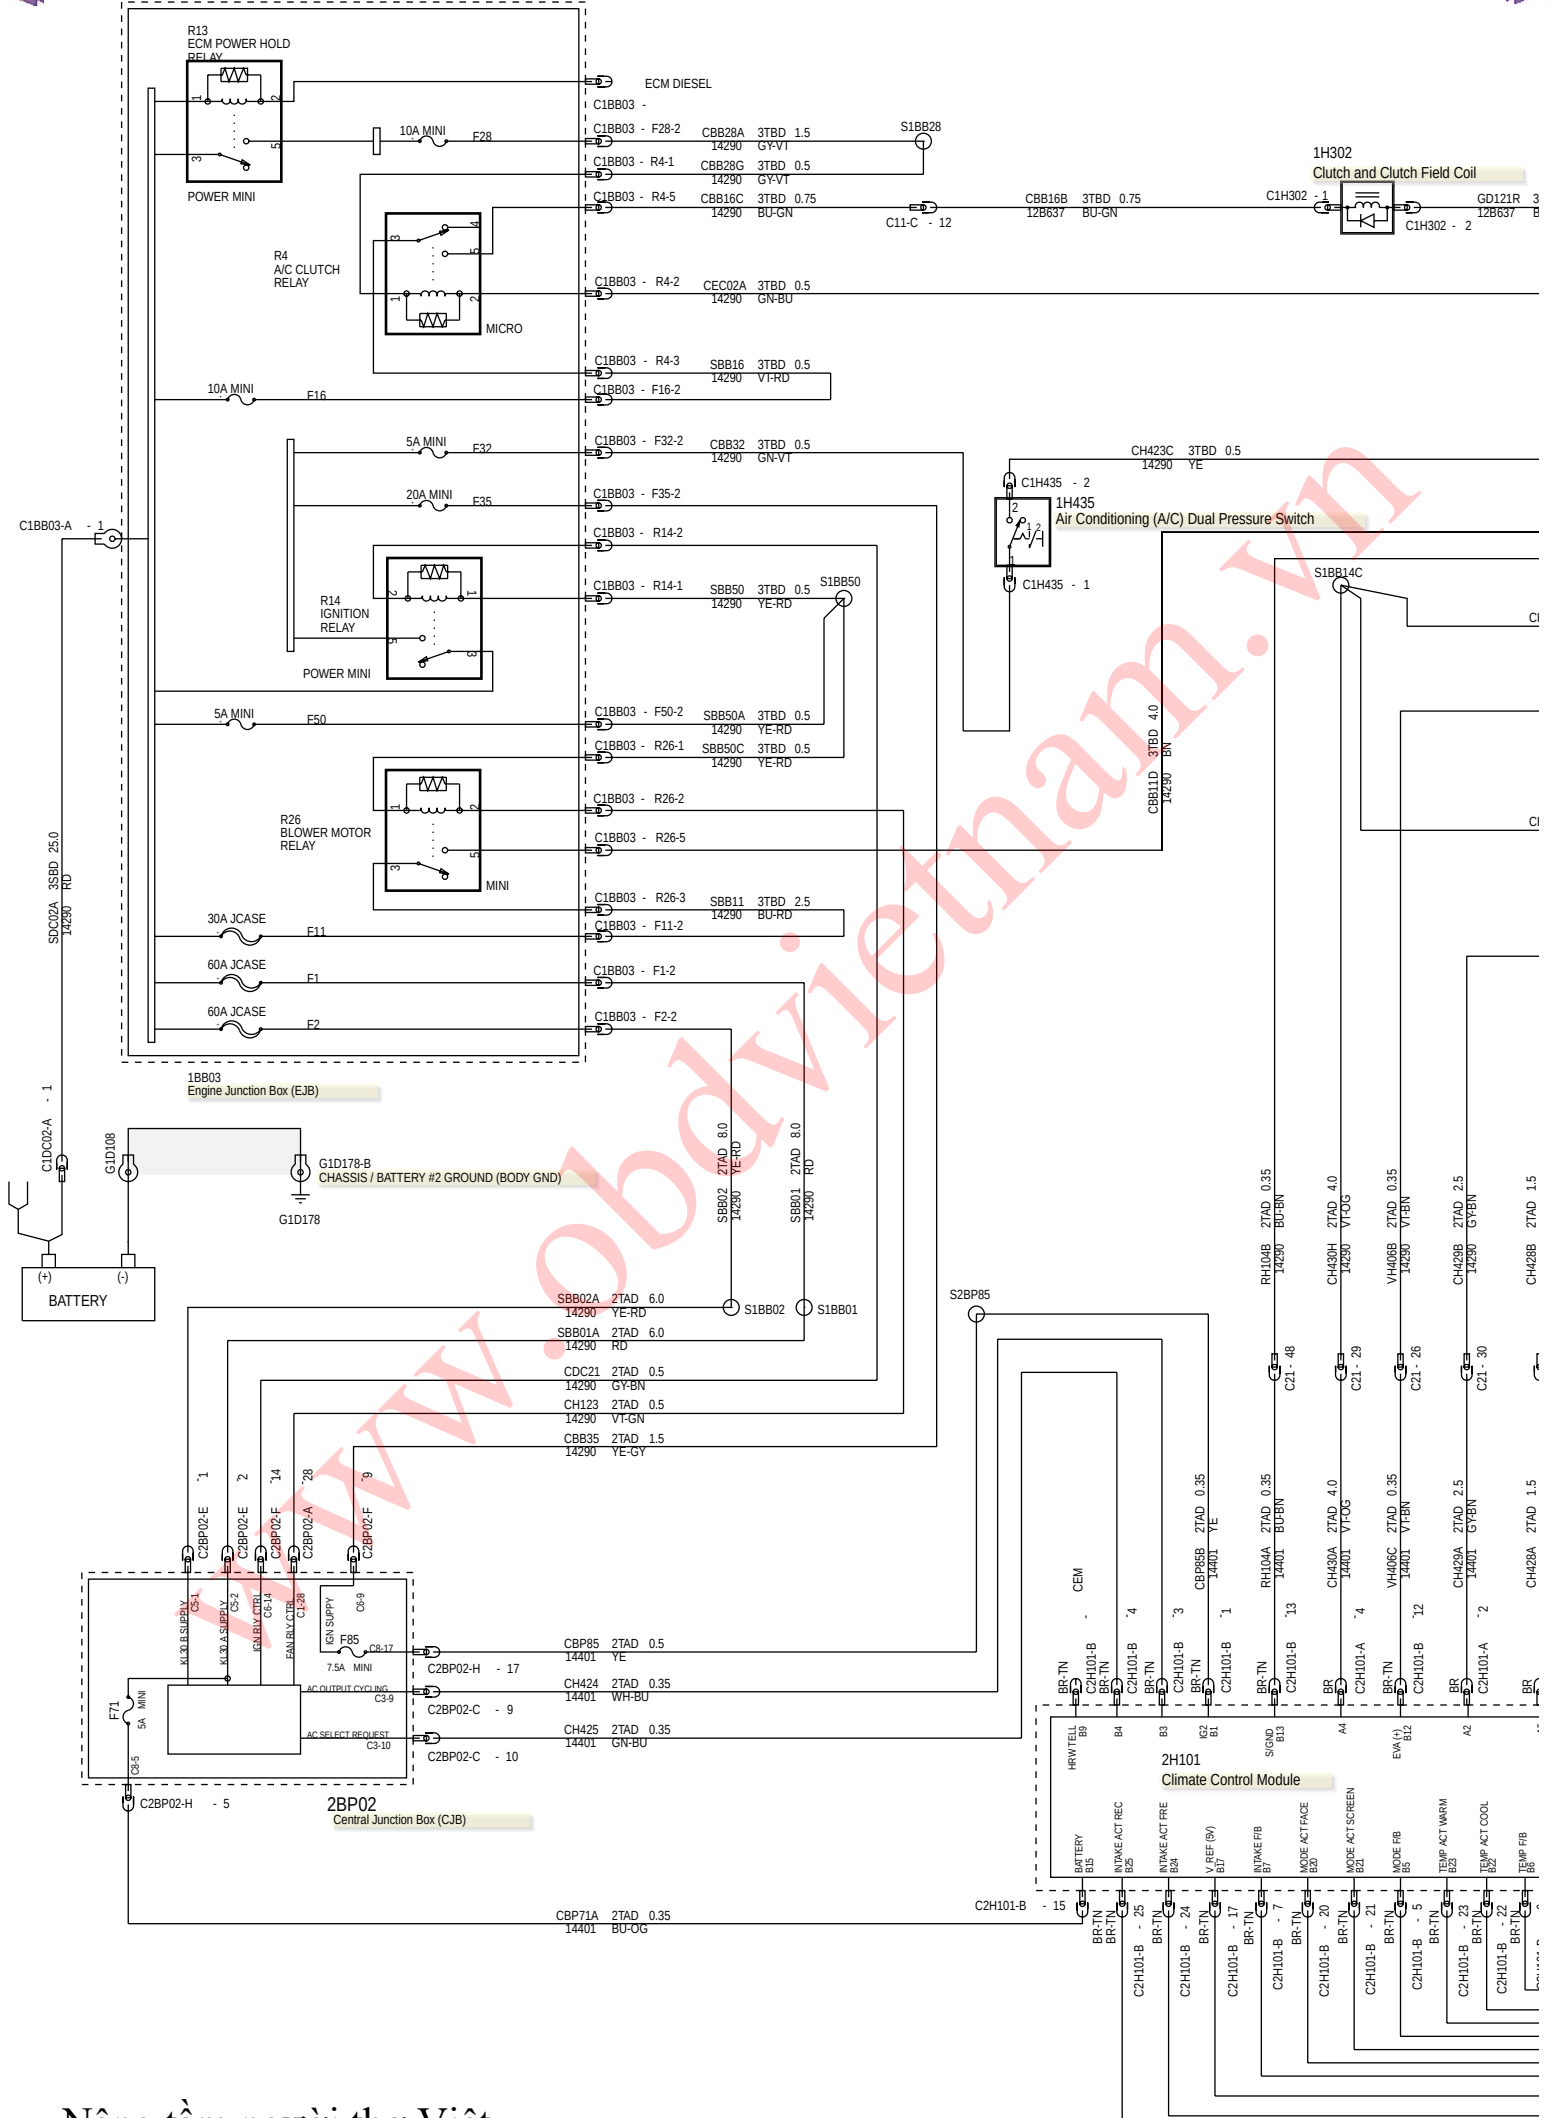

2012.0 Ranger (G1405749)

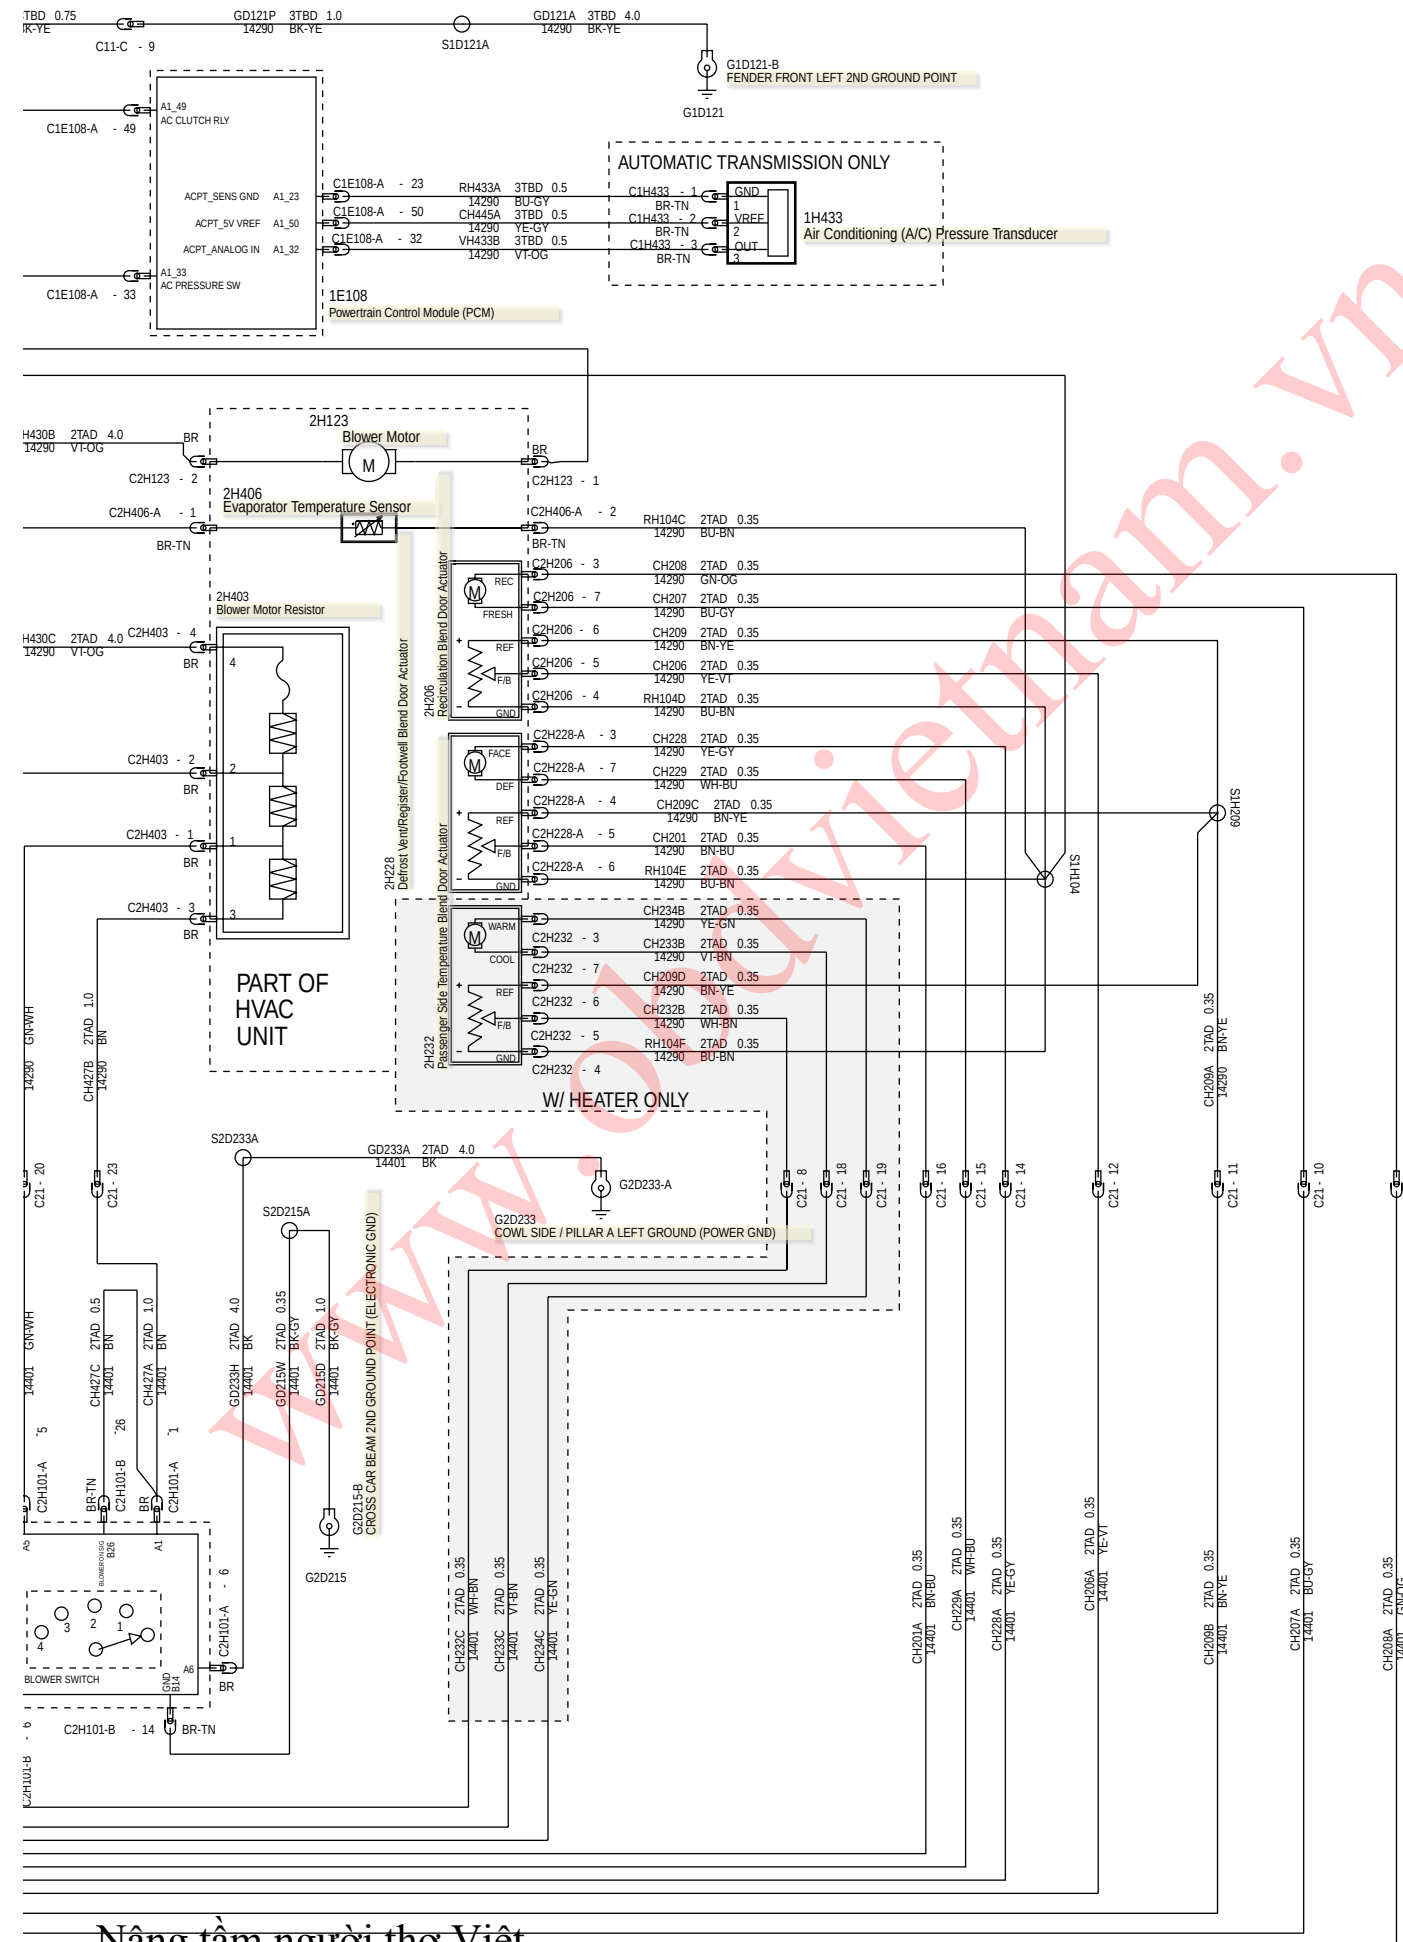


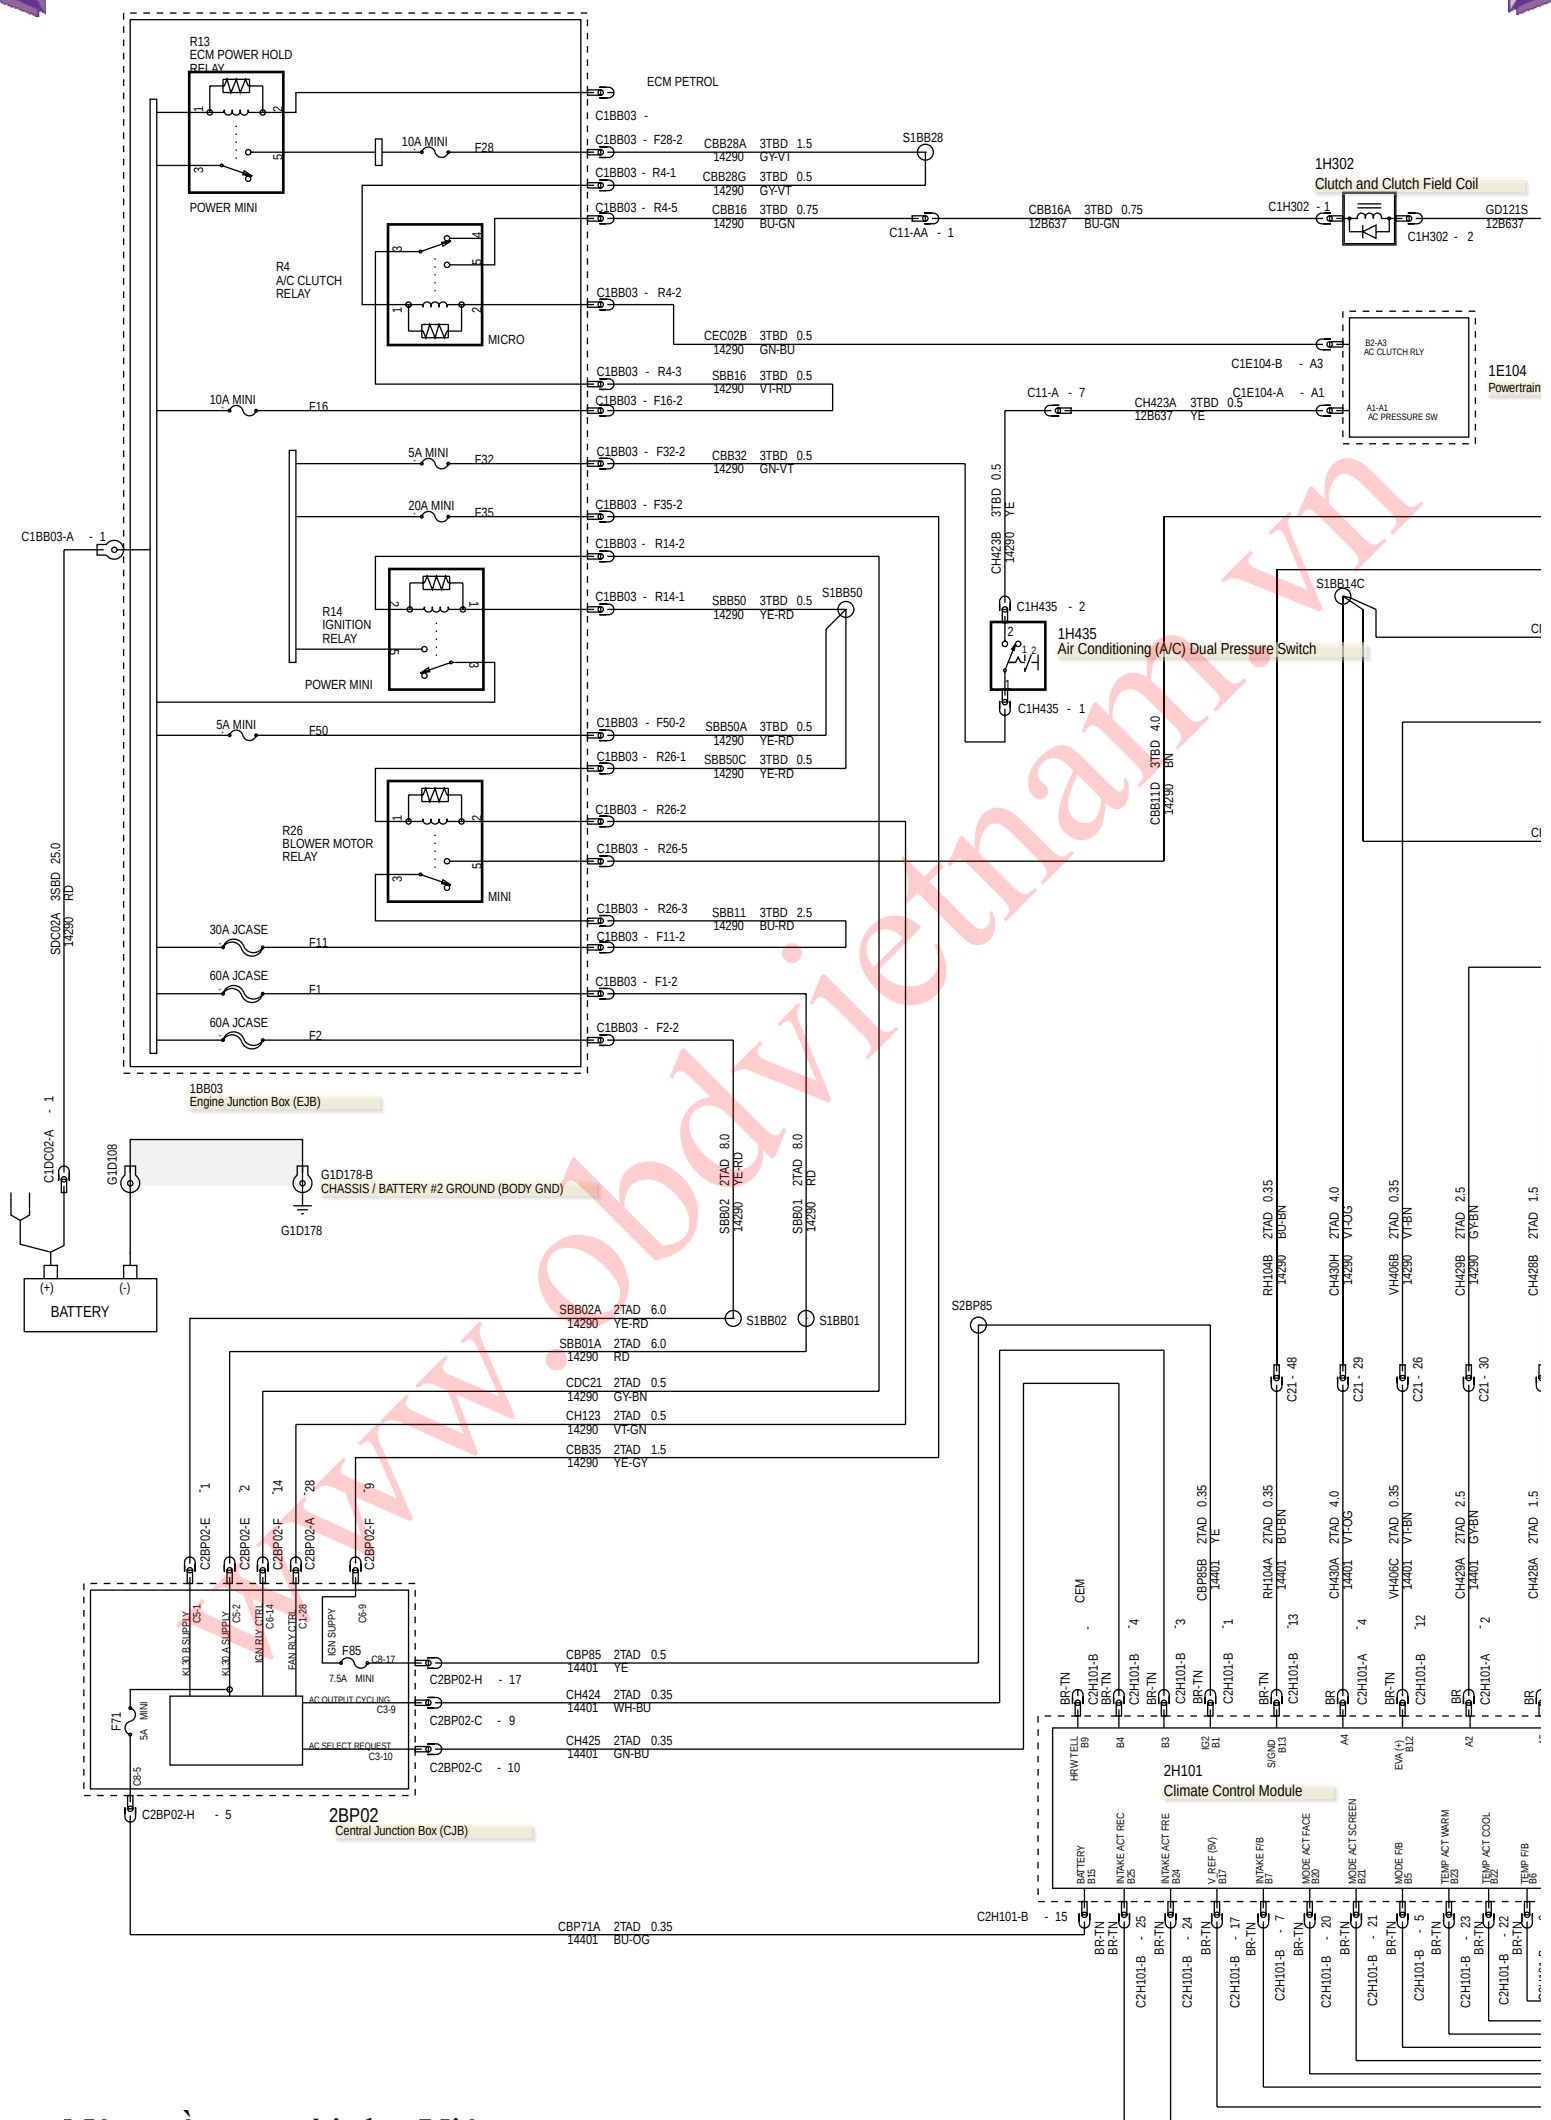




412-01-23

Air Conditioning (A/C) Dual Pressure Switch (G1404297)

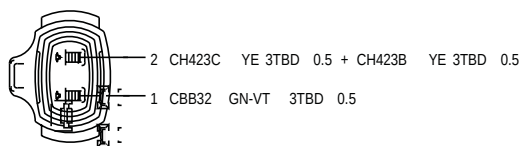

7323-9327
C1H435
TO AC PRESSURE SWITCH
HARNESS 14290


Air Conditioning (A/C) Pressure Transducer (G1404298)

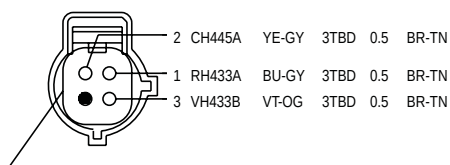

F75B-14A464-AGA
C1H433
TO PRESSURE TRANSDUCER
HARNESS 14290

Ambient Air Temperature Sensor (G1404299)


PIN 1 => RE335 BN-VT 0.5 3TBD
PIN 2 => VE750 GN-BU 0.5 3TBD

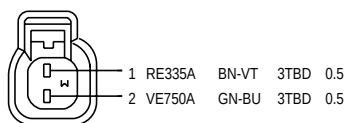

1S7T-14A464-CB
C1E335
TO AMBIENT TEMP SENSOR
HARNESS 14290

Blower Motor (G1404300)


PIN 1 => CBB11A BN 4.0 3TBD
PIN 1 => CBB11A BN 4.0 3TBD + CH430K VT-OG 4.0 2TAD
PIN 1 => CH430J VT-OG 4.0 2TAD + CBB11D BN 4.0 3TBD
PIN 2 => CBB11F BN 4.0 3TBD
PIN 2 => CH430D VT-OG 4.0 2TAD + CBB11F BN 4.0 3TBD



YC1T-14489-DA
C2H123
TO HVAC UNIT3 HEATER BLOWER MOTOR
HARNESS 14290


412-01-24

Blower Motor Control Module (G1404301)



KUM-PH776-03027
C2H102
TO FET
HARNESS 14290

Blower Motor Resistor (G1404307)




YC1T-14489-EA

C2H403

TO HVAC UNIT1 BLOWER SERIES RESISTOR

HARNESS 14290

Climate Control Module (G1404308)

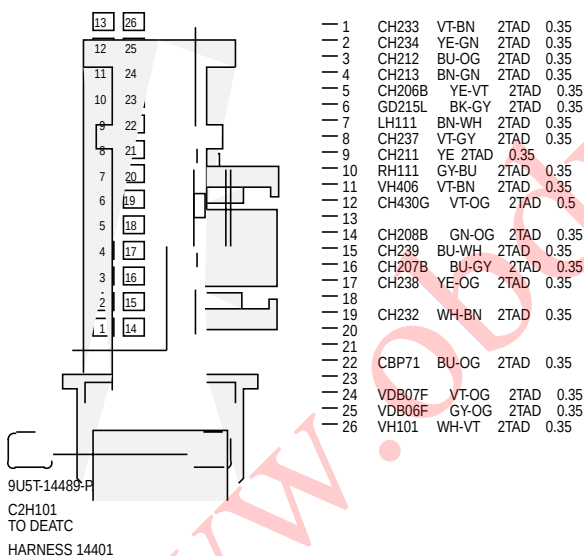

Climate Control Module—A (G1404309)

PIN 1 => CH427A BN 1.0 2TAD



7283-1169

C2H101-A

TO HVAC CONTROL HEAD MANUAL AC HEATER1 (BLOWER SWITCH)

HARNESS 14401

412-01-25

Climate Control Module—B (G1404310)

CBP71A	BU-OG	2TAD	0.35	BR-TN	15		1	CBP85B	YE	2TAD	0.35	BR-TN
CLN17L	BN	2TAD	0.35	BR-TN	16		2					
CH209B	BN-YE	2TAD	0.35	BR-TN	17		3	CH424	WH-BU	2TAD	0.35	BR-TN
					18		4	CH425	GN-BU	2TAD	0.35	BR-TN
CHP03	GN-BN	2TAD	0.35	BR-TN	19		5	CH201A	BN-BU	2TAD	0.35	BR-TN
CH228A	YE-GY	2TAD	0.35	BR-TN	20		6	CH232C	WH-BN	2TAD	0.35	BR-TN
CH229A	WH-BU	2TAD	0.35	BR-TN	21		7	CH206A	YE-VT	2TAD	0.35	BR-TN
CH233C	VT-BN	2TAD	0.35	BR-TN	22		8	CRD09A	BU-GY	2TAD	0.35	BR-TN
CH234C	YE-GN	2TAD	0.35	BR-TN	23		9	CRD04A	BN-GN	2TAD	0.35	BR-TN
CH207A	BU-GY	2TAD	0.35	BR-TN	24		10	CRD08A	GN-OG	2TAD	0.35	BR-TN
CH208A	GN-OG	2TAD	0.35	BR-TN	25		11	CRD03A	BU-GN	2TAD	0.35	BR-TN
CH427C	BN	2TAD	0.5	BR-TN	26		12	VH406C	VT-BN	2TAD	0.35	BR-TN
					27		13	RH104A	BU-BN	2TAD	0.35	BR-TN
GD214M	BK-BU	2TAD	0.35	BR-TN	28		14	GD215W	BK-GY	2TAD	0.35	BR-TN

C2H101-B


1565380-1

TO HVAC CONTROL HEAD MANUAL AC HEATER2 (PCB MAIN)

HARNESS 14401

Clutch and Clutch Field Coil (G1404311)

PIN 1 => CBB16A BU-GN 0.75 3TBD + CBB16B BU-GN 0.75 3TBD
PIN 2 => GD121S BK-YE 0.75 3TBD + GD121R BK-YE 0.75 3TBD



1	CBB16B	BU-GN	3TBD	0.75	+	CBB16A	BU-GN	3TBD	0.75
2	GD121R	BK-YE	3TBD	0.75	+	GD121S	BK-YE	3TBD	0.75

4W7T-14A464-CB


C1H302

TO AC COMPRESSOR

HARNESS 12B637


412-01-26

Defrost Vent/Register/Footwell Blend Door Actuator (G1404318)

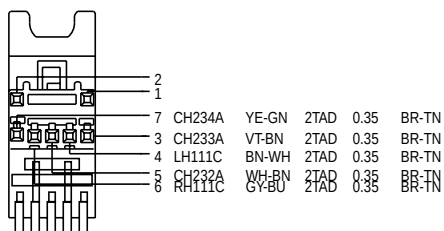


C2H228
PH845-07010
TO MODE DOOR
HARNESS 14290

Defrost Vent/Register/Footwell Blend Door Actuator—A (G1404319)

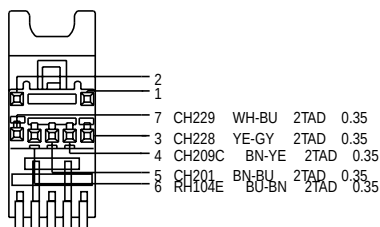


C2H228-A
PH845-07010
TO HVAC UNIT1 MODE DOOR ACTUATOR
HARNESS 14290

Evaporator Temperature Sensor (G1404320)



7T4T-14489-CA
C2H406
TO EVAPORATOR TEMP SENSOR
HARNESS 14290


Evaporator Temperature Sensor—A (G1404321)



7T4T-14489-CA
C2H406-A
TO HVAC UNIT2 EVAPORATOR TEMP SENSOR
HARNESS 14290


412-01-27

Recirculation Blend Door Actuator (G1404322)

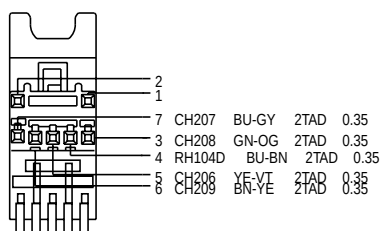


C2H206
PH845-07010
TO HVAC UNIT RECIRCULATION ACTUATOR
HARNESS 14290

Recirculation Blend Door Actuator—A (G1404323)

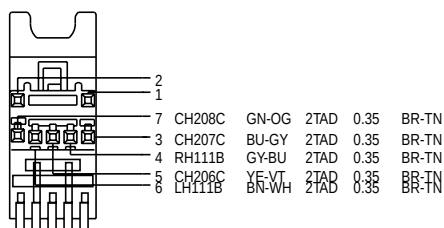


C2H206-A
PH845-07010
TO AIR INLET DOOR
HARNESS 14290

Sunload Sensor (G1404326)



6W8T-14489-AHA
C2H415
TO SUN LOAD SENSOR
HARNESS 14401


Temperature Blend Door Actuator (G1404327)

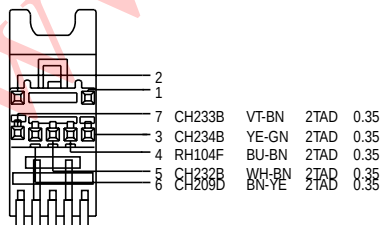

C2H232
PH845-07010
TO HVAC UNIT1 TEMP DOOR ACTUATOR
HARNESS 14290

412-01-28

Temperature Blend Door Actuator LH (G1406232)

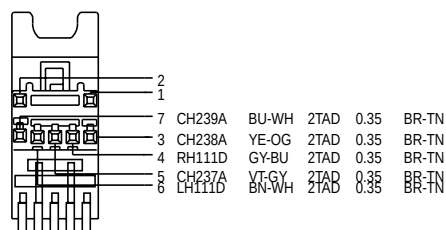


C2H237

PH845-07010

TO LH TEMP DOOR

HARNESS 14290

Temperature Blend Door Actuator RH (G1406233)

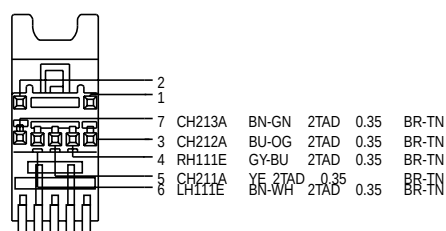

C2H211

PH845-07010

TO RH TEMP DOOR

HARNESS 14290

SECTION 413-01 Instrument Cluster

VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS

PAGE

ELECTRICAL SCHEMATICS

Instrument Cluster — LHD 4WD/LHD RWD..... 413-01-2


Instrument Cluster — RHD 4WD/RHD RWD..... 413-01-4

ELECTRICAL CONNECTORS


Instrument Cluster..... 413-01-6



413-01-3 Instrument Cluster—LHD 4WD/LHD RWD

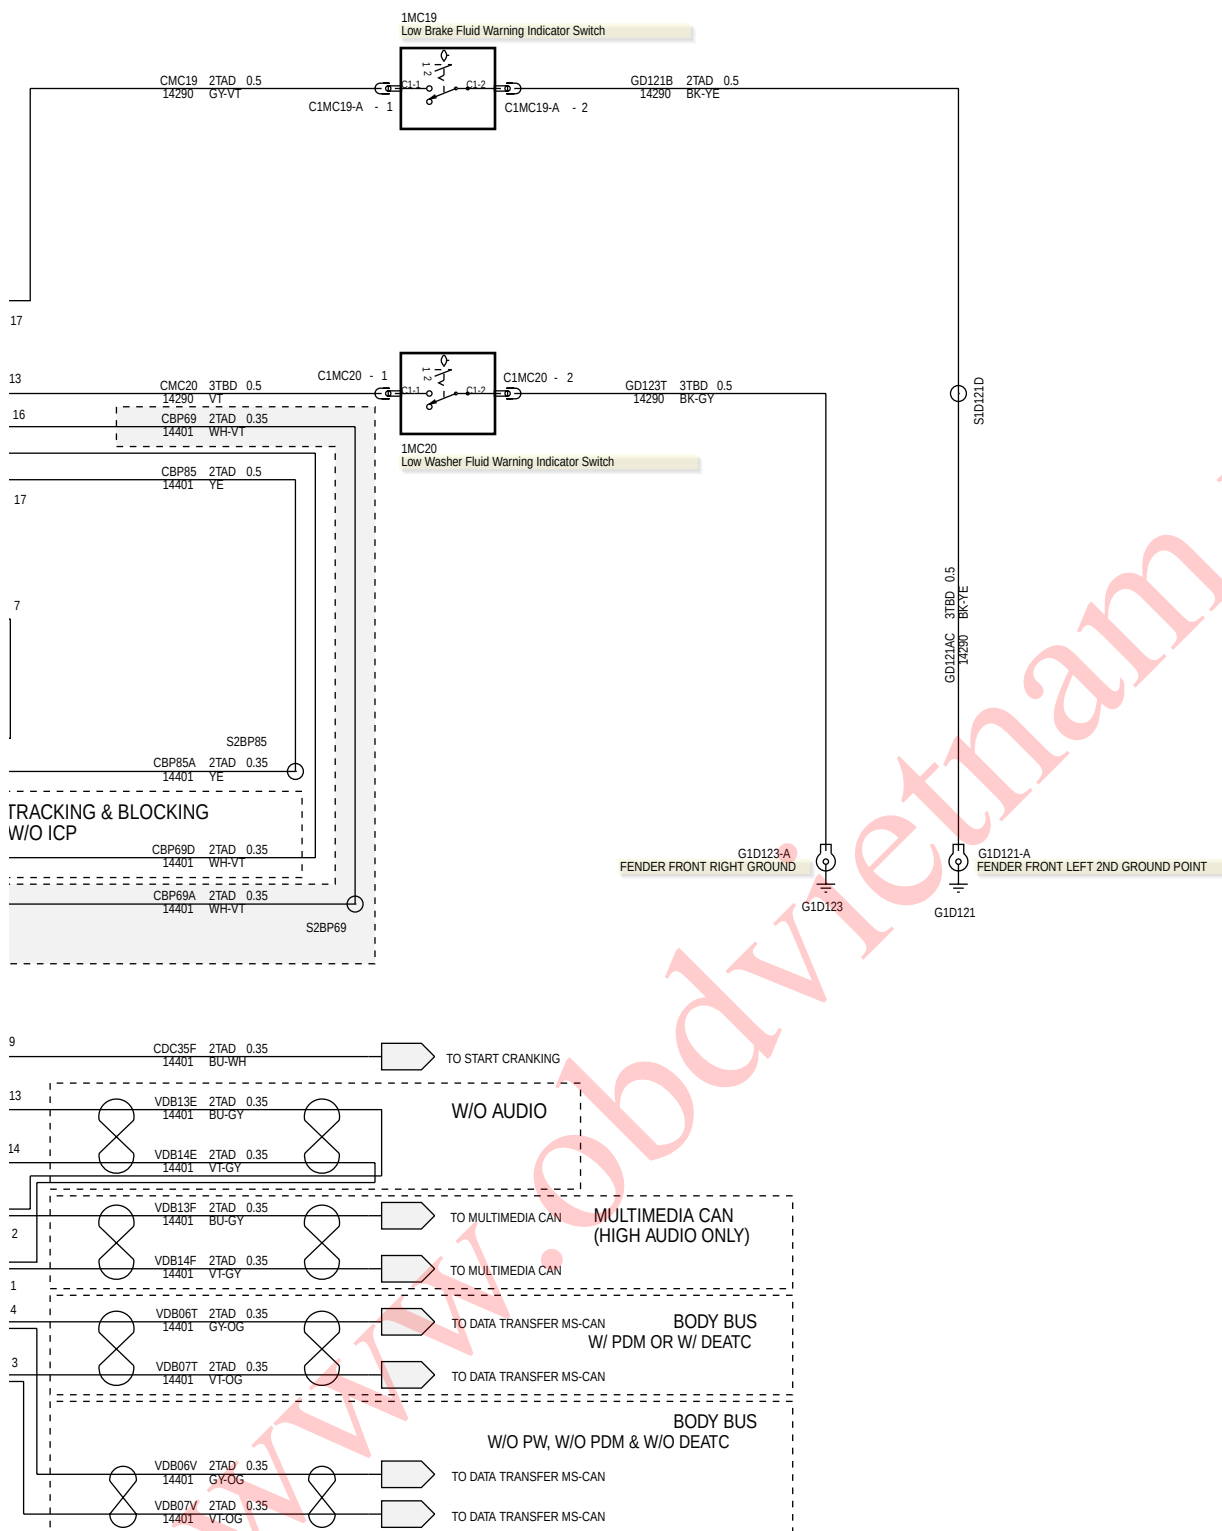


413-01-5 Instrument Cluster—RHD 4WD/RHD RWD

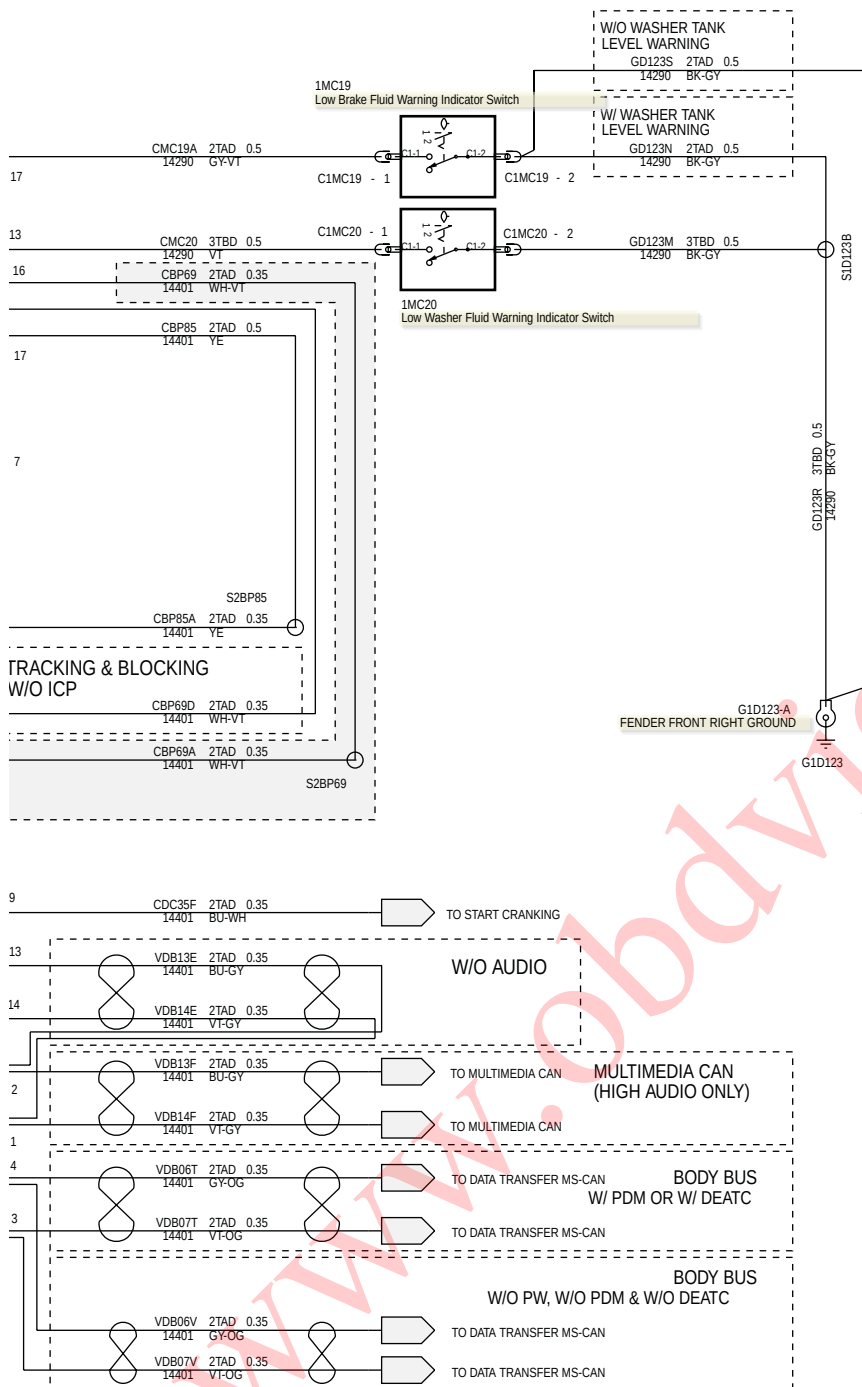

Instrument Cluster (G1404379)

PIN 1 => VDB14F VT-GY 0.35 2TAD + VDB14E VT-GY 0.35 2TAD
PIN 2 => VDB13F BU-GY 0.35 2TAD + VDB13E BU-GY 0.35 2TAD

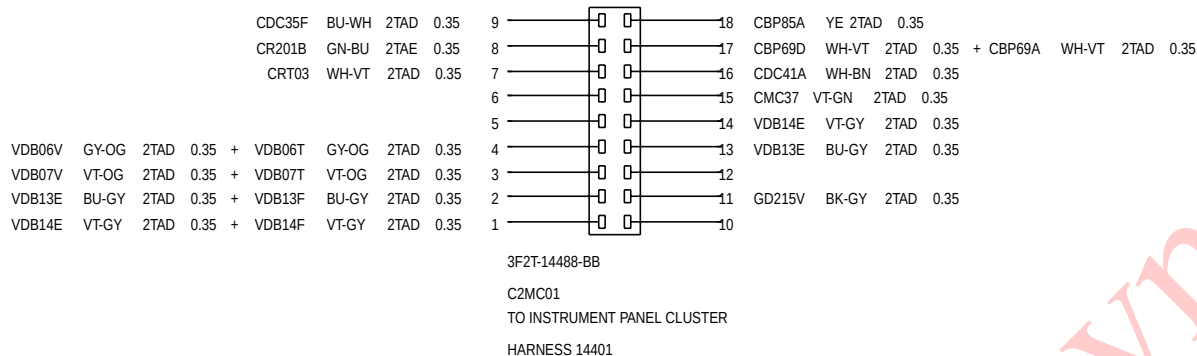

SECTION 413-06 Horn

VEHICLE APPLICATION: **2012.0 Ranger**

CONTENTS

PAGE

ELECTRICAL SCHEMATICS


Horn..... 413-06-2

ELECTRICAL CONNECTORS


Horn..... 413-06-4

Horn — A..... 413-06-4

413-06-2 Horn

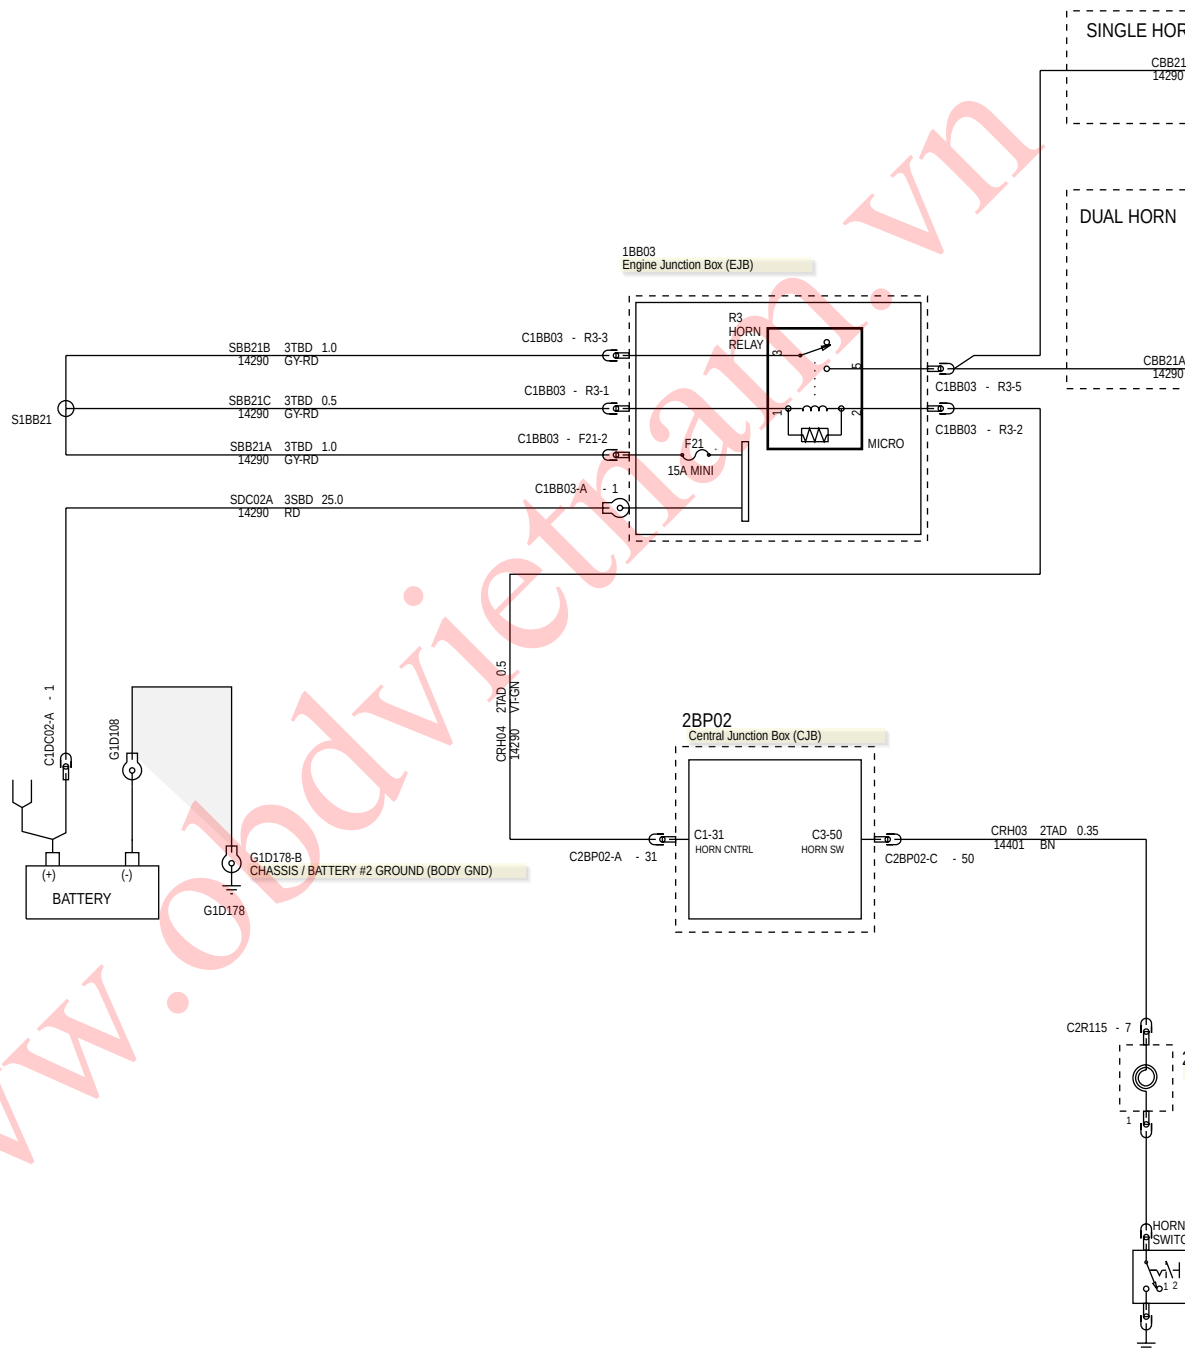


413-06-3 Horn

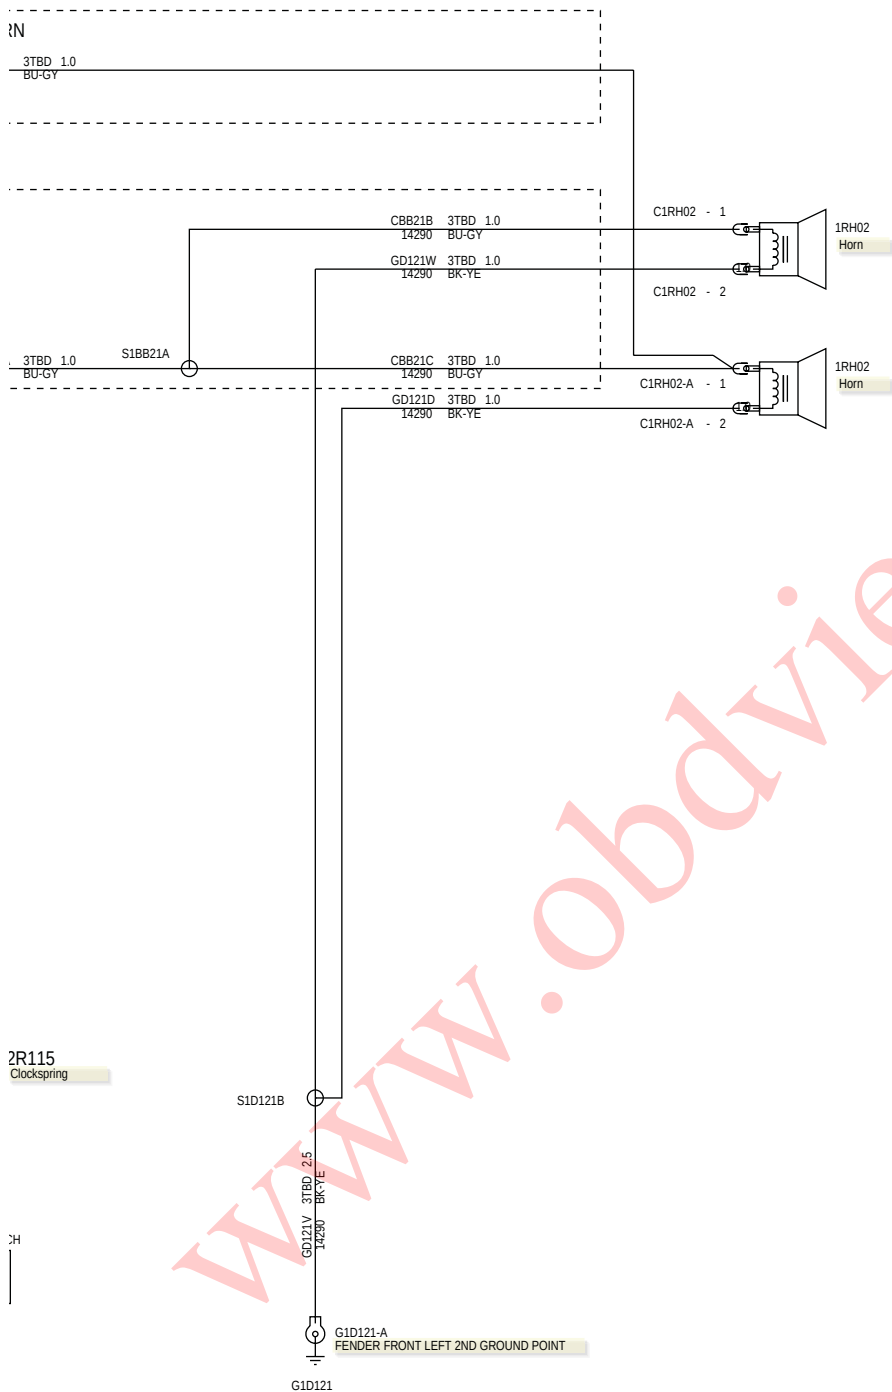

413-06-4

Horn (G1404384)

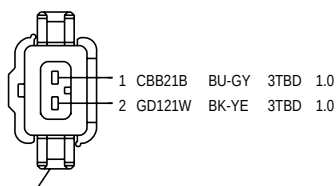


F6AB-14A464-HA

C1RH02

TO HORN RH

HARNESS 14290

Horn—A (G1404385)

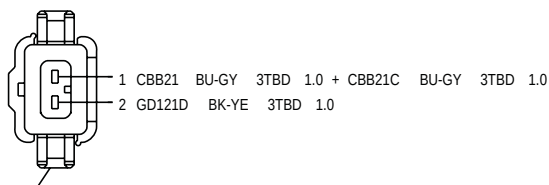

F6AB-14A464-HA

C1RH02-A

TO HORN LH


HARNESS 14290

SECTION 413-08 Information and Message Center


VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS	PAGE
ELECTRICAL SCHEMATICS	
Message Center — LHD 4WD/LHD RWD.....	413-08-2
Message Center — RHD 4WD/RHD RWD.....	413-08-4
ELECTRICAL CONNECTORS	
Message Center Module.....	413-08-6
Message Center Module — A.....	413-08-6
Message Center Module — B.....	413-08-6
Message Center Module — C.....	413-08-6
Message Center Module — D.....	413-08-6
Message Center Module — E.....	413-08-7
Message Center Module — F.....	413-08-7
Message Center Module — G.....	413-08-7
Message Center Module — H.....	413-08-7

413-08-2 Message Center—LHD 4WD/LHD RWD

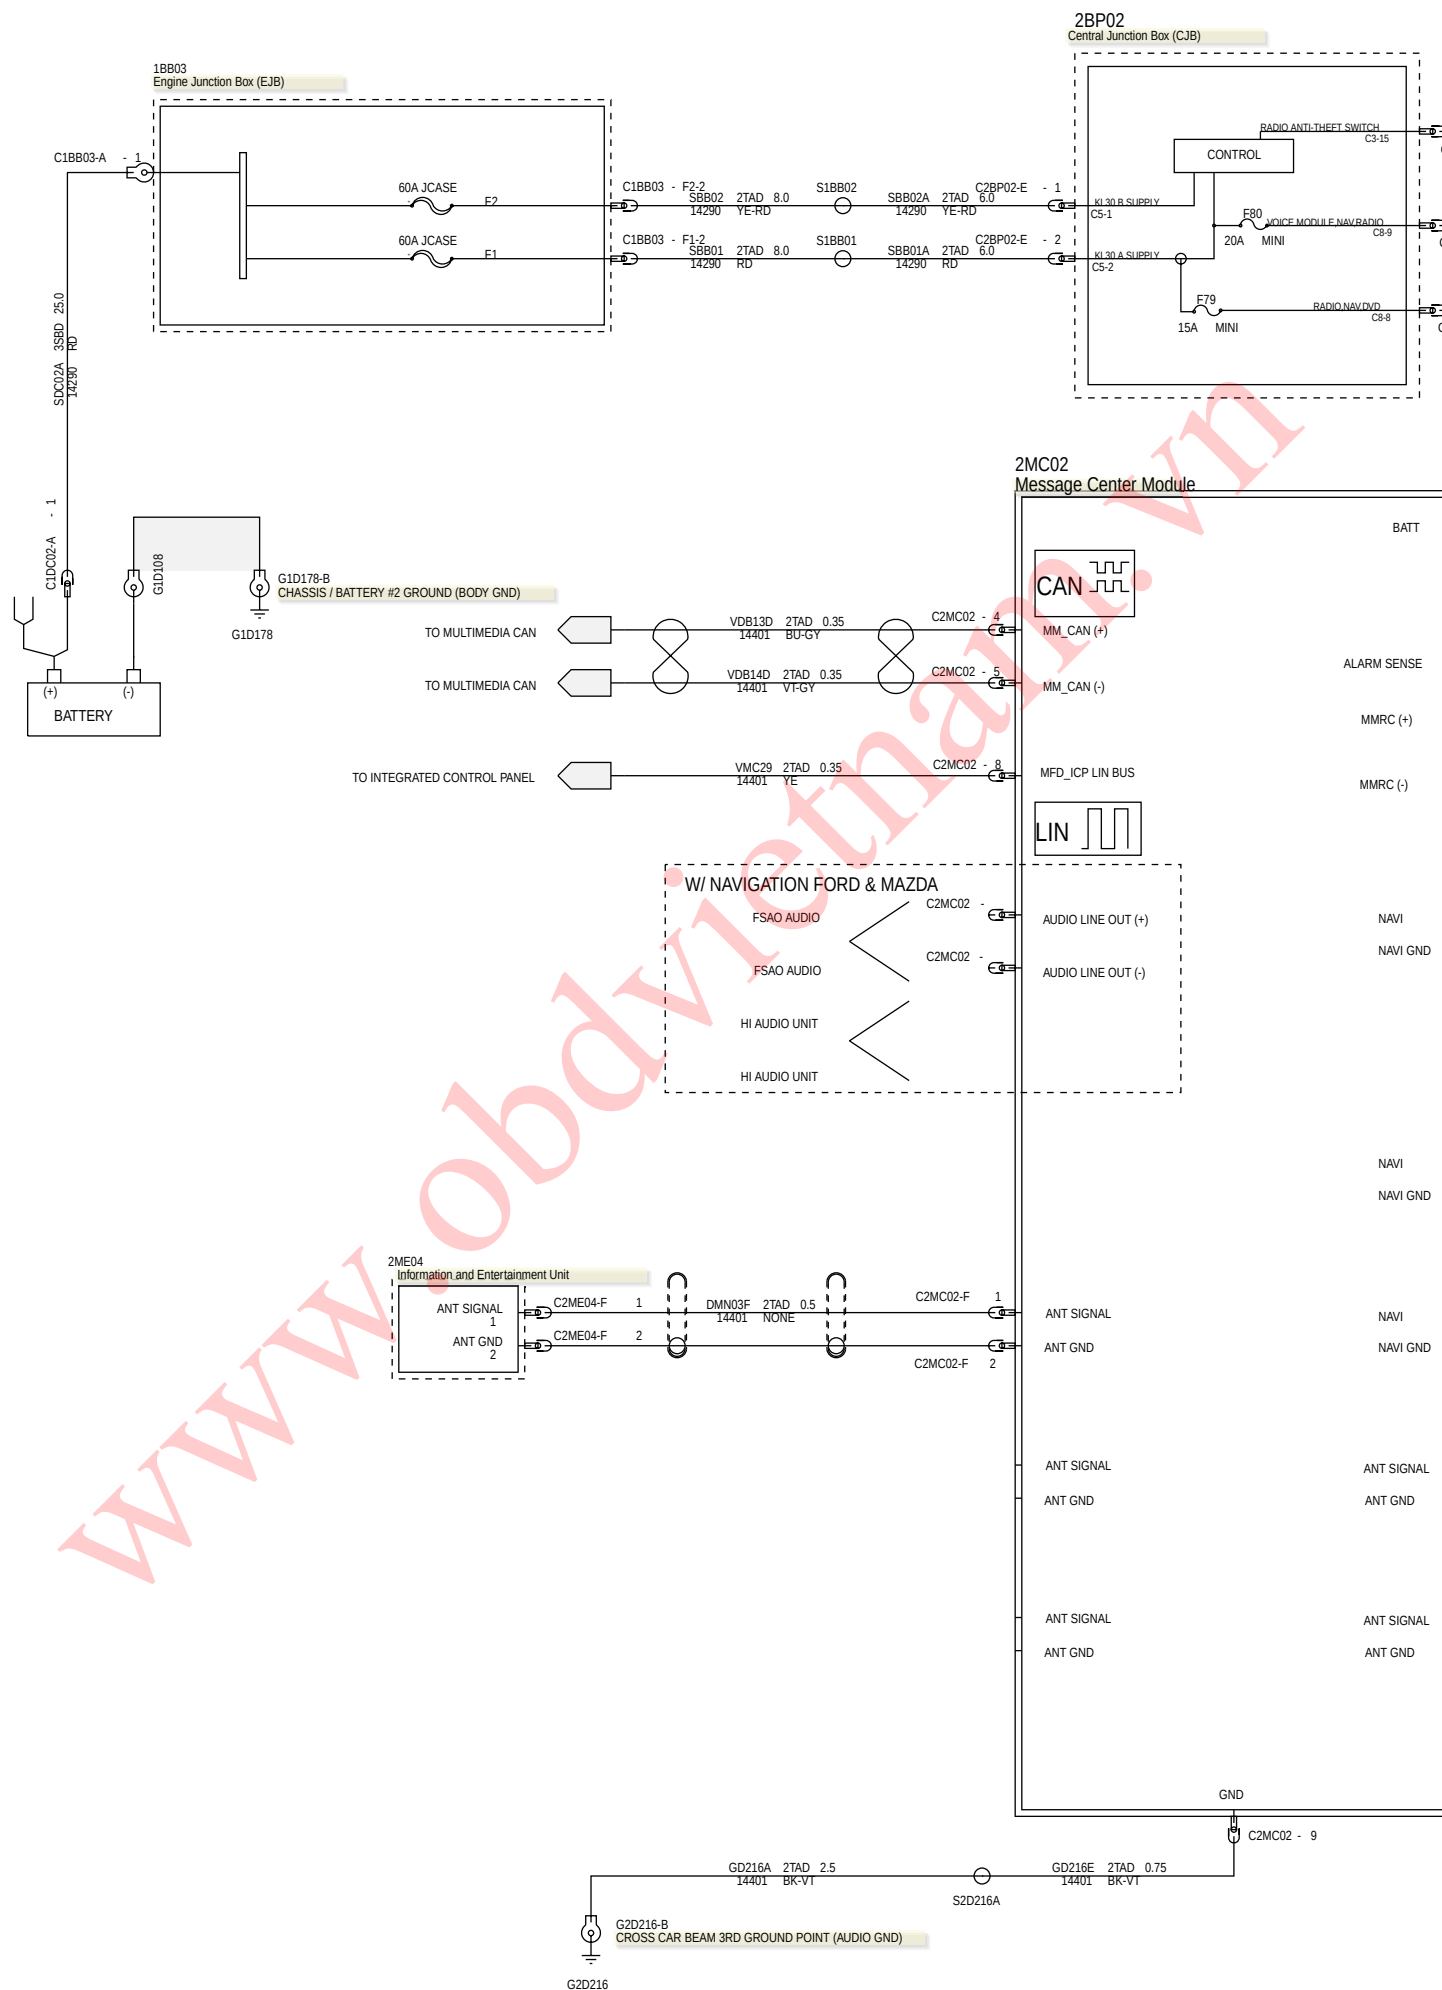


413-08-3 Message Center—LHD 4WD/LHD RWD

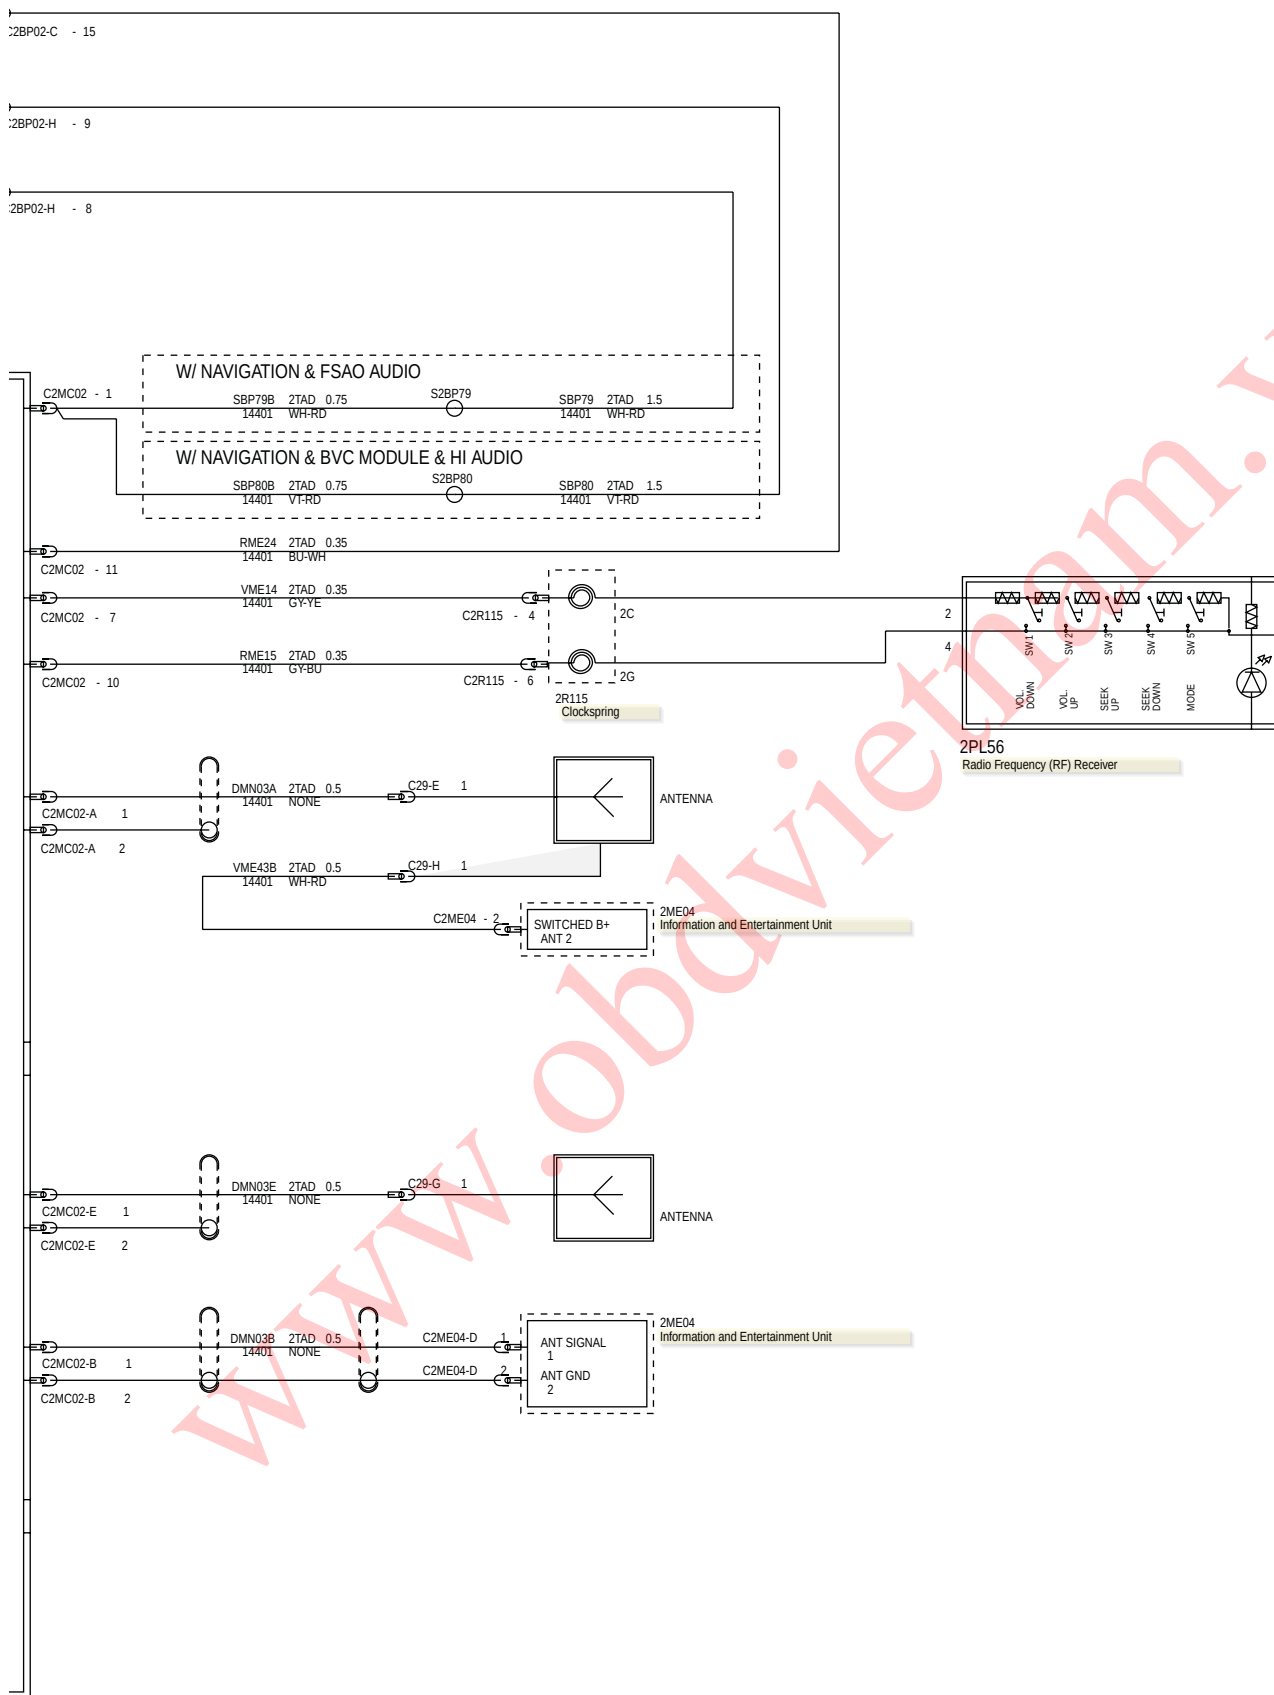


ZBF02
Central Junction Box (CJB)






413-08-6


Message Center Module (G1404400)

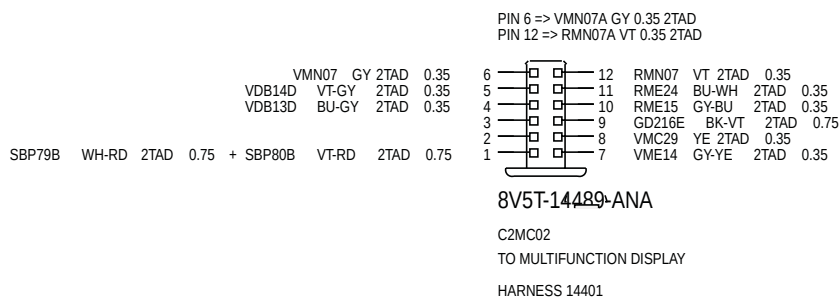


Message Center Module—A (G1404401)

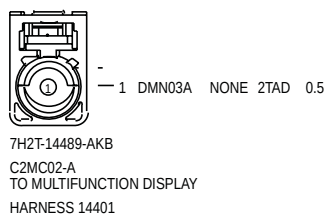


Message Center Module—B (G1404402)

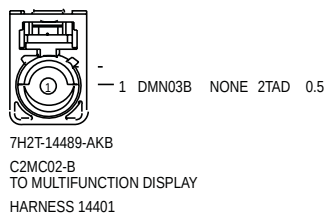


Message Center Module—C (G1404403)

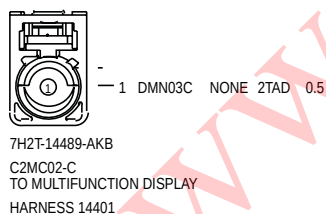

Message Center Module—D (G1404404)

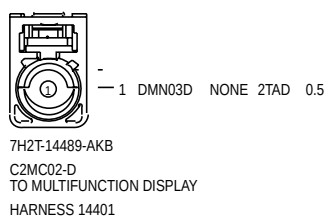


Message Center Module—E (G1404405)



— 1 DMN03E NONE 2TAD 0.5

7H2T-14489-AKB
C2MC02-E
TO MULTIFUNCTION DISPLAY
HARNESS 14401


Message Center Module—F (G1404406)



— 1 DMN03F NONE 2TAD 0.5

7H2T-14489-AKB
C2MC02-F
TO MULTIFUNCTION DISPLAY
HARNESS 14401


Message Center Module—G (G1404407)



— 1 DMN03G NONE 2TAD 0.5

7H2T-14489-AKB
C2MC02-G
TO MULTIFUNCTION DISPLAY
HARNESS 14401

Message Center Module—H (G1404408)



— 1 DMN03H NONE 2TAD 0.5

7H2T-14489-AKB
C2MC02-H
TO MULTIFUNCTION DISPLAY
HARNESS 14401

SECTION 413-09 Warning Devices

VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS

PAGE

ELECTRICAL CONNECTORS

Low Washer Fluid Warning Indicator Switch.....	413-09-2
--	----------

www.obdviethnam.vn

413-09-2

Low Washer Fluid Warning Indicator Switch (G1404410)



12158214
C1MC20
TO WASHER FLUID LEVEL SWITCH
HARNESS 14290

SECTION 413-13 Parking Aid

VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS

PAGE


ELECTRICAL SCHEMATICS

Parking Aid — LHD 4WD/LHD RWD, Vehicles With: Parking Aid Camera.....	413-13-2
Parking Aid — LHD 4WD/LHD RWD, Vehicles Without: Parking Aid Camera.....	413-13-4
Parking Aid — RHD 4WD/RHD RWD, Vehicles With: Parking Aid Camera.....	413-13-6
Parking Aid — RHD 4WD/RHD RWD, Vehicles Without: Parking Aid Camera.....	413-13-8


ELECTRICAL CONNECTORS

Parking Aid Module.....	413-13-10
Parking Aid Module — A.....	413-13-10
Rear Inner Parking Aid Sensor LH/Center.....	413-13-10
Rear Inner Parking Aid Sensor RH.....	413-13-10
Rear Outer Parking Aid Sensor LH.....	413-13-10
Rear Outer Parking Aid Sensor RH.....	413-13-11
Rear Parking Aid Camera.....	413-13-11


413-13-2 Parking Aid—LHD 4WD/LHD RWD, Vehicles With: Parking Aid Camera

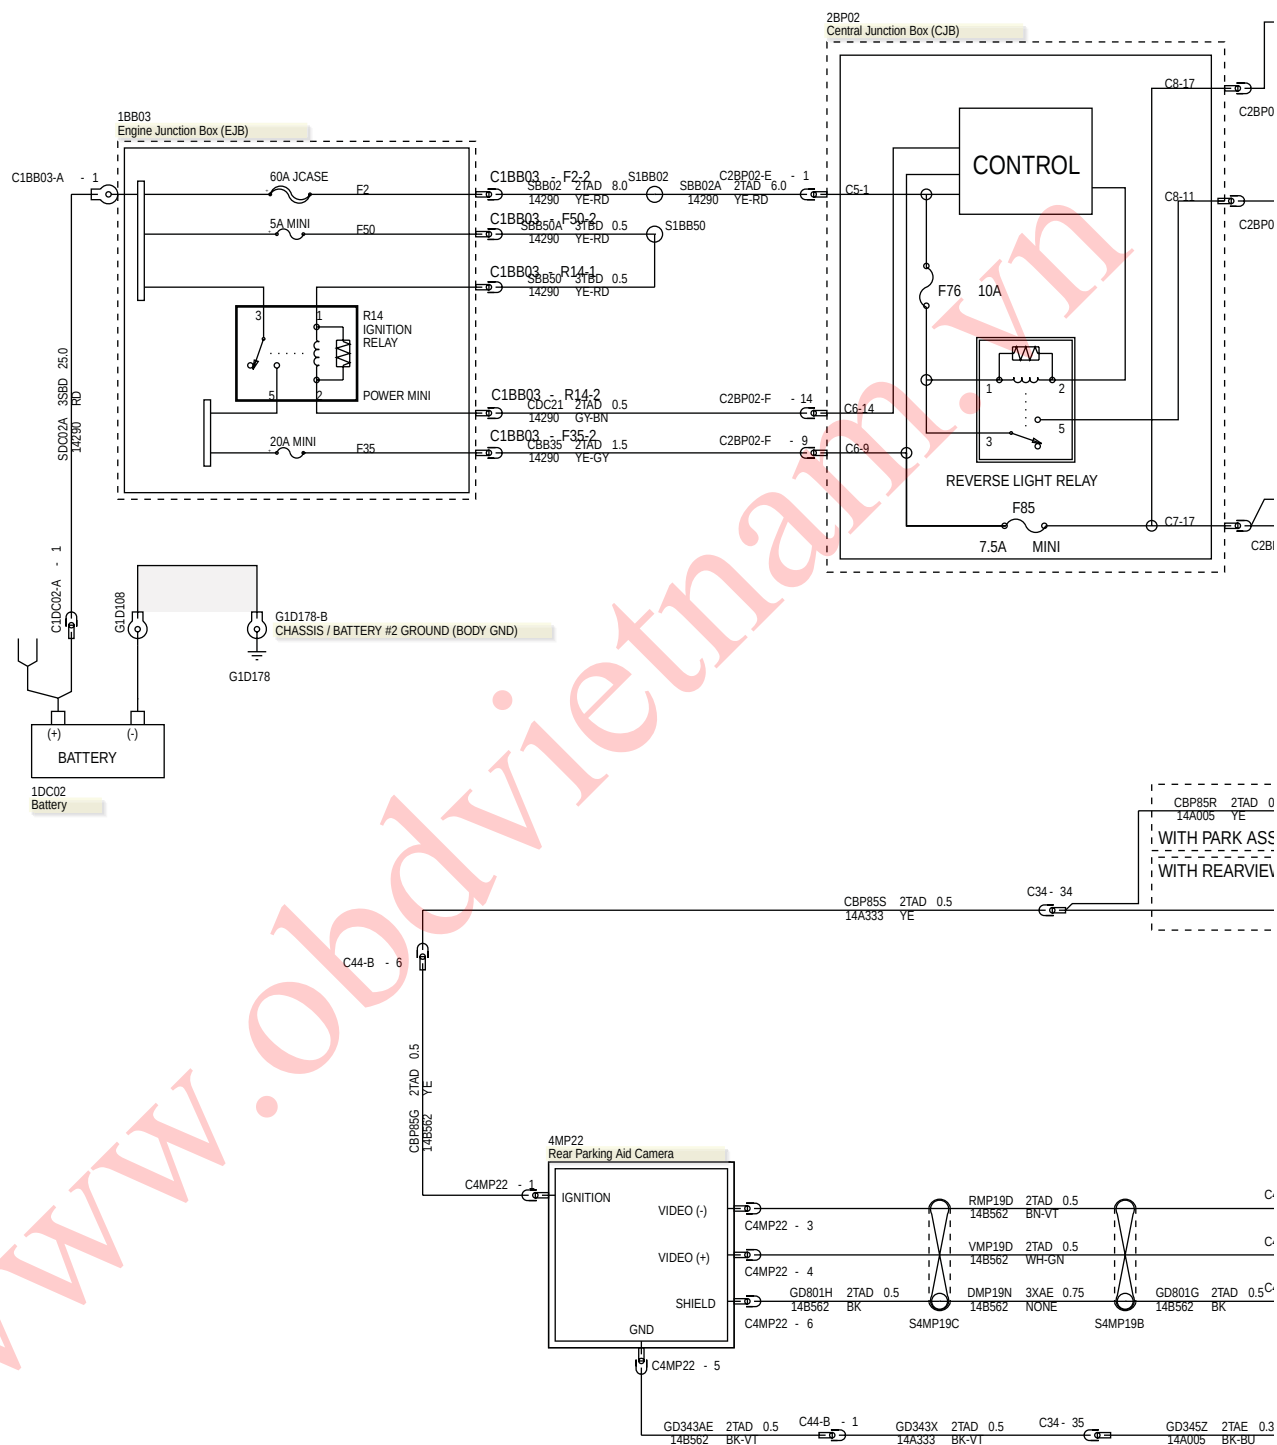


413-13-3 Parking Aid—LHD 4WD/LHD RWD, Vehicles With: Parking Aid Camera

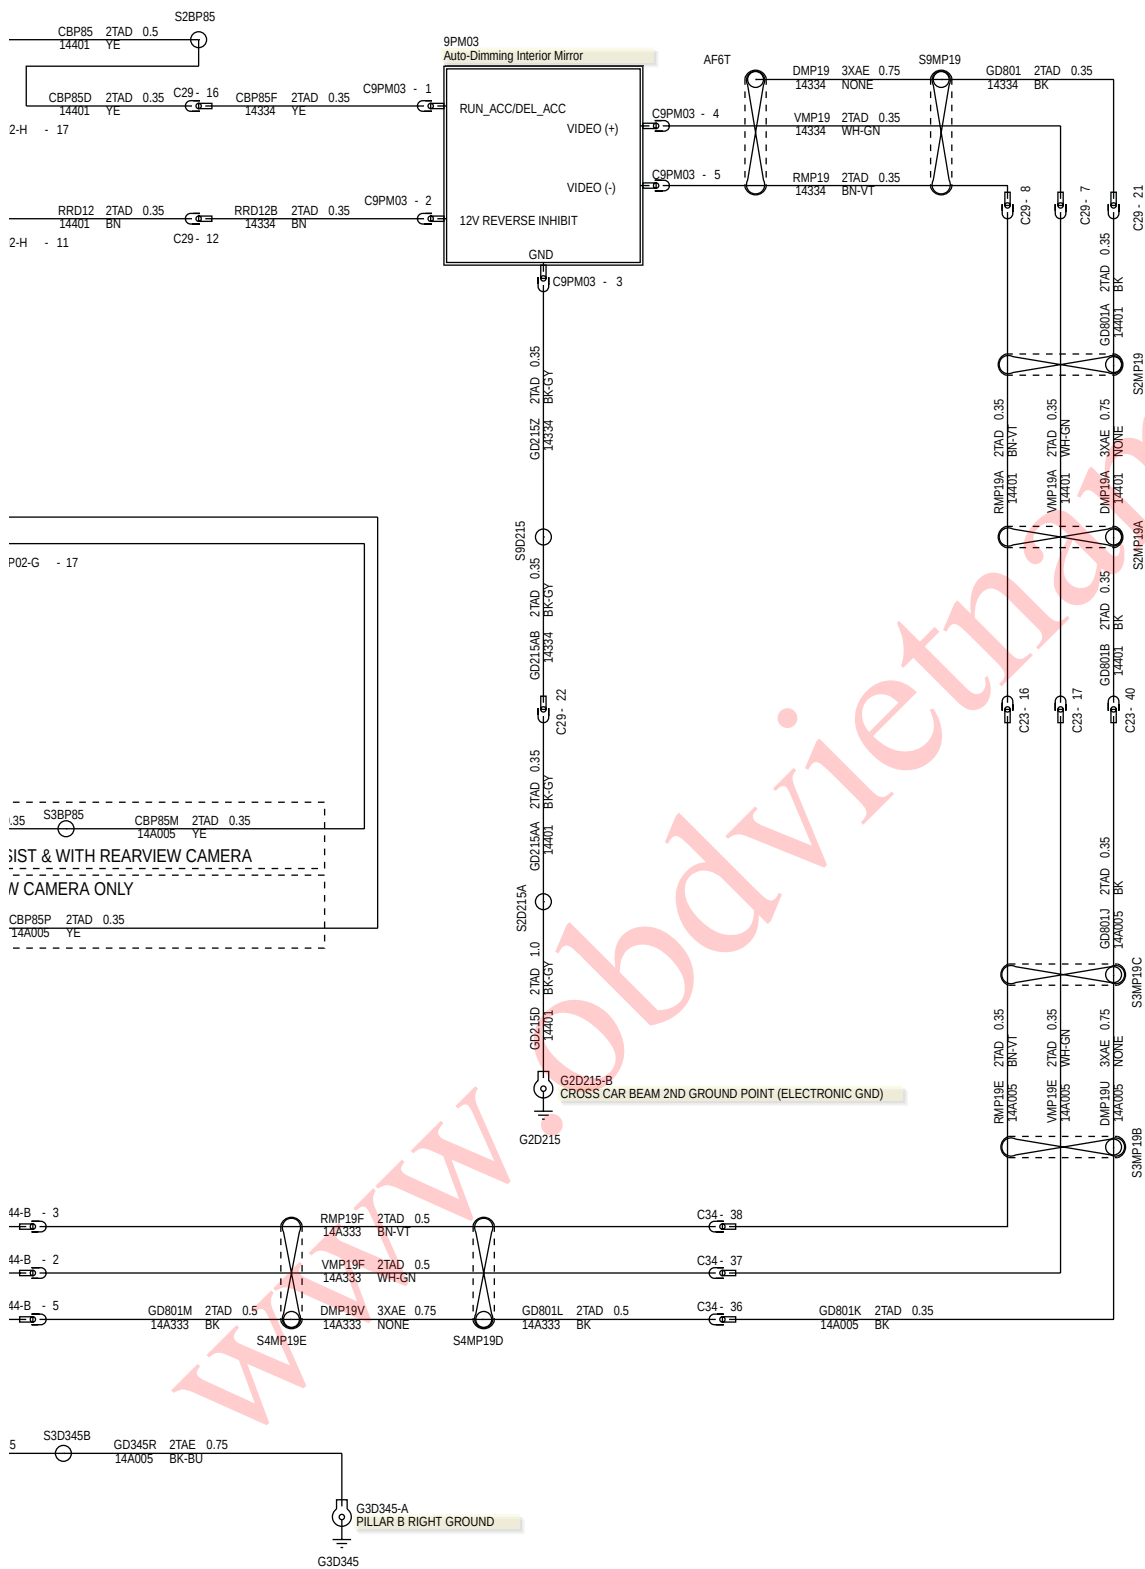


413-13-4 Parking Aid—LHD 4WD/LHD RWD, Vehicles Without: Parking Aid Camera

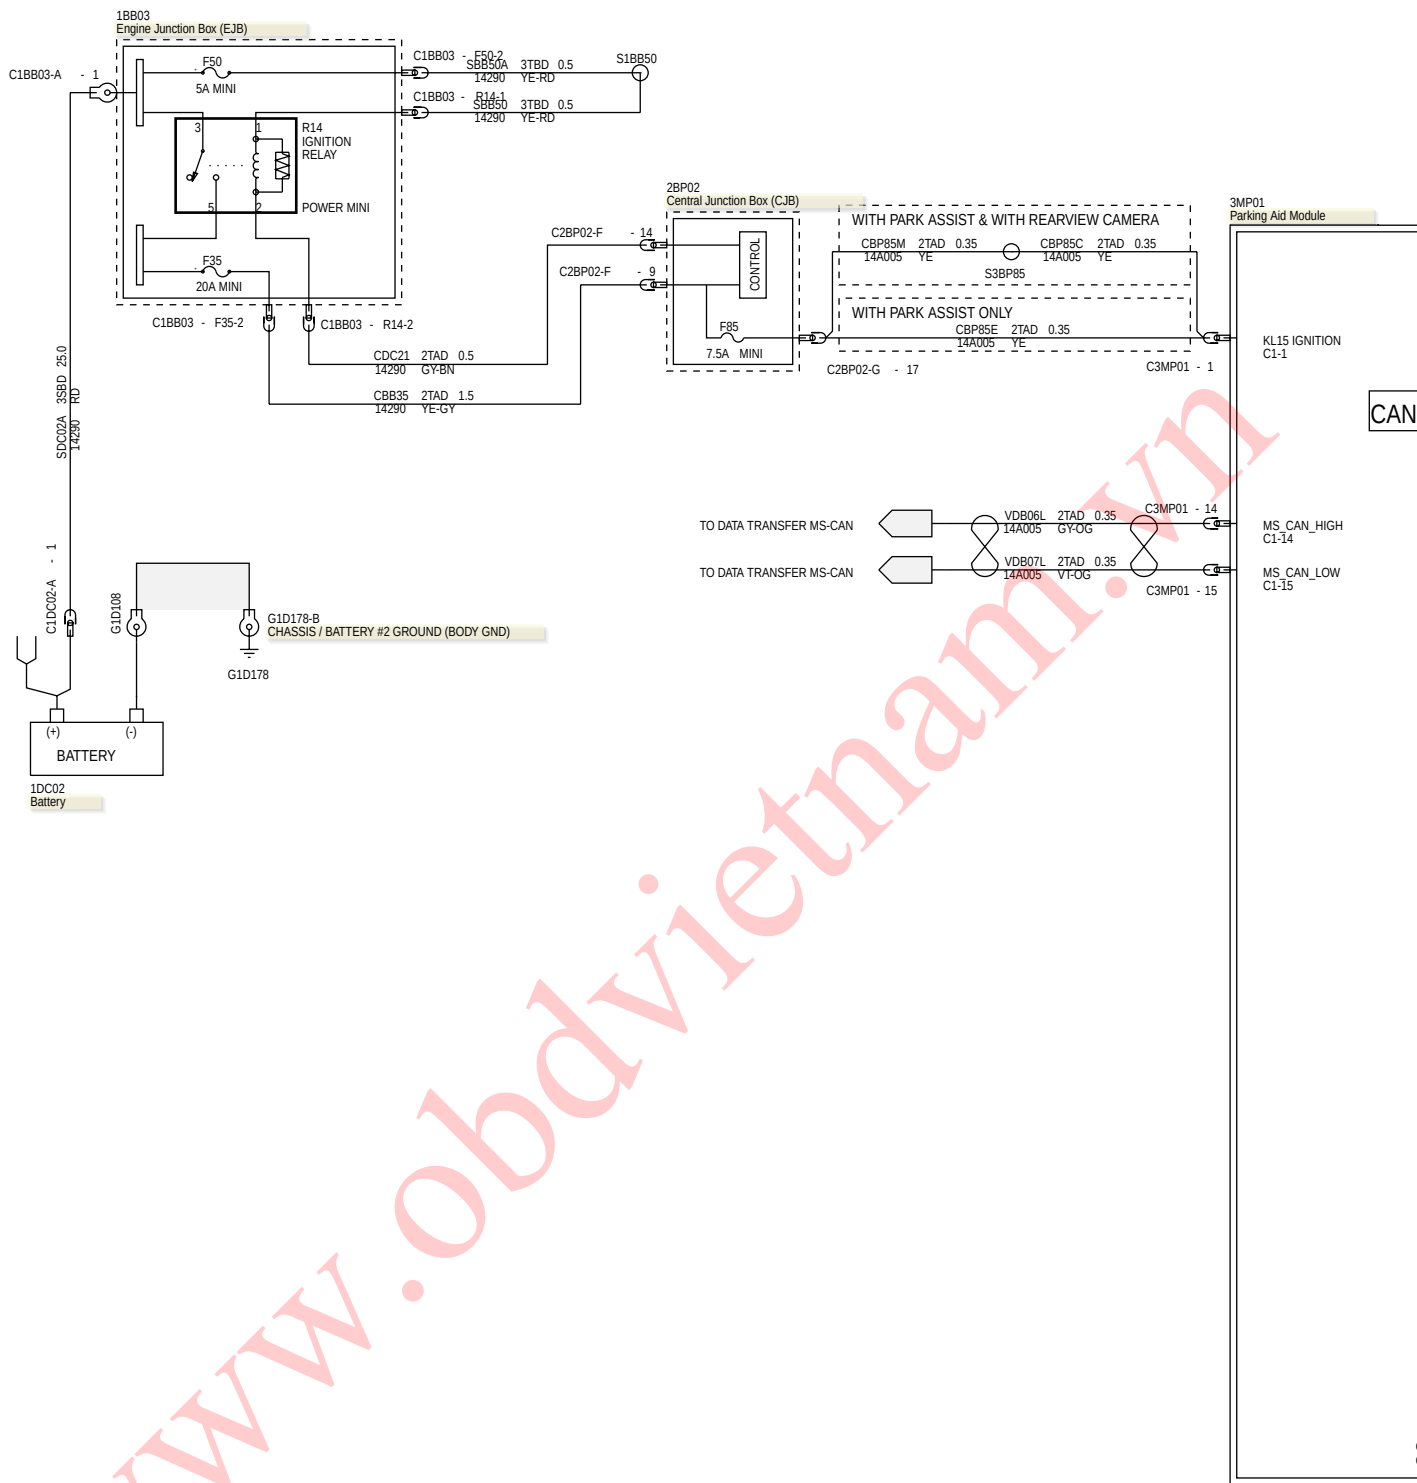

413-13-5 Parking Aid—LHD 4WD/LHD RWD, Vehicles Without: Parking Aid Camera

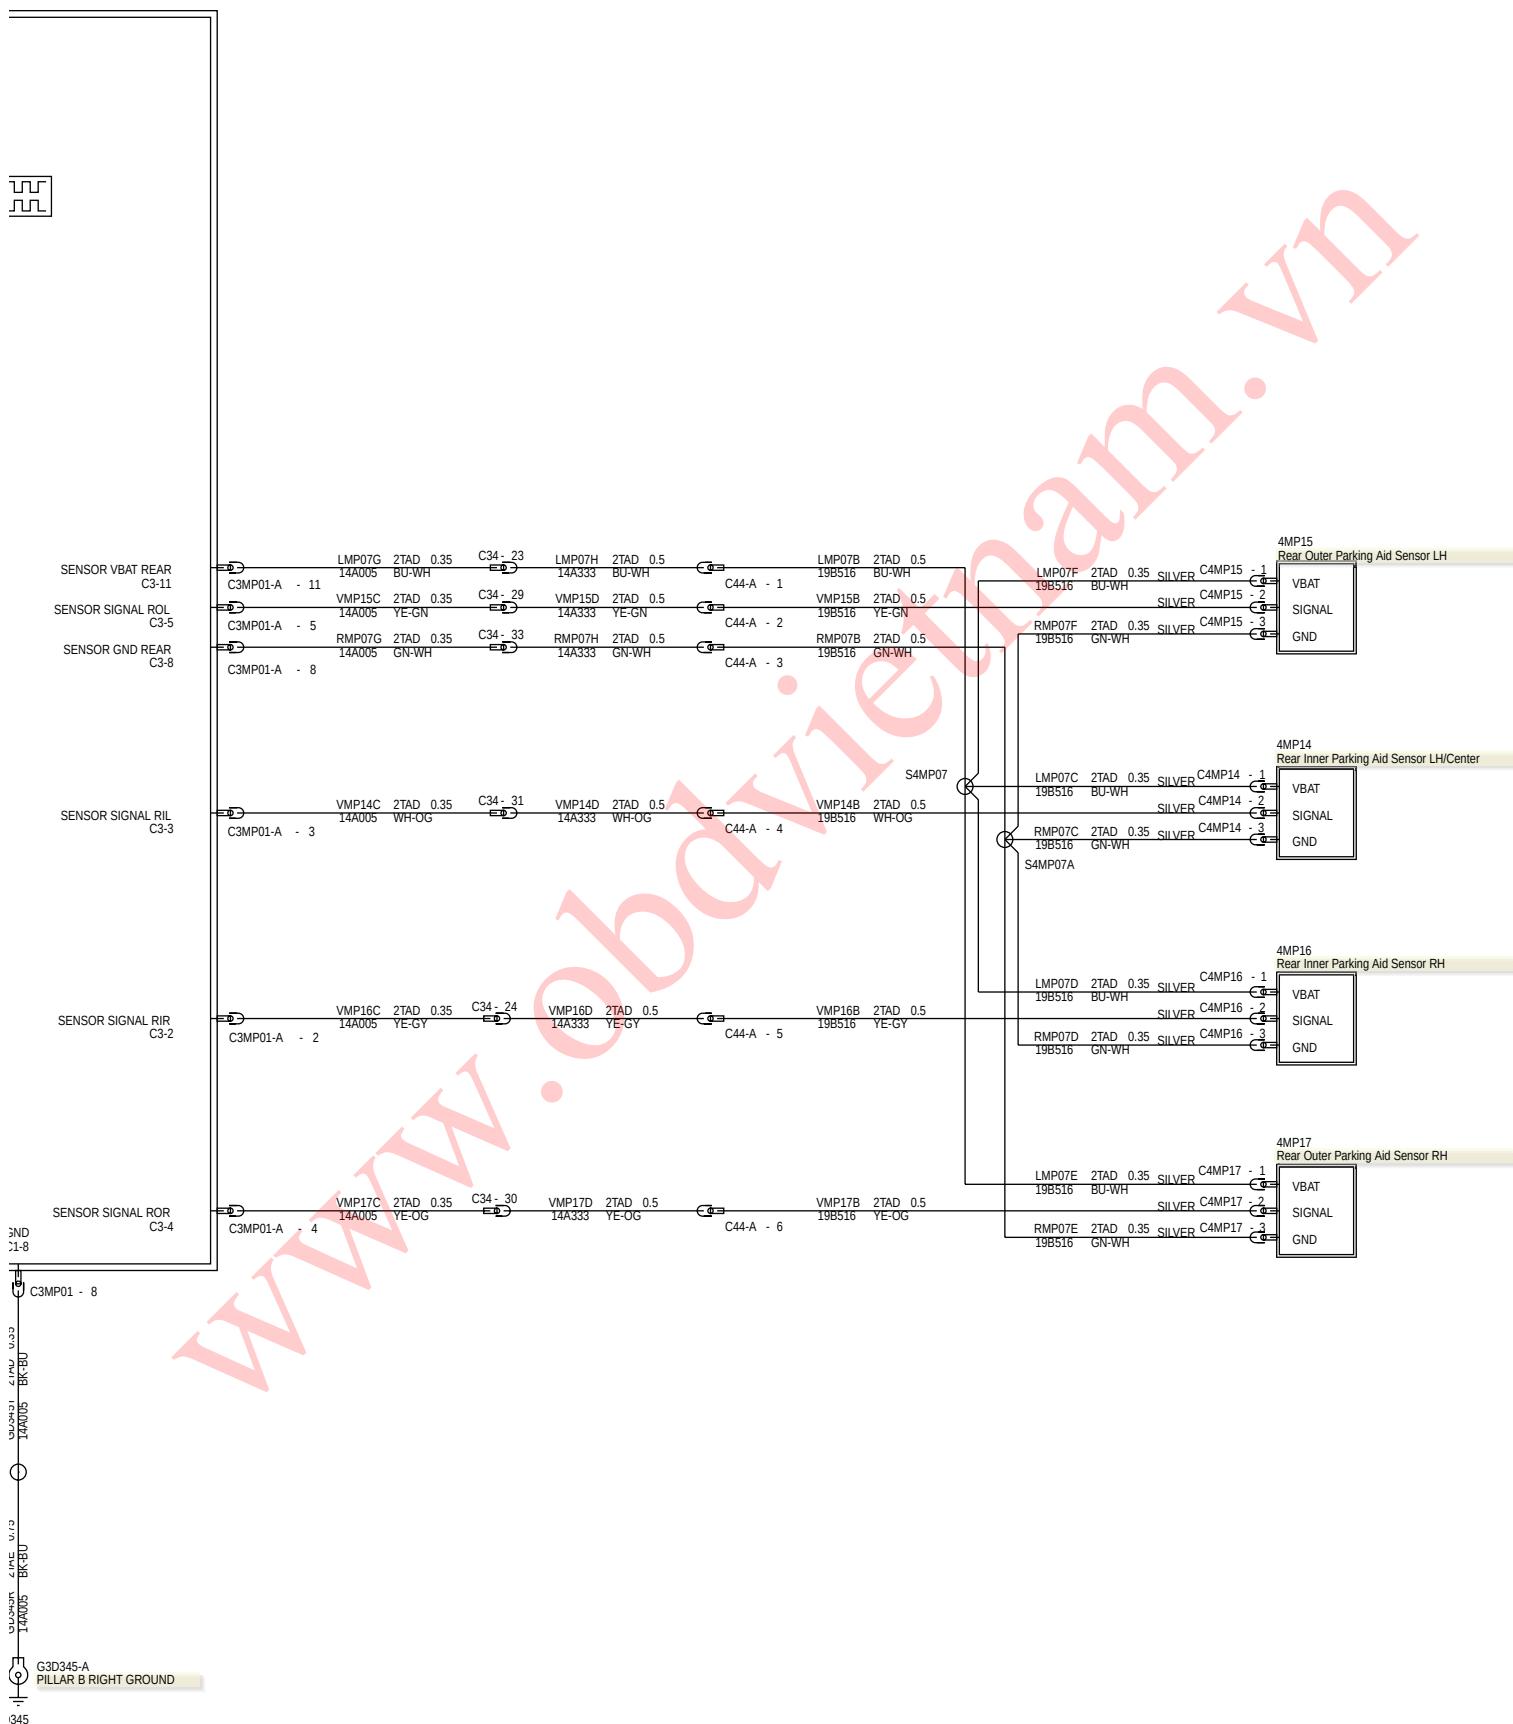


413-13-6 Parking Aid—RHD 4WD/RHD RWD, Vehicles With: Parking Aid Camera

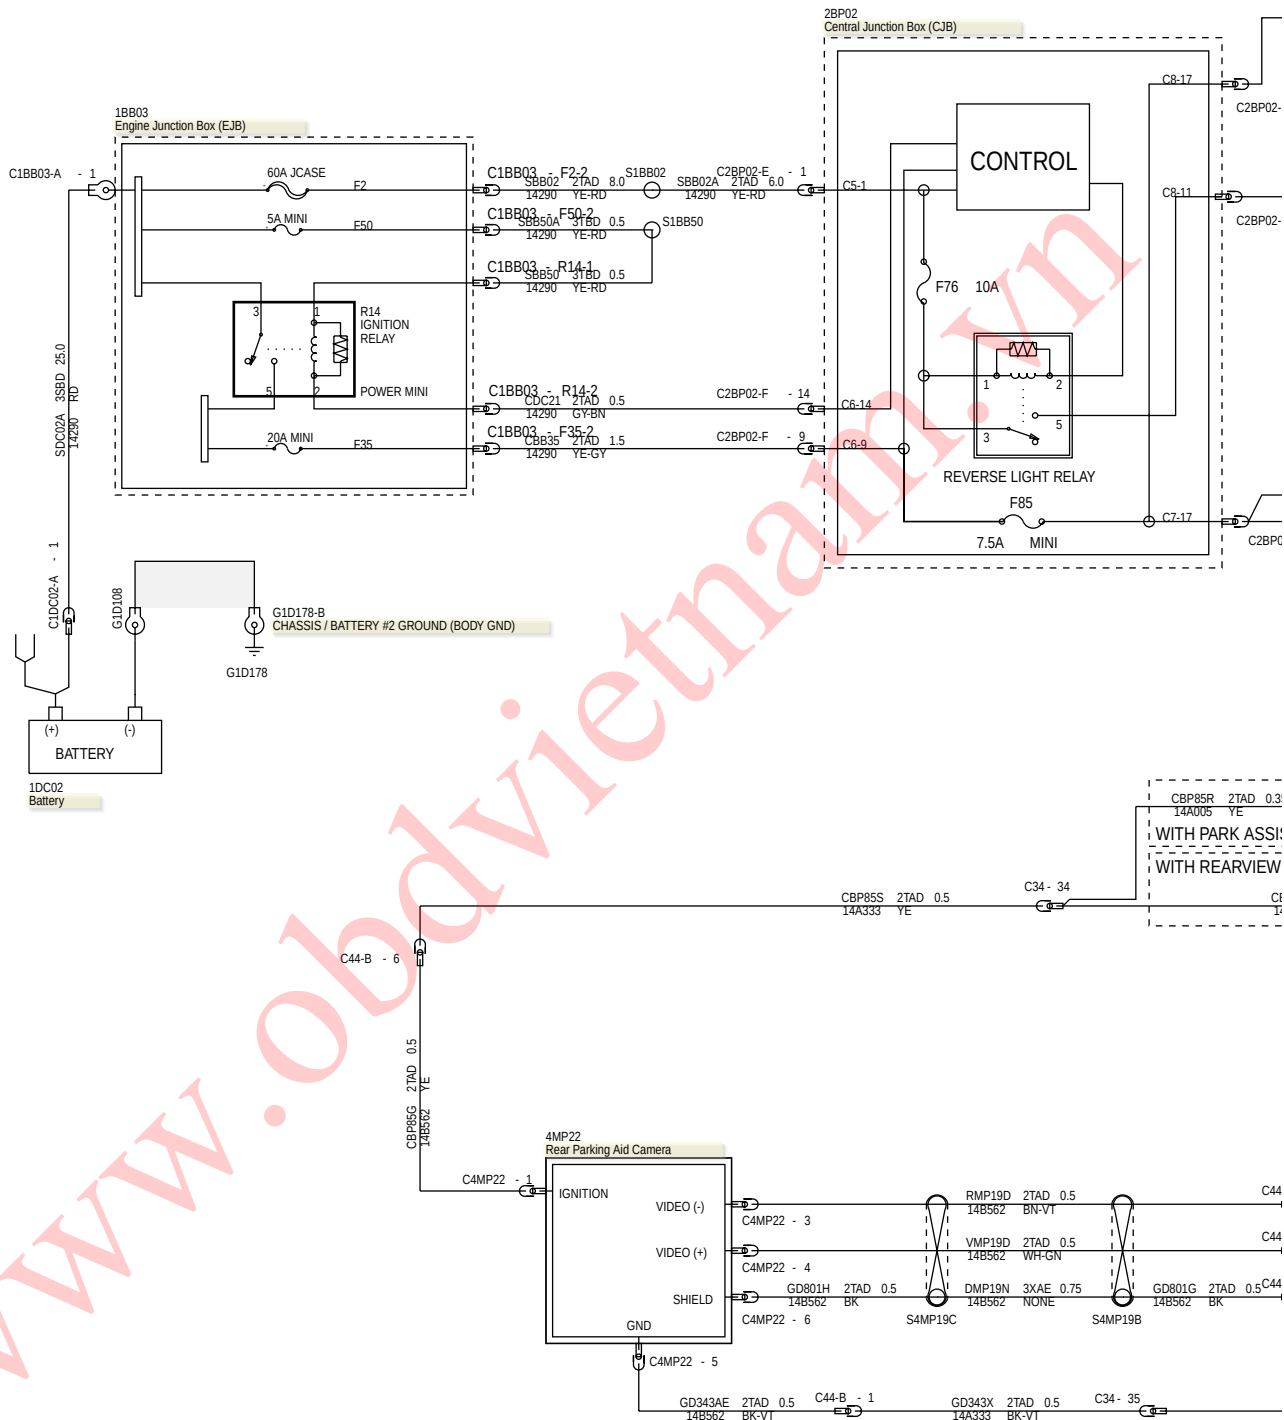




413-13-8 Parking Aid—RHD 4WD/RHD RWD, Vehicles Without: Parking Aid Camera

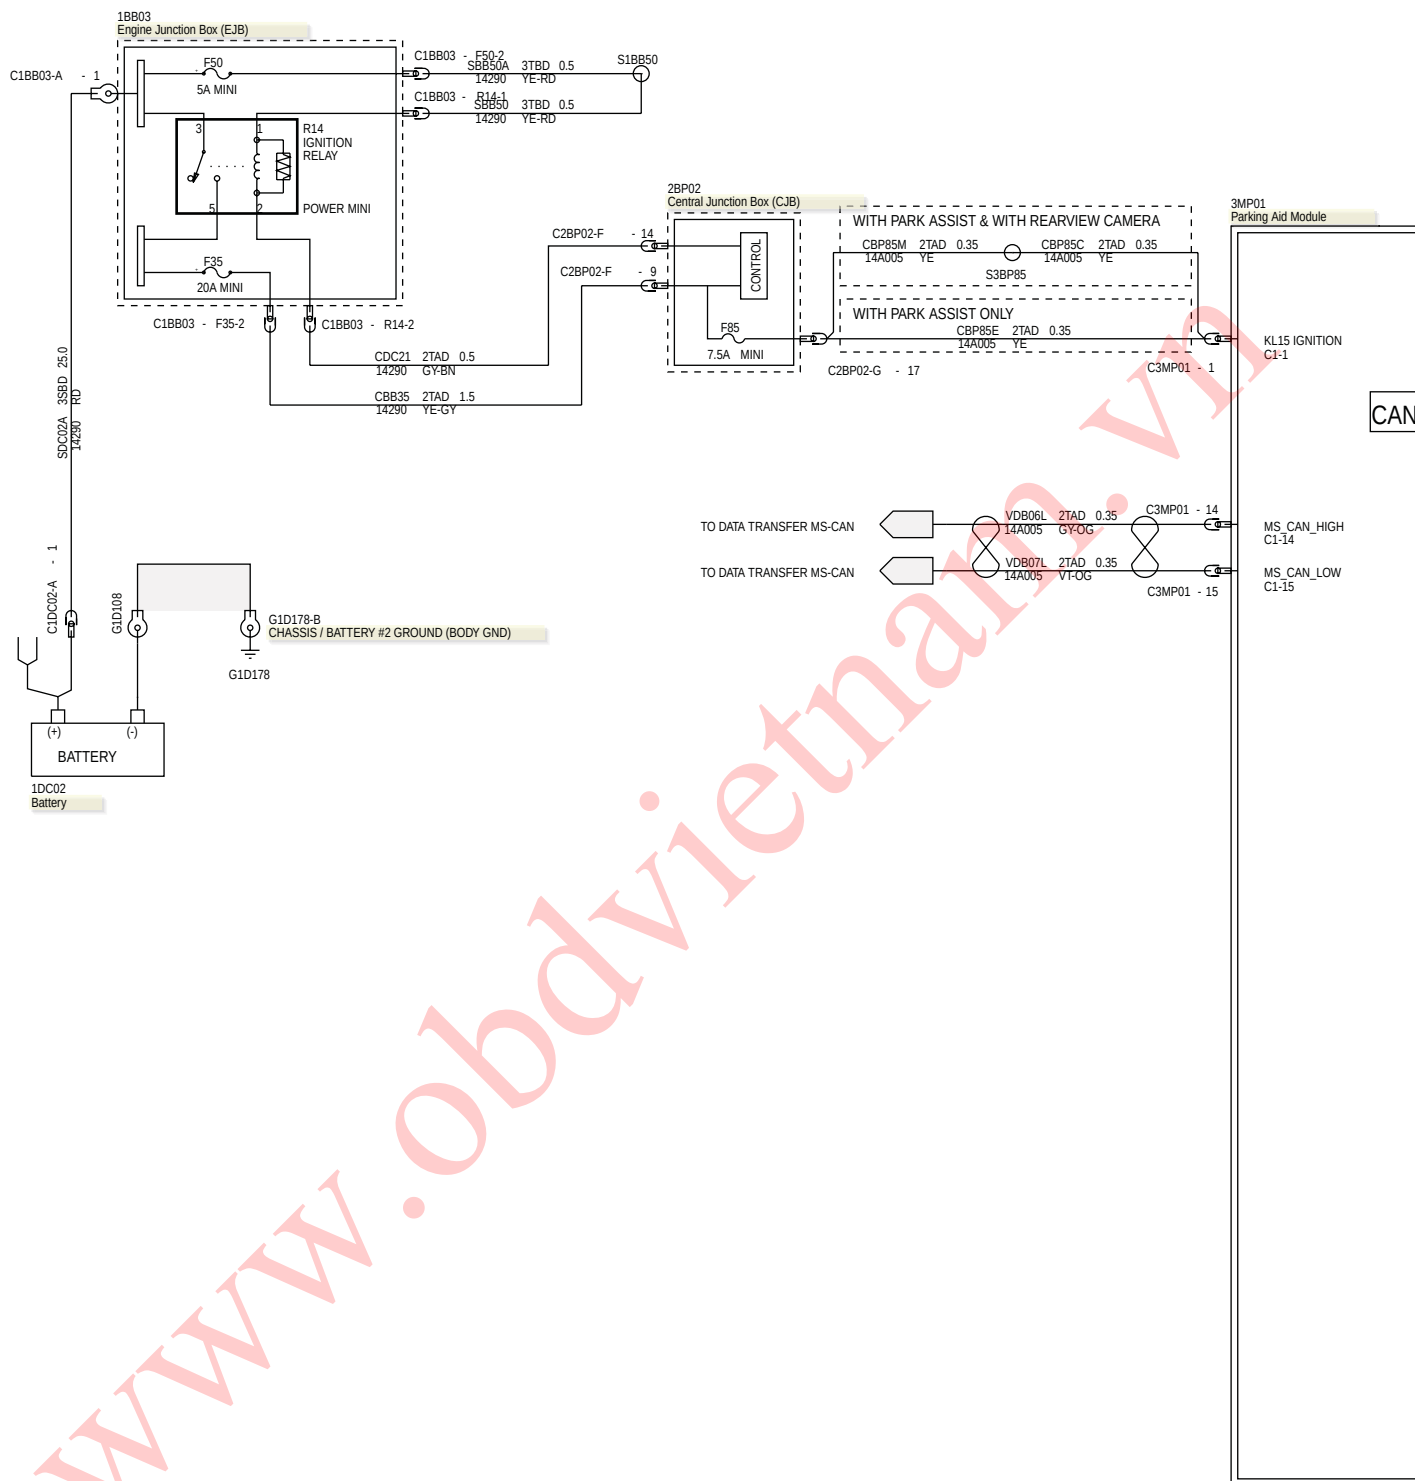

413-13-9 Parking Aid—RHD 4WD/RHD RWD, Vehicles Without: Parking Aid Camera

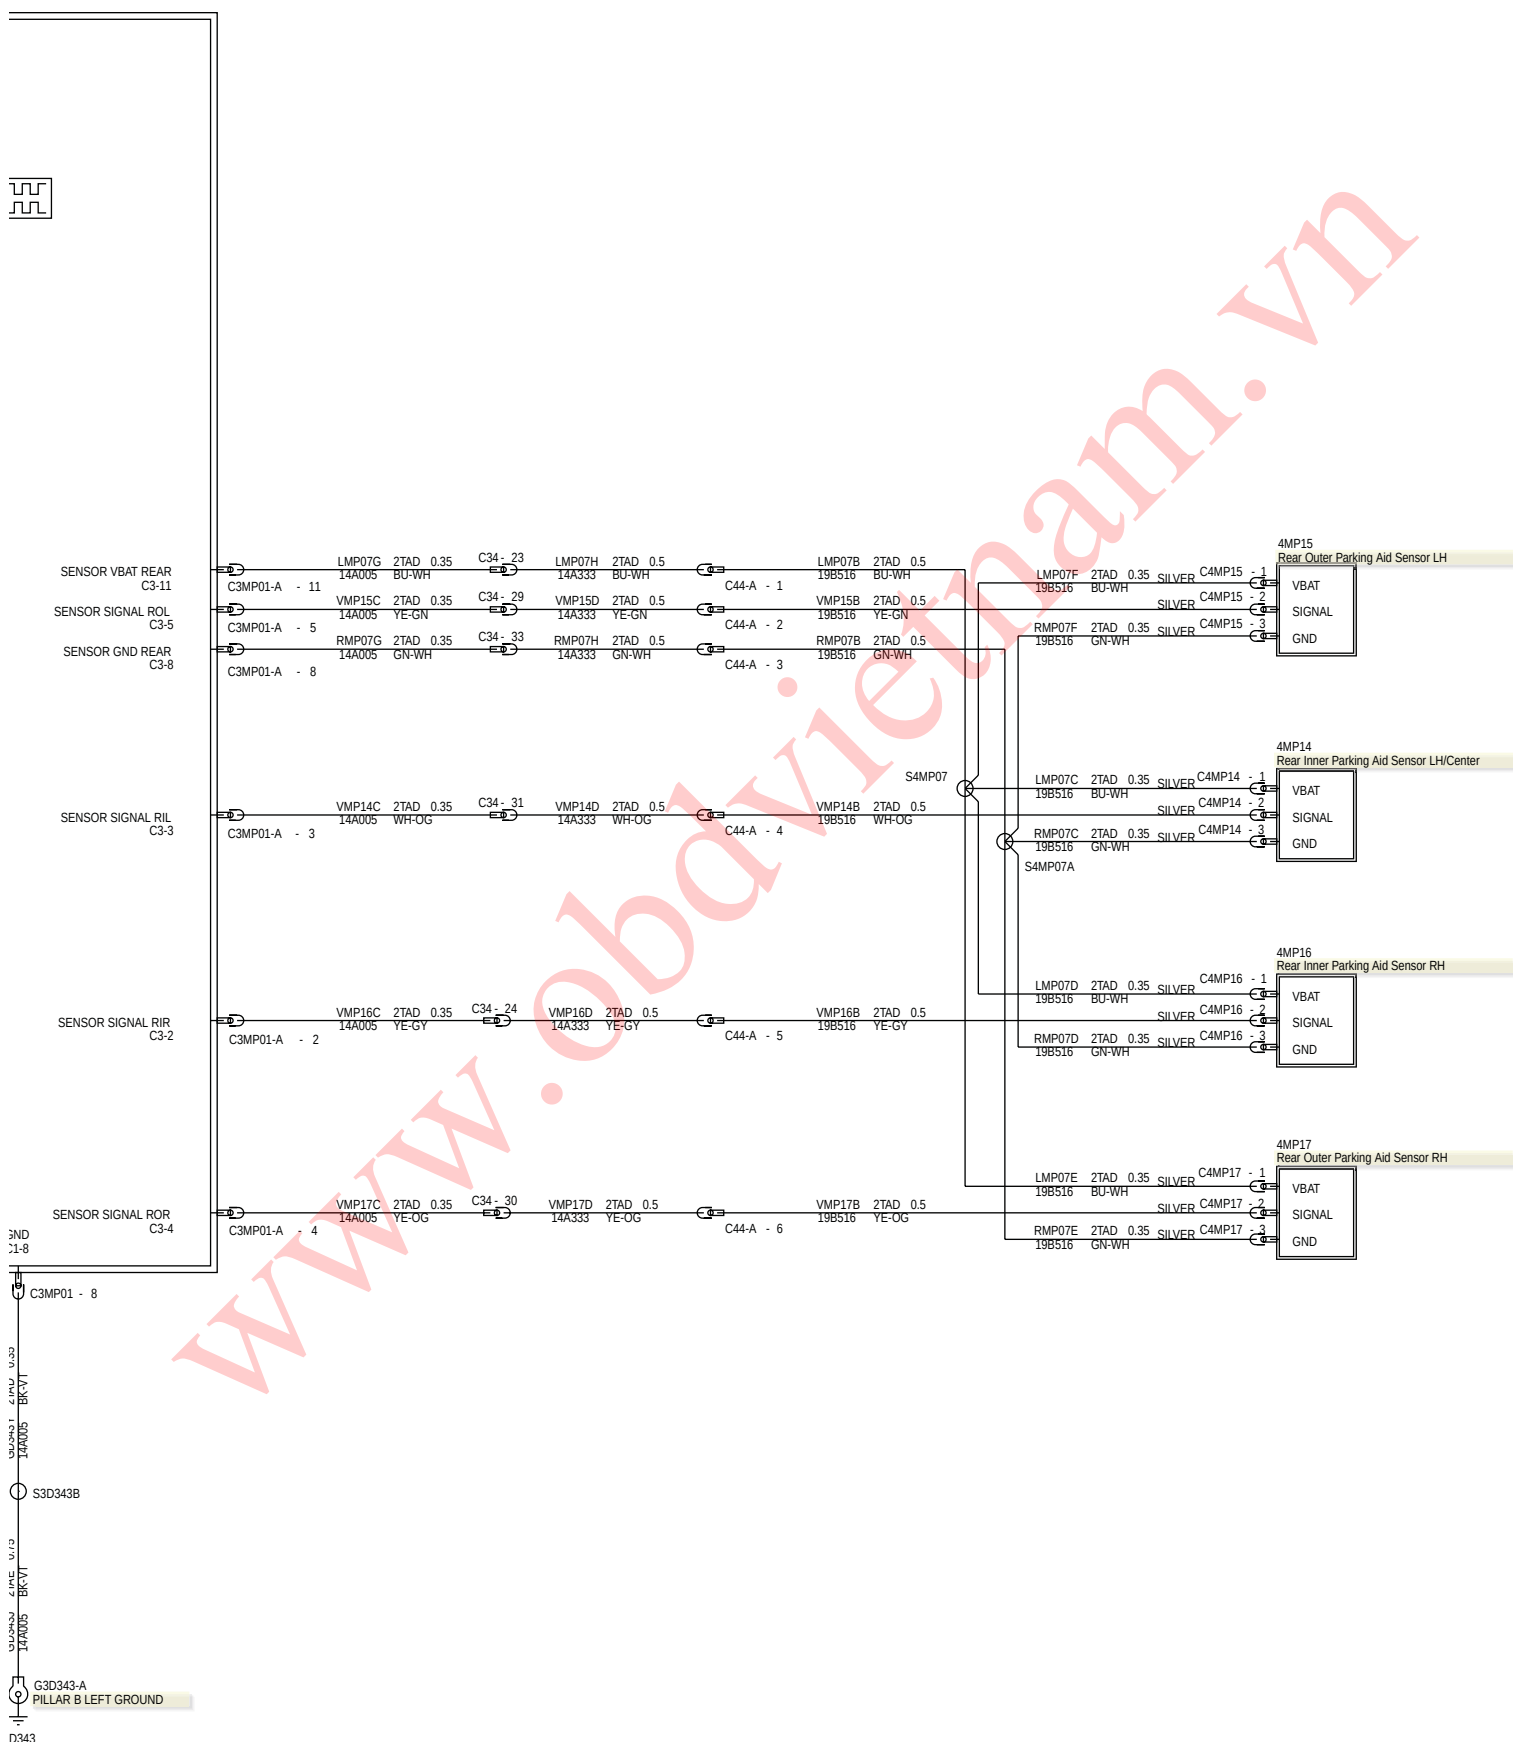


413-13-10

Parking Aid Module (G1405447)

PIN 8 => GD345T BK-BU 0.35 2TAD

CBP85C YE 2TAD 0.35 + CBP85E YE 2TAD 0.35

GD343Y BK-VT 2TAD 0.35 + GD345T BK-BU 2TAD 0.35

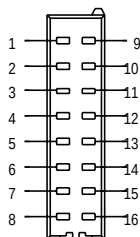

VDB06L GY-OG 2TAD 0.35
VDB07L VT-OG 2TAD 0.35

6G9T-14489-ASA

C3MP01

TO PARKING AID MODULE

HARNESS 14A005


Parking Aid Module—A (G1405448)

VMP16C YE-GY 2TAD 0.35 + VMP16 YE-GY 2TAD 0.5

VMP14C WH-OG 2TAD 0.35 + VMP14 WH-OG 2TAD 0.5

VMP17C YE-OG 2TAD 0.35 + VMP17 YE-OG 2TAD 0.5

VMP15C YE-GN 2TAD 0.35 + VMP15 YE-GN 2TAD 0.5

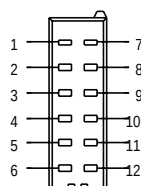

RMP07G GN-WH 2TAD 0.35 + RMP07 GN-WH 2TAD 0.5

LMP07G BU-WH 2TAD 0.35 + LMP07 BU-WH 2TAD 0.5

6G9T-14489-AMA

C3MP01-A

TO PARK AID MODULE CONNECTOR C

HARNESS 14A005

Rear Inner Parking Aid Sensor LH/Center (G1404416)



1 LMP07C BU-WH 2TAD 0.35 SILVER
2 VMP14B WH-OG 2TAD 0.5 SILVER
3 RMP07C GN-WH 2TAD 0.35 SILVER

6W8T-14A464-EC

C4MP14

TO PARK ASSIST SENSOR REAR MIDDLE LEFT

HARNESS 19B516

Rear Inner Parking Aid Sensor RH (G1404417)



1 LMP07D BU-WH 2TAD 0.35 SILVER
2 VMP16B YE-GY 2TAD 0.5 SILVER
3 RMP07D GN-WH 2TAD 0.35 SILVER

6W8T-14A464-EC

C4MP16

TO PARK ASSIST SENSOR REAR MIDDLE RIGHT

HARNESS 19B516

Rear Outer Parking Aid Sensor LH (G1404418)



1 LMP07F BU-WH 2TAD 0.35 SILVER
2 VMP15B YE-GN 2TAD 0.5 SILVER
3 RMP07F GN-WH 2TAD 0.35 SILVER

6W8T-14A464-EC


C4MP15

TO PARK ASSIST SENSOR REAR LEFT

HARNESS 19B516

413-13-11

Rear Outer Parking Aid Sensor RH (G1404419)

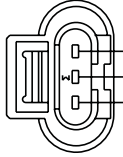

1	LMP07E	BU-WH	2TAD	0.35	SILVER
2	VMP17B	YE-OG	2TAD	0.5	SILVER
3	RMP07E	GN-WH	2TAD	0.35	SILVER


6W8T-14A464-EC

C4MP17

TO PARK ASSIST SENSOR REAR RIGHT

HARNESS 19B516

Rear Parking Aid Camera (G1405449)

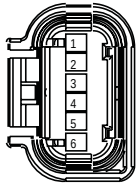

1	CBP85G	YE	2TAD	0.5
2				
3	RMP19D	BN-VT	2TAD	0.5
4	VMP19D	WH-GN	2TAD	0.5
5	GD343AE	BK-VT	2TAD	0.5
6	GD801H	BK	2TAD	0.5

BU5T-14A464-NA

C4MP22

TO REARVIEW CAMERA

HARNESS 14B562



SECTION 413-17 Tachograph

VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS

PAGE

ELECTRICAL CONNECTORS

Tachograph.....	413-17-2
-----------------	----------


www.obdviethnam.vn



413-17-2

Tachograph (G1404423)

CBP63	BN-YE	2TAD	0.35
CMC37	VT-GN	2TAD	0.35
GD215AC	BK-GY	2TAD	0.35
CBP87	GN-BU	2TAD	0.35



4S7T-14A459-VDA

C2MC35

TO TACHOGRAPH

HARNESS 14401

SECTION 414-01 Battery, Mounting and Cables

VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS


PAGE

ELECTRICAL CONNECTORS

Battery — A.....	414-01-2
Battery — C.....	414-01-2
Battery Monitoring Sensor.....	414-01-2

414-01-2

Battery—A (G1404427)



3M5T-14463-HTA


C1DC02-A

TO BATTERY+1

HARNESS 14290

Battery—C (G1404428)

PIN 1 => SDF01A RD 25.0 3SCD + SDF01B RD 35.0 3SCD




3M5T-14463-HTA

C1DC02-C

TO BATTERY+2

HARNESS 14300

Battery Monitoring Sensor (G1404429)

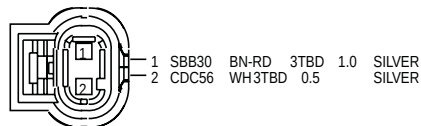

AV6N-14A464-ZA

C1DC57

TO BATTERY MONITORING SENSOR

HARNESS 14290

SECTION 414-02 Generator and Regulator

VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS

PAGE


ELECTRICAL SCHEMATICS

Charging System — 2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma.....	414-02-2
Charging System — 3.2L Duratorq-TDCi (148kW/200PS) - Puma.....	414-02-4
Charging System — 2.5L Duratec-HE (122kW/165PS) - M14.....	414-02-6


ELECTRICAL CONNECTORS

Generator.....	414-02-8
Generator — A.....	414-02-8


414-02-2 Charging System—2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110KW/150PS) - Puma

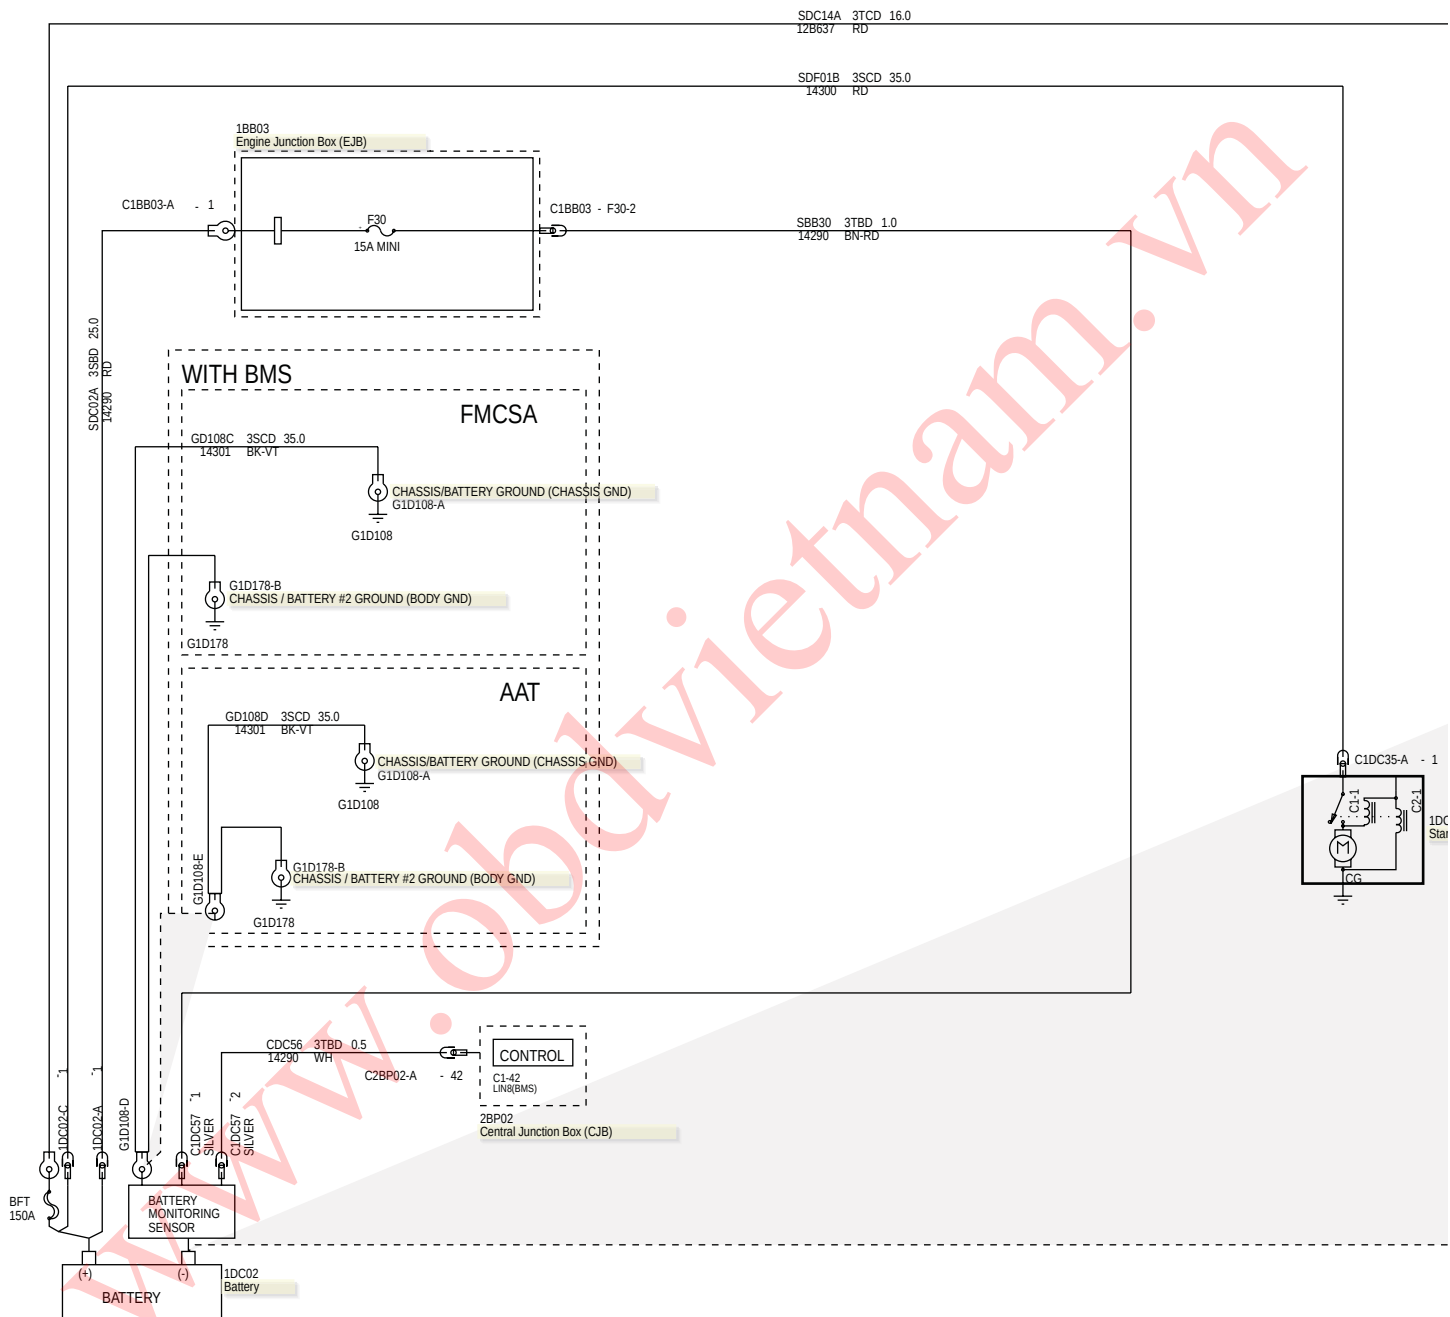


414-02-3 Charging System—2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS)- Puma

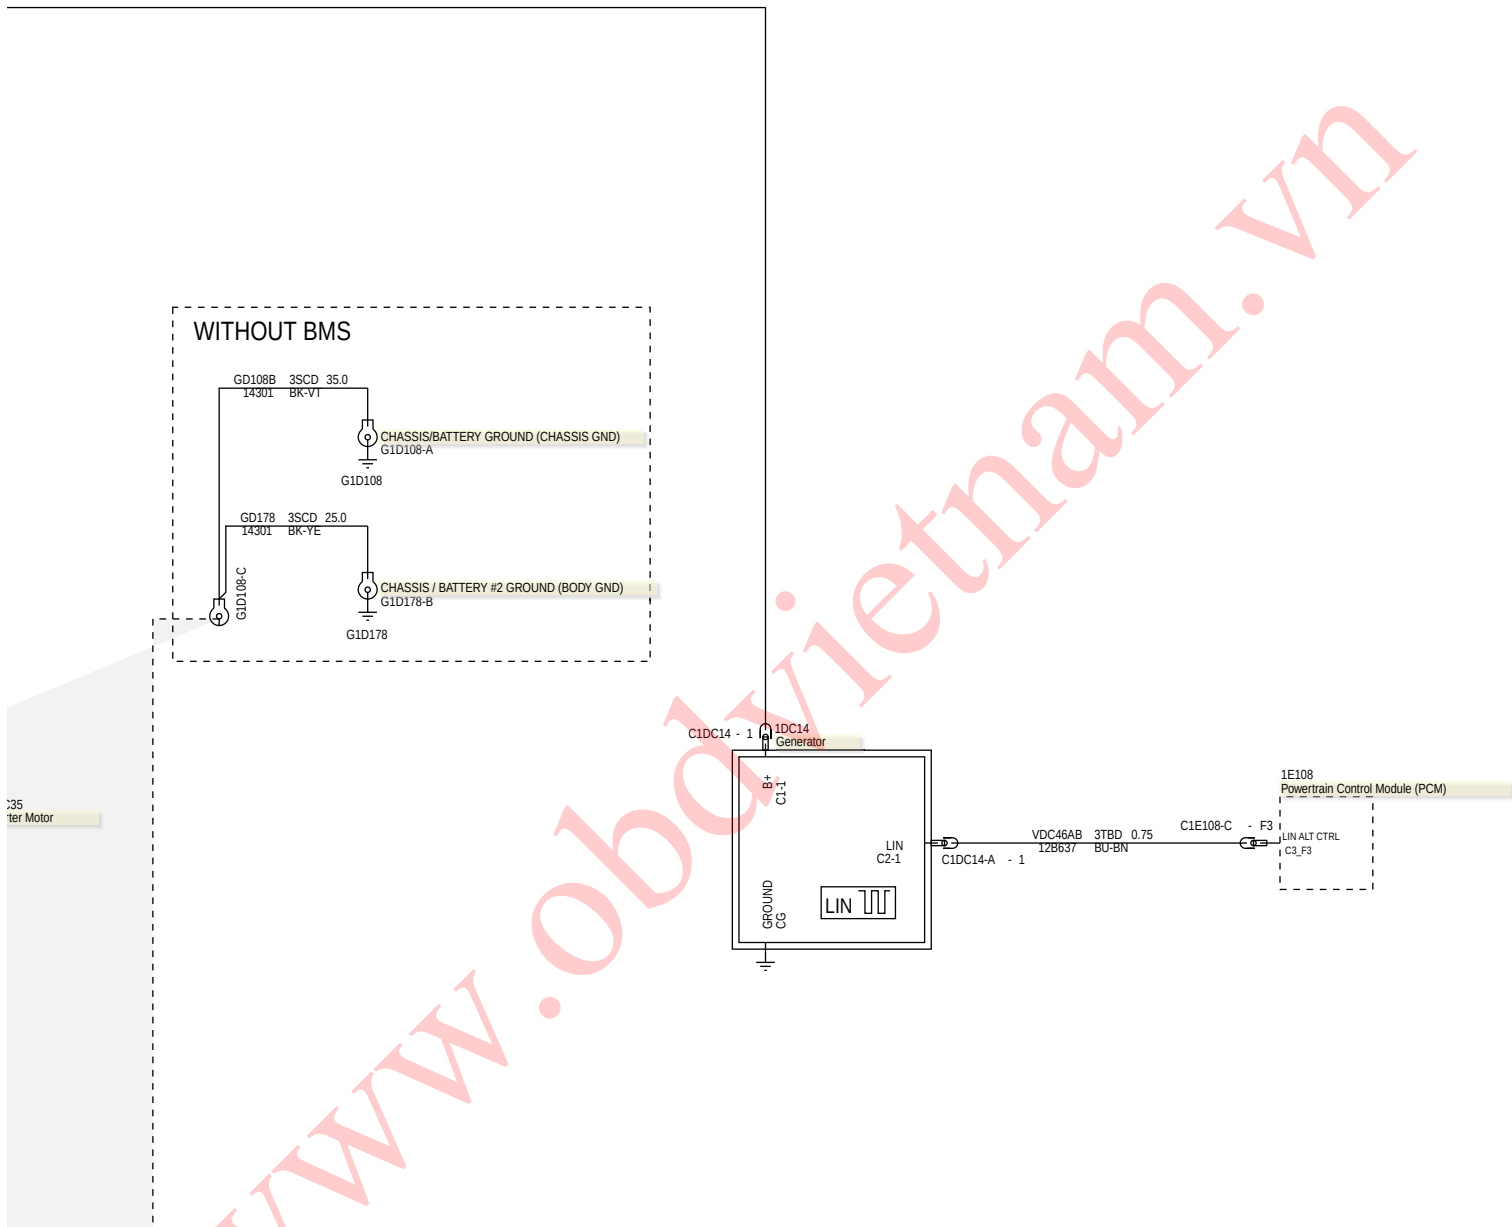


414-02-4 Charging System—3.2L Duratorq-TDCi (148kW/200PS) - Puma

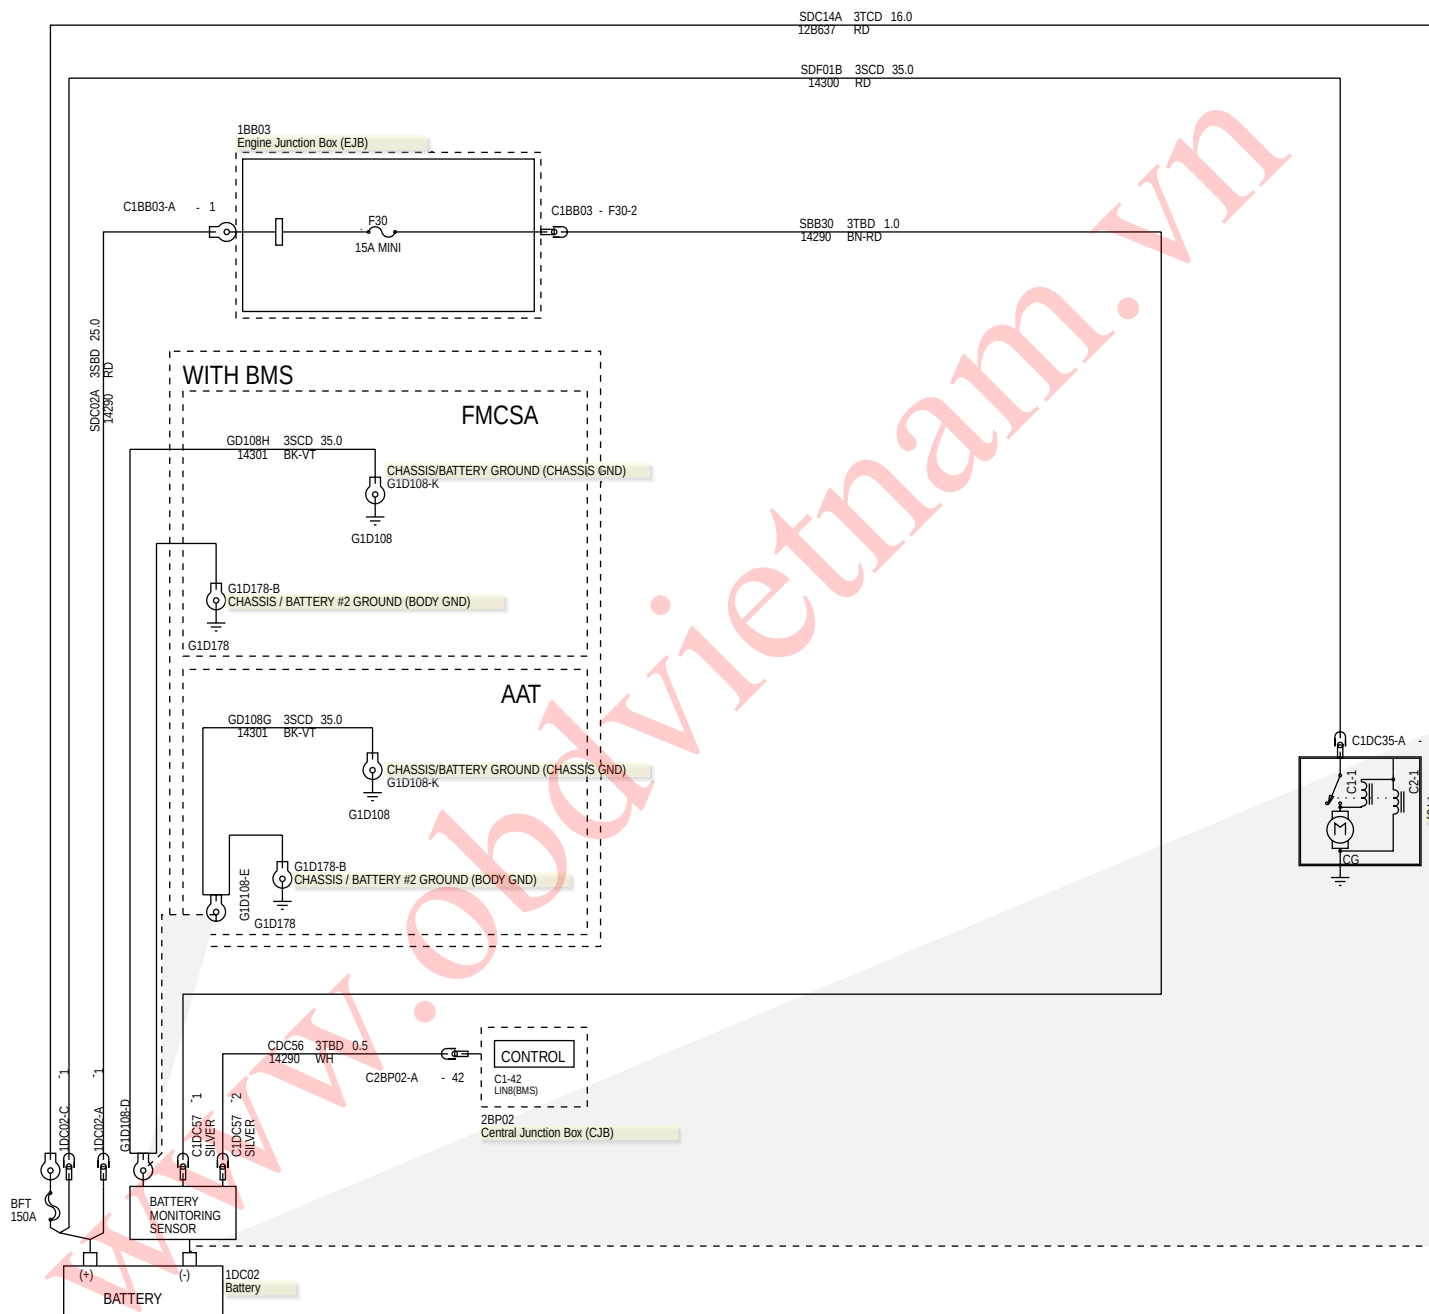




414-02-5 Charging System—3.2L Duratorq-TDCi (148kW/200PS) - Puma

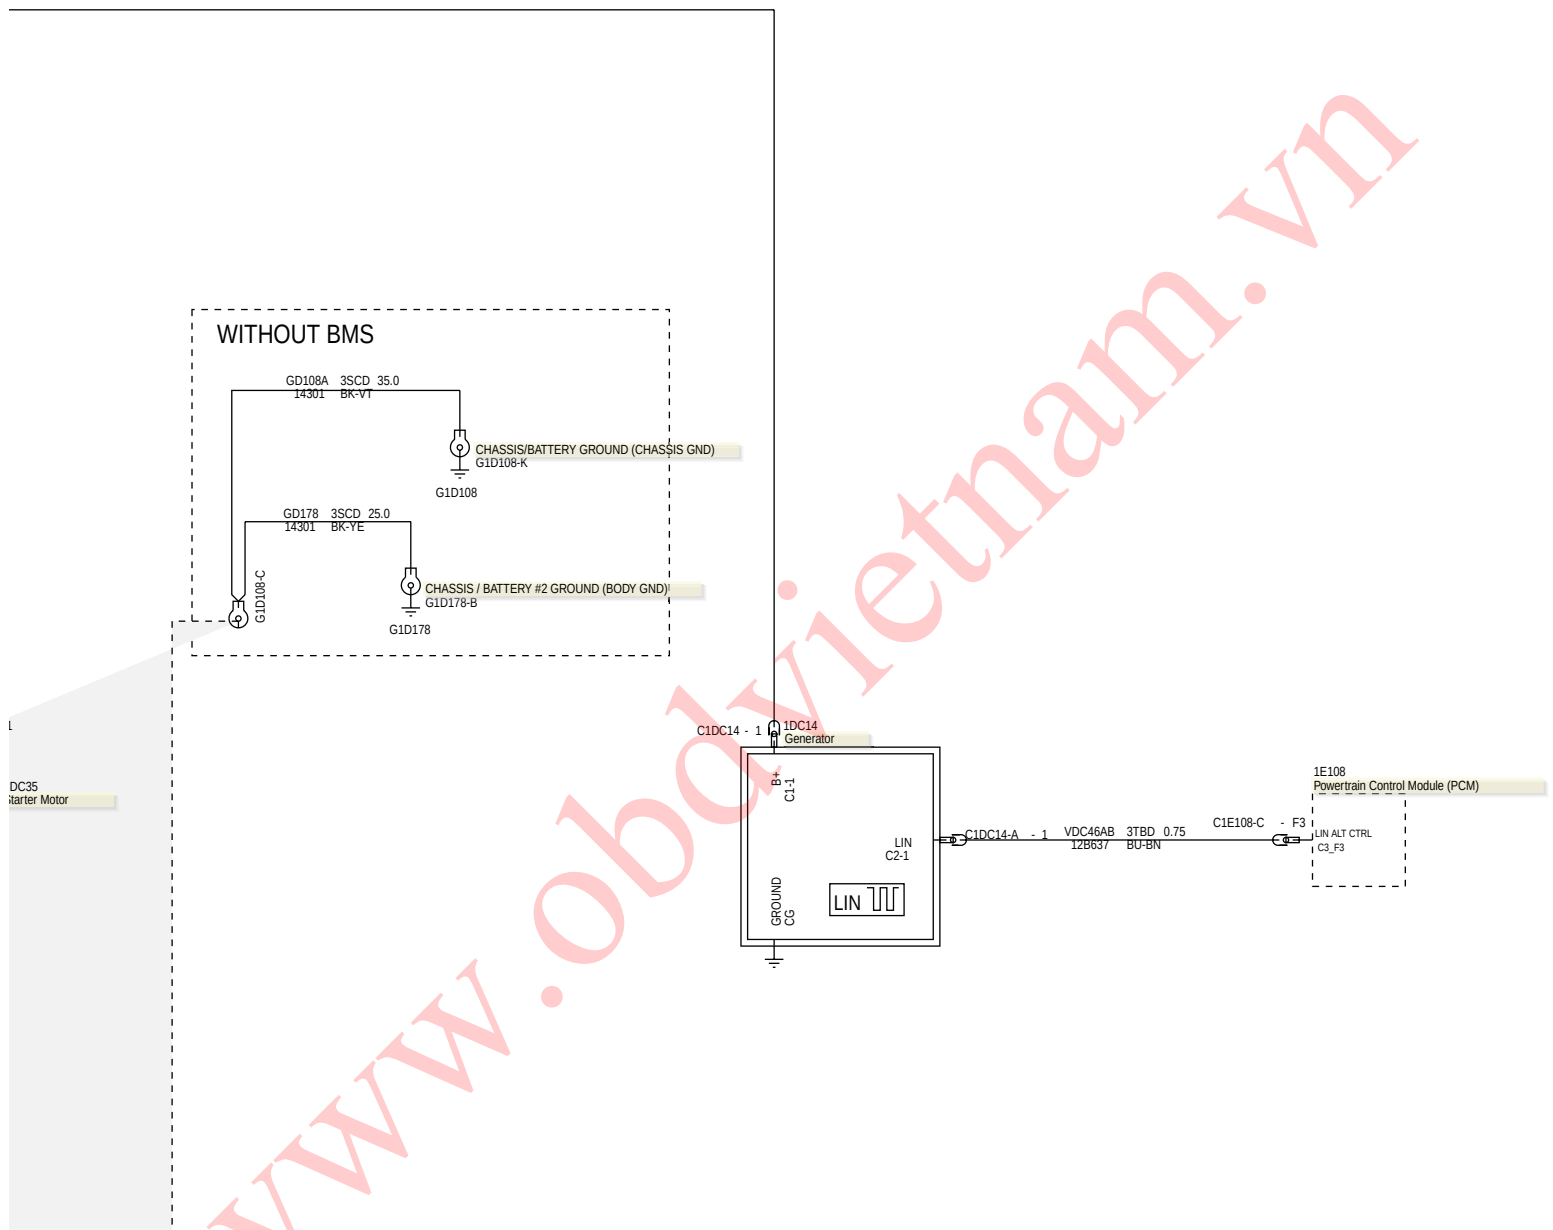

414-02-6 Charging System—2.5L Duratec-HE (122kW/165PS) - MI4

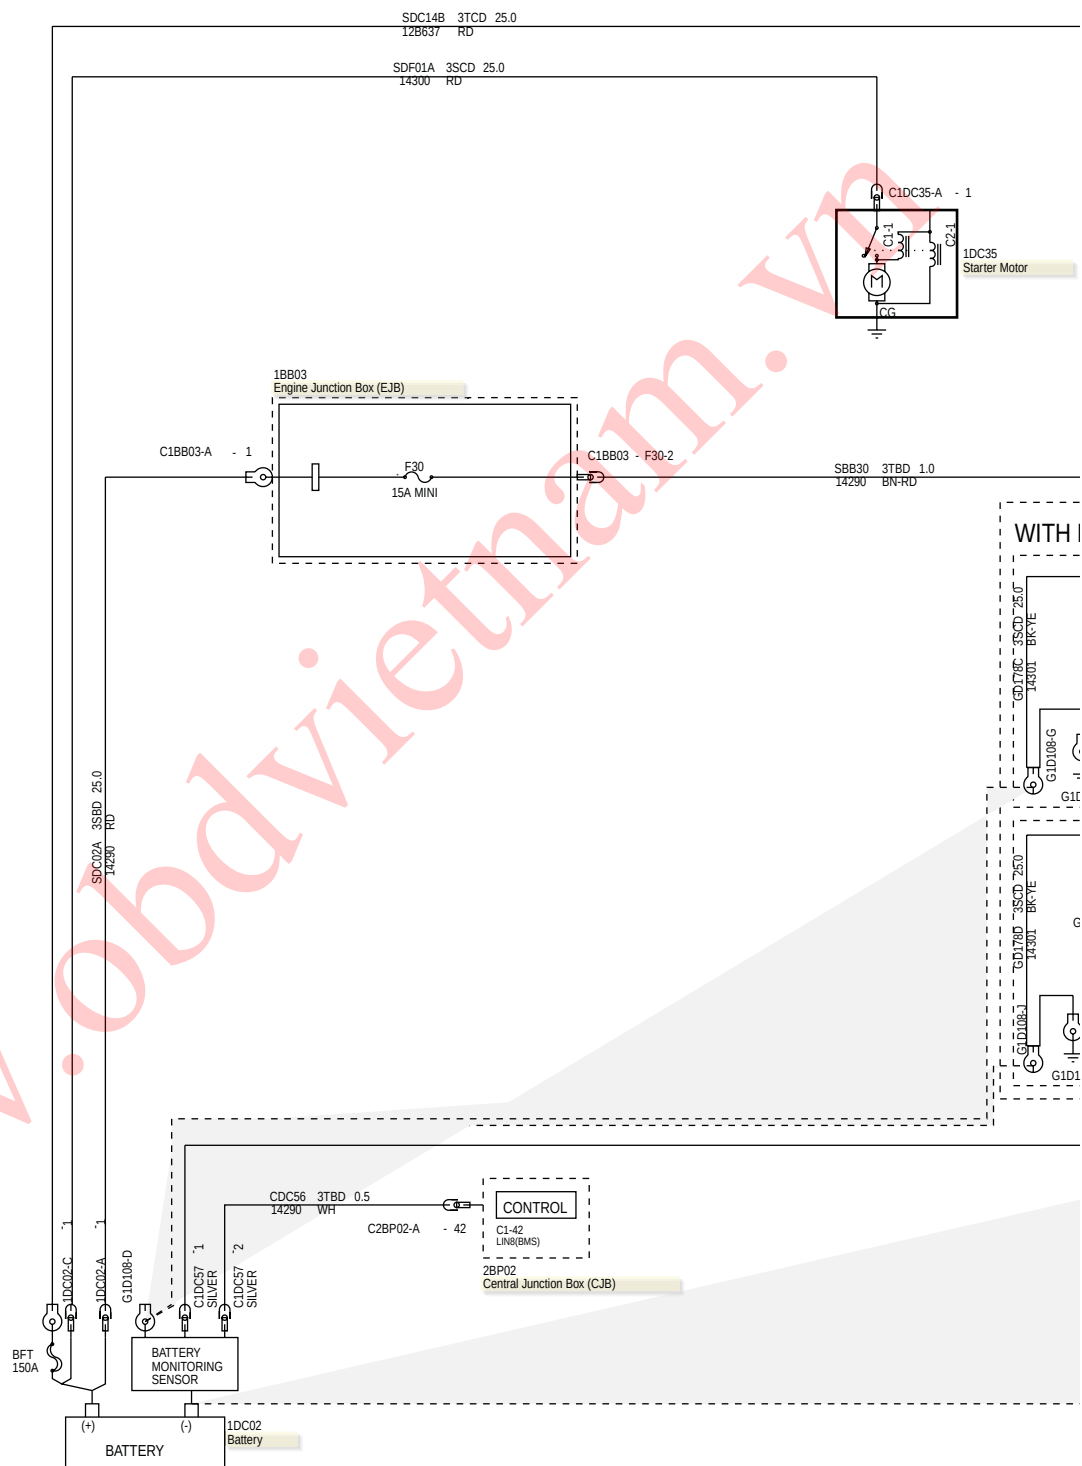

414-02-7 Charging System—2.5L Duratec-HE (122kW/165PS) - MI4

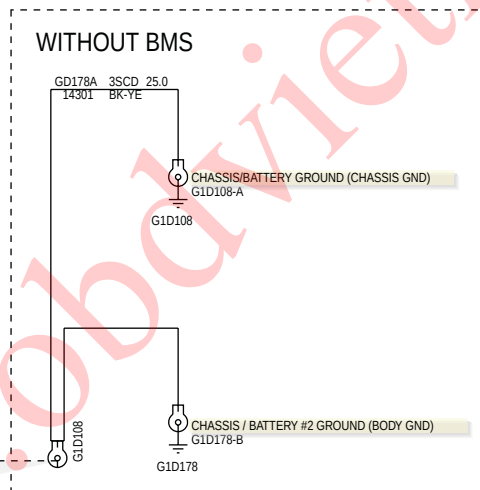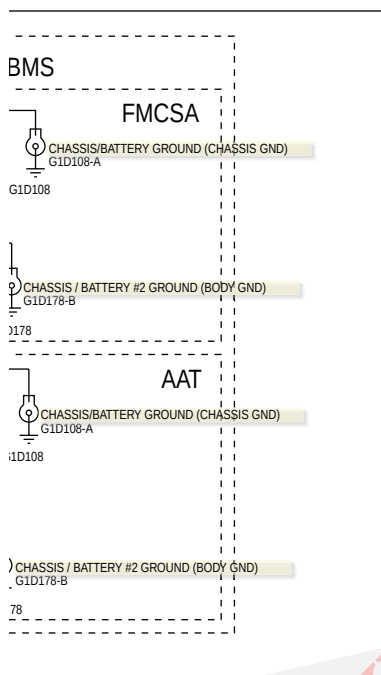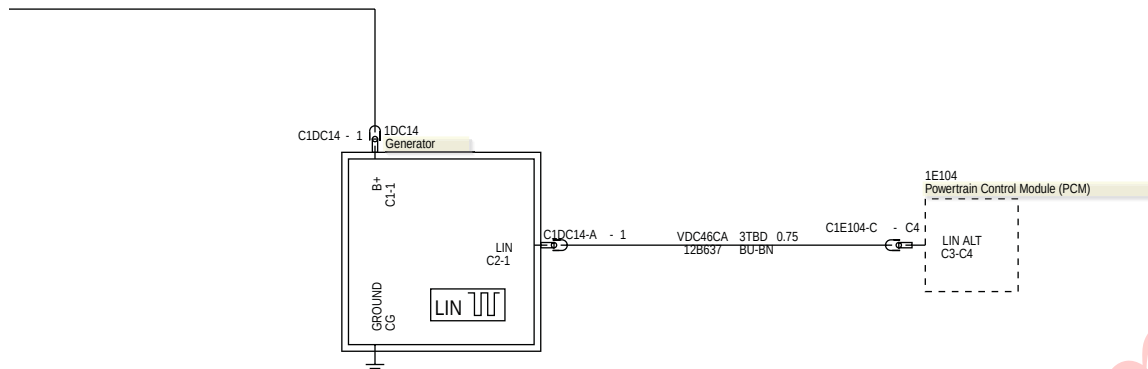

414-02-8

Generator (G1404432)

 1 SDC14A RD 3TCD 16.0 + SDC14B RD 3TCD 25.0

2S6T-14463-JA

C1DC14

TO ALTERNATOR (B+)

HARNESS 12B637

Generator—A (G1404433)

PIN 1 => VDC46AB BU-BN 0.75 3TBD

 1 VDC46CA BU-BN 3TBD 0.75 + VDC46AB BU-BN 3TBD 0.75
2

4R8T-14A464-FA

C1DC14-A

TO ALTERNATOR (LIN)

HARNESS 12B637

SECTION 415-01 Information and Entertainment System

VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS

PAGE

PAGE 1 OF 2

ELECTRICAL SCHEMATICS

Audio System — Single Cab, LHD 4WD/LHD RWD, Vehicles With: Single DIN Standard Audio Unit.....	415-01-3
Audio System — Single Cab, RHD 4WD/RHD RWD, Vehicles With: Single DIN Standard Audio Unit.....	415-01-5
Audio System — Double Cab, LHD 4WD/LHD RWD, Vehicles With: Single DIN Standard Audio Unit.....	415-01-7
Audio System — Double Cab, RHD 4WD/RHD RWD, Vehicles With: Single DIN Standard Audio Unit.....	415-01-9
Audio System — Super Cab, LHD 4WD/LHD RWD, Vehicles With: Single DIN Standard Audio Unit.....	415-01-11
Audio System — Super Cab, RHD 4WD/RHD RWD, Vehicles With: Single DIN Standard Audio Unit.....	415-01-13
Audio System — Single Cab, LHD 4WD/LHD RWD, Vehicles With: Bluetooth and Voice Control.....	415-01-15
Audio System — Single Cab, LHD 4WD/LHD RWD, Vehicles Without: Bluetooth and Voice Control.....	415-01-19
Audio System — Double Cab, LHD 4WD/LHD RWD, Vehicles With: Bluetooth and Voice Control.....	415-01-21
Audio System — Double Cab, LHD 4WD/LHD RWD, Vehicles Without: Bluetooth and Voice Control.....	415-01-25
Audio System — Super Cab, LHD 4WD/LHD RWD, Vehicles With: Bluetooth and Voice Control.....	415-01-27
Audio System — Super Cab, LHD 4WD/LHD RWD, Vehicles Without: Bluetooth and Voice Control.....	415-01-31
Audio System — Single Cab, RHD 4WD/RHD RWD, Vehicles With: Bluetooth and Voice Control.....	415-01-35
Audio System — Single Cab, RHD 4WD/RHD RWD, Vehicles Without: Bluetooth and Voice Control.....	415-01-39
Audio System — Double Cab, RHD 4WD/RHD RWD, Vehicles With: Bluetooth and Voice Control.....	415-01-41
Audio System — Double Cab, RHD 4WD/RHD RWD, Vehicles Without: Bluetooth and Voice Control.....	415-01-45
Audio System — Super Cab, RHD 4WD/RHD RWD, Vehicles With: Bluetooth and Voice Control.....	415-01-47
Audio System — Super Cab, RHD 4WD/RHD RWD, Vehicles Without: Bluetooth and Voice Control.....	415-01-51


ELECTRICAL CONNECTORS

Audio Input Socket.....	415-01-53
Audio Unit.....	415-01-53


PAGE 2 OF 2

Audio Unit — J.....	415-01-53
Cellular Phone Microphone.....	415-01-53
Communications Module — A.....	415-01-54
Communications Module — B.....	415-01-54
Front Door Speaker LH.....	415-01-54
Front Door Speaker RH.....	415-01-54
Front Door Tweeter Speaker LH.....	415-01-55
Front Door Tweeter Speaker RH.....	415-01-55
Information and Entertainment Control Panel.....	415-01-55
Information and Entertainment Unit.....	415-01-55
Information and Entertainment Unit — A.....	415-01-56
Information and Entertainment Unit — B.....	415-01-56
Information and Entertainment Unit — D.....	415-01-56
Information and Entertainment Unit — F.....	415-01-56
Information and Entertainment Unit — K.....	415-01-57
Noise Suppression Capacitor.....	415-01-57
Rear Door Speaker LH.....	415-01-57
Rear Door Speaker RH.....	415-01-57


415-01-3 Audio System—Single Cab, LHD 4WD/LHD RWD, Vehicles With: Single DIN Standard Audio Unit

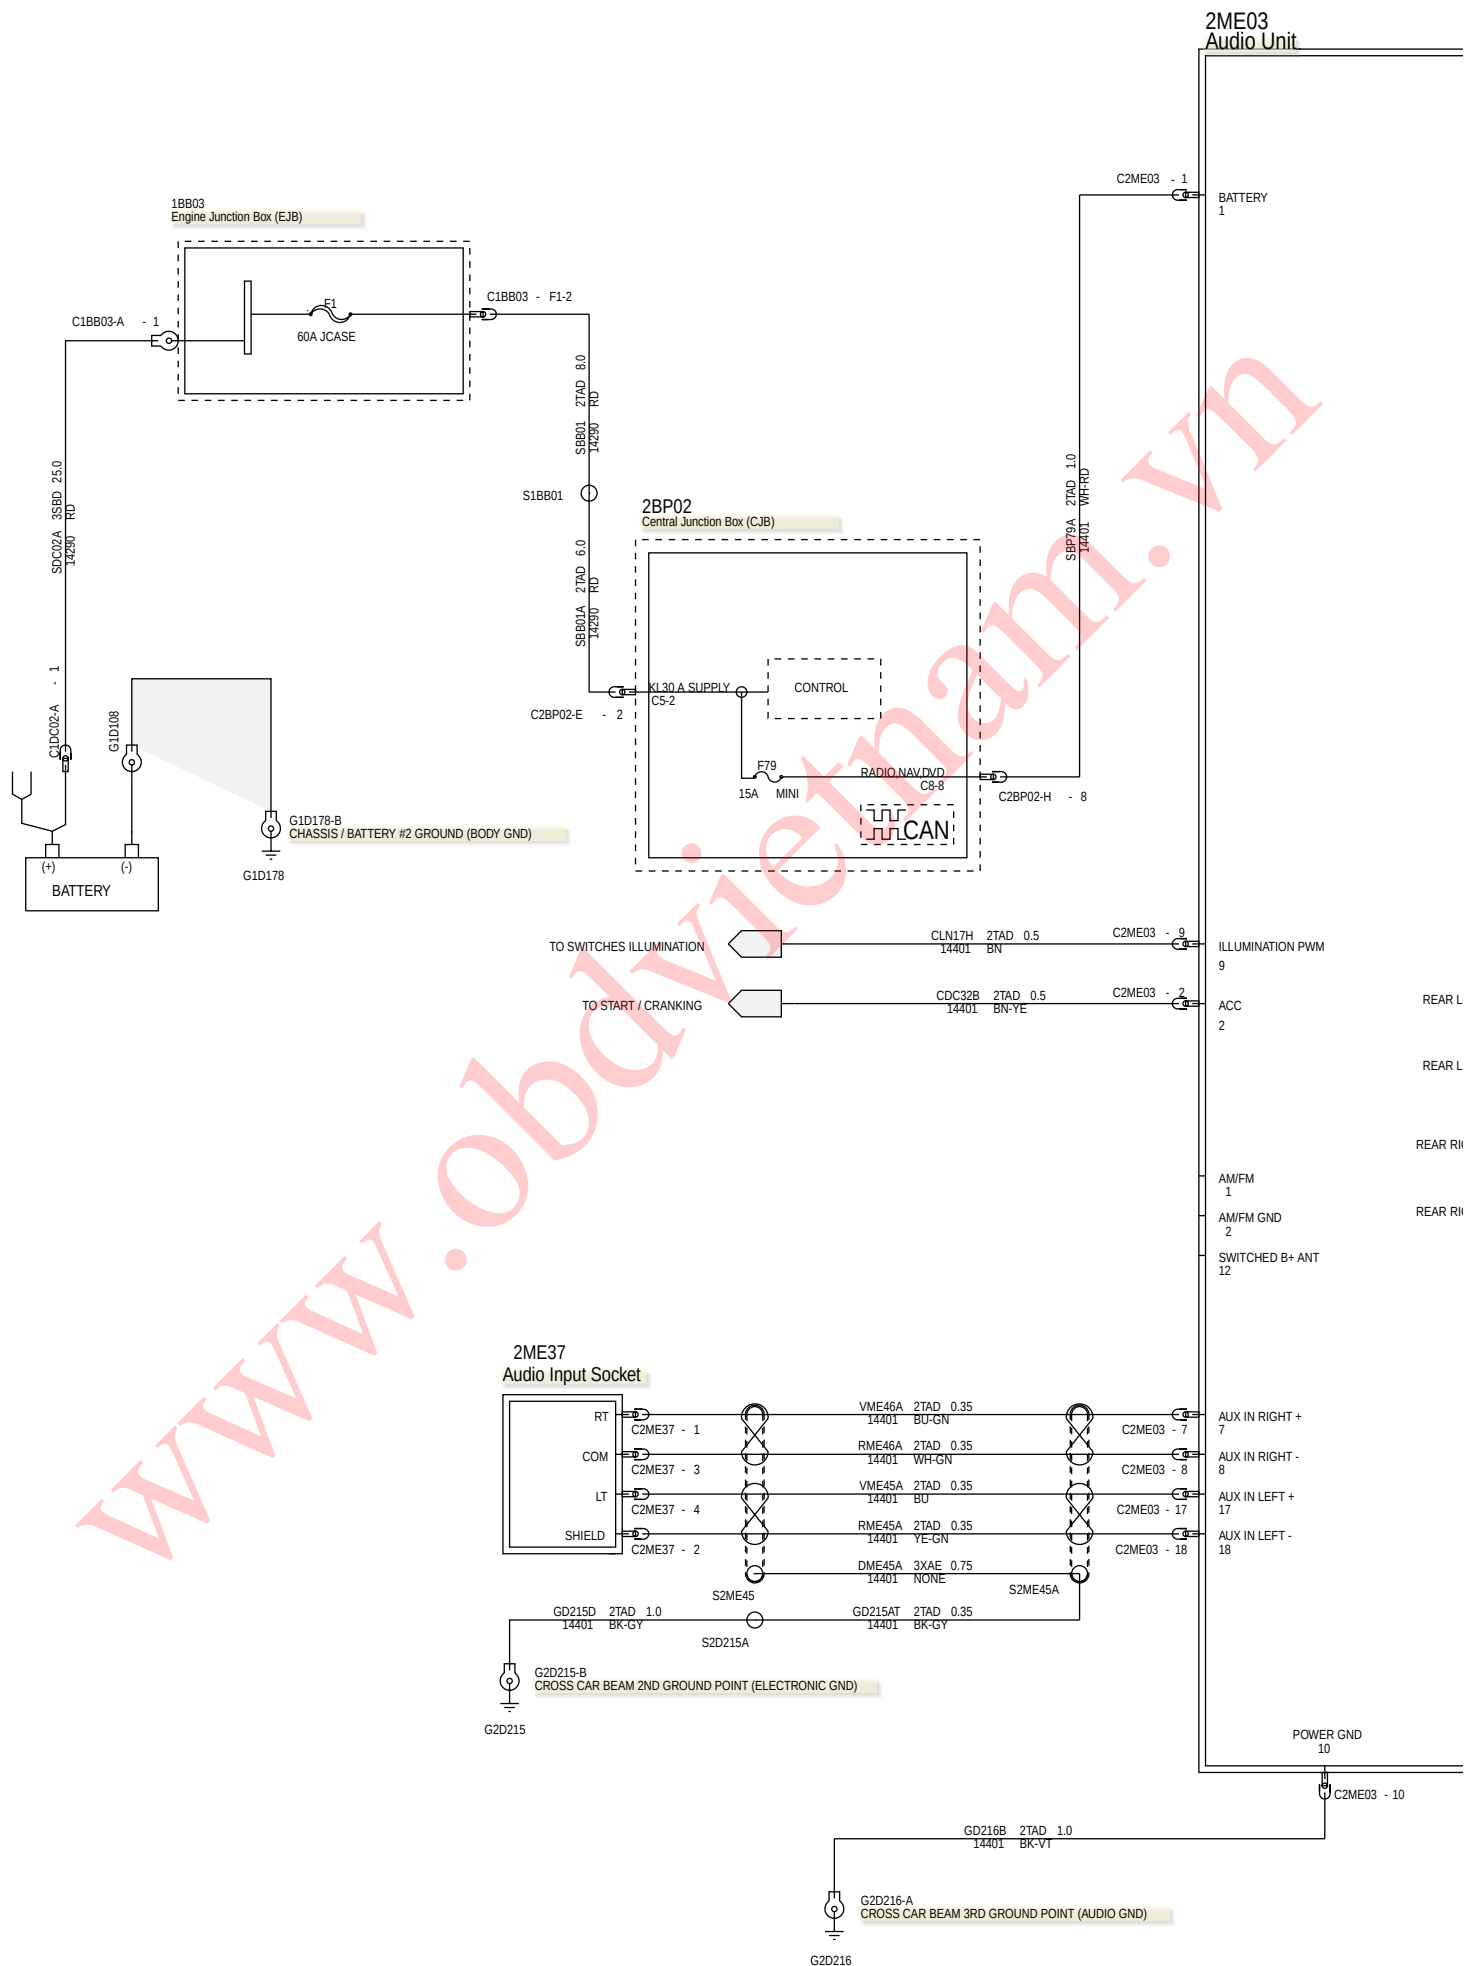


415-01-4 Audio System—Single Cab, LHD 4WD/LHD RWD, Vehicles With: Single DIN Standard Audio Unit

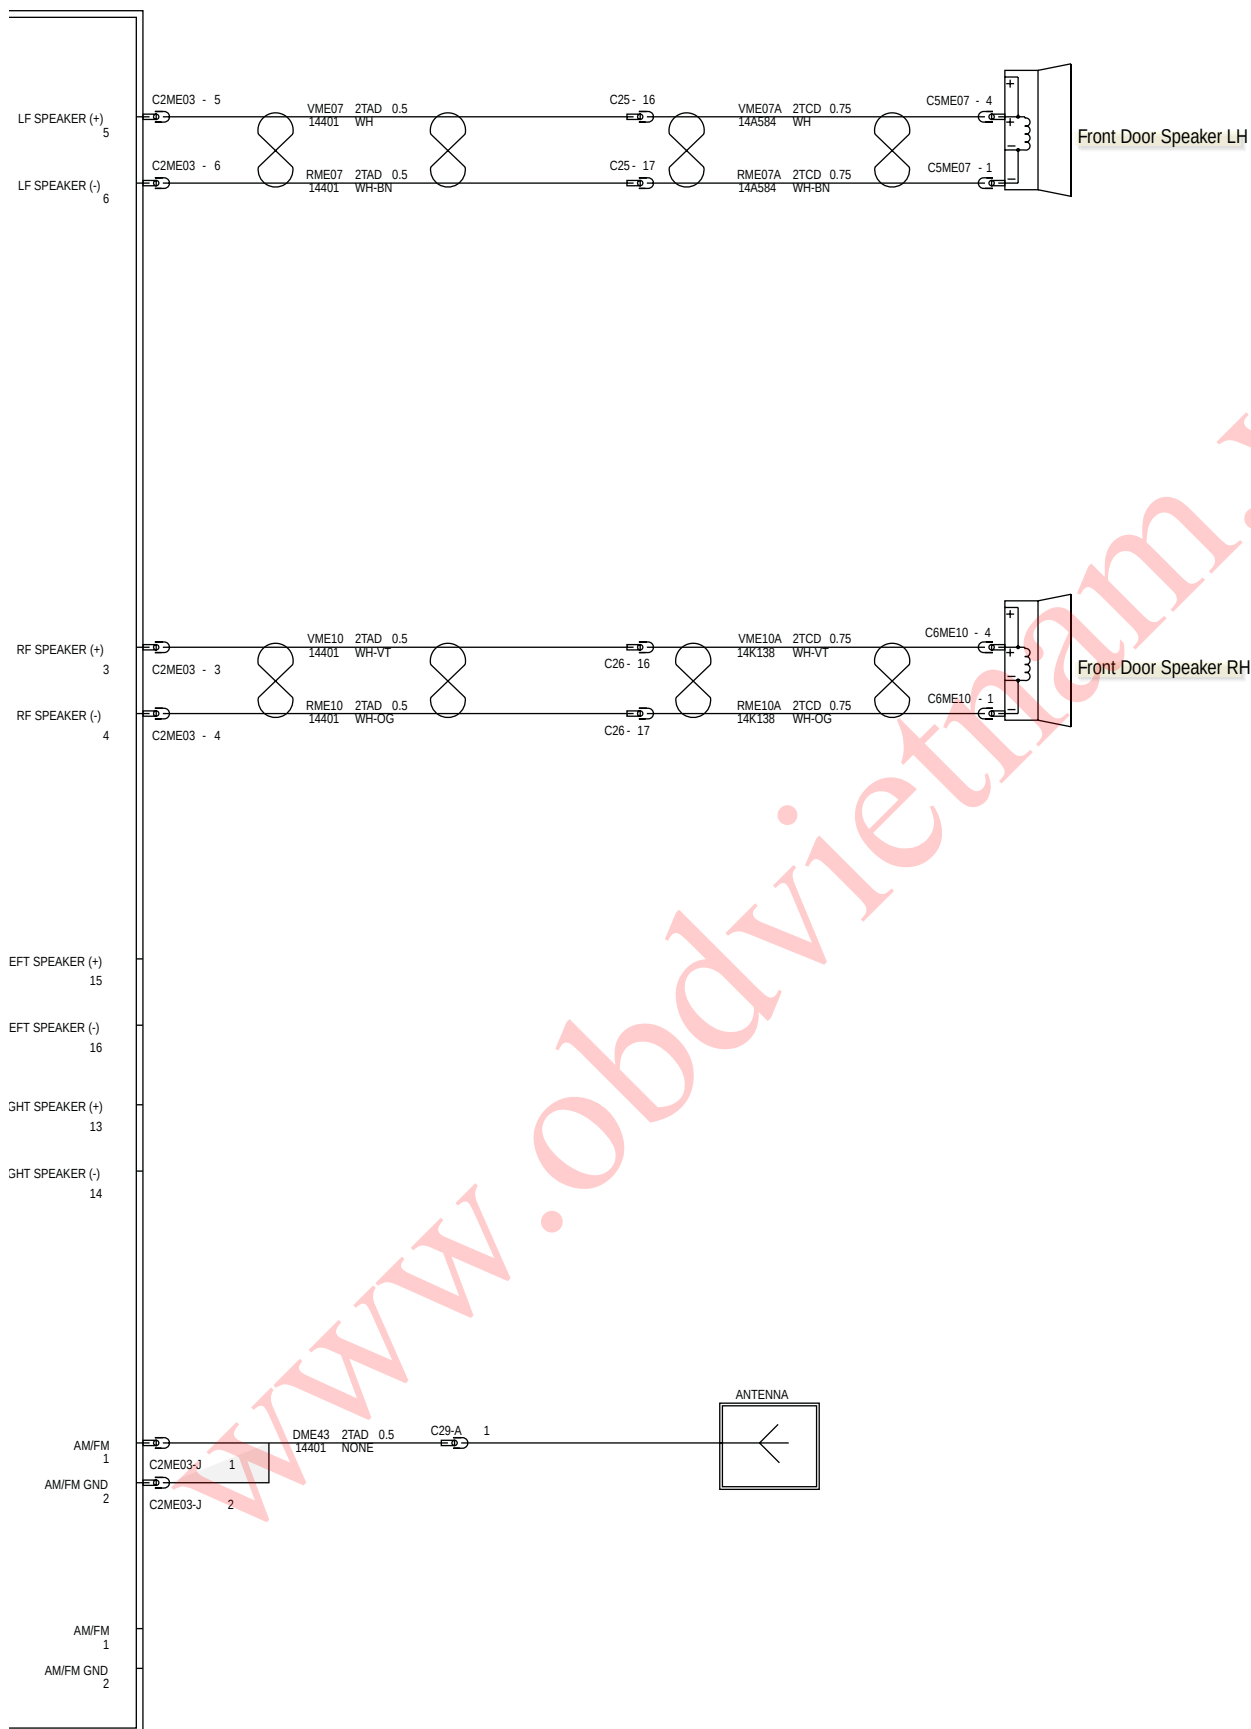


415-01-5 Audio System—Single Cab, RHD 4WD/RHD RWD, Vehicles With: Single DIN Standard Audio Unit

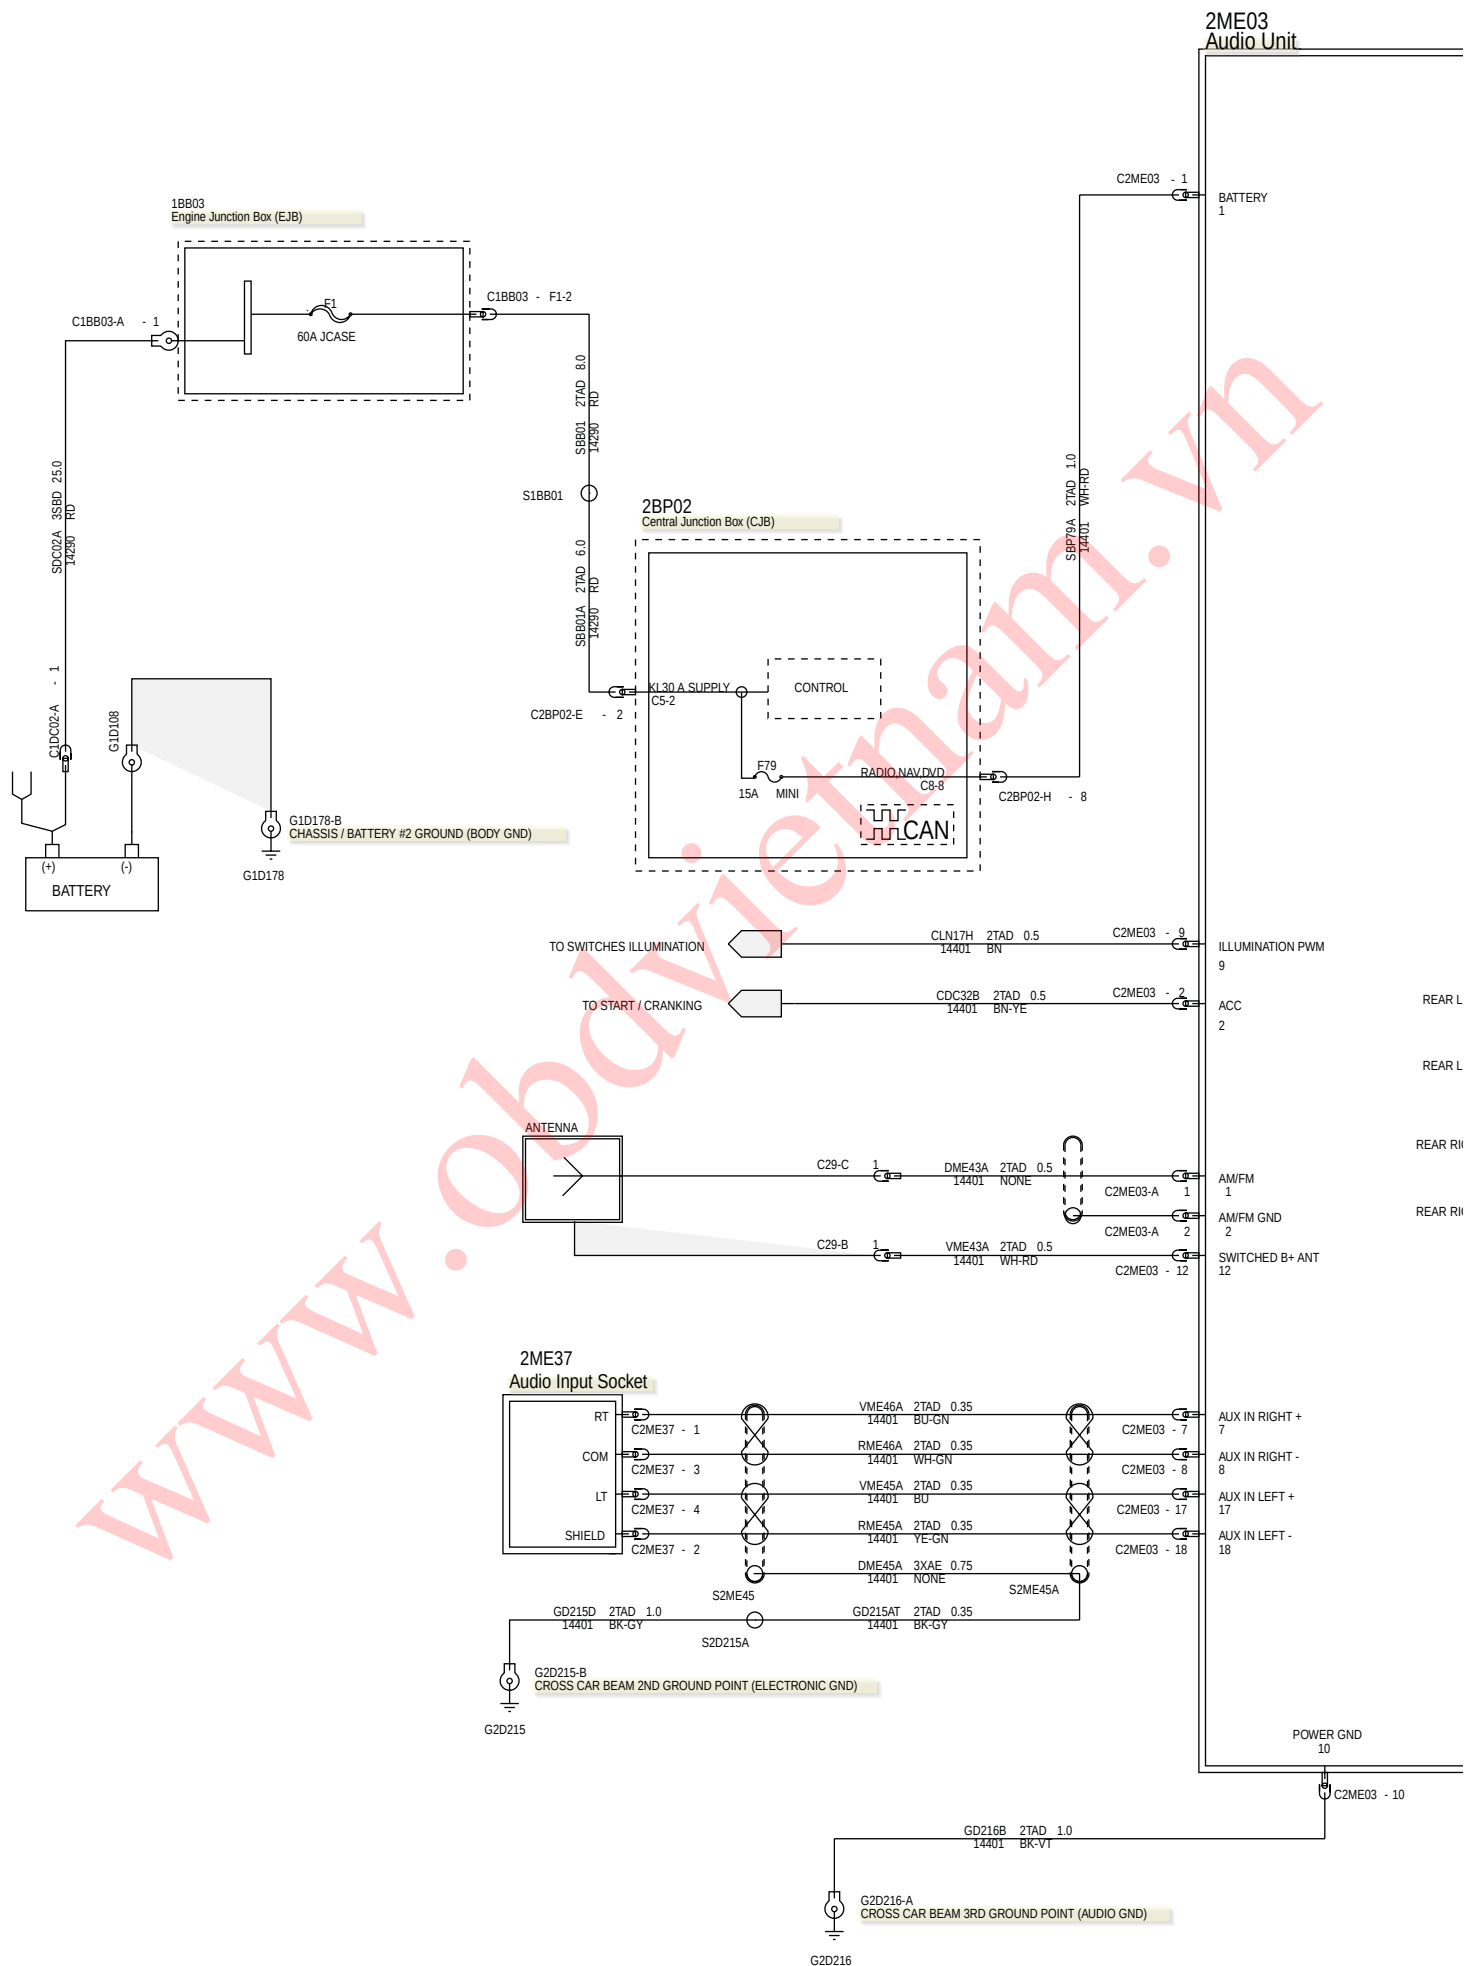


415-01-6 Audio System—Single Cab, RHD 4WD/RHD RWD, Vehicles With: Single DIN Standard Audio Unit

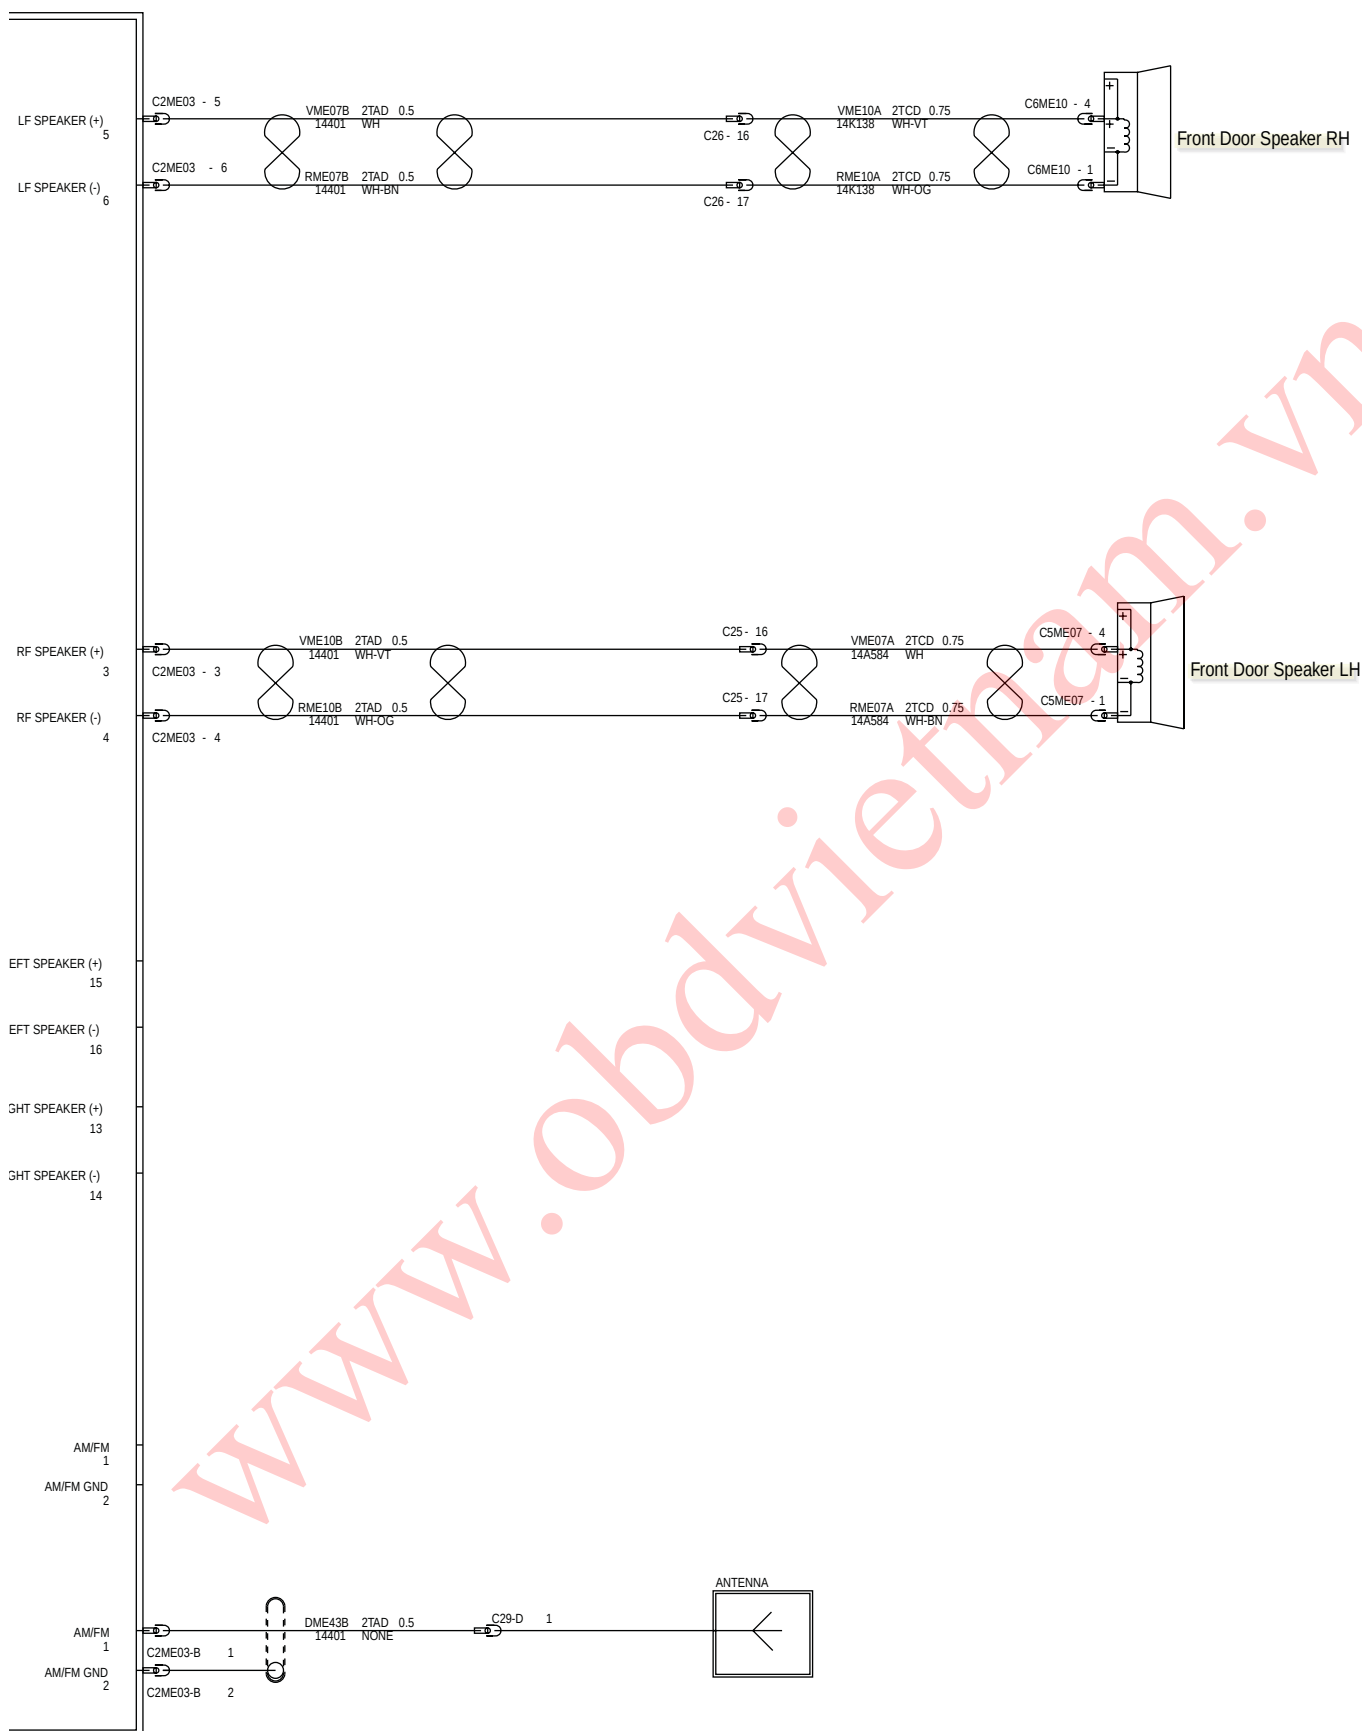


415-01-7 Audio System—Double Cab, LHD 4WD/LHD RWD, Vehicles With: Single DIN Standard Audio Unit

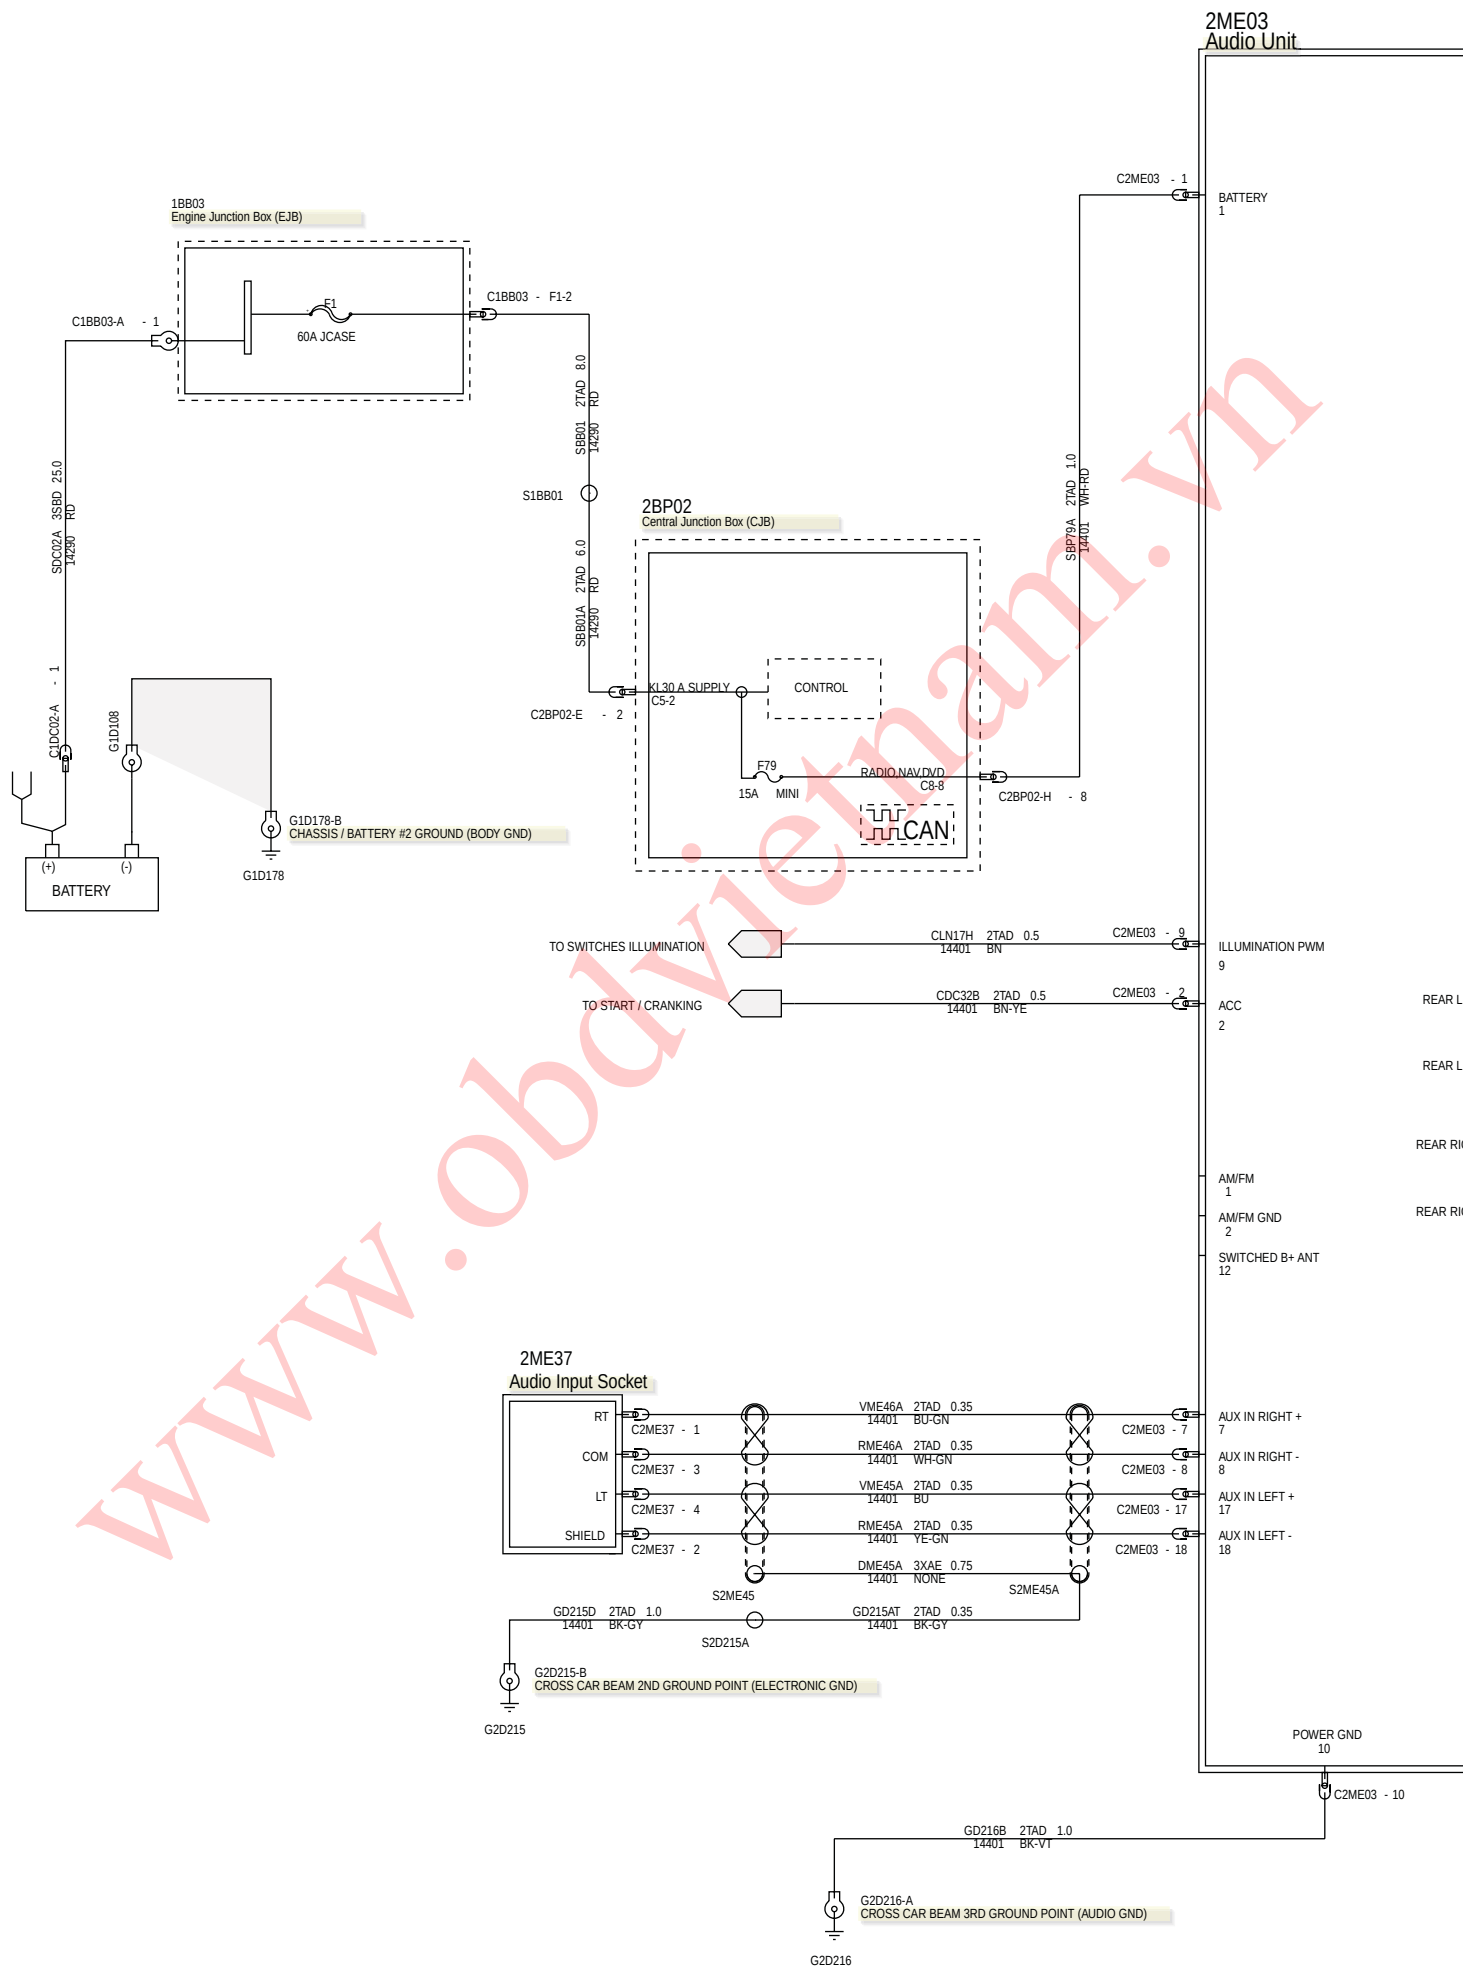


415-01-8 Audio System—Double Cab, LHD 4WD/LHD RWD, Vehicles With: Single DIN Standard Audio Unit

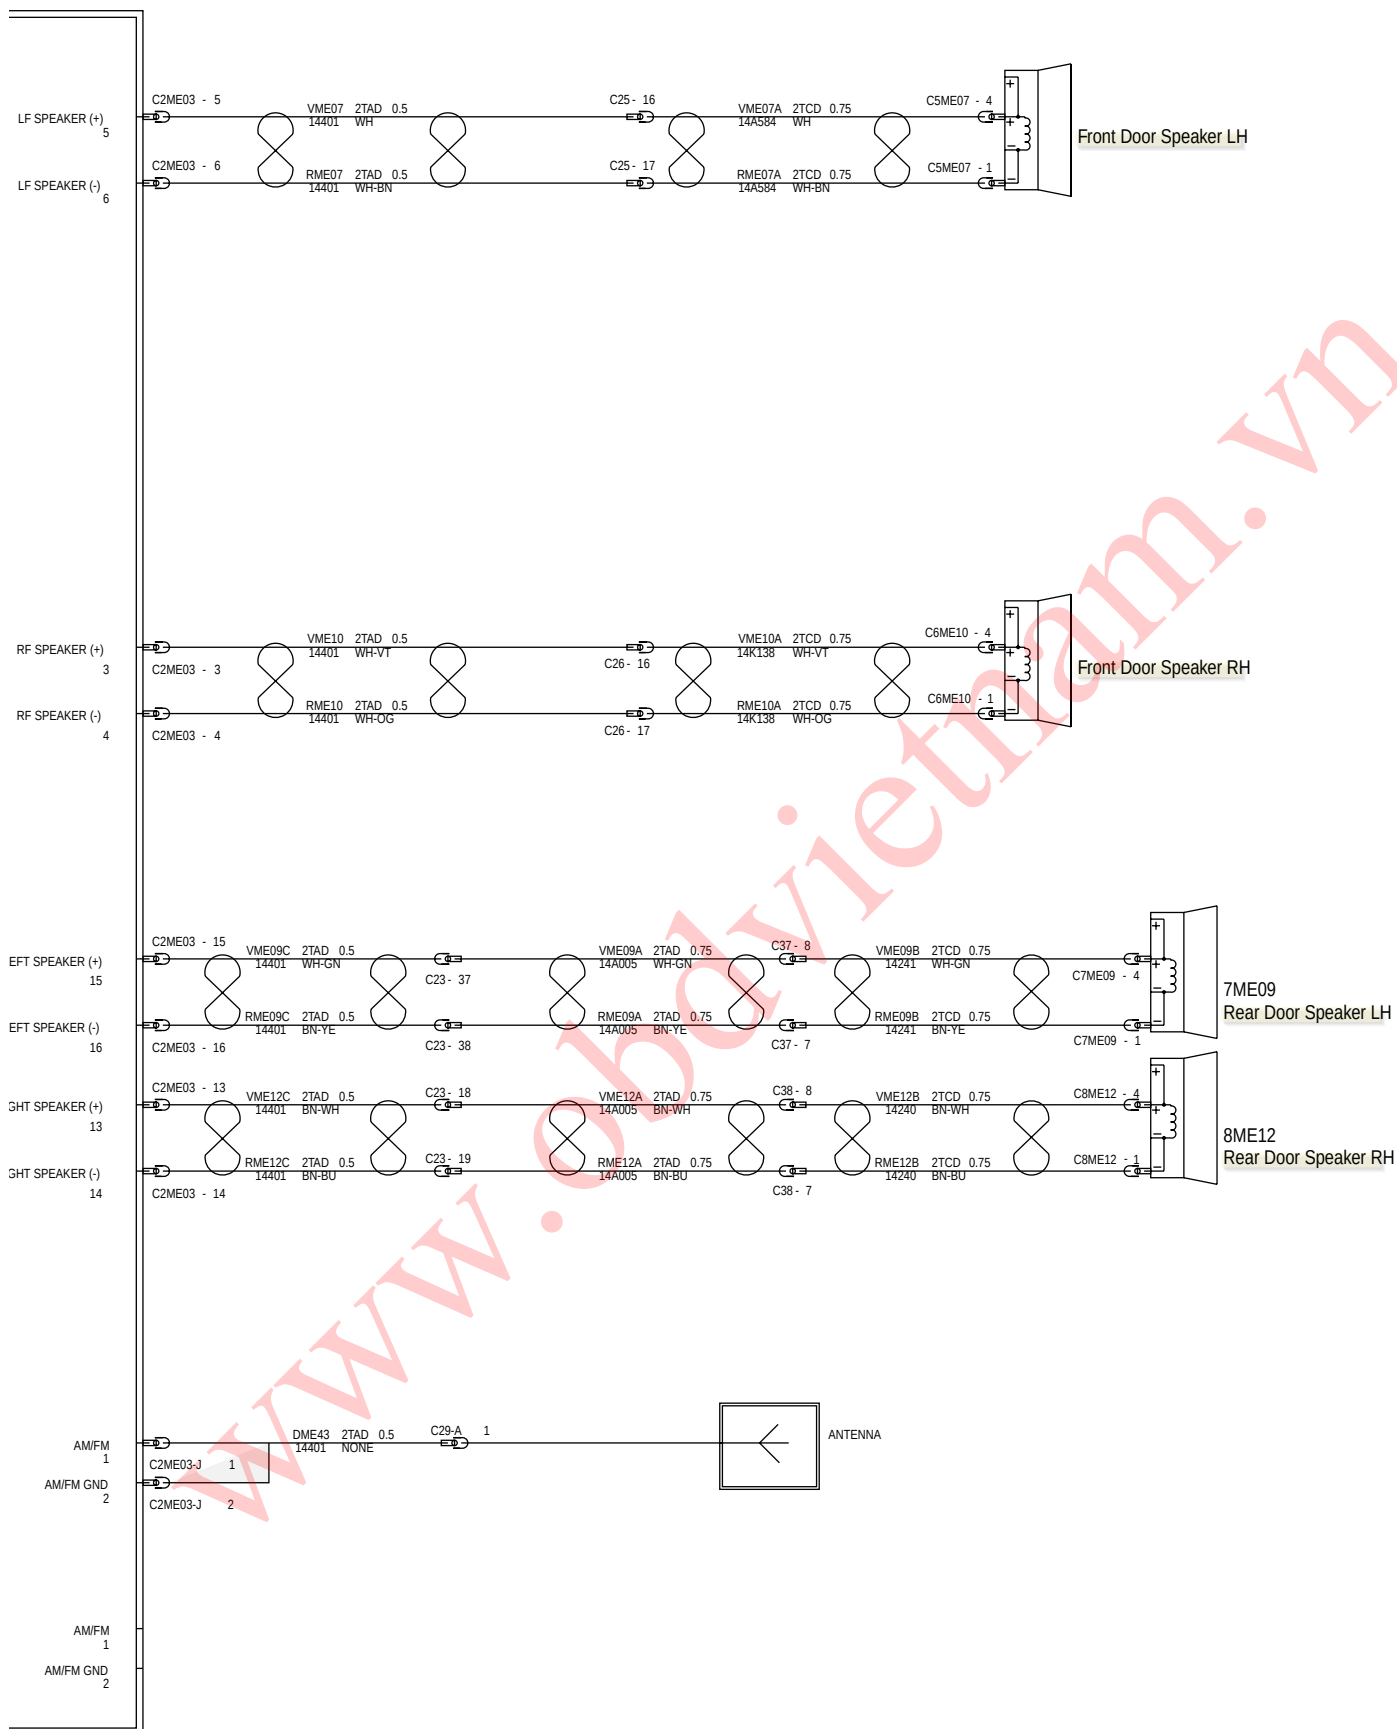

415-01-9 Audio System—Double Cab, RHD 4WD/RHD RWD, Vehicles With: Single DIN Standard Audio Unit

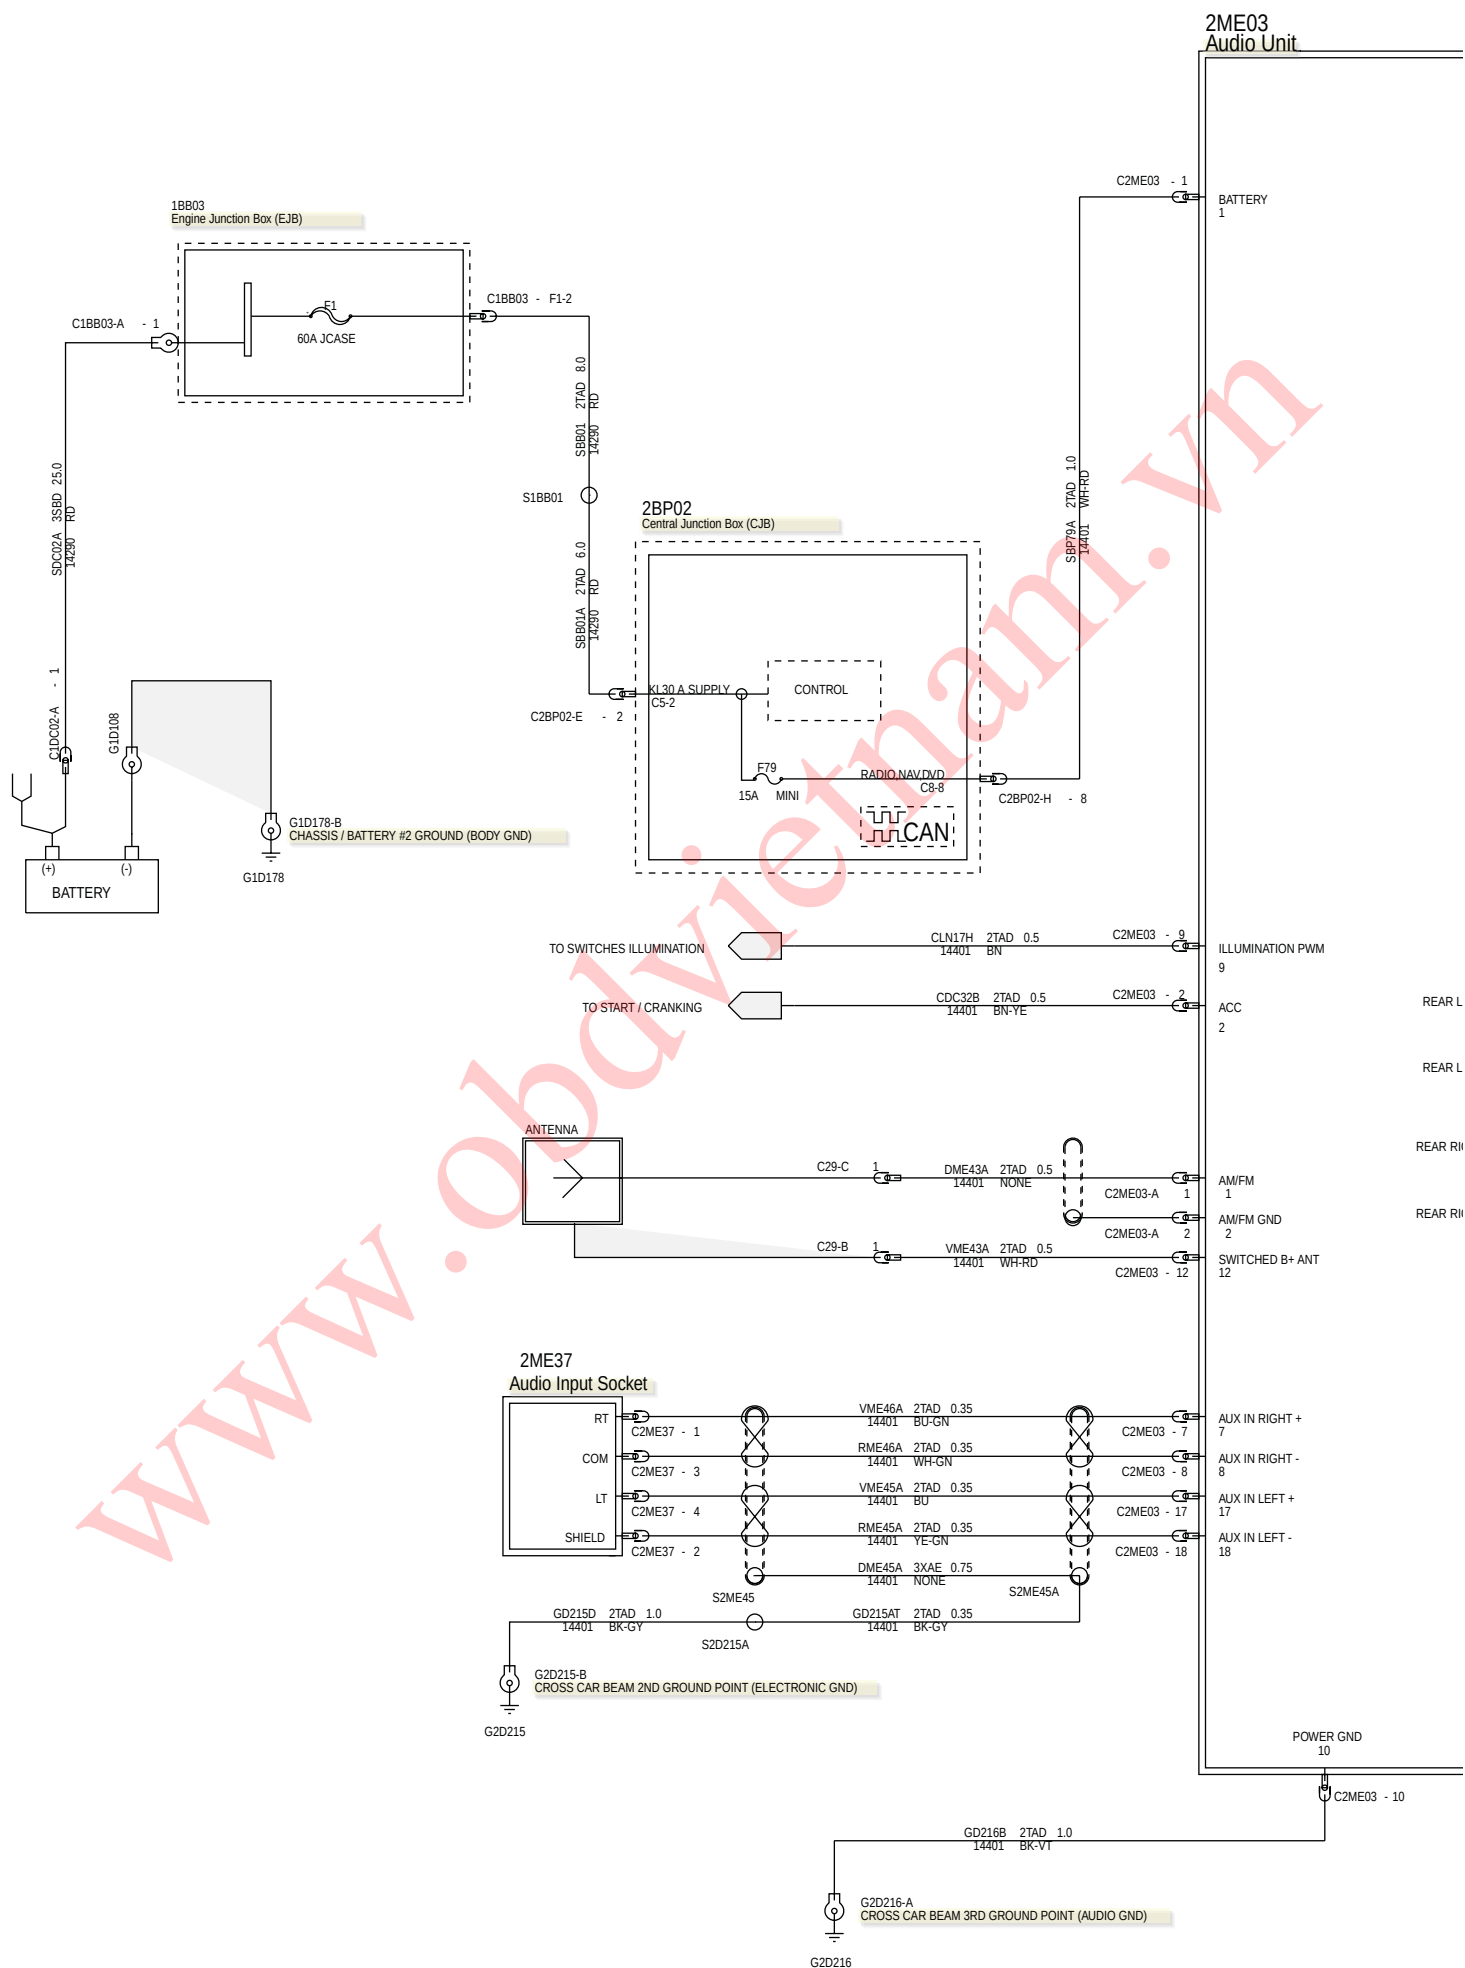


415-01-10 Audio System—Double Cab, RHD 4WD/RHD RWD, Vehicles With: Single DIN Standard Audio Unit

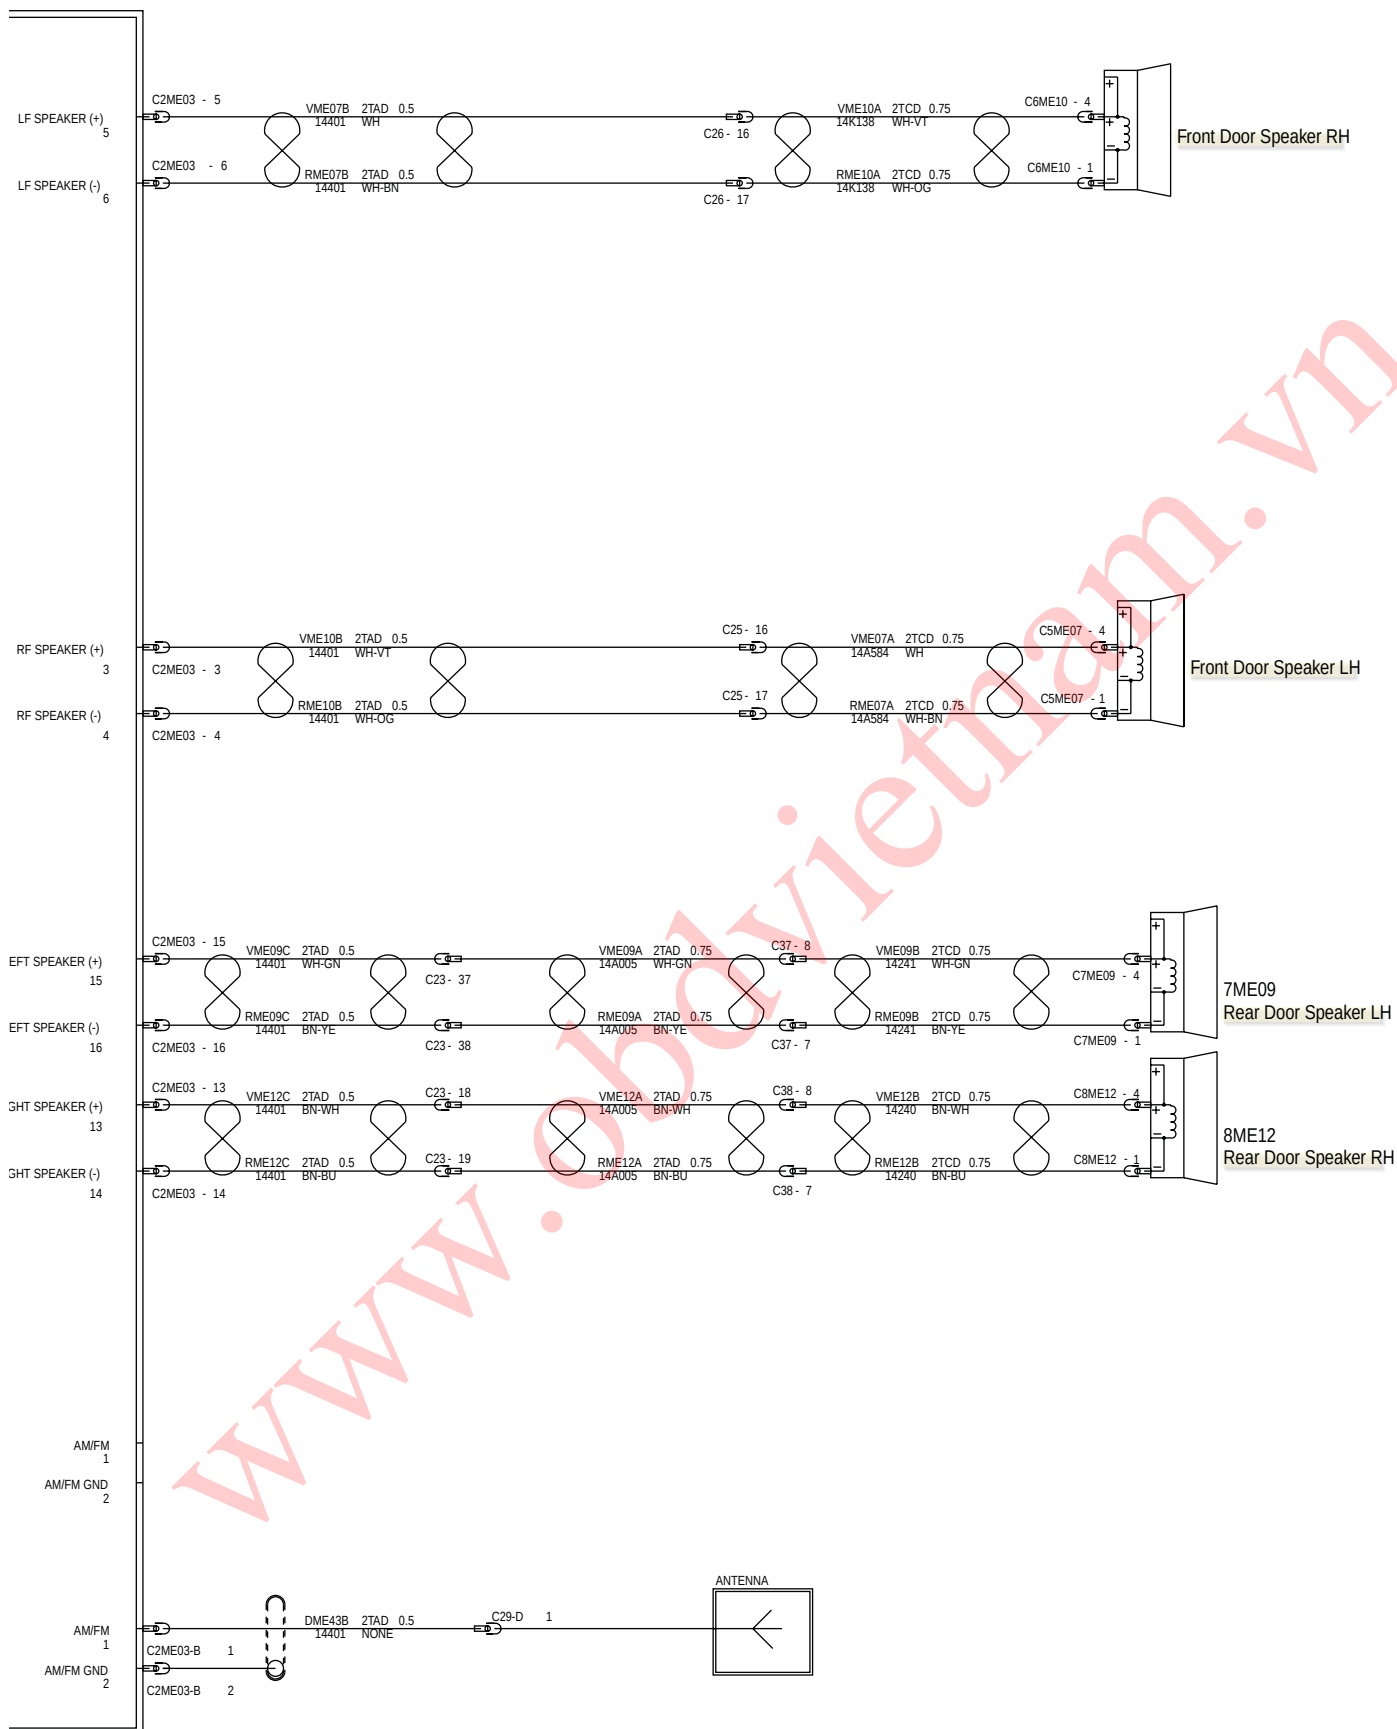




415-01-12 Audio System—Super Cab, LHD 4WD/LHD RWD, Vehicles With: Single DIN Standard Audio Unit

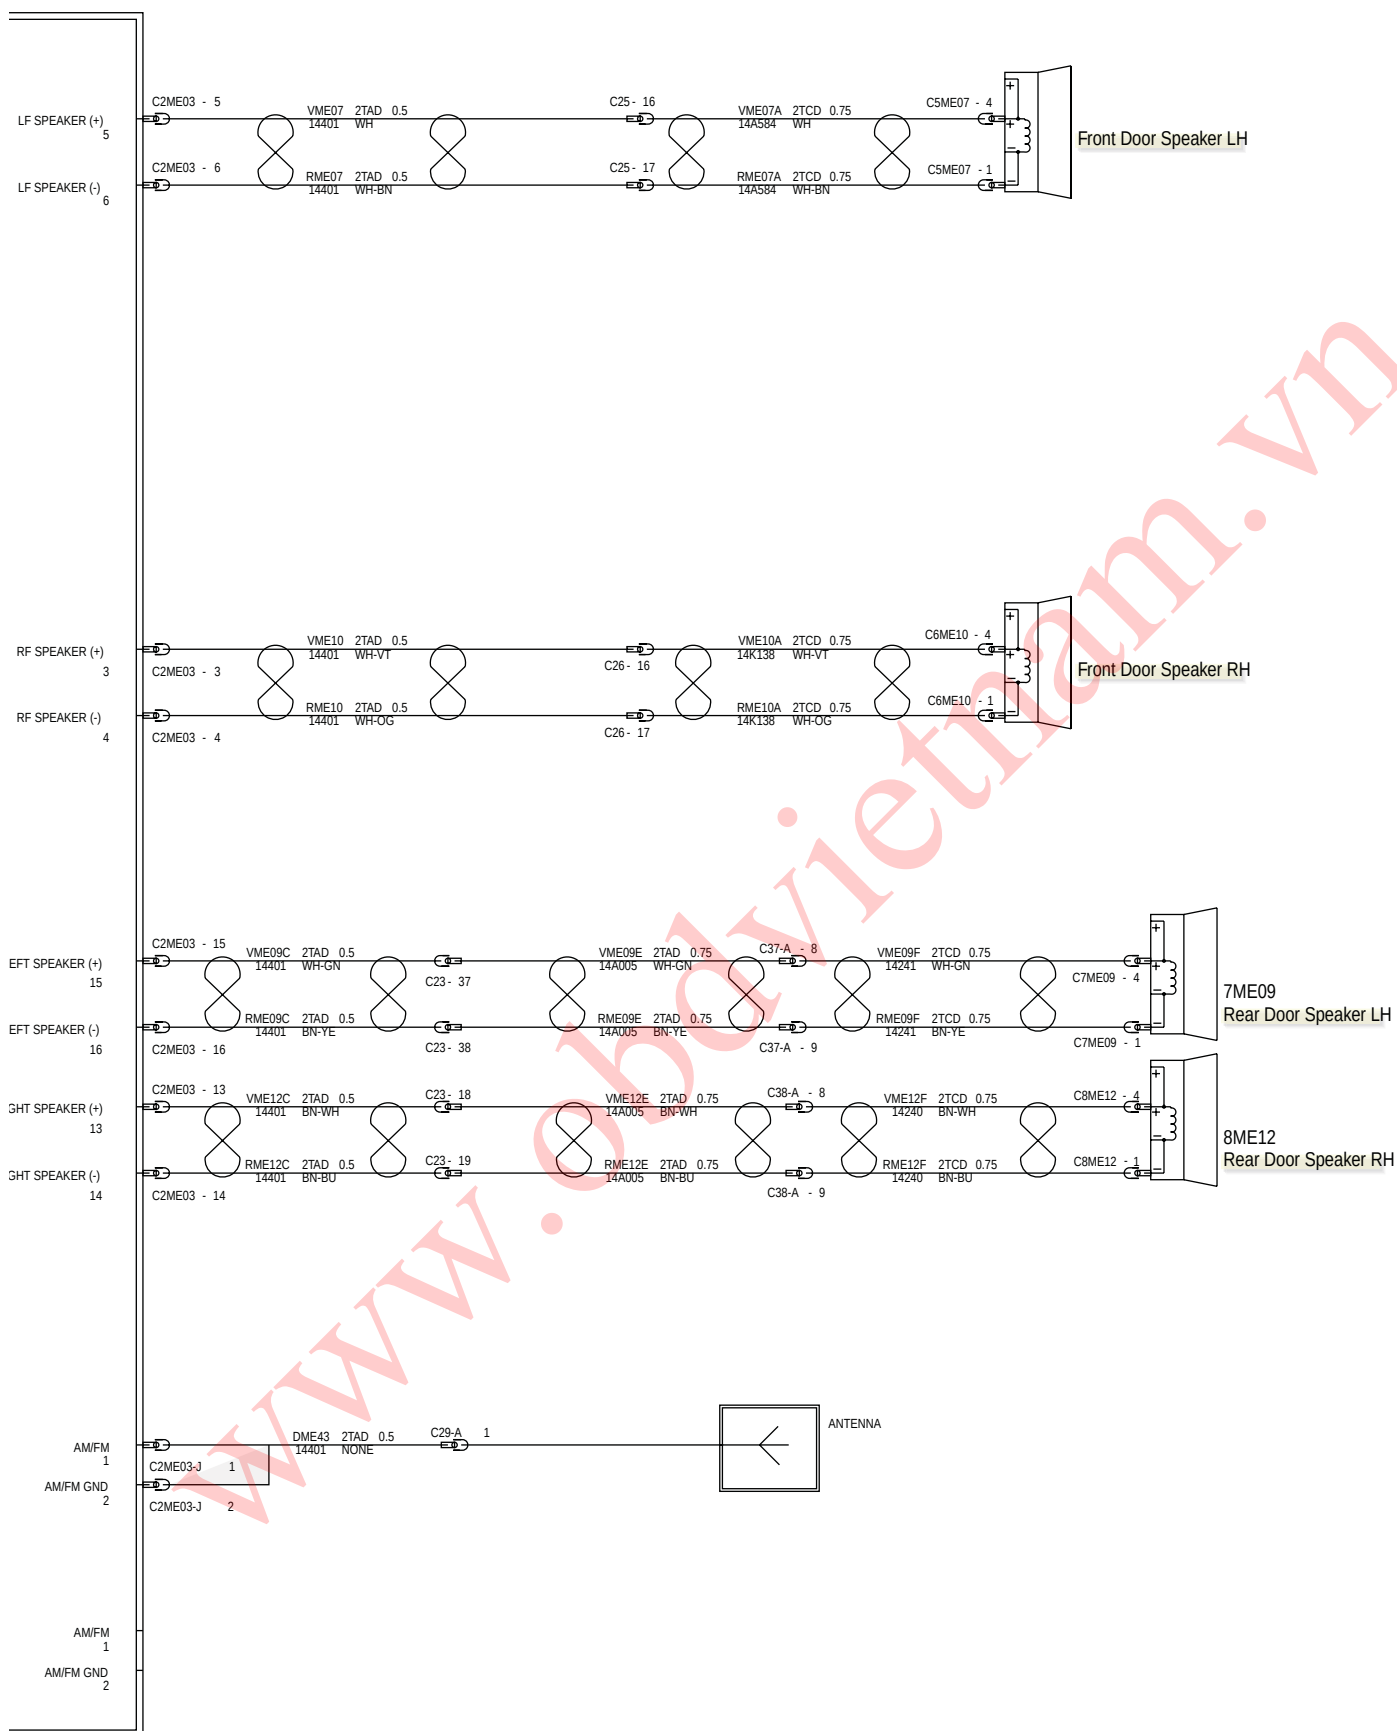




415-01-14 Audio System—Super Cab, RHD 4WD/RHD RWD, Vehicles With: Single DIN Standard Audio Unit

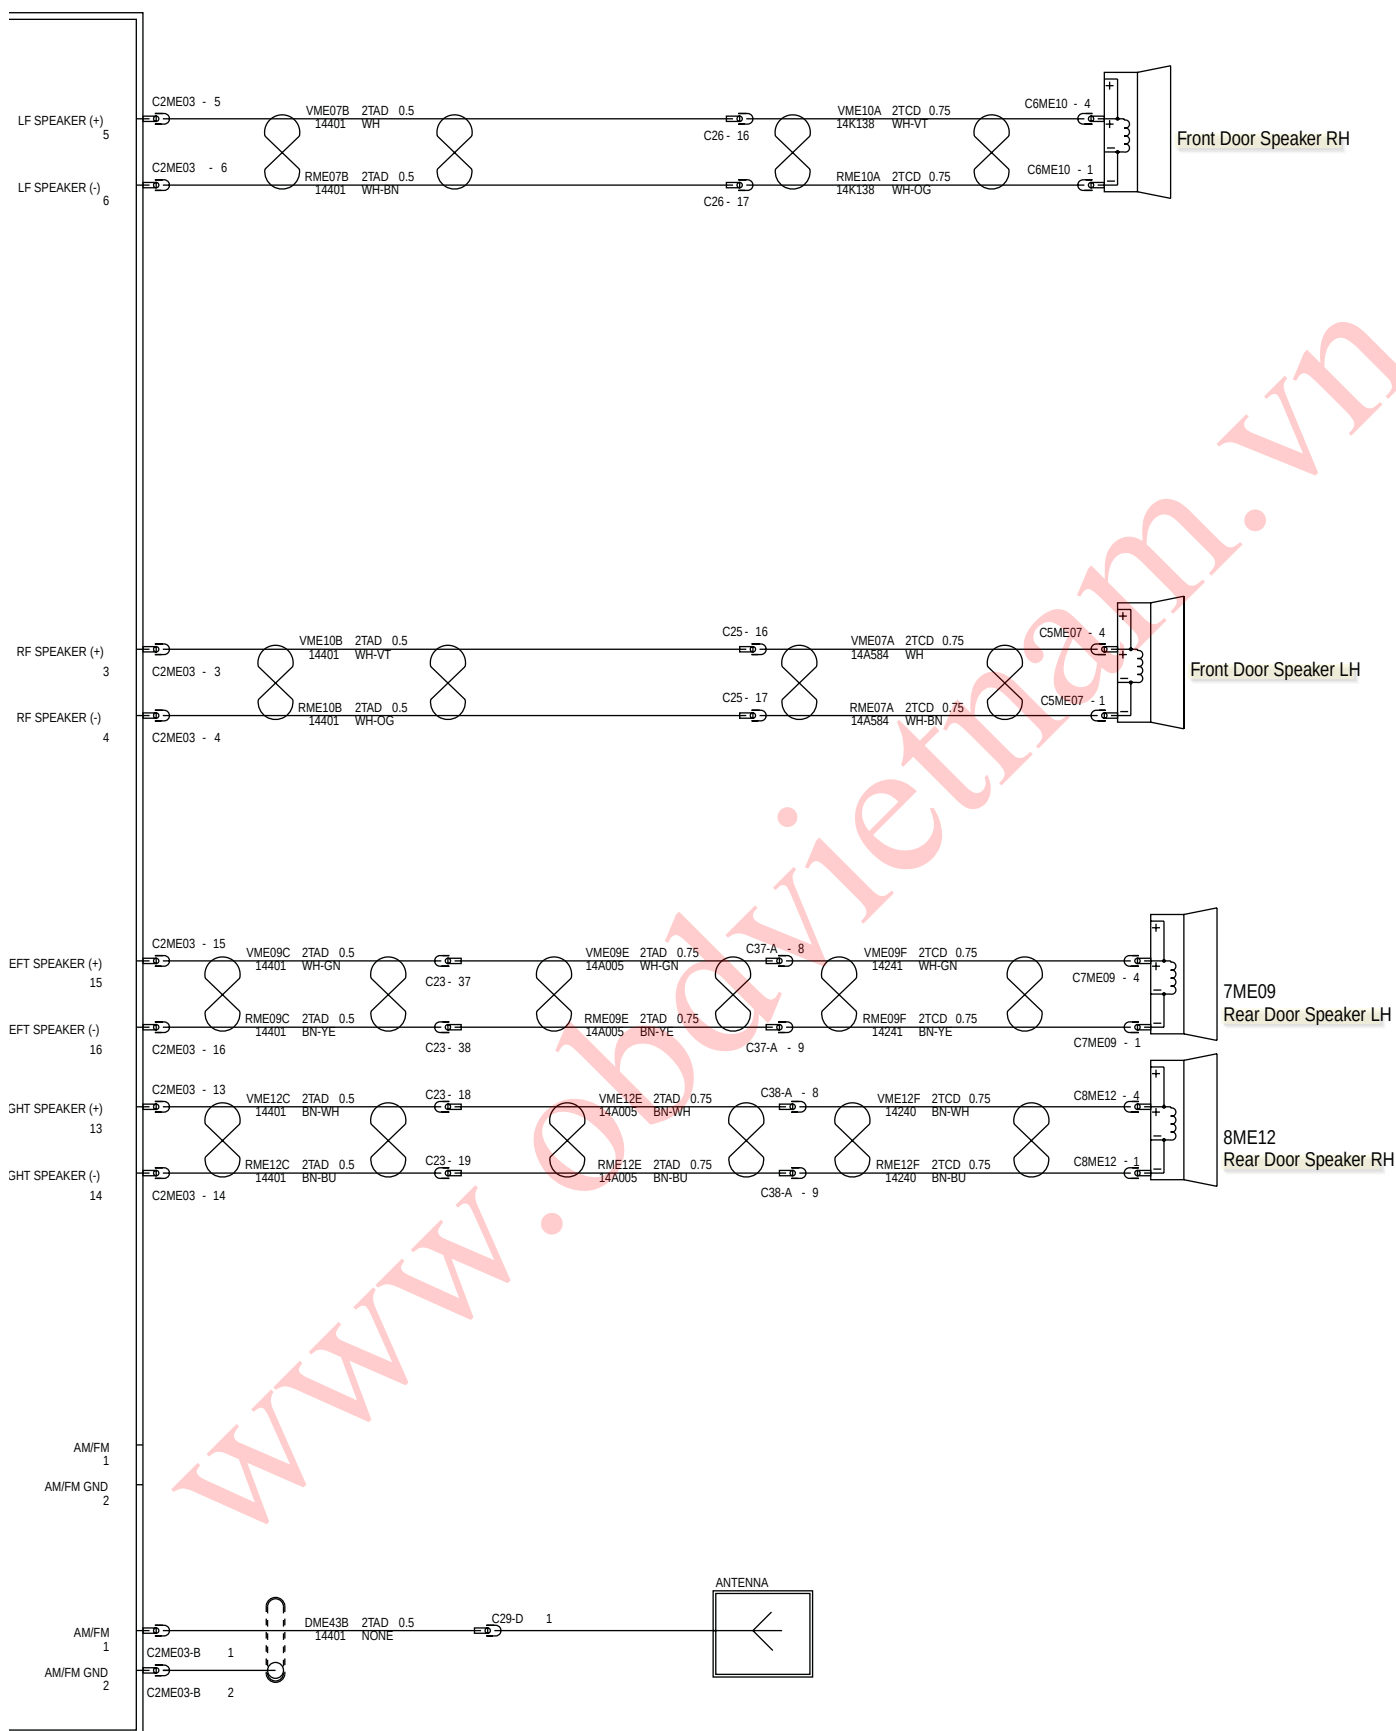


415-01-15 Audio System—Single Cab, LHD 4WD/LHD RWD, Vehicles With: Bluetooth and Voice Control

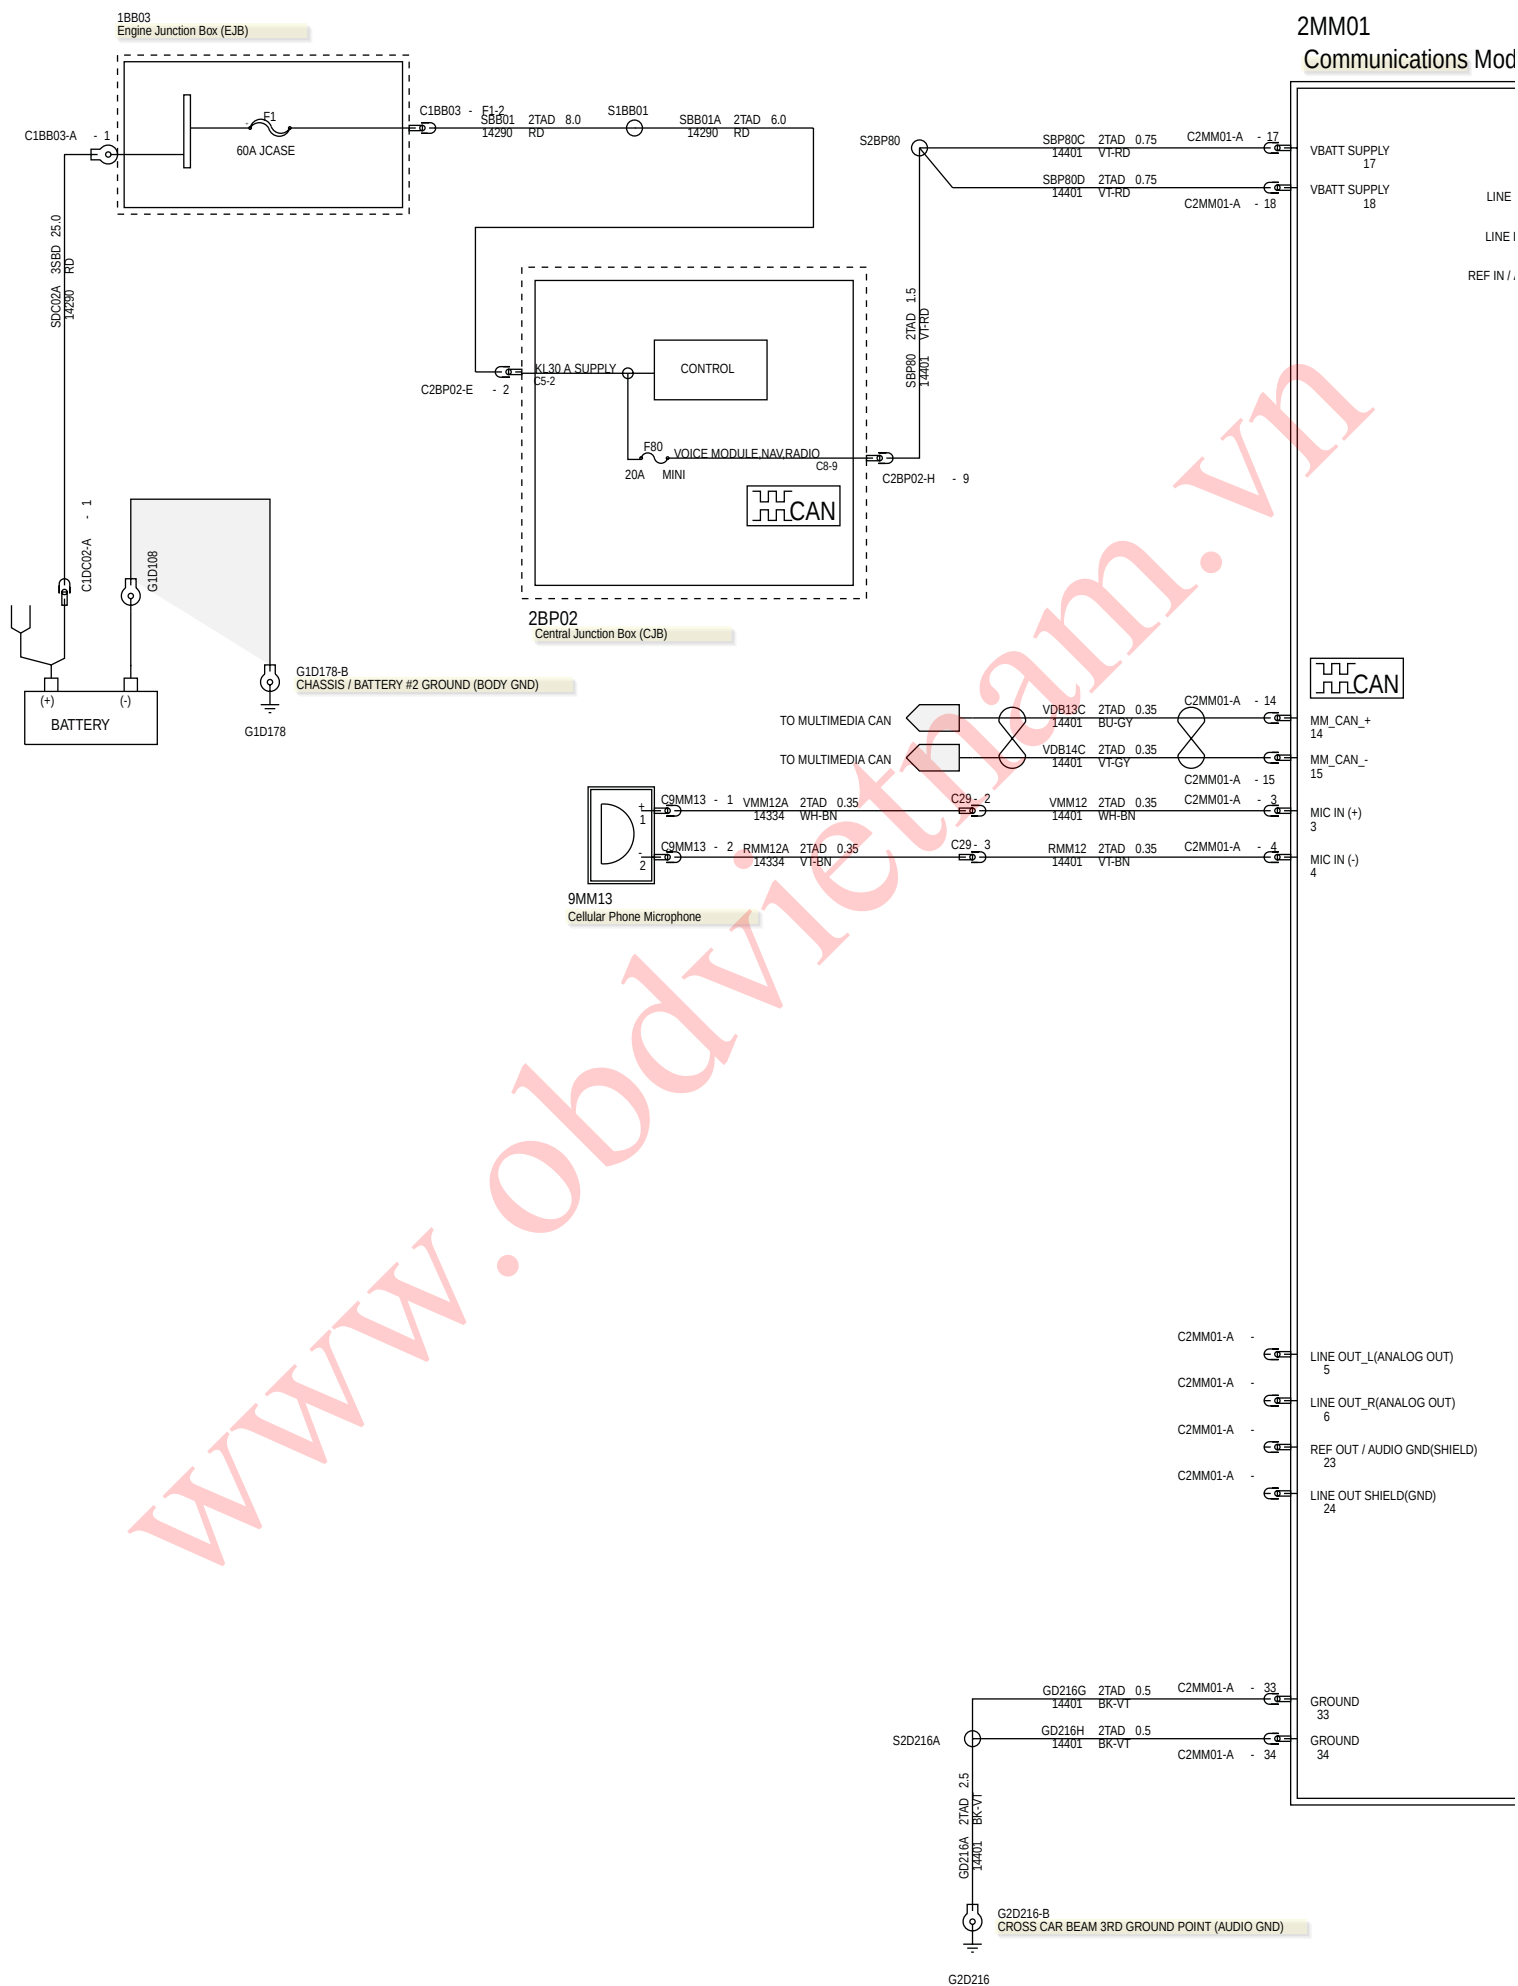

415-01-16 Audio System—Single Cab, LHD 4WD/LHD RWD, Vehicles With: Bluetooth and Voice Control

lule

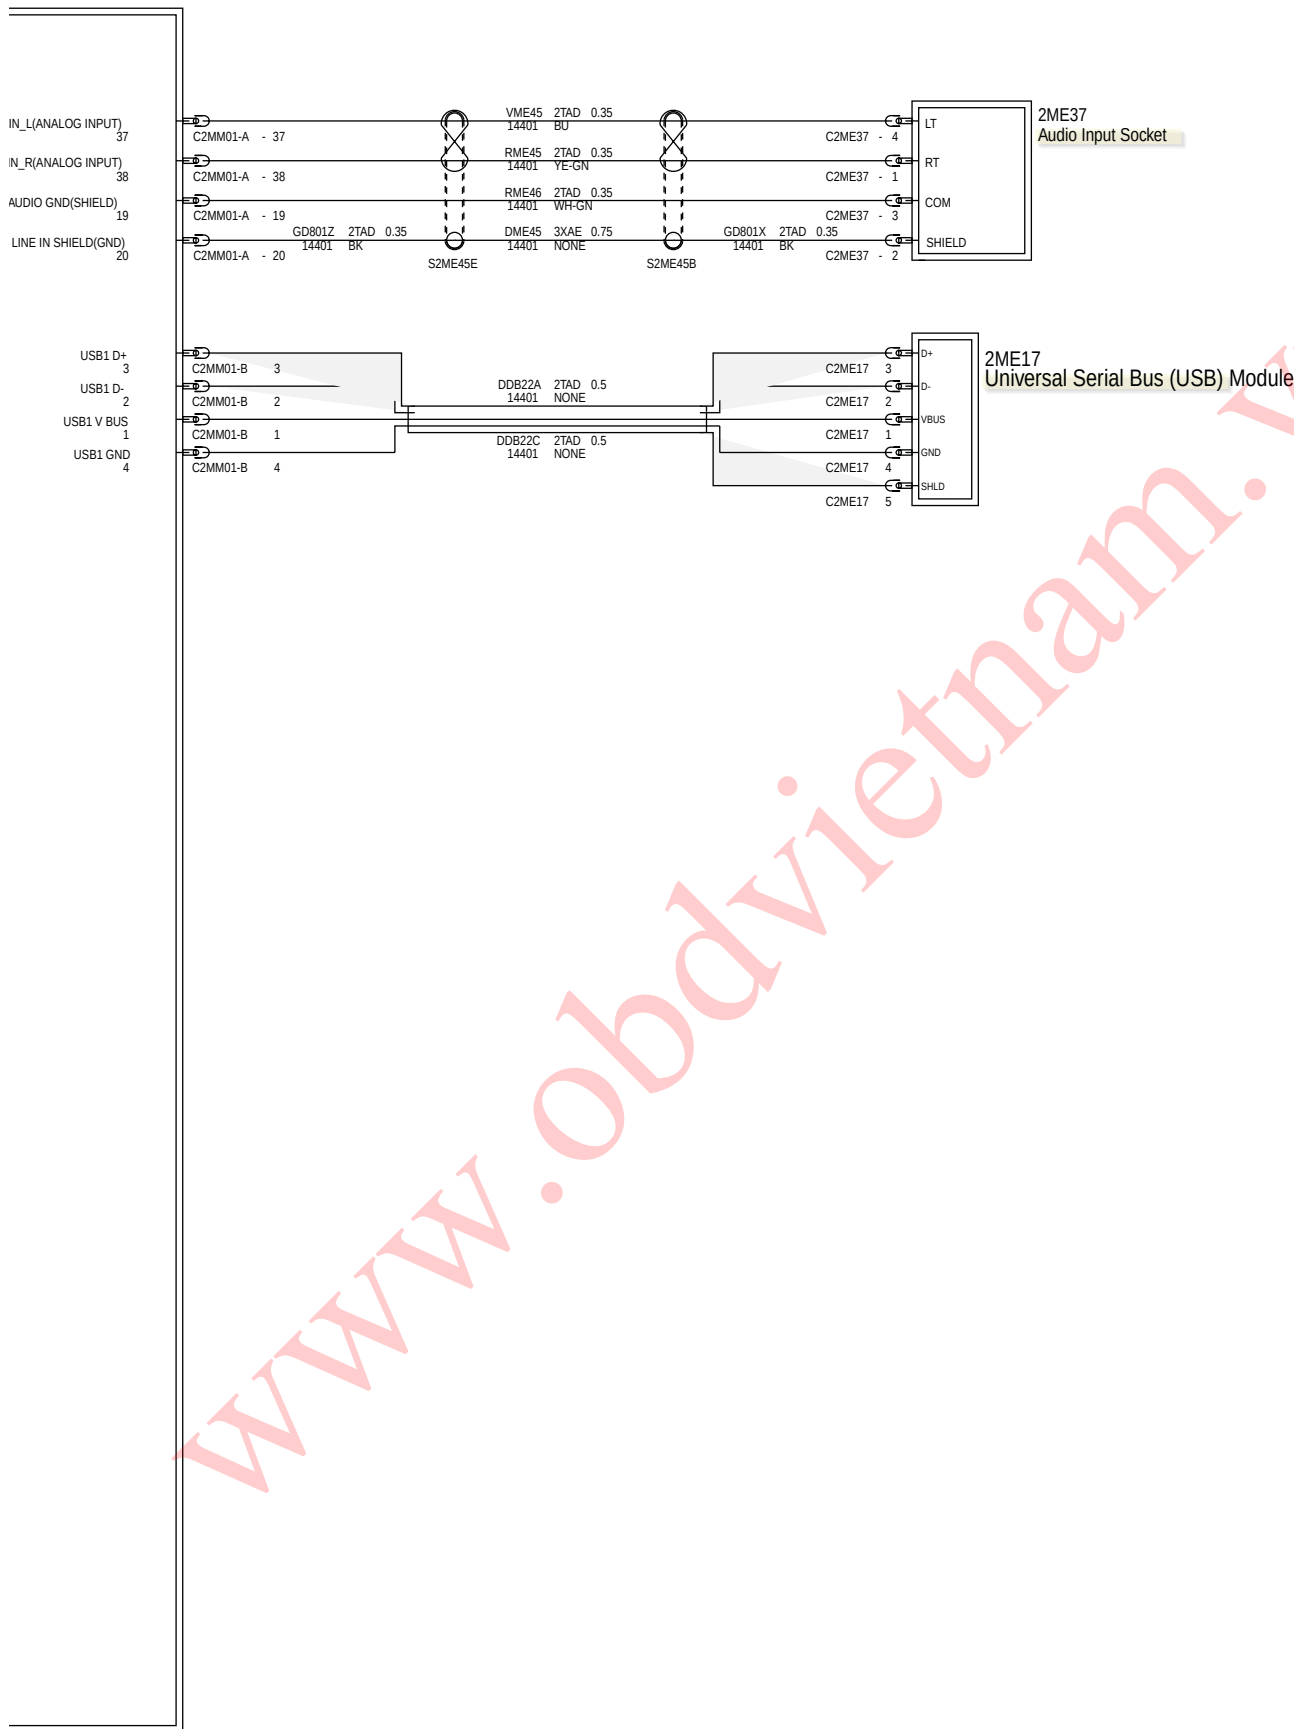


1BB03
Engine Junction Box (EJB)



415-01-18 Audio System—Single Cab, LHD 4WD/LHD RWD, Vehicles With: Bluetooth and Voice Control

Entertainment Unit


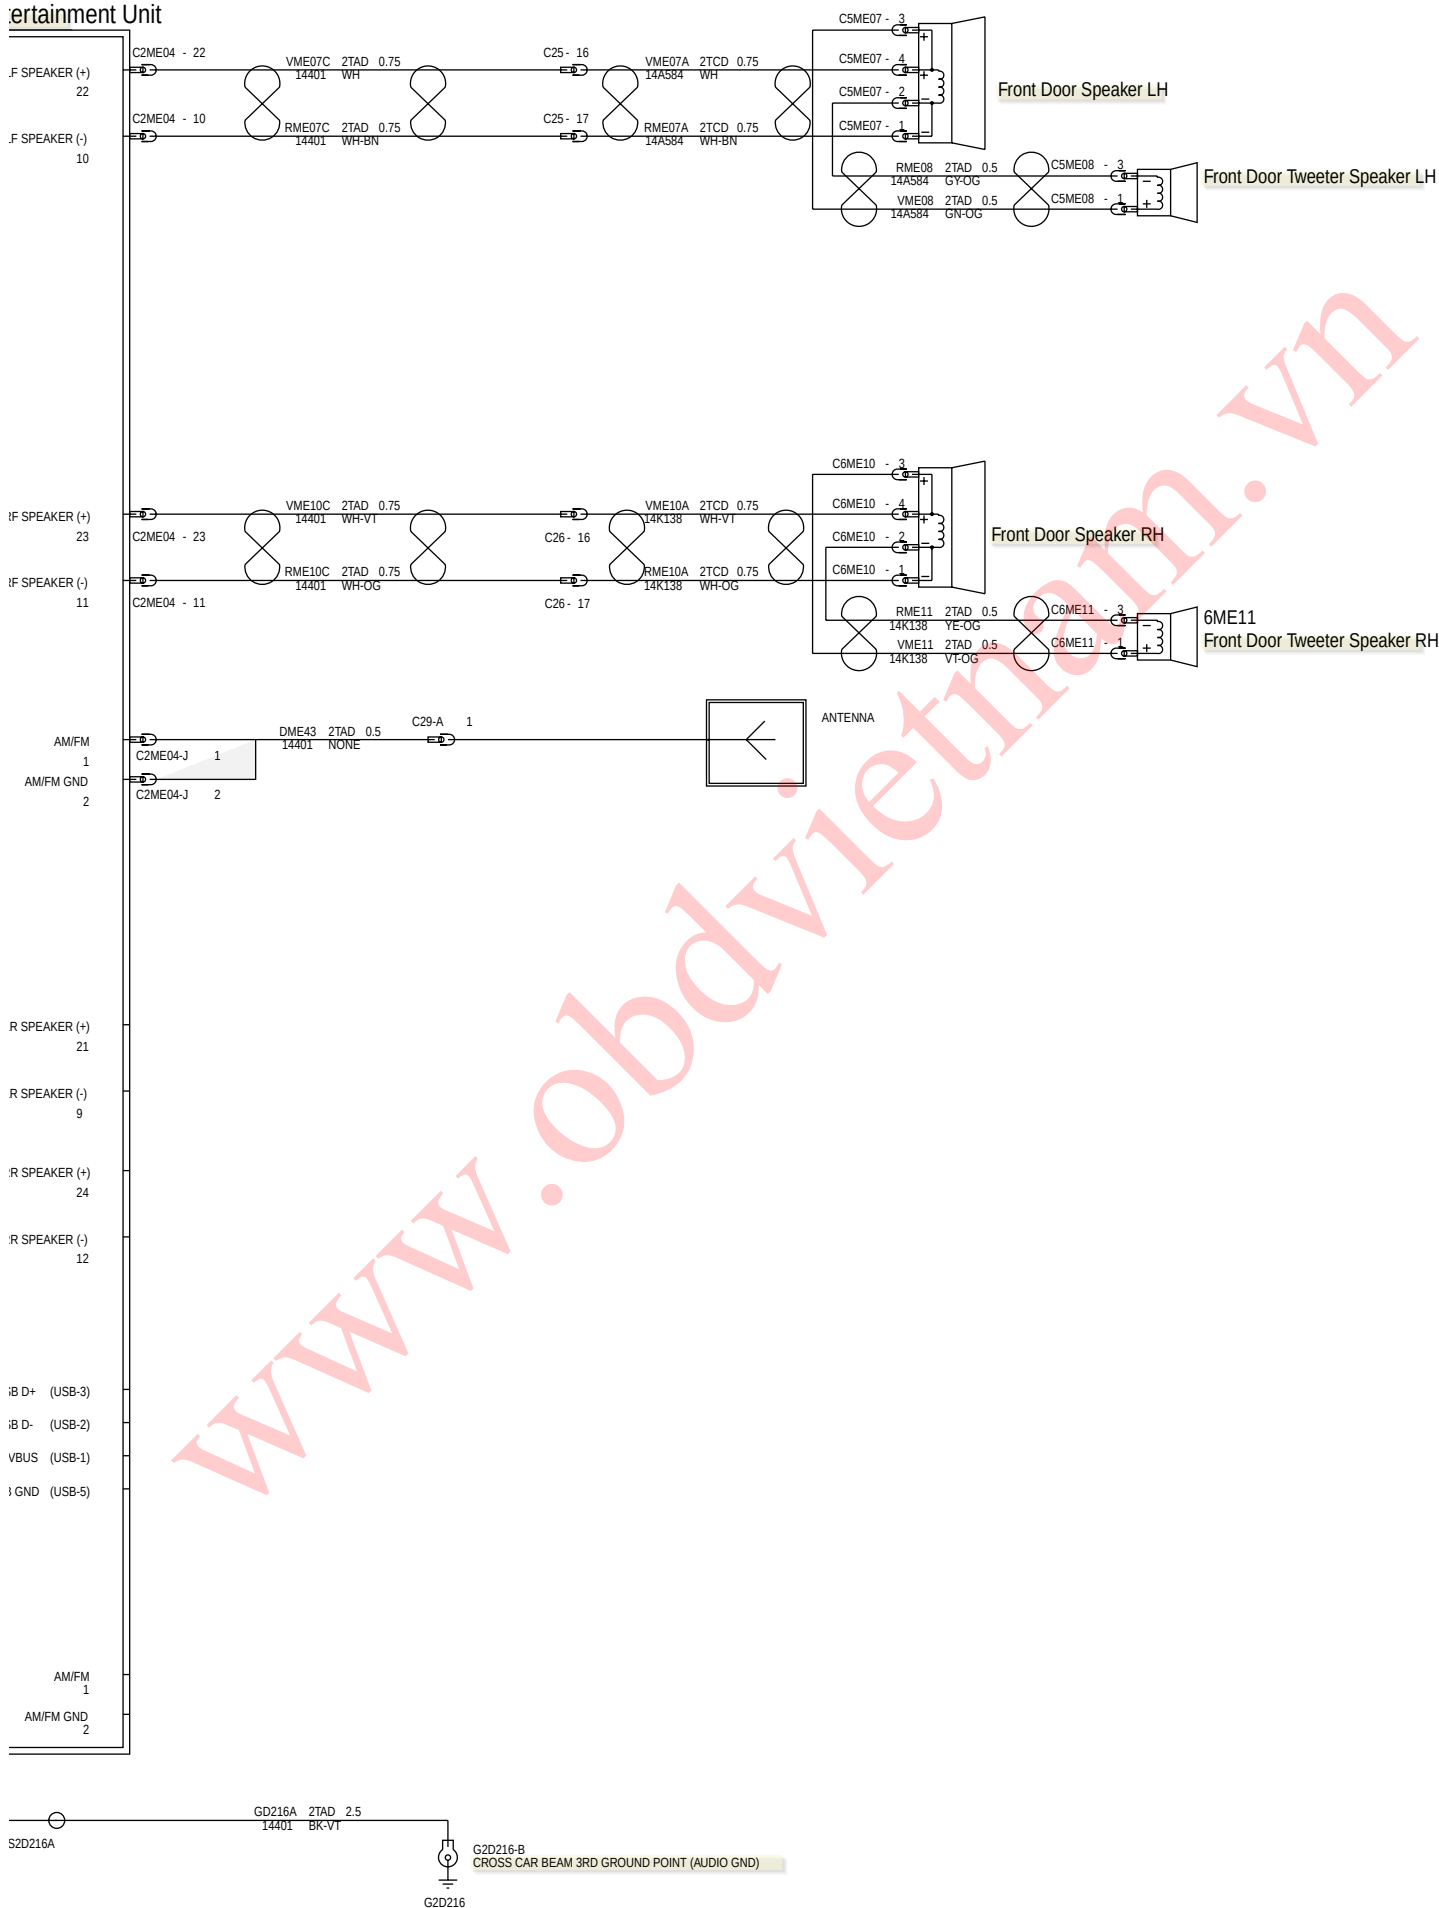


2ME04
Information and Ent




415-01-20 Audio System—Single Cab, LHD 4WD/LHD RWD, Vehicles Without: Bluetooth and Voice Control

Entertainment Unit

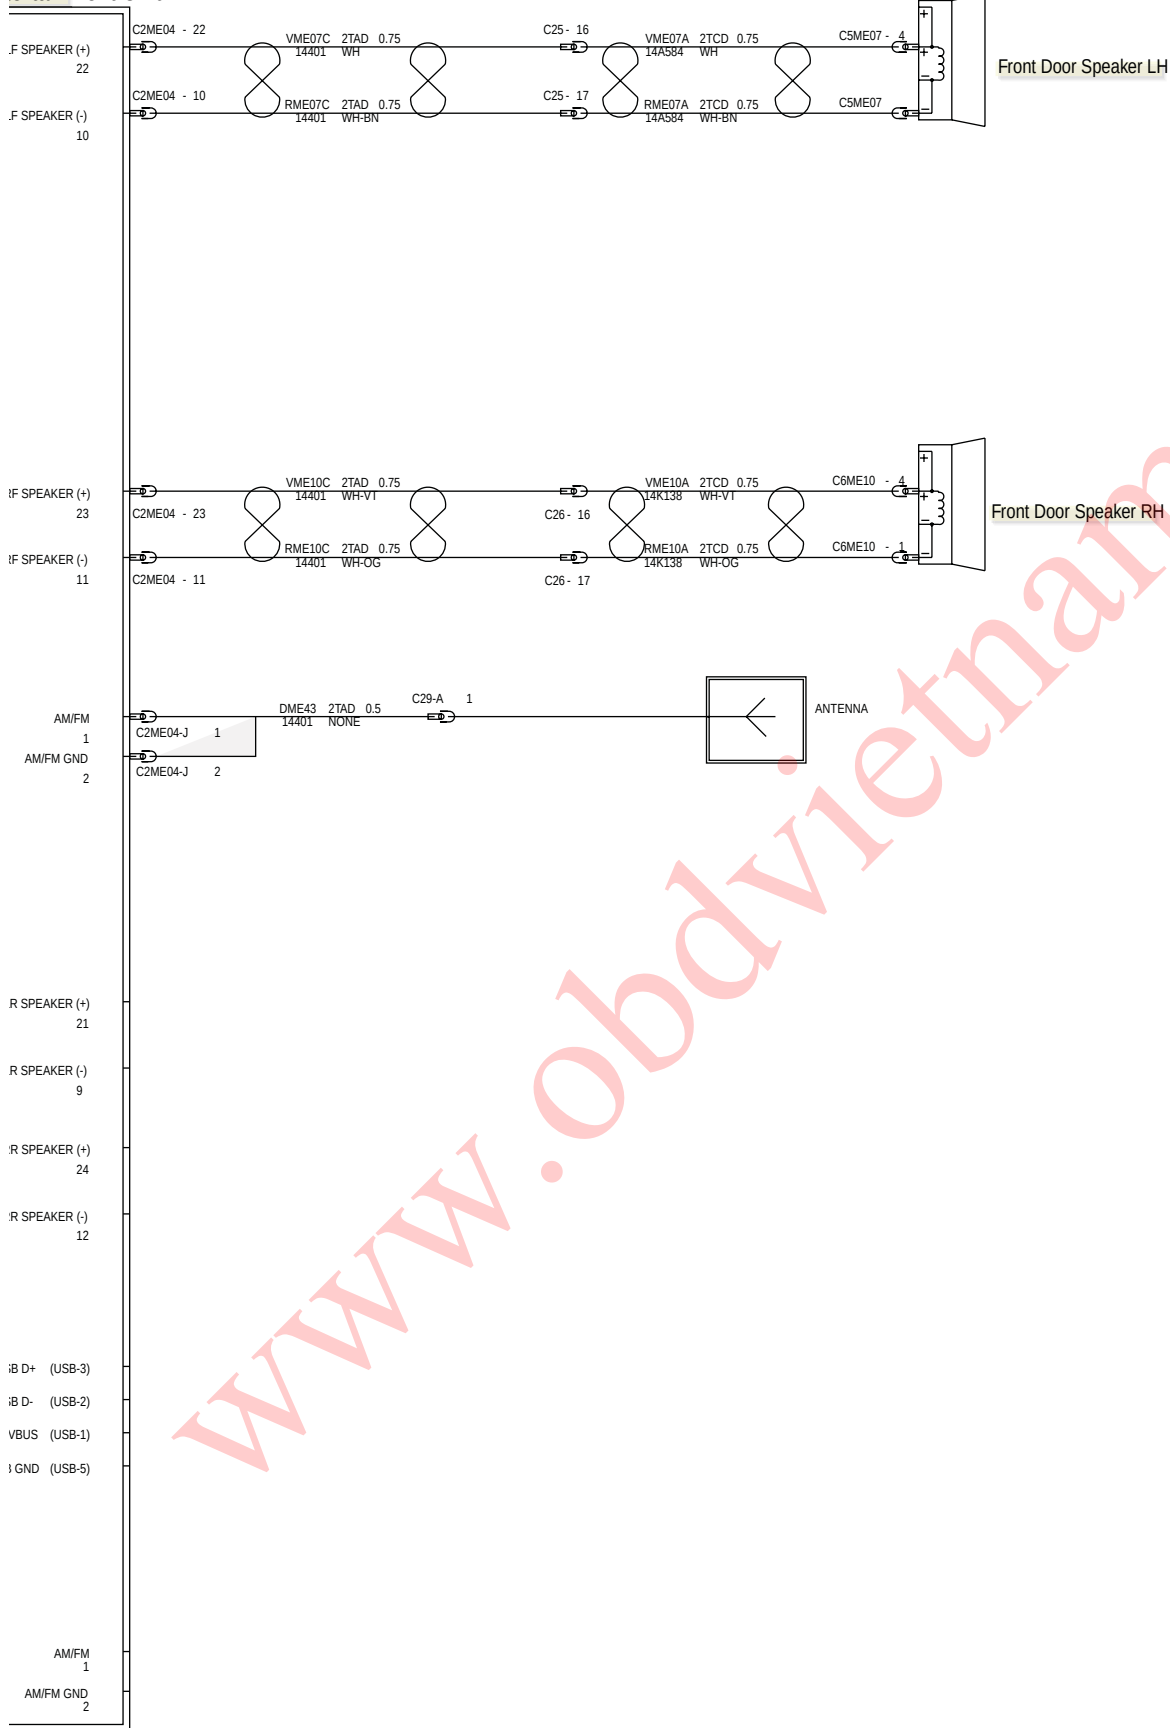



415-01-21 Audio System—Double Cab, LHD 4WD/LHD RWD, Vehicles With: Bluetooth and Voice Control

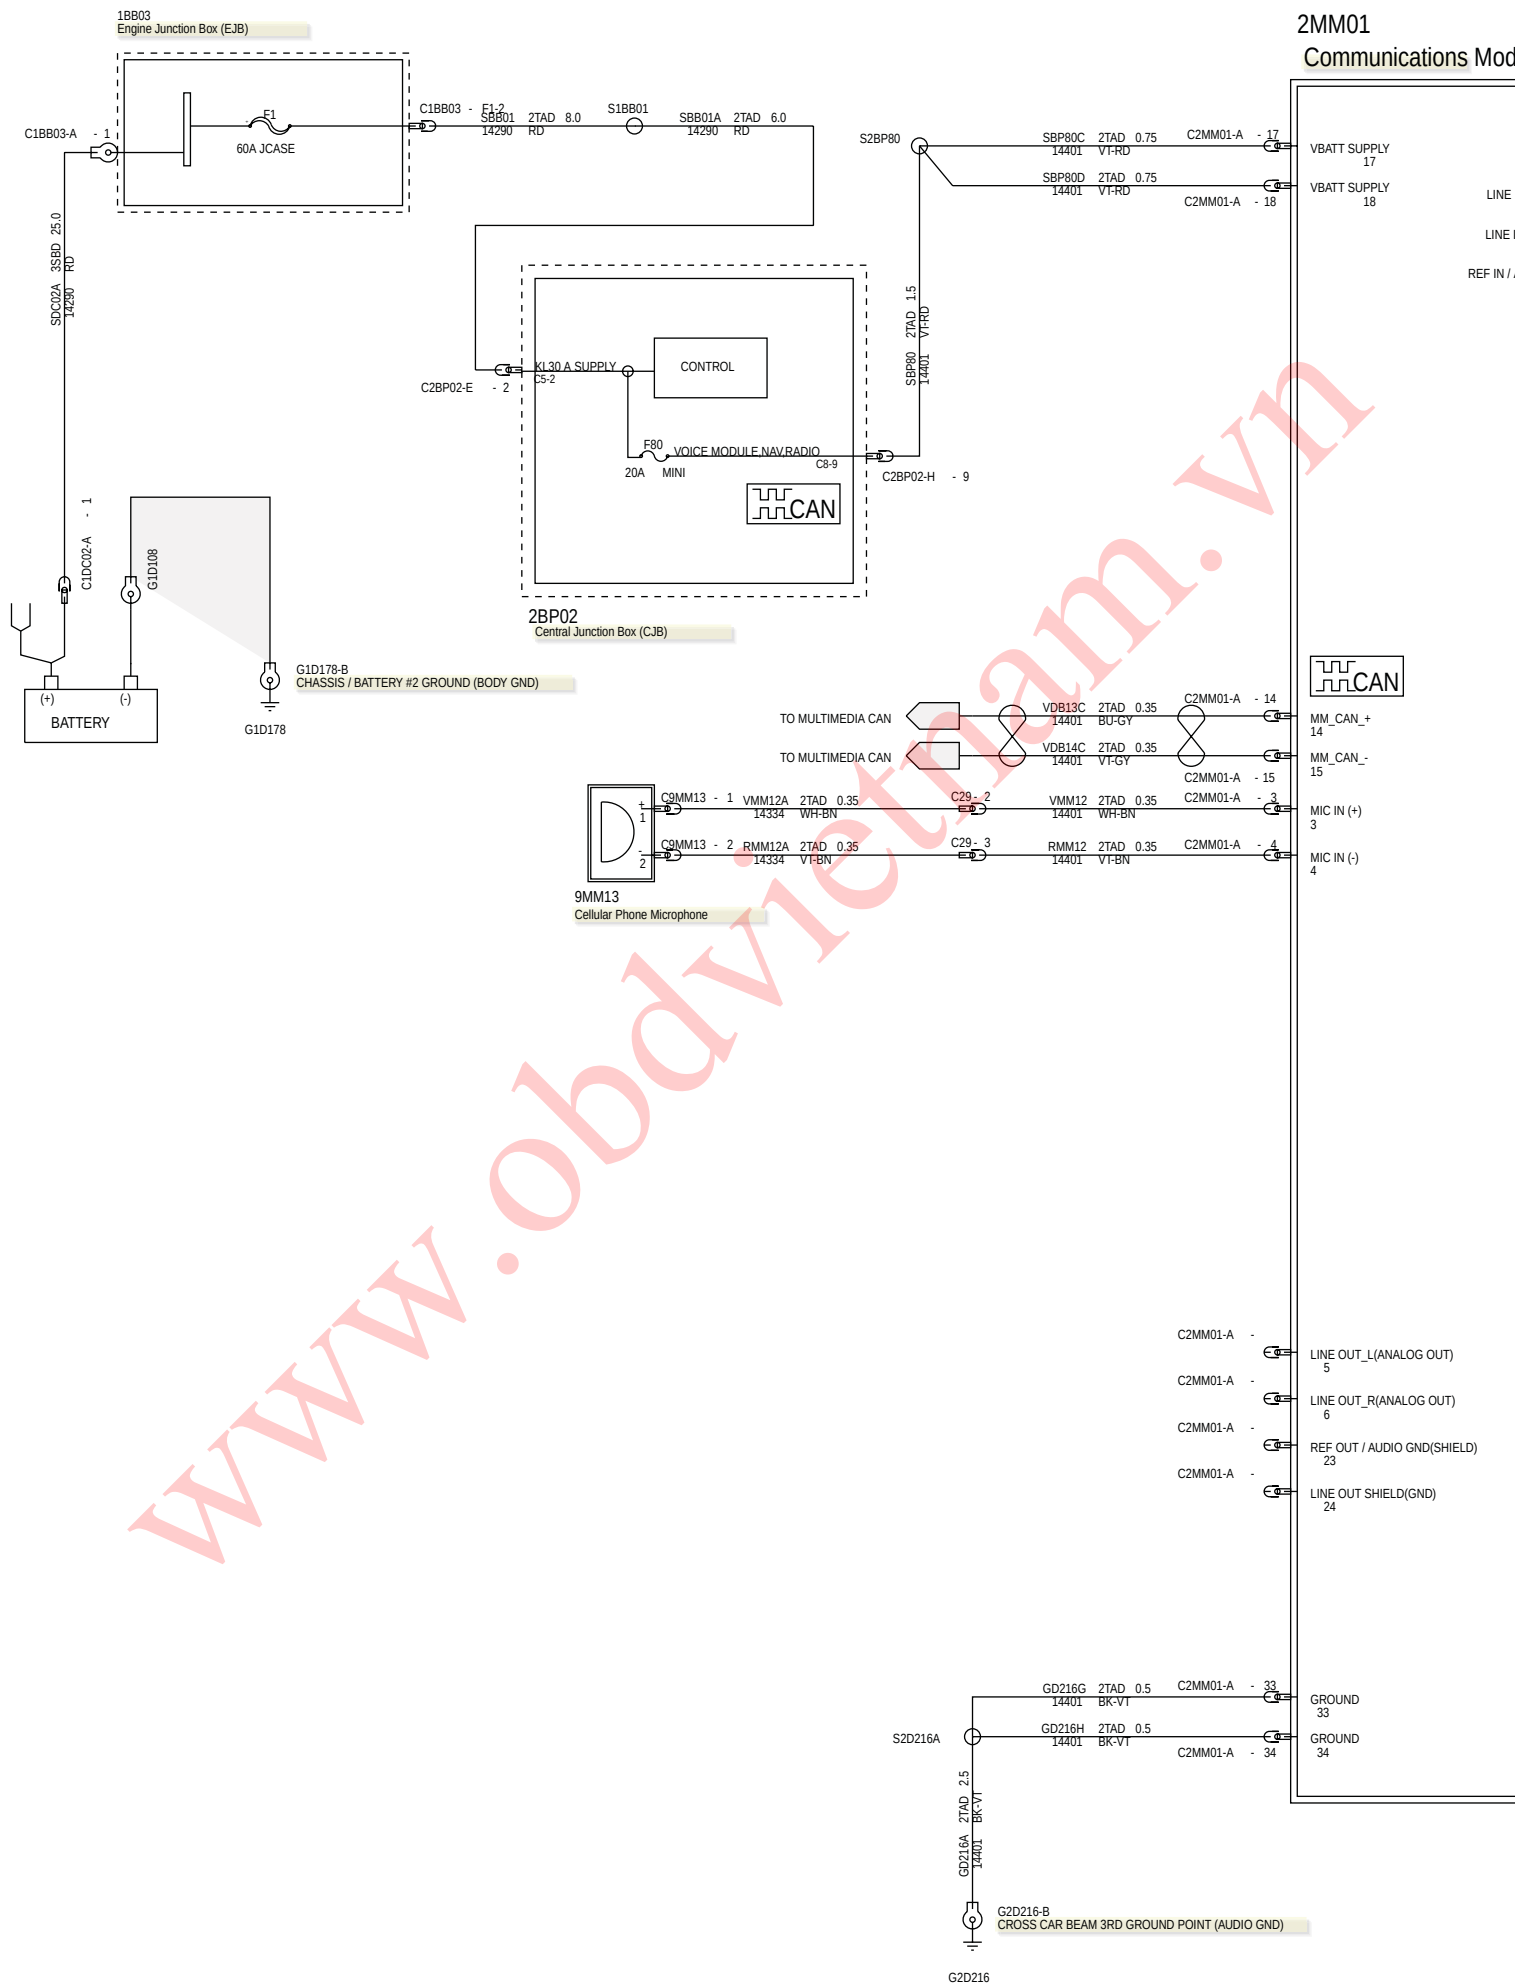

415-01-22 Audio System—Double Cab, LHD 4WD/LHD RWD, Vehicles With: Bluetooth and Voice Control


lule

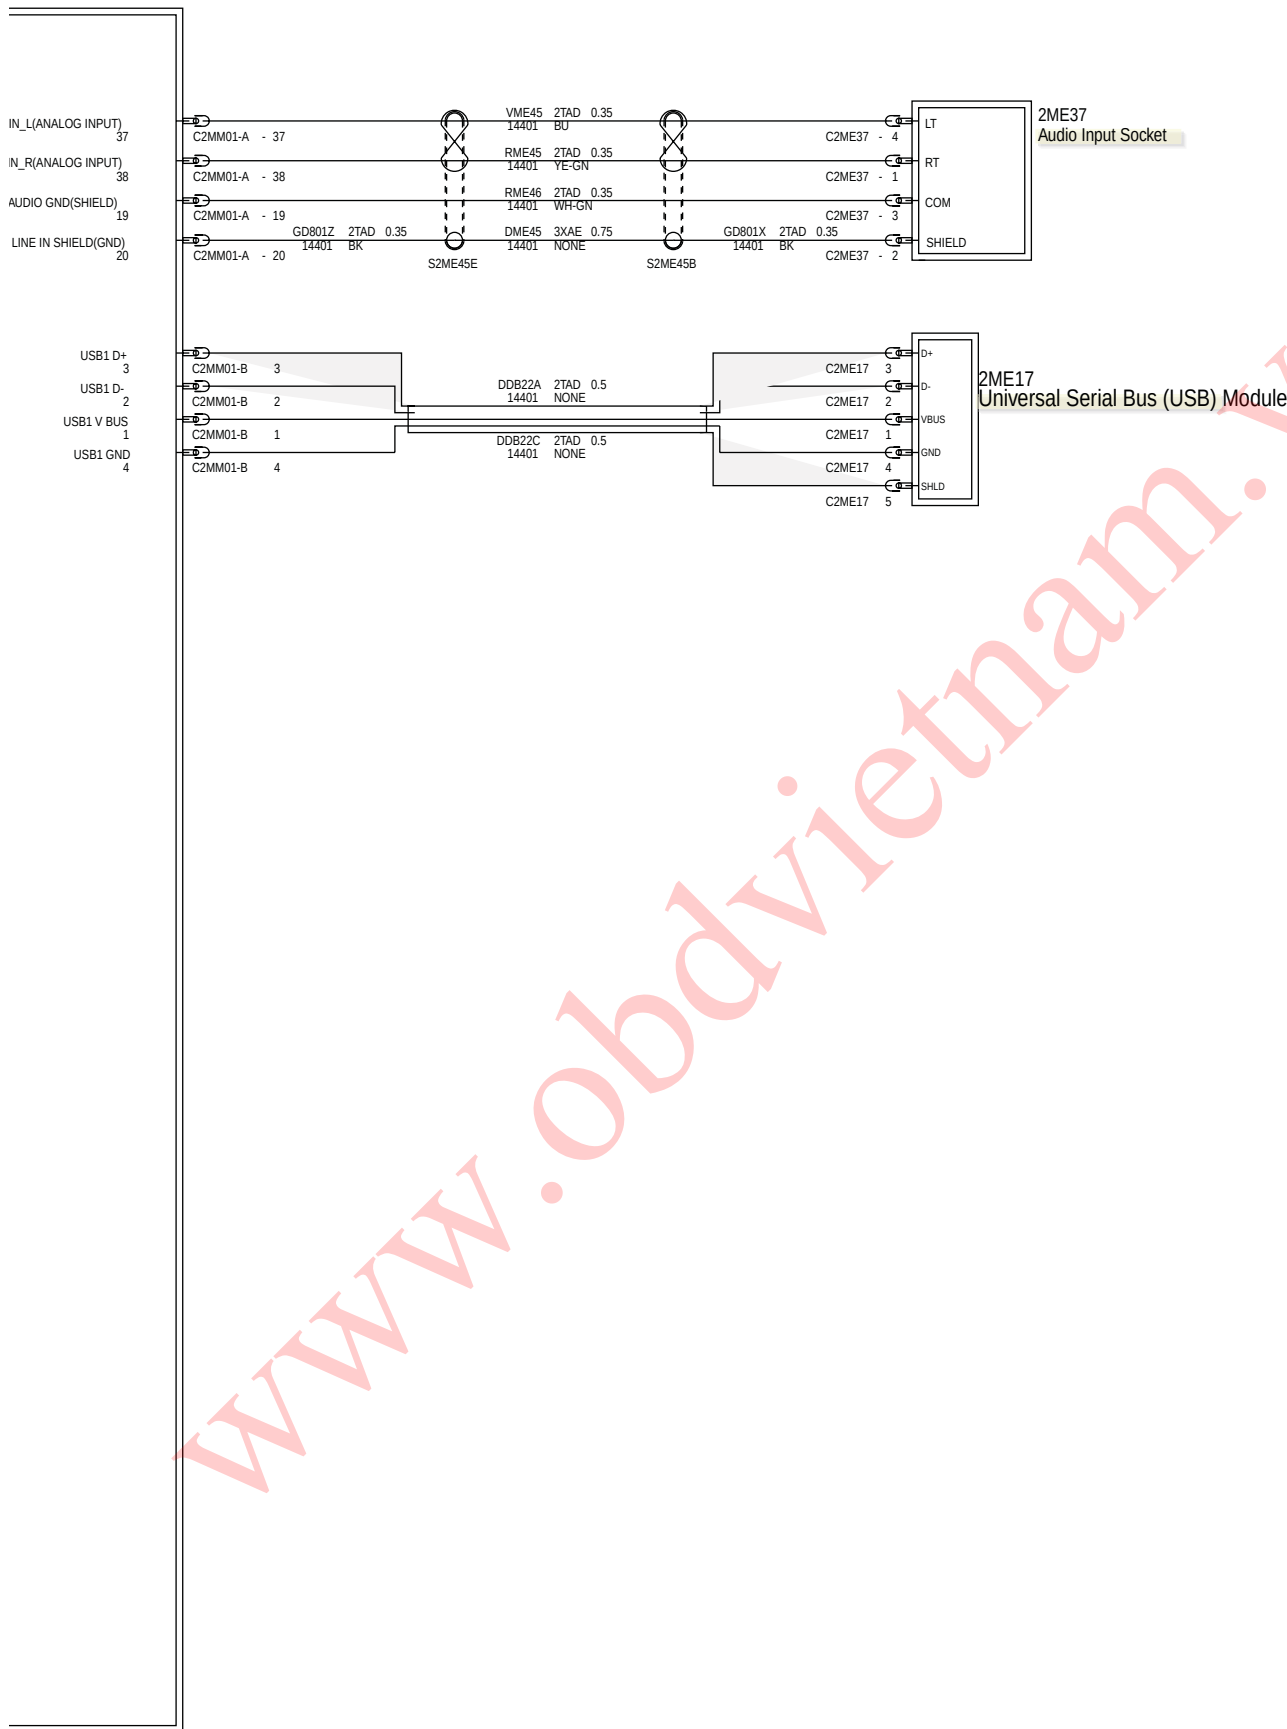


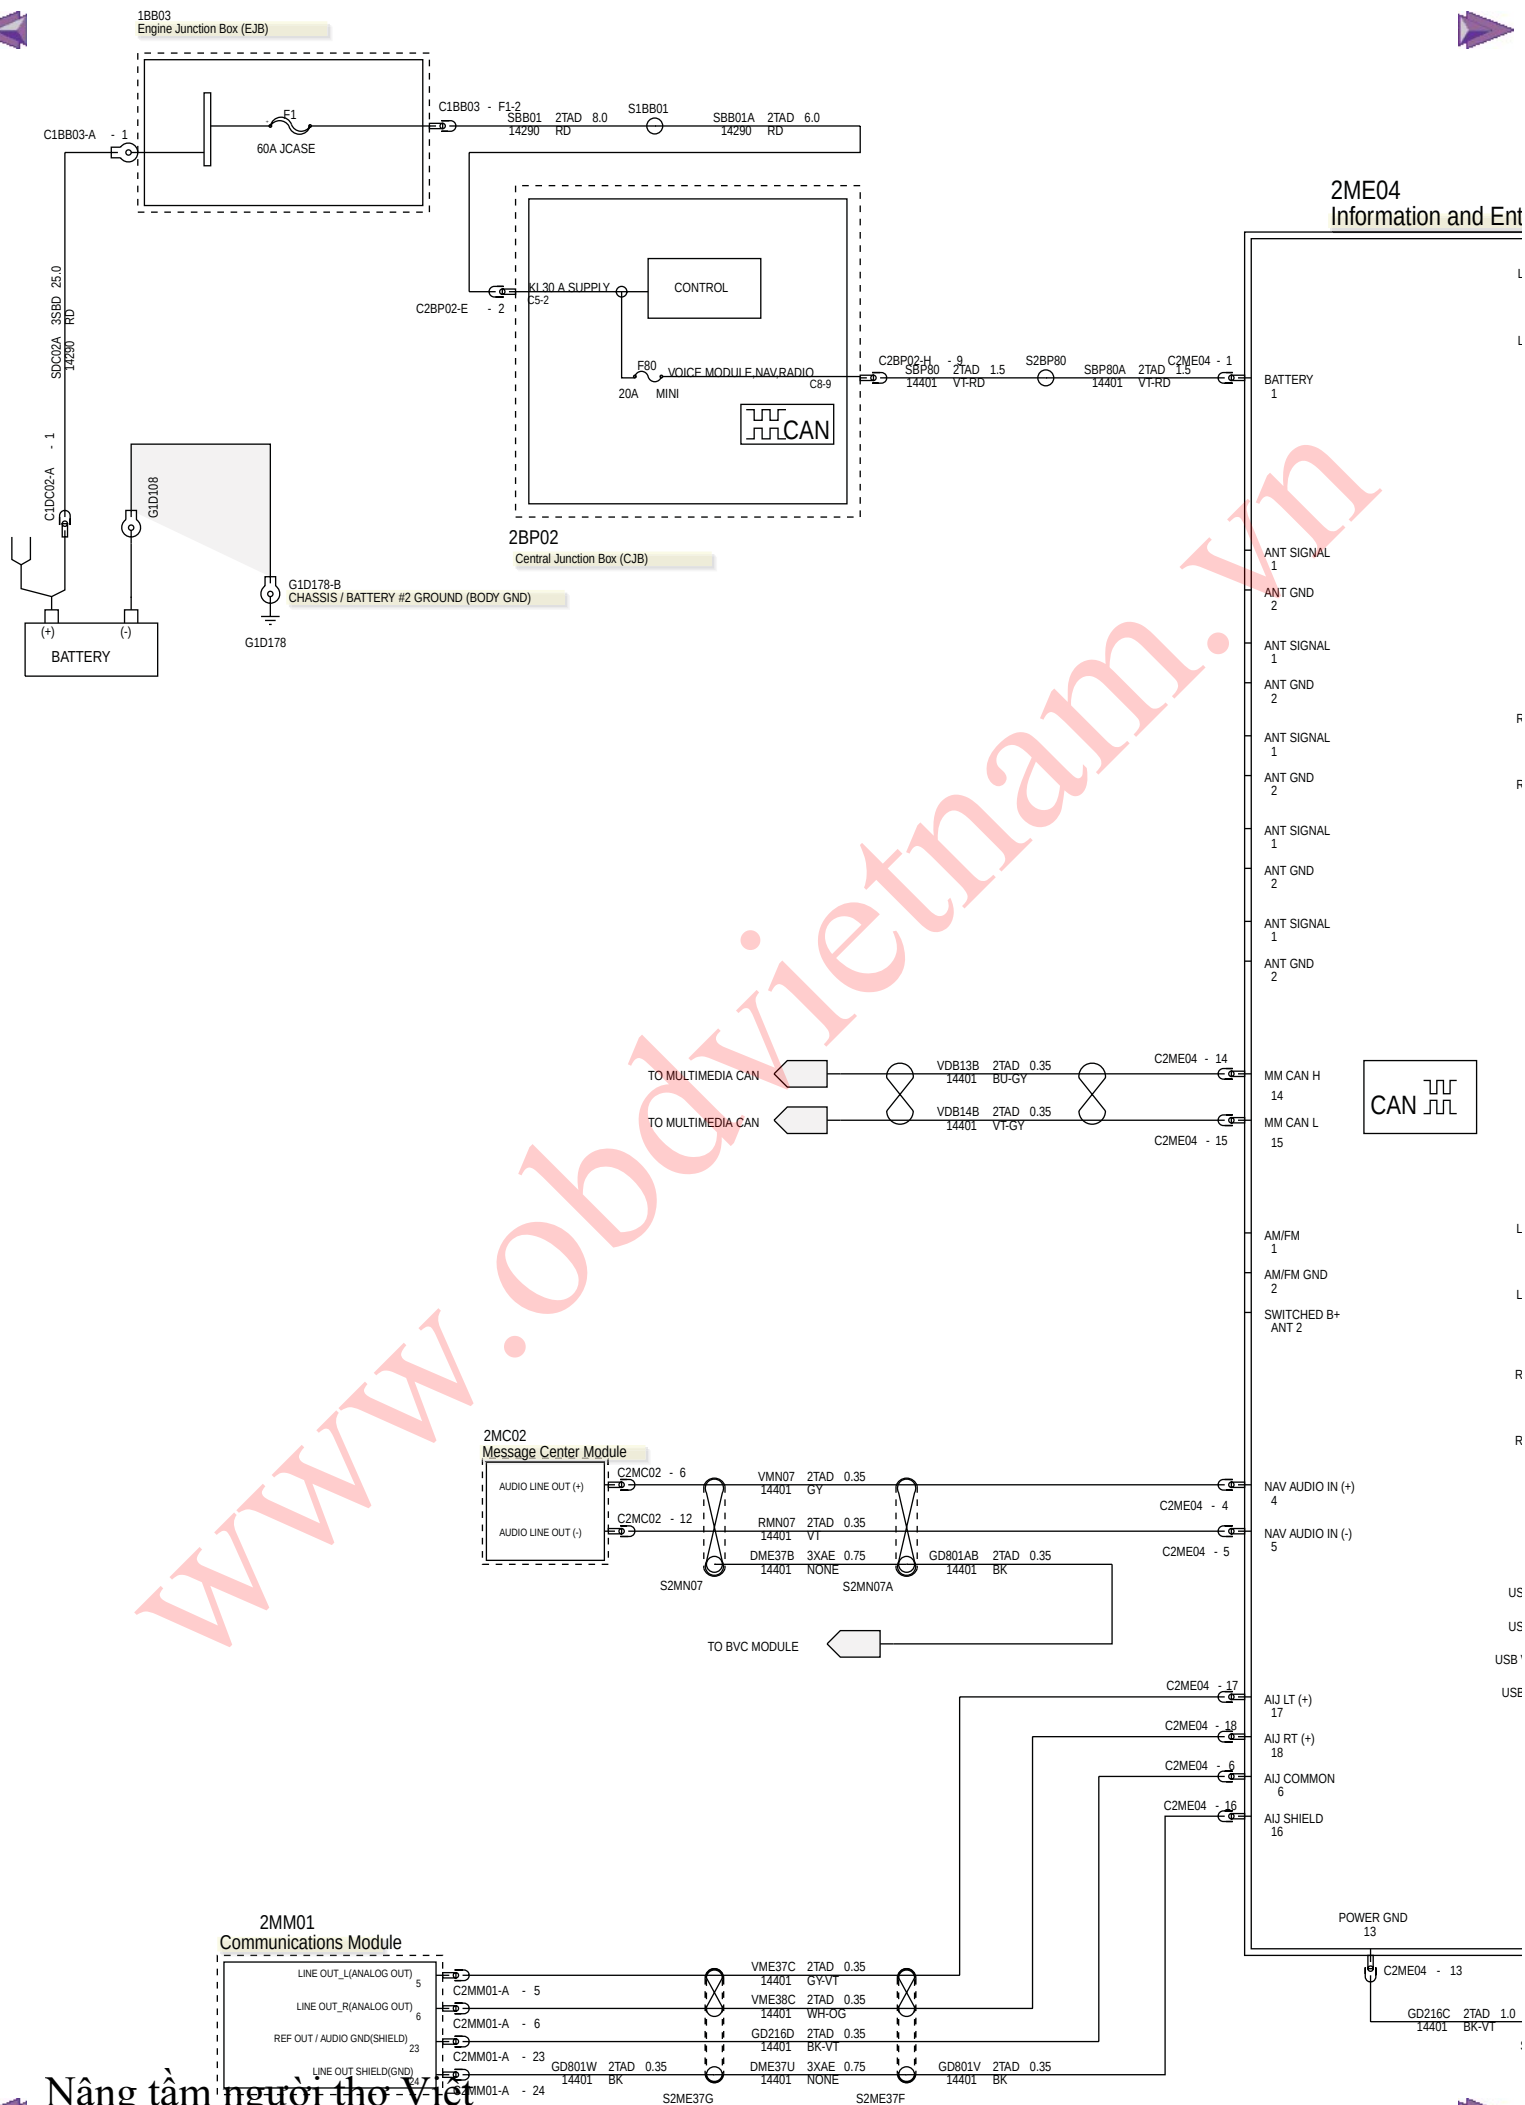

415-01-24 Audio System—Double Cab, LHD 4WD/LHD RWD, Vehicles With: Bluetooth and Voice Control


Entertainment Unit

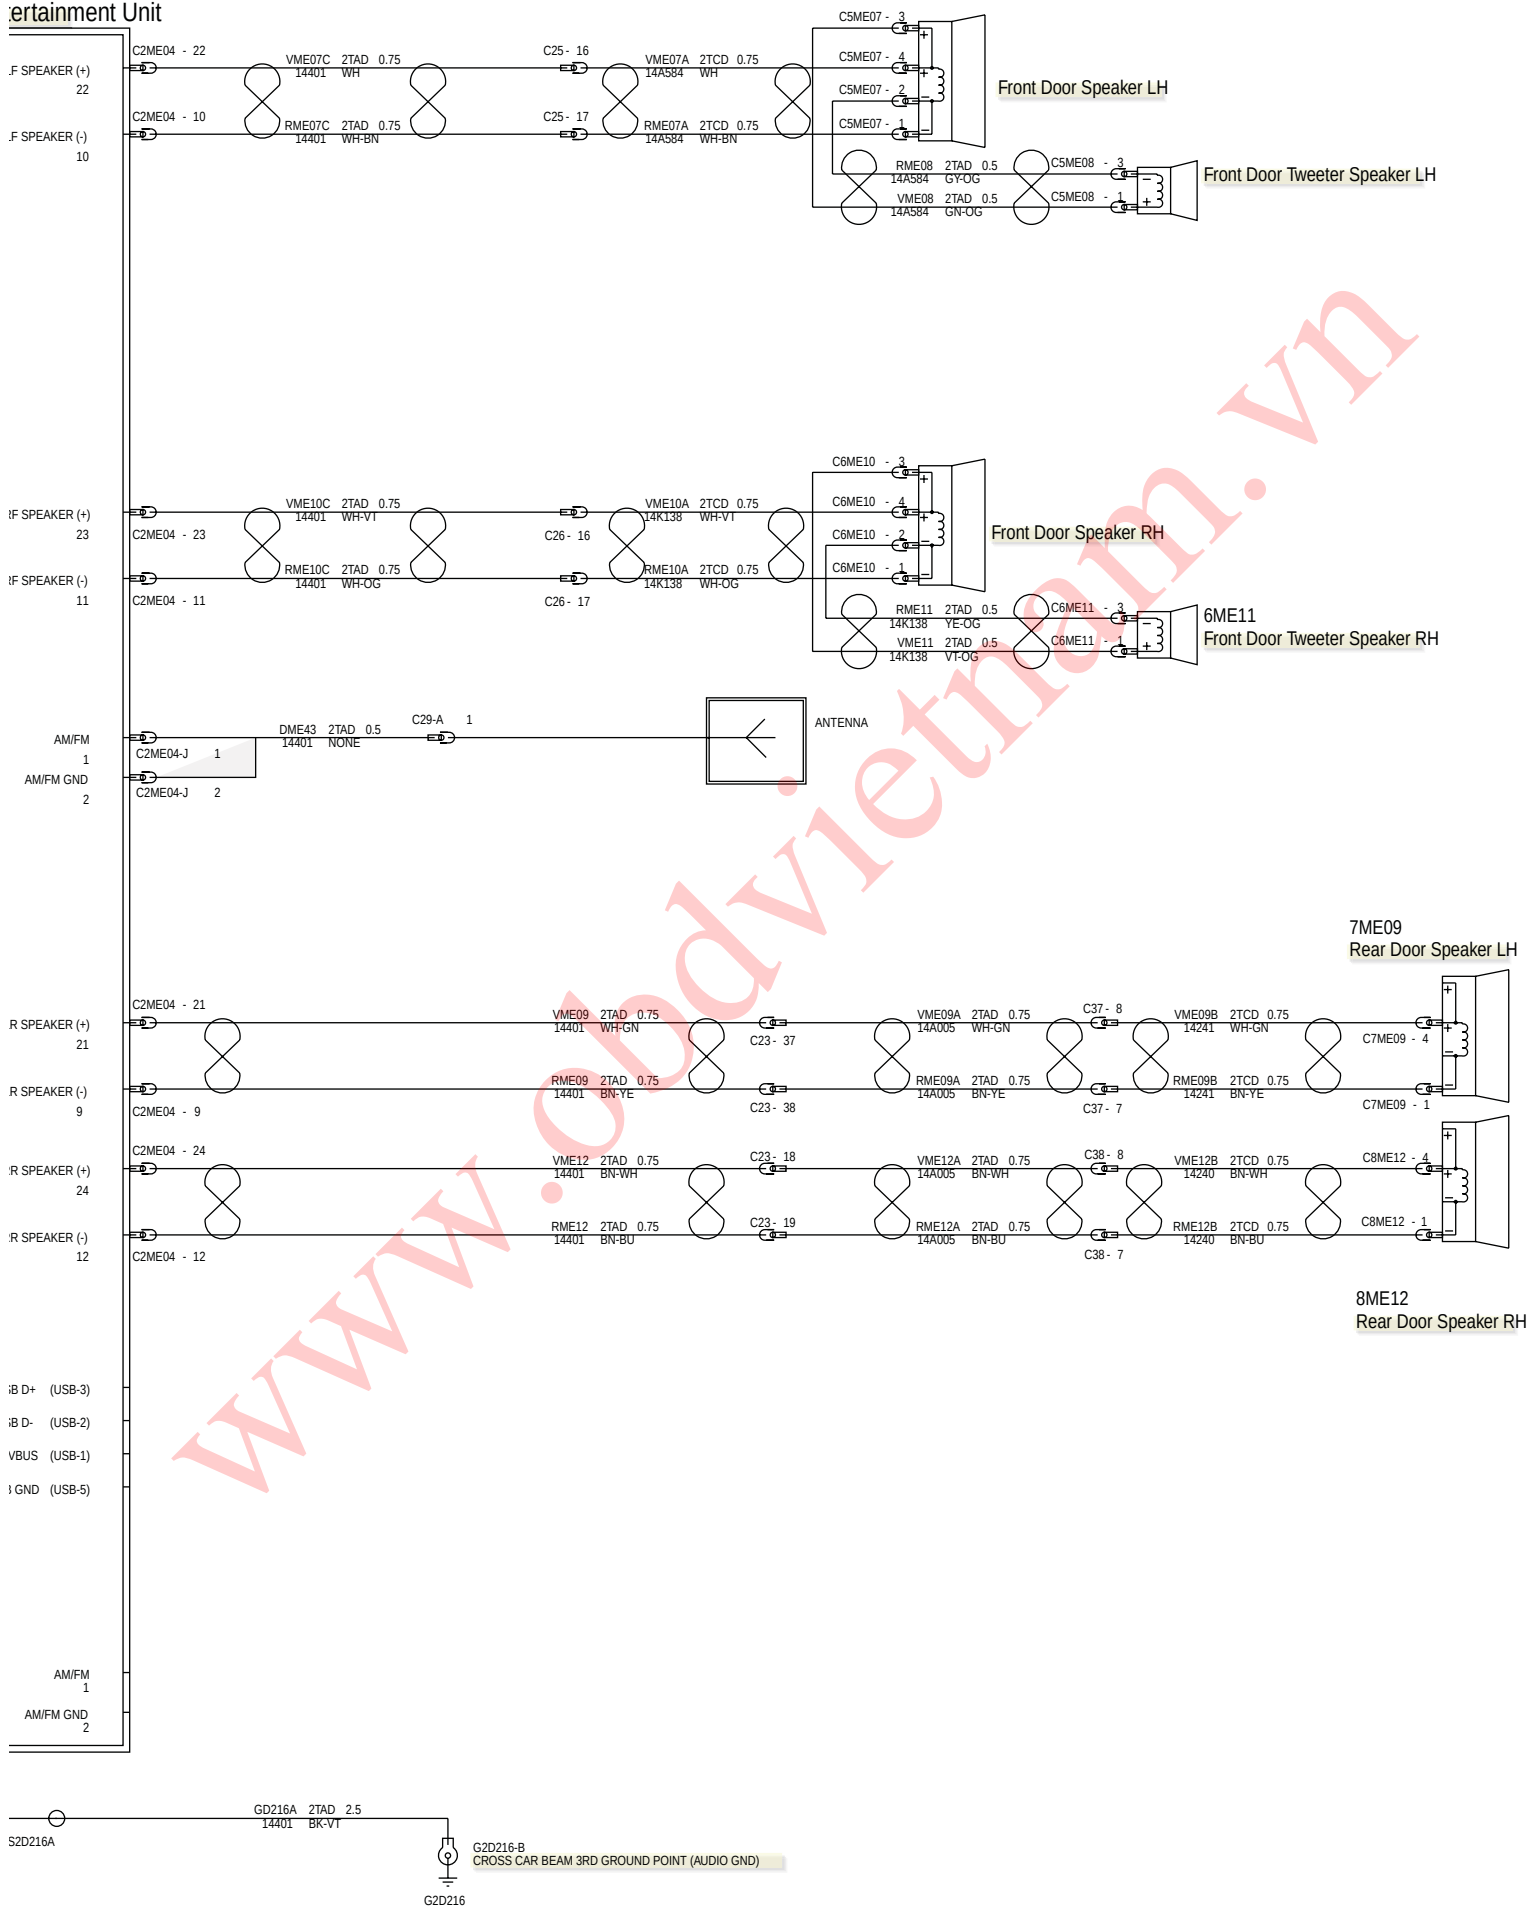

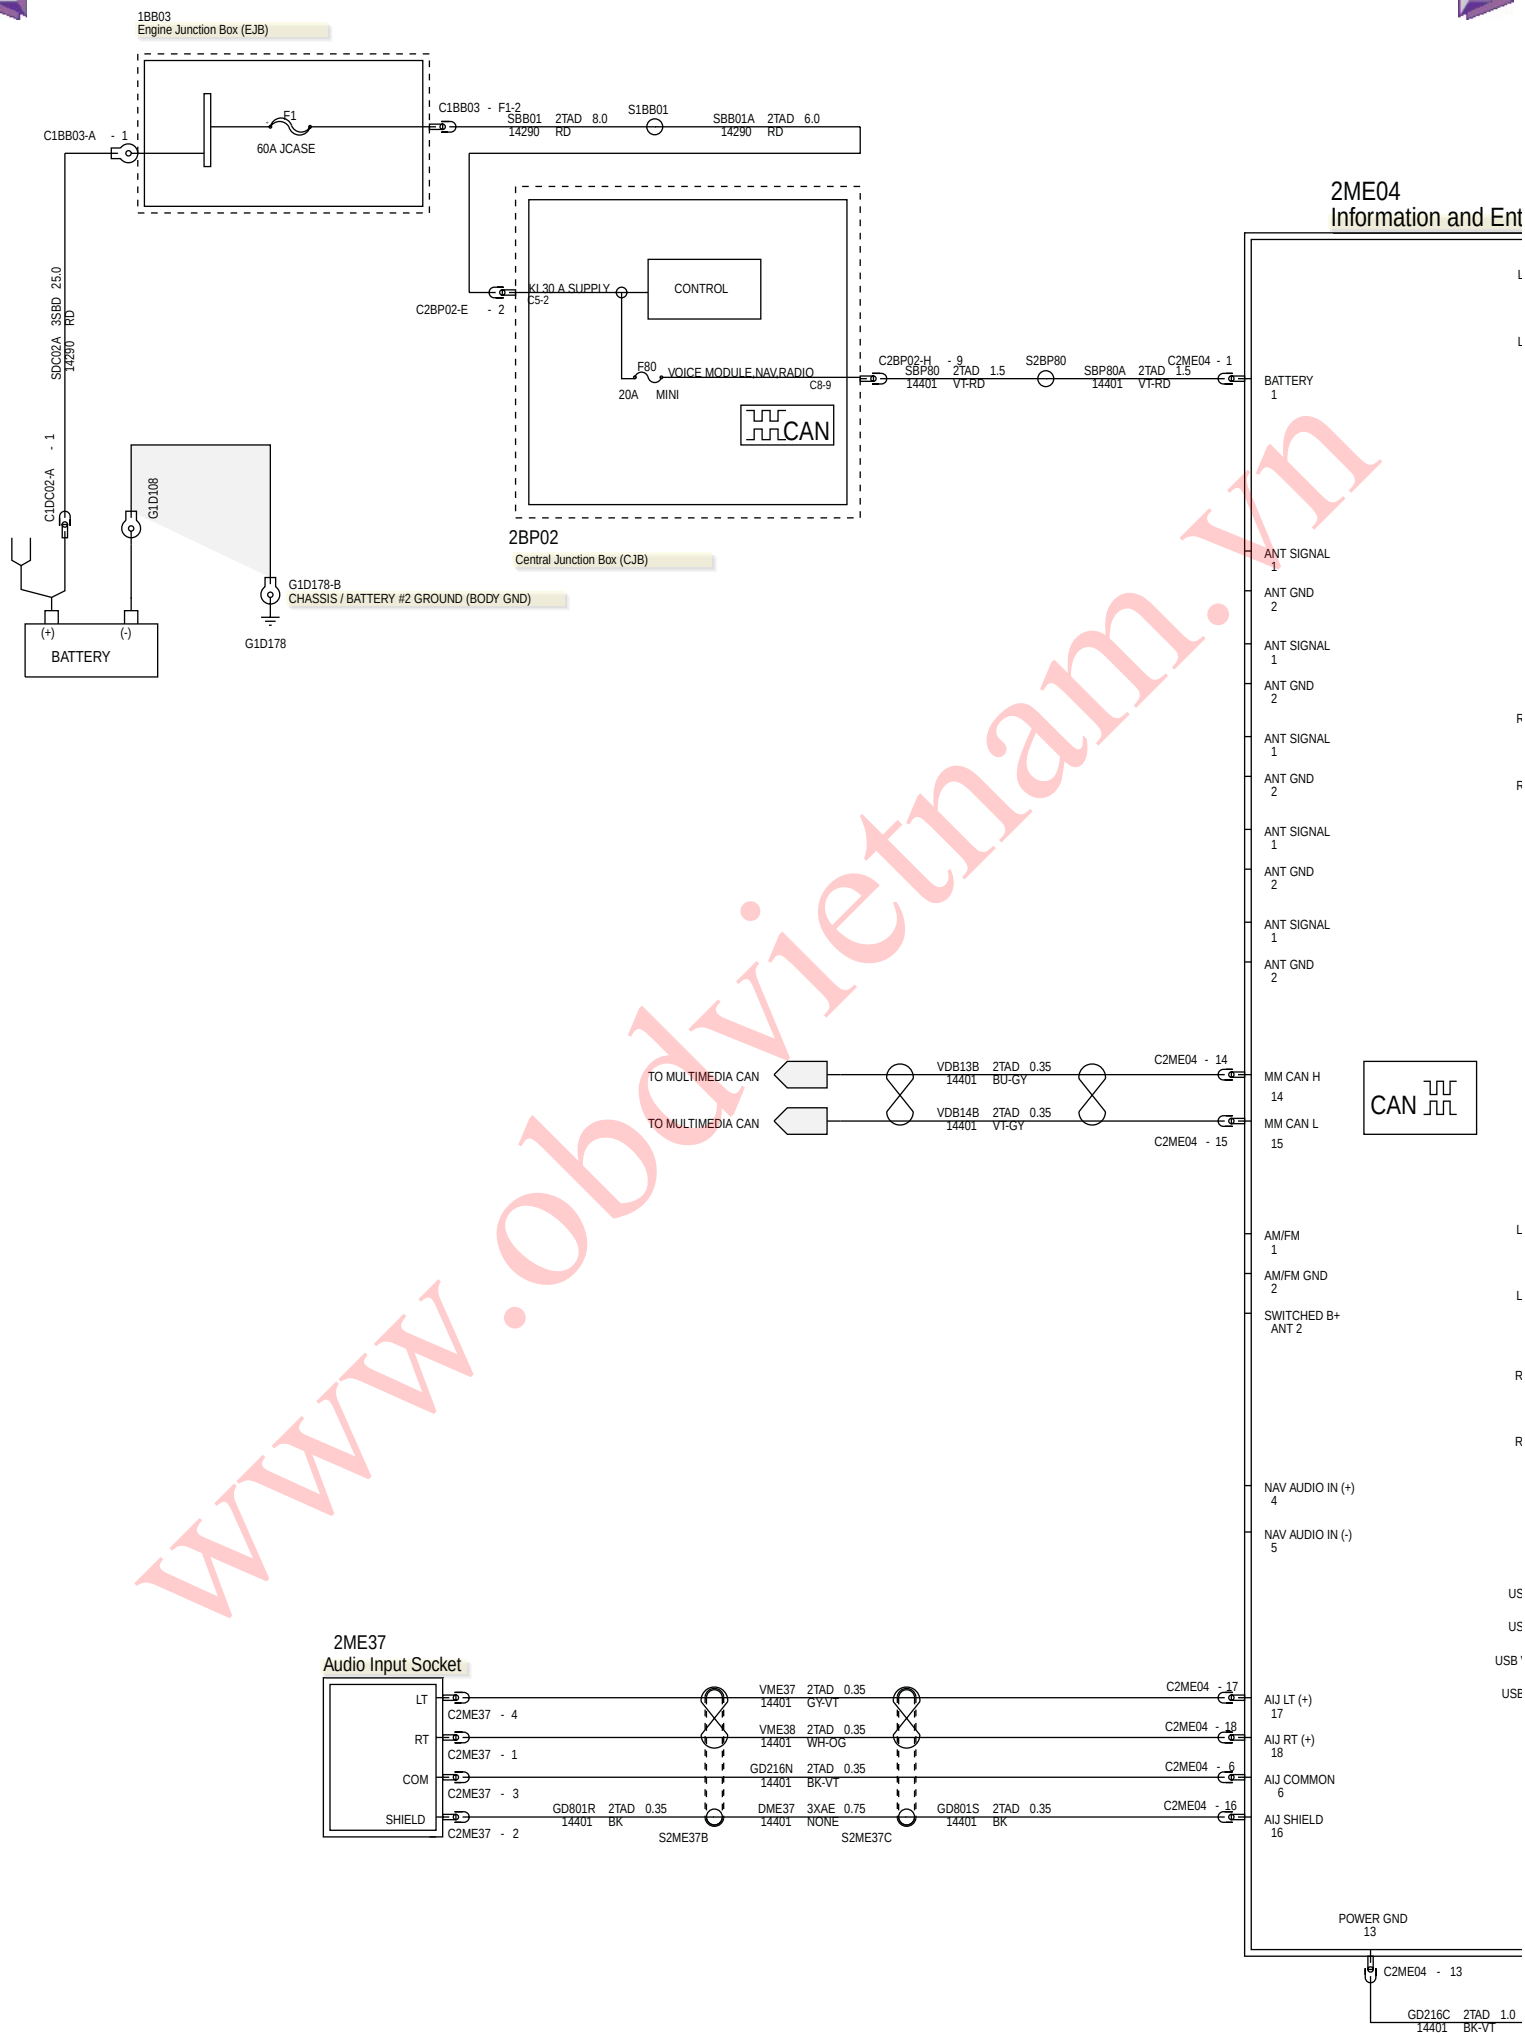


415-01-26 Audio System—Double Cab, LHD 4WD/LHD RWD, Vehicles Without: Bluetooth and Voice Control

Entertainment Unit

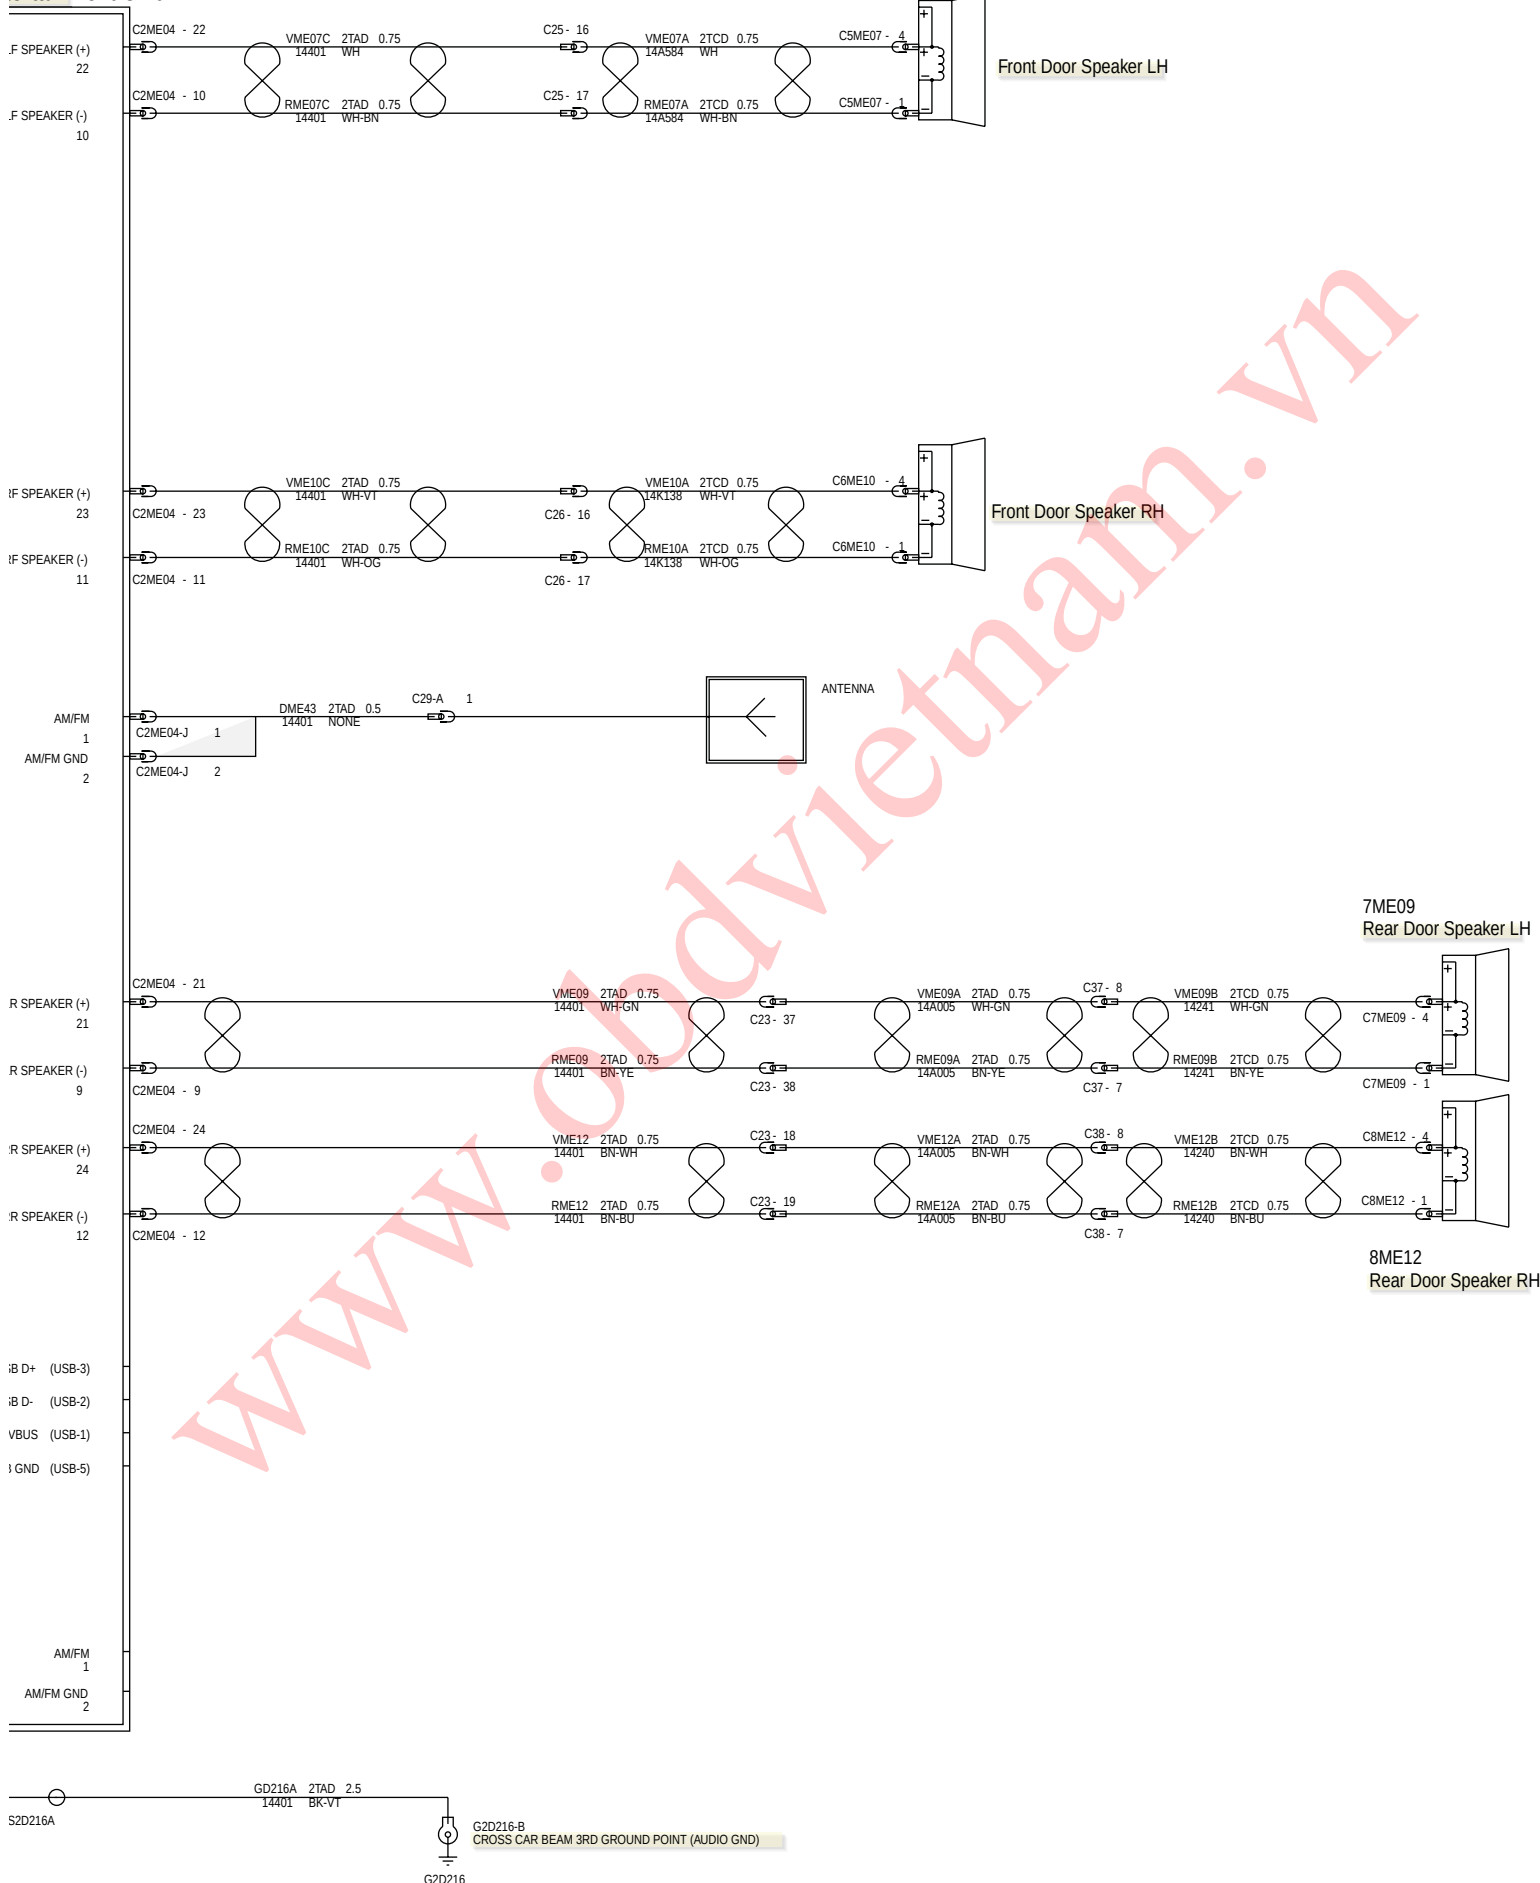



415-01-27 Audio System—Super Cab, LHD 4WD/LHD RWD, Vehicles With: Bluetooth and Voice Control

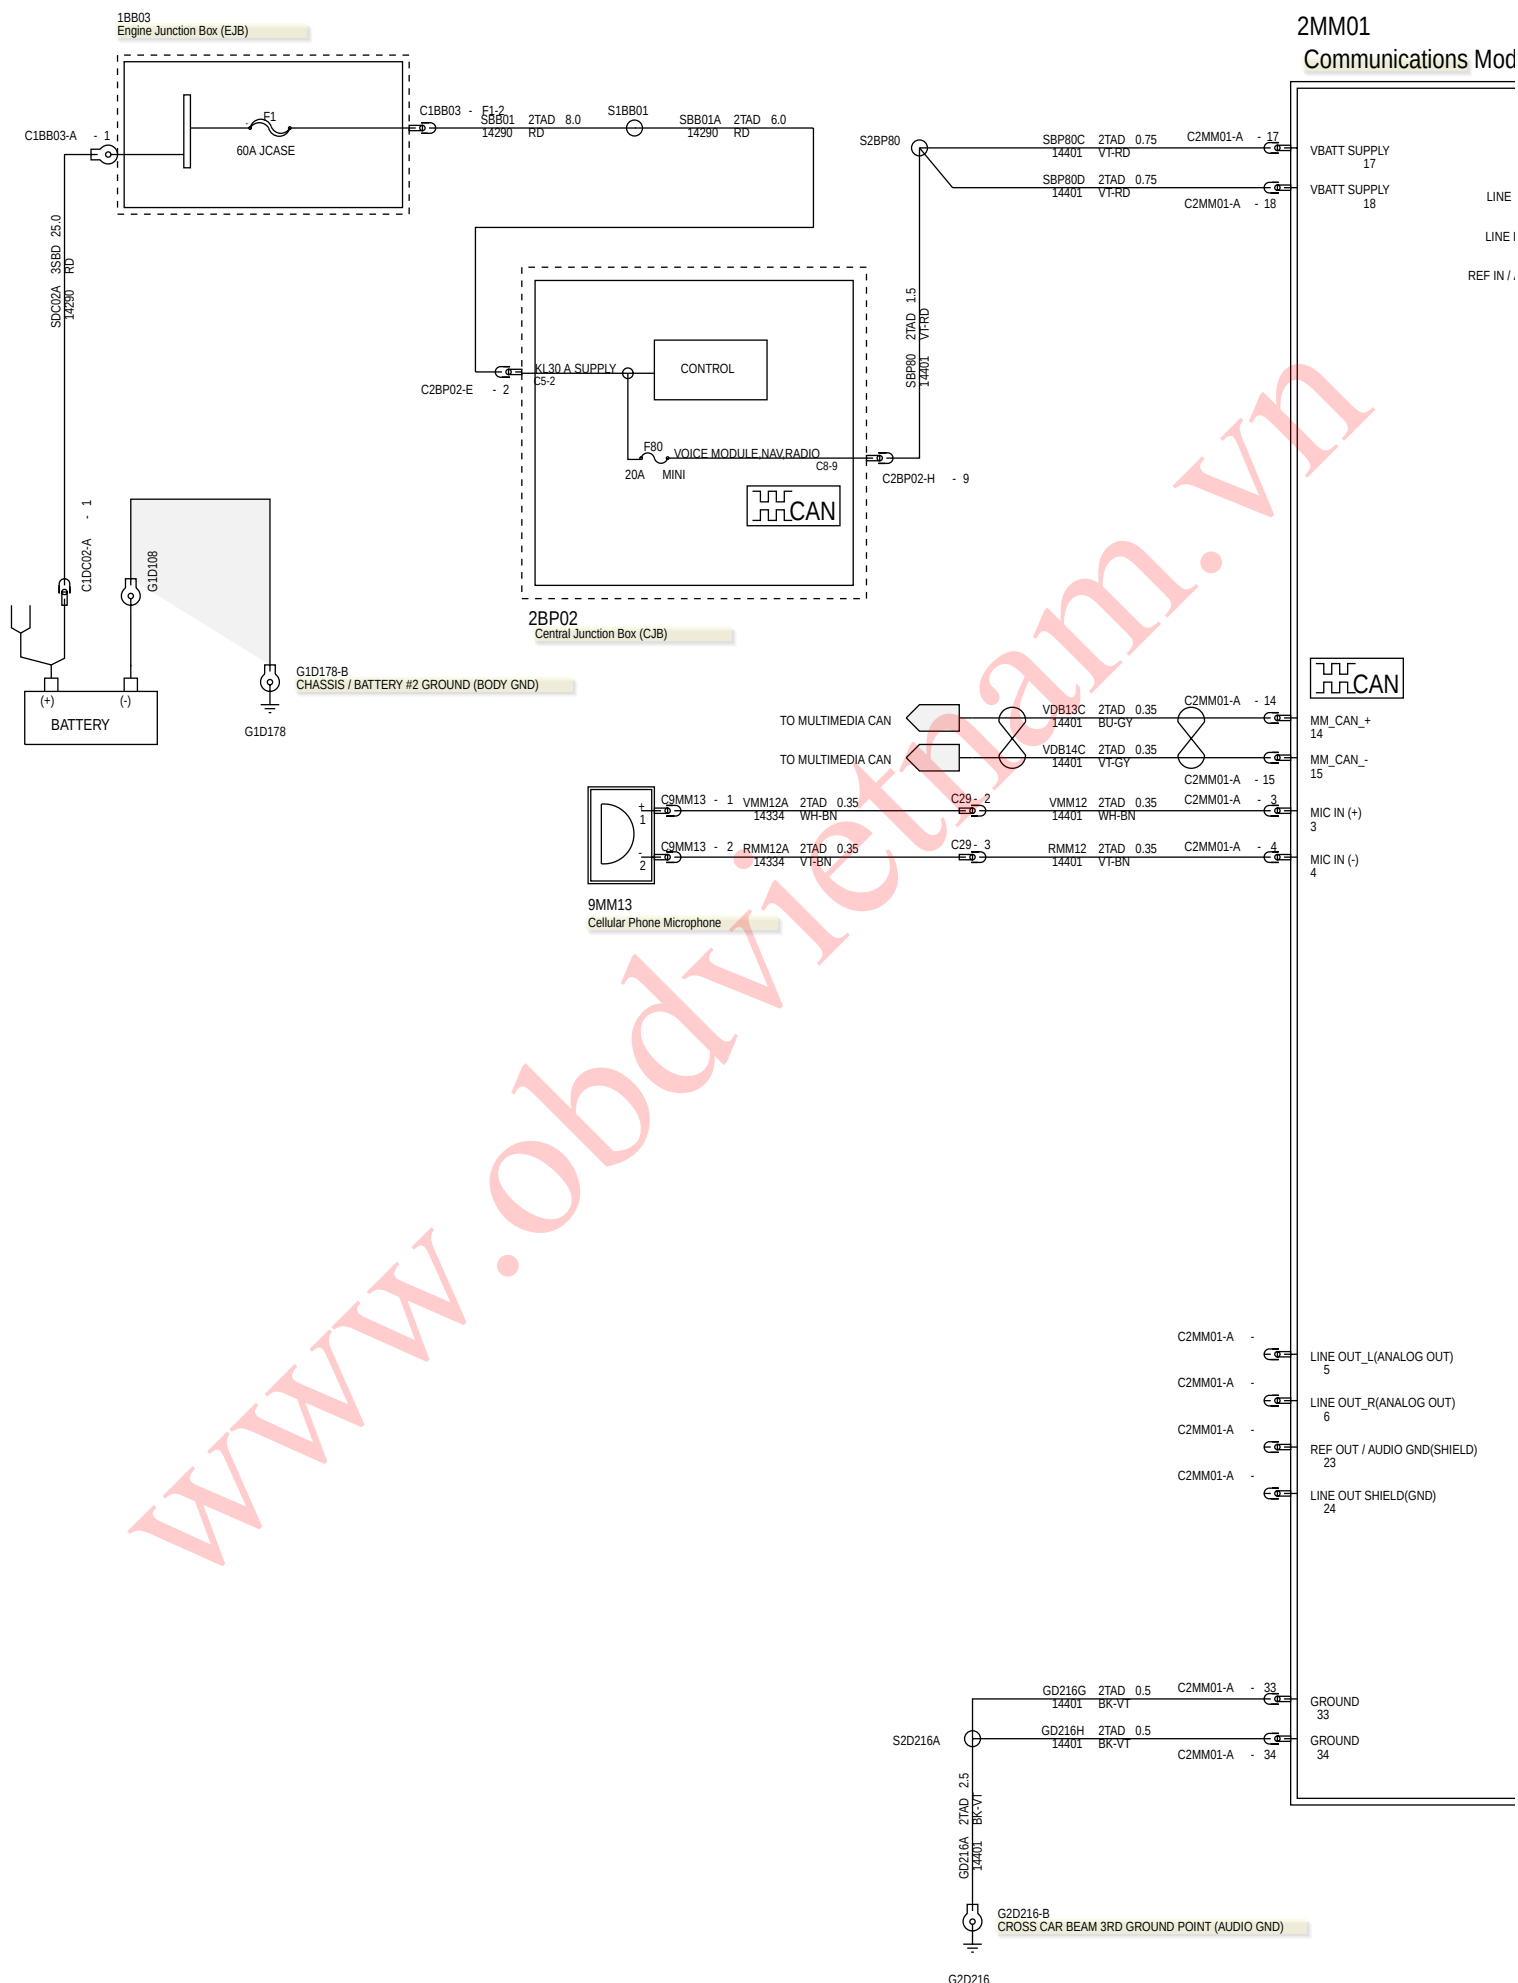

415-01-28 Audio System—Super Cab, LHD 4WD/LHD RWD, Vehicles With: Bluetooth and Voice Control


lule

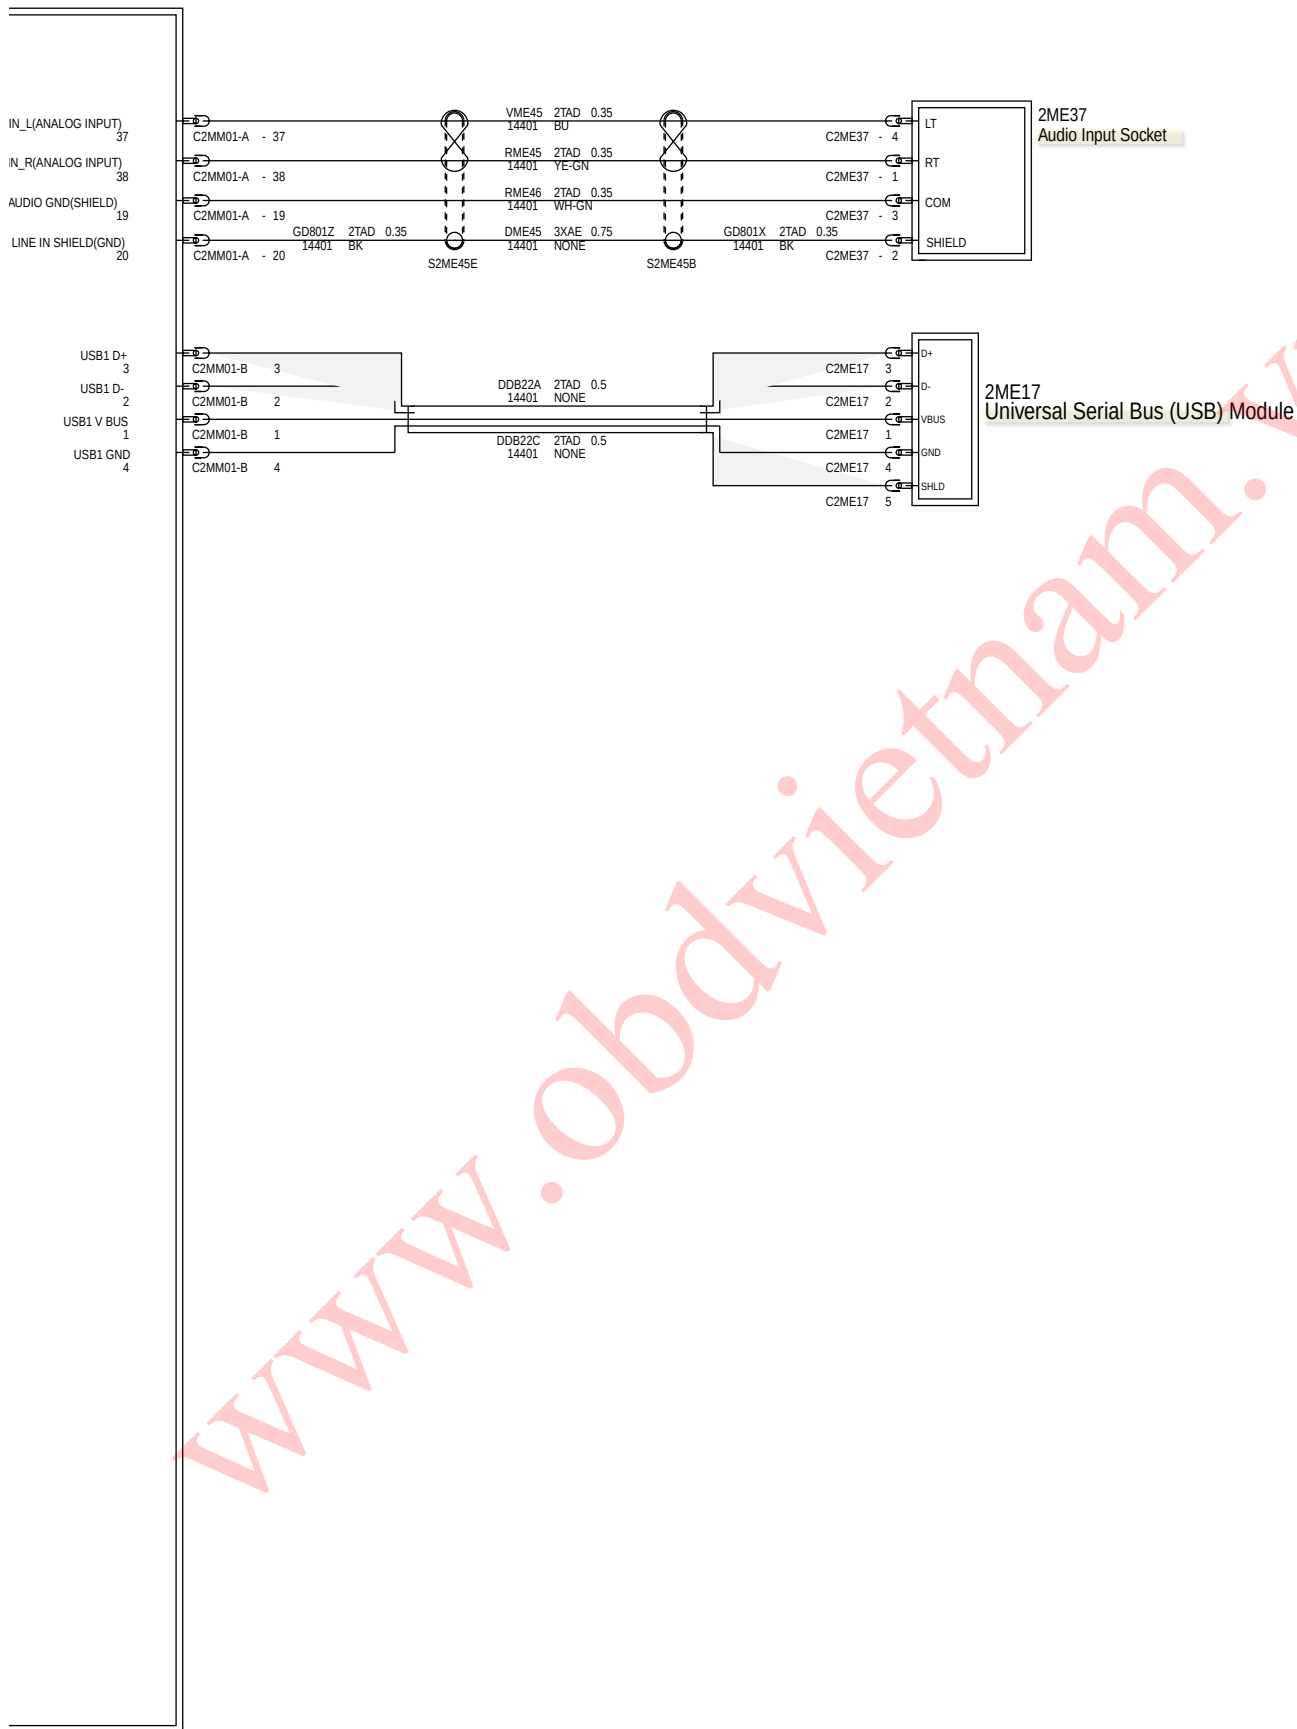

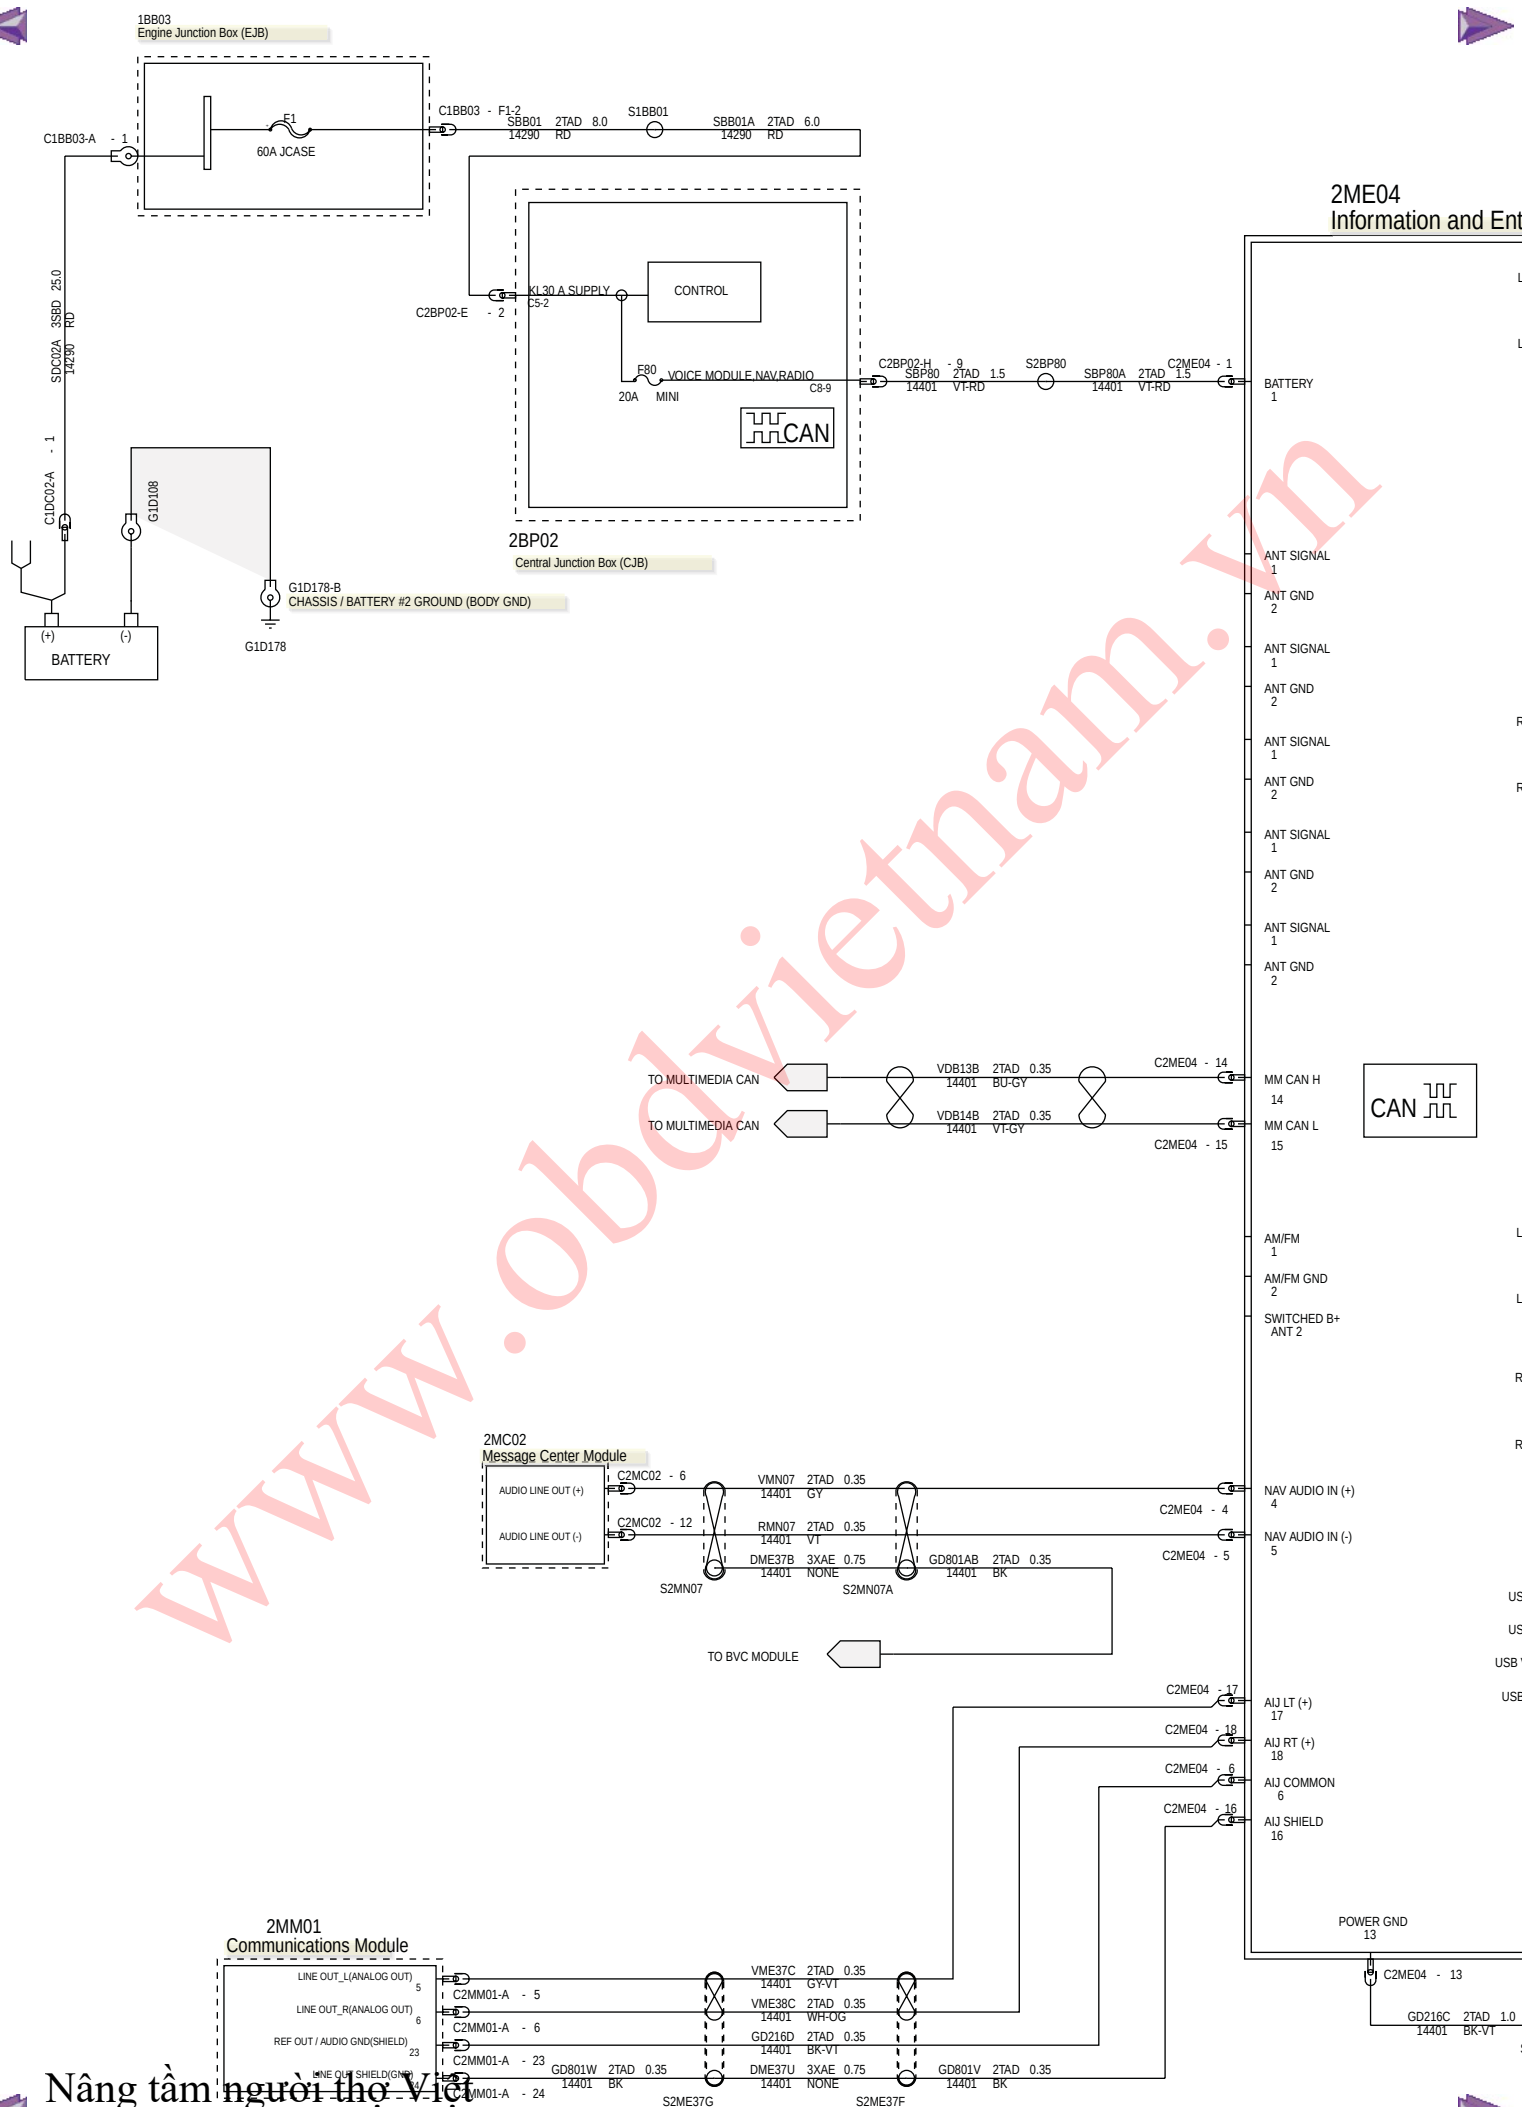

415-01-30 Audio System—Super Cab, LHD 4WD/LHD RWD, Vehicles With: Bluetooth and Voice Control

Entertainment Unit

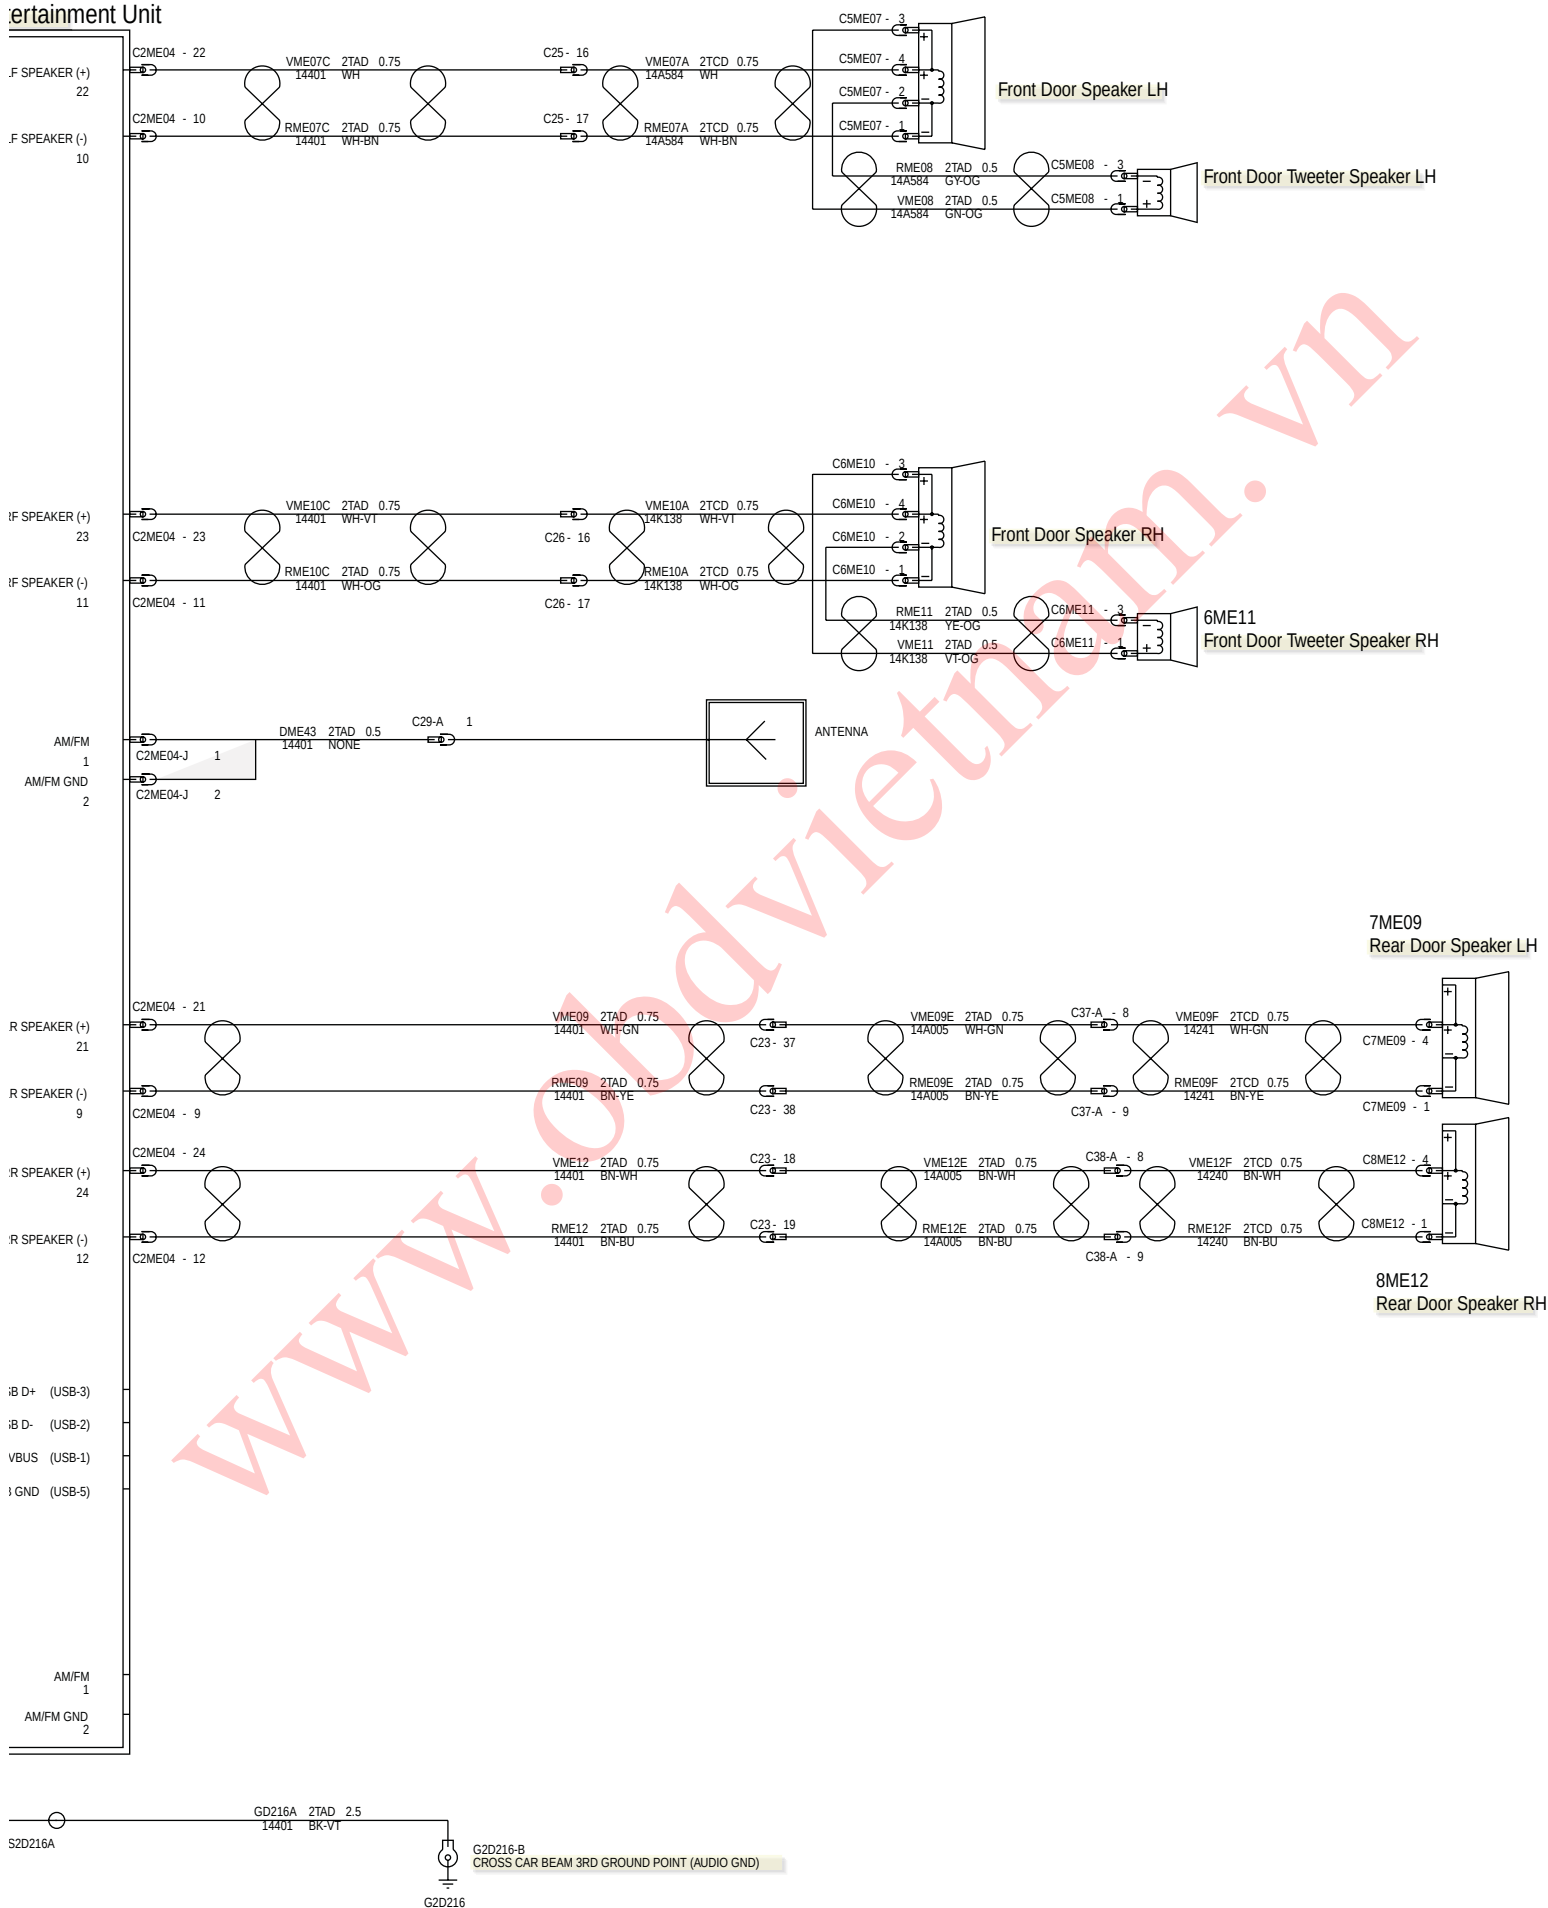

TO BE UPDATED LATER

www.obdviethnam.vn

415-01-32 Audio System—Super Cab, LHD 4WD/LHD RWD, Vehicles Without: Bluetooth and Voice Control

TO BE UPDATED LATER


www.obdviethnam.vn

1BB03
Engine Junction Box (EJB)




415-01-34 Audio System—Super Cab, LHD 4WD/LHD RWD, Vehicles Without: Bluetooth and Voice Control

Entertainment Unit

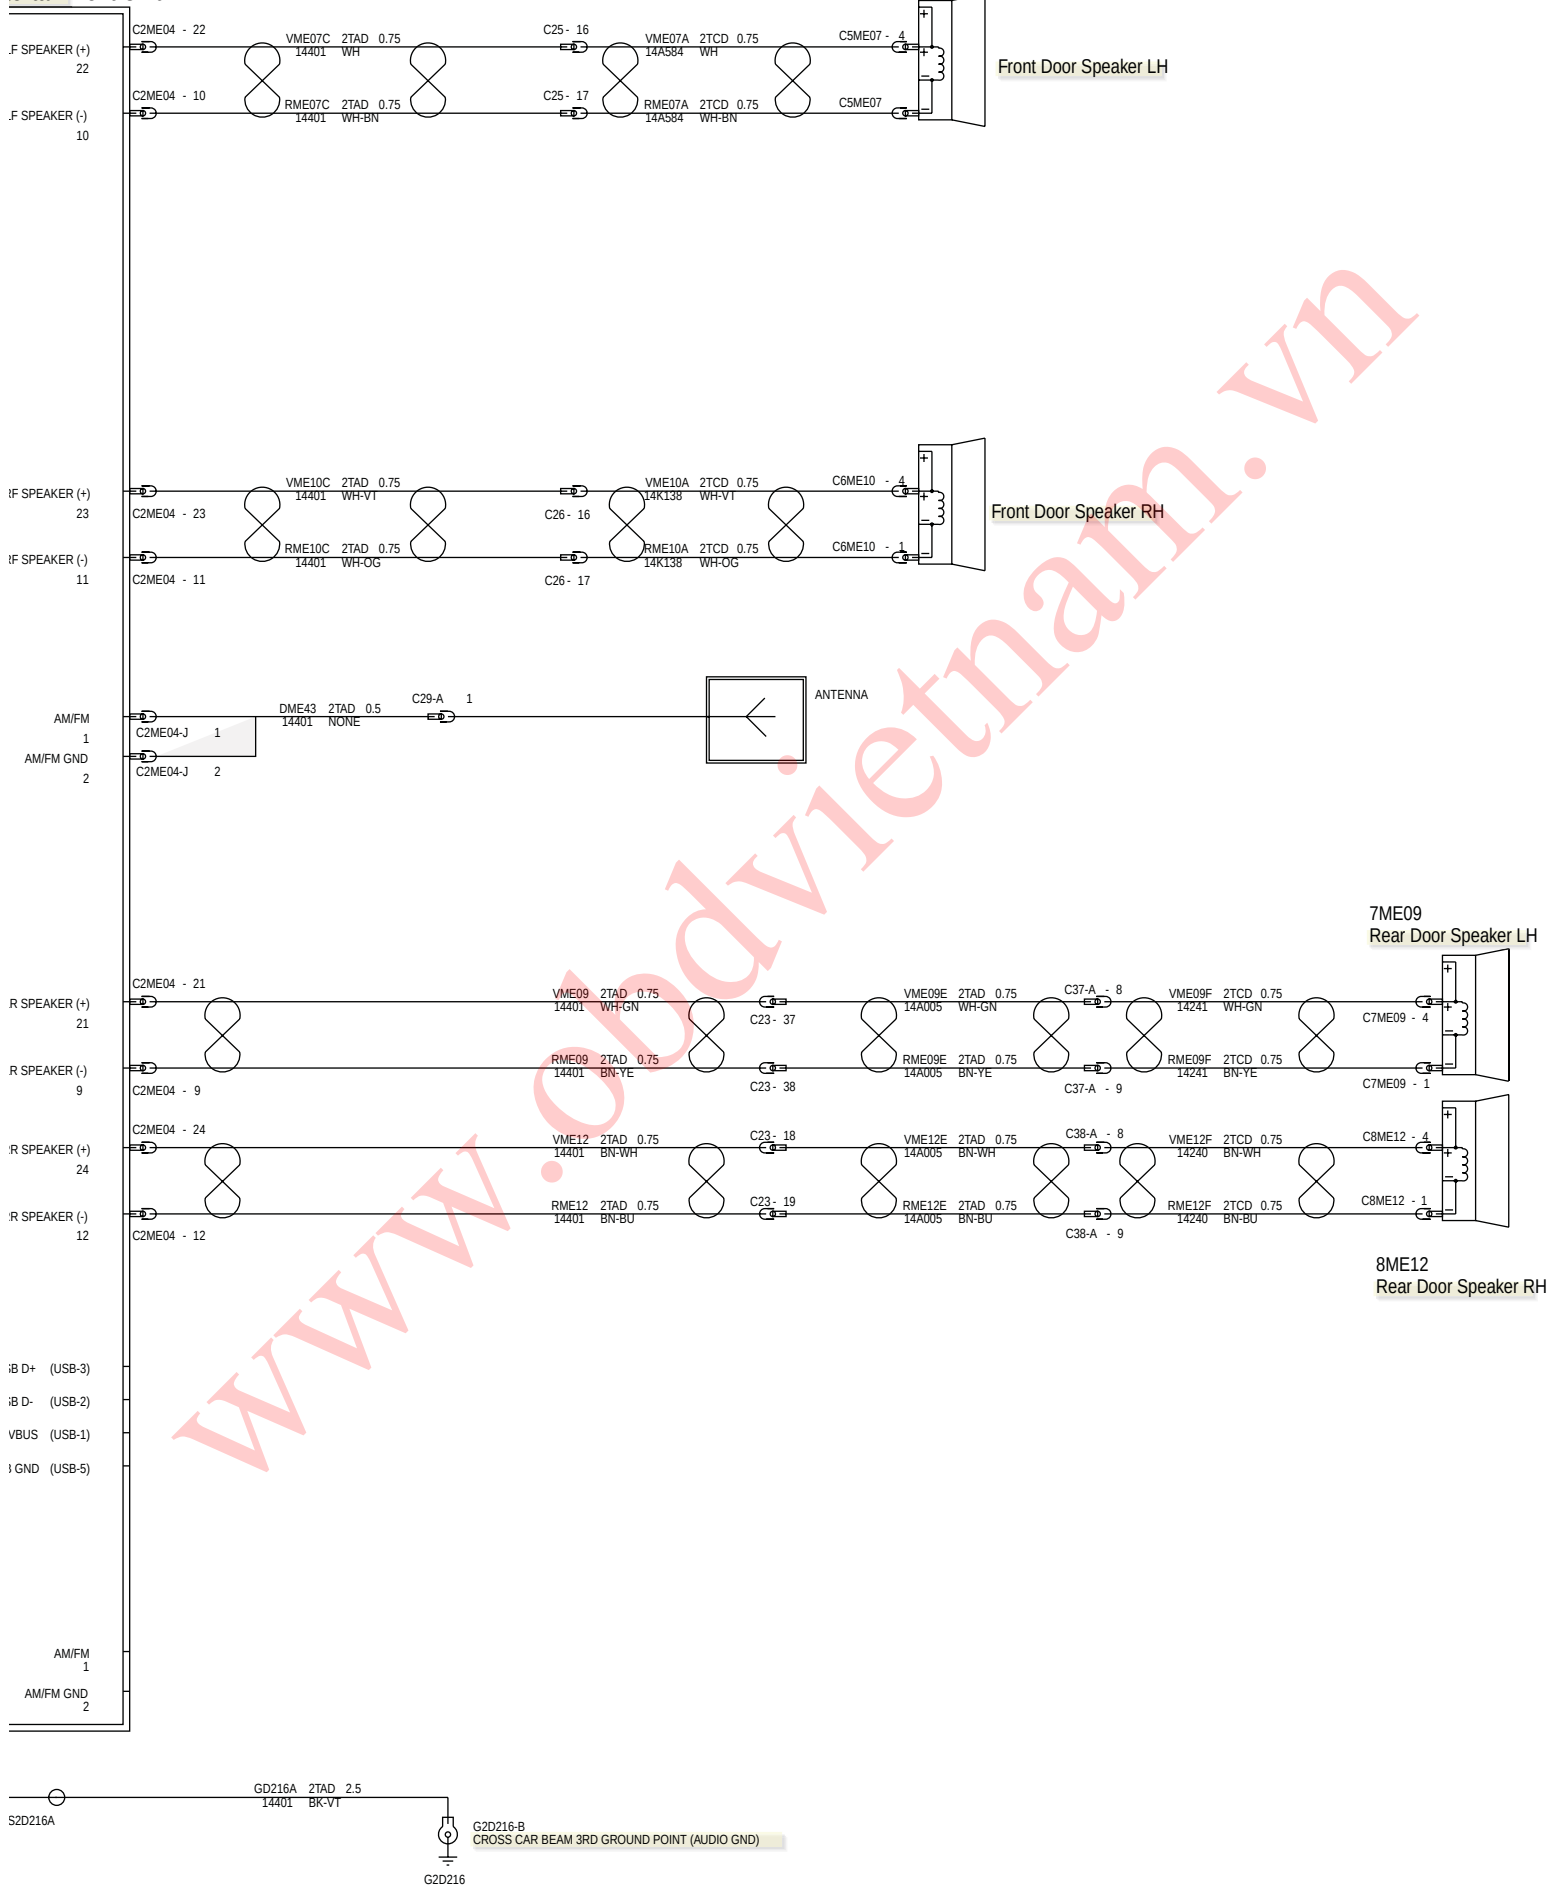


415-01-35 Audio System—Single Cab, RHD 4WD/RHD RWD, Vehicles With: Bluetooth and Voice Control

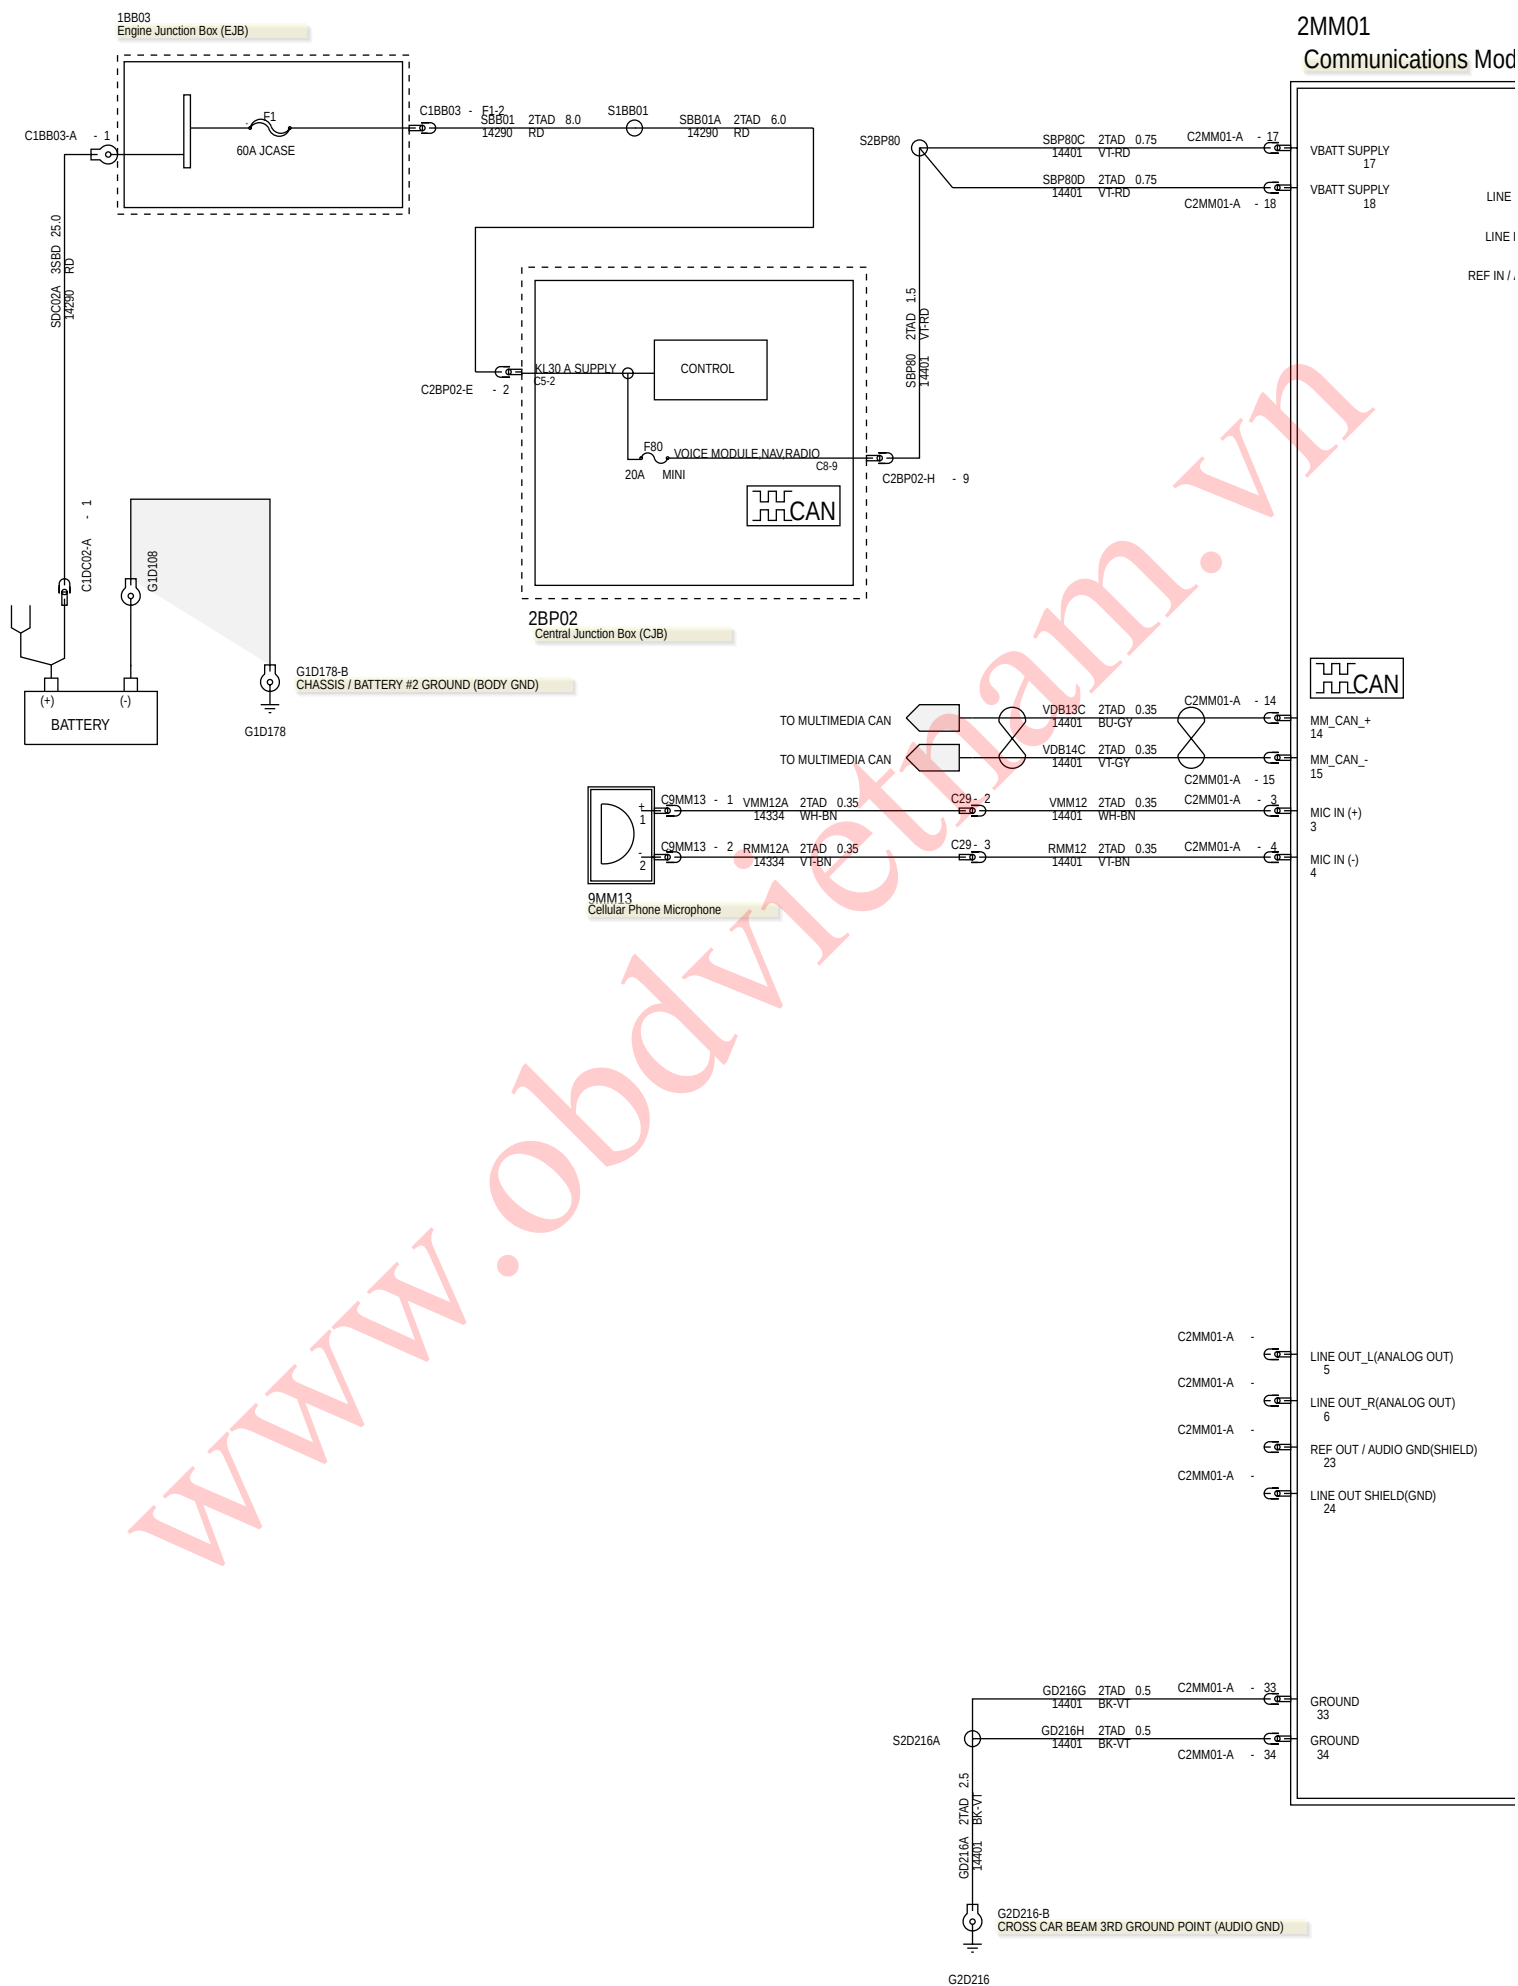



415-01-36 Audio System—Single Cab, RHD 4WD/RHD RWD, Vehicles With: Bluetooth and Voice Control

lule

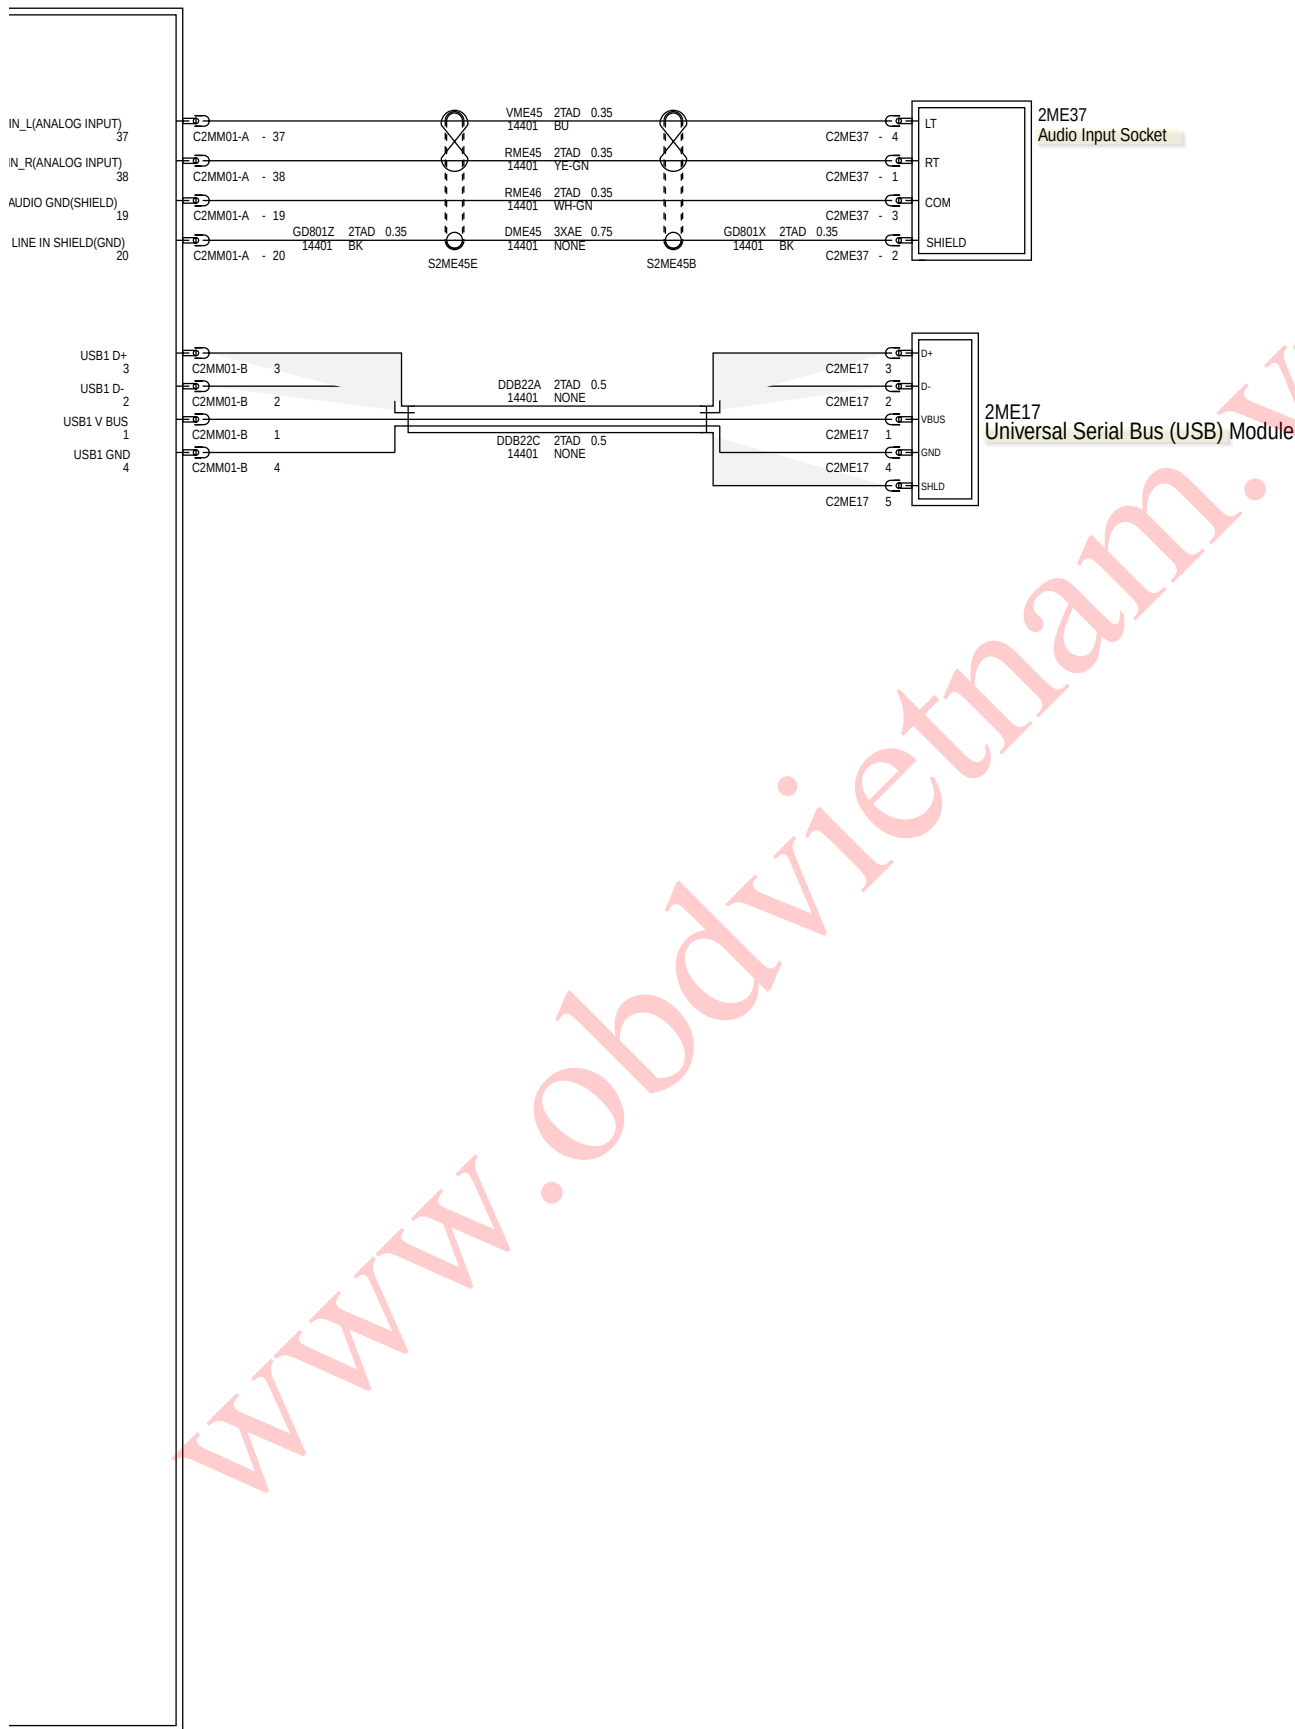


415-01-38 Audio System—Single Cab, RHD 4WD/RHD RWD, Vehicles With: Bluetooth and Voice Control

ent Unit

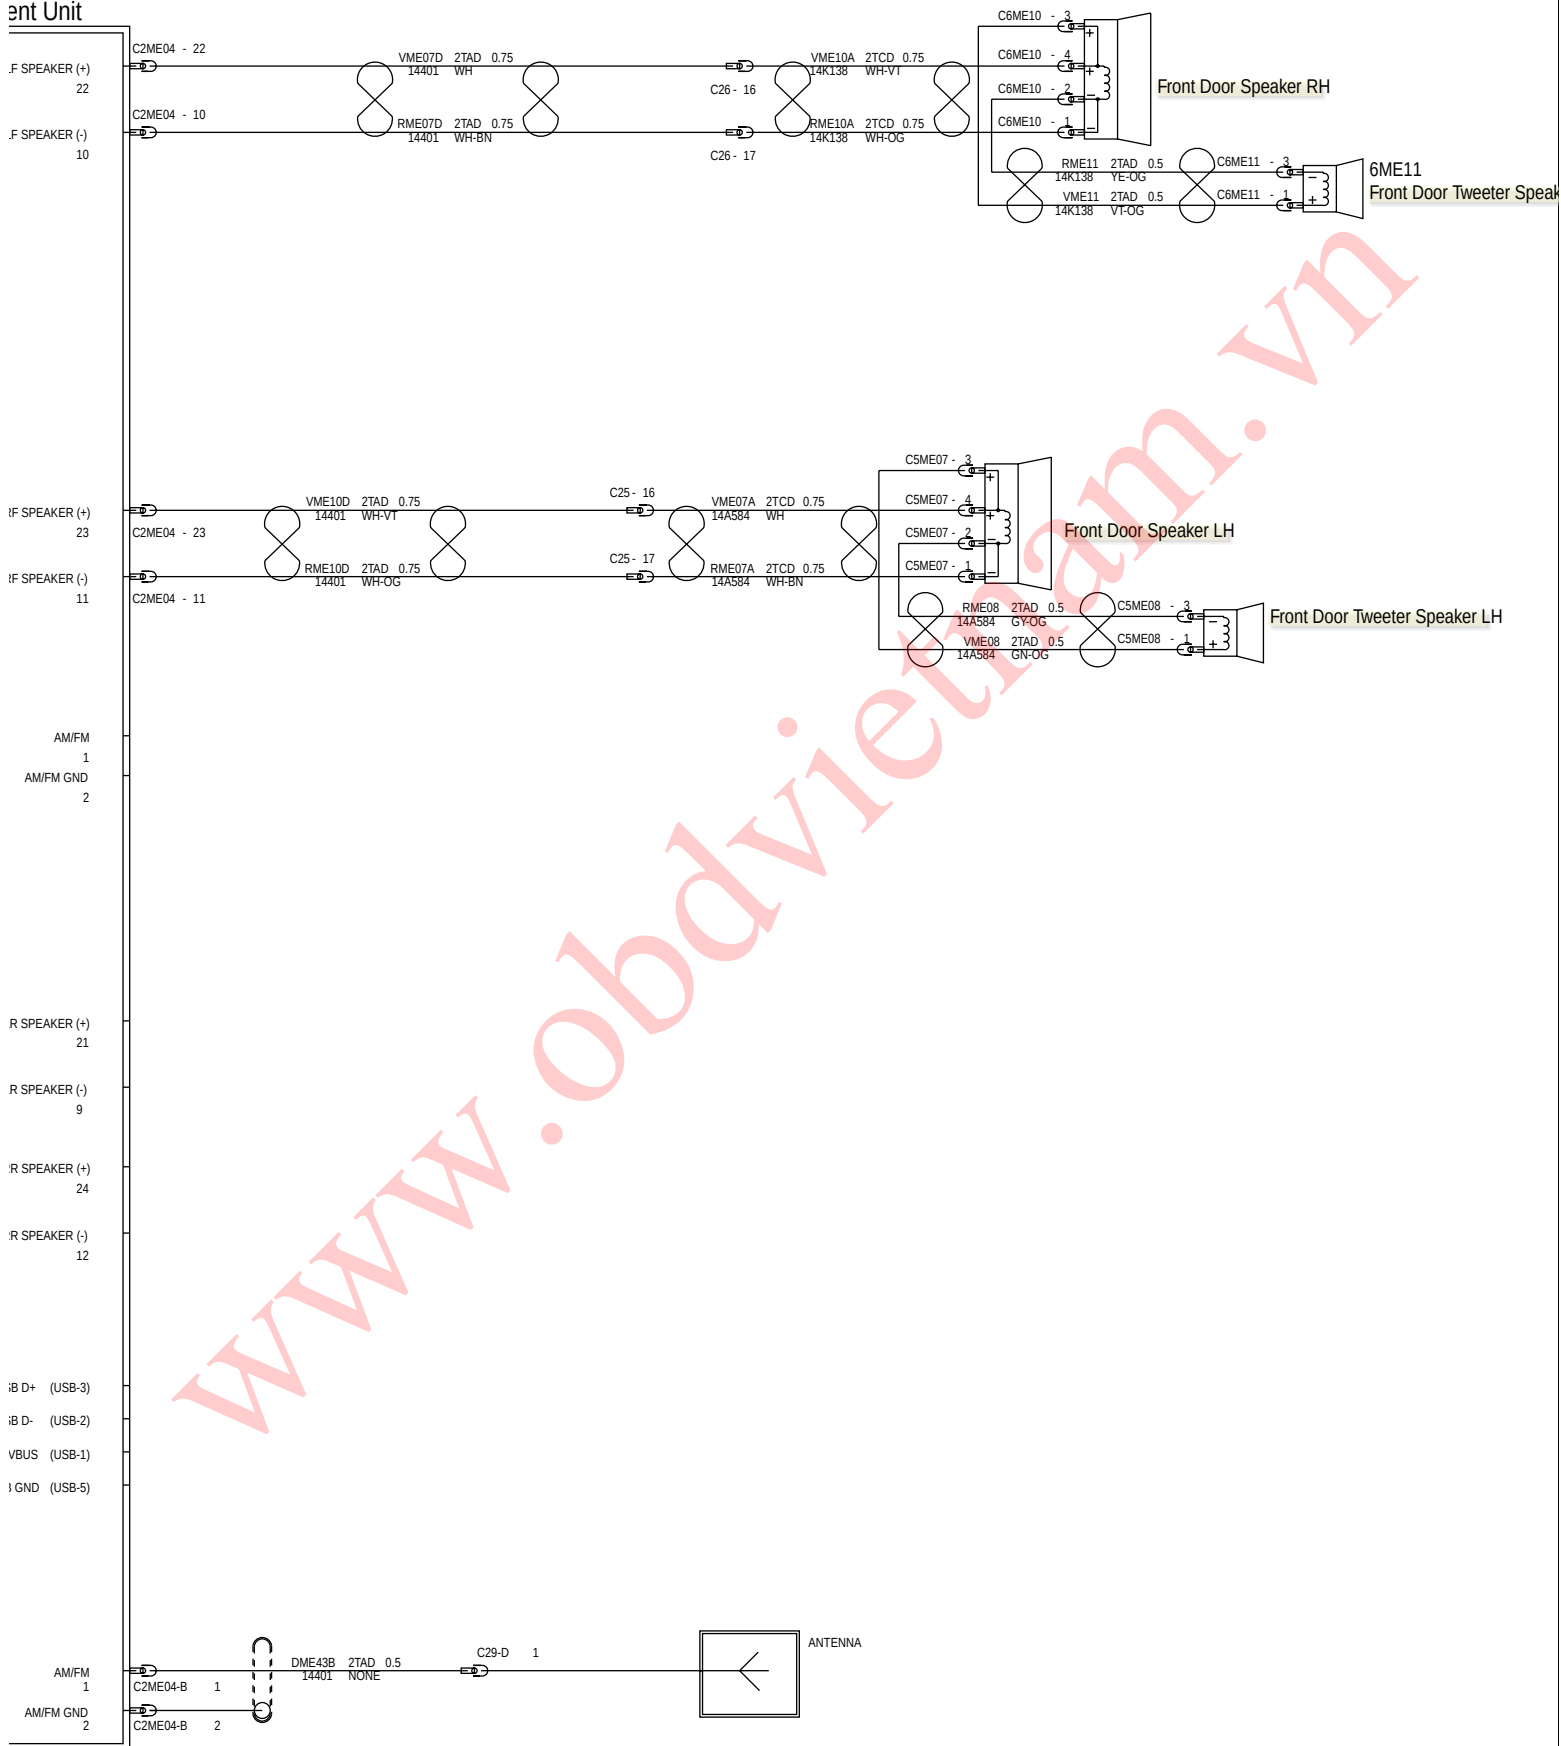


Nâng tầm người thợ Việt


2012.0 Ranger (G1405959)

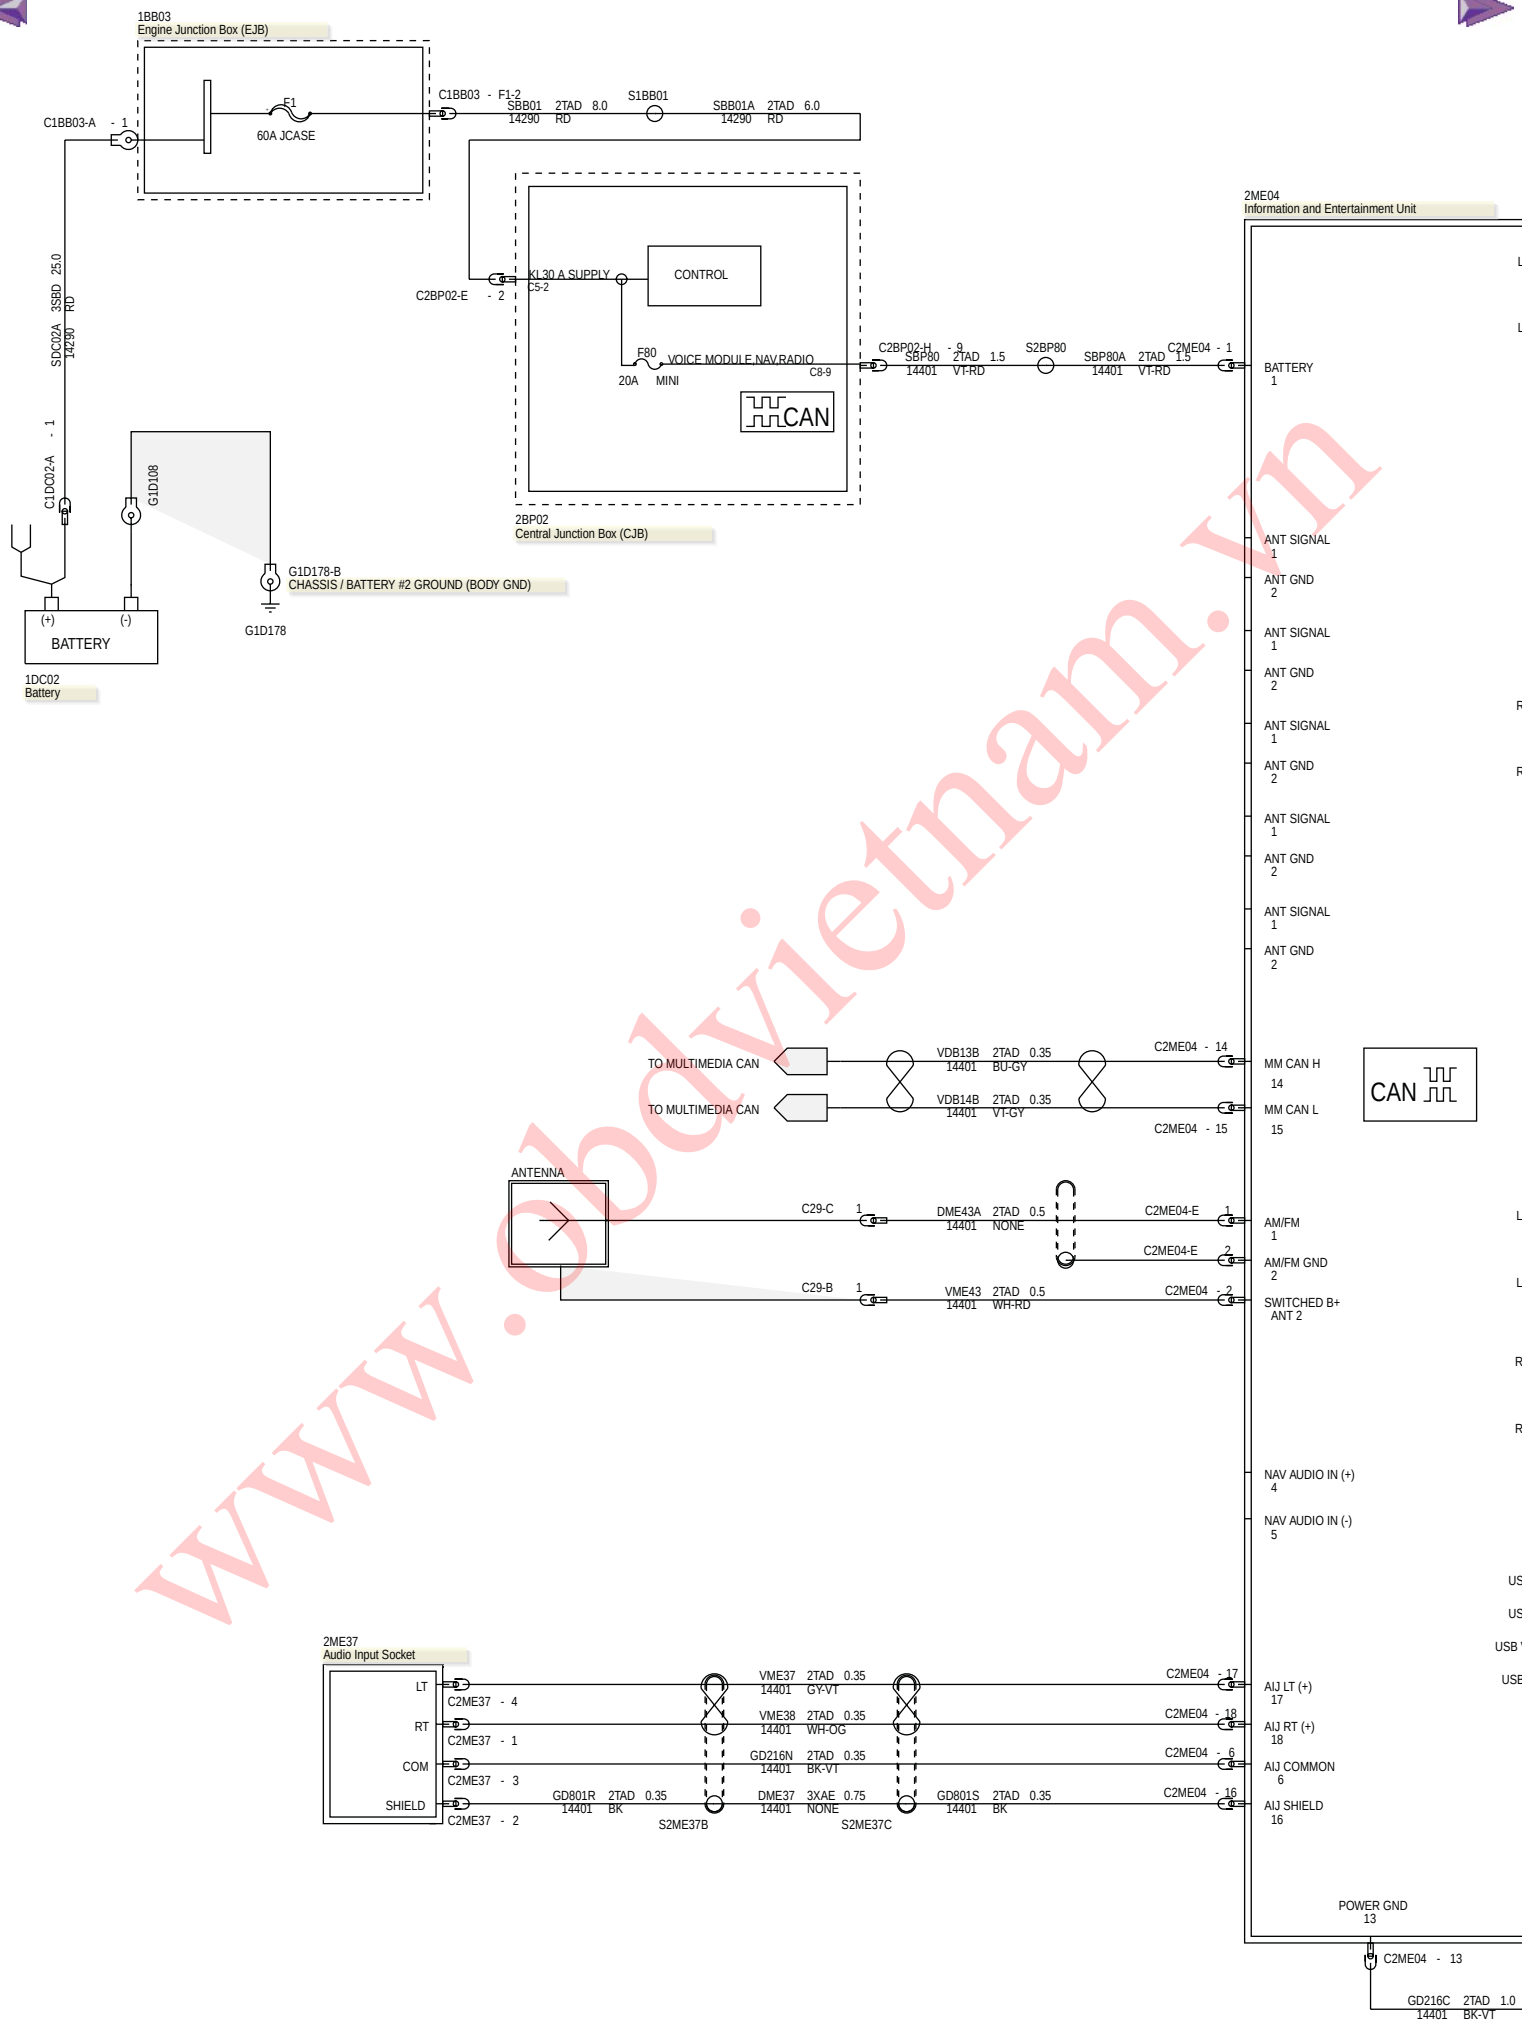

415-01-40 Audio System—Single Cab, RHD 4WD/RHD RWD, Vehicles Without: Bluetooth and Voice Control

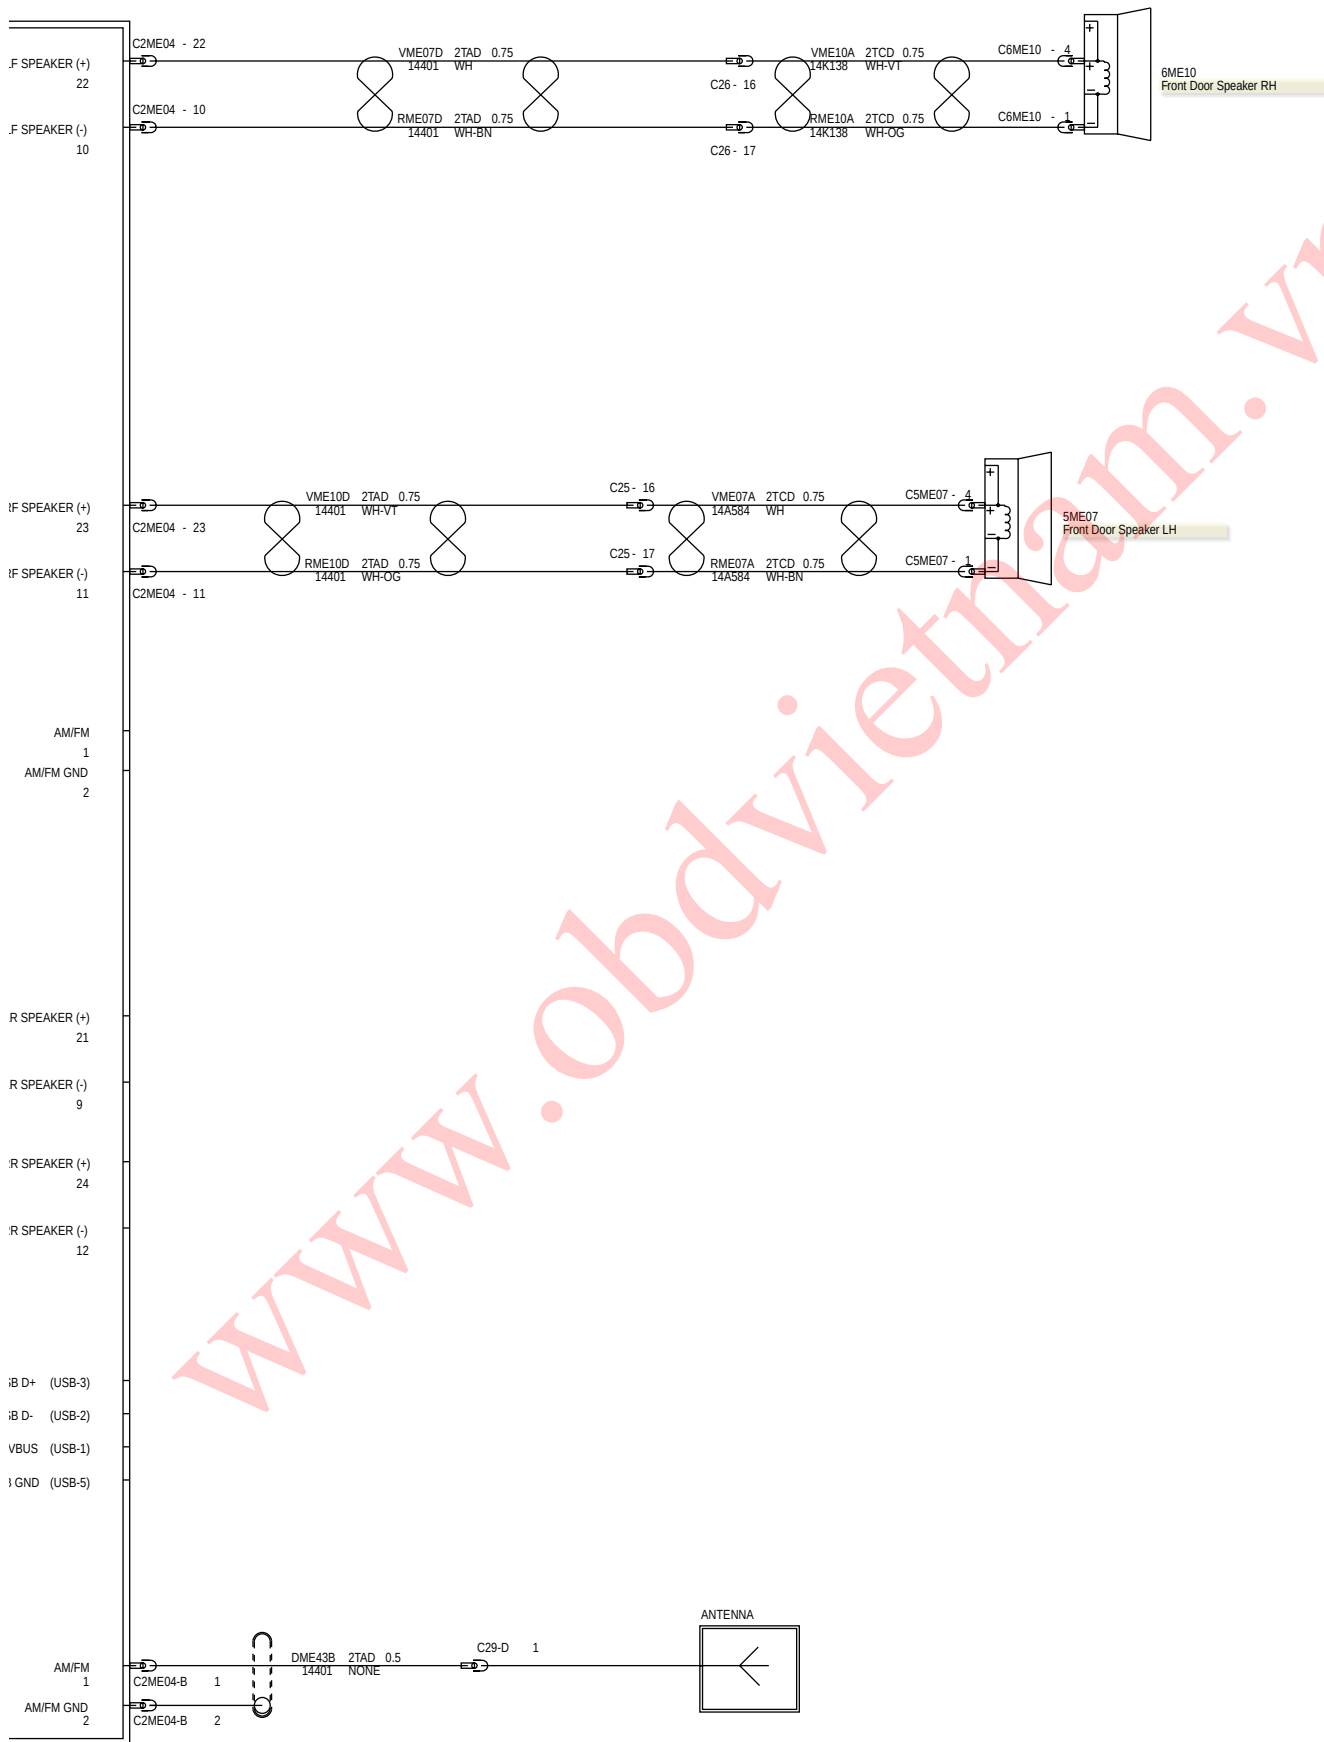


415-01-41 Audio System—Double Cab, RHD 4WD/RHD RWD, Vehicles With: Bluetooth and Voice Control

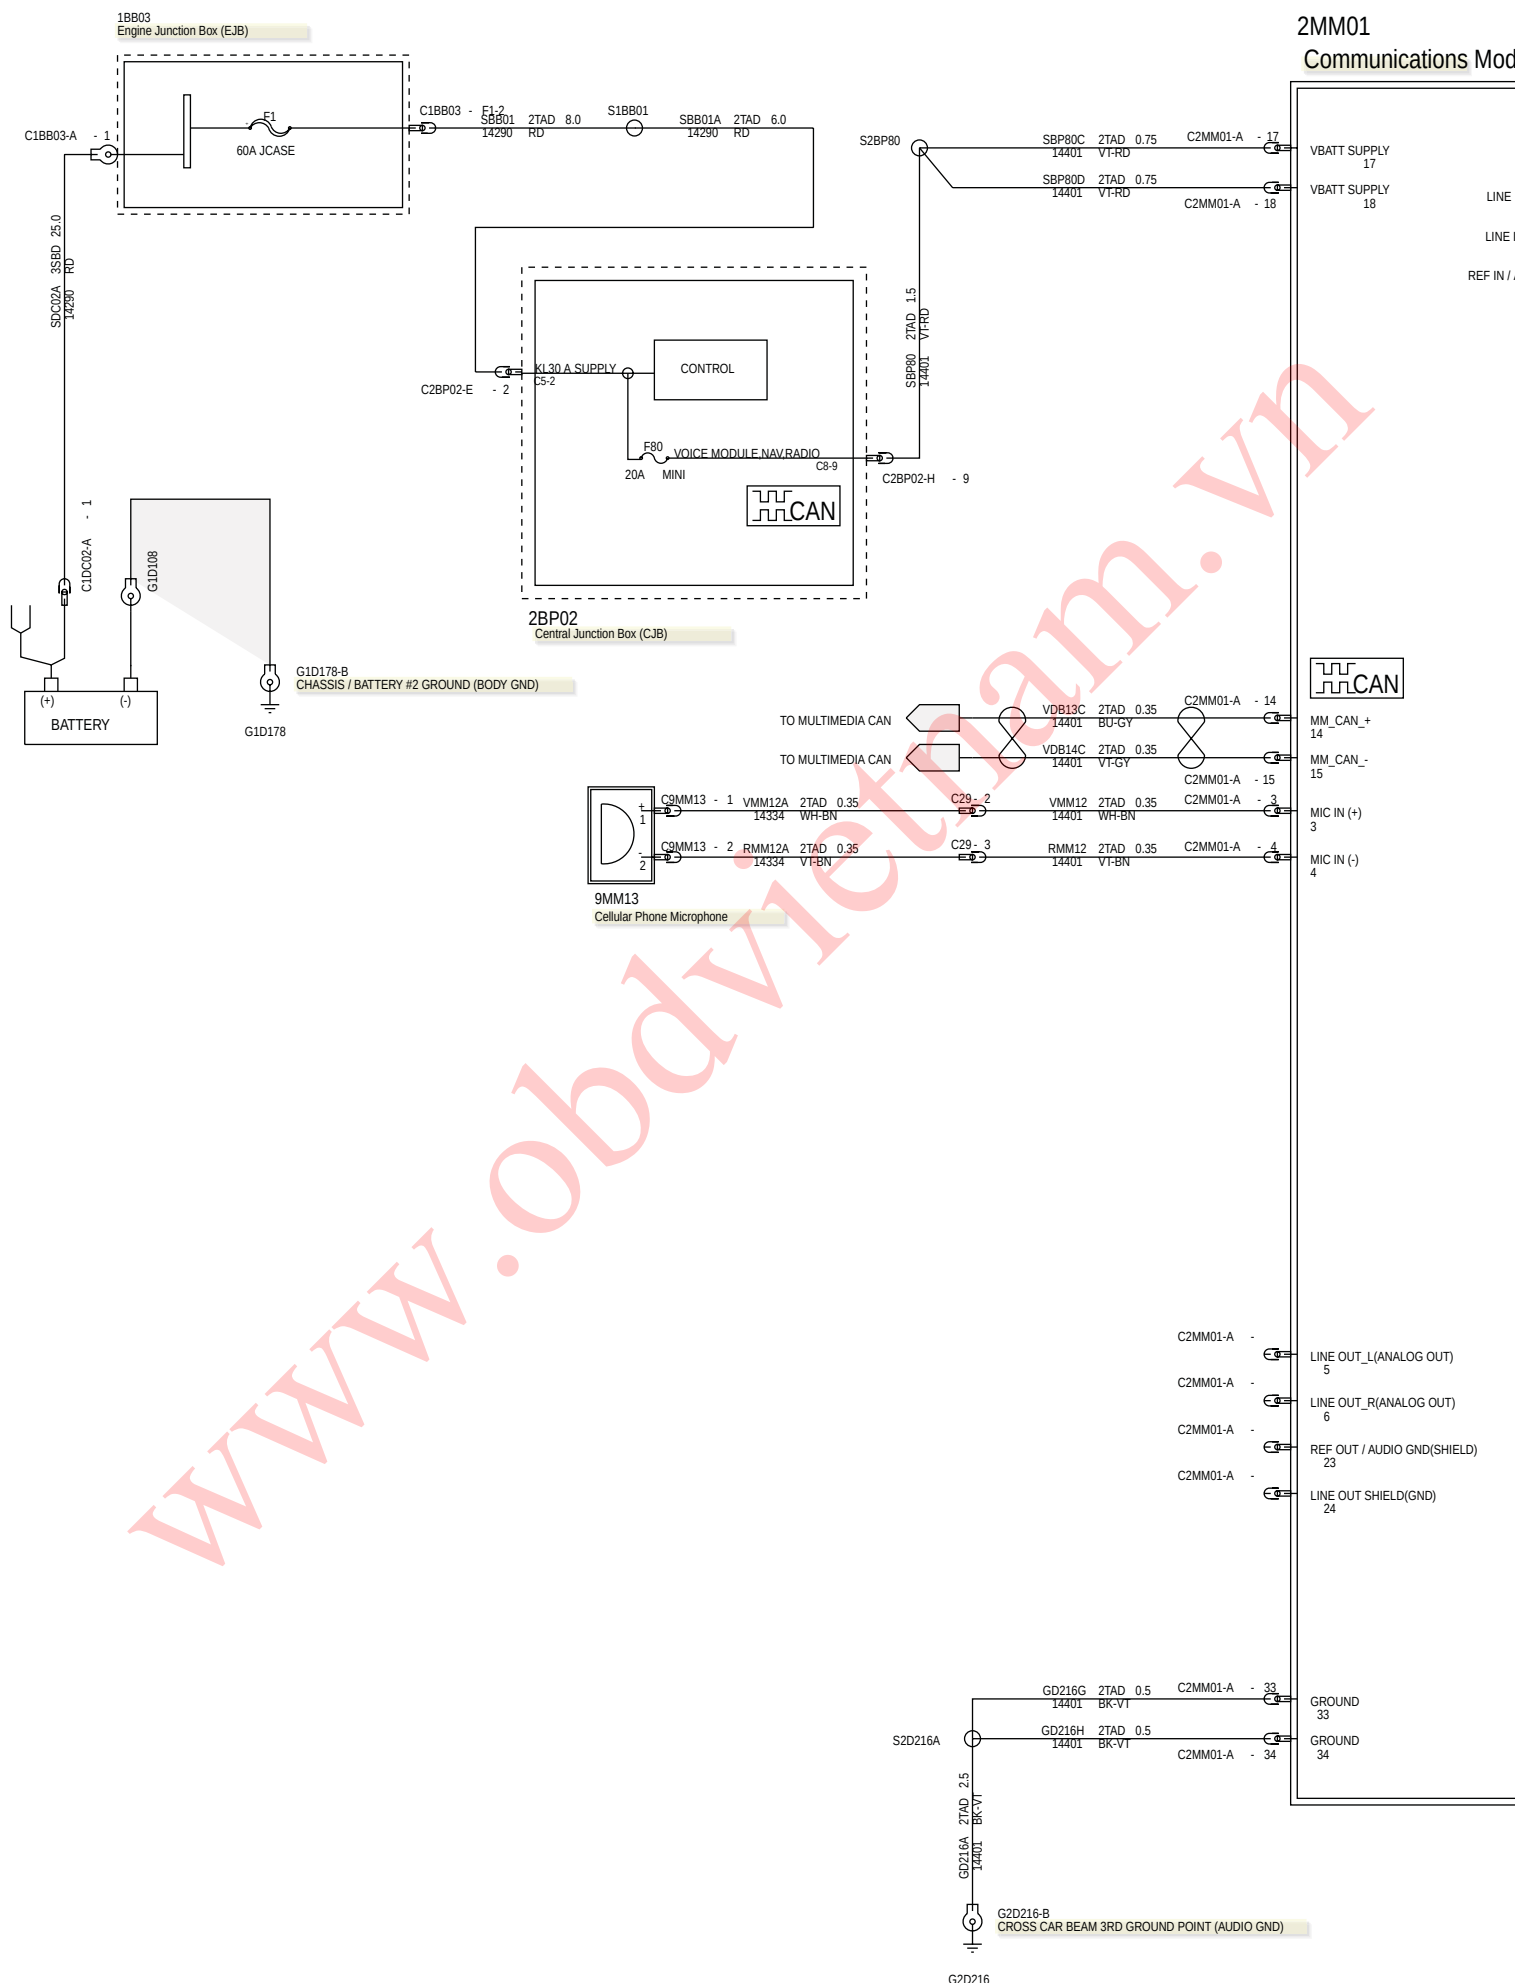

415-01-42 Audio System—Double Cab, RHD 4WD/RHD RWD, Vehicles With: Bluetooth and Voice Control


lule

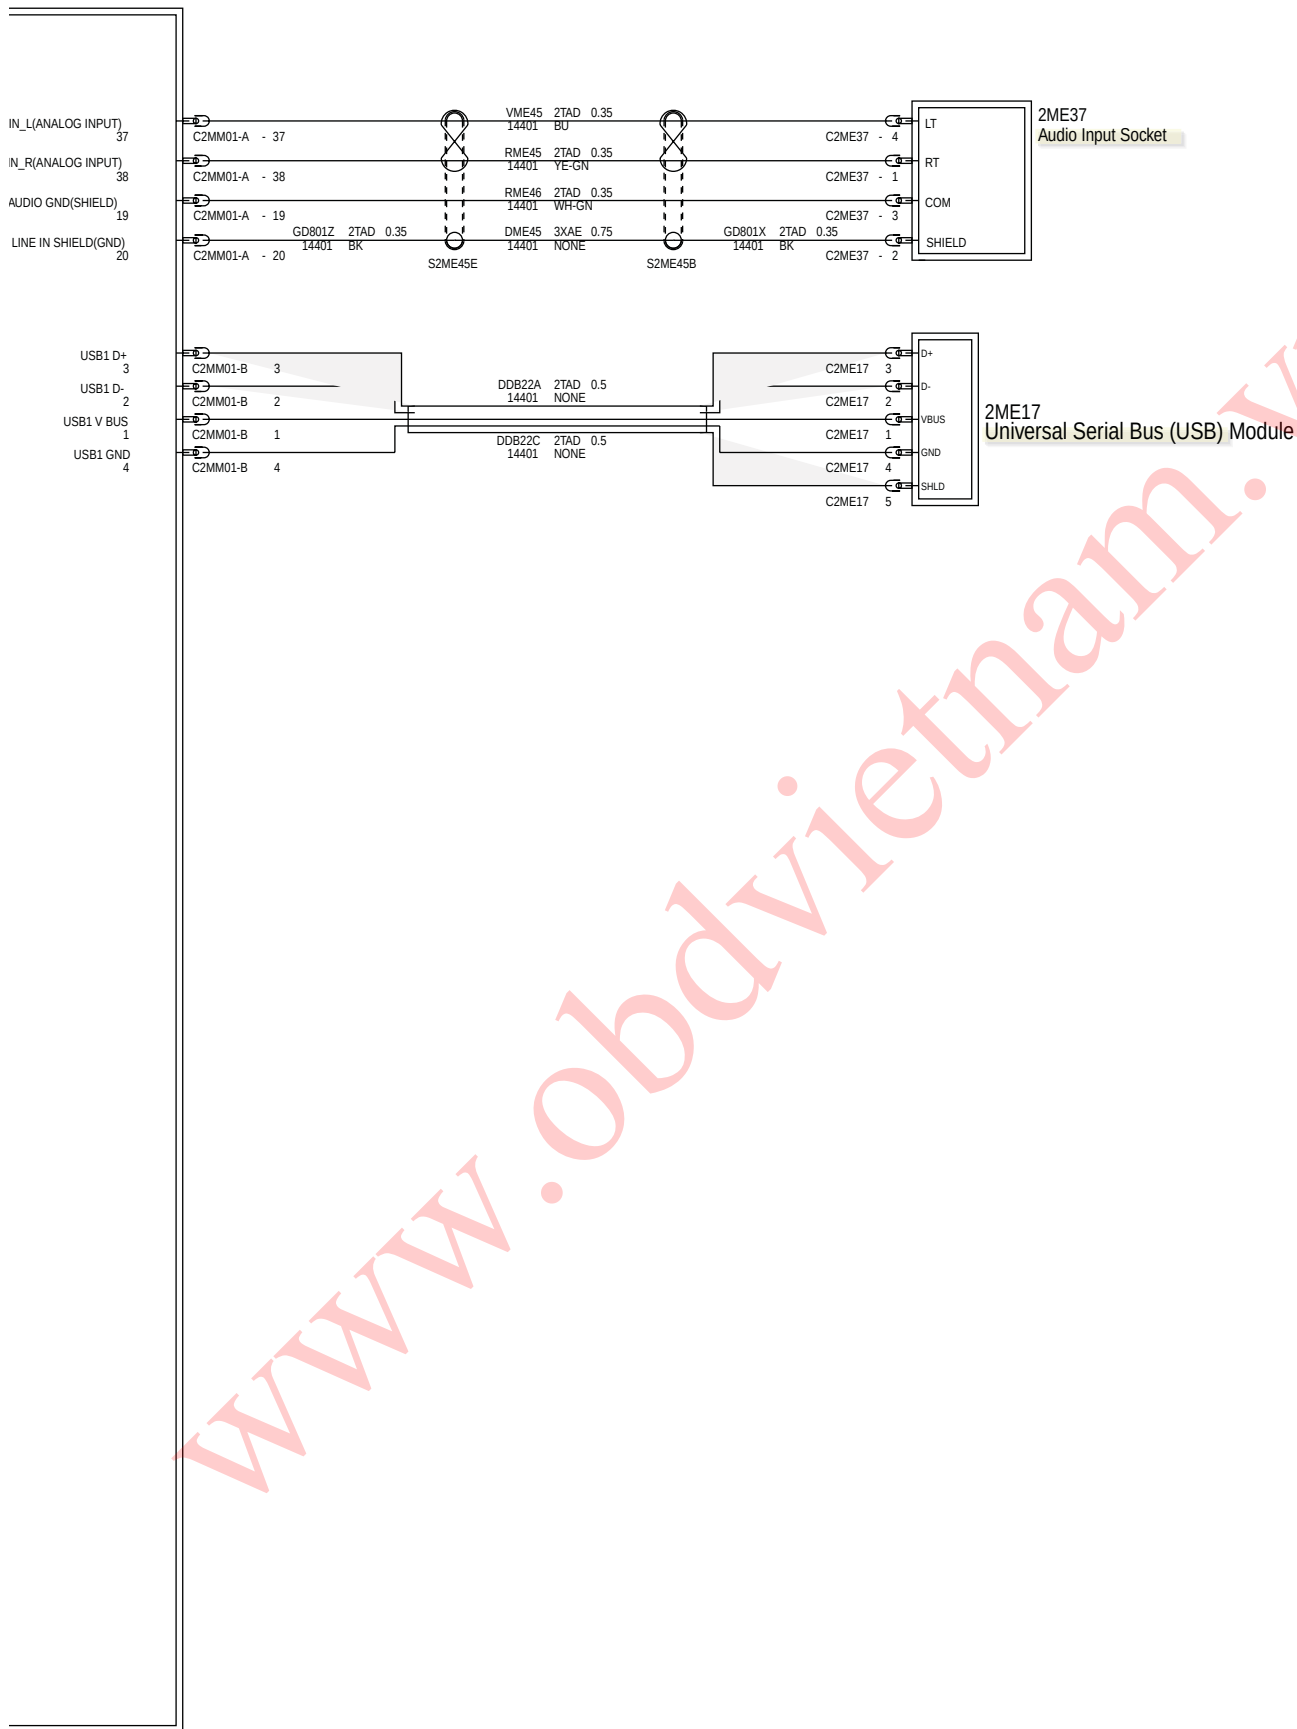

1BB03
Engine Junction Box (EJB)


415-01-44 Audio System—Double Cab, RHD 4WD/RHD RWD, Vehicles With: Bluetooth and Voice Control

ent Unit

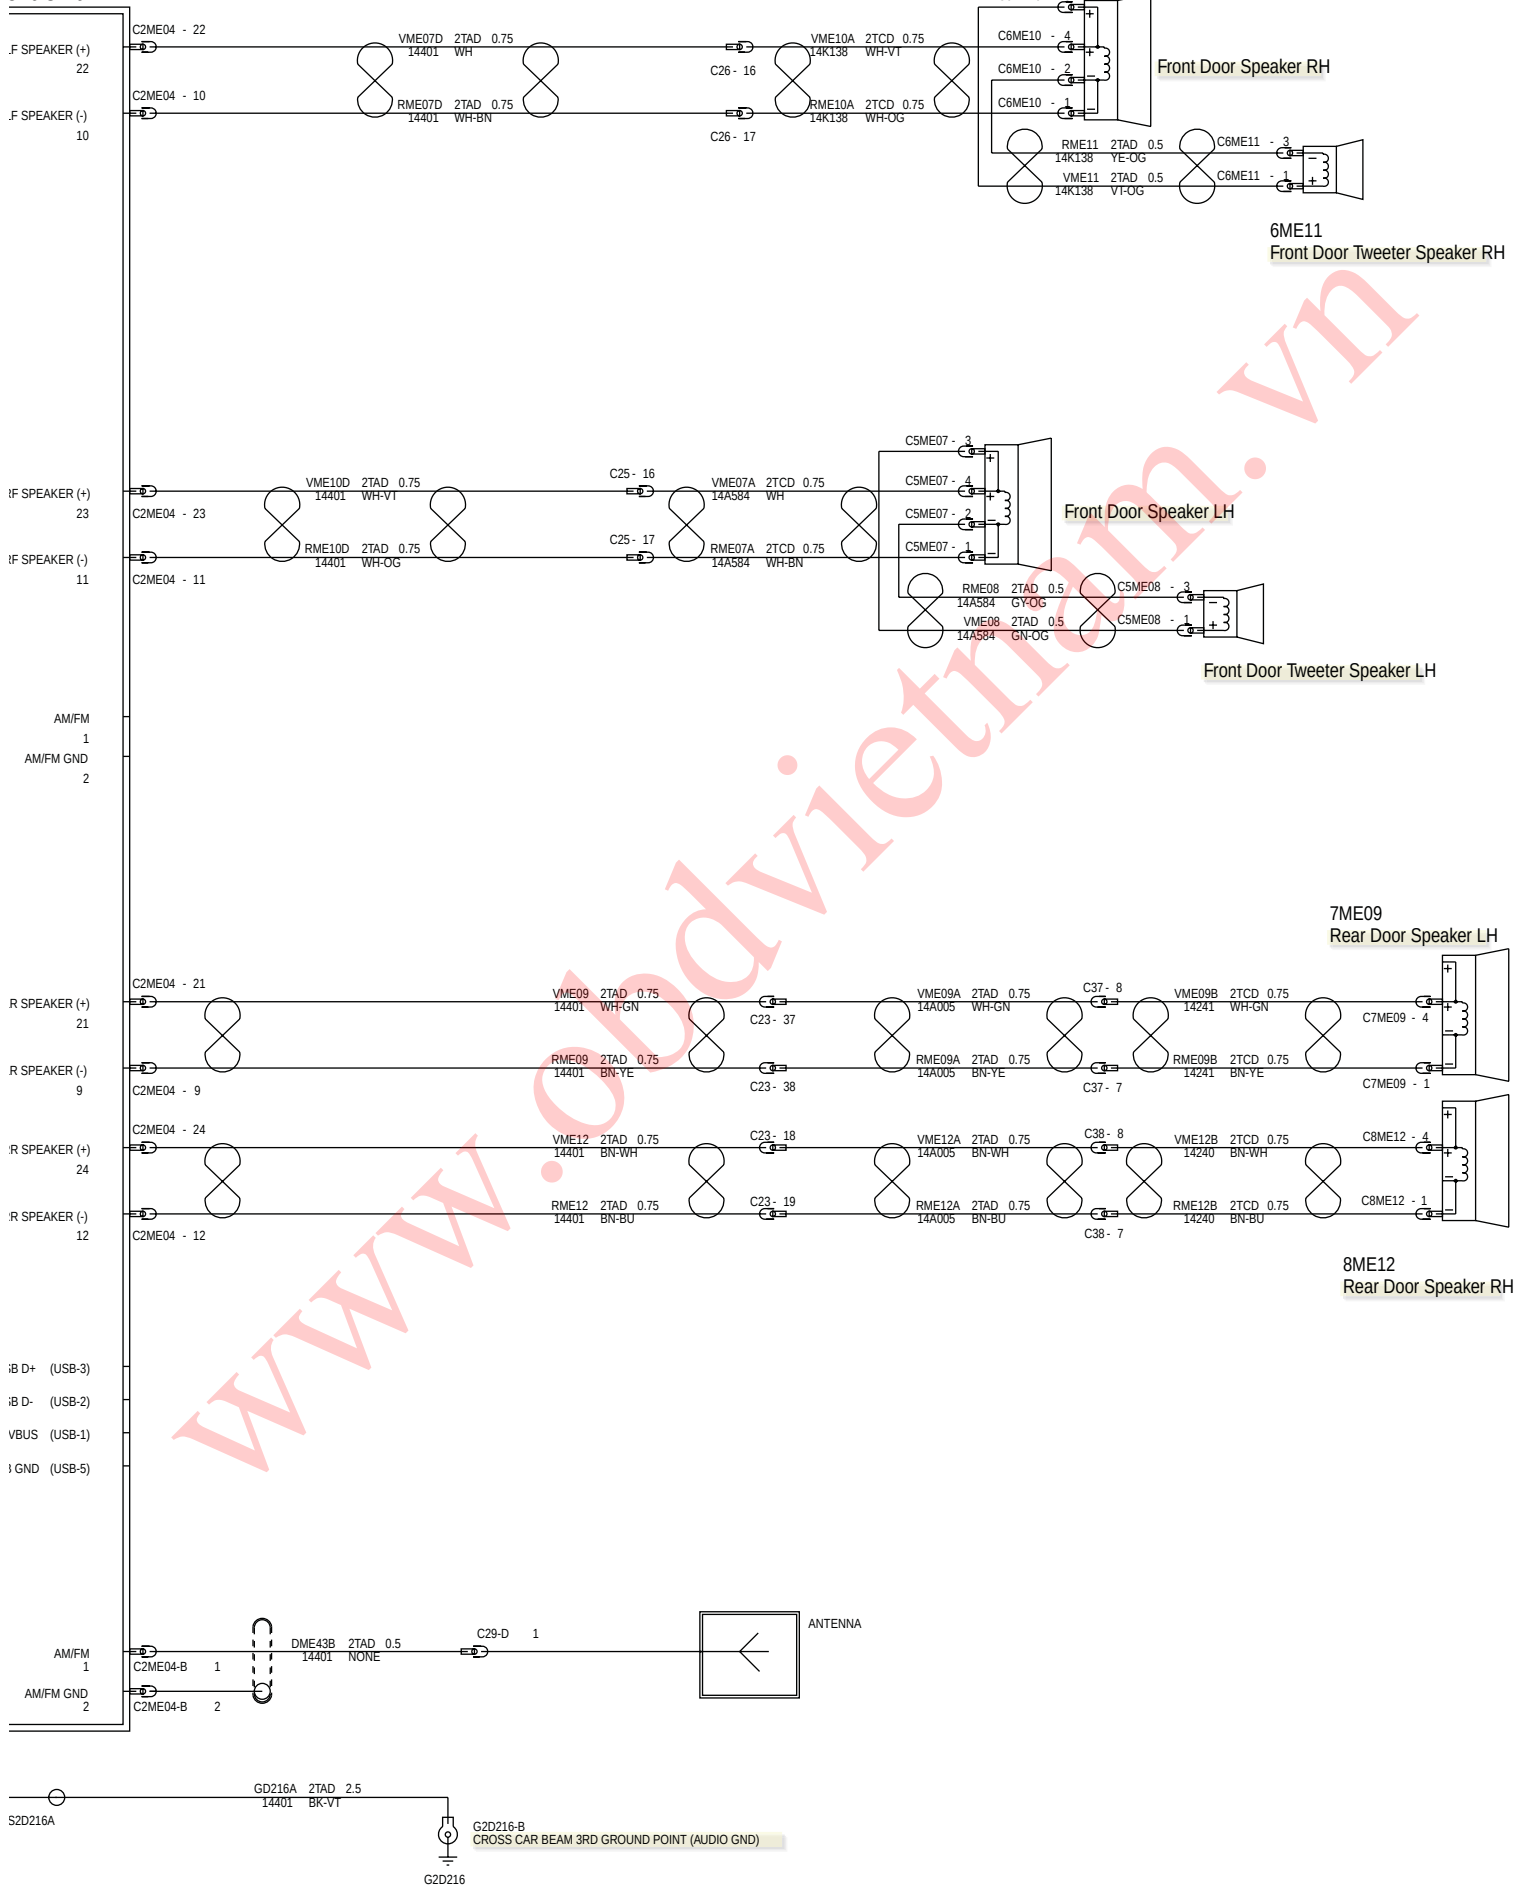




415-01-46 Audio System—Double Cab, RHD 4WD/RHD RWD, Vehicles Without: Bluetooth and Voice Control

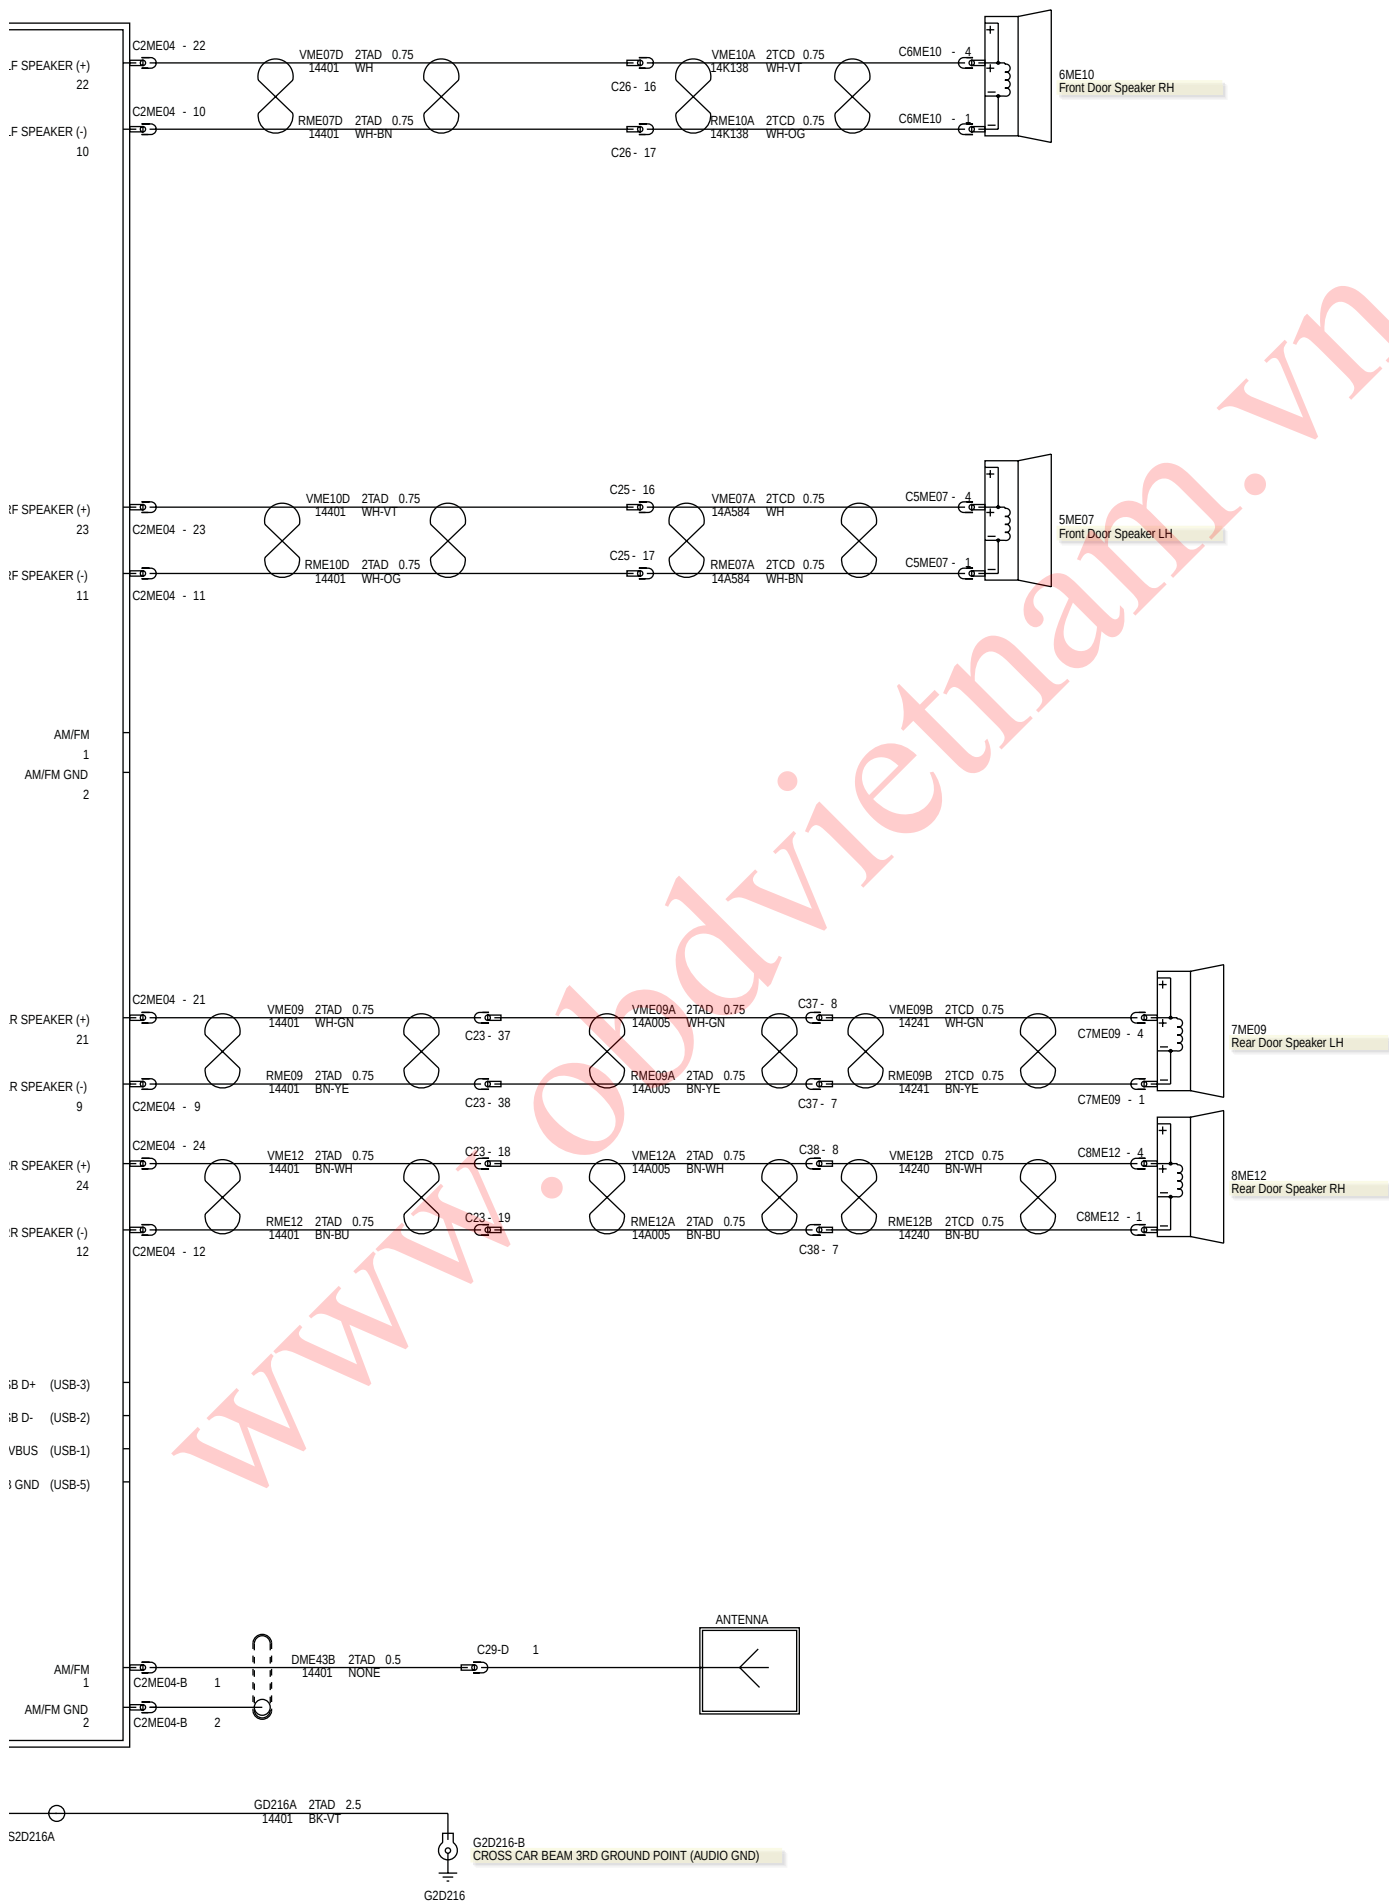



415-01-47 Audio System—Super Cab, RHD 4WD/RHD RWD, Vehicles With: Bluetooth and Voice Control

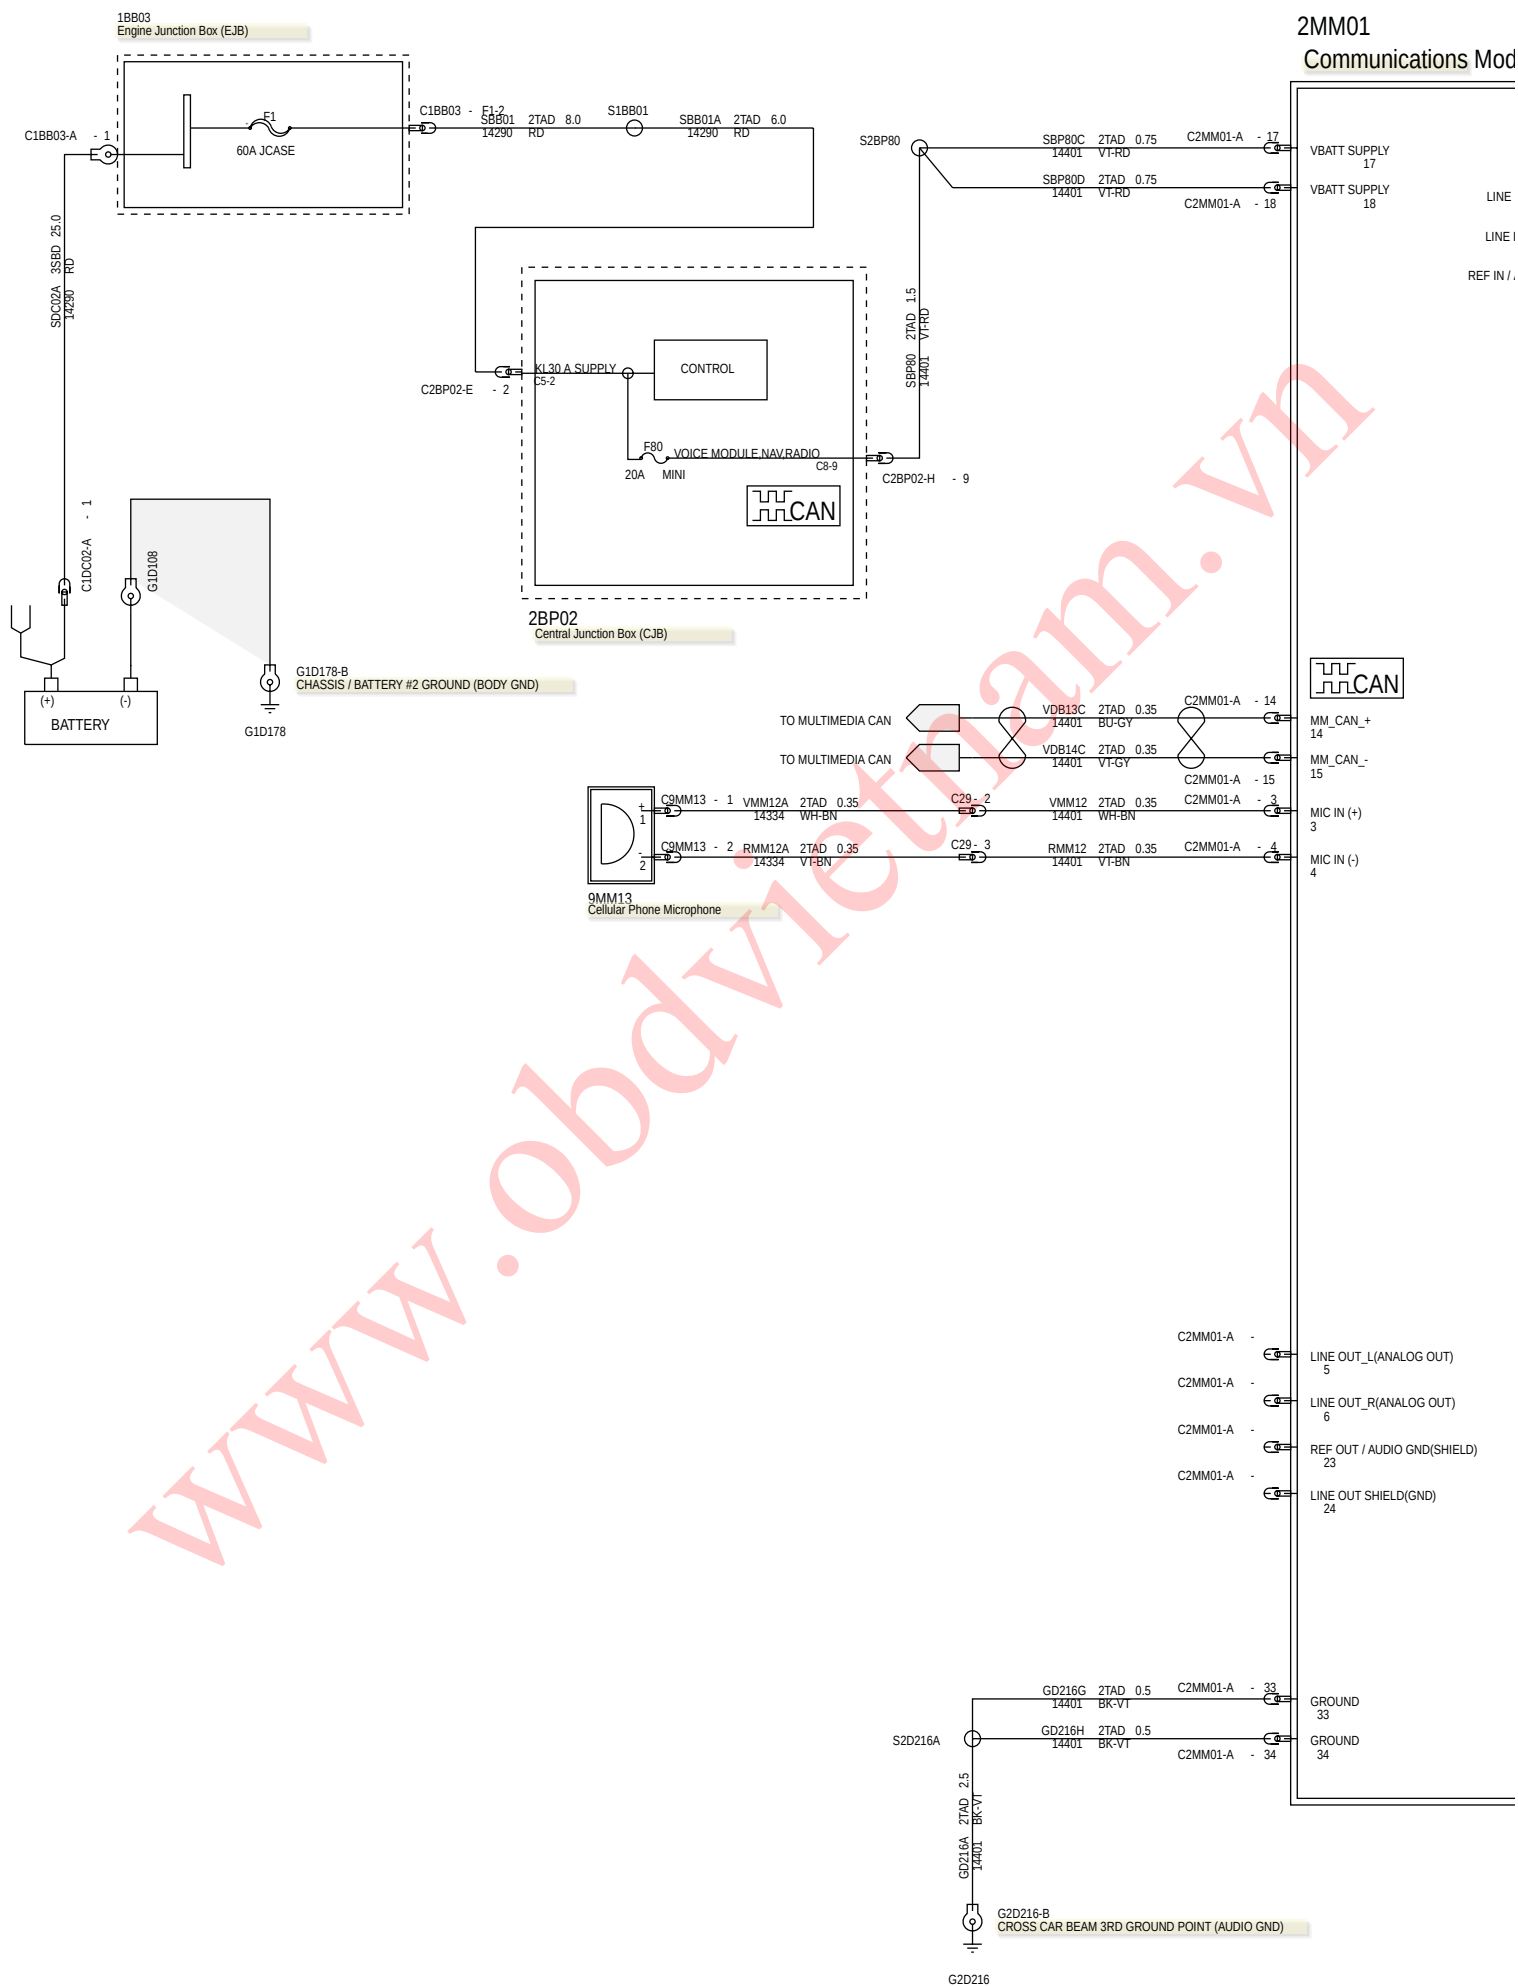

415-01-48 Audio System—Super Cab, RHD 4WD/RHD RWD, Vehicles With: Bluetooth and Voice Control


lule

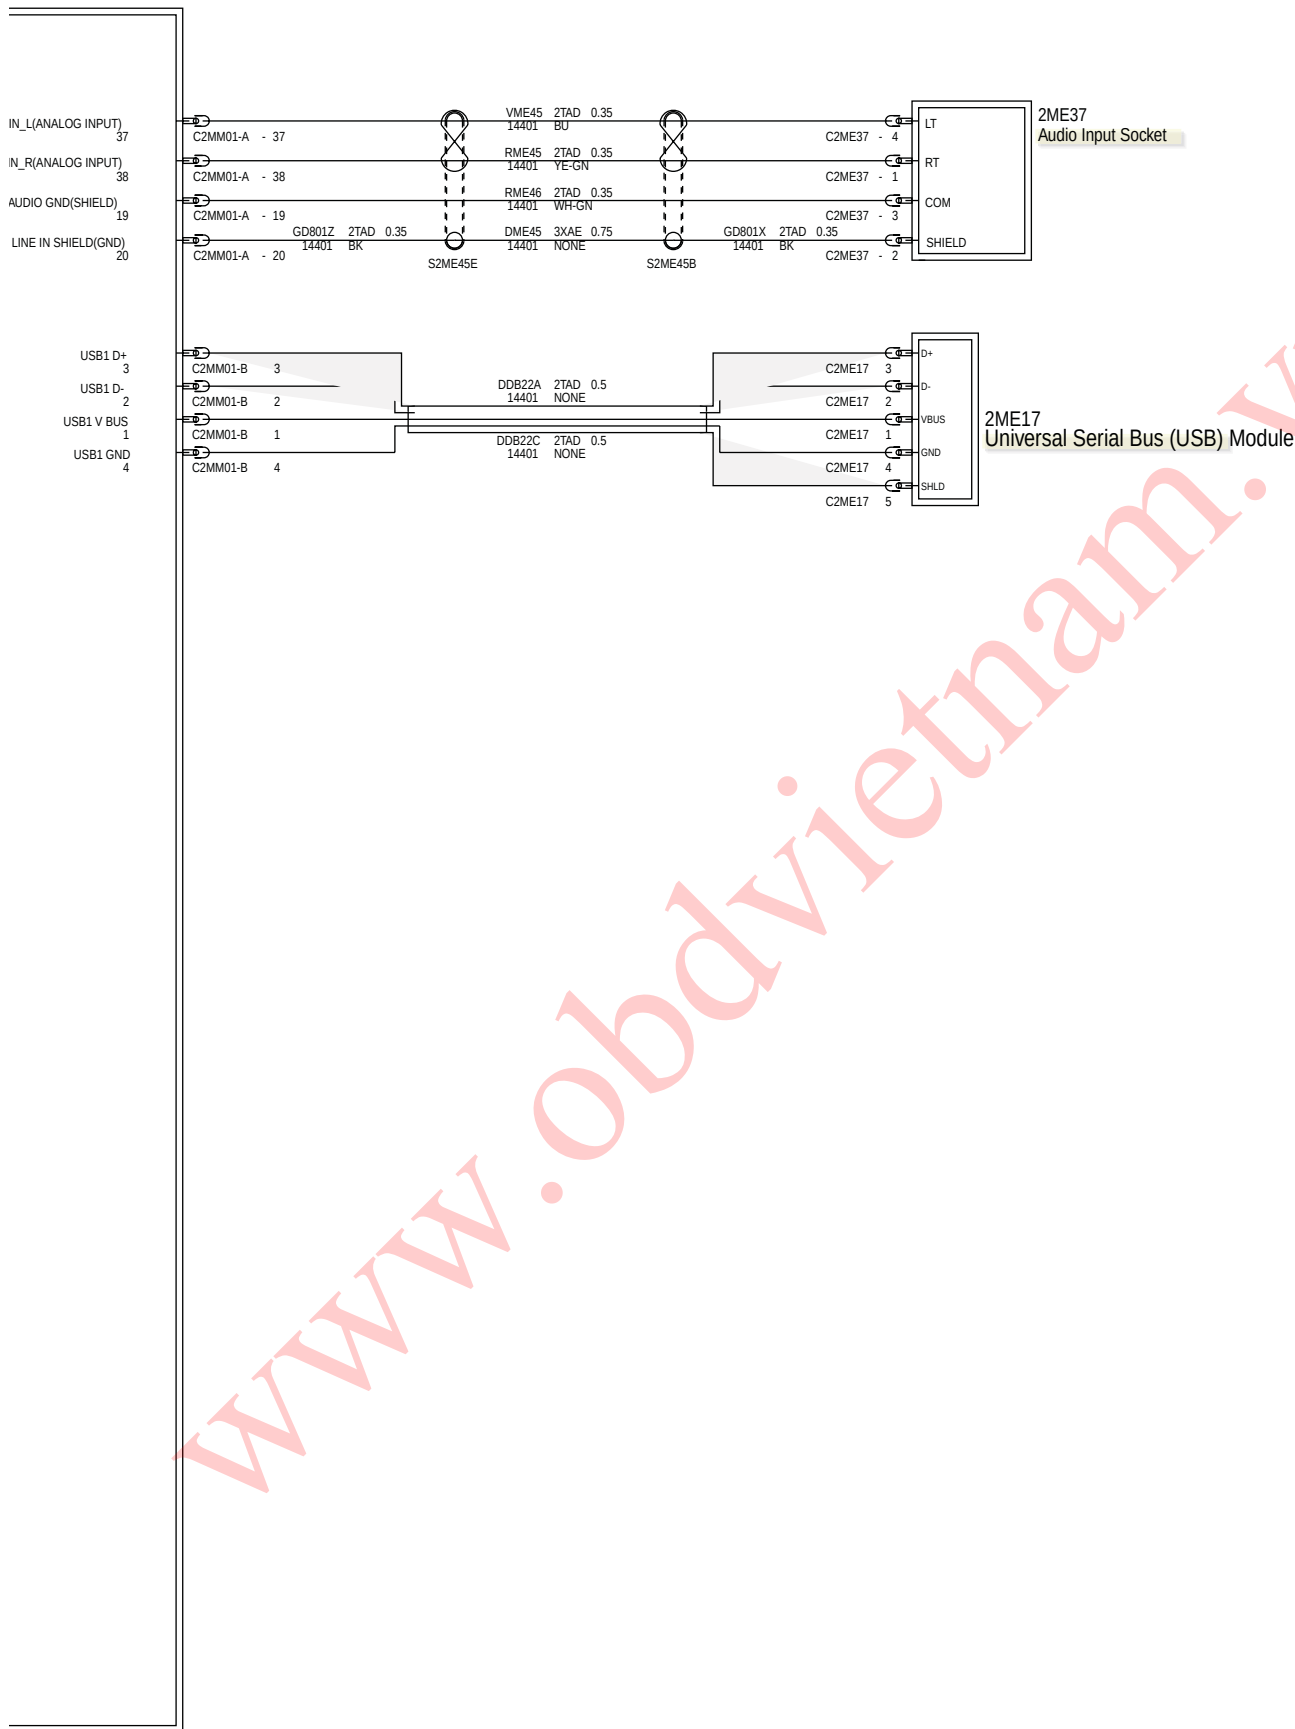


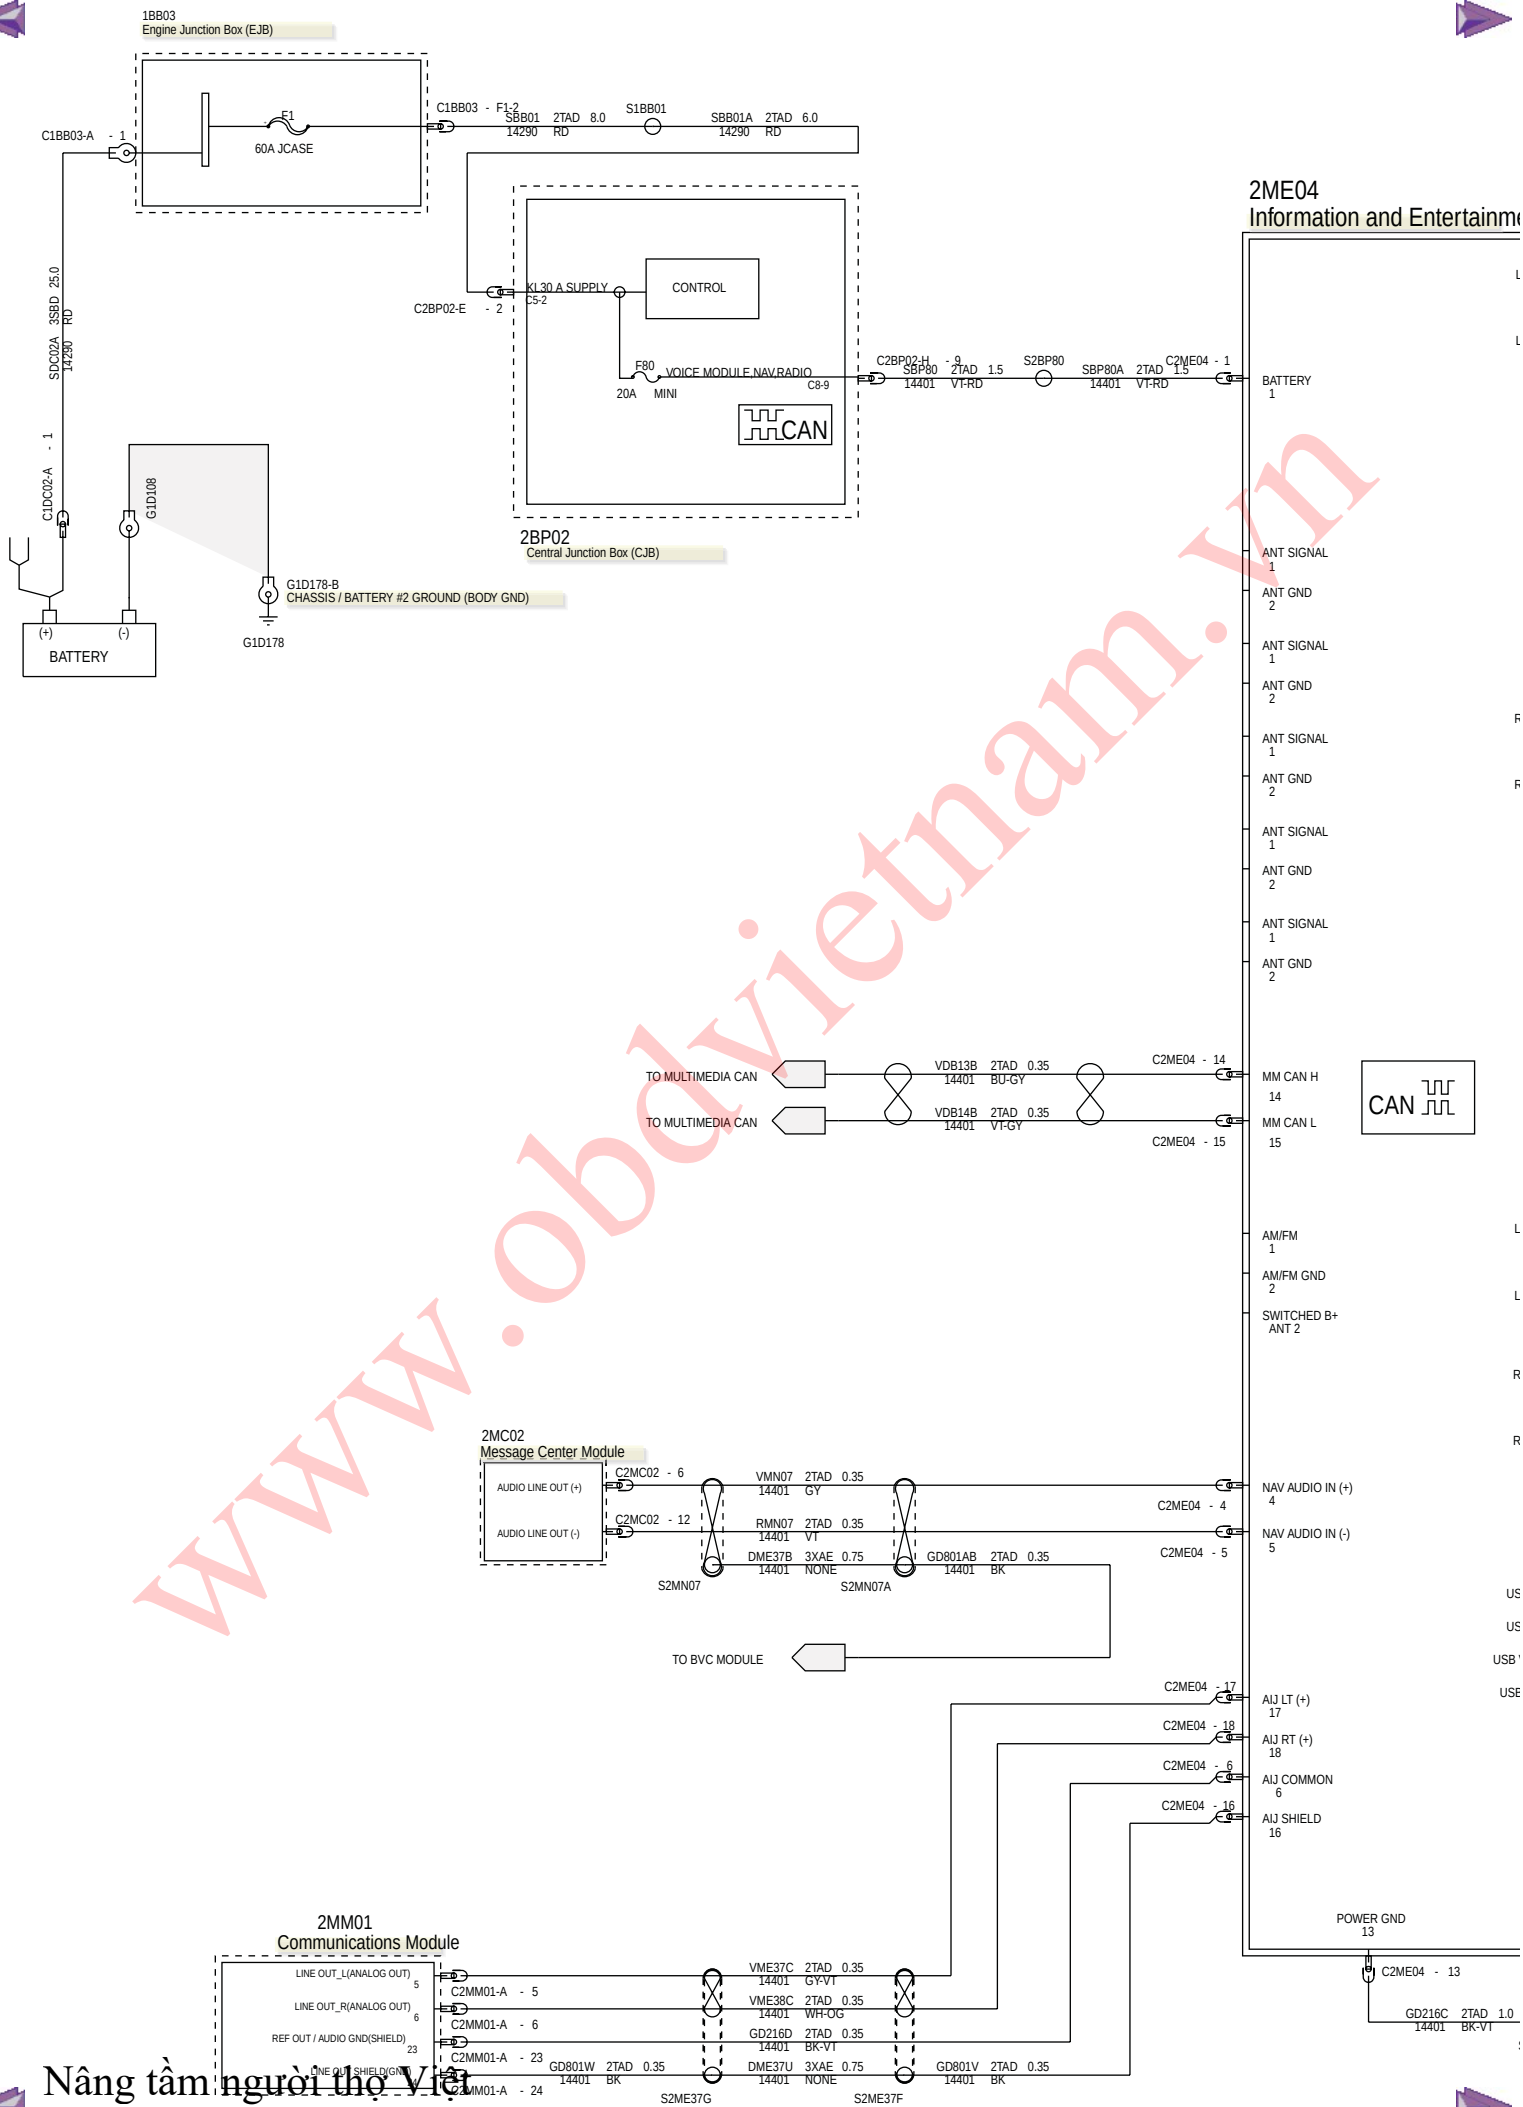


415-01-50 Audio System—Super Cab, RHD 4WD/RHD RWD, Vehicles With: Bluetooth and Voice Control

ent Unit

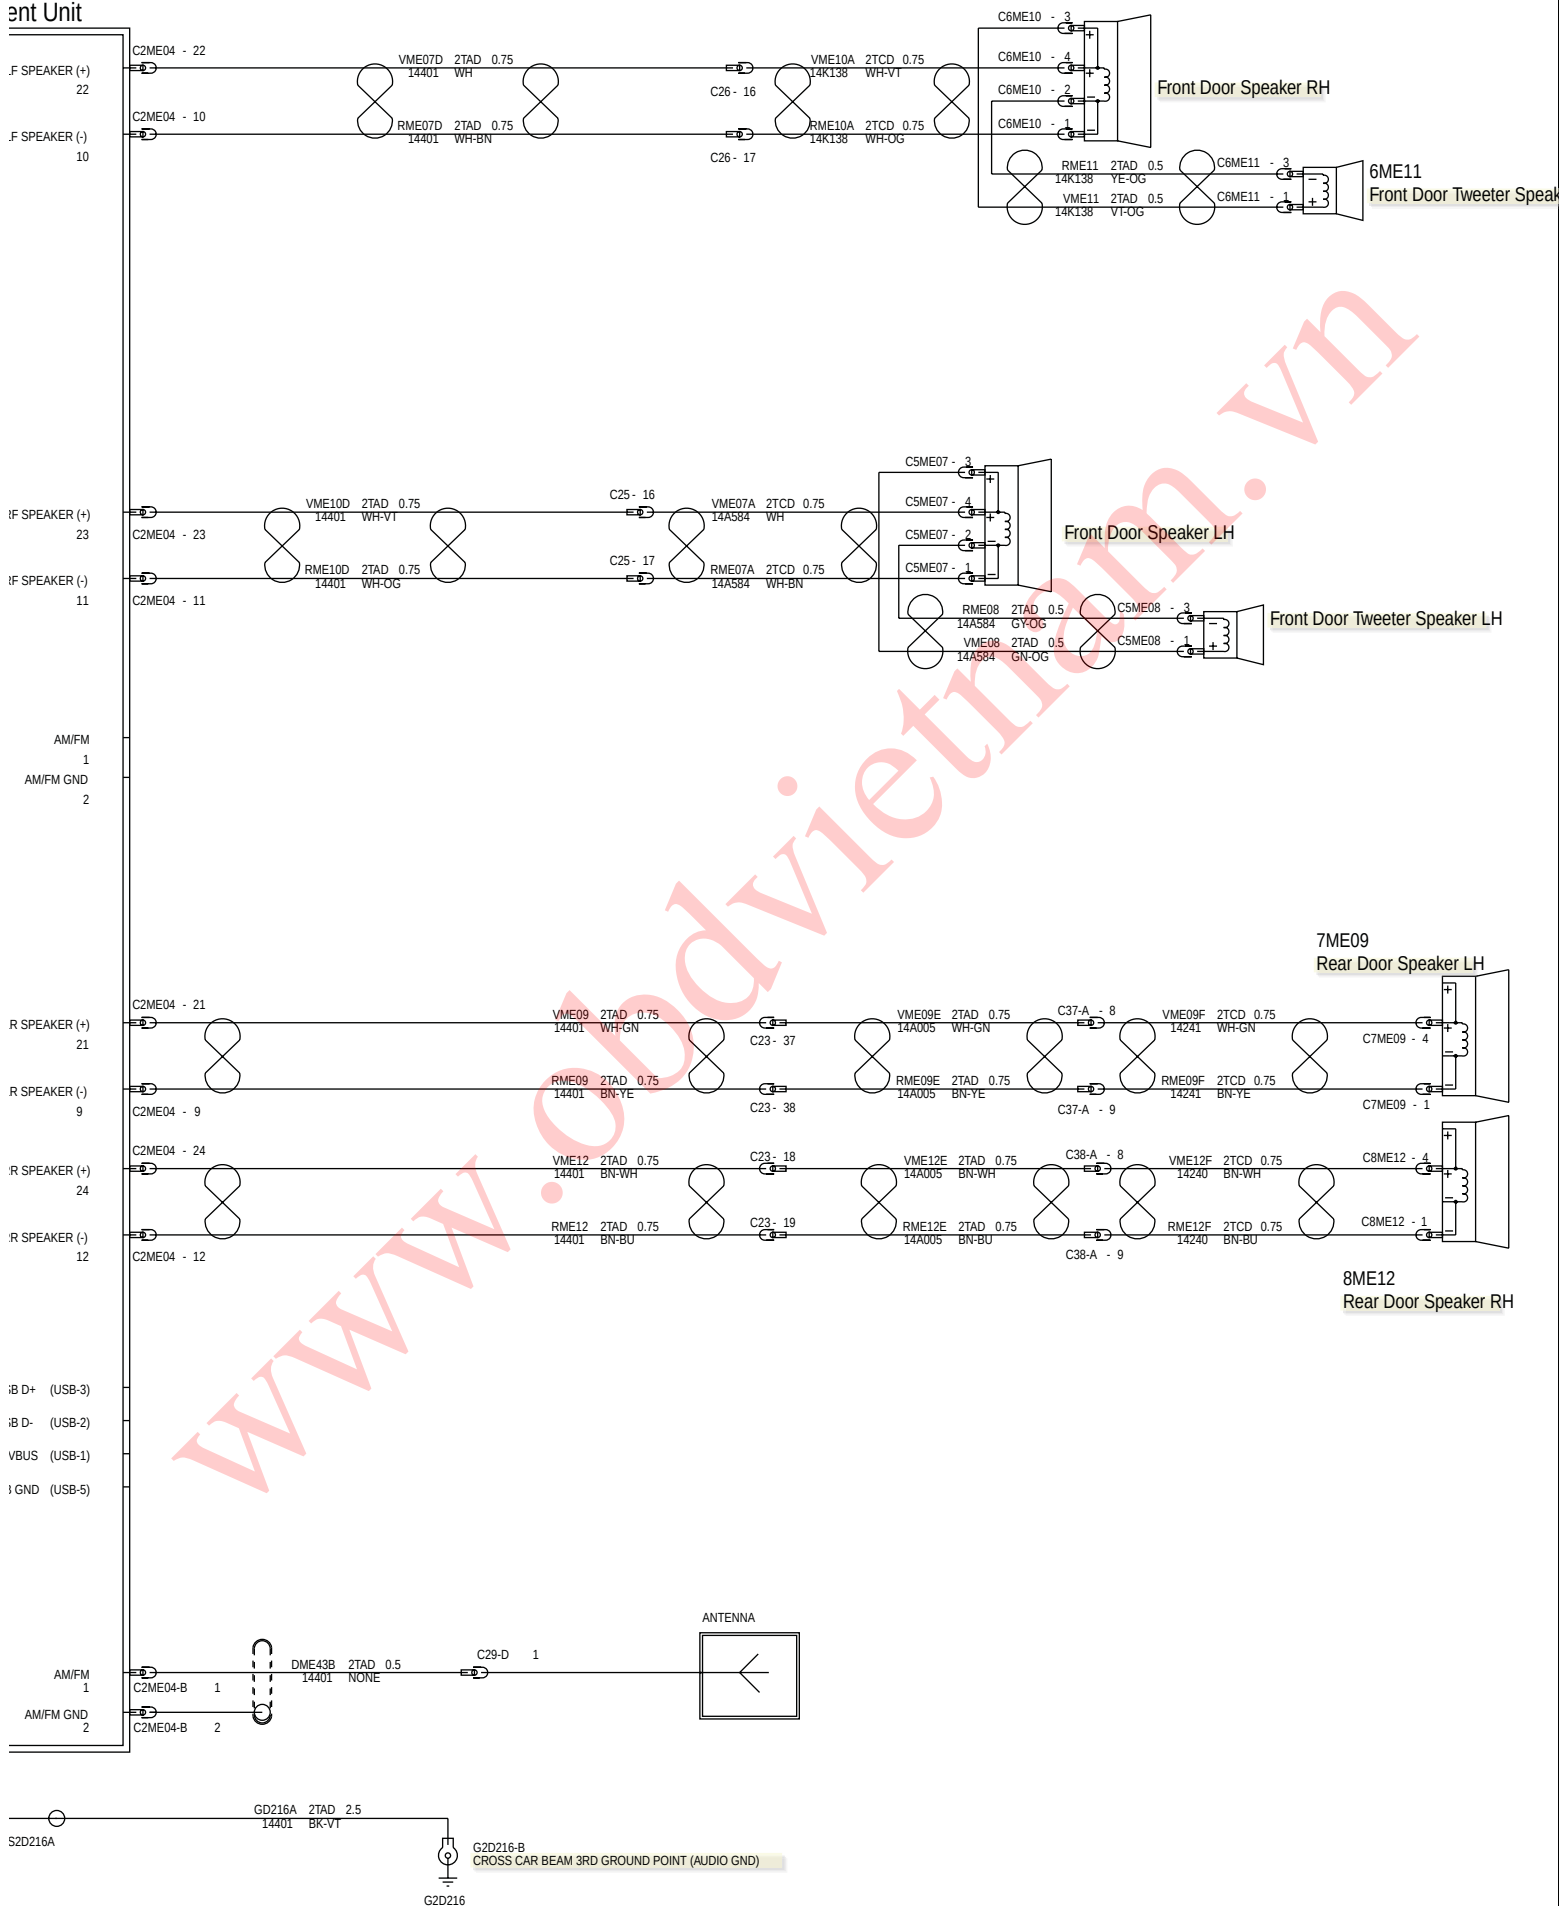

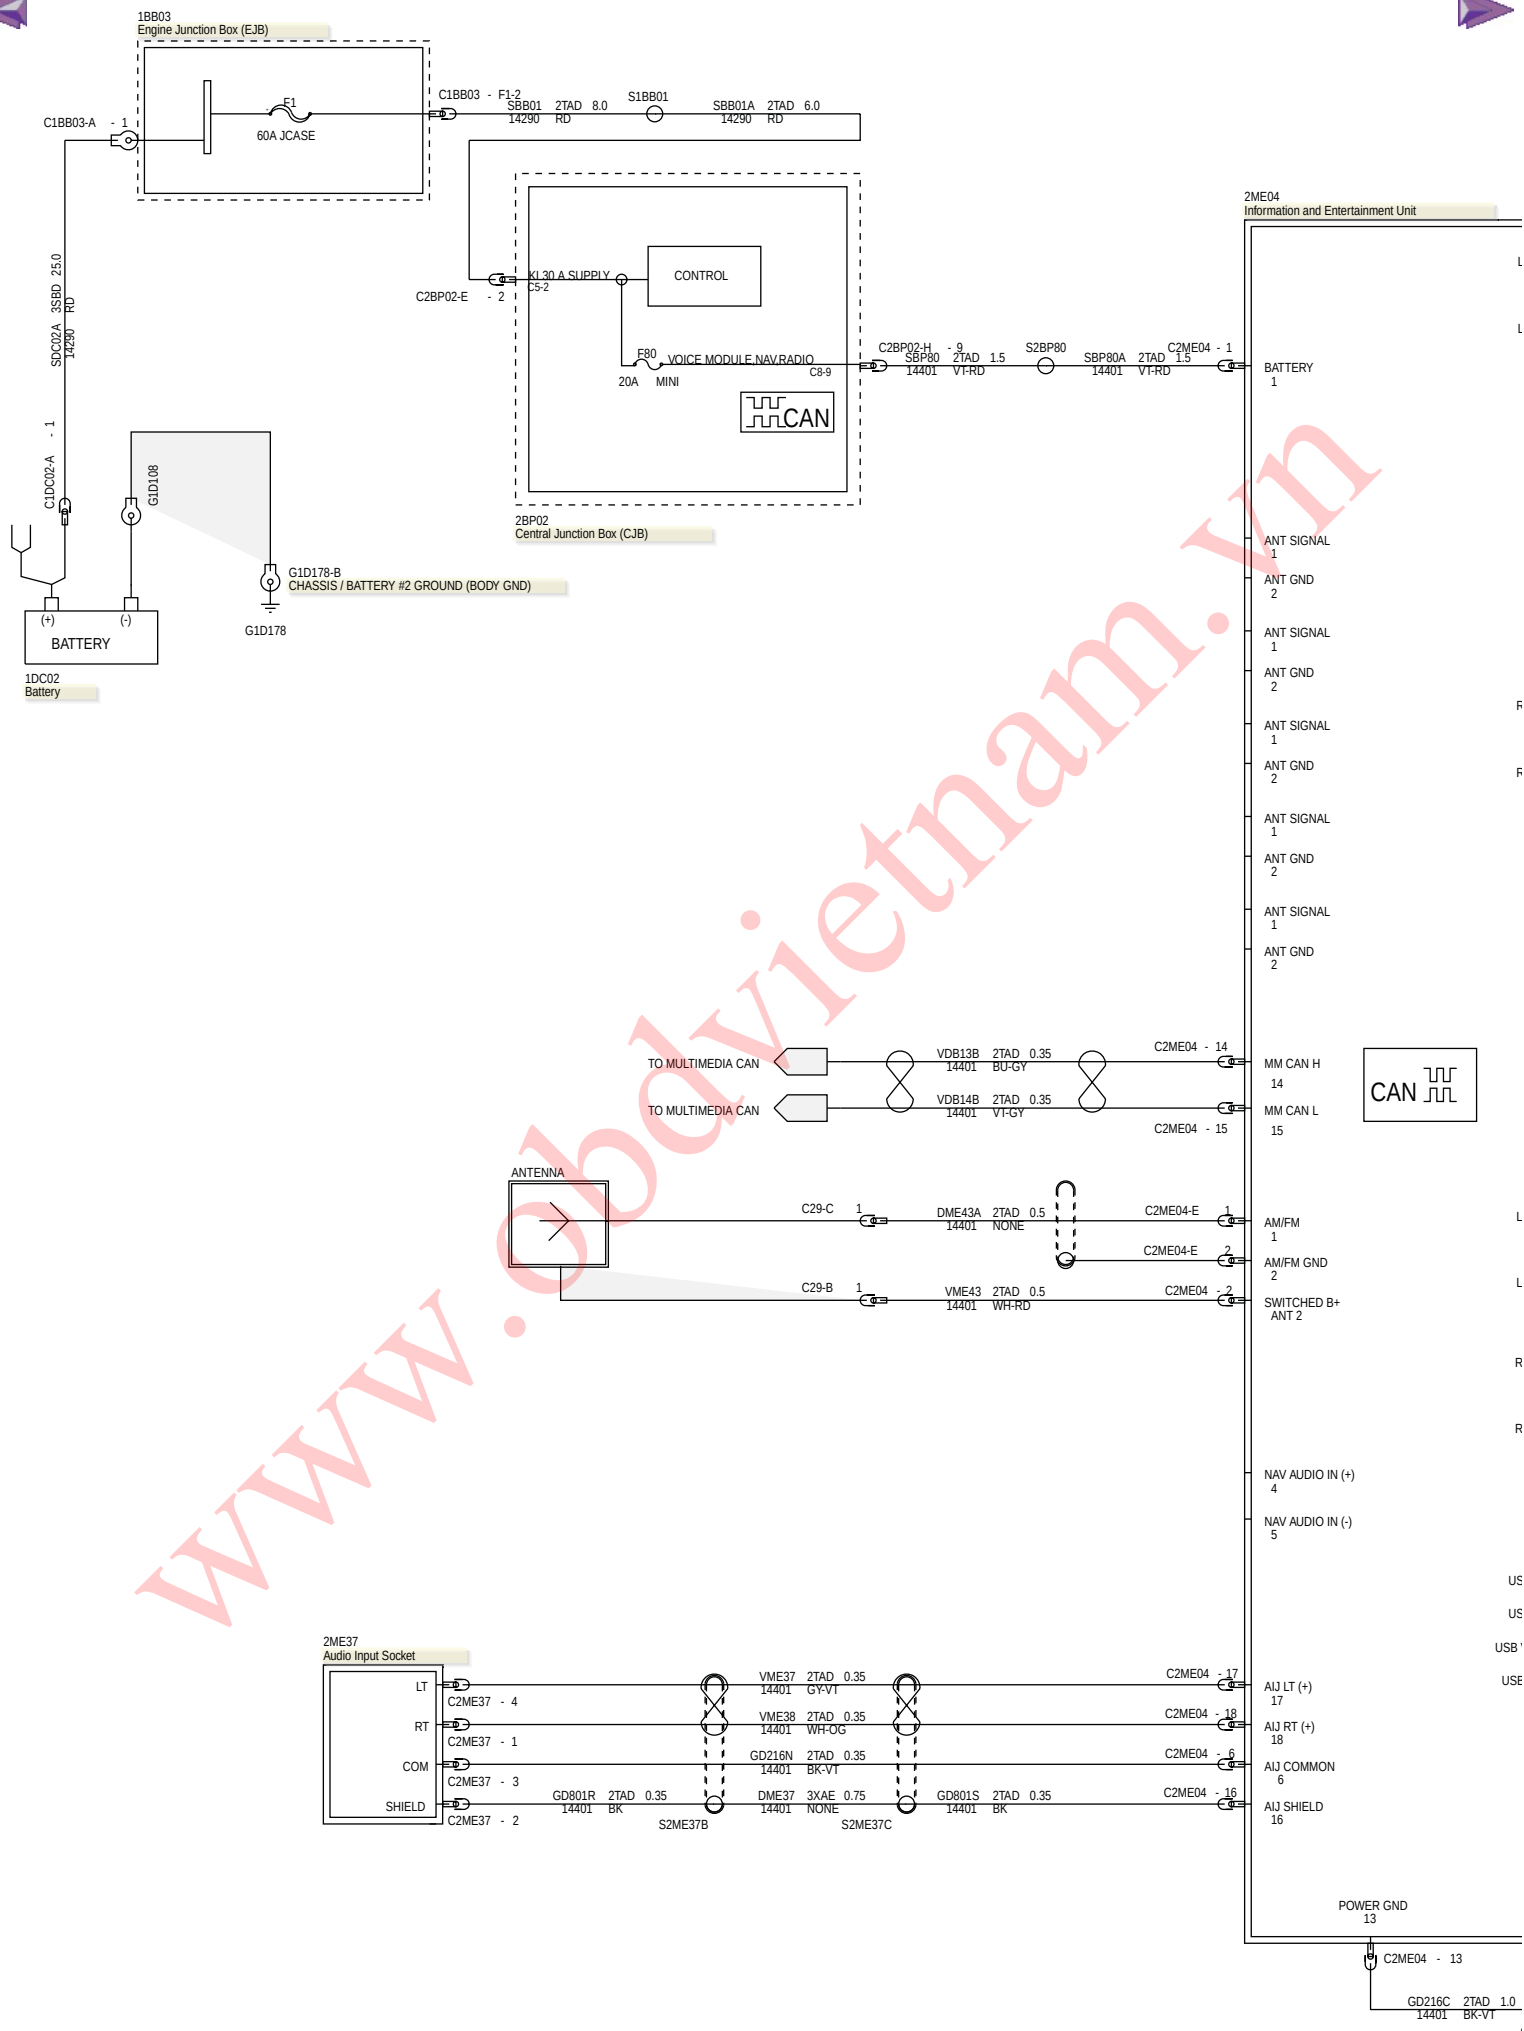


415-01-52 Audio System—Super Cab, RHD 4WD/RHD RWD, Vehicles Without: Bluetooth and Voice Control

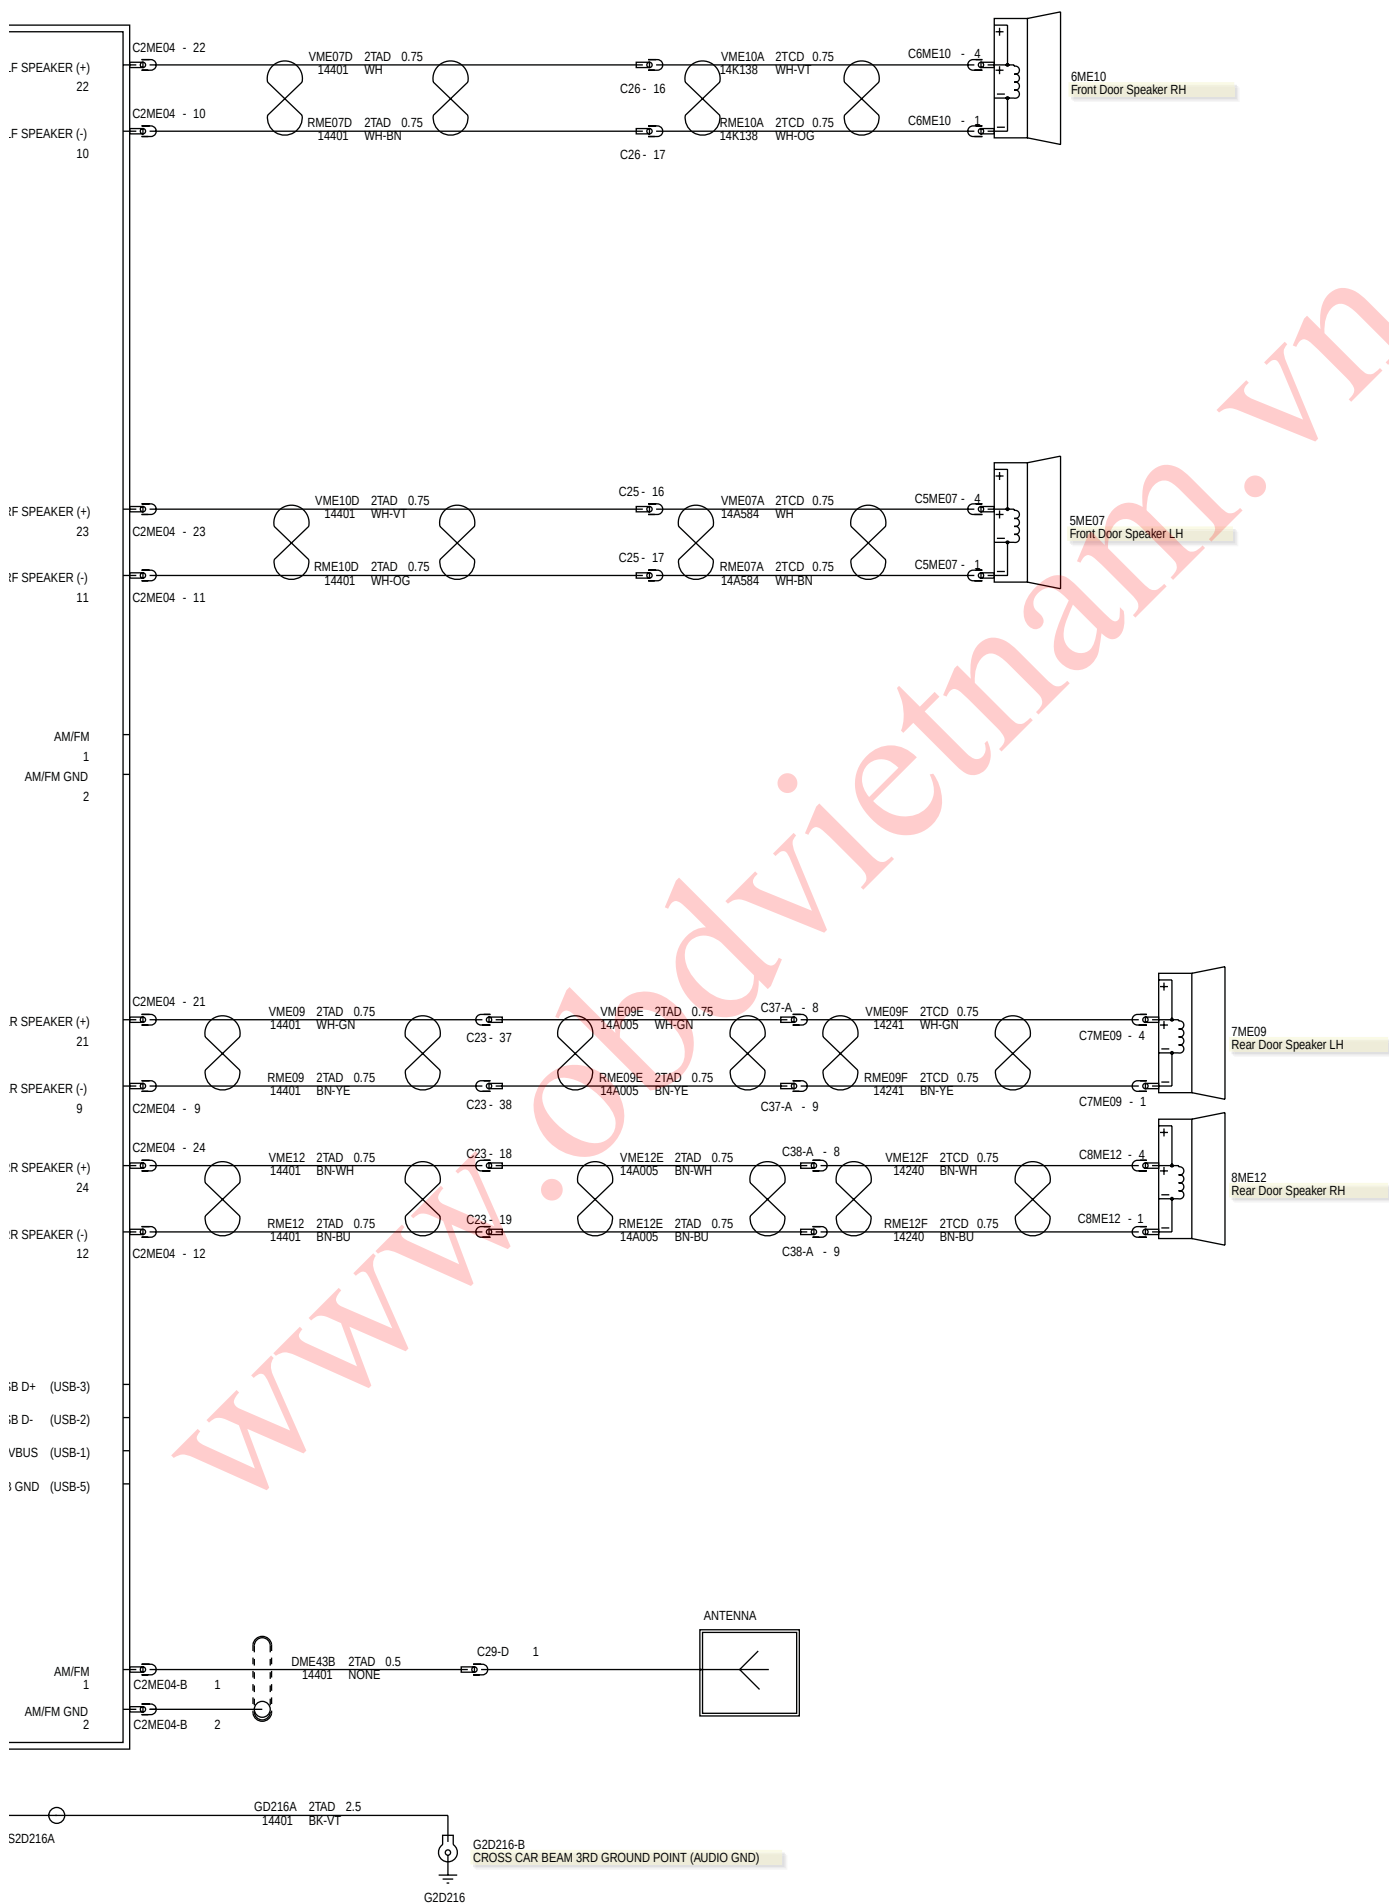

415-01-53

Audio Input Socket (G1404453)

PIN 1 => RME45 YE-GN 0.35 2TAD
 PIN 1 => VME38 WH-OG 0.35 2TAD
 PIN 1 => VME38B WH-OG 0.35 2TAD
 PIN 2 => GD801R BK 0.35 2TAD
 PIN 2 => GD801T BK 0.35 2TAD
 PIN 2 => GD801X BK 0.35 2TAD
 PIN 3 => GD216M BK-VT 0.35 2TAD
 PIN 3 => GD216N BK-VT 0.35 2TAD
 PIN 3 => RME46 WH-GN 0.35 2TAD
 PIN 4 => VME37 GY-VT 0.35 2TAD
 PIN 4 => VME37B GY-VT 0.35 2TAD
 PIN 4 => VME45 BU 0.35 2TAD



— 1 VME46A BU-GN 2TAD 0.35
 — 2 RME45A YE-GN 2TAD 0.35
 — 3 RME46A WH-GN 2TAD 0.35
 — 4 VME45A BU 2TAD 0.35

1L2T-14489-GC

C2ME37

TO AUX JACK

HARNESS 14401

Audio Unit (G1404454)

SBP79A WH-RD 2TAD 1.0	1		11	
CDC32B BN-YE 2TAD 0.5	2		12	VME43A WH-RD 2TAD 0.5
VME10 WH-VT 2TAD 0.5 + VME10B WH-VT 2TAD 0.5	3		13	VME12C BN-WH 2TAD 0.5
RME10 WH-OG 2TAD 0.5 + RME10B WH-OG 2TAD 0.5	4		14	RME12C BN-BU 2TAD 0.5
VME07B WH 2TAD 0.5 + VME07 WH 2TAD 0.5	5		15	VME09C WH-GN 2TAD 0.5
RME07B WH-BN 2TAD 0.5 + RME07 WH-BN 2TAD 0.5	6		16	RME09C BN-YE 2TAD 0.5
VME46A BU-GN 2TAD 0.35	7		17	VME45A BU 2TAD 0.35
RME46A WH-GN 2TAD 0.35	8		18	RME45A YE-GN 2TAD 0.35
CLN17H BN 2TAD 0.5	9		19	
GD216B BK-VT 2TAD 1.0	10		20	


C2ME03

MX5-A-20S-C

TO AUDIO SINGLE DIN

HARNESS 14401

Audio Unit—J (G1414611)



— 1 DME43 NONE 2TAD 0.5

7H2T-14489-AKB


C2ME03-J

TO LHD PASSIVE ANTENNA

HARNESS 14401

Cellular Phone Microphone (G1405451)

RMM12A VT-BN 2TAD 0.35
 VMM12A WH-BN 2TAD 0.35



96BG-14A459-AA


C9MM13

TO MICROPHONE

HARNESS 14334


415-01-54

Communications Module—A (G1404456)

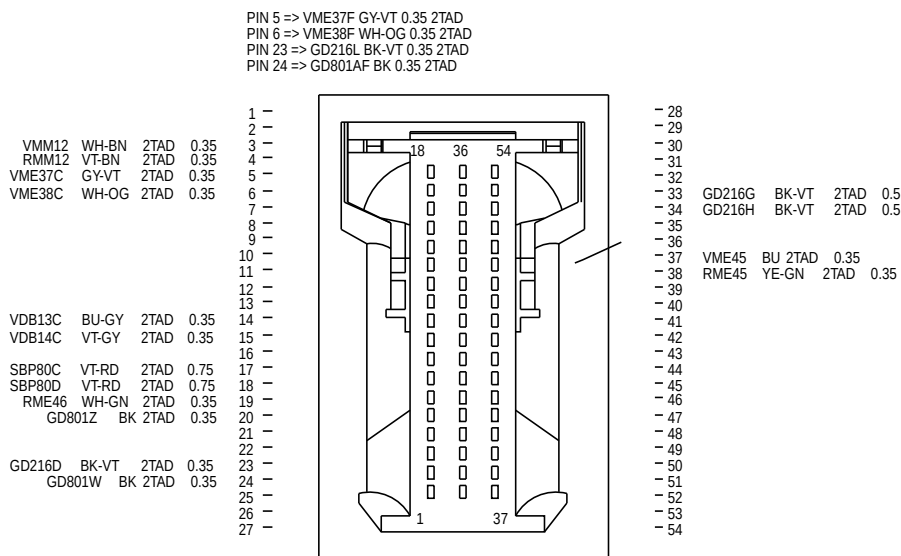


C2MM01-A
1X4T-14N003-CB
TO BVC MODULE 2
HARNESS 14401

Communications Module—B (G1404457)




7U5T-19C041-AA
C2MM01-B
TO BVC MODULE USB
HARNESS 14401

Front Door Speaker LH (G1404458)



3M5T-14489-RDA
C5ME07
TO DRIVER SPEAKER
HARNESS 14A584


Front Door Speaker RH (G1404459)



3M5T-14489-RDA
C6ME10
TO PASSENGER SPEAKER
HARNESS 14K138

415-01-55

Front Door Tweeter Speaker LH (G1404460)




2L2T-14A464-BA

C5ME08

TO DRIVER TWEETER

HARNESS 14A584

Front Door Tweeter Speaker RH (G1404461)




2L2T-14A464-BA

C6ME11

TO PASSENGER TWEETER

HARNESS 14K138

Information and Entertainment Control Panel (G1404462)

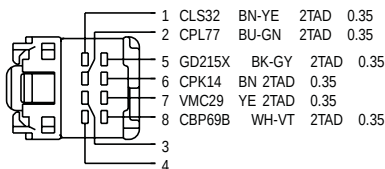

2L7T-14489-BA


C2LS51

TO INTEGRATED CONTROL PANEL

HARNESS 14401

Information and Entertainment Unit (G1404463)

PIN 2 => VME43 WH-RD 0.5 2TAD
PIN 14 => VDB13B BU-GY 0.35 2TAD
PIN 15 => VDB14B VT-GY 0.35 2TAD

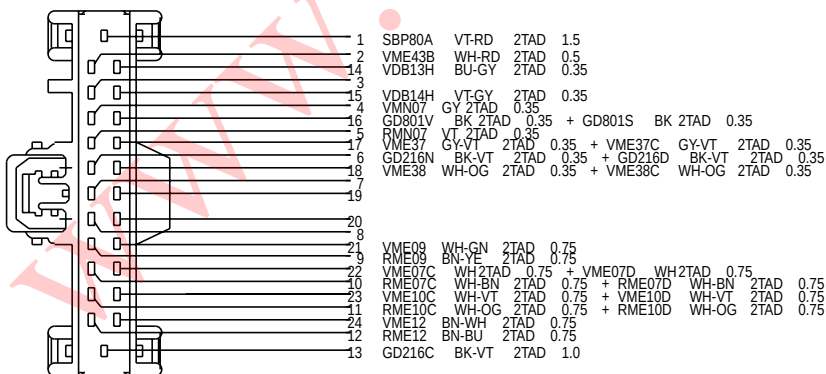

9U5T-14489-MA


C2ME04

TO AUDIO UNIT

HARNESS 14401

415-01-56

Information and Entertainment Unit—A (G1404464)

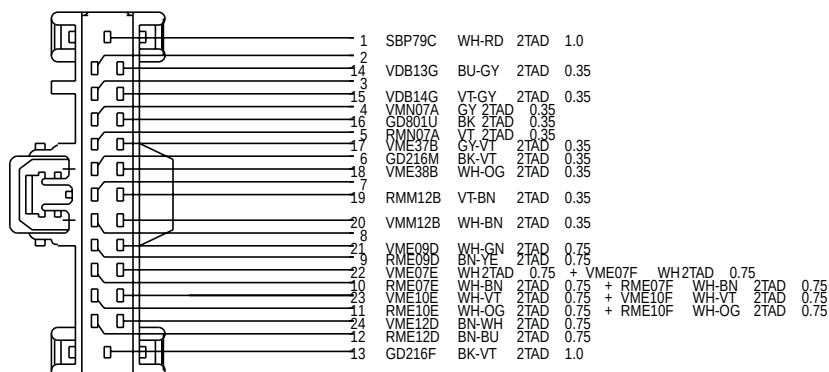


9U5T-14489-MA

C2ME04-A

TO FSAO AUDIO

HARNESS 14401

Information and Entertainment Unit—B (G1409231)



1 DME43B NONE 2TAD 0.5


7H2T-14489-AKB

C2ME04-B

TO RHD PASSIVE ANTENNA

HARNESS 14401

Information and Entertainment Unit—D (G1404466)



1 DMN03B NONE 2TAD 0.5


7H2T-14489-AKB

C2ME04-D

TO FORD ACTIVE ANTENNA

HARNESS 14401

Information and Entertainment Unit—F (G1404467)



1 DMN03F NONE 2TAD 0.5

7H2T-14489-AKB


C2ME04-F

TO FORD PASSIVE ANTENNA

HARNESS 14401

415-01-57

Information and Entertainment Unit—K (G1404468)



- 5 DDB22B NONE 2TAD 0.5
- 4
- 3
- 2
- 1 DDB22 NONE 2TAD 0.5

7U5T-19C041-AA

C2ME04-K

TO AUDIO UNIT USB (FSAO)

HARNESS 14401

Noise Suppression Capacitor (G1404474)



1 CBB25K WH-OG 3TBD 1.0

2L1T-14A464-AJA

C1ME19

TO NOISE SUPPRESSION CAPACITOR

HARNESS 12B637


Rear Door Speaker LH (G1404469)

PIN 1 => RME09B BN-YE 0.75 2TCD

PIN 1 => RME09B BN-YE 0.75 2TCD + RME09F BN-YE 0.75 2TCD

PIN 4 => VME09B WH-GN 0.75 2TCD

PIN 4 => VME09B WH-GN 0.75 2TCD + VME09F WH-GN 0.75 2TCD



1 RME09F BN-YE 2TCD 0.75 + RME09B BN-YE 2TCD 0.75
2
3
4 VME09F WH-GN 2TCD 0.75 + VME09B WH-GN 2TCD 0.75

3M5T-14489-RDA

C7ME09

TO LEFT REAR DOOR SPEAKER

HARNESS 14241


Rear Door Speaker RH (G1404470)

PIN 1 => RME12B BN-BU 0.75 2TCD

PIN 1 => RME12B BN-BU 0.75 2TCD + RME12F BN-BU 0.75 2TCD

PIN 4 => VME12B BN-WH 0.75 2TCD

PIN 4 => VME12B BN-WH 0.75 2TCD + VME12F BN-WH 0.75 2TCD



1 RME12F BN-BU 2TCD 0.75 + RME12B BN-BU 2TCD 0.75
2
3
4 VME12F BN-WH 2TCD 0.75 + VME12B BN-WH 2TCD 0.75

3M5T-14489-RDA

C8ME12

TO RIGHT REAR DOOR SPEAKER

HARNESS 14240

SECTION 417-01 Exterior Lighting

VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS

PAGE

PAGE 1 OF 2

ELECTRICAL SCHEMATICS

Autolamps — LHD 4WD/LHD RWD.....	417-01-3
Autolamps — RHD 4WD/RHD RWD.....	417-01-5
Headlamp Leveling.....	417-01-7
Exterior Lighting — LHD 4WD/LHD RWD.....	417-01-9
Exterior Lighting — RHD 4WD/RHD RWD.....	417-01-11
Fog Lamps — LHD 4WD/LHD RWD.....	417-01-13
Fog Lamps — RHD 4WD/RHD RWD.....	417-01-15
Trailer Socket — LHD 4WD/LHD RWD.....	417-01-17
Trailer Socket — RHD 4WD/RHD RWD.....	417-01-21
Turn Signal and Hazard Lamps — LHD 4WD/LHD RWD.....	417-01-25
Turn Signal and Hazard Lamps — RHD 4WD/RHD RWD.....	417-01-27

ELECTRICAL CONNECTORS


Front Fog Lamp LH.....	417-01-29
Front Fog Lamp RH.....	417-01-29
Front Side Marker Lamp LH.....	417-01-29
Front Side Marker Lamp RH.....	417-01-29
Headlamp Assembly LH.....	417-01-29
Headlamp Assembly RH.....	417-01-30
Headlamp Control Module.....	417-01-30
Headlamp Control Module — A.....	417-01-30
Headlamp Leveling Switch.....	417-01-30
High Mounted Stoplamp.....	417-01-30
High Mounted Stoplamp.....	417-01-31
License Plate Lamp.....	417-01-31
License Plate Lamp — A.....	417-01-31
Parking Lamp LH.....	417-01-31
Parking Lamp RH.....	417-01-31
Rear Lamp Assembly LH.....	417-01-32
Rear Lamp Assembly RH.....	417-01-32
Reversing Lamp Switch.....	417-01-32
Side Turn Signal Lamp LH.....	417-01-32
Side Turn Signal Lamp RH.....	417-01-33
Stoplamp Switch.....	417-01-33
Trailer Socket.....	417-01-33
Trailer Socket — A.....	417-01-33
Trailer Socket — B.....	417-01-34
Trailer Socket — C.....	417-01-34
Trailer Socket — D.....	417-01-34
Trailer Socket — E.....	417-01-34
Trailer Socket — F.....	417-01-35

PAGE 2 OF 2


Trailer Socket — G.....	417-01-35
Trailer Socket — H.....	417-01-35
Trailer Socket — J.....	417-01-35
Trailer Module.....	417-01-36
Trailer Module — A.....	417-01-36
Trailer Module — B.....	417-01-36

www.obdviethnam.vn


417-01-3 Autolamps—LHD 4WD/LHD RWD

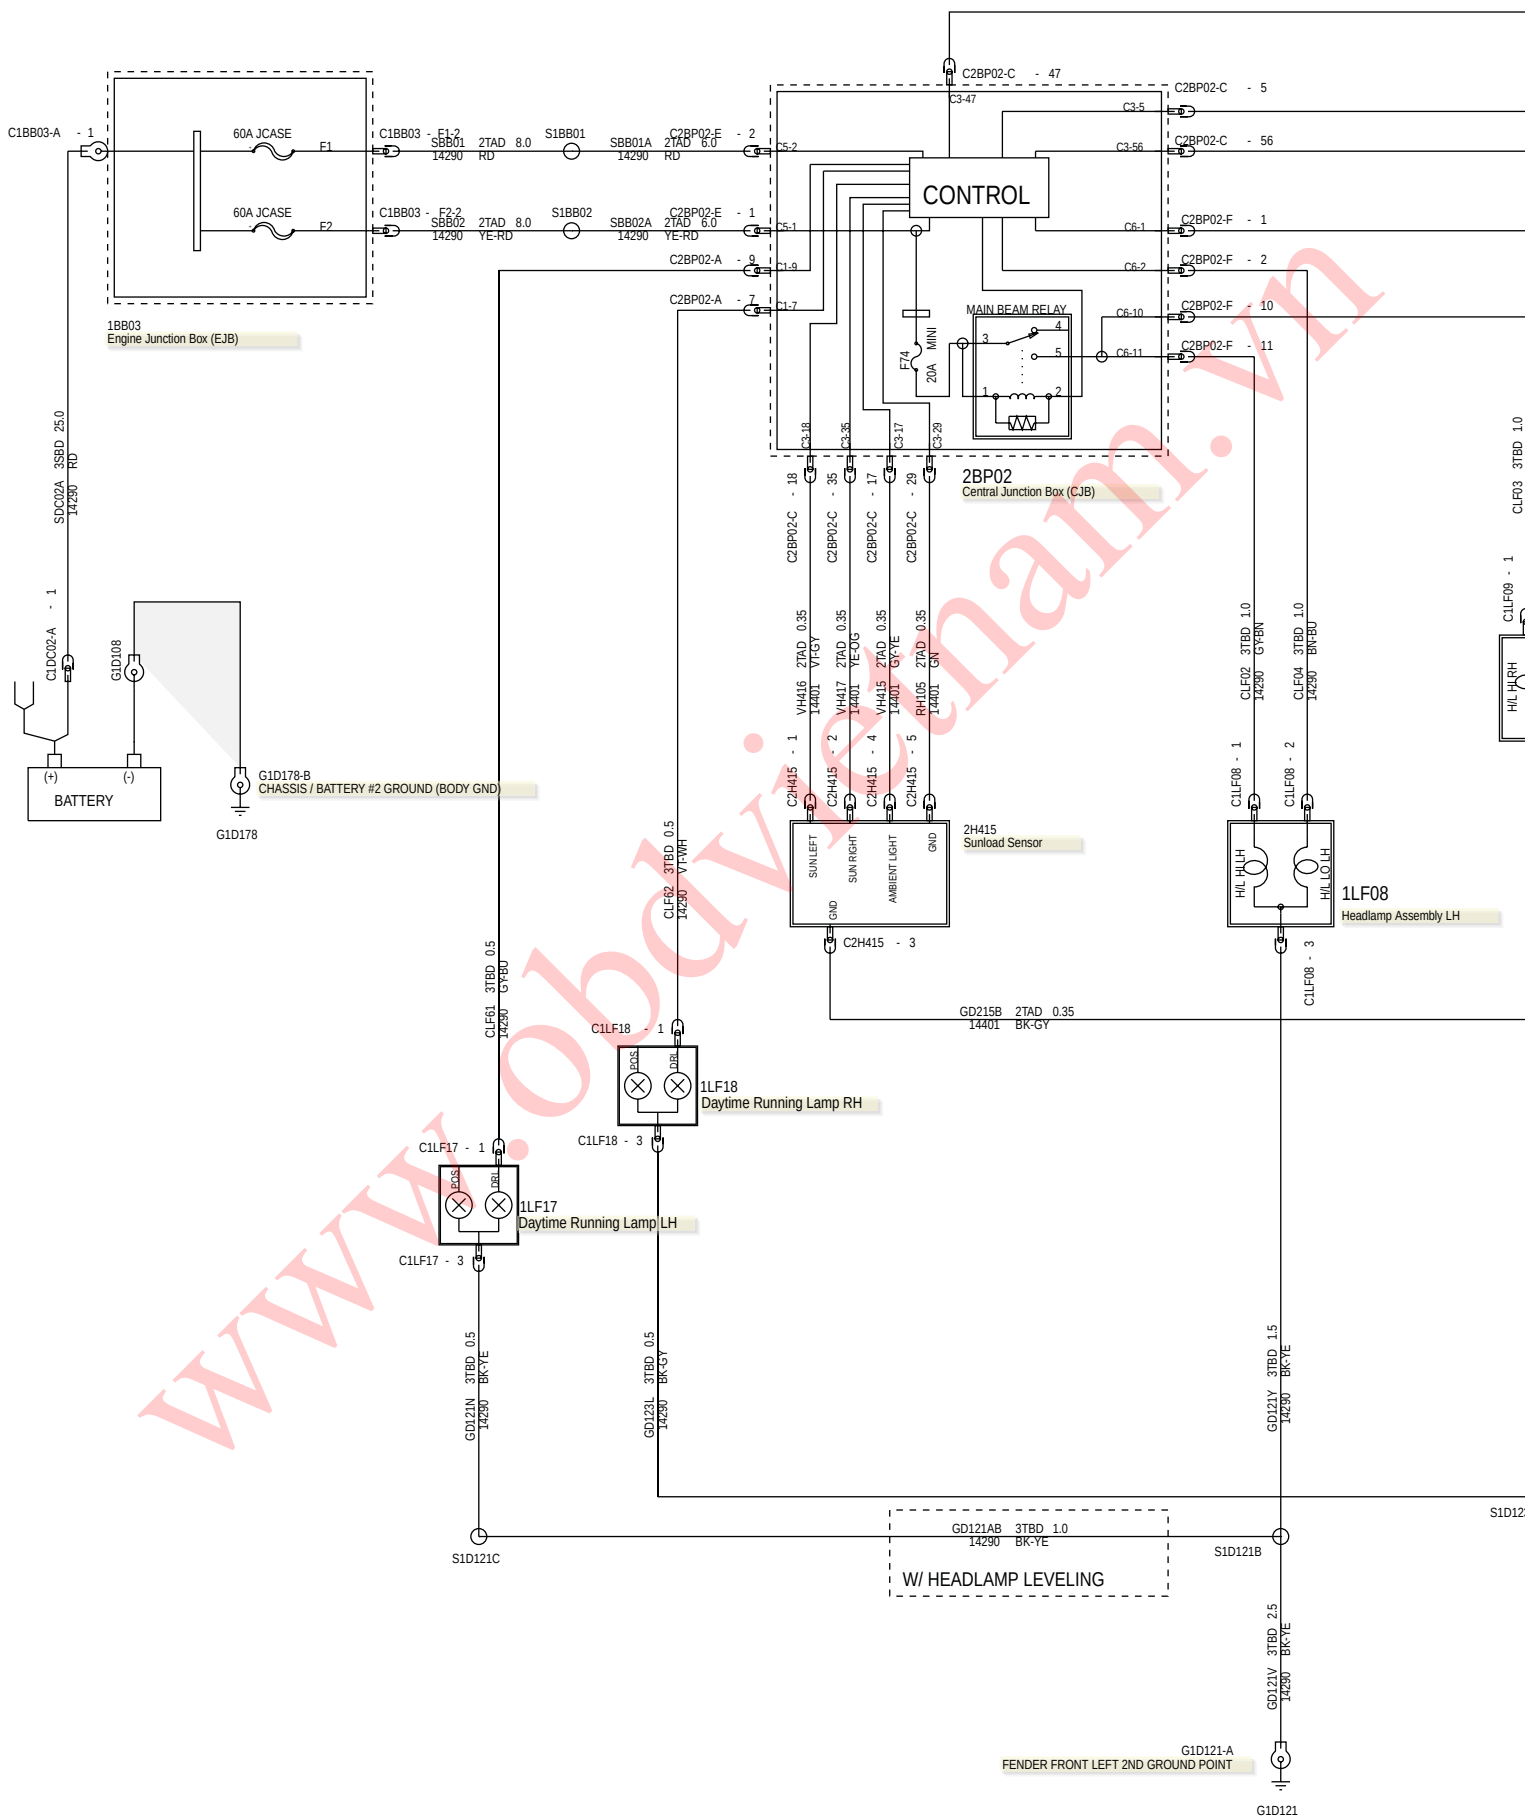


417-01-4 Autolamps—LHD 4WD/LHD RWD

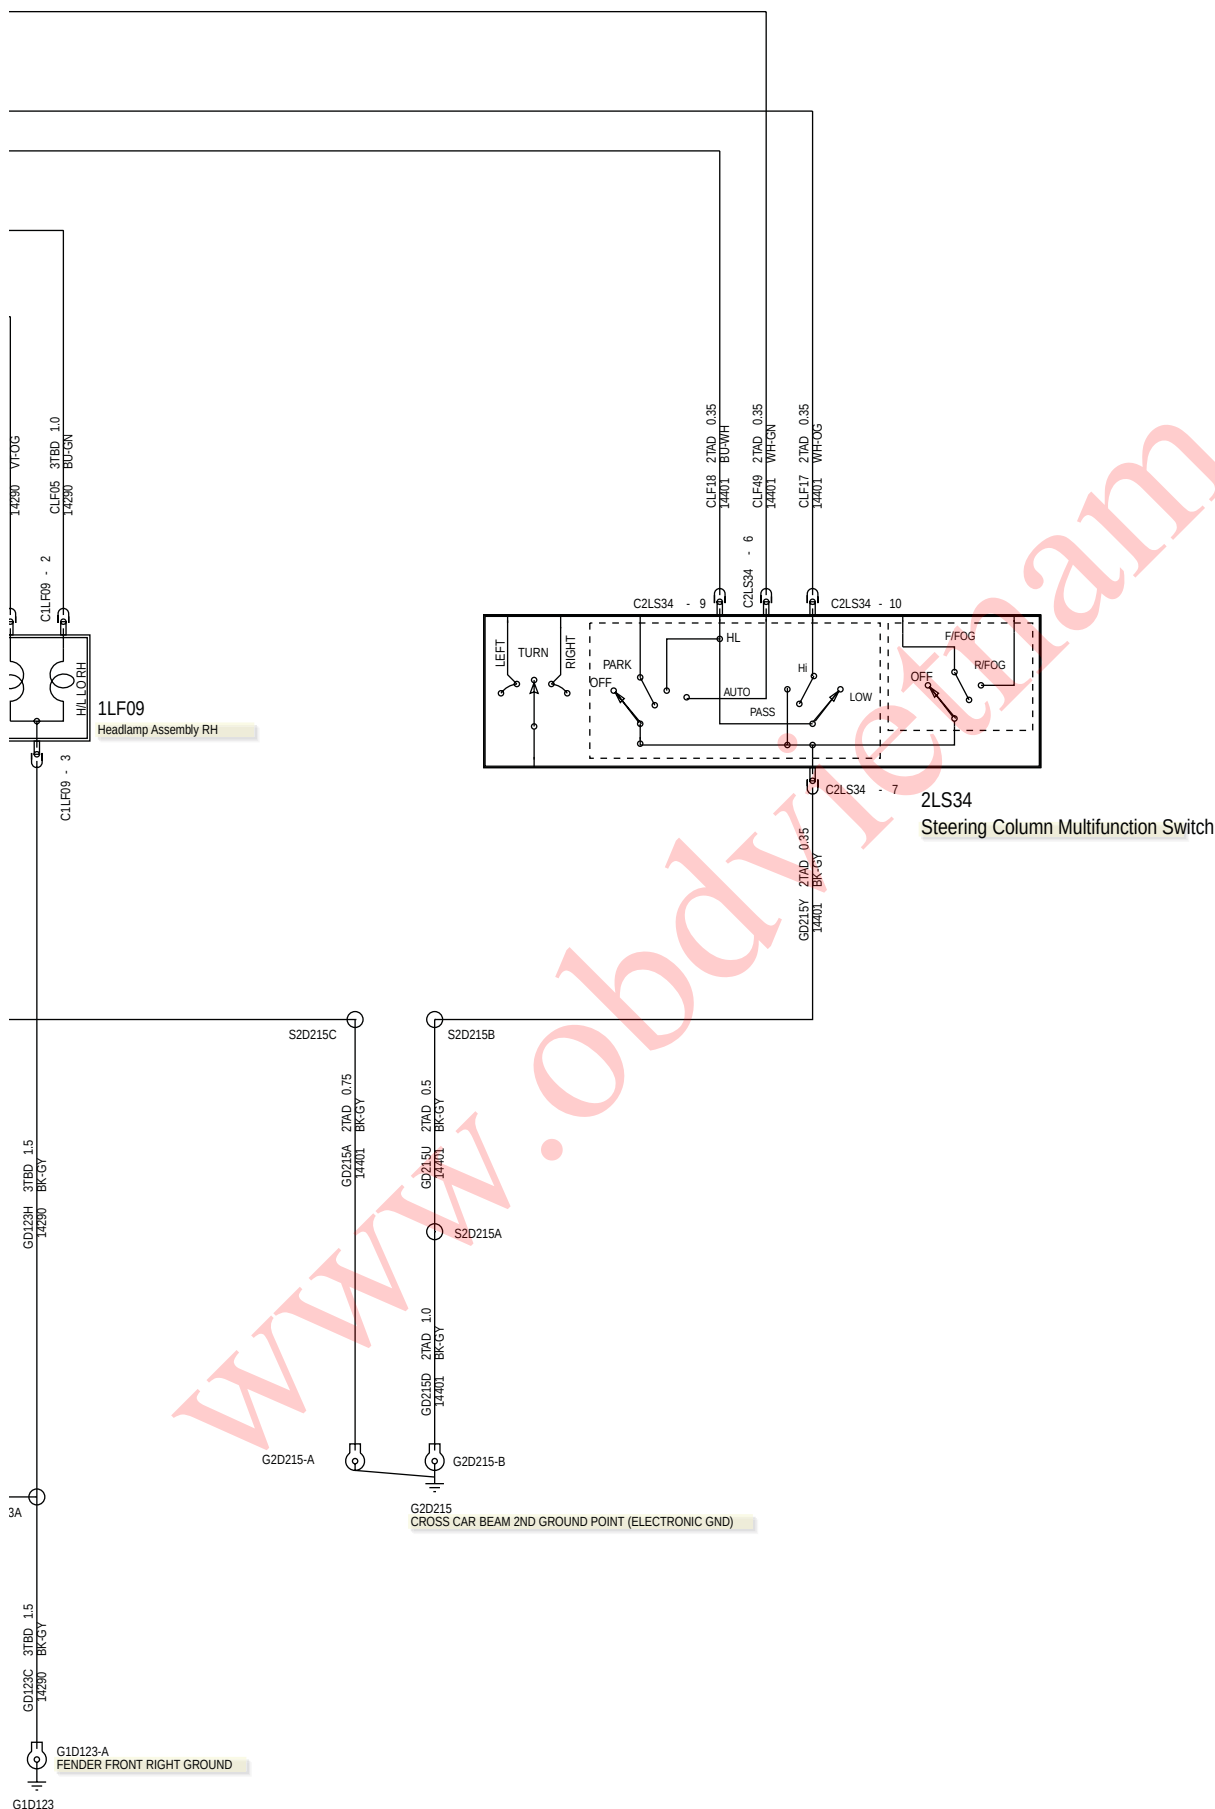


417-01-5 Autolamps—RHD 4WD/RHD RWD

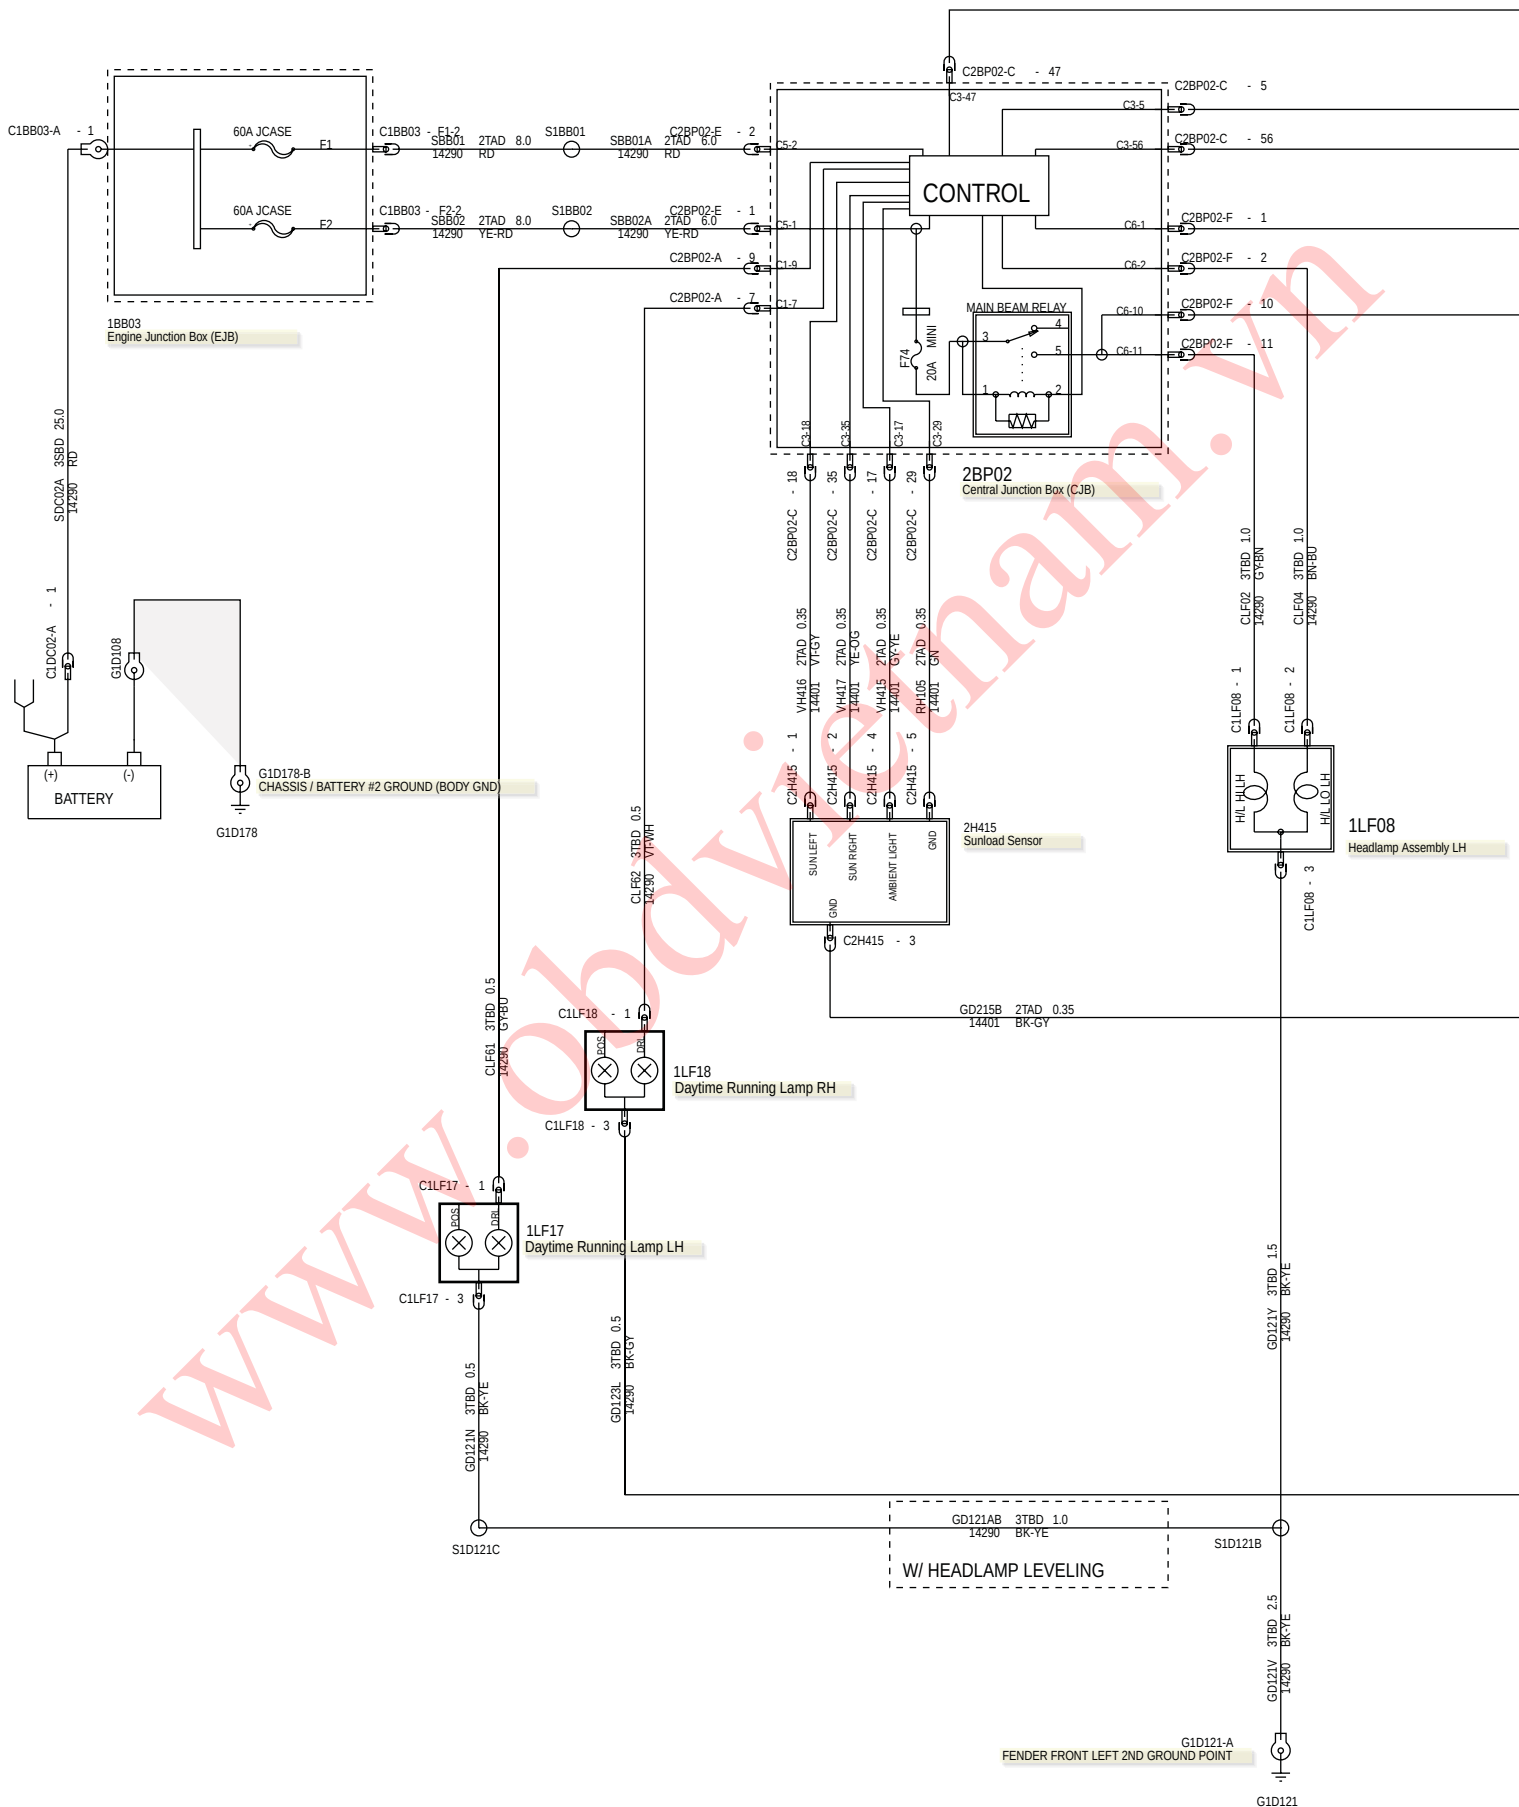


417-01-6 Autolamps—RHD 4WD/RHD RWD

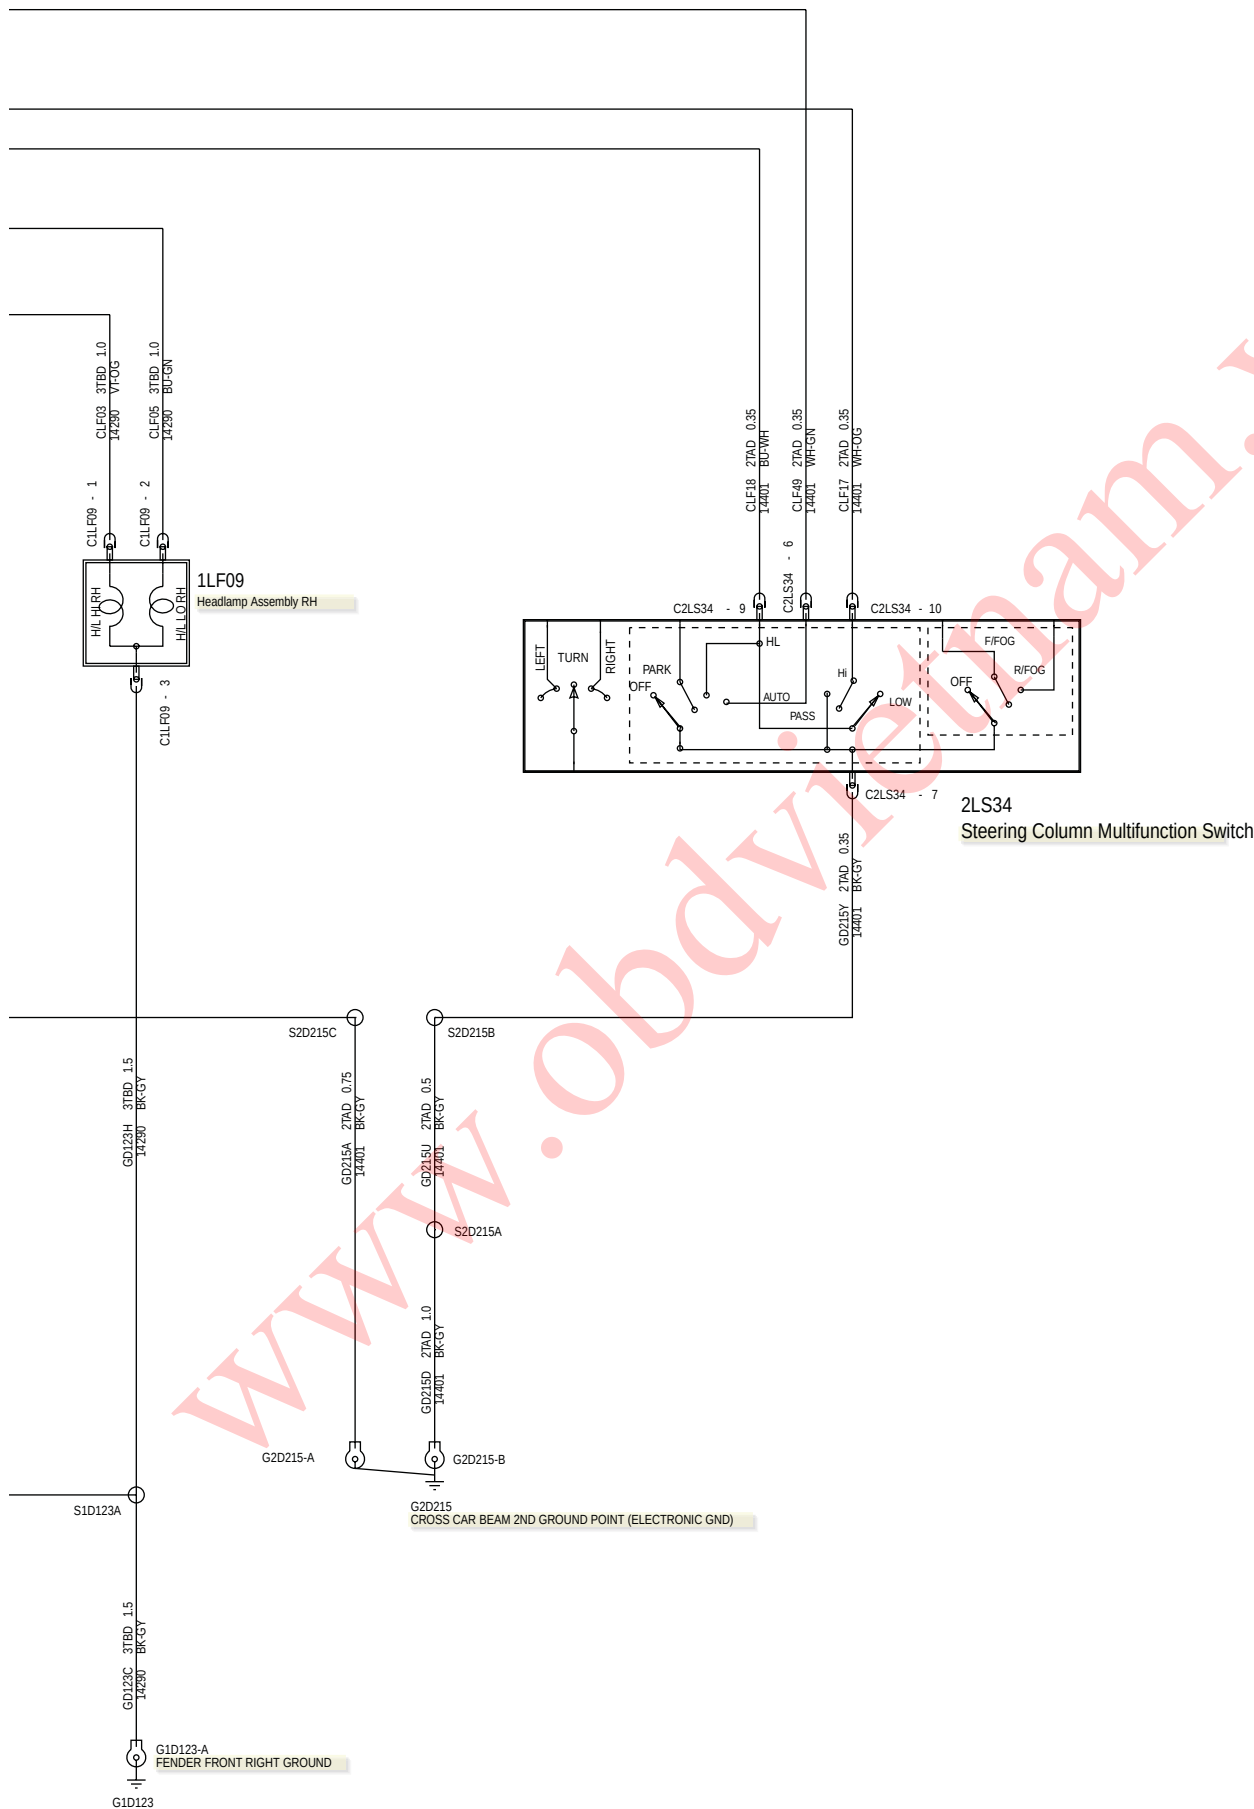


417-01-7 Headlamp Leveling

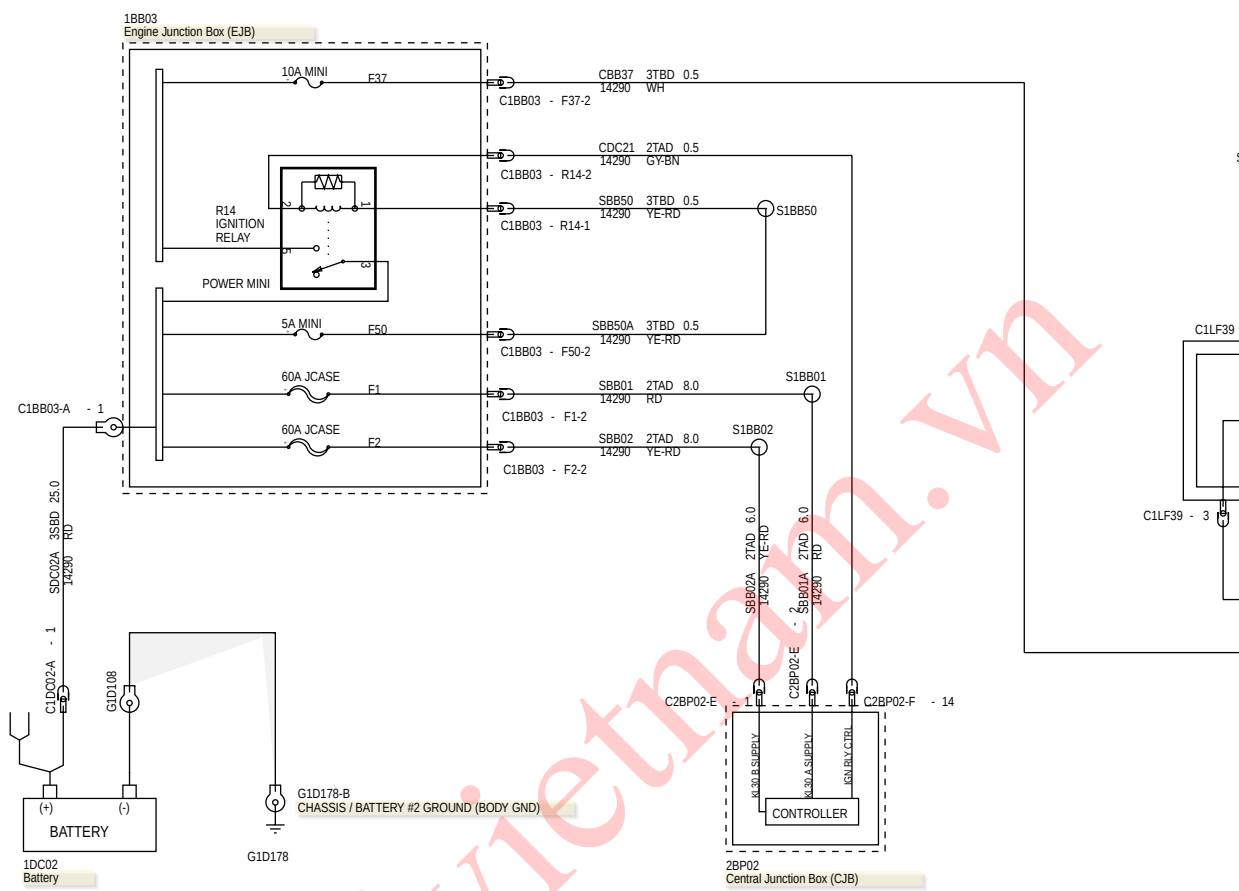


417-01-8 Headlamp Leveling

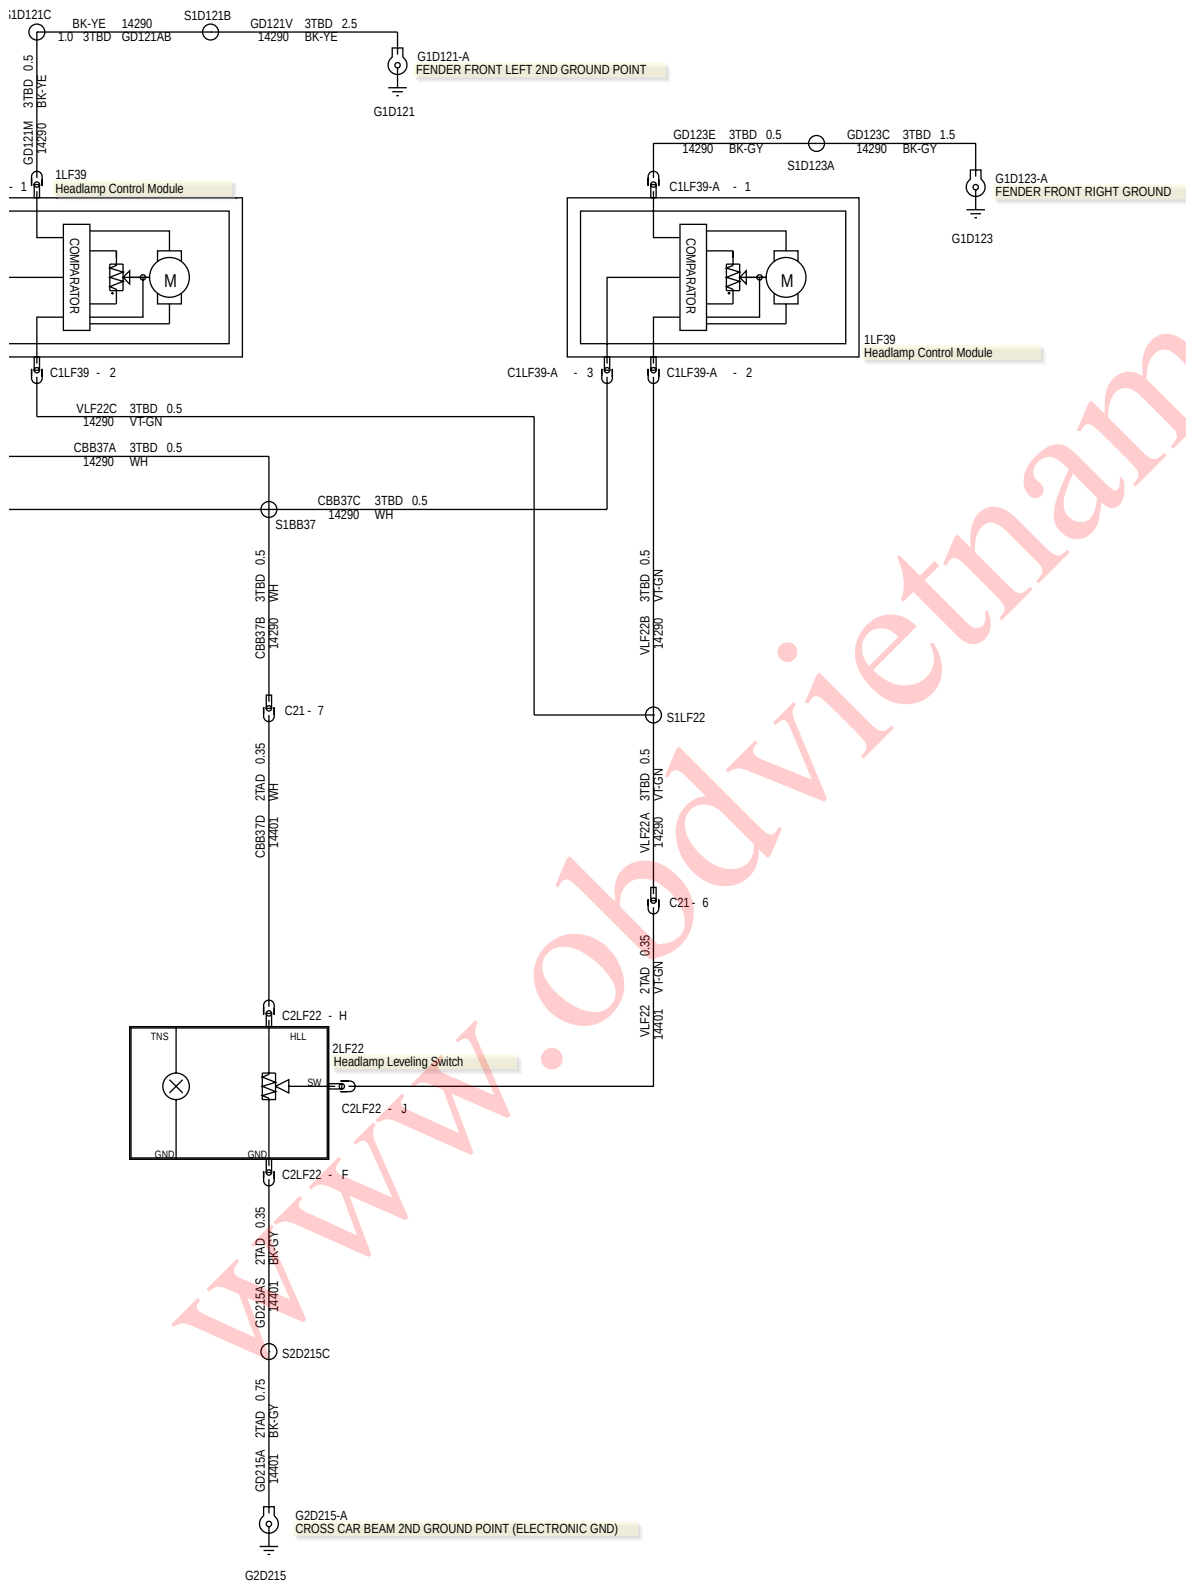

1417-01-9 Exterior Lighting—LHD 4WD/LHD RWD

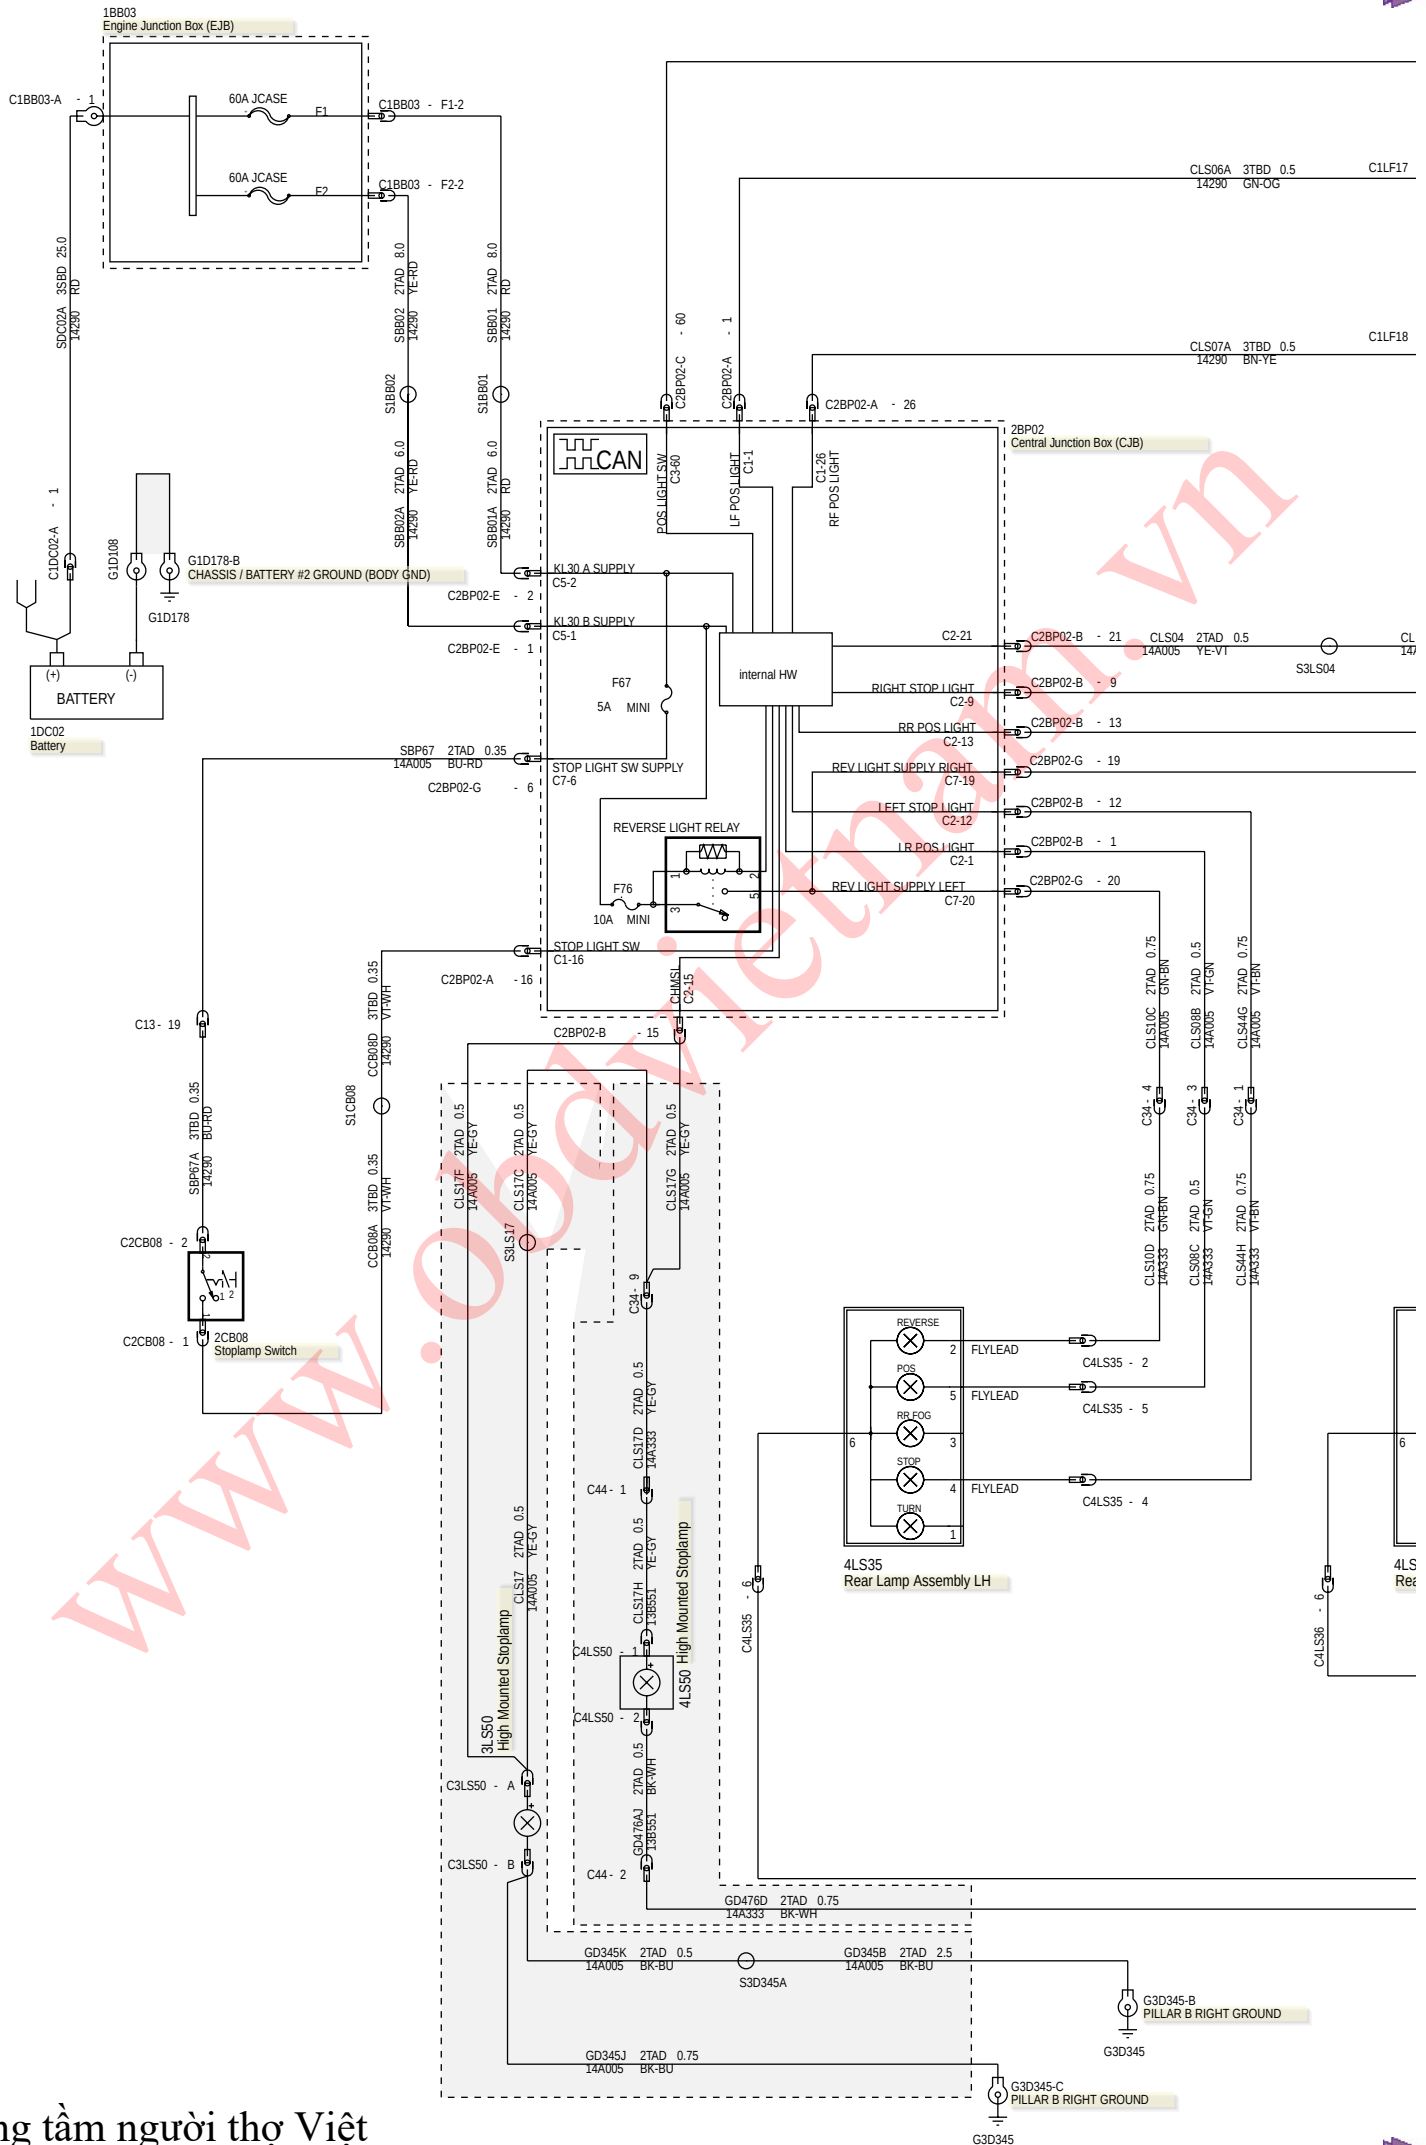




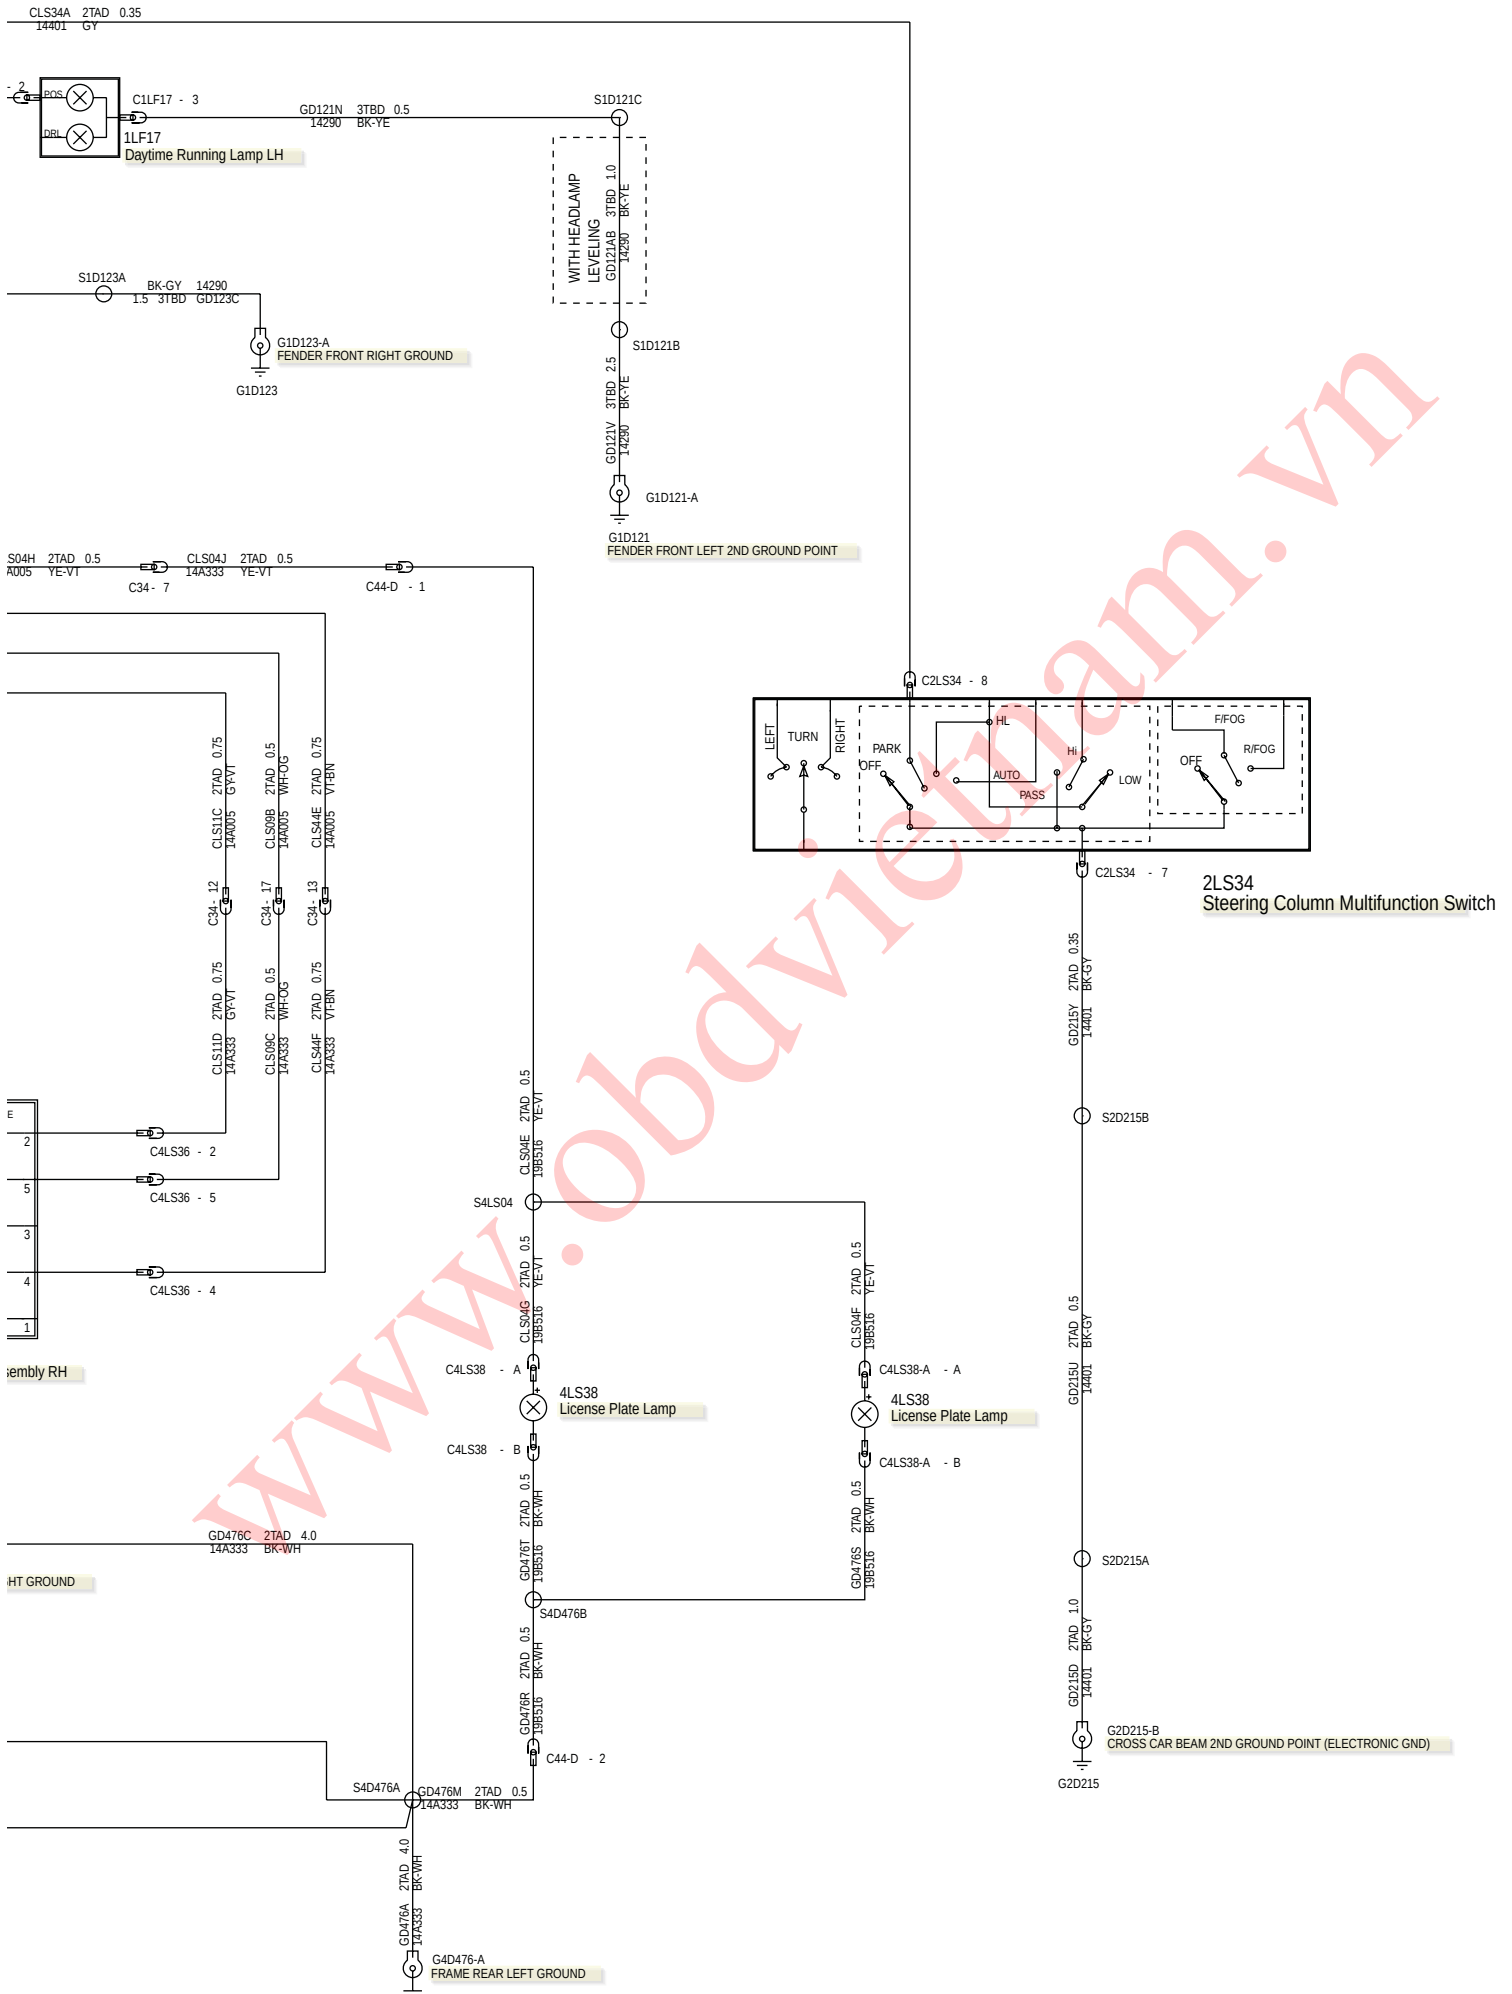





417-01-14 Fog Lamps—LHD 4WD/LHD RWD

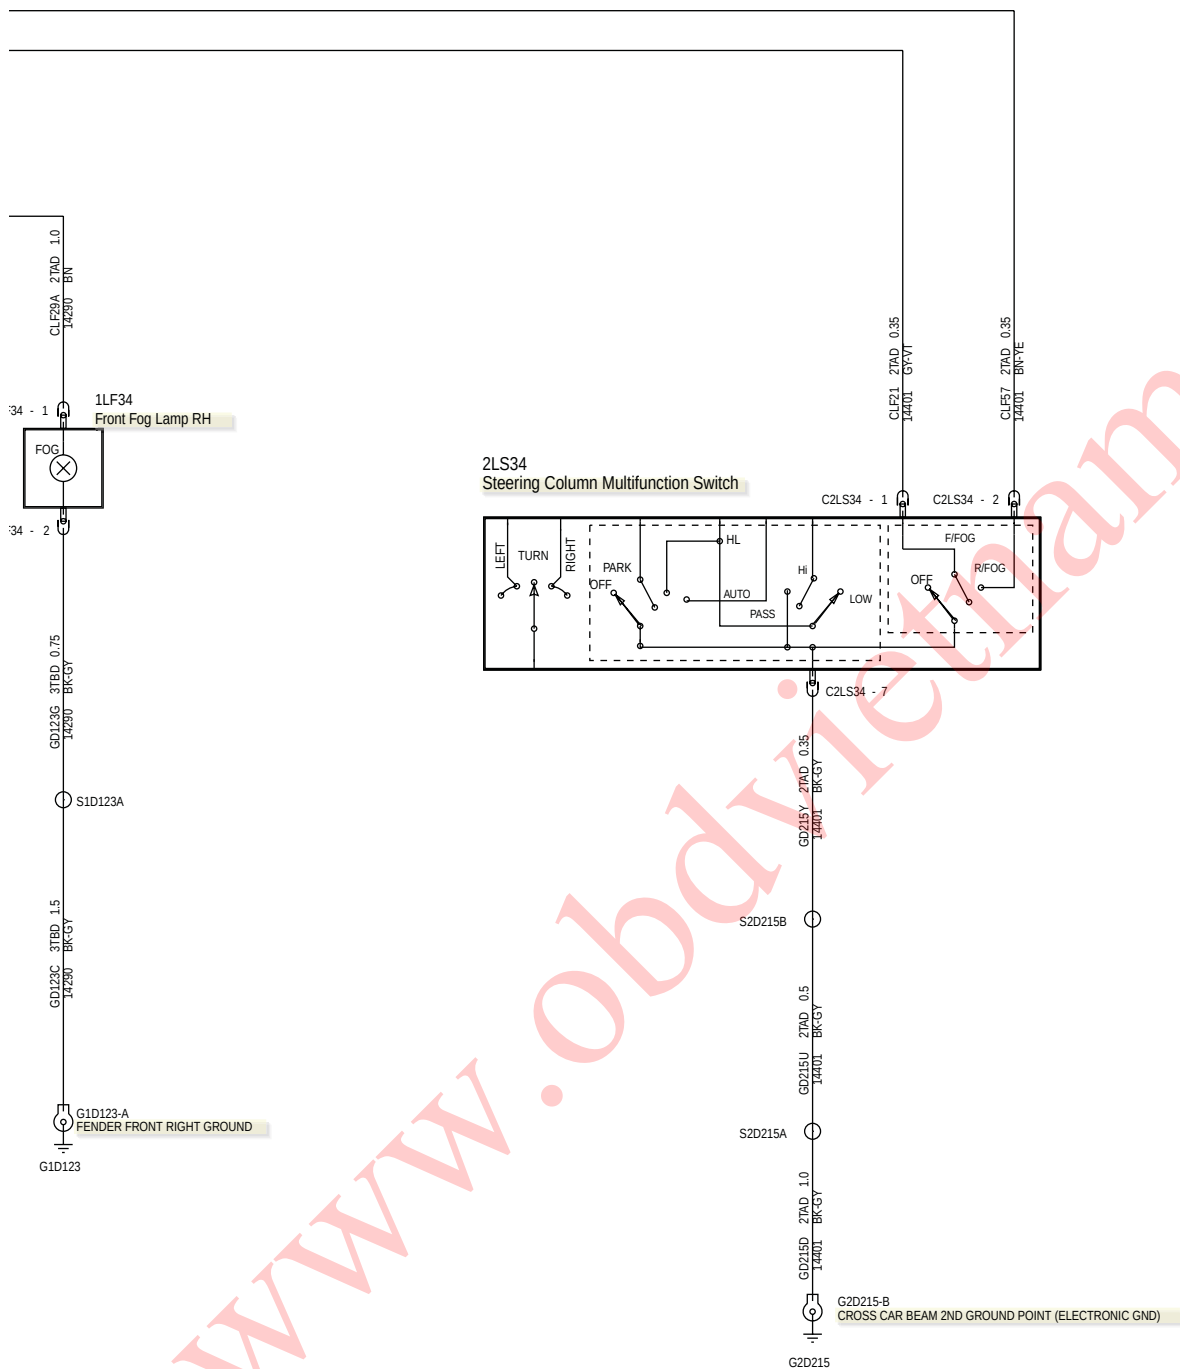

417-01-15 Fog Lamps—RHD 4WD/RHD RWD

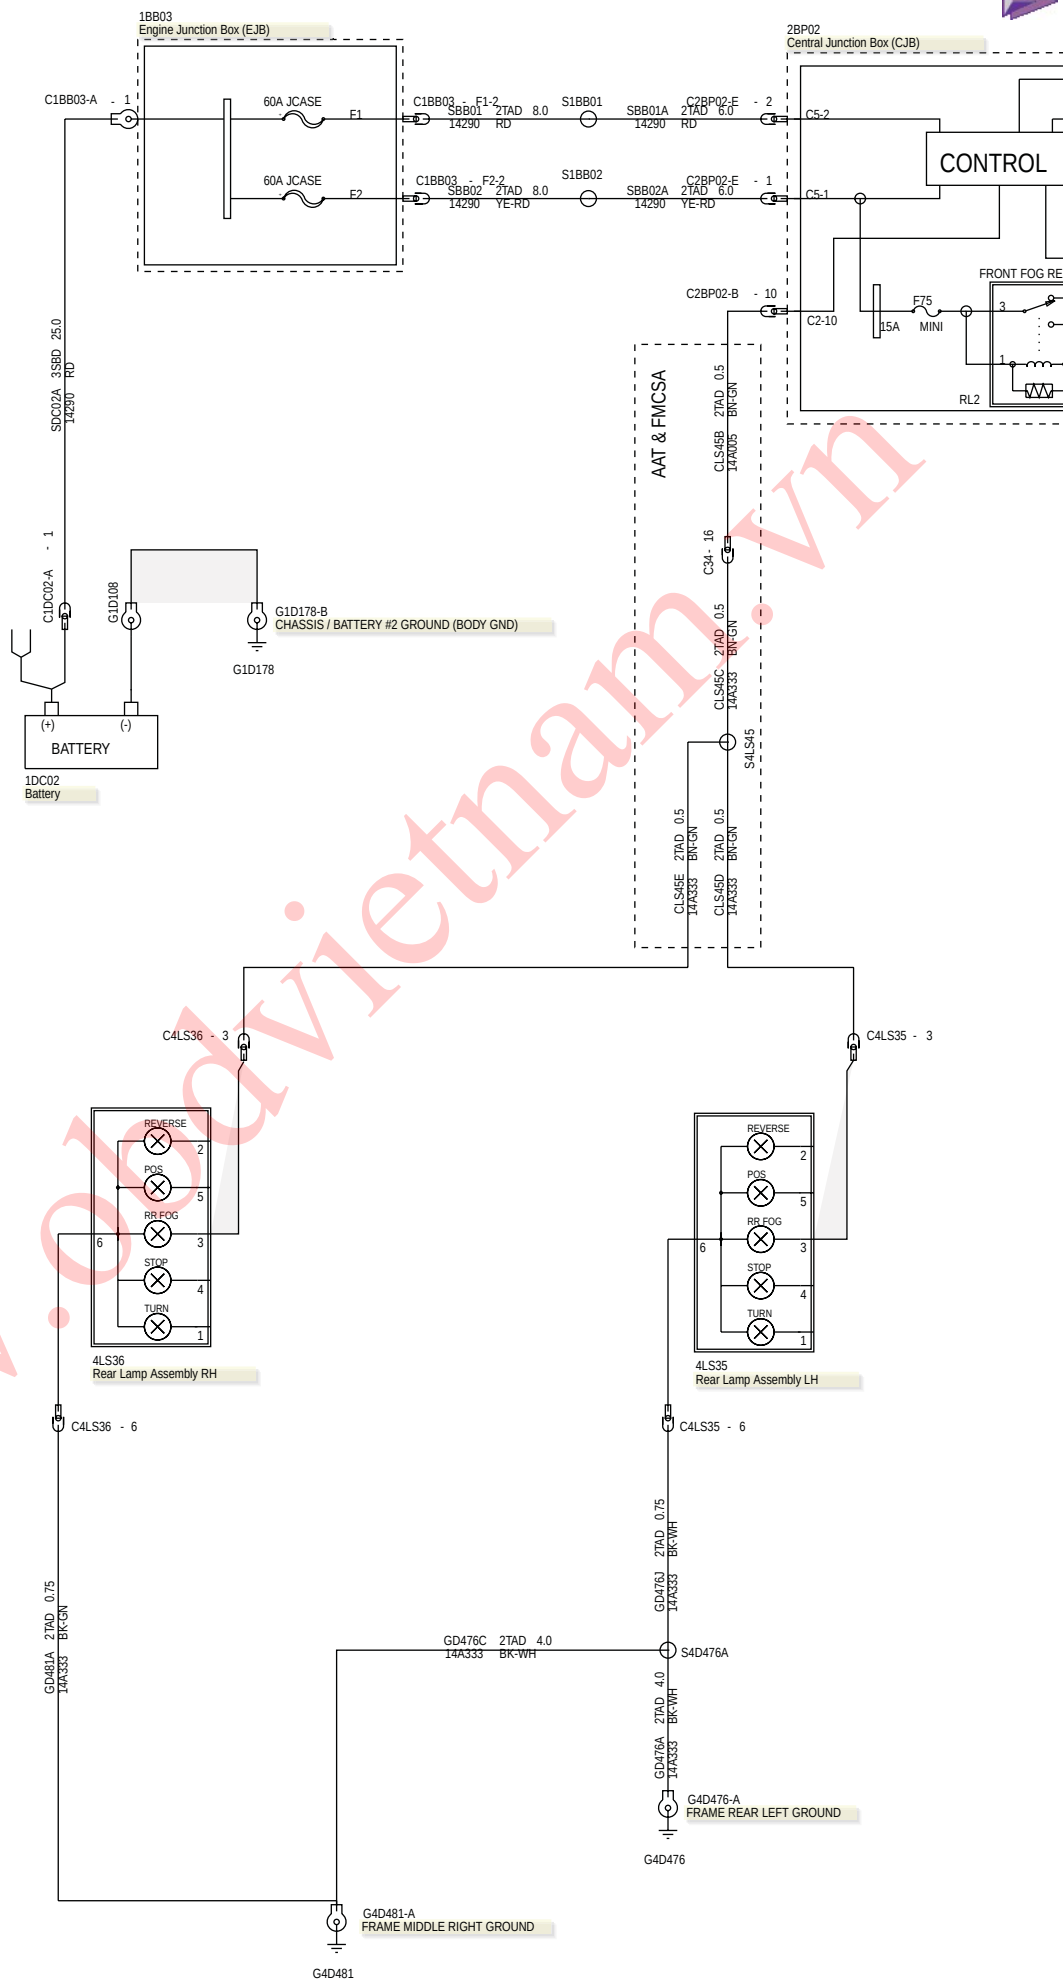


417-01-16 Fog Lamps—RHD 4WD/RHD RWD

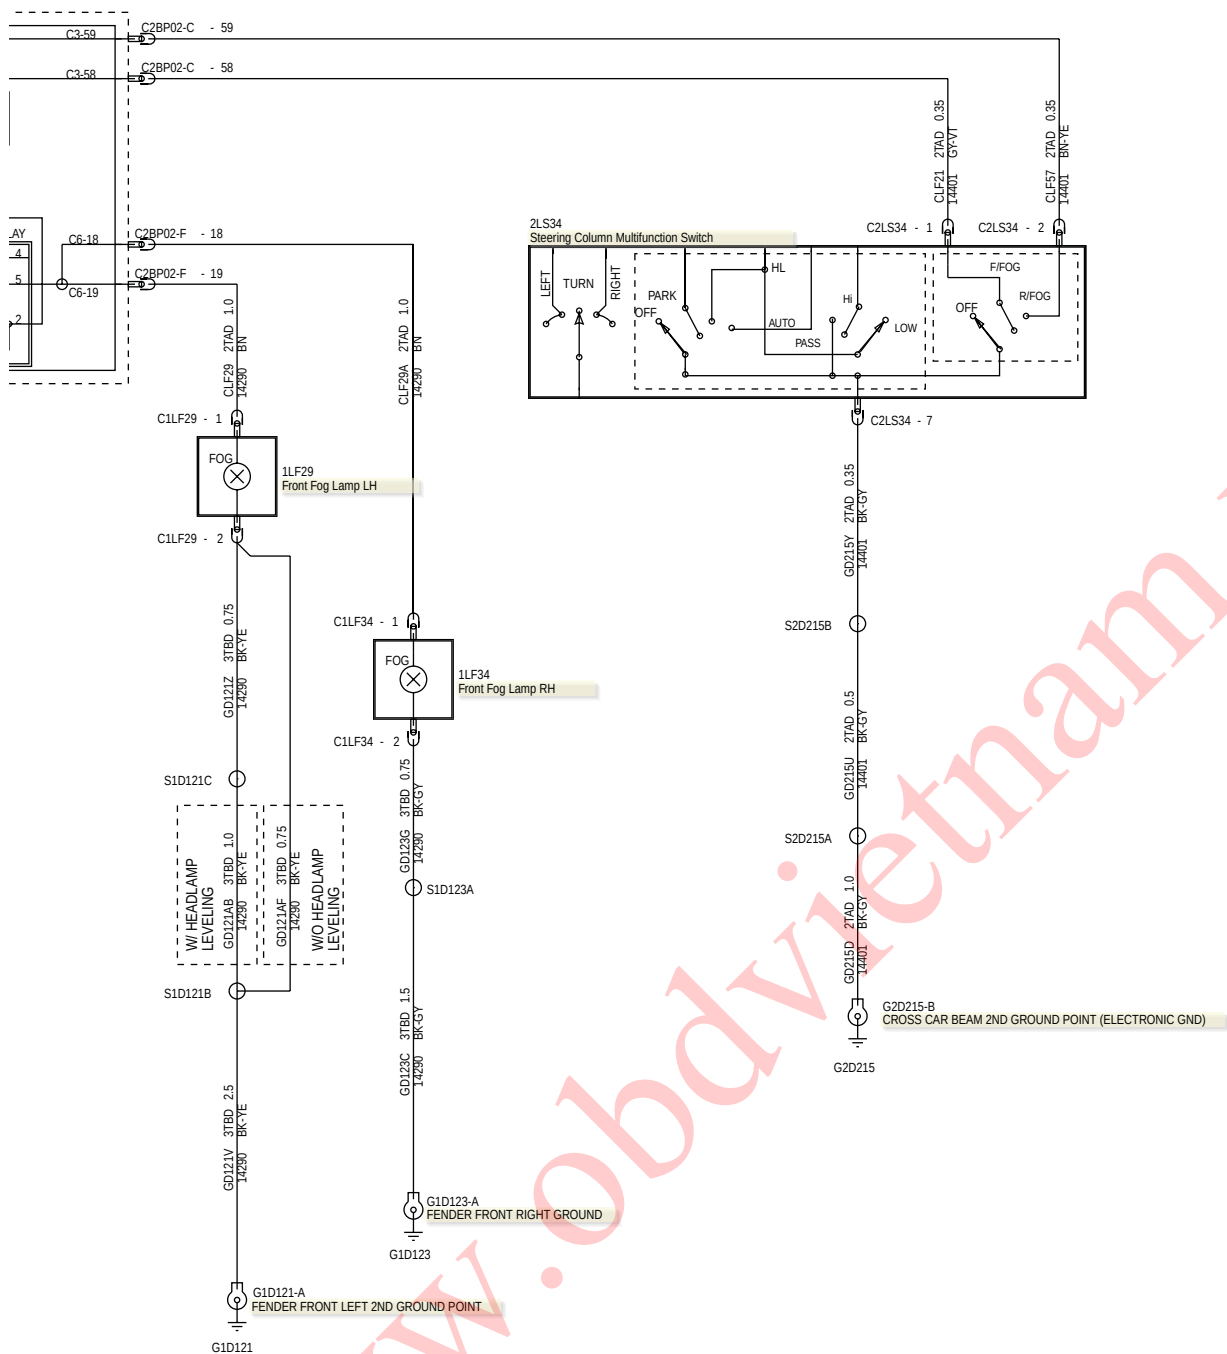

AUSTRALIA & NEW ZEALAND ONLY


KIT TO INCLUDE 40A JCASE FUSE
F47 20A TO BE REPLACED WITH 40A FUSE

AFTERMARKET LEVEL A
(VEHICLE/HARNESS HAVE TRAILER TOW FEATURE)

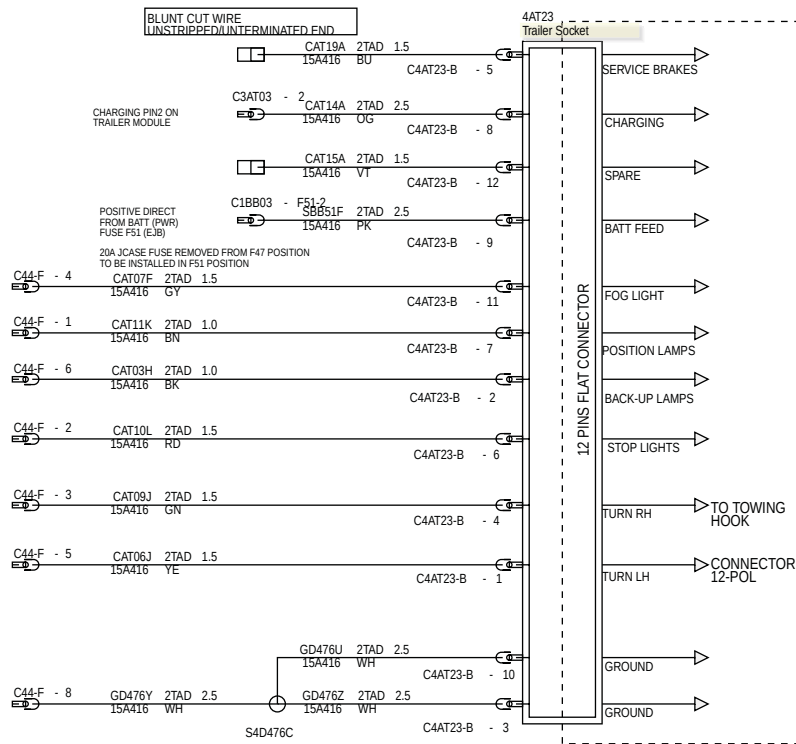

AUSTRALIA & NEW ZEALAND ONLY


AFTERMARKET LEVEL B
(VEHICLE DON'T HAVE PRE IN TRAILER TOW FEATURE)

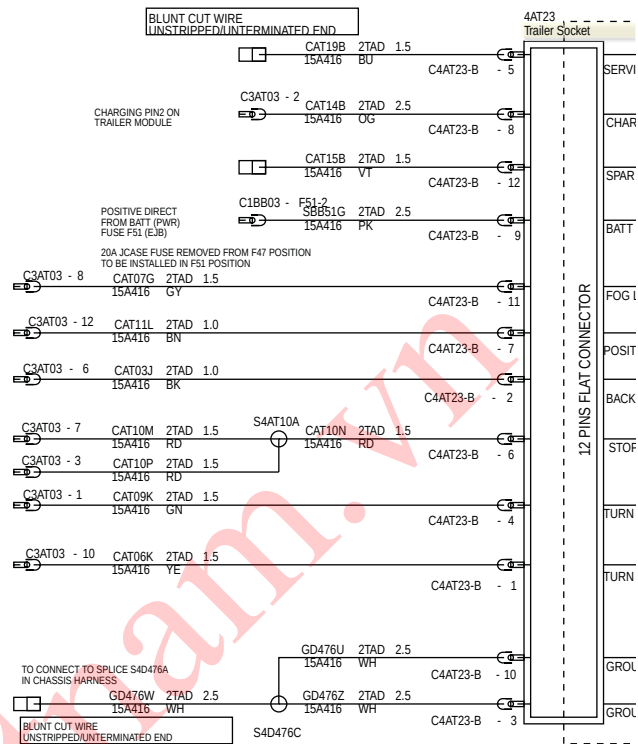


EU (EXCEPT UK ONLY)

KIT TO INCLUDE 40A JCASE FUSE
F47 20A TO BE REPLACED WITH 40A FUSE


AFTERMARKET LEVEL D
(VEHICLE/HARNESS HAVE TRAILER TOW FEATURE)

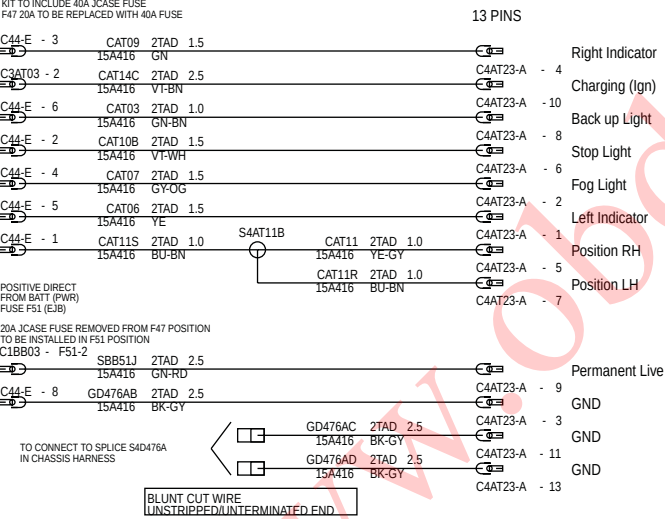


EU, EXCEPT UK ONLY (WITH RESISTOR)

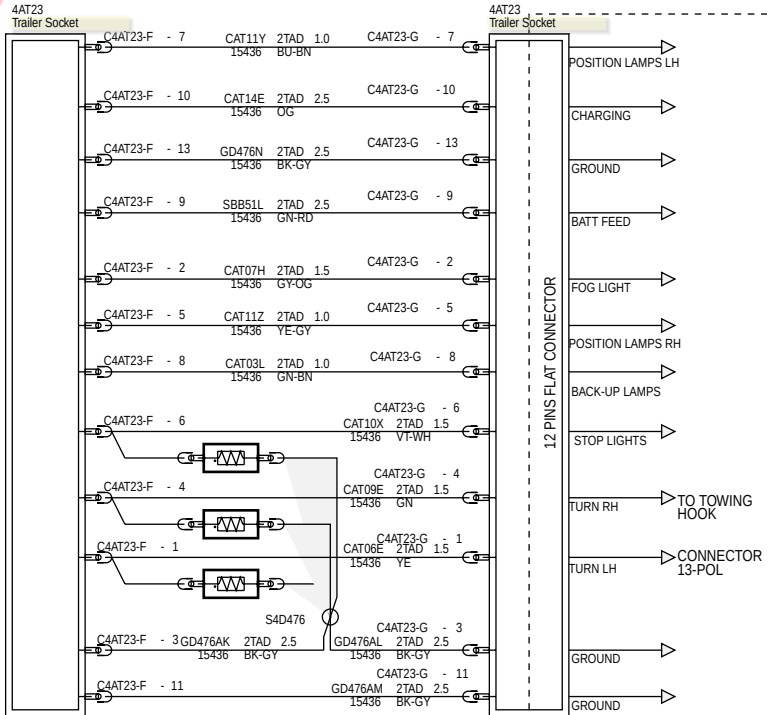



AFTERMARKET LEVEL E
(VEHICLE DON'T HAVE PRE INSTALLED TRAILER TOW FEATURE)

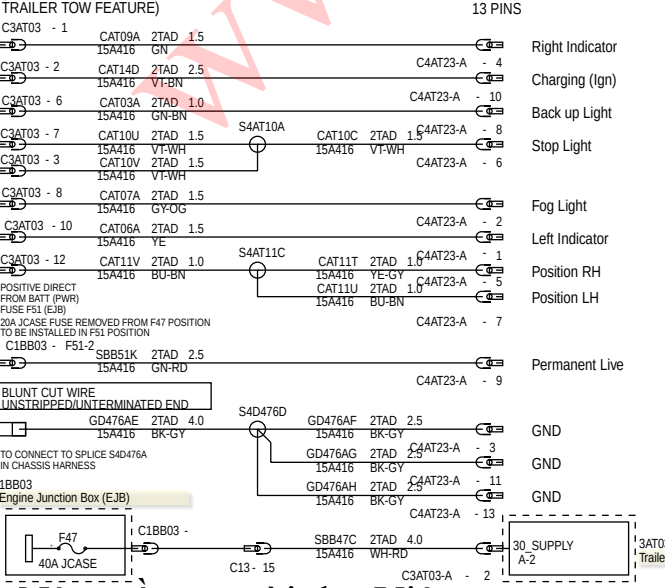



Nâng tầm người thợ Việt

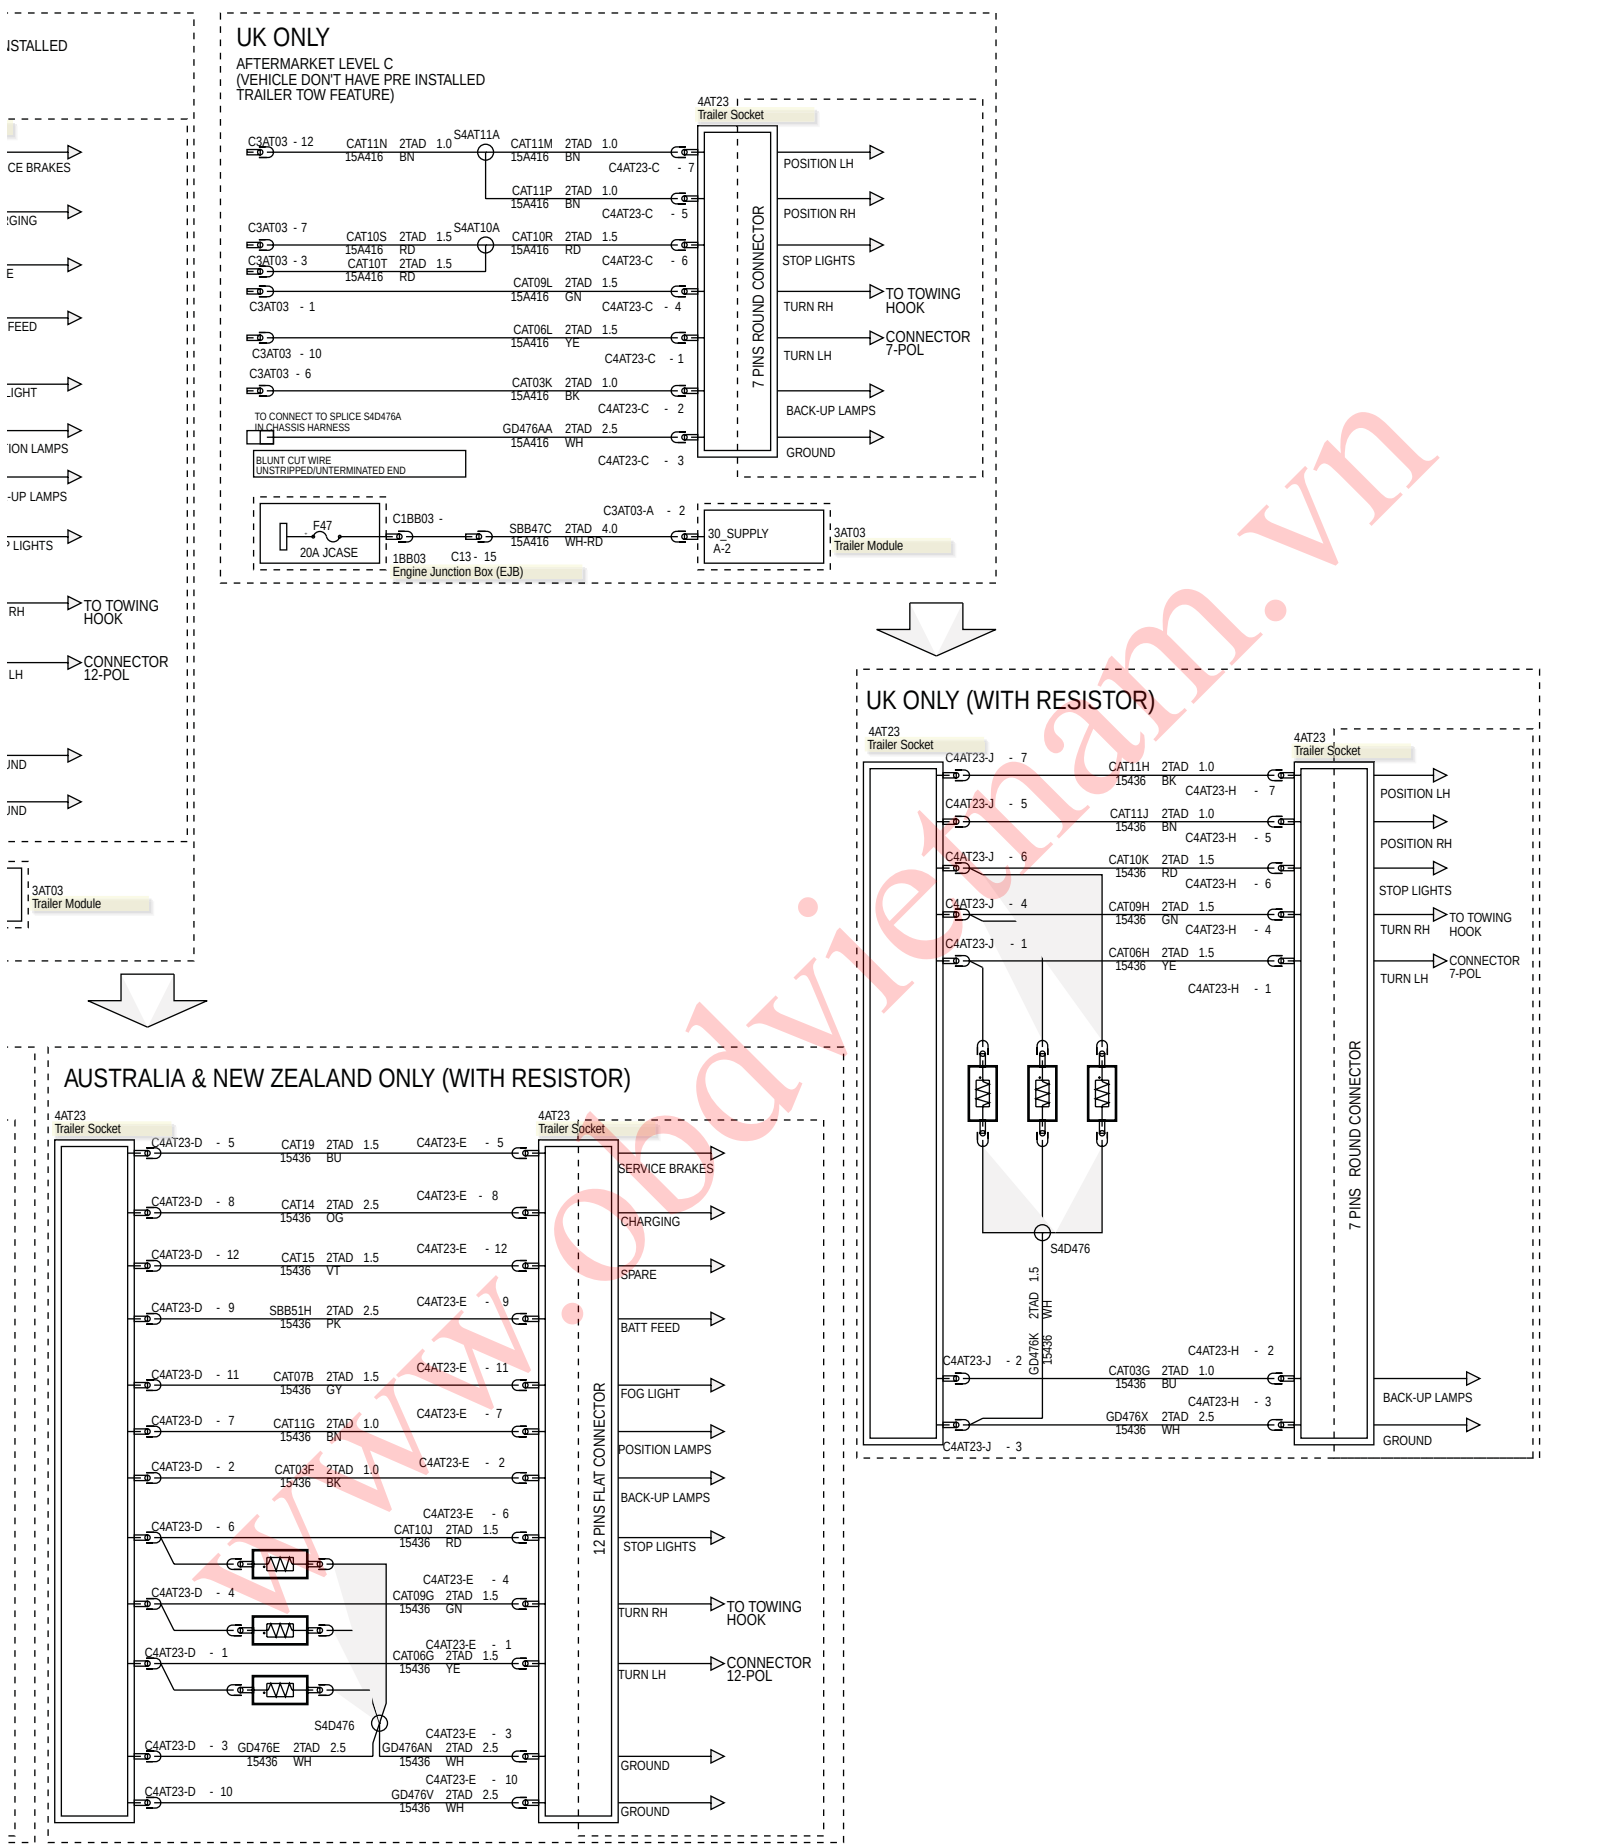


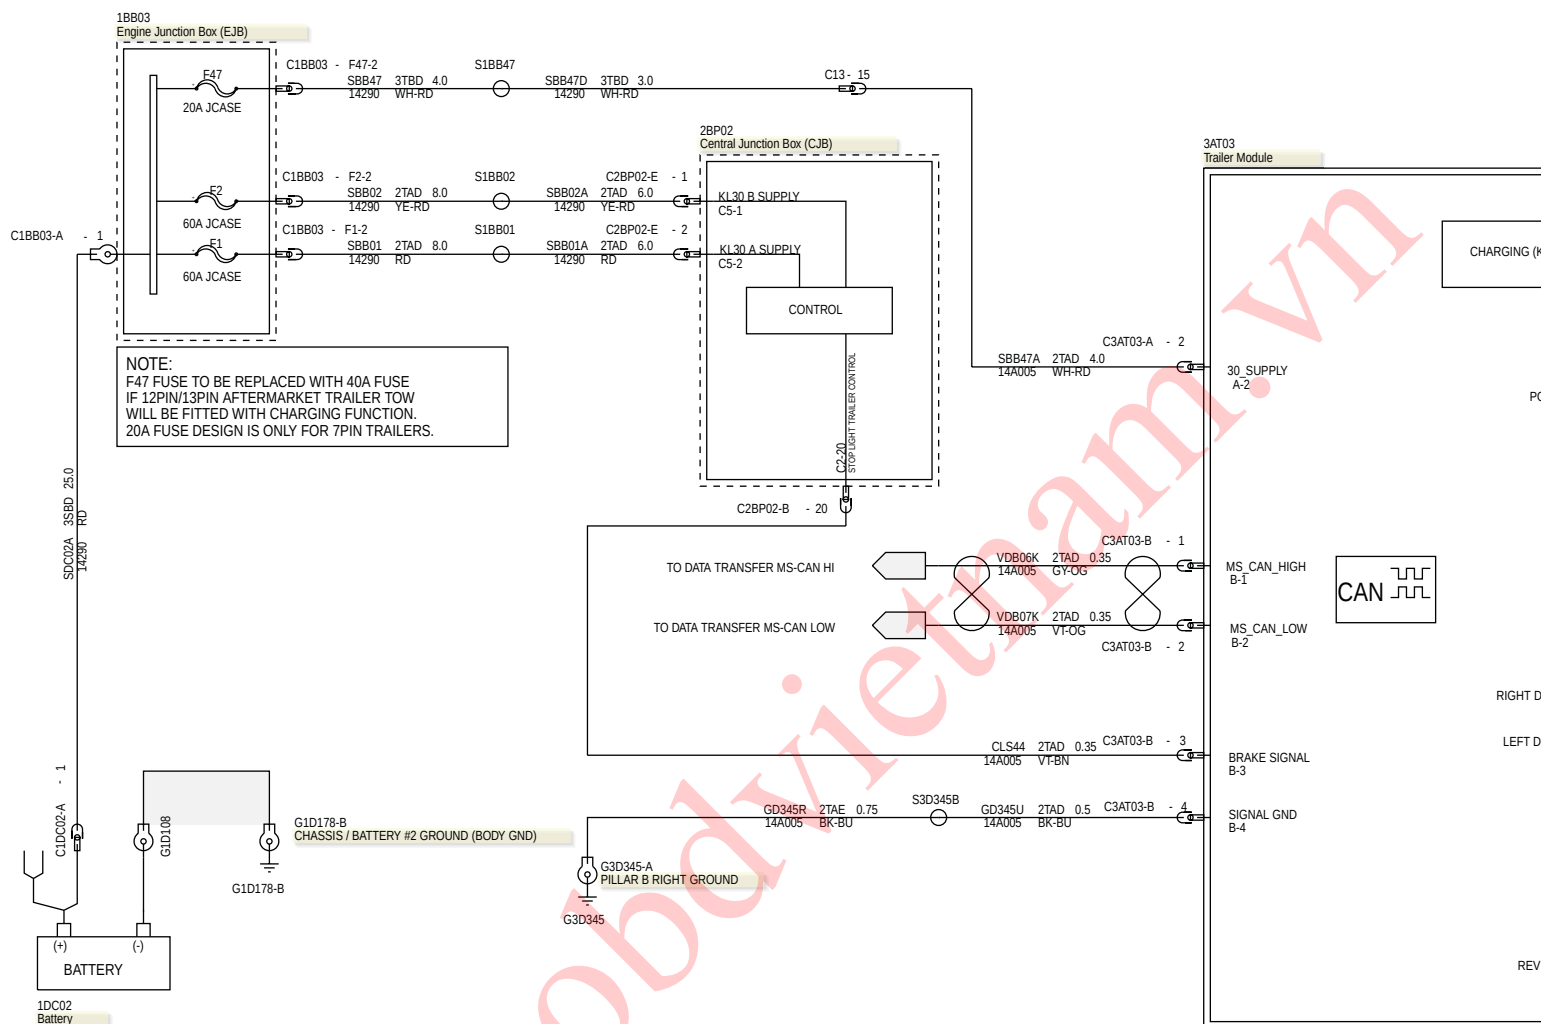

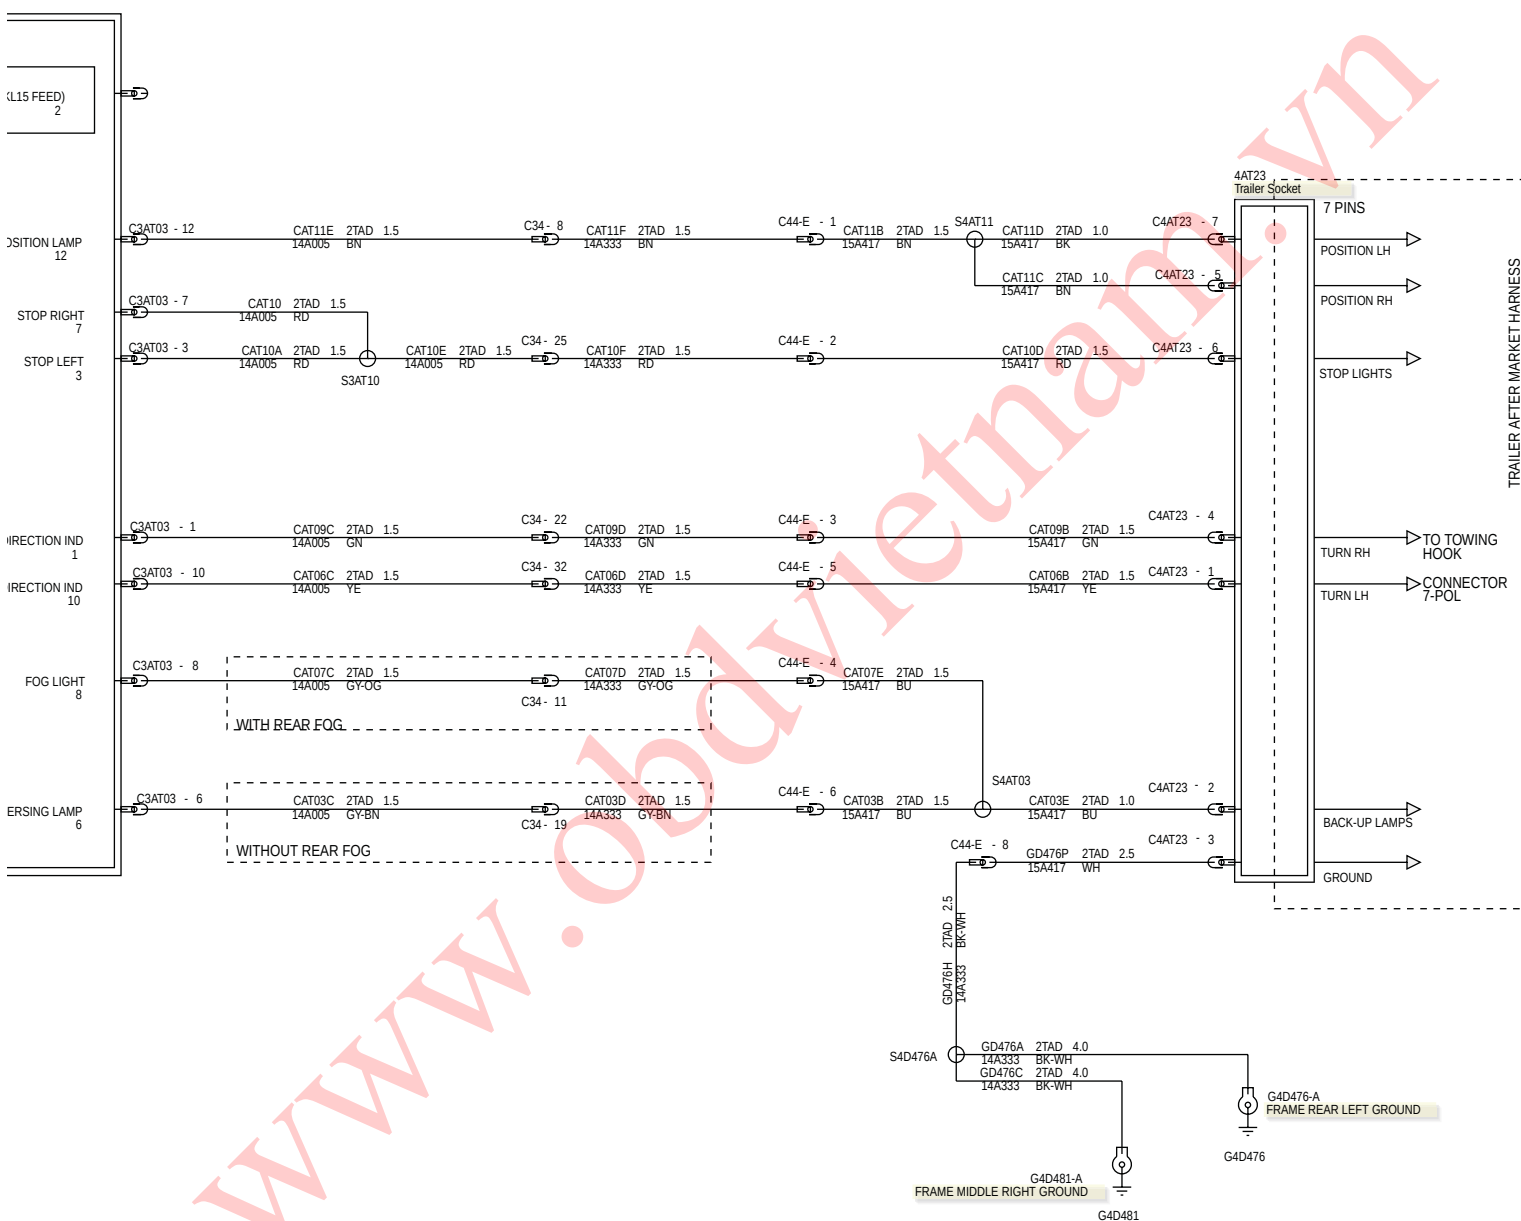


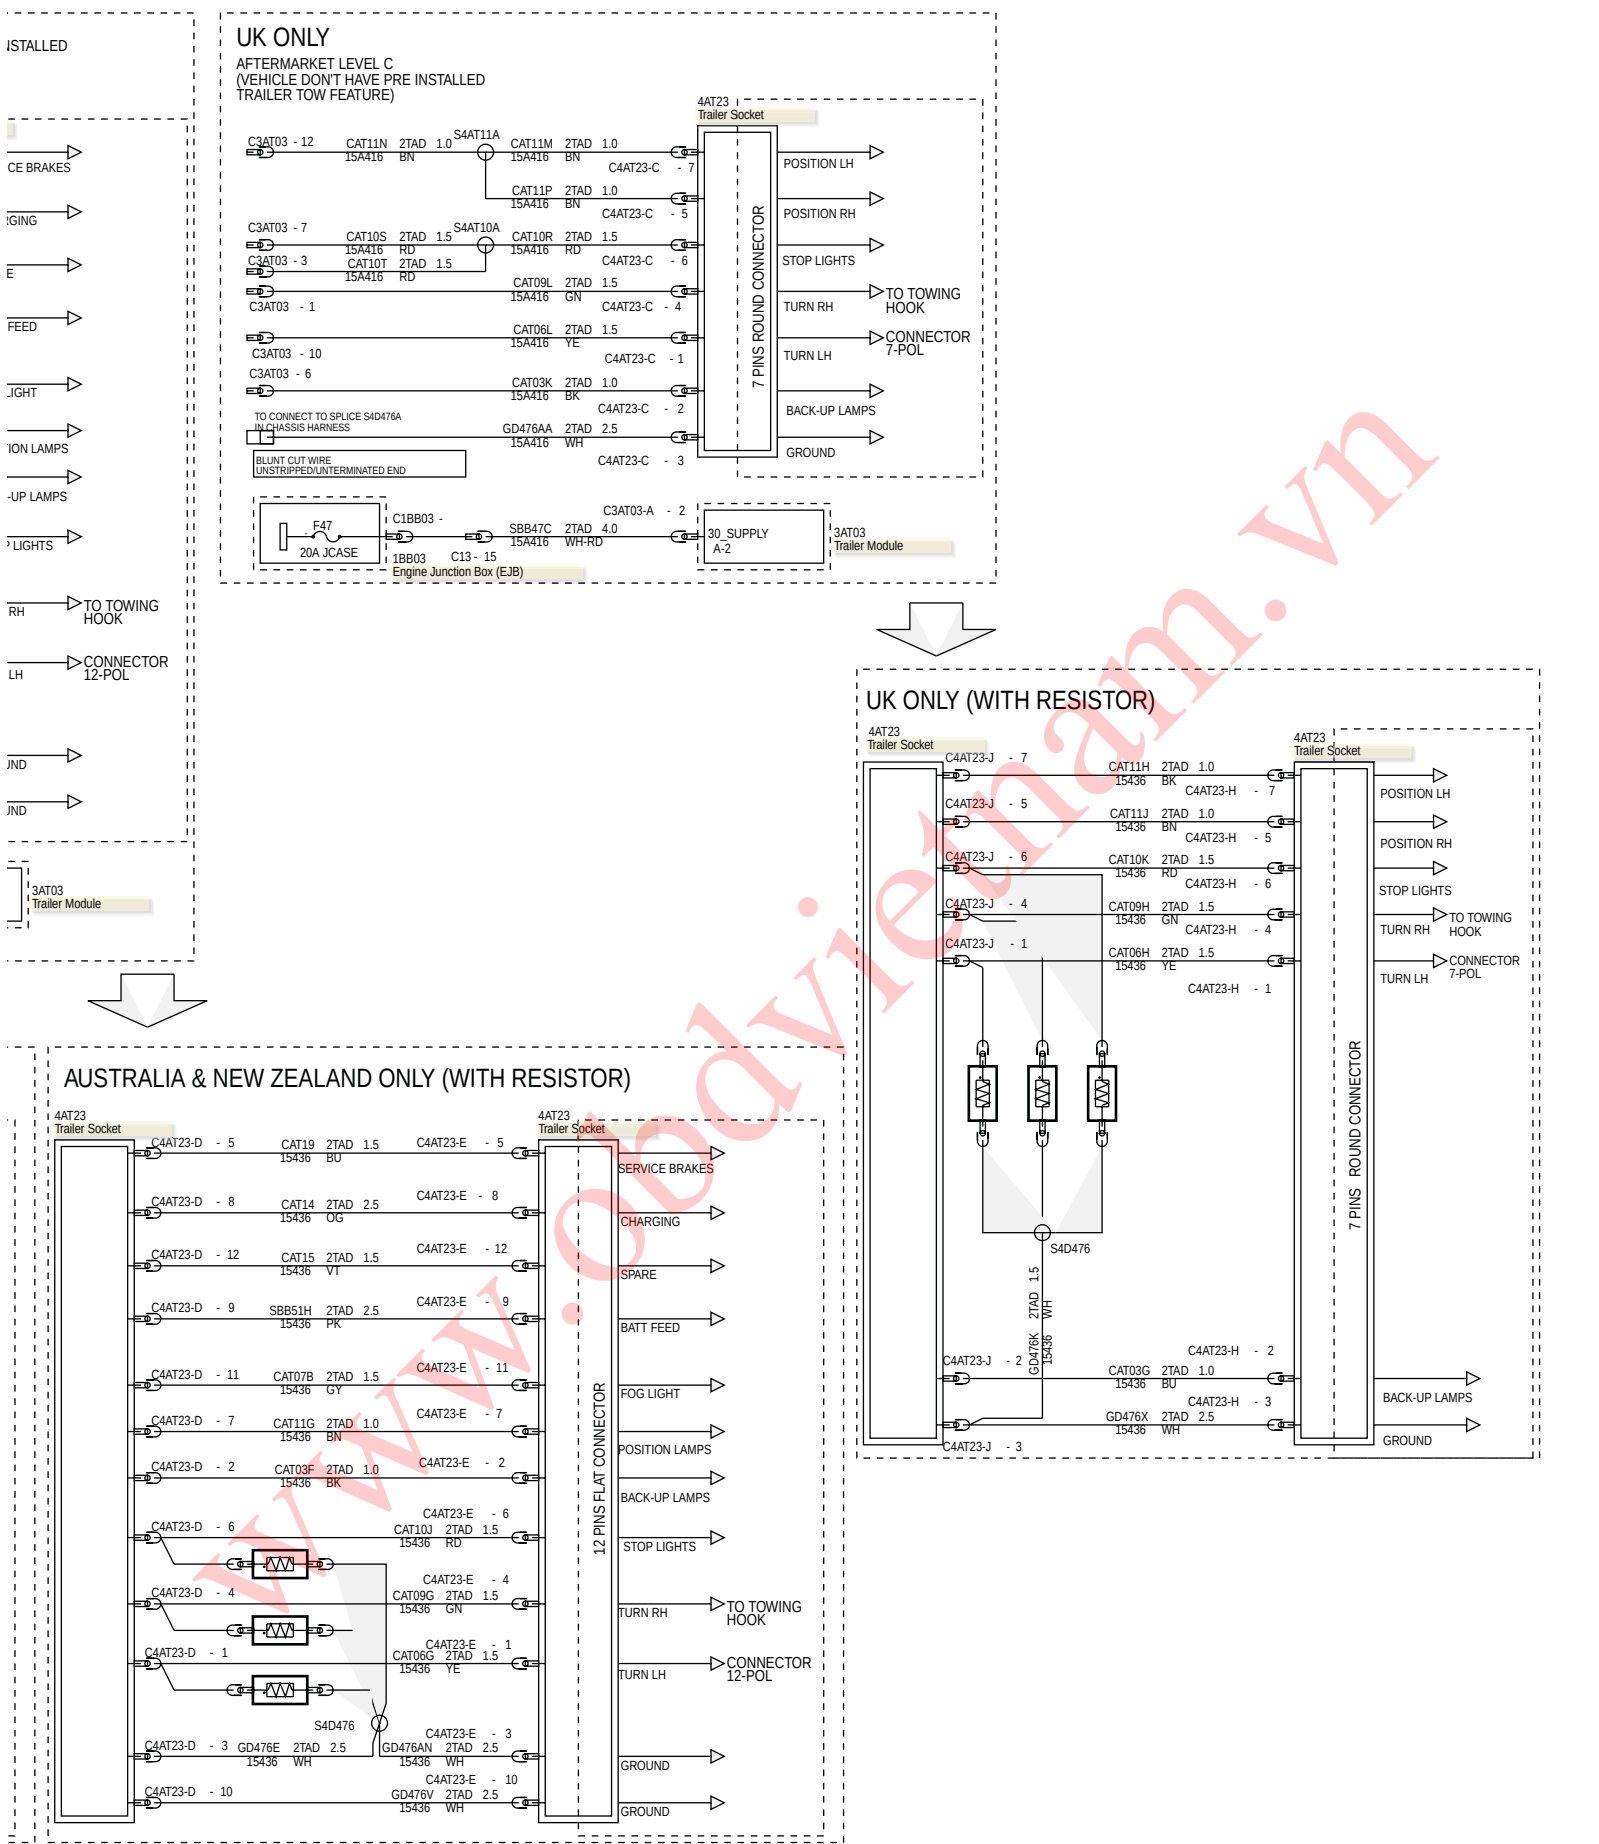

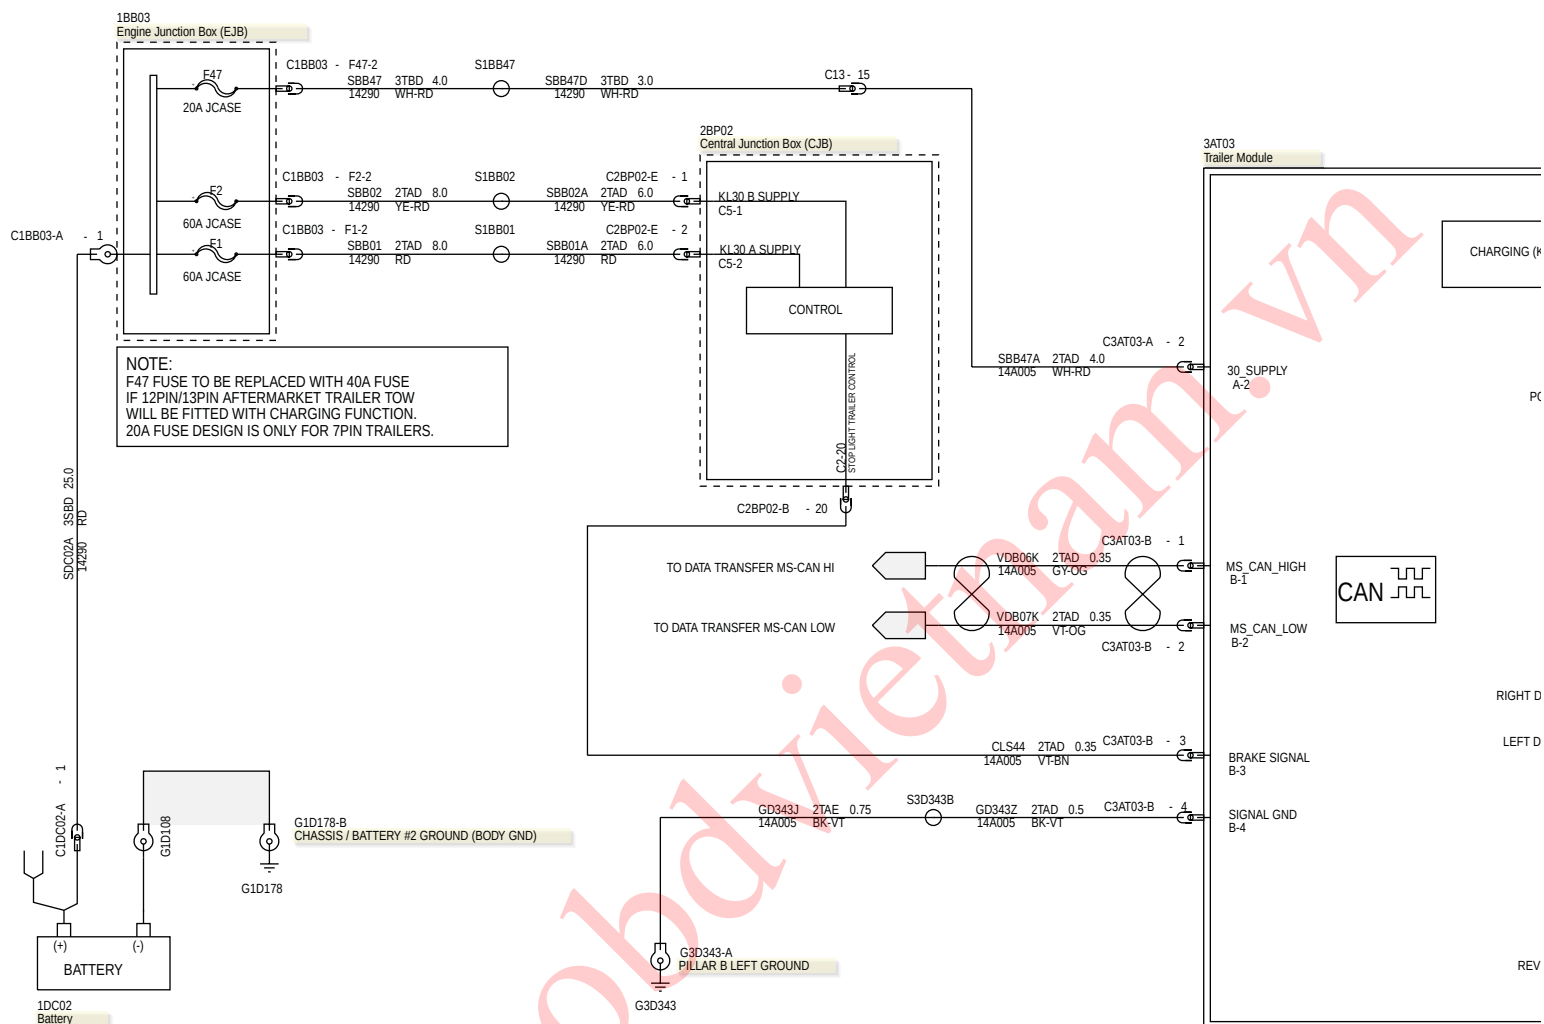

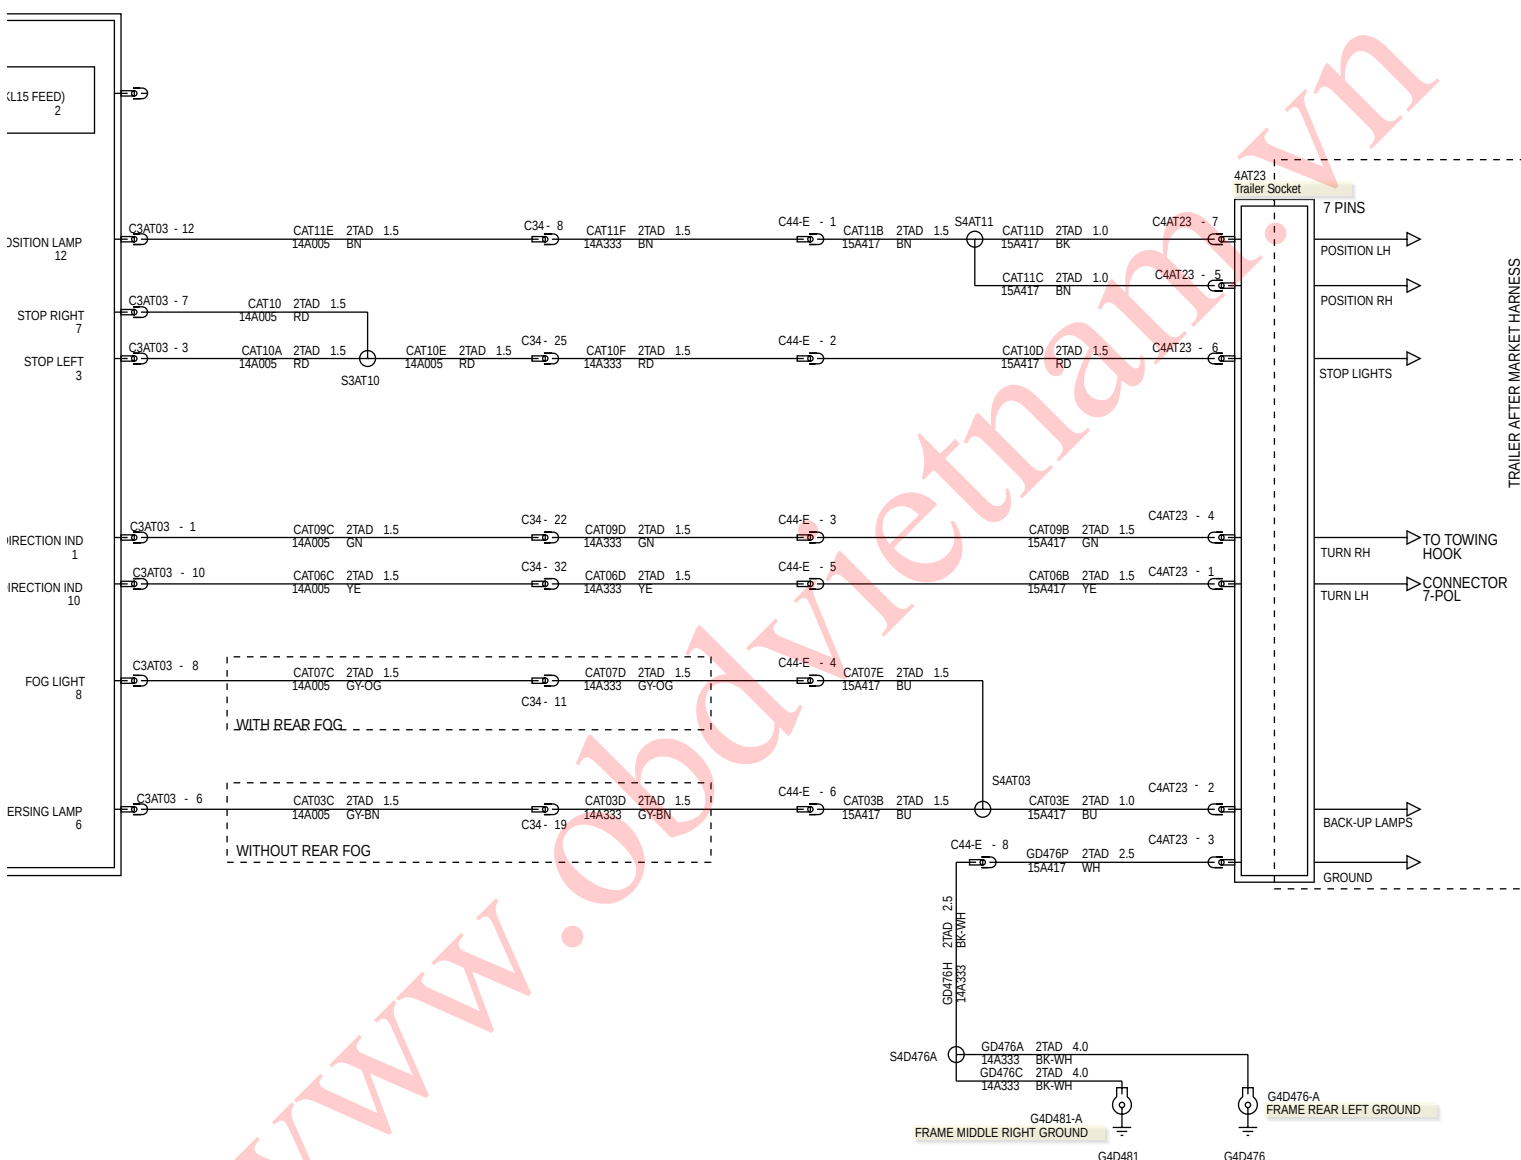



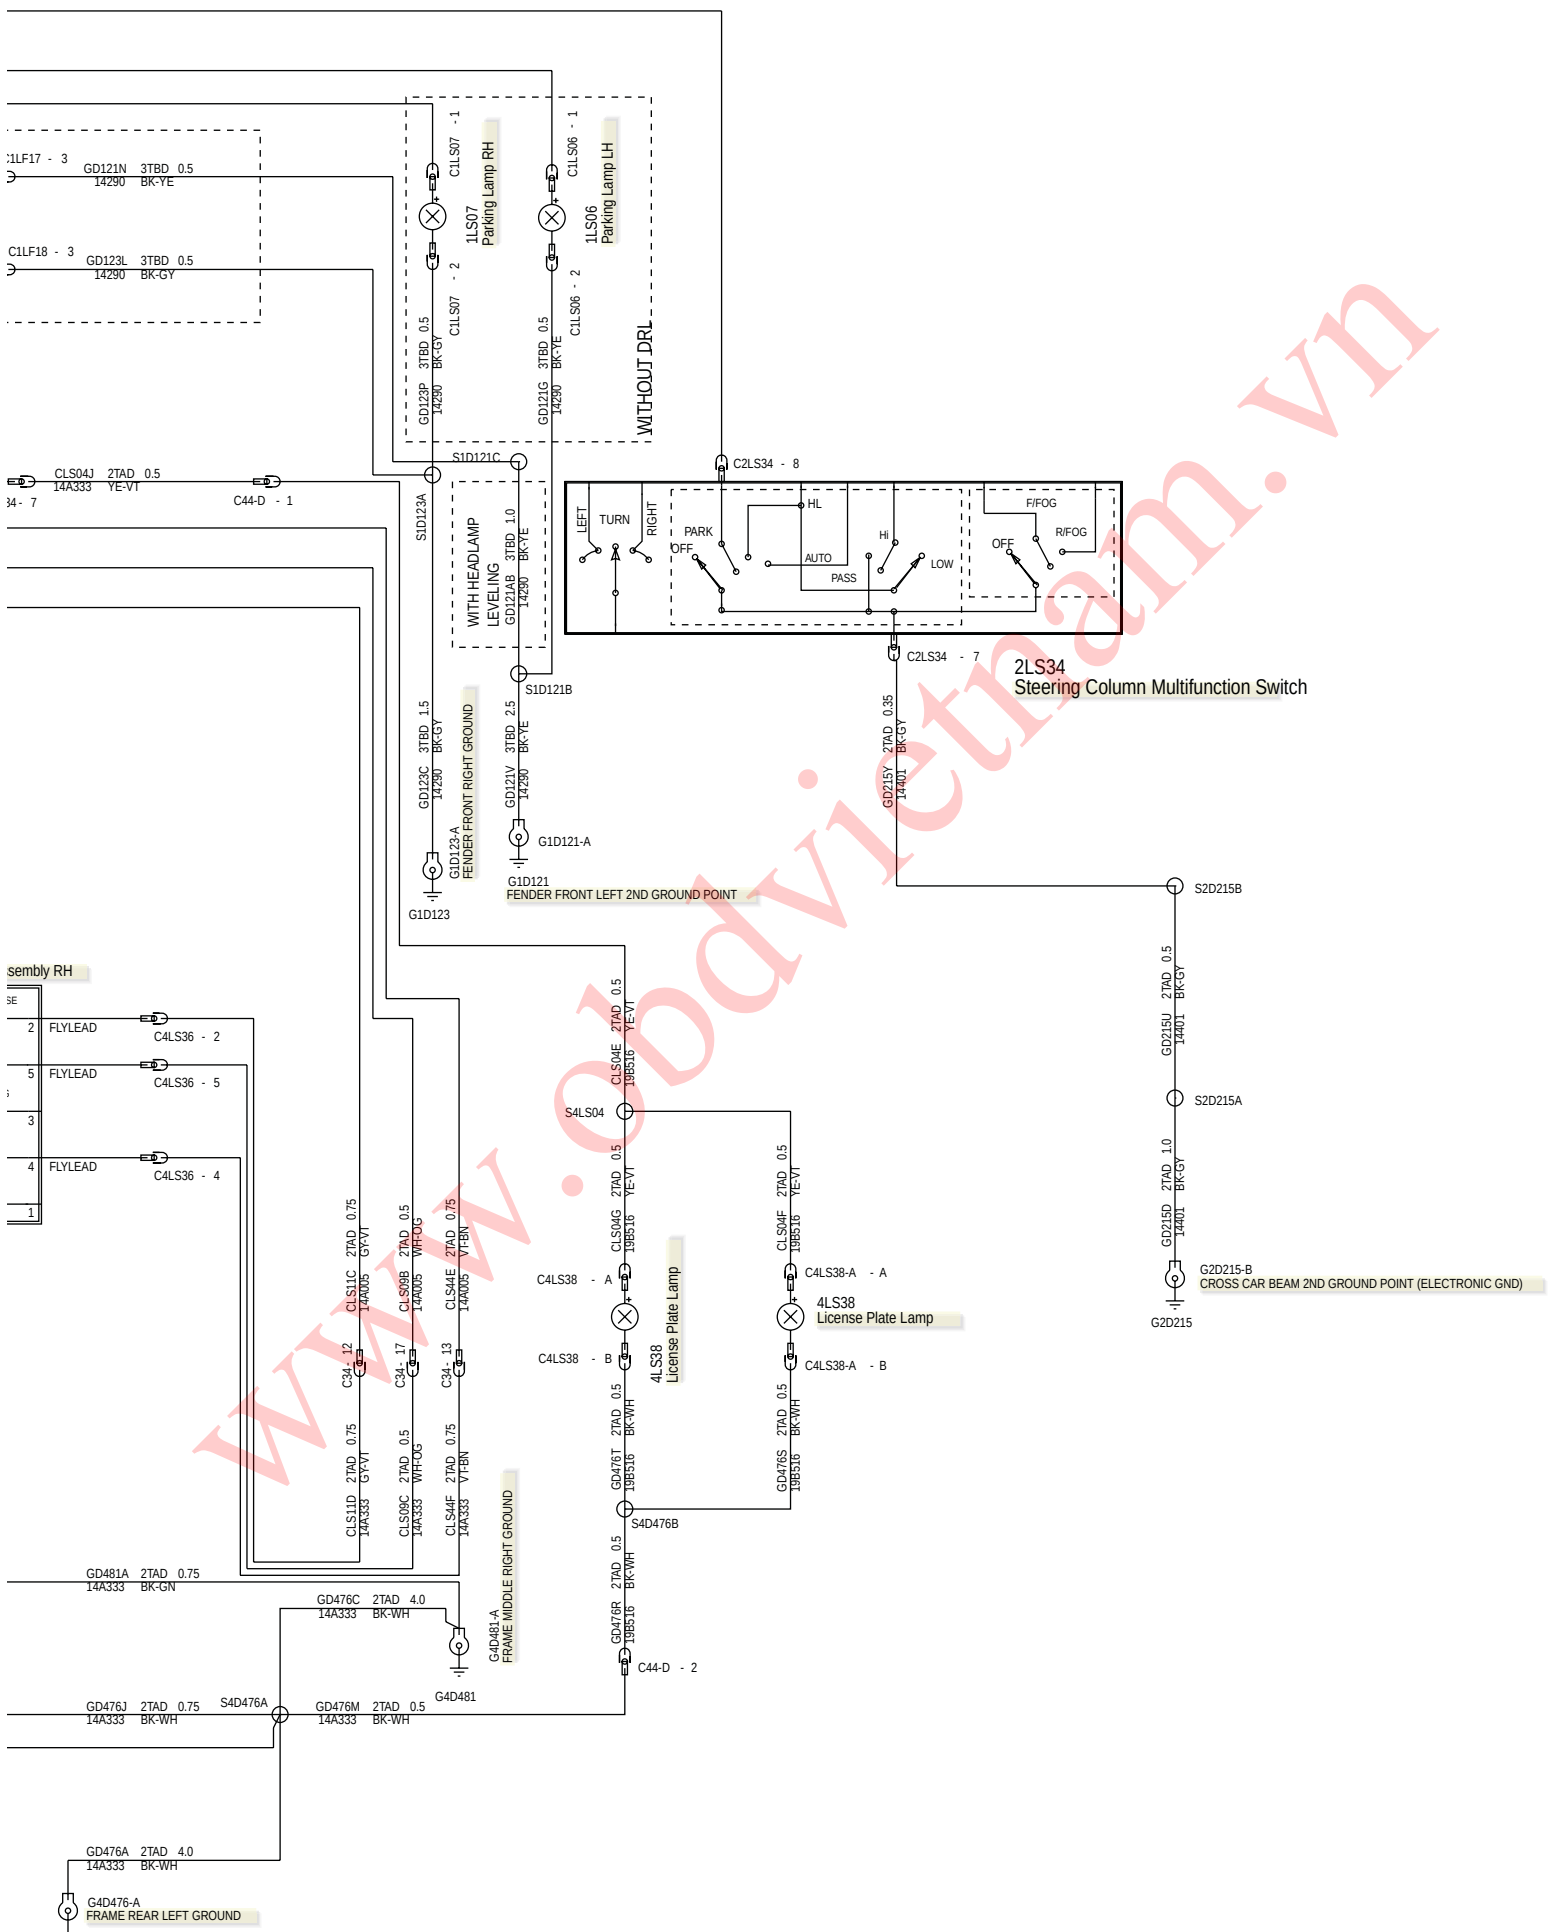







417-01-29

Front Fog Lamp LH (G1404490)




F5HT-14A464-FA
C1LF29
TO FRONT FOGLAMP LH
HARNESS 14290

Front Fog Lamp RH (G1404491)




F5HT-14A464-FA
C1LF34
TO FRONT FOGLAMP RH
HARNESS 14290

Front Side Marker Lamp LH (G1404492)

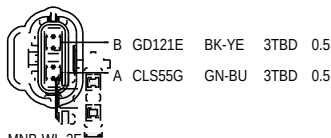


MNB-WL-2F
C1LS13
TO SIDE REPEATER LH
HARNESS 14290

Front Side Marker Lamp RH (G1404493)

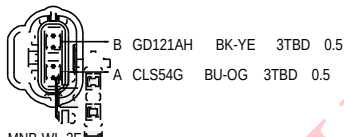

MNB-WL-2F
C1LS14
TO SIDE REPEATER RH
HARNESS 14290


Headlamp Assembly LH (G1404494)



CBS-PL-3P
C1LF08
TO H/L (LH)
HARNESS 14290


417-01-30

Headlamp Assembly RH (G1404495)




CBS-PL-3P
C1LF09
TO H/L (RH)
HARNESS 14290

Headlamp Control Module (G1426376)




MNNE2-WD-3F
C1LF39
TO LEFT HEADLAMP LEVELING MOTOR
HARNESS 14290

Headlamp Control Module—A (G1426378)




MNNE2-WD-3F
C1LF39-A
TO RIGHT HEADLAMP LEVELING MOTOR
HARNESS 14290

Headlamp Leveling Switch (G1426380)

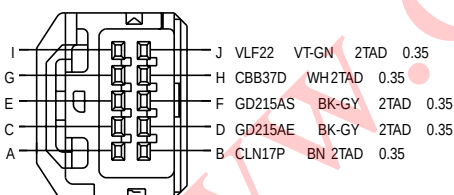

C2LF22
MQL-DL-10F
TO HEADLAMP LEVELING SWITCH
HARNESS 14401

High Mounted Stoplamp (G1404496)



C4LS50
6181-6492
TO HMSL
HARNESS 13B551

417-01-31

High Mounted Stoplamp (G1405453)


PIN B => GD343P BK-VT 0.5 2TAD
PIN B => GD345K BK-BU 0.5 2TAD

CLS17 YE-GY 2TAD 0.5 + CLS17F YE-GY 2TAD 0.5



MNNL-AL-2F
C3LS50
TO CHMSL
HARNESS 14A005


License Plate Lamp (G1404497)



C4LS38
2M5A-13K370-FB

TO REAR LICENSE PLATE LAMP(LH)
HARNESS 19B516


License Plate Lamp—A (G1404498)



C4LS38-A
2M5A-13K370-FB

TO REAR LICENSE PLATE LAMP(RH)
HARNESS 19B516


Parking Lamp LH (G1404499)



MNC1-WD-2F
C1LS06

TO FRONT POSITION LAMP LH
HARNESS 14290

Parking Lamp RH (G1404500)




MNC1-WD-2F
C1LS07

TO FRONT POSITION LAMP RH
HARNESS 14290

417-01-32

Rear Lamp Assembly LH (G1404501)

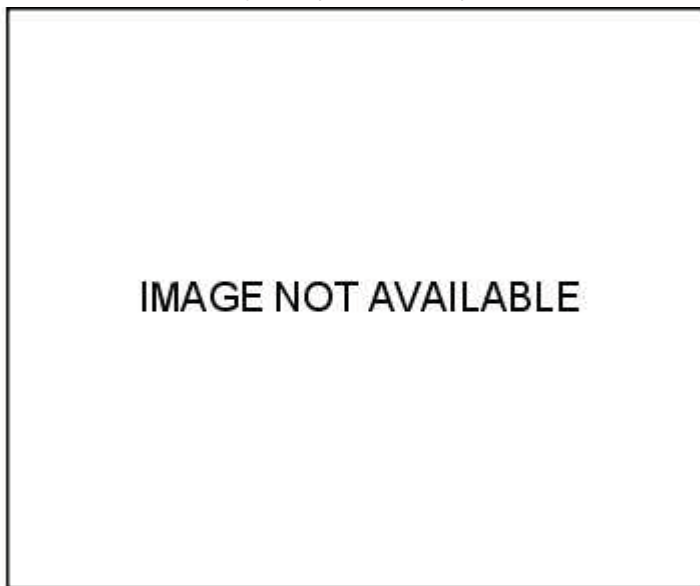

Rear Lamp Assembly RH (G1404502)



Reversing Lamp Switch (G1404503)

PIN 1 => CET47A BU 0.5 4TBD + CET47 BU 0.5 4TBD
PIN 2 => GD122Z BK 0.5 4TBD



1 CET47 BU 4TBD 0.5
2 GD122N BK 4TBD 0.5 + GD122Z BK 4TBD 0.5


XR3T-14A464-AA

C1ET47

TO REVERSE LAMP SWITCH

HARNESS 14K039

Side Turn Signal Lamp LH (G1404504)



1 CLS55H GN-BU 3TBD 0.5

2 GD121AA BK-YE 3TBD 0.5

MNNL-WD-2F


C1LS55

TO FRONT TURN SIGNAL


HARNESS 14290

417-01-33


Side Turn Signal Lamp RH (G1404507)

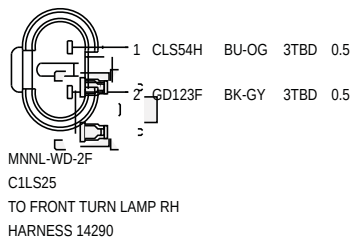


Stoplamp Switch (G1404508)

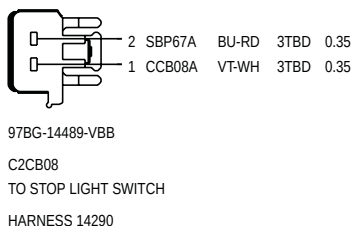

Trailer Socket (G1404574)

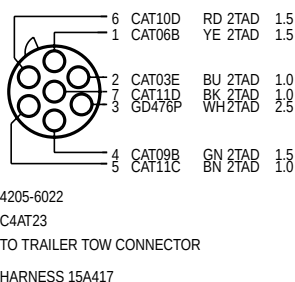


Trailer Socket—A (G1404575)

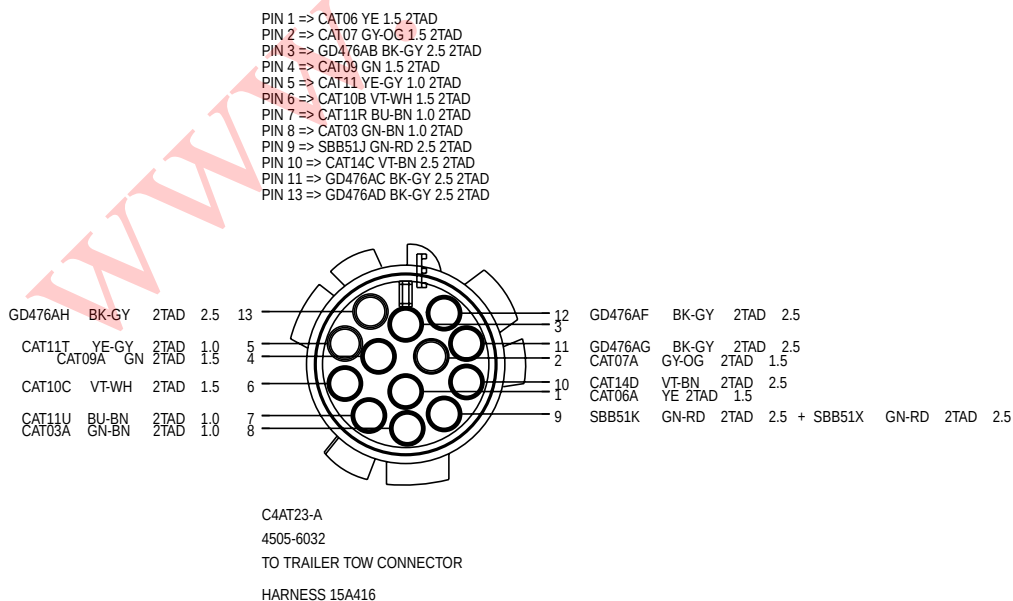


417-01-34


Trailer Socket—B (G1404576)

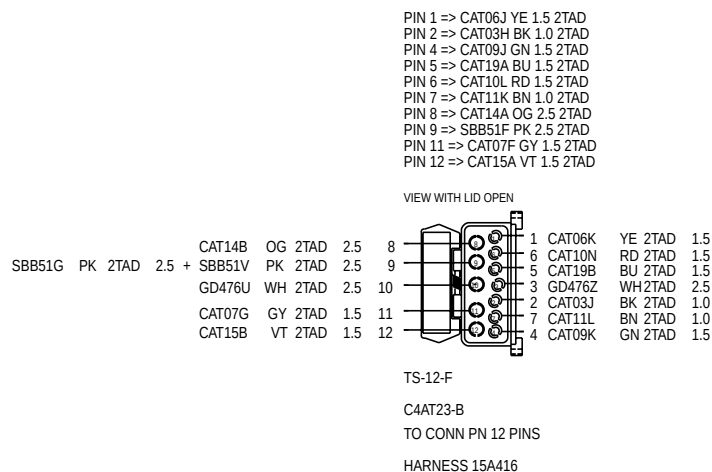


Trailer Socket—C (G1404577)

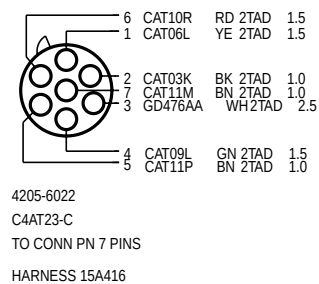

Trailer Socket—D (G1404578)

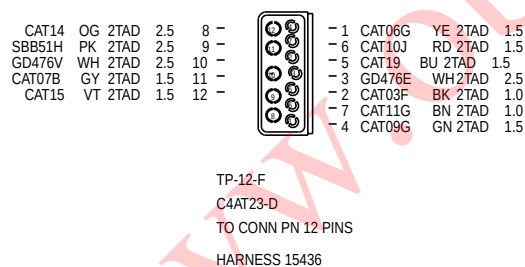


Trailer Socket—E (G1404579)

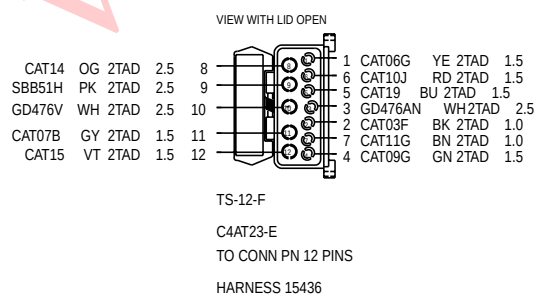


417-01-35


Trailer Socket—F (G1404580)

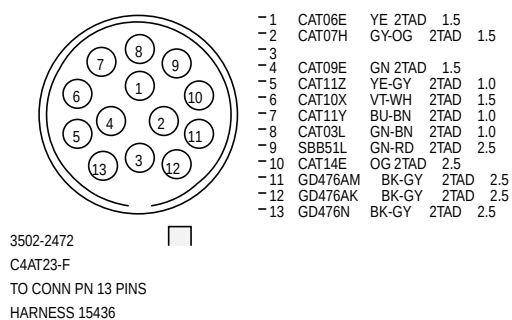


Trailer Socket—G (G1404581)

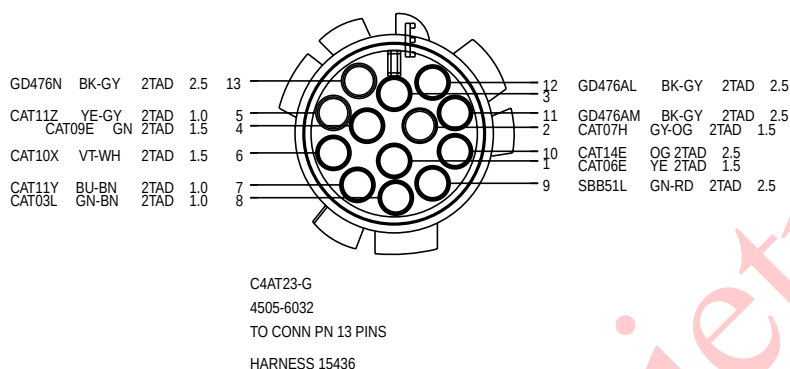

Trailer Socket—H (G1404582)

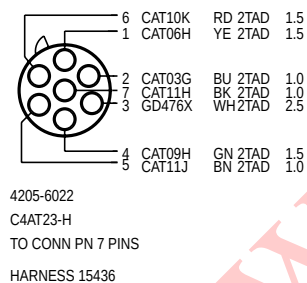


Trailer Socket—J (G1404583)

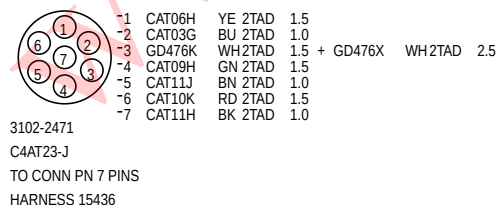

417-01-36

Trailer Module (G1406836)

PIN 1 => CAT09C GN 1.5 2TAD
 PIN 1 => CAT09K GN 1.5 2TAD
 PIN 1 => CAT09L GN 1.5 2TAD
 PIN 2 => CAT14A OG 2.5 2TAD
 PIN 2 => CAT14B OG 2.5 2TAD
 PIN 2 => CAT14C VT-BN 2.5 2TAD
 PIN 3 => CAT10A RD 1.5 2TAD
 PIN 3 => CAT10P RD 1.5 2TAD
 PIN 3 => CAT10T RD 1.5 2TAD
 PIN 6 => CAT03C GY-BN 1.5 2TAD
 PIN 6 => CAT03J BK 1.0 2TAD
 PIN 6 => CAT03K BK 1.0 2TAD
 PIN 7 => CAT10 RD 1.5 2TAD
 PIN 7 => CAT10M RD 1.5 2TAD
 PIN 7 => CAT10S RD 1.5 2TAD
 PIN 8 => CAT07C GY-OG 1.5 2TAD
 PIN 8 => CAT07G GY 1.5 2TAD
 PIN 10 => CAT06C YE 1.5 2TAD
 PIN 10 => CAT06K YE 1.5 2TAD
 PIN 10 => CAT06L YE 1.5 2TAD
 PIN 12 => CAT11E BN 1.5 2TAD
 PIN 12 => CAT11L BN 1.0 2TAD
 PIN 12 => CAT11N BN 1.0 2TAD

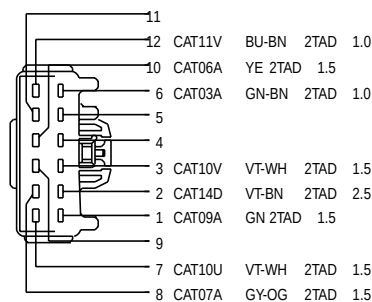

4S7T-14489-YJA


C3AT03

TO TRAILER TOW MODULE(TRAILER CONN)

HARNESS 14A005

Trailer Module—A (G1406837)

PIN 2 => SBB47A WH-RD 4.0 2TAD
 PIN 2 => SBB47B WH-RD 4.0 2TAD

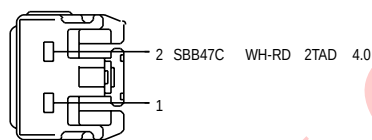

3M5T-14489-KBA


C3AT03-A

TO TRAILER TOW MODULE(POWER)

HARNESS 14A005

Trailer Module—B (G1406838)

PIN 4 => GD345U BK-BU 0.5 2TAD

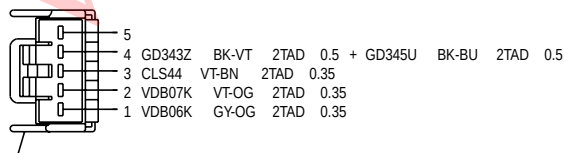

XR8T-14489-FA

C3AT03-B

TO TRAILER TOW MODULE(CAN)

HARNESS 14A005

SECTION 417-02 Interior Lighting

VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS

PAGE


ELECTRICAL SCHEMATICS

Courtesy and Demand Lighting — Single Cab, LHD 4WD/LHD RWD.....	417-02-2
Courtesy and Demand Lighting — Double Cab, LHD 4WD/LHD RWD.....	417-02-4
Courtesy and Demand Lighting — Super Cab, LHD 4WD/LHD RWD.....	417-02-6
Courtesy and Demand Lighting — Single Cab, RHD 4WD/RHD RWD.....	417-02-8
Courtesy and Demand Lighting — Double Cab, RHD 4WD/RHD RWD.....	417-02-10
Courtesy and Demand Lighting — Super Cab, RHD 4WD/RHD RWD.....	417-02-12
Instrument Cluster and Panel Illumination — LHD 4WD/LHD RWD.....	417-02-14
Instrument Cluster and Panel Illumination — RHD 4WD/RHD RWD.....	417-02-16


ELECTRICAL CONNECTORS

Footwell Lamp LH.....	417-02-18
Footwell Lamp RH.....	417-02-18
Front Door Trim Panel Ambient Lighting Lamp LH.....	417-02-18
Front Door Trim Panel Ambient Lighting Lamp RH.....	417-02-18
Glove Compartment Lamp.....	417-02-18
Interior Front Door Handle Ambient Lighting Lamp LH.....	417-02-19
Interior Front Door Handle Ambient Lighting Lamp RH.....	417-02-19
Overhead Ambient Lighting Lamp.....	417-02-19
Overhead Ambient Lighting Lamp — A.....	417-02-19
Overhead Ambient Lighting Lamp — B.....	417-02-19
Rear Interior Lamp.....	417-02-19
Rear Interior Lamp — A.....	417-02-20


417-02-2 Courtesy and Demand Lighting—Single Cab, LHD 4WD/LHD RWD

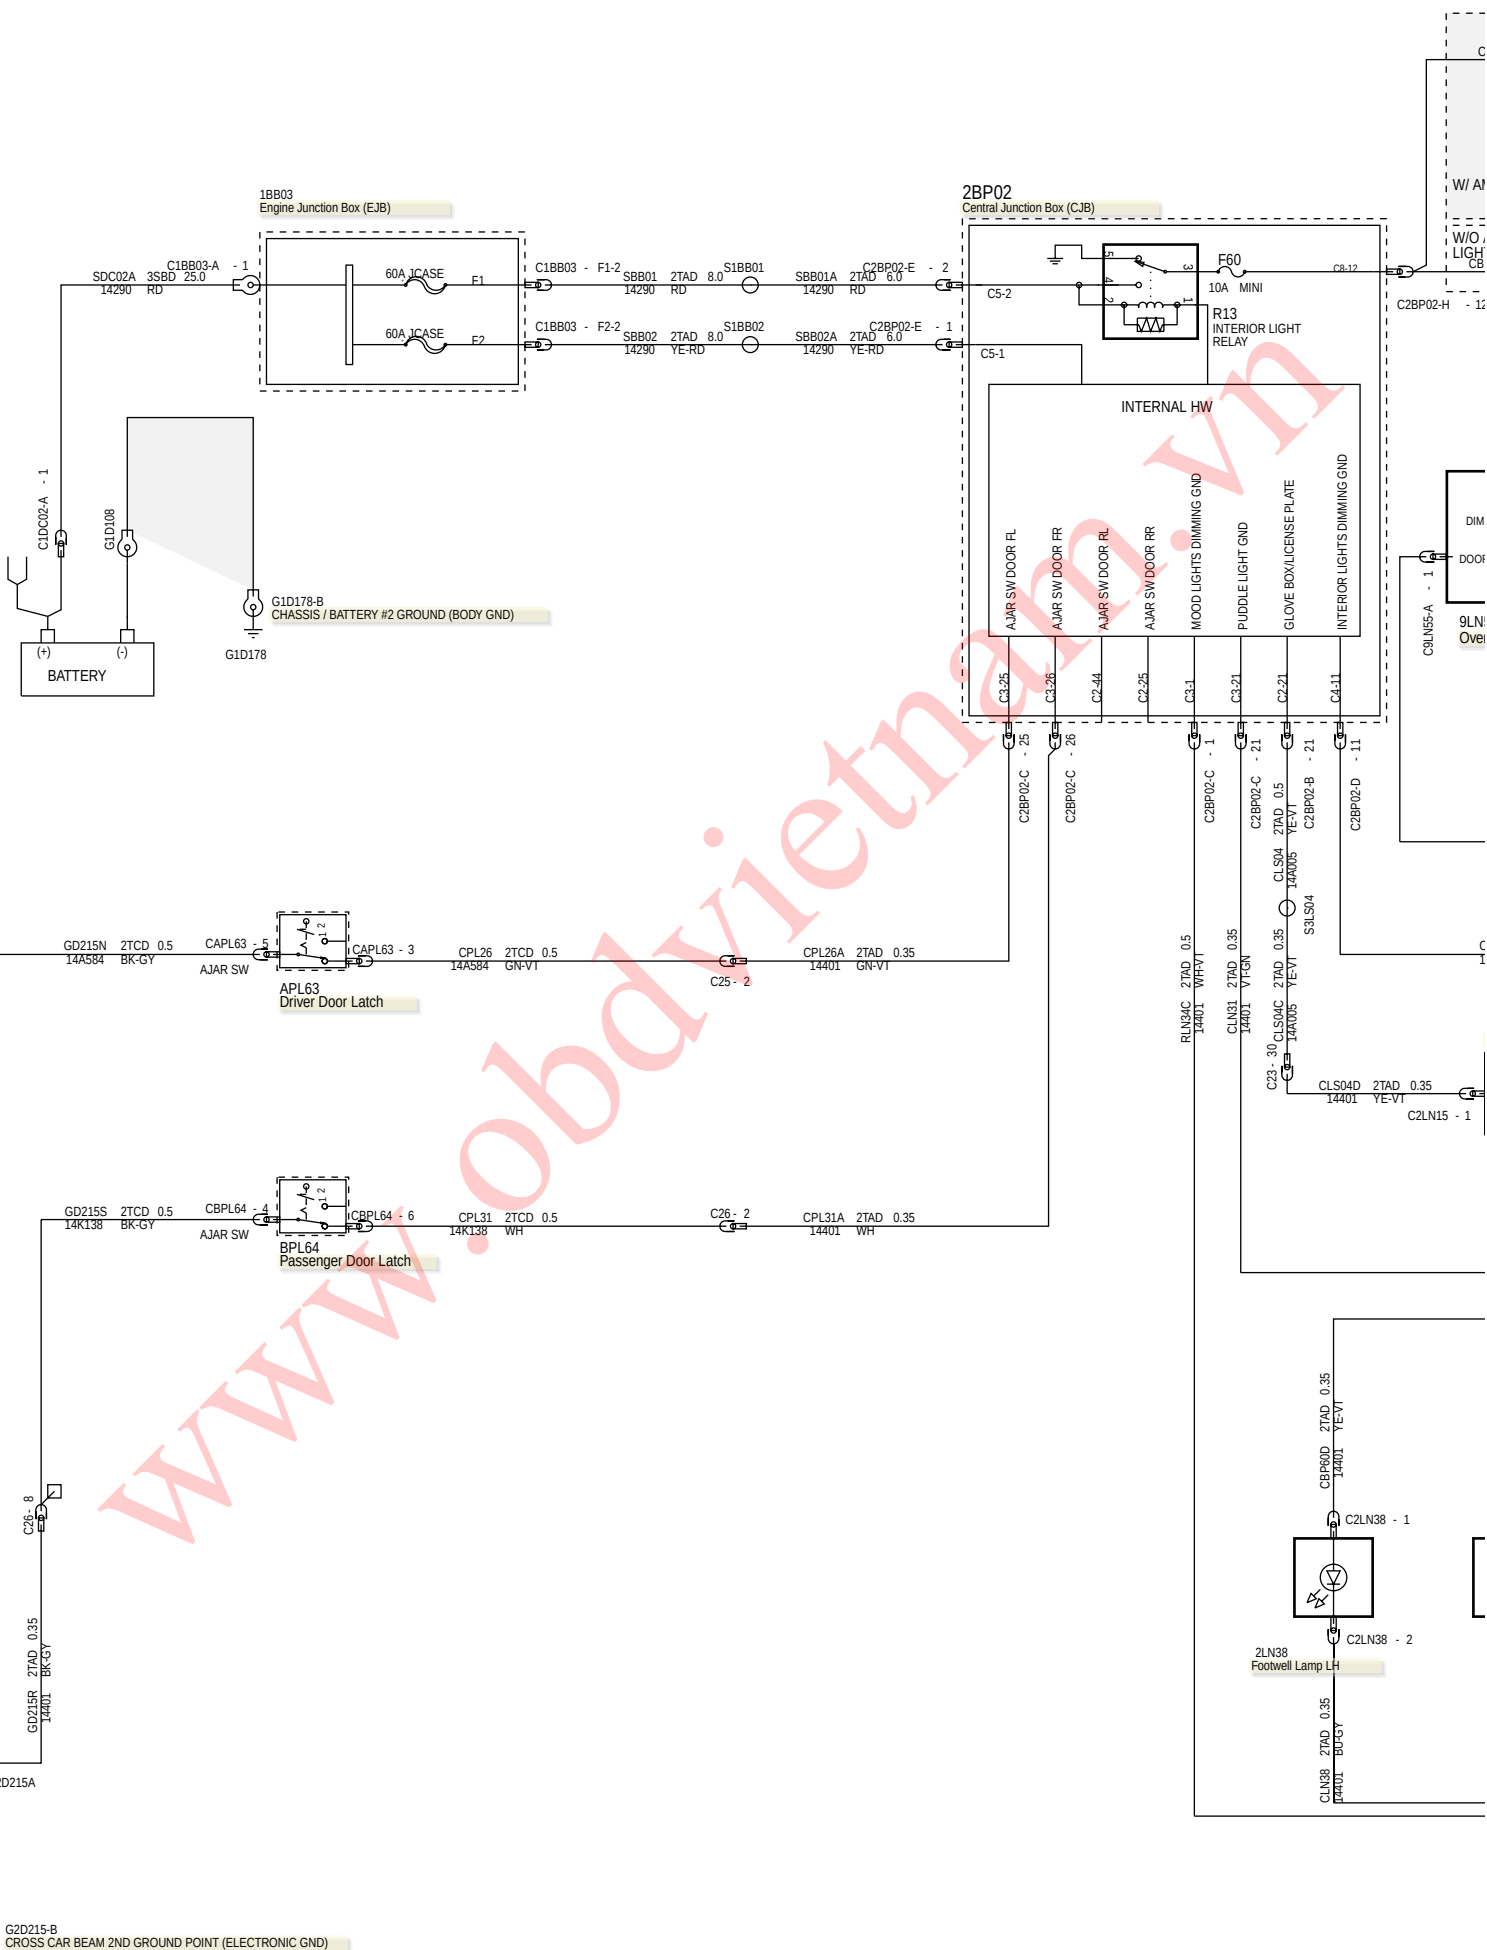

417-02-3 Courtesy and Demand Lighting—Single Cab, LHD 4WD/LHD RWD

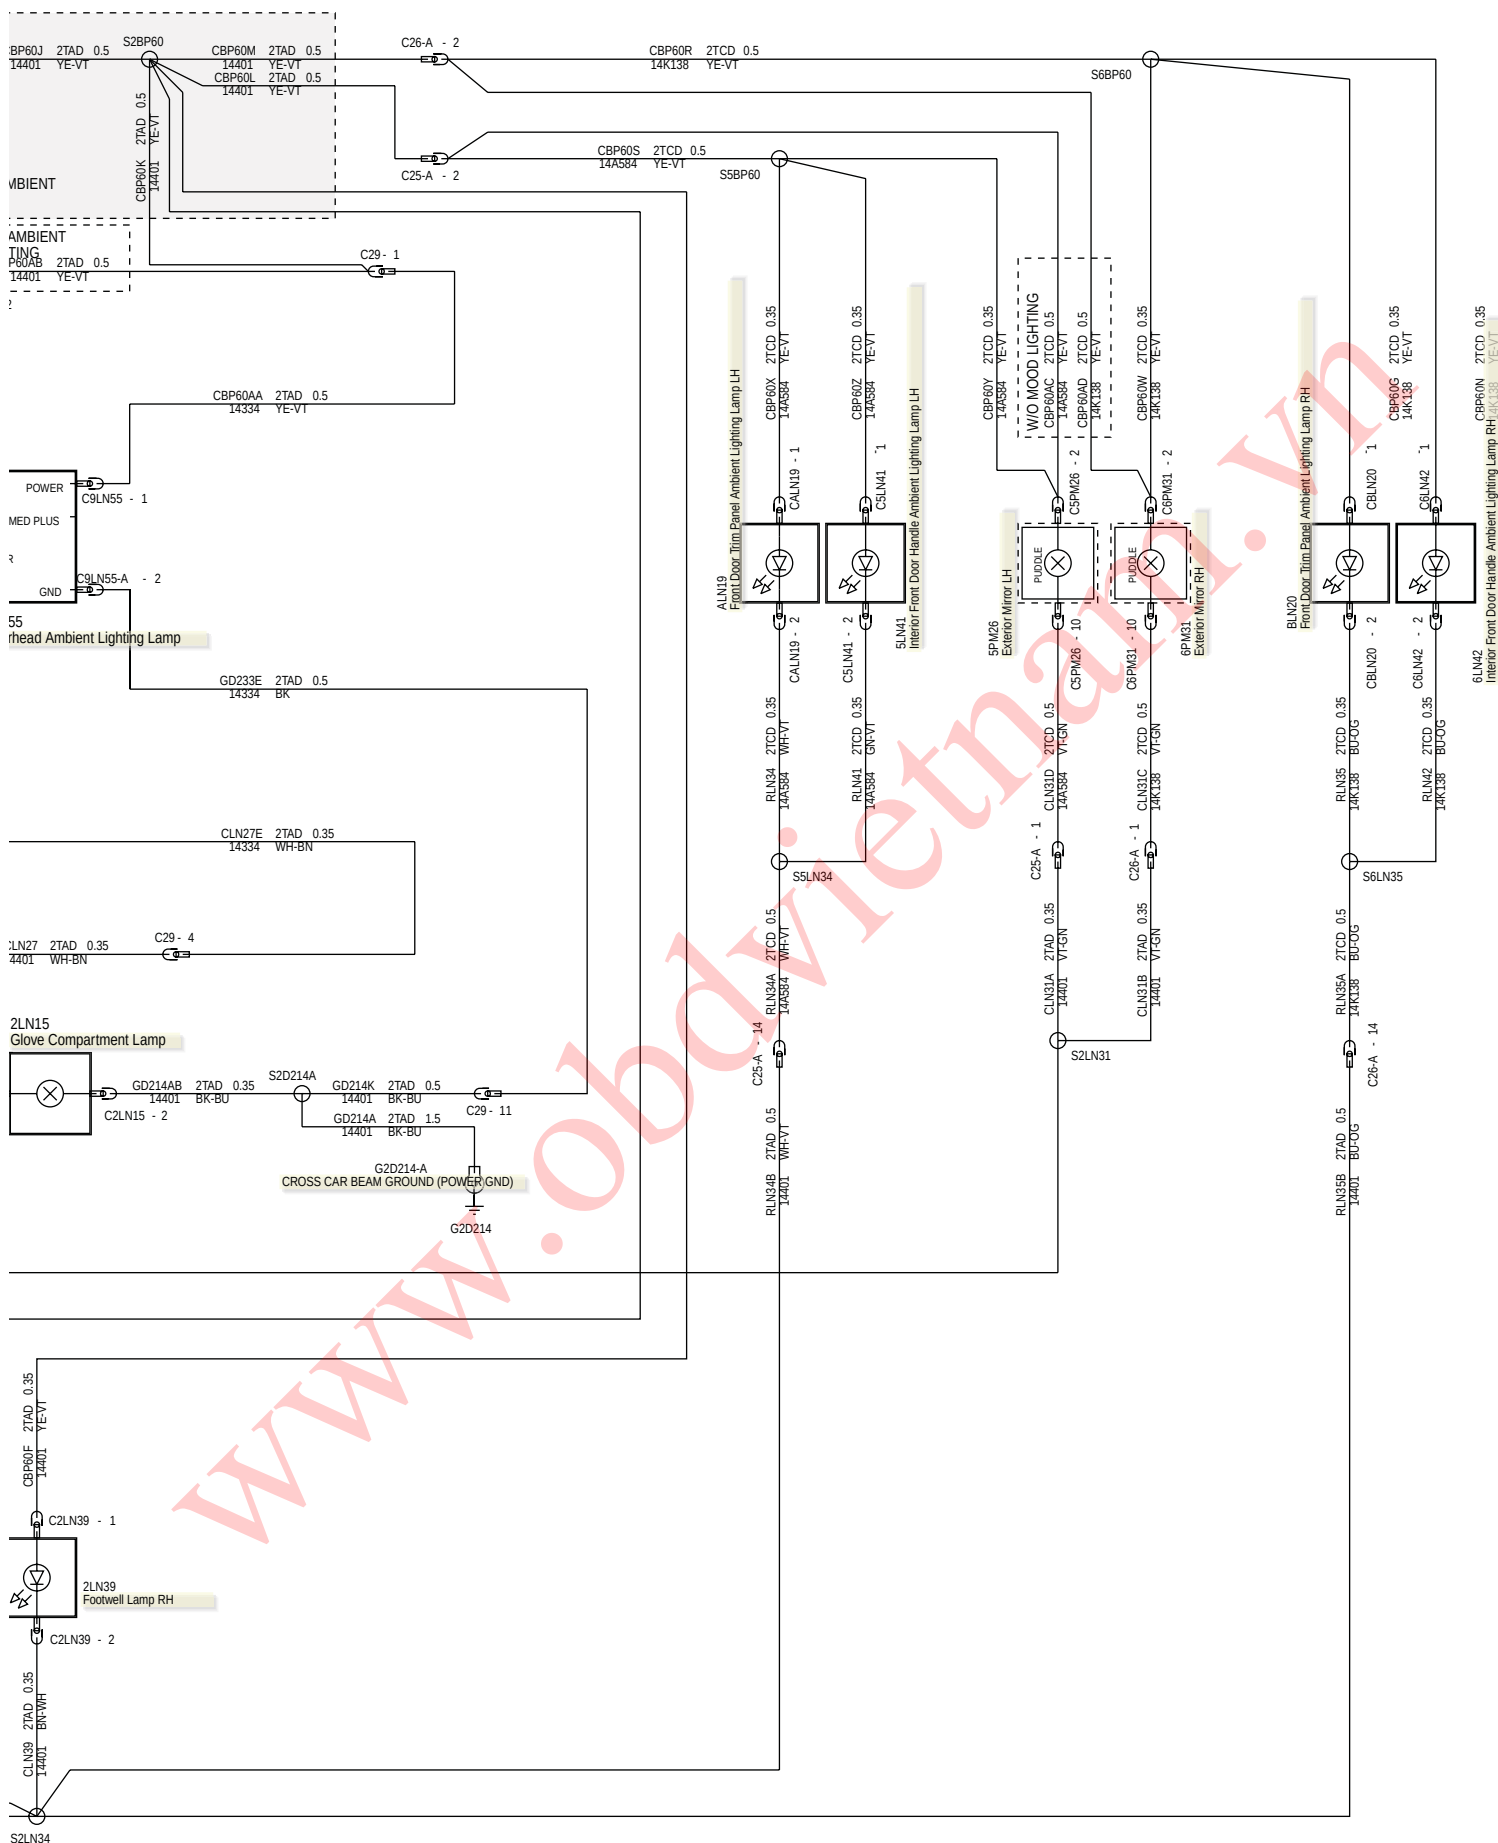




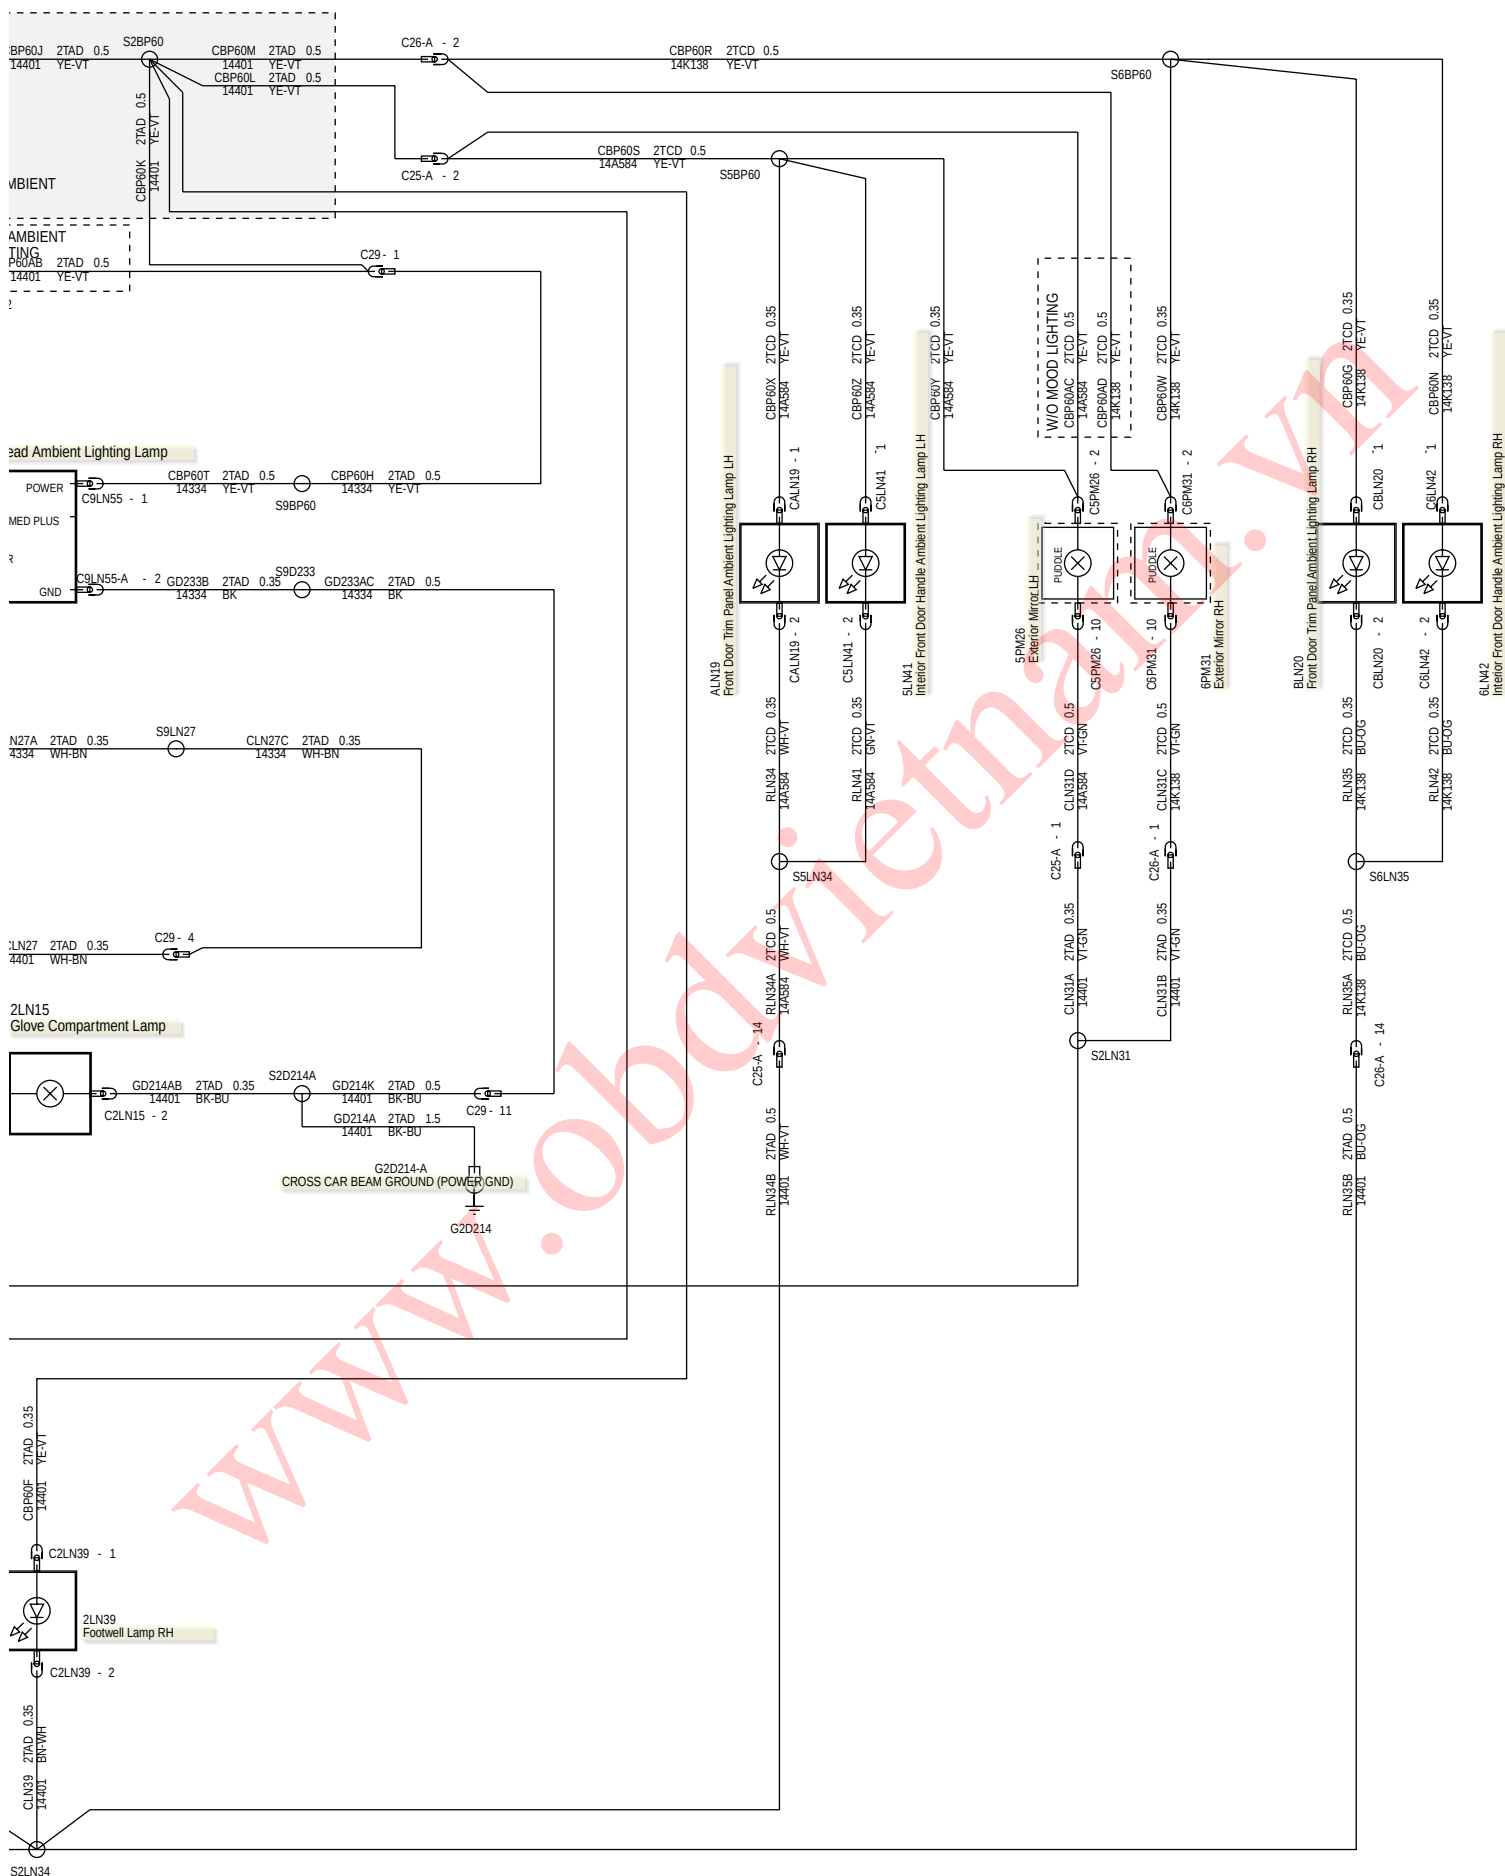


Nâng tầm người thợ Việt




417-02-7 Courtesy and Demand Lighting—Super Cab, LHD 4WD/LHD RWD

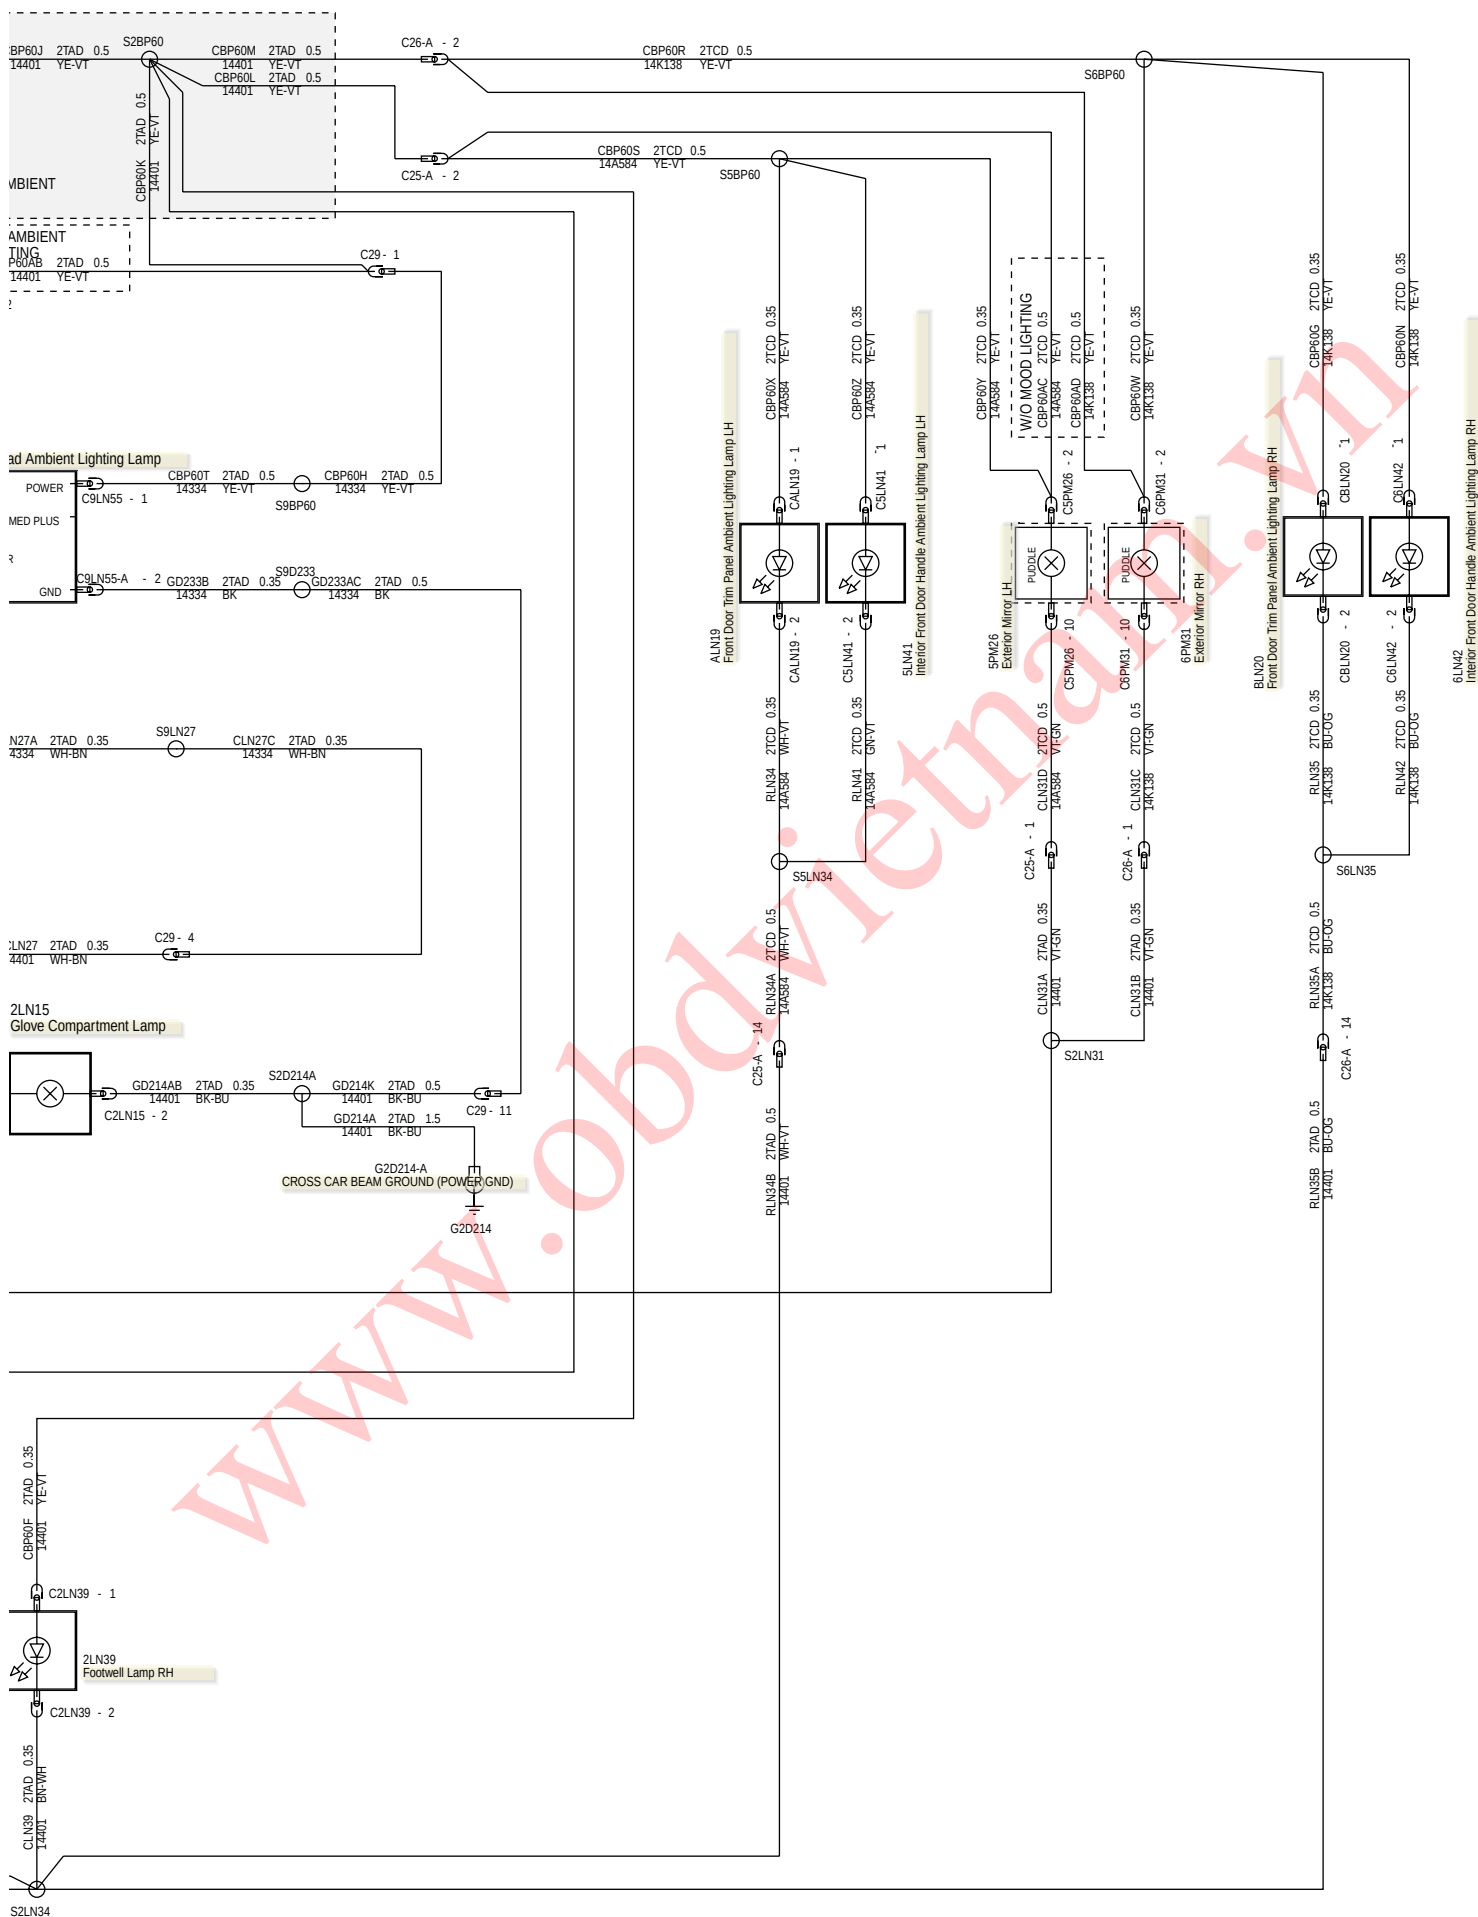


417-02-8 Courtesy and Demand Lighting—Single Cab, RHD 4WD/RHD RWD

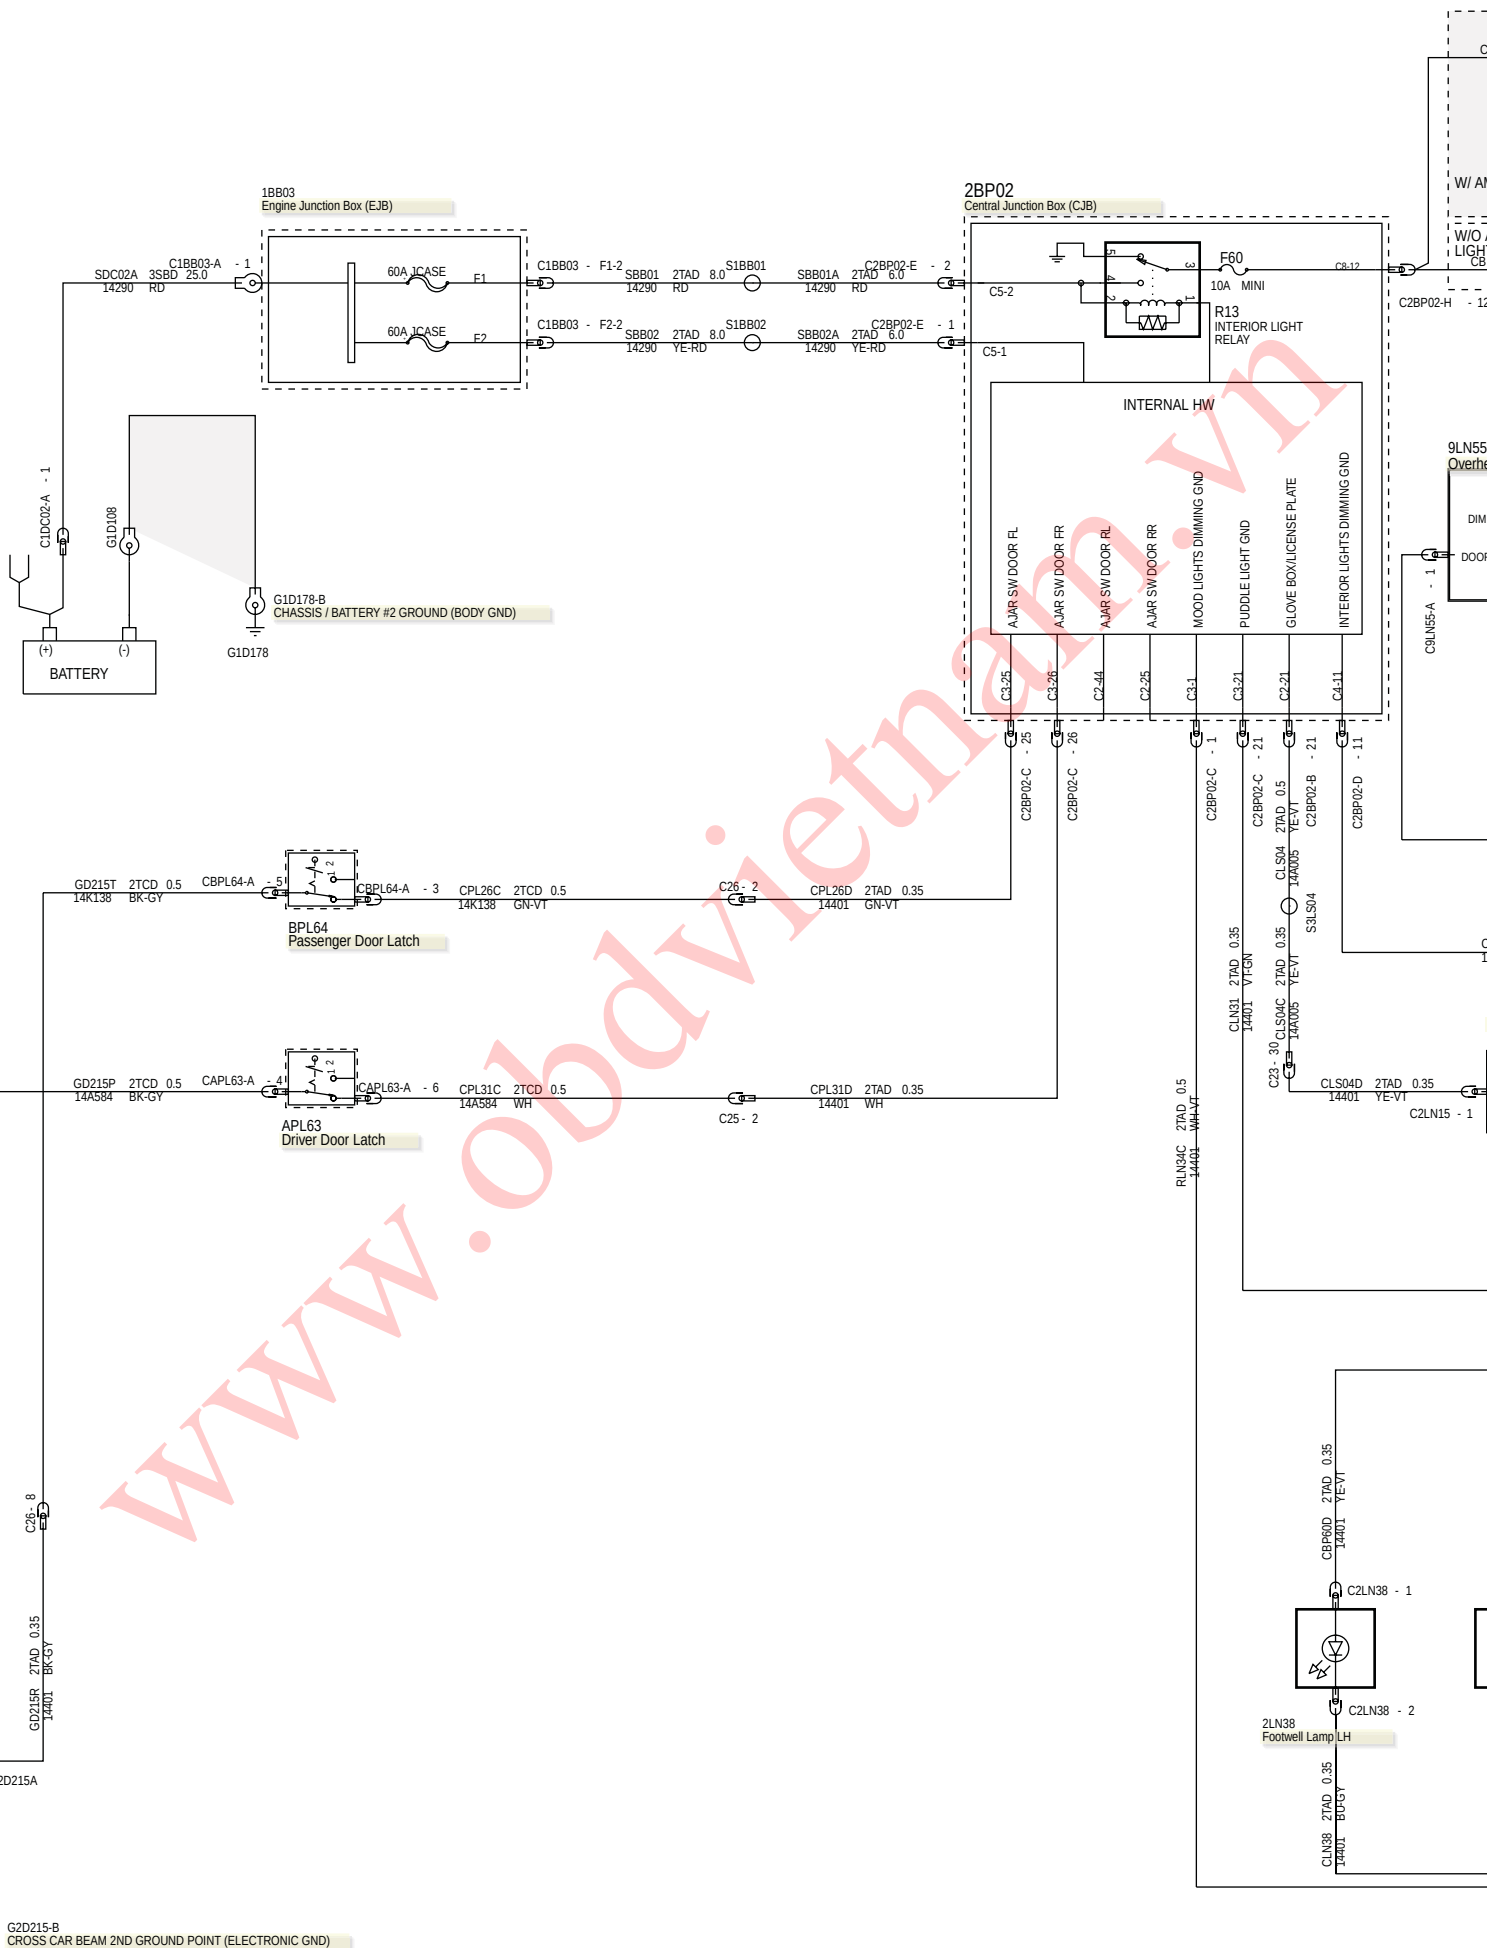


417-02-9 Courtesy and Demand Lighting—Single Cab, RHD 4WD/RHD RWD

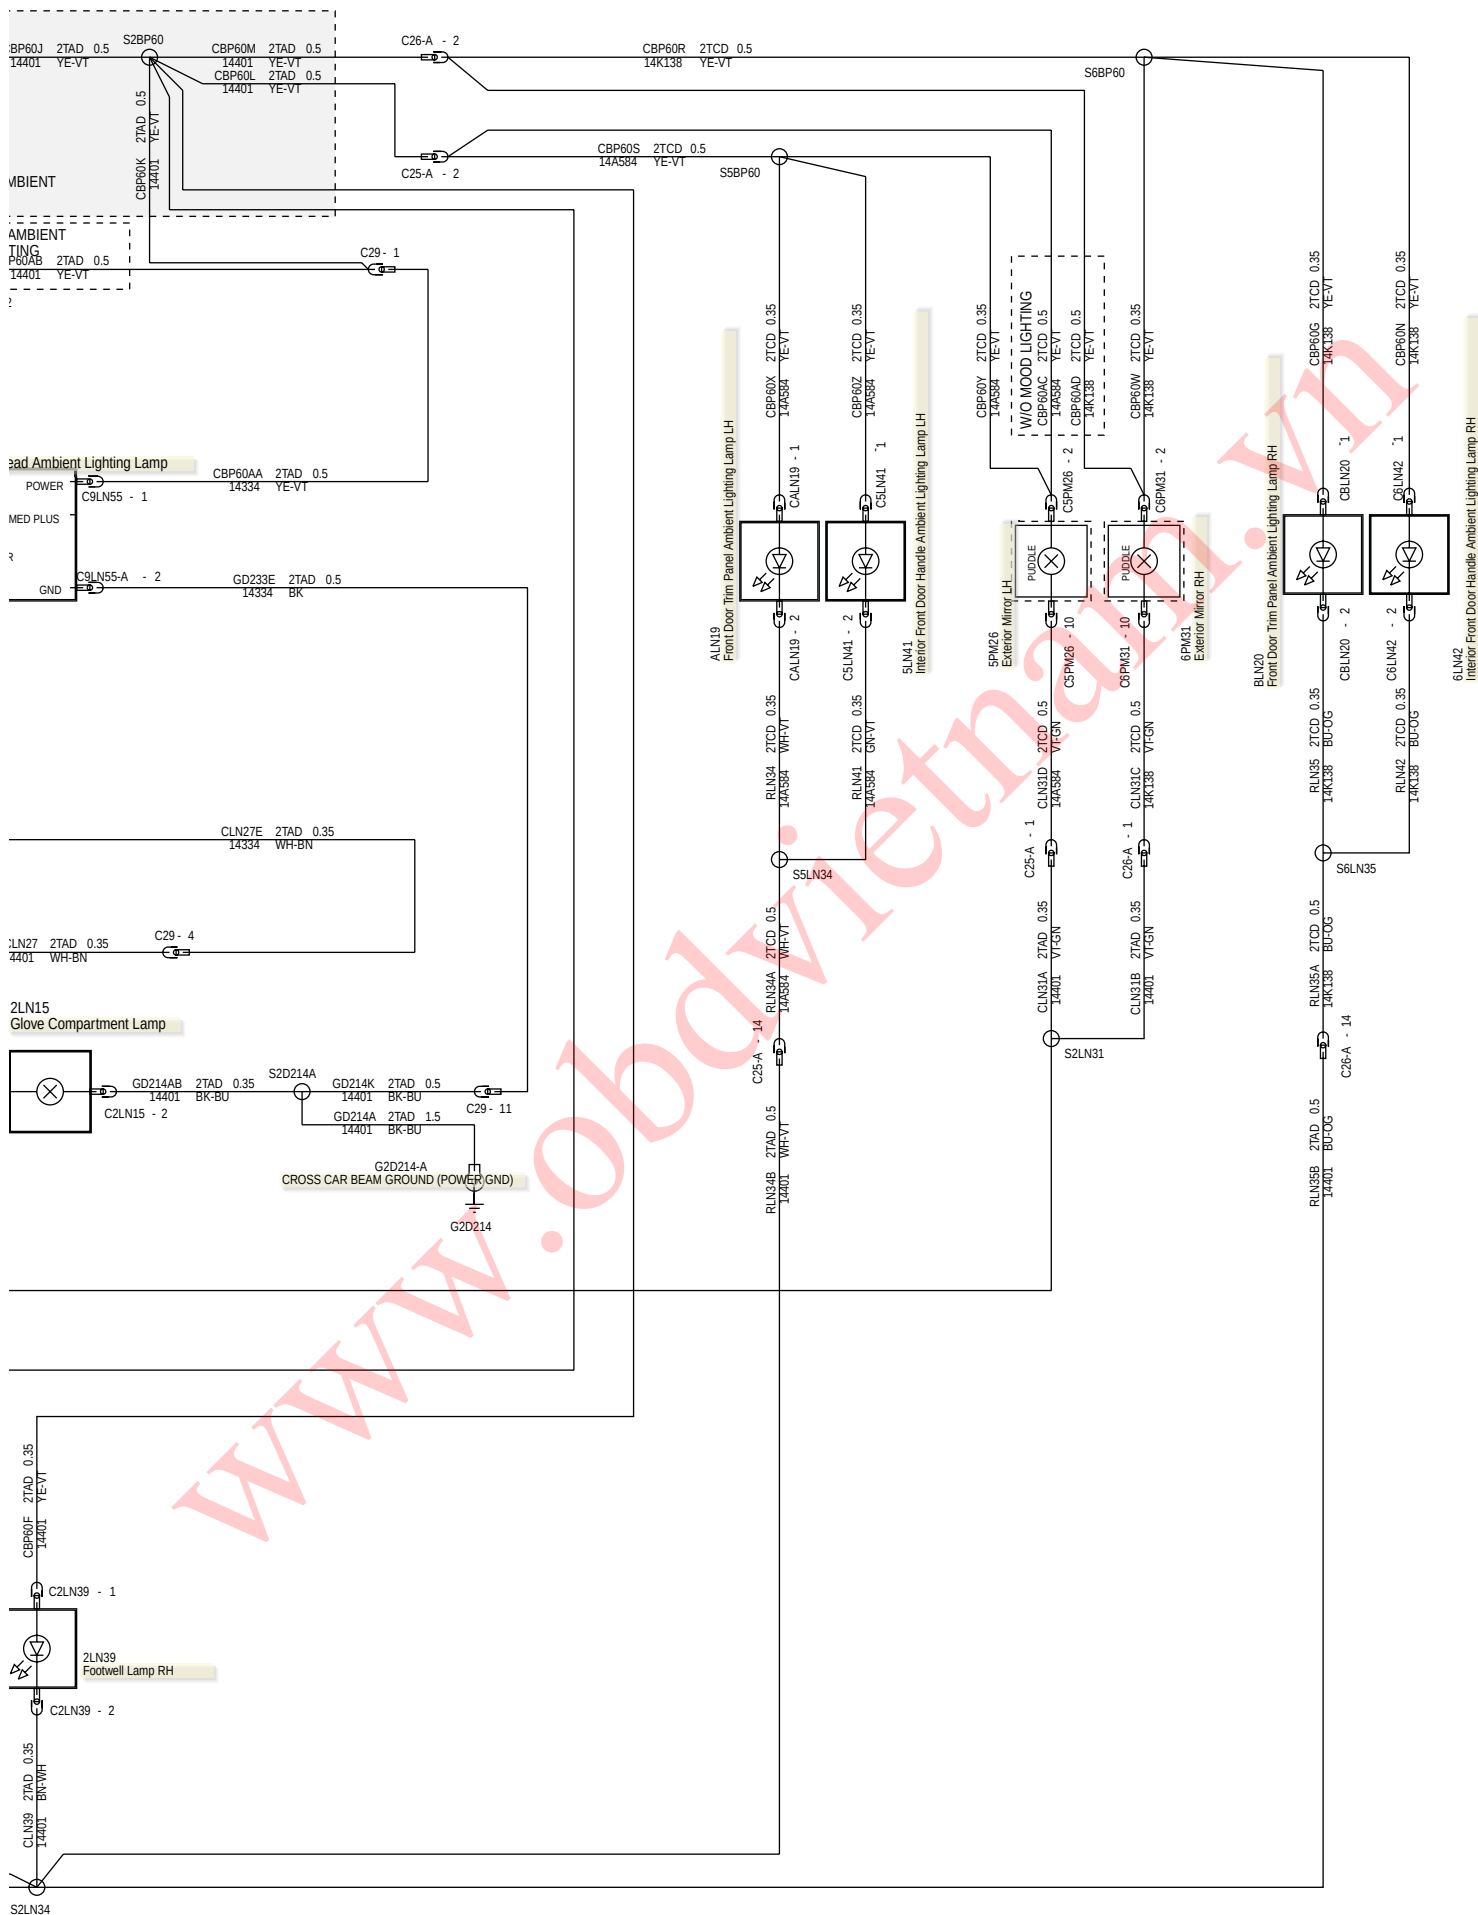


417-02-11 Courtesy and Demand Lighting—Double Cab, RHD 4WD/RHD RWD

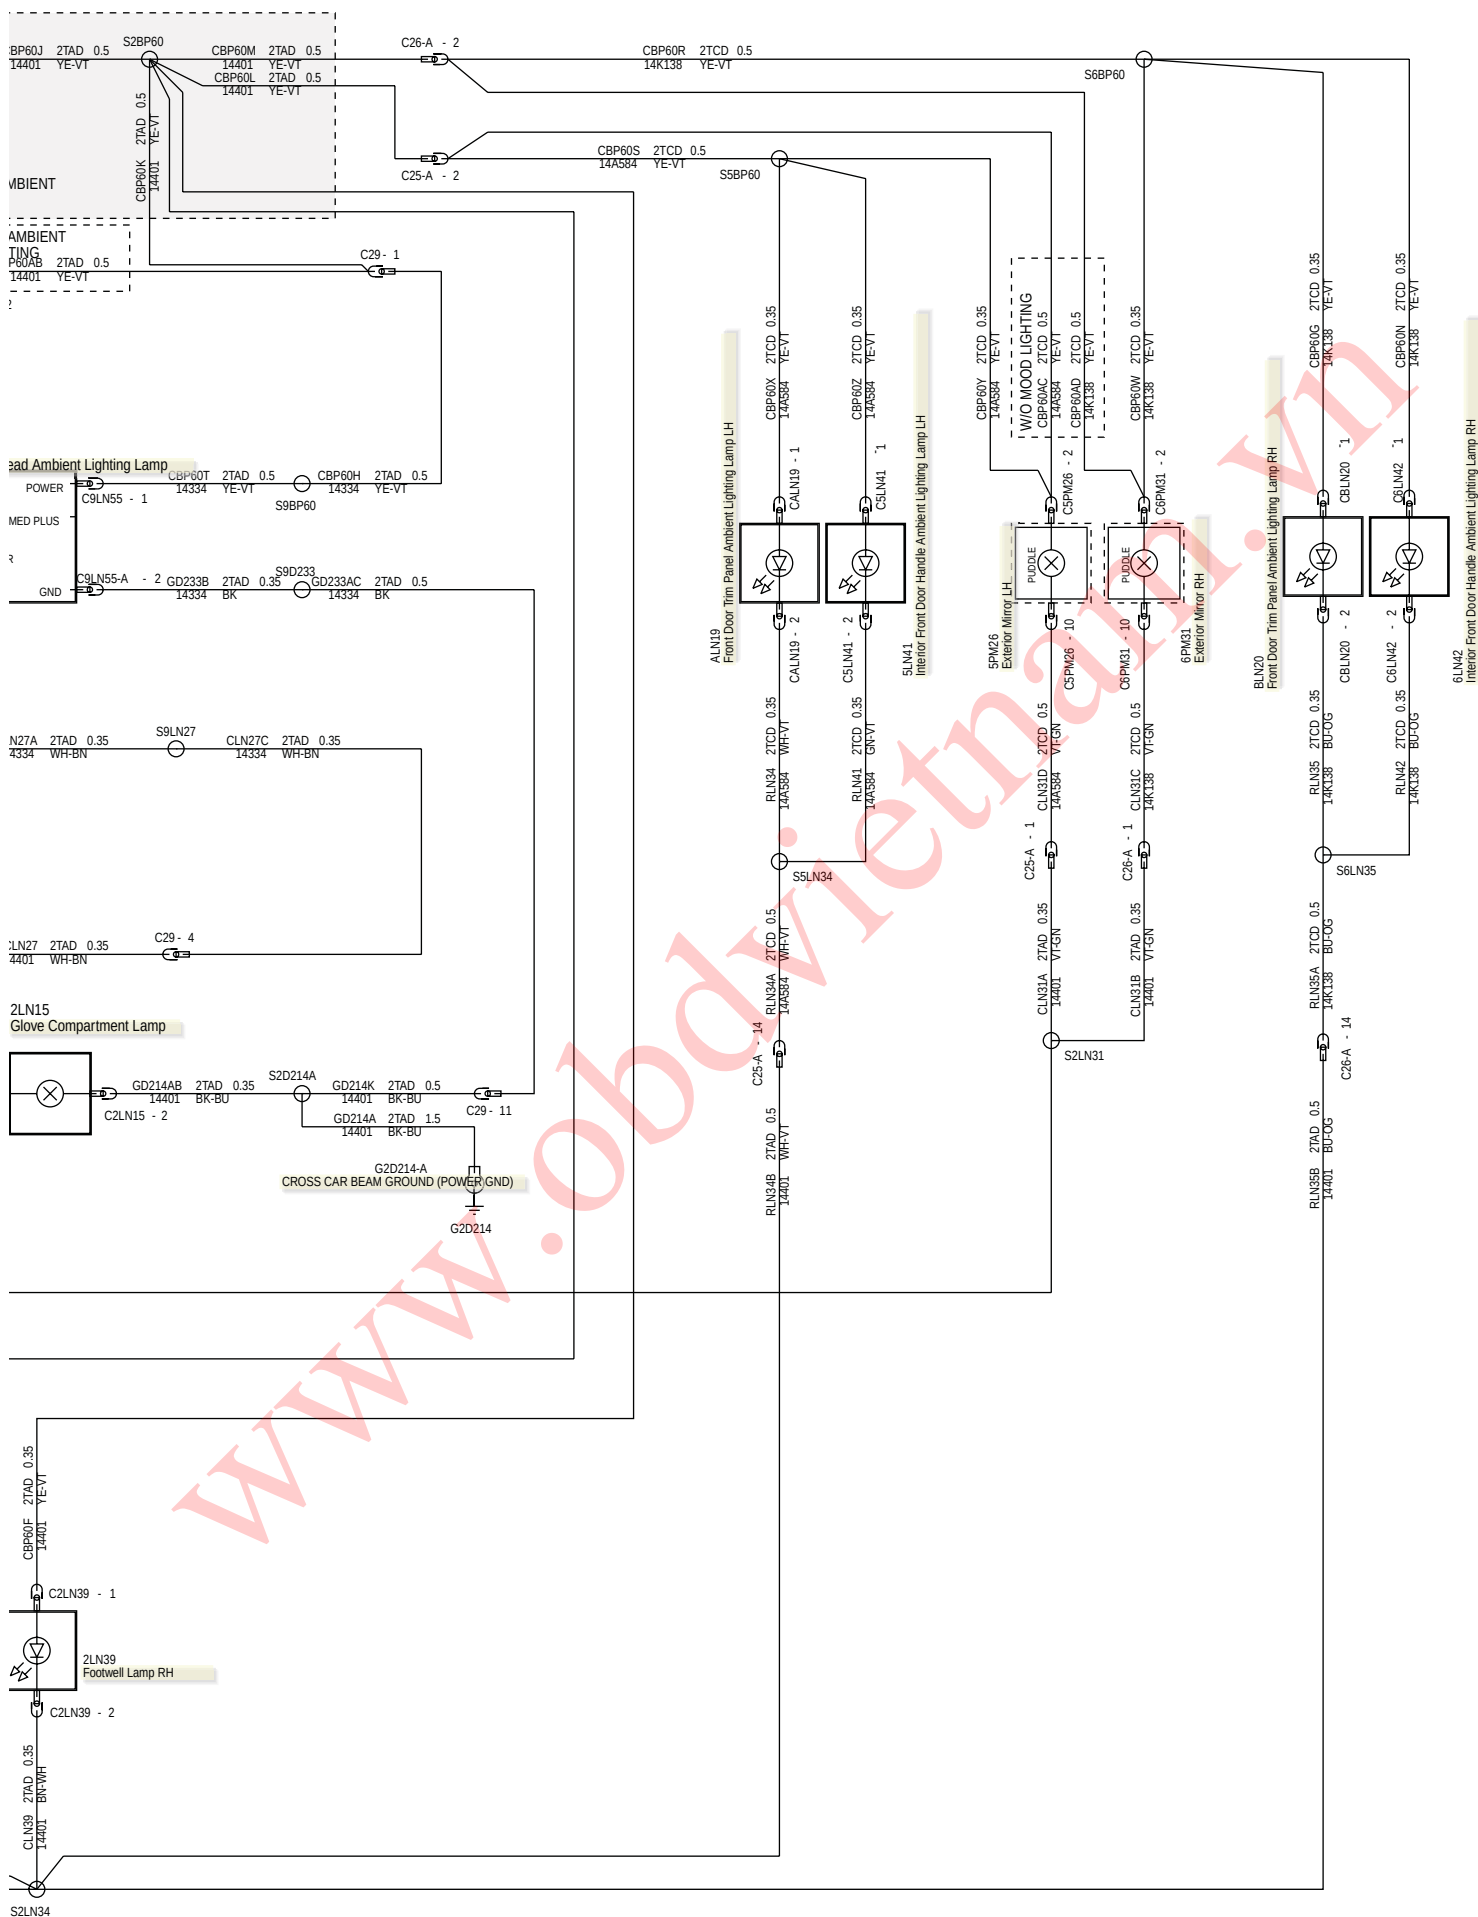


417-02-12 Courtesy and Demand Lighting—Super Cab, RHD 4WD/RHD RWD

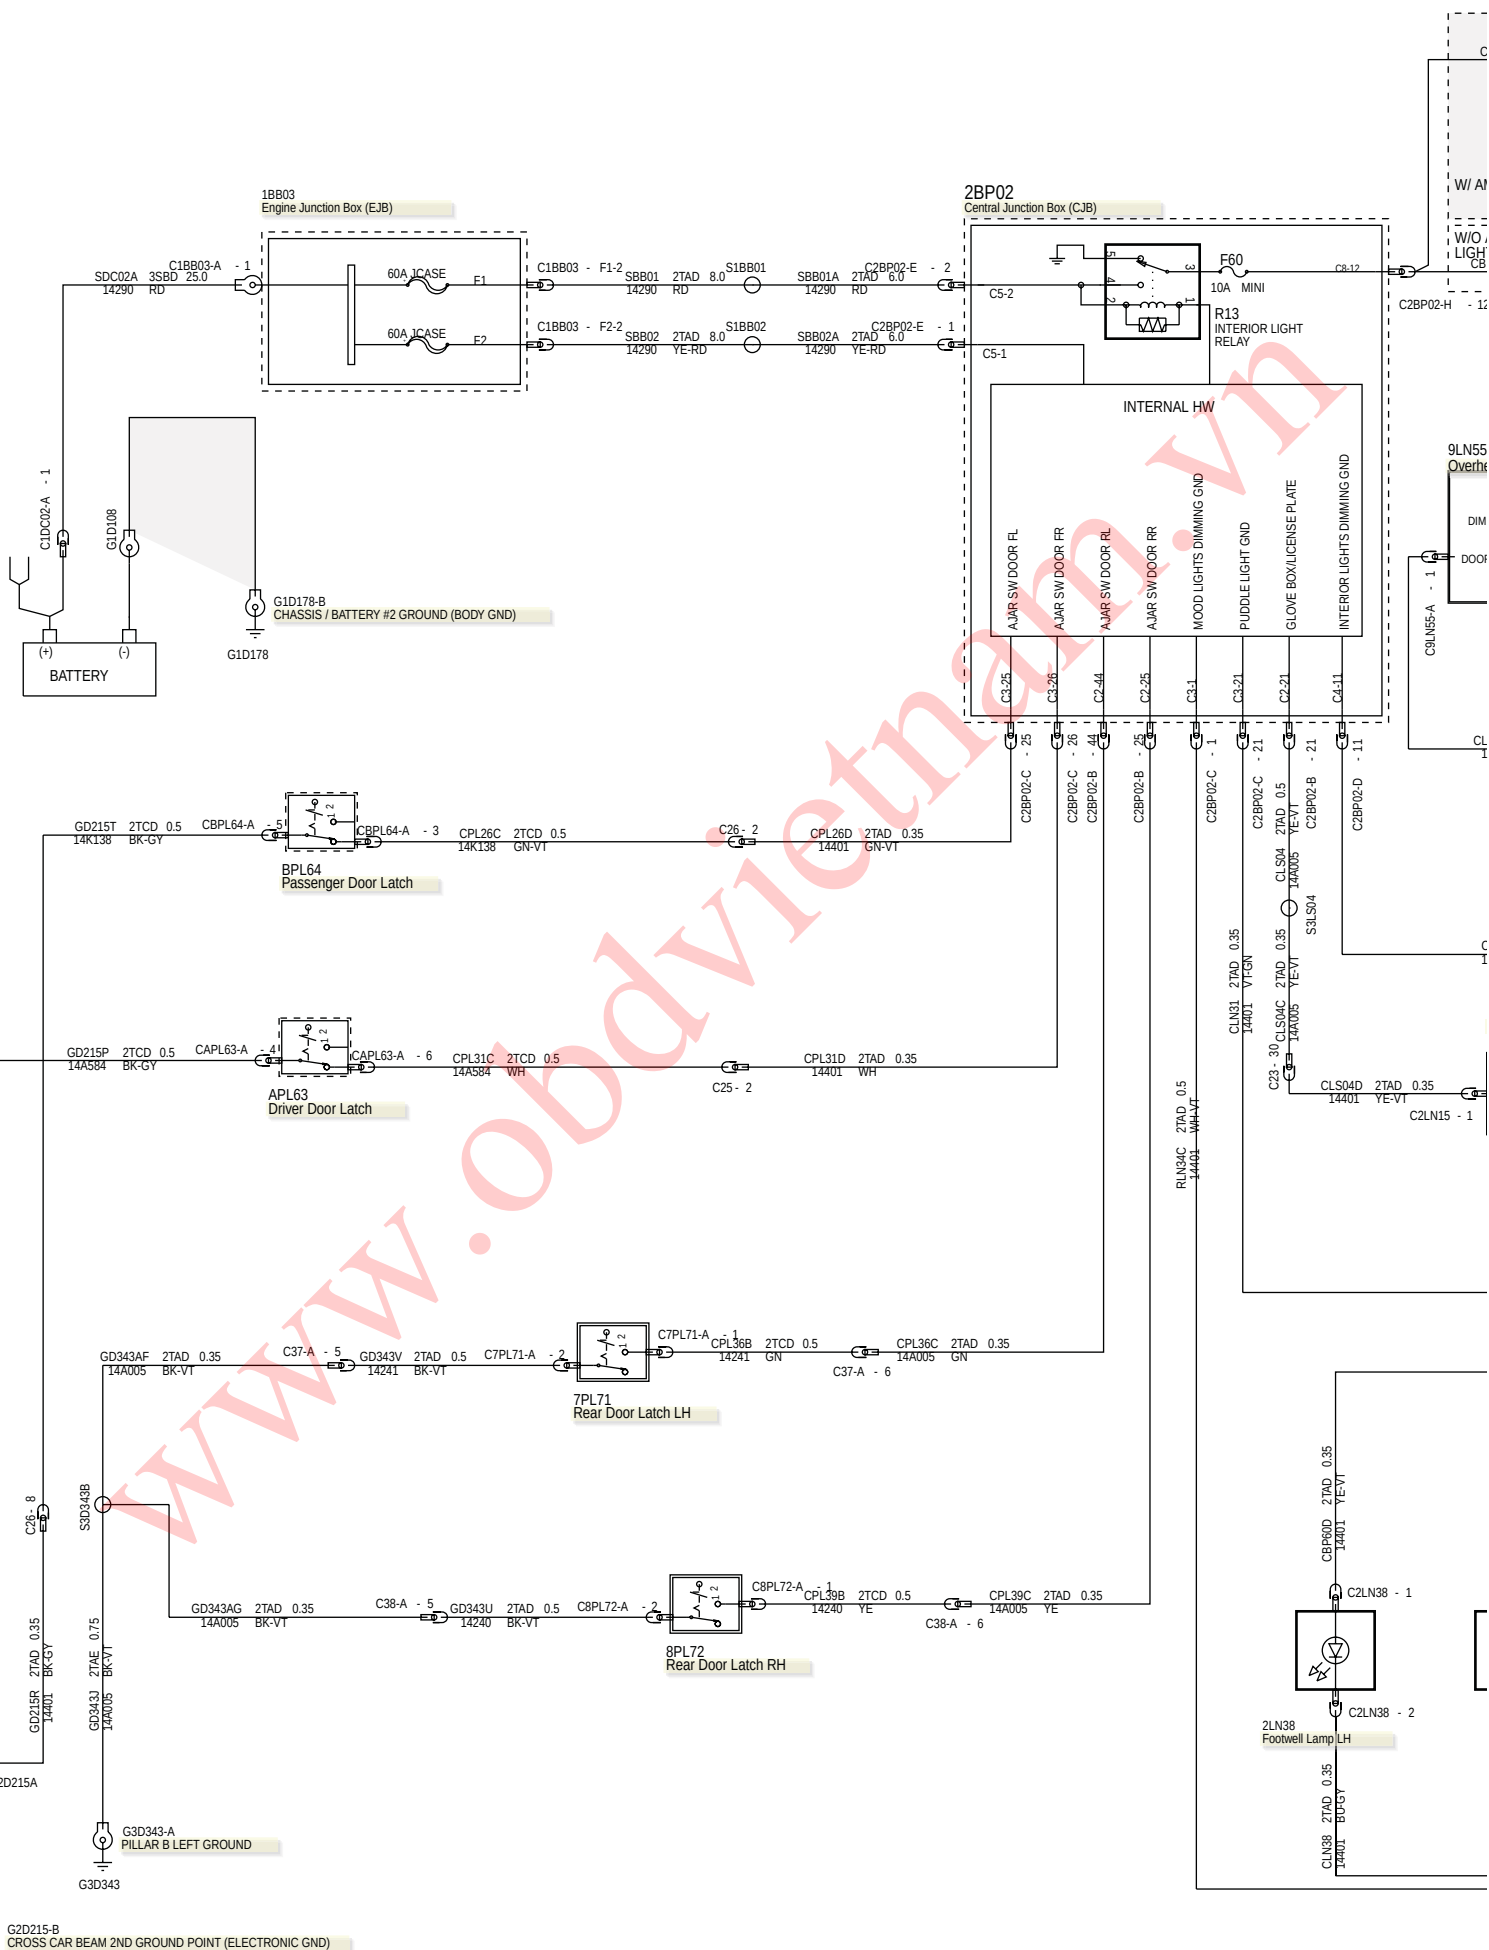


417-02-13 Courtesy and Demand Lighting—Super Cab, RHD 4WD/RHD RWD

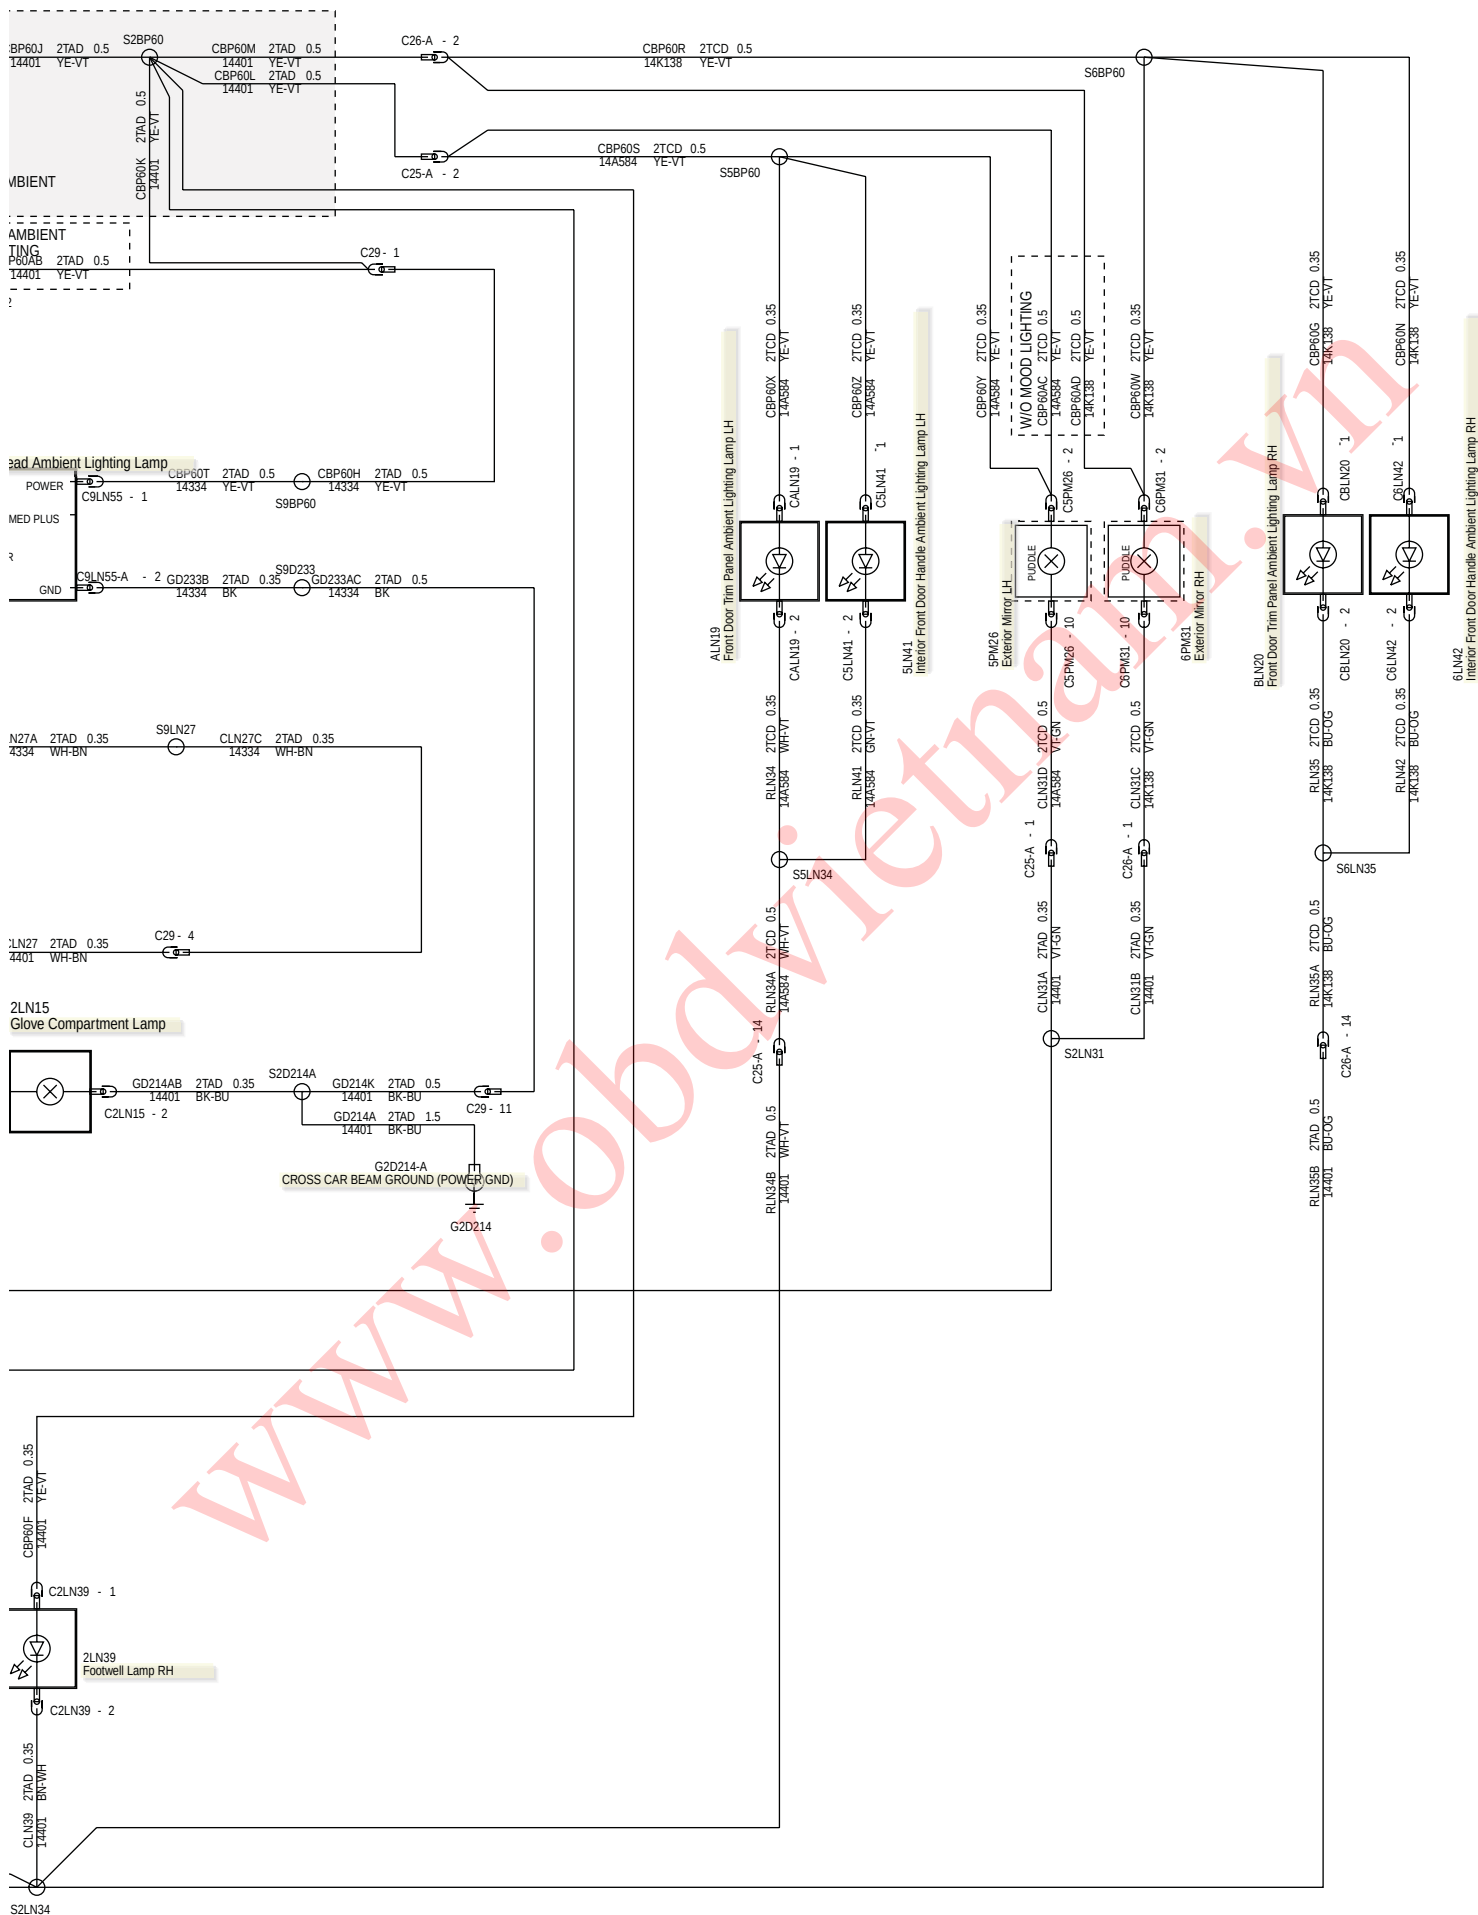


417-02-14 Instrument Cluster and Panel Illumination—LHD 4WD/LHD RWD

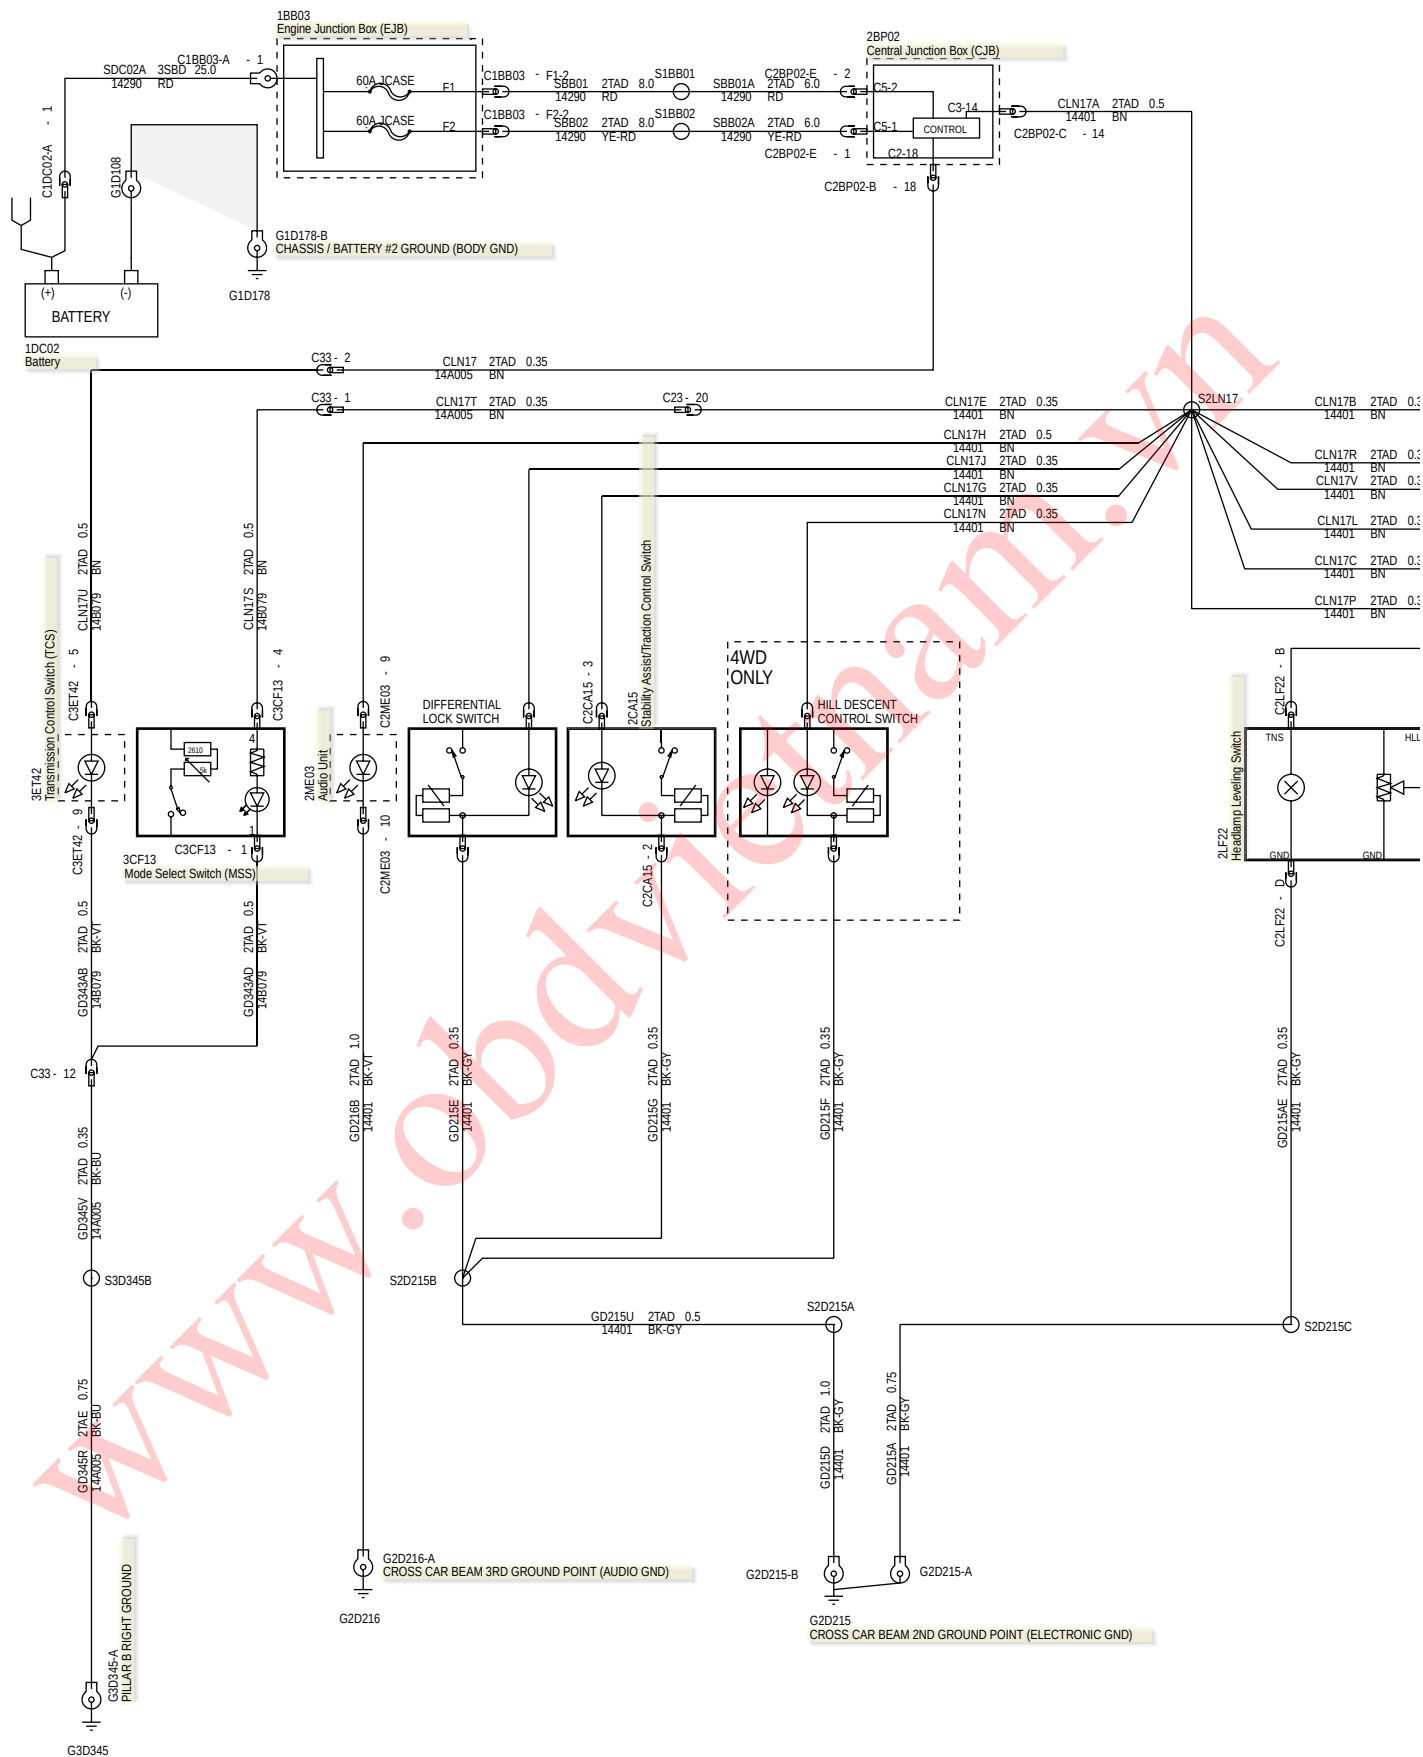


417-02-15 Instrument Cluster and Panel Illumination—LHD 4WD/LHD RWD

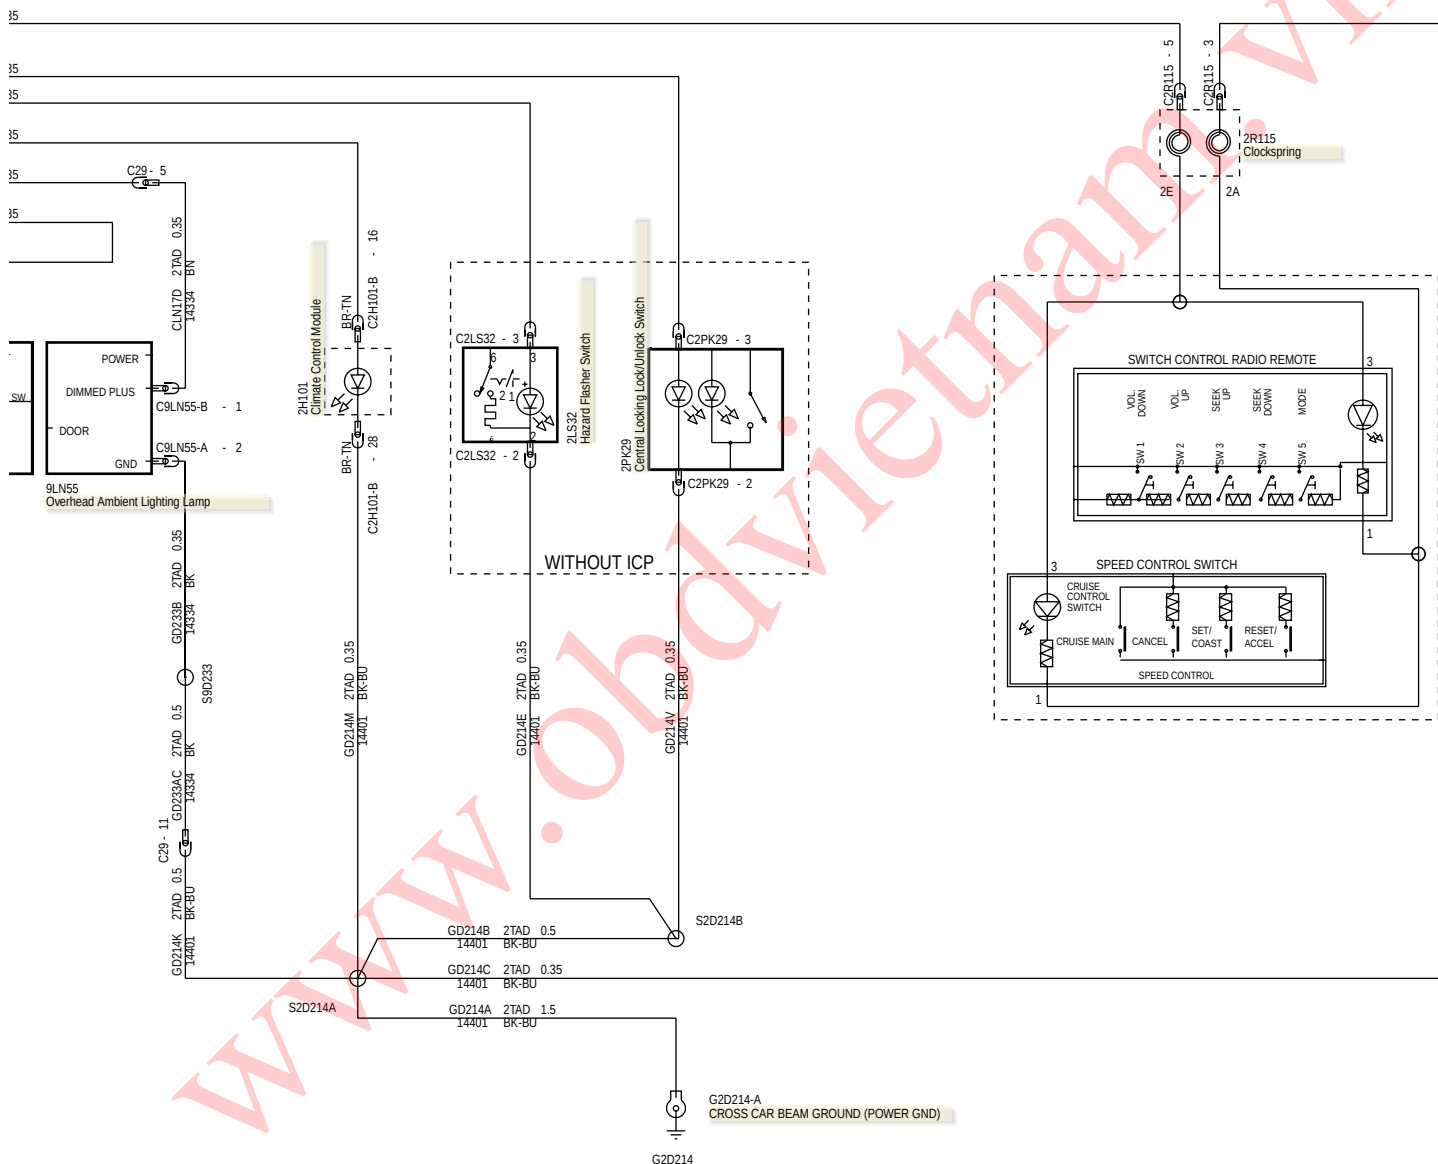


417-02-16 Instrument Cluster and Panel Illumination—RHD 4WD/RHD RWD

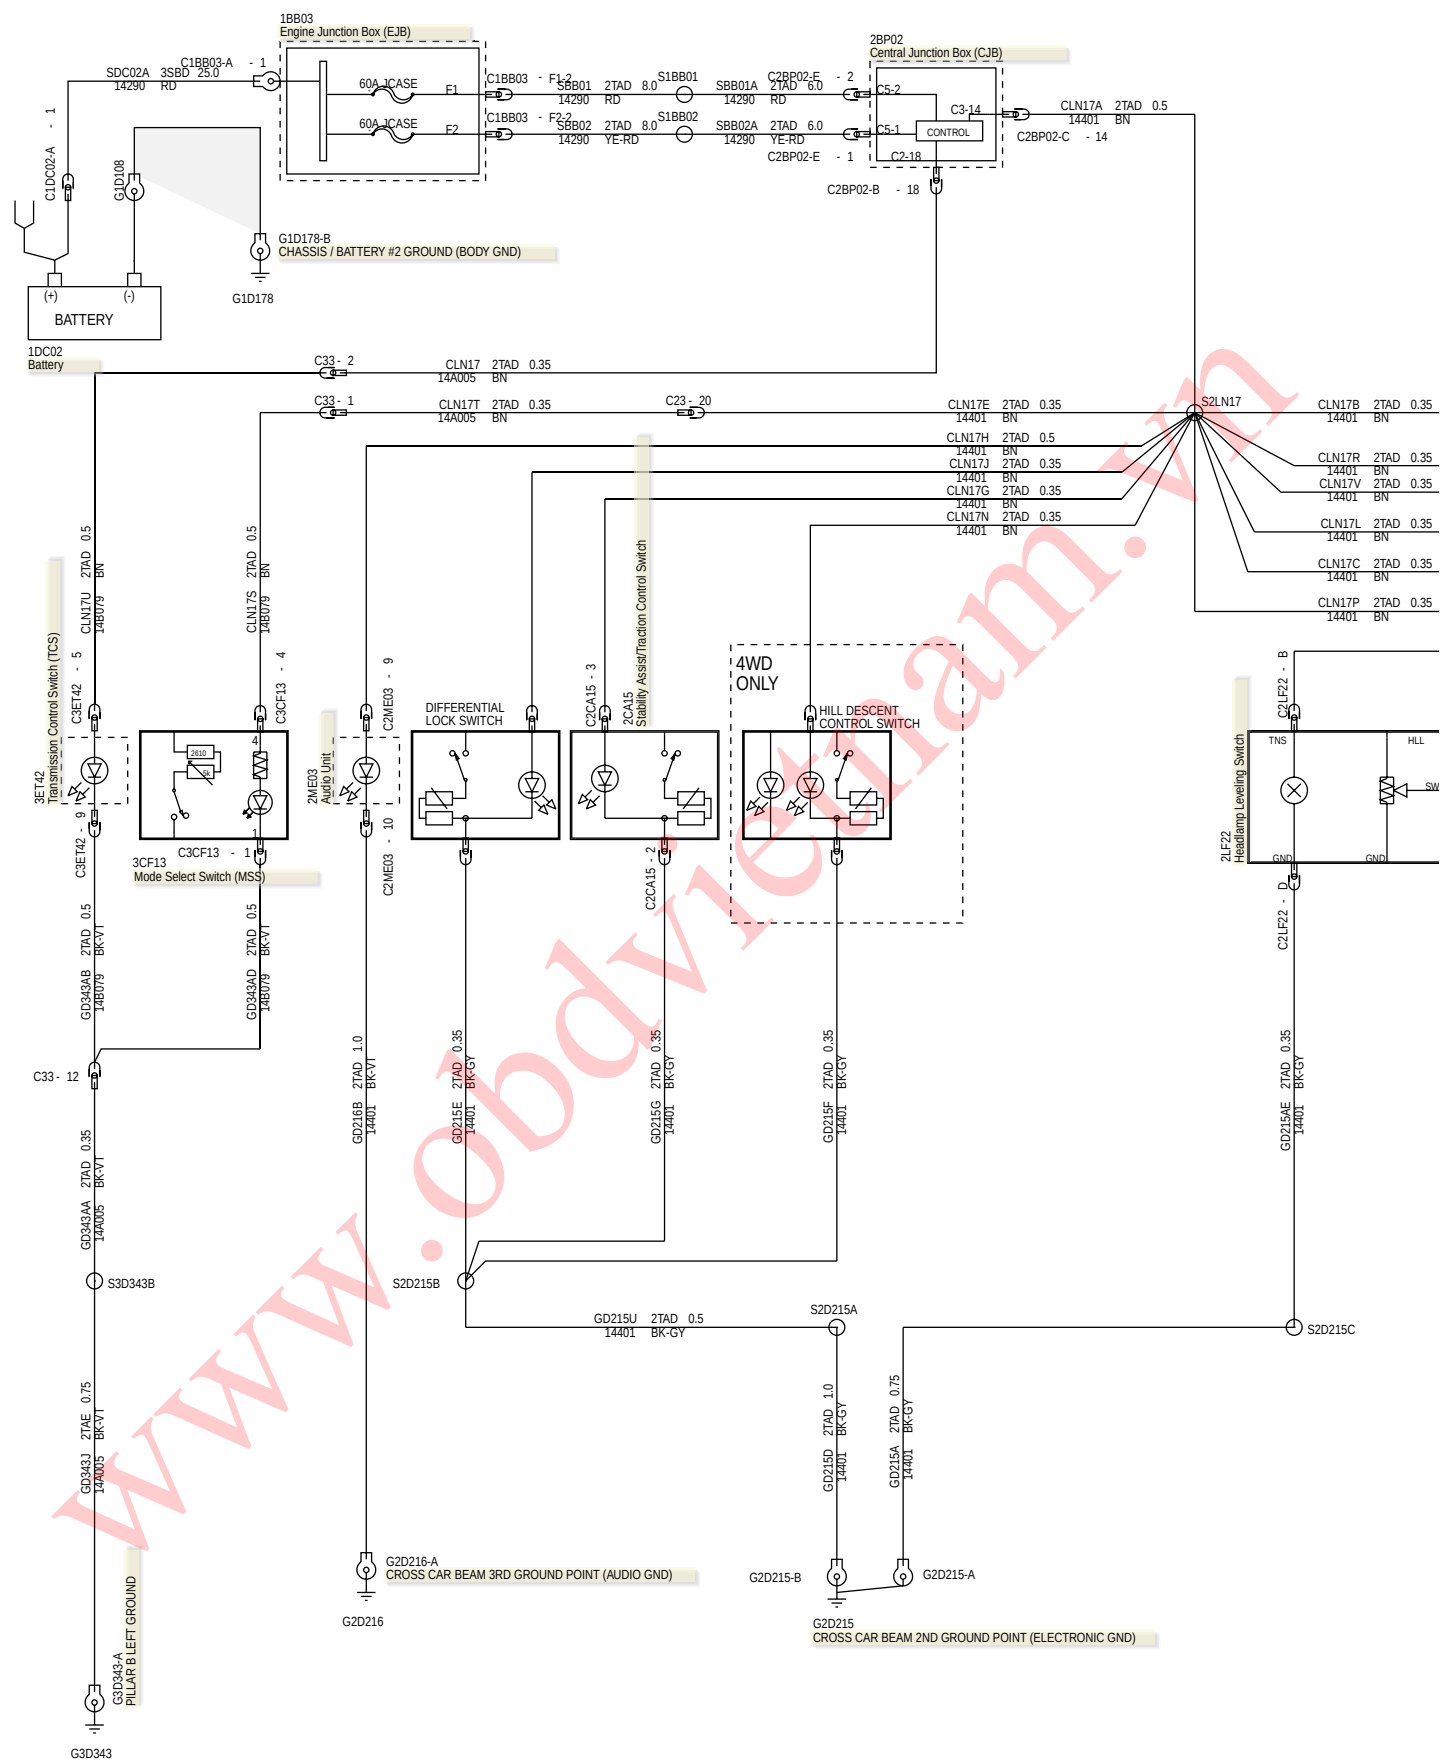



417-02-18

Footwell Lamp LH (G1404517)




3M5T-14489-ACB

C2LN38

TO IP FOOTWELL DRIVER

HARNESS 14401

Footwell Lamp RH (G1404521)




3M5T-14489-ACB

C2LN39

TO IP FOOTWELL PASSENGER

HARNESS 14401

Front Door Trim Panel Ambient Lighting Lamp LH (G1408819)




3M5T-14489-ACB

CALN19

TO DRIVER FRONT DOOR MAP POCKET

HARNESS 14A584

Front Door Trim Panel Ambient Lighting Lamp RH (G1408821)




3M5T-14489-ACB

CBLN20

TO PASSENGER FRONT DOOR MAP POCKET

HARNESS 14K138


Glove Compartment Lamp (G1404522)



C2LN15
WBS-AL-10TB
TO GLOVE BOX LAMP
HARNESS 14401

417-02-19

Interior Front Door Handle Ambient Lighting Lamp LH (G1404528)




3M5T-14489-ACB

C5LN41

TO DRIVER FRONT DOOR RELEASE HANDLE

HARNESS 14A584

Interior Front Door Handle Ambient Lighting Lamp RH (G1404529)




3M5T-14489-ACB

C6LN42

TO PASSENGER FRONT DOOR RELEASE HANDLE

HARNESS 14K138


Overhead Ambient Lighting Lamp (G1405457)



TO OVERHEAD CONSOLE 1

HARNESS 14334

Overhead Ambient Lighting Lamp—A (G1405458)



81AG-14488-GA

C9LN55-A

TO OVERHEAD CONSOLE 2

HARNESS 14334

Overhead Ambient Lighting Lamp—B (G1405459)




6M5T-14489-GAA

C9LN55-B

TO OVERHEAD CONSOLE MOOD LIGHTING

HARNESS 14334

Rear Interior Lamp (G1404530)




TO INTERIOR LAMP DOME 1

HARNESS 14334

417-02-20

Rear Interior Lamp—A (G1404531)

PIN 2 => GD233AB BK 0.35 2TAD



81AG-14488-GA

C9LN14-A

TO INTERIOR LAMP DOME 2

HARNESS 14334

SECTION 417-04 Daytime Running Lamps (DRL)

VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS


PAGE

ELECTRICAL CONNECTORS

Daytime Running Lamp LH.....	417-04-2
Daytime Running Lamp RH.....	417-04-2


417-04-2

Daytime Running Lamp LH (G1404537)

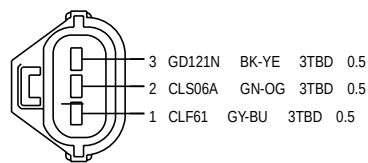

6189-0177
C1LF17
TO DRL POSITION LAMP LH
HARNESS 14290

Daytime Running Lamp RH (G1404538)

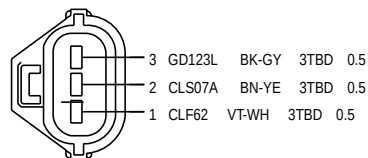


6189-0177
C1LF18
TO DRL POSITION LAMP RH
HARNESS 14290

SECTION 418-00 Module Communications Network


VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS	PAGE
ELECTRICAL SCHEMATICS	
Diagnostics.....	418-00-2
Communications Network - High-Speed (HS) Controller Area Network (CAN) Bus — Vehicles With: 5-Speed Manual Transmission - MT75/6-Speed Manual Transmission - MT82.....	418-00-4
Communications Network - High-Speed (HS) Controller Area Network (CAN) Bus — Vehicles With: 6-Speed Automatic Transaxle - 6R80.....	418-00-6
Communications Network - Mid-Speed (MS) Controller Area Network (CAN) Bus.....	418-00-8
Communications Network - Multimedia (MM) Controller Area Network (CAN) Bus.....	418-00-10
Communications Network - Local Interconnect Network (LIN) Bus — 2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma/3.2L Duratorq-TDCi (148kW/200PS) - Puma, LHD 4WD/LHD RWD.....	418-00-12
Communications Network - Local Interconnect Network (LIN) Bus — 2.5L Duratec-HE (122kW/165PS) - MI4, LHD 4WD/LHD RWD.....	418-00-14
Communications Network - Local Interconnect Network (LIN) Bus — 2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma/3.2L Duratorq-TDCi (148kW/200PS) - Puma, RHD 4WD/RHD RWD.....	418-00-16
Communications Network - Local Interconnect Network (LIN) Bus — 2.5L Duratec-HE (122kW/165PS) - MI4, RHD 4WD/RHD RWD.....	418-00-18
ELECTRICAL CONNECTORS	
Central Junction Box (CJB) — A.....	418-00-20
Central Junction Box (CJB) — B.....	418-00-20
Central Junction Box (CJB) — C.....	418-00-21
Central Junction Box (CJB) — D.....	418-00-21
Central Junction Box (CJB) — E.....	418-00-21
Central Junction Box (CJB) — F.....	418-00-22
Central Junction Box (CJB) — G.....	418-00-22
Central Junction Box (CJB) — H.....	418-00-22
Data Link Connector (DLC).....	418-00-23
Engine Junction Box (EJB).....	418-00-24
Engine Junction Box (EJB) — A.....	418-00-24


418-00-2 Diagnostics

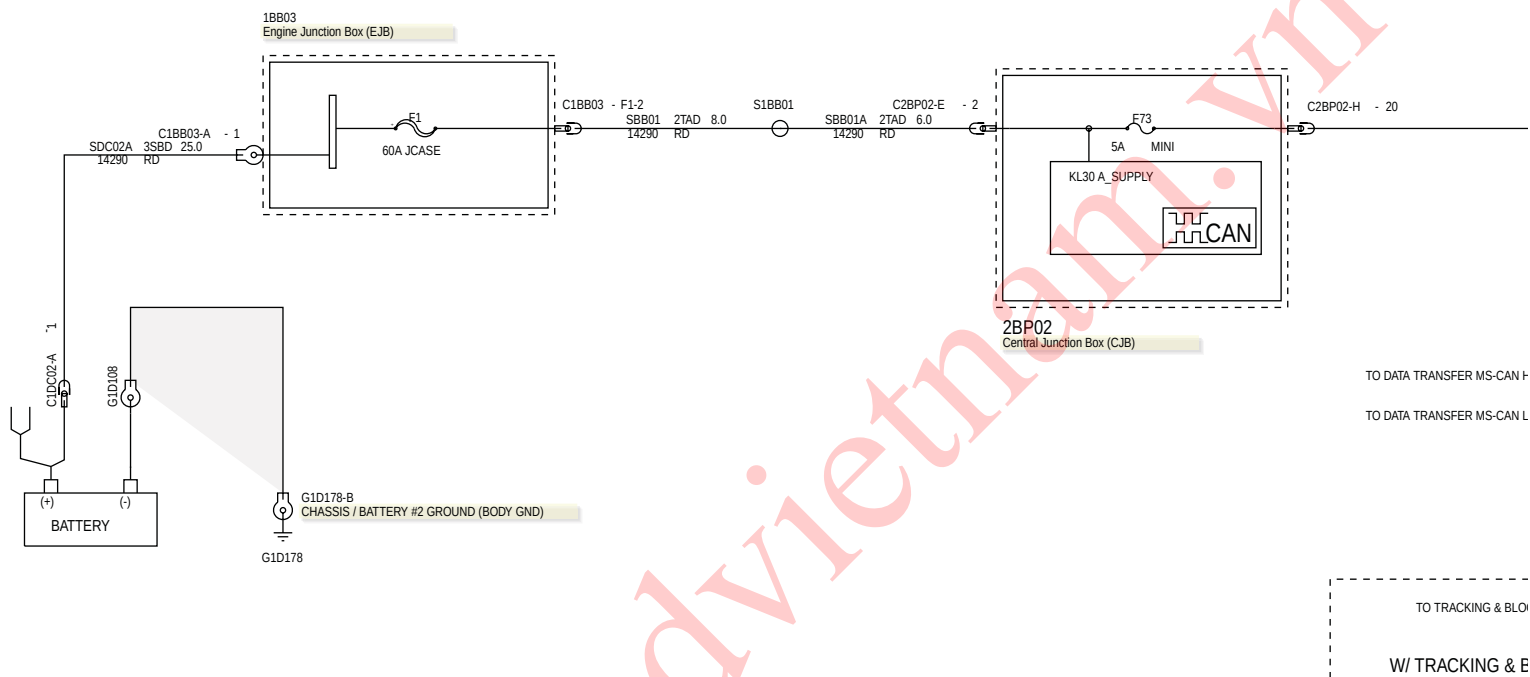


418-00-3 Diagnostics

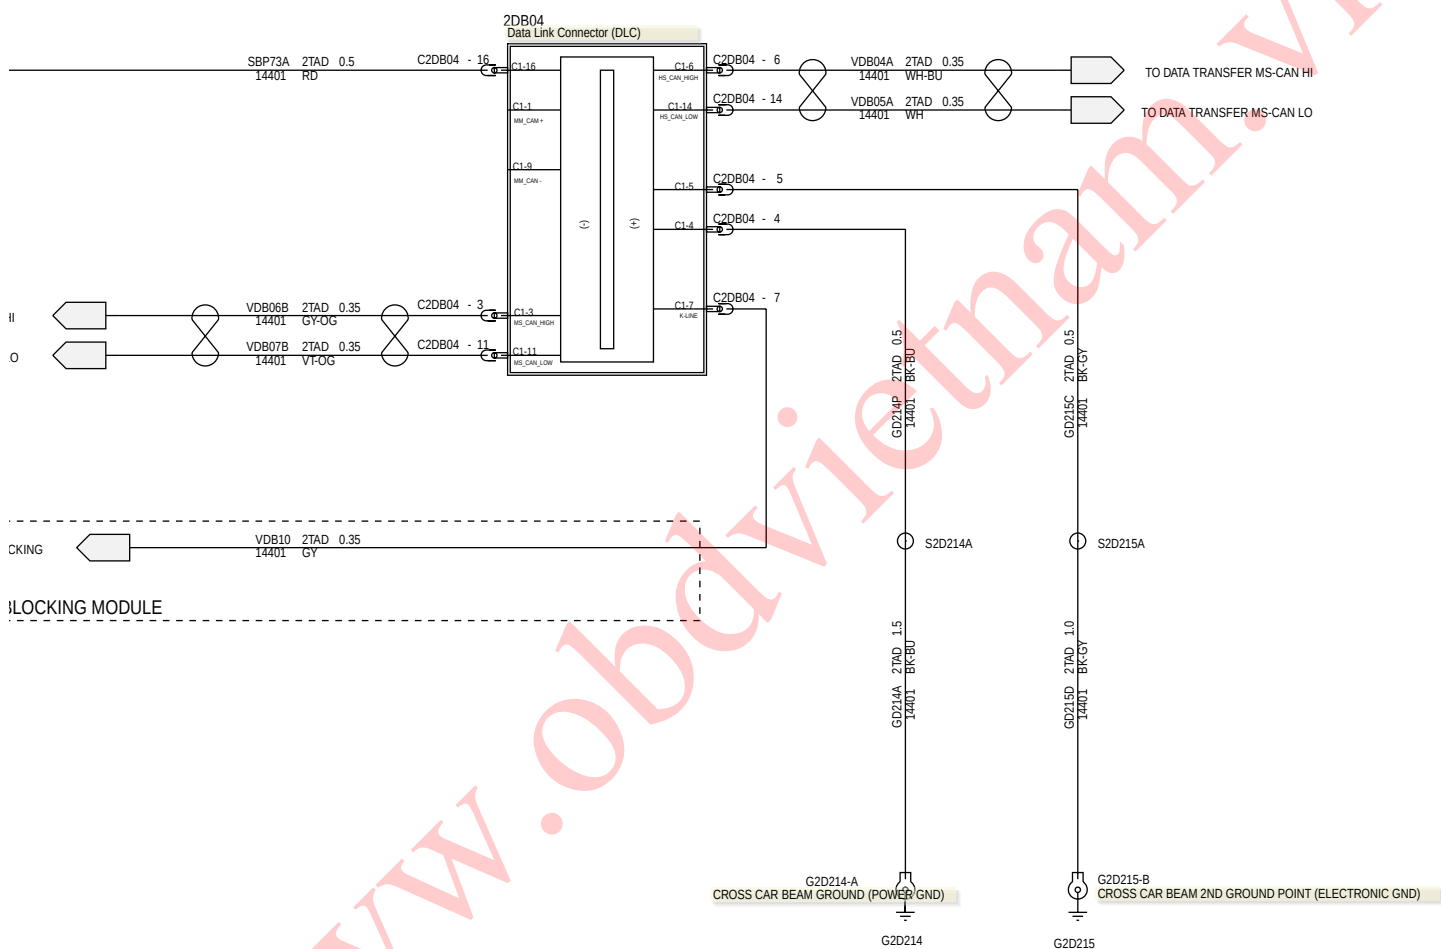


418-00-4 Communications Network - High-Speed (HS) Controller Area Network (CAN) Bus—Vehicles With: 5-Speed Manual Transmission - MT75/6-Speed Manual Transmission - MT82

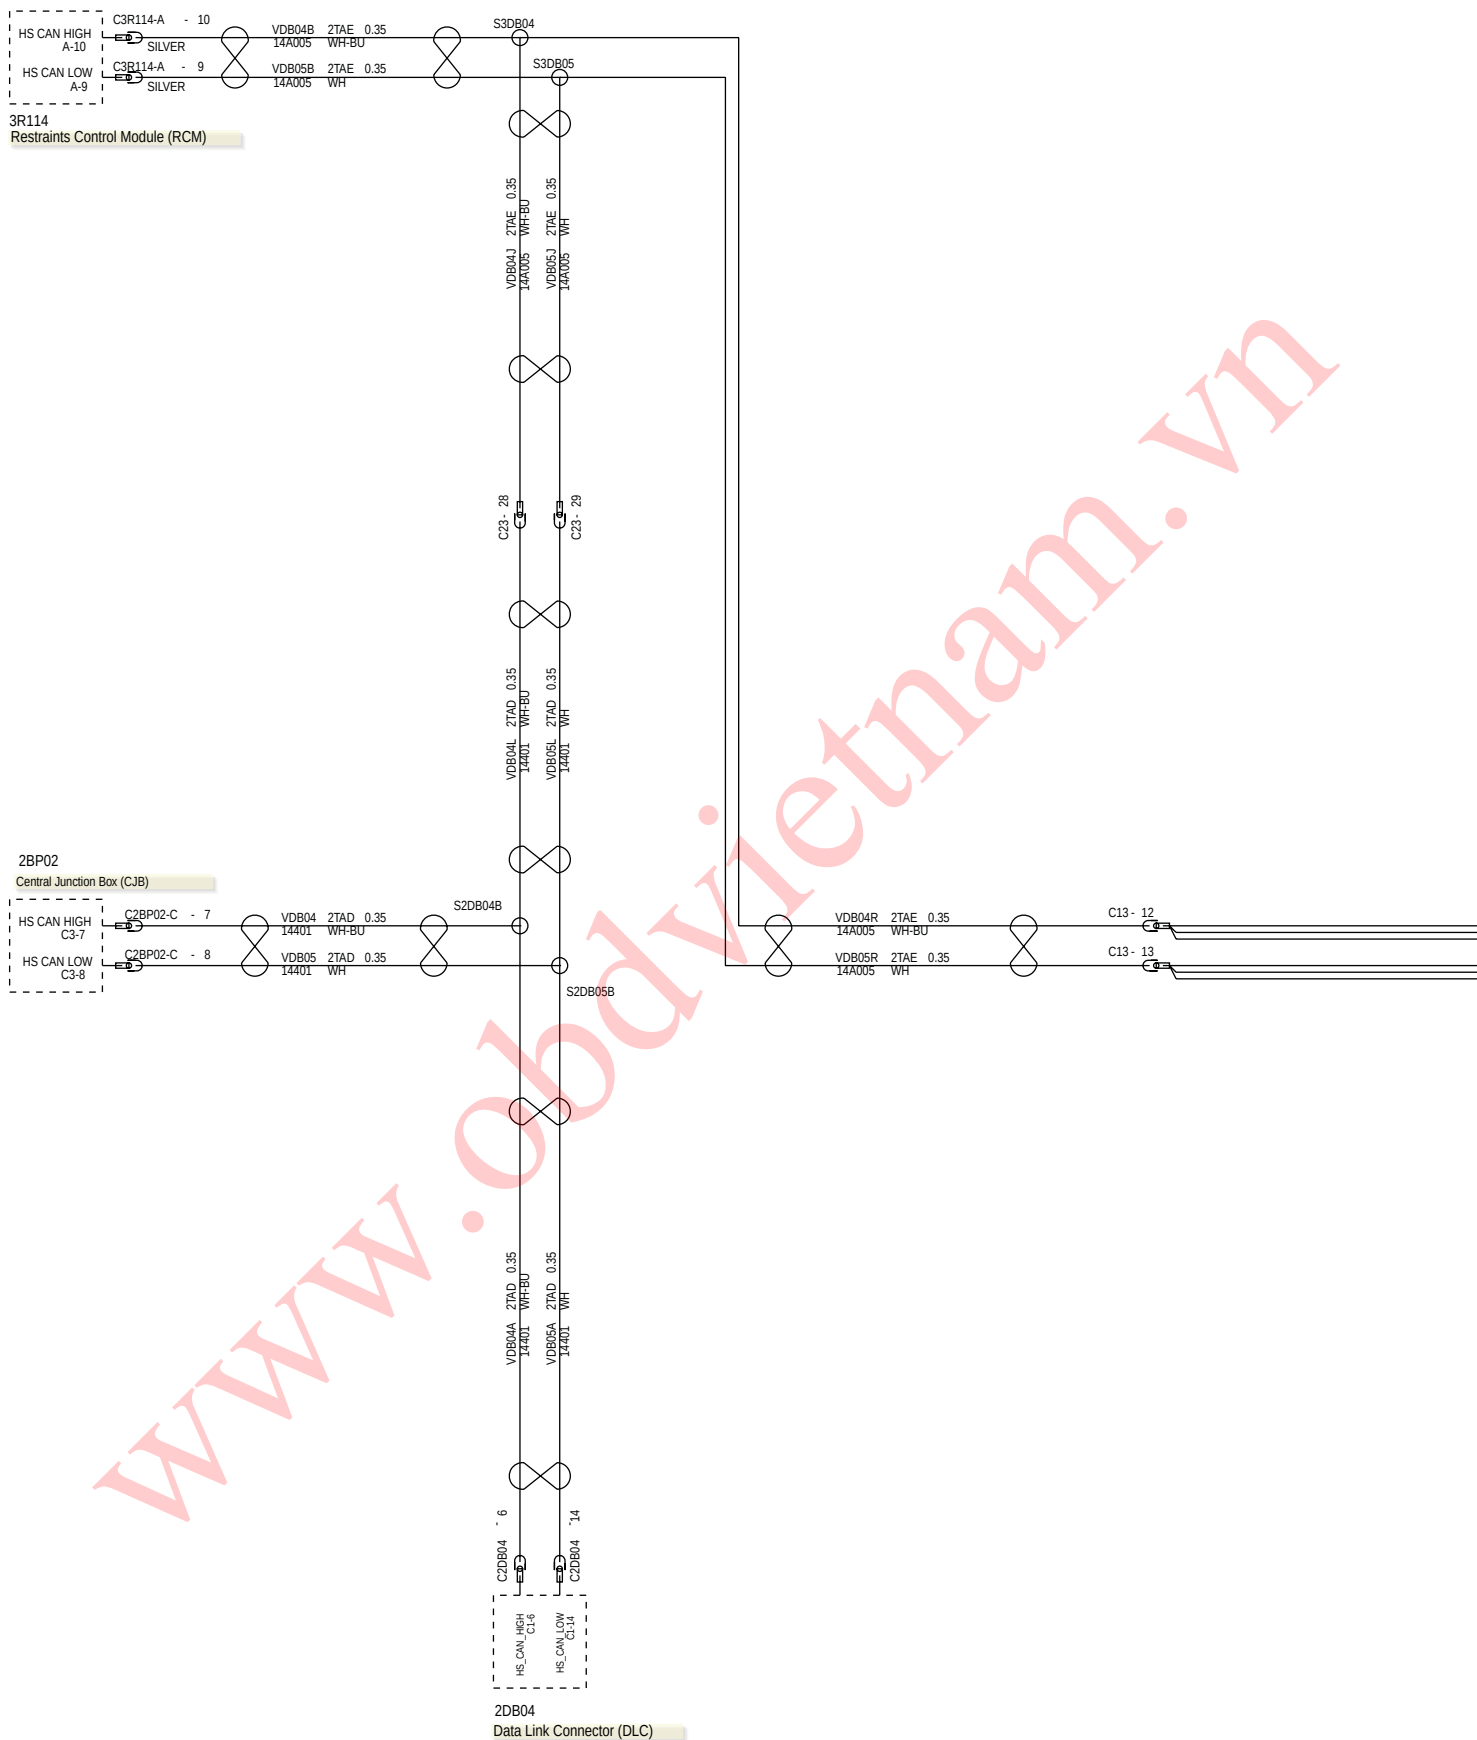


418-00-5 Communications Network - High-Speed (HS) Controller Area Network (CAN) Bus—Vehicles With: 5-Speed Manual Transmission - MT75/6-Speed Manual Transmission - MT82

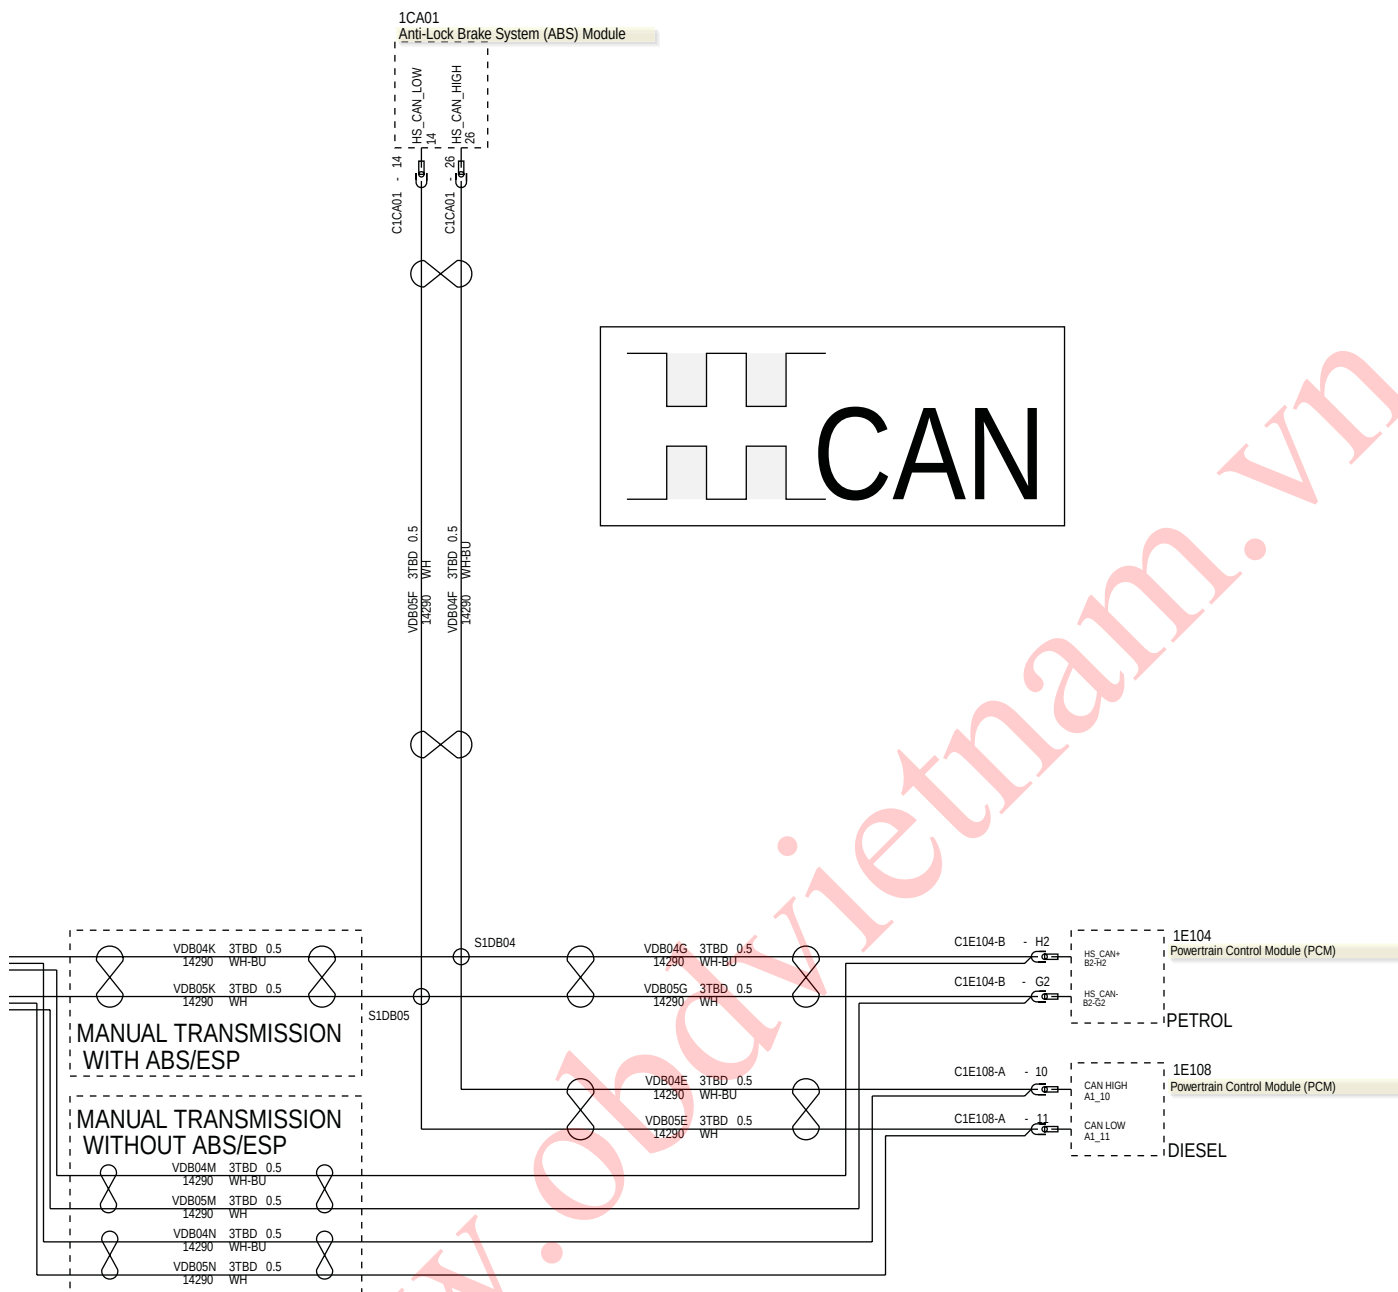


418-00-6 Communications Network - High-Speed (HS) Controller Area Network (CAN) Bus—Vehicles With: 6-Speed Automatic Transaxle - 6R80

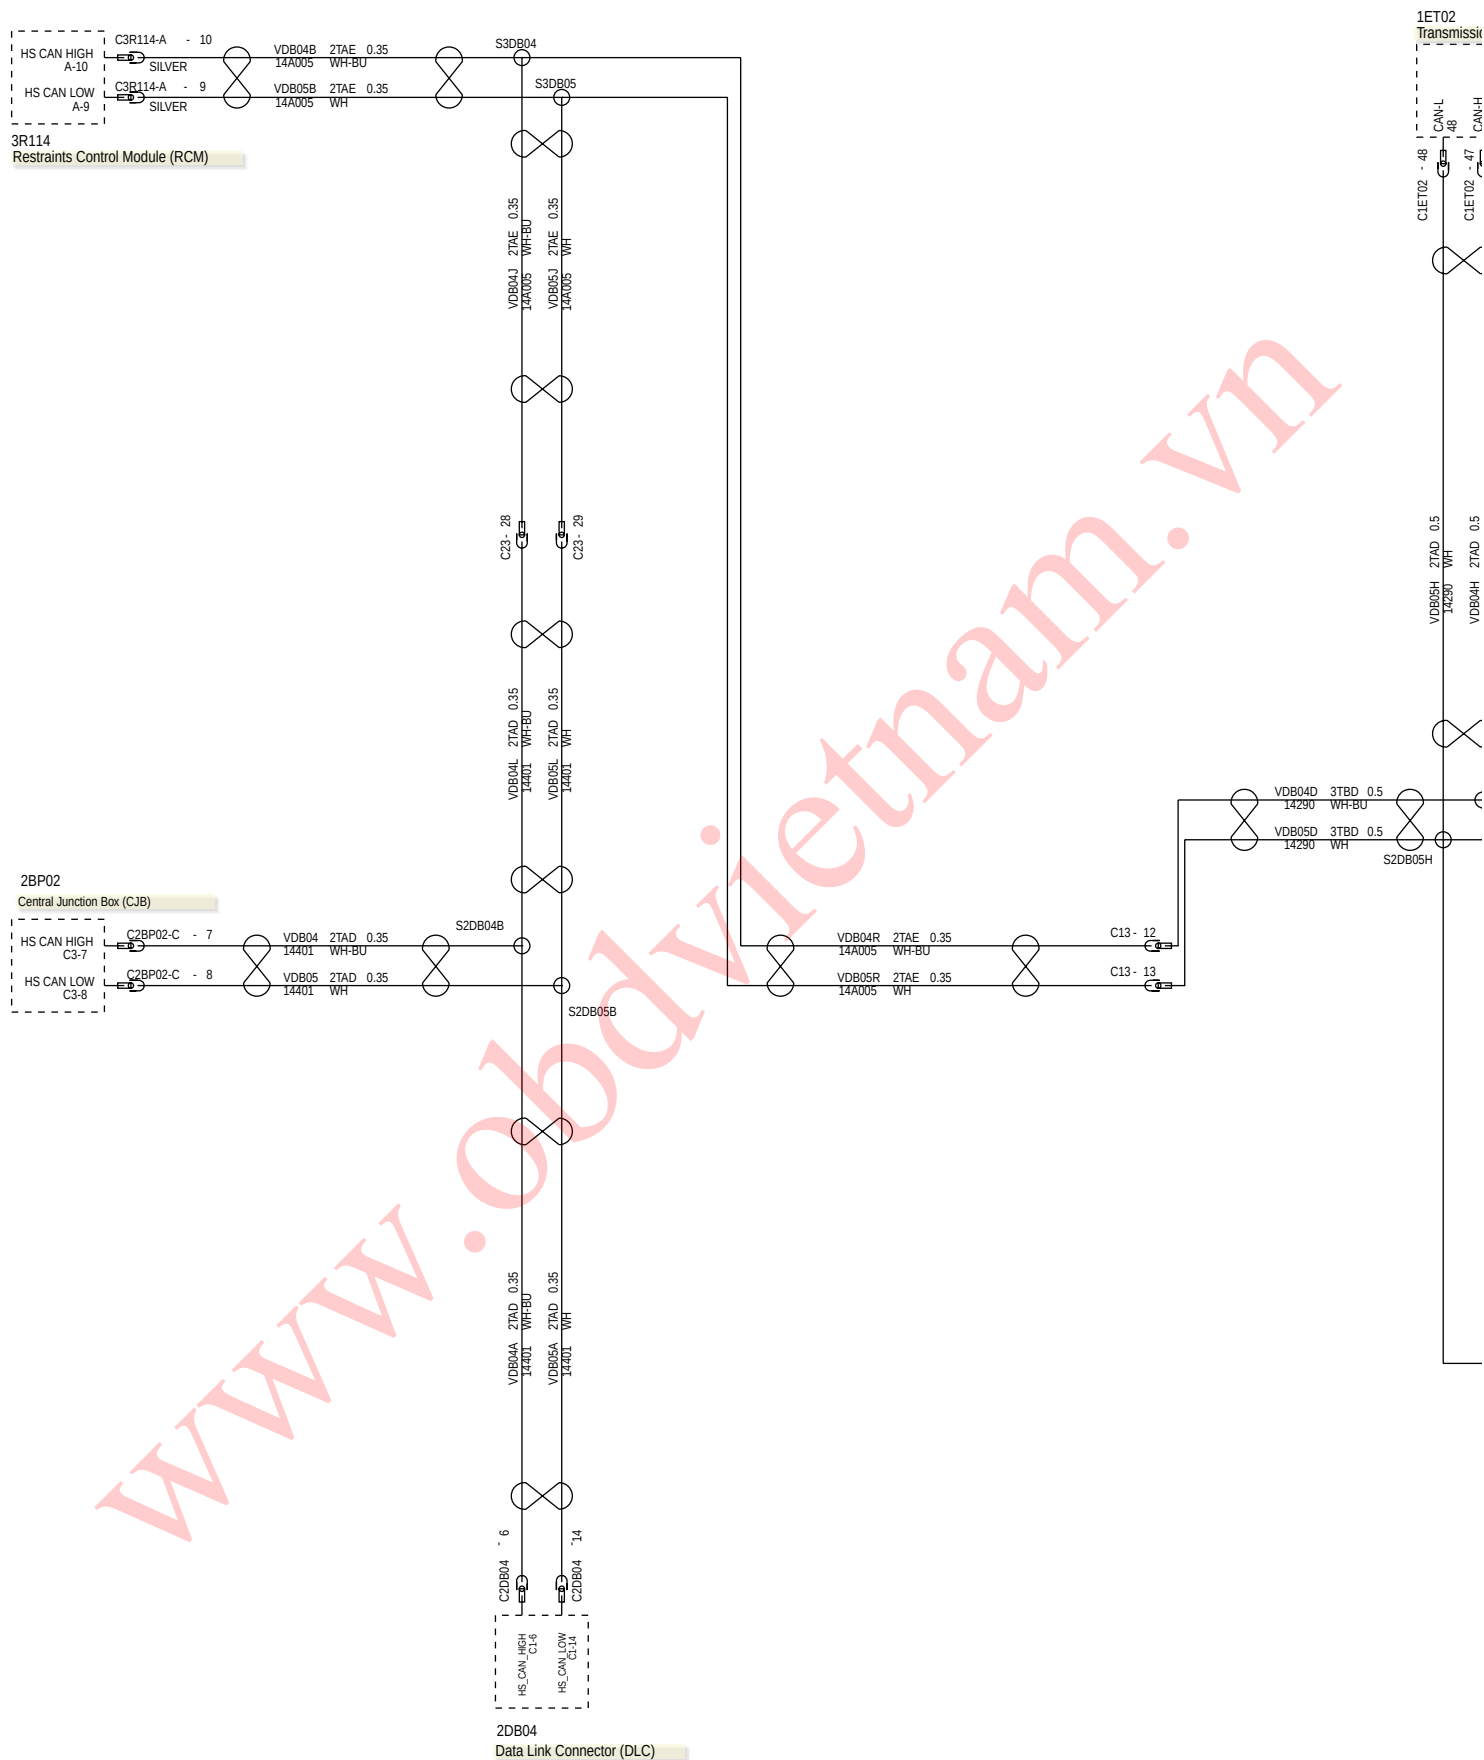


418-00-7 Communications Network - High-Speed (HS) Controller Area Network (CAN) Bus—Vehicles With: 6-Speed Automatic Transaxle - 6R80

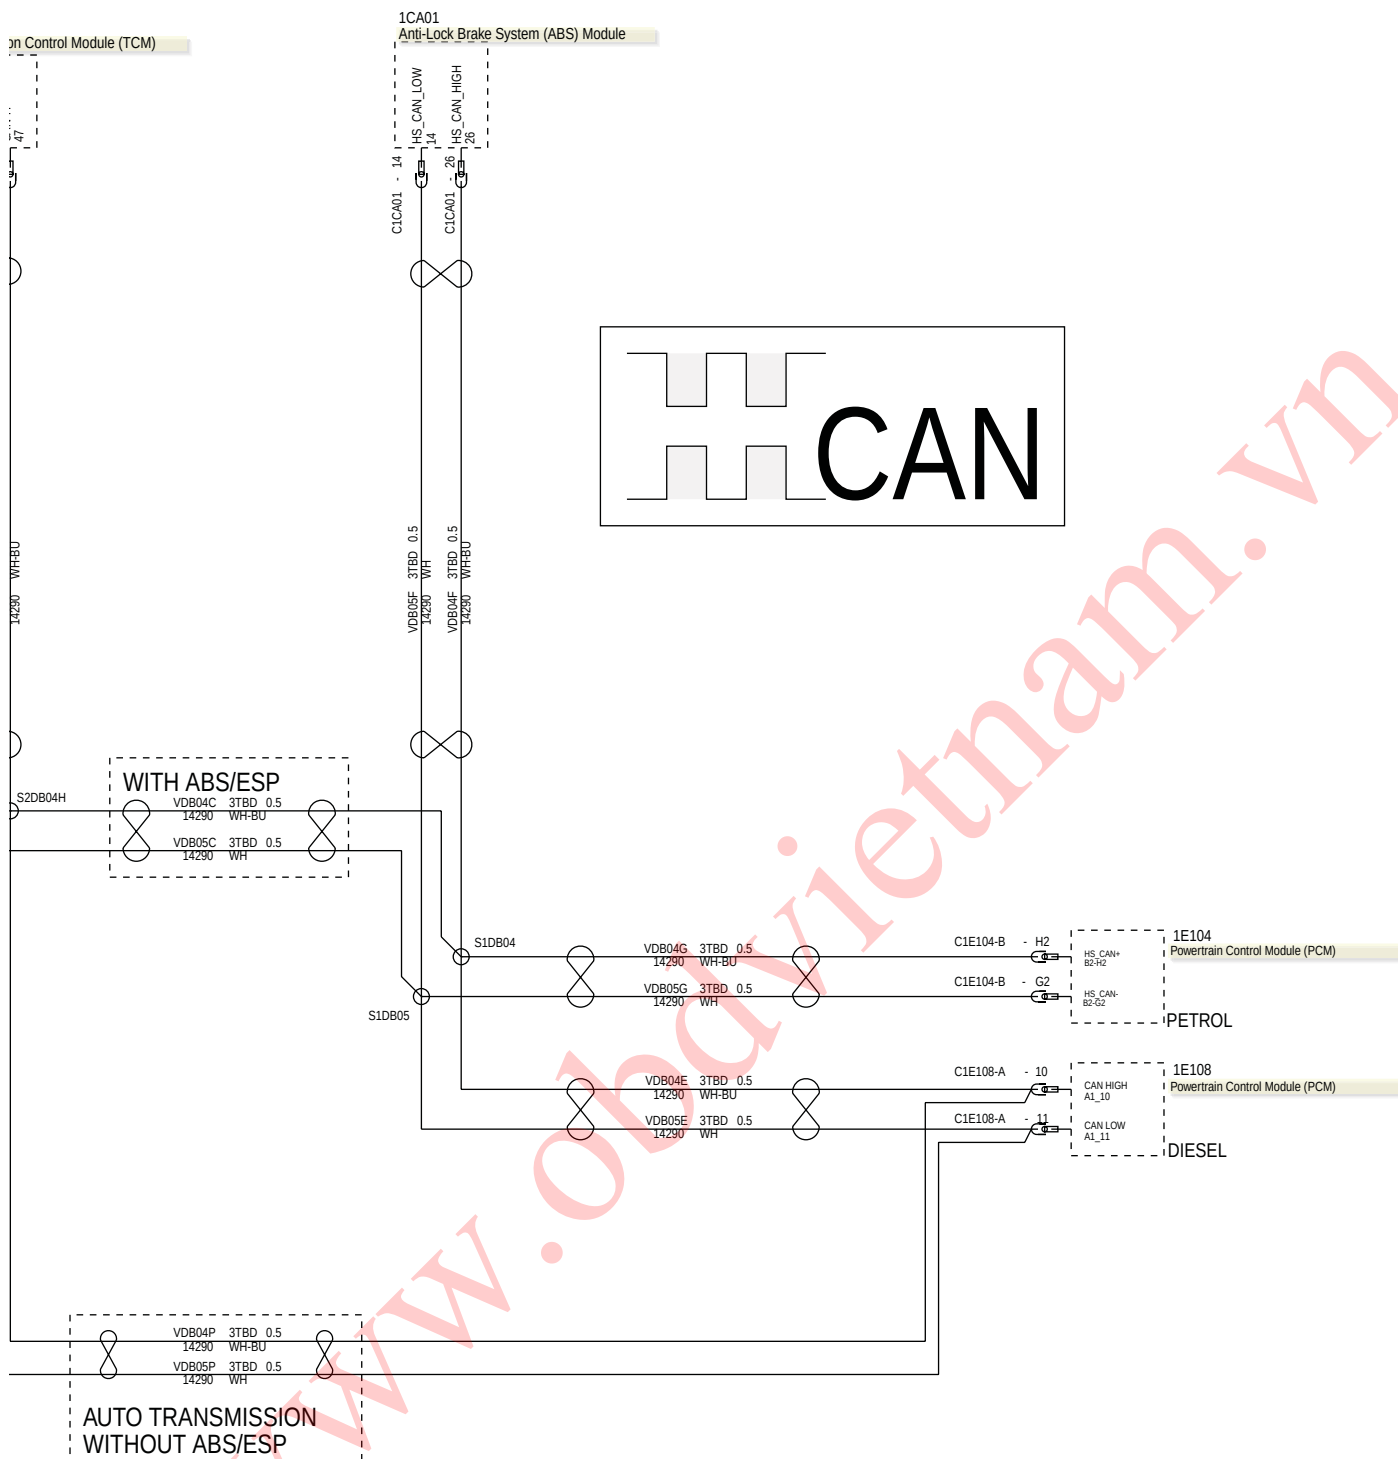


418-00-8 Communications Network - Mid-Speed (MS) Controller Area Network (CAN) Bus

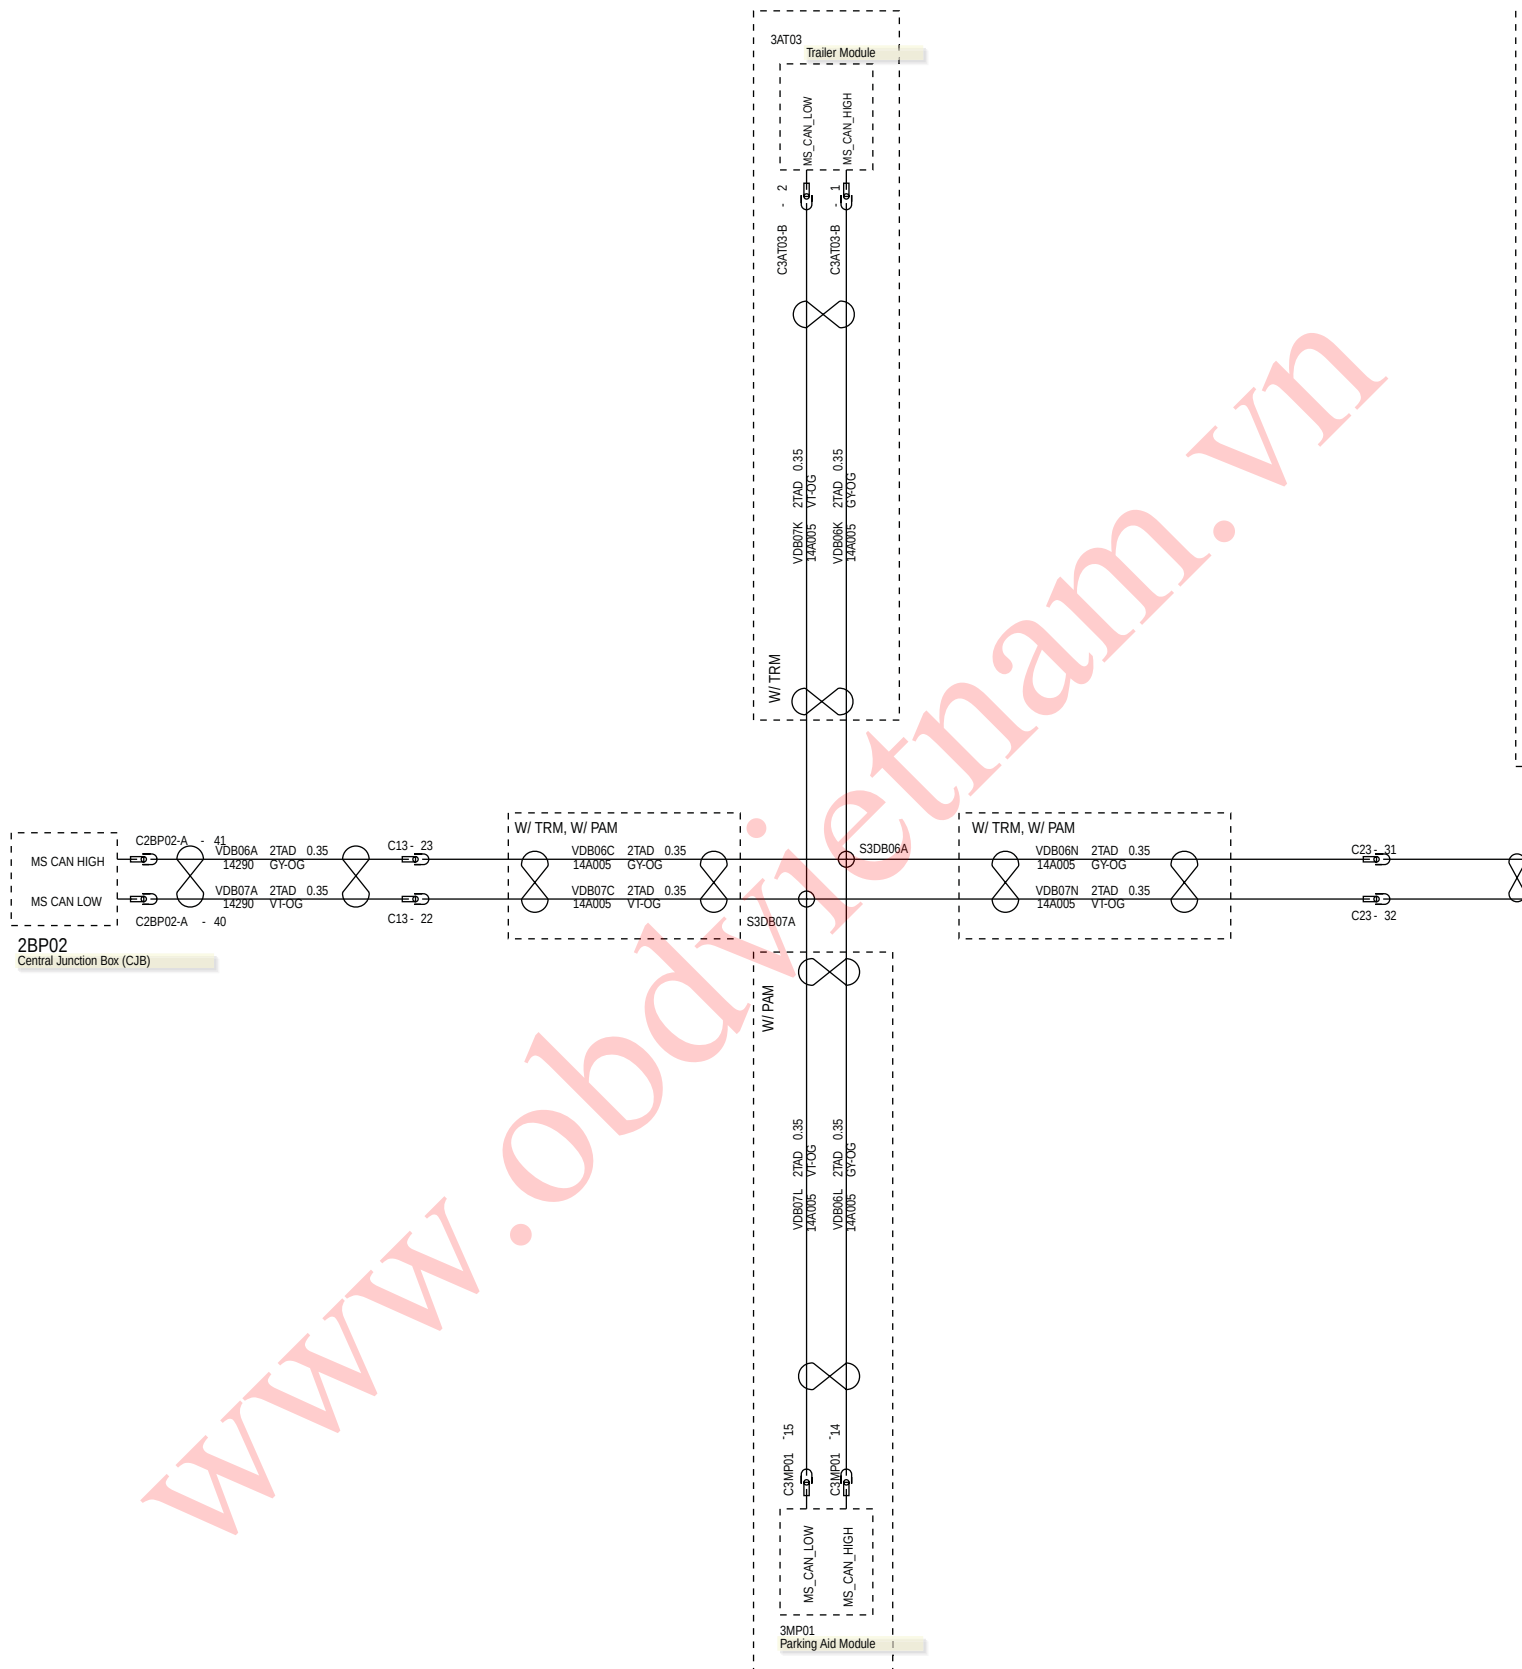


418-00-9 Communications Network - Mid-Speed (MS) Controller Area Network (CAN) Bus

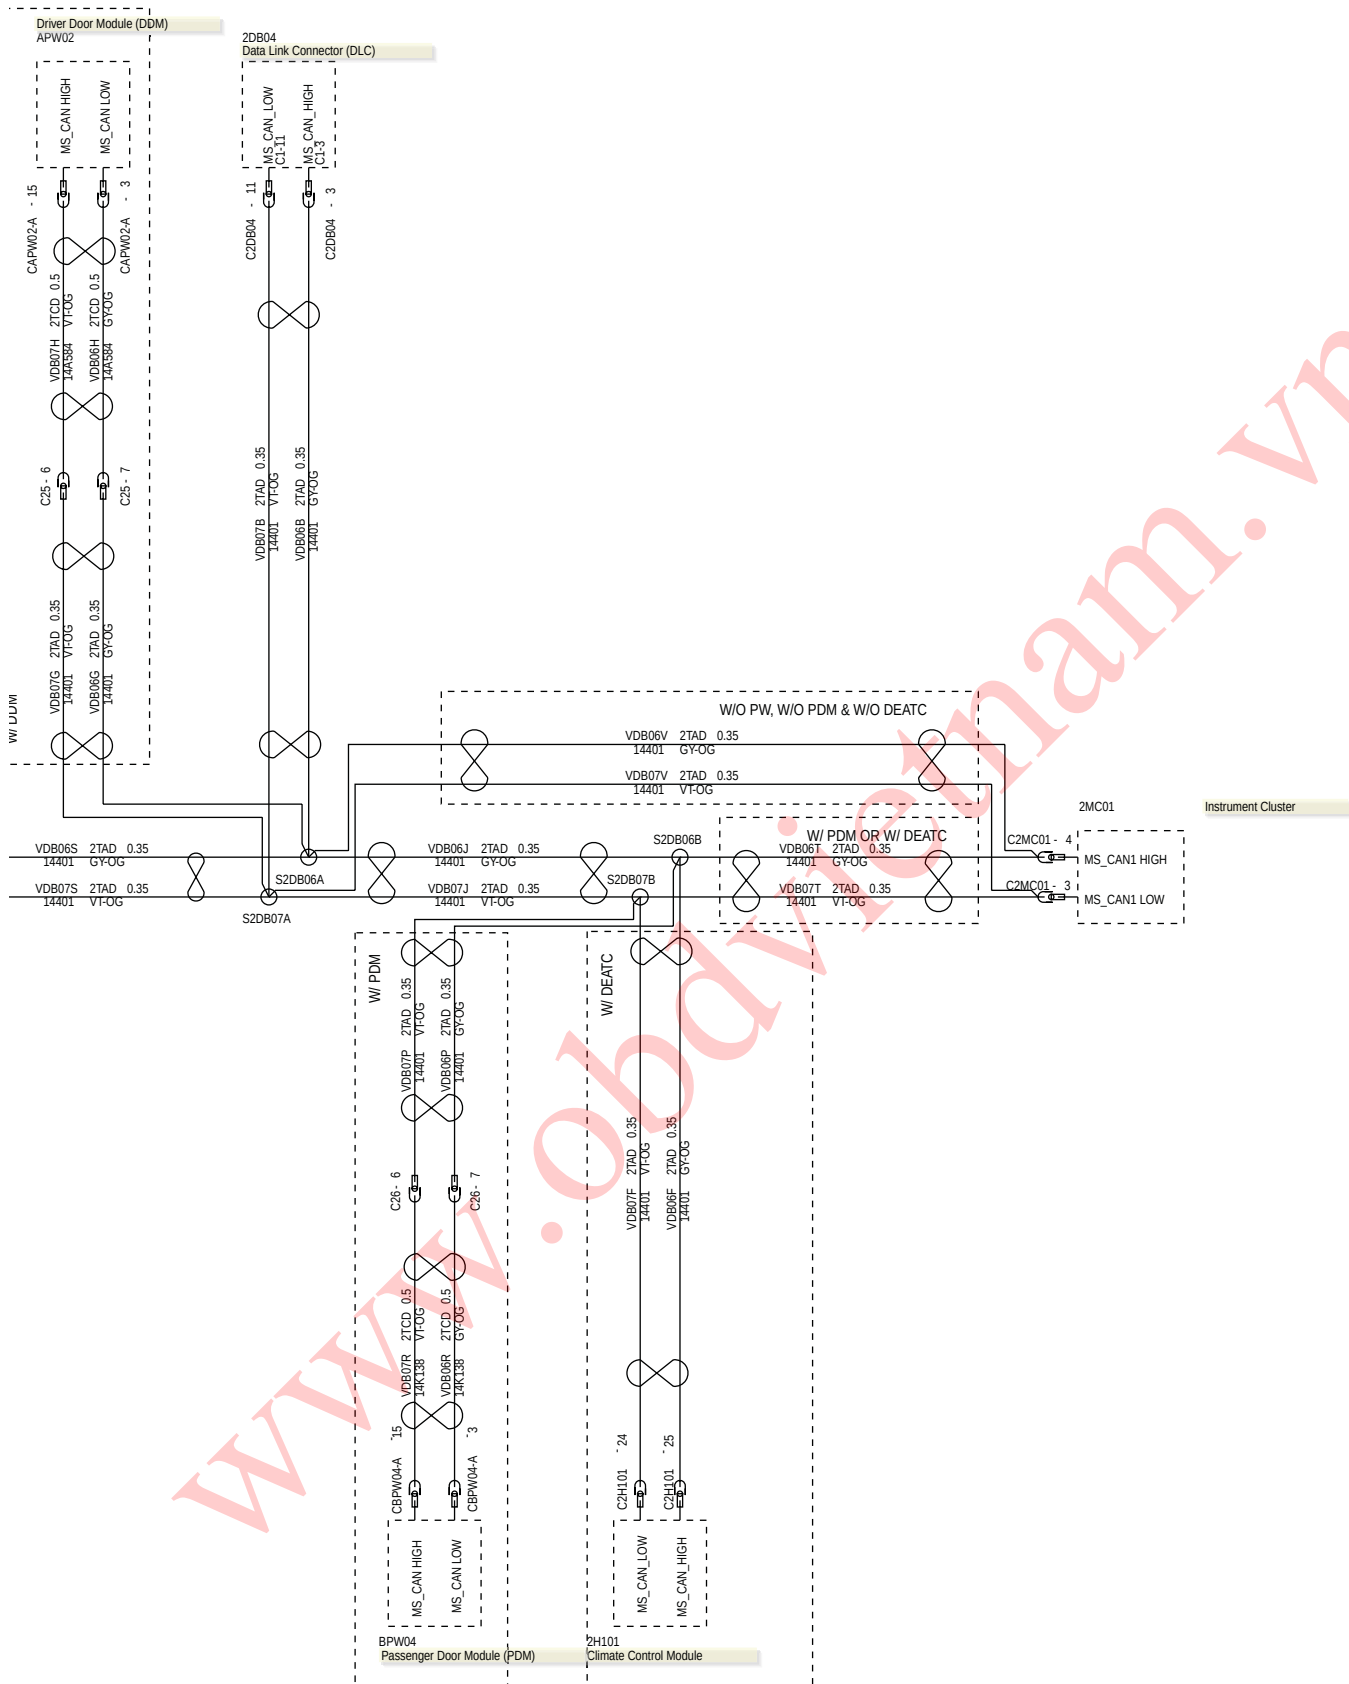


418-00-10 Communications Network - Multimedia (MM) Controller Area Network (CAN) Bus

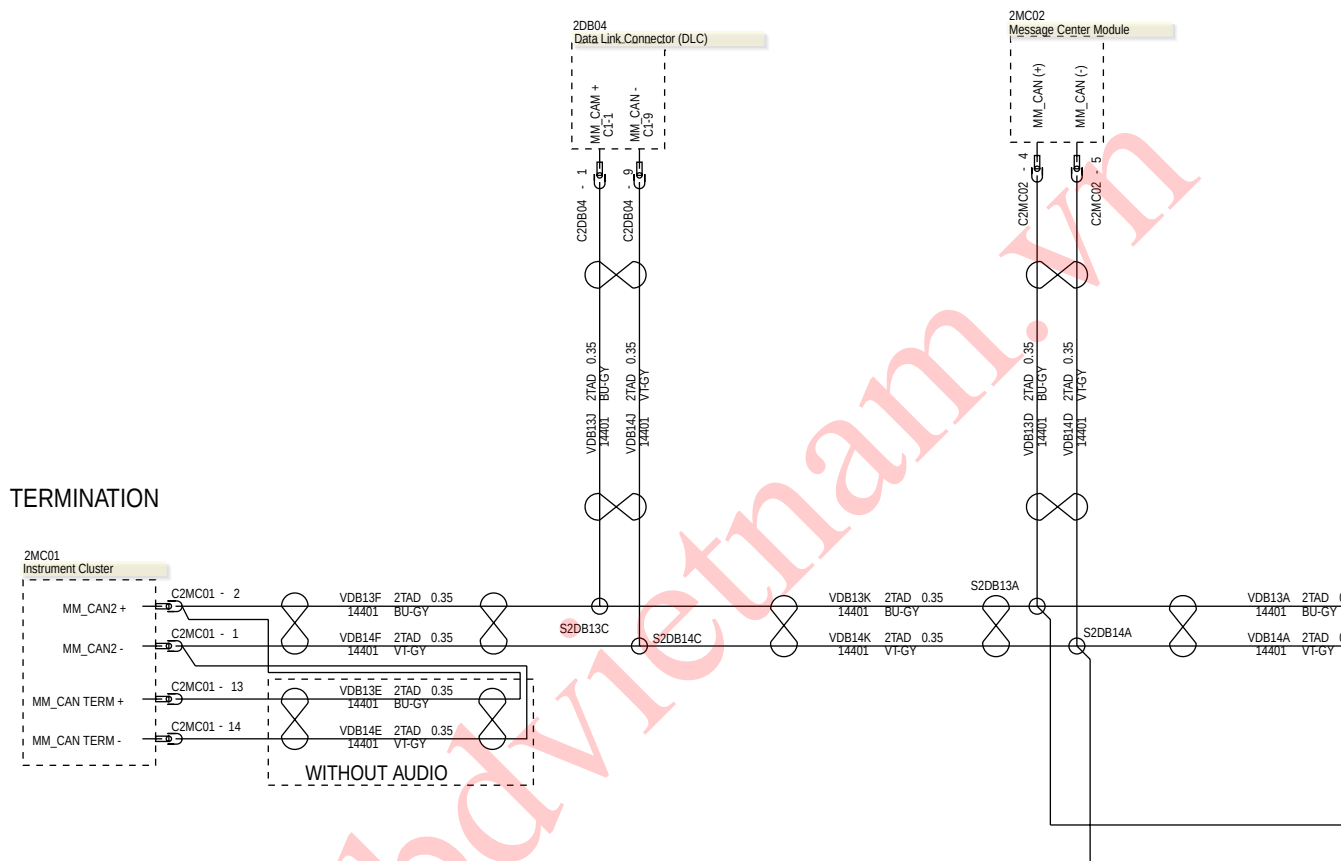

418-00-11 Communications Network - Multimedia (MM) Controller Area Network (CAN) Bus

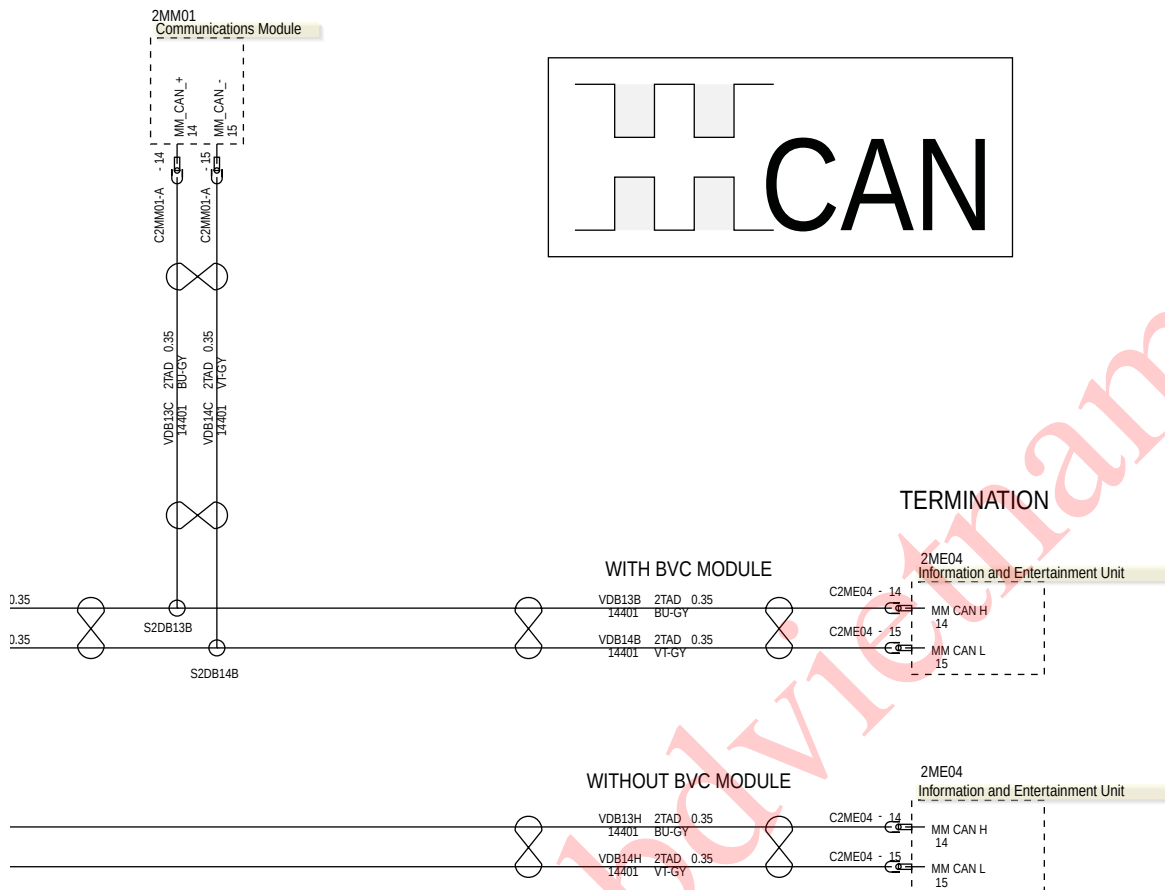

418-00-12 Communications Network - Local Interconnect Network (LIN) Bus—2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma/3.2L Duratorq-TDCi (148kW/200PS) - Puma, LHD 4WD/LHD RWD

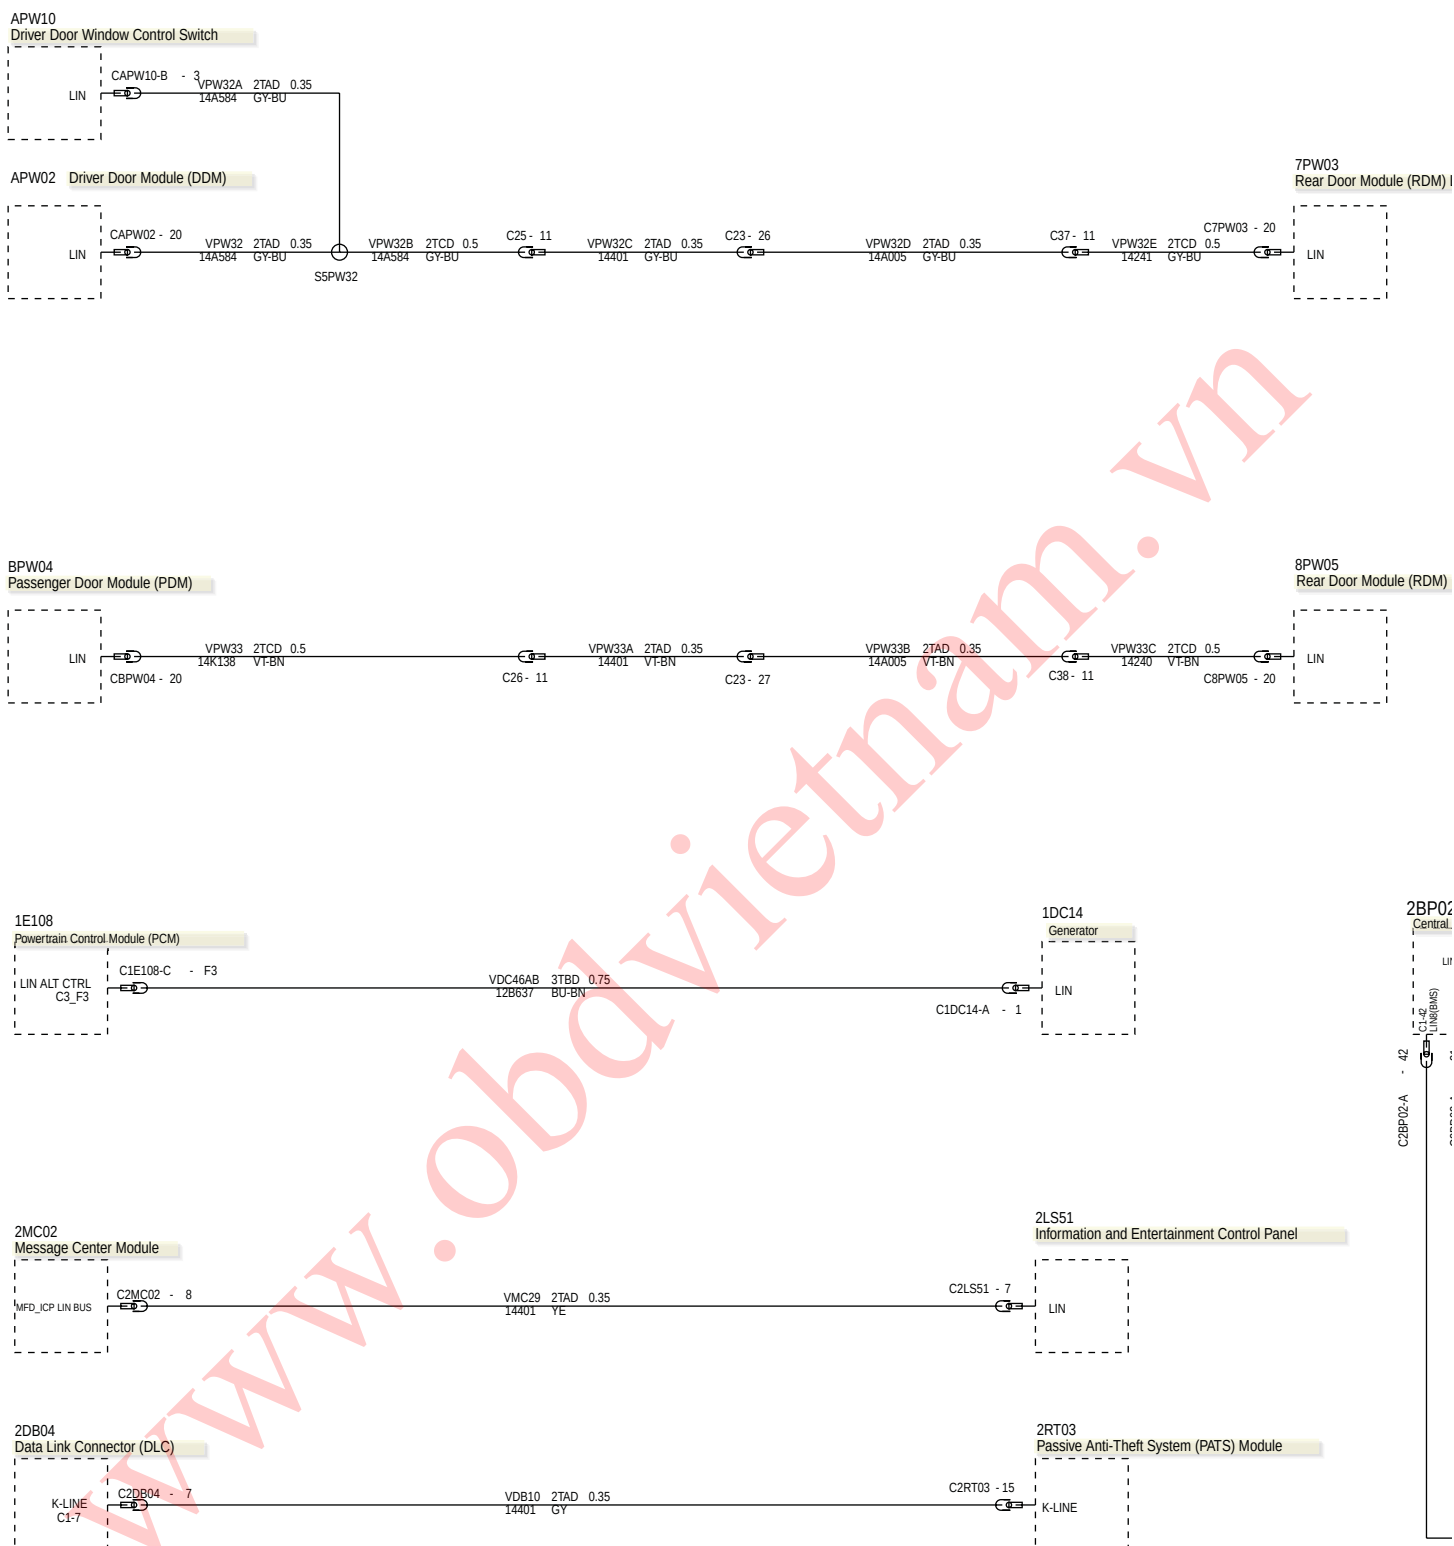


CÔNG TY CỔ PHẦN OBD VIỆT NAM


418-00-13 Communications Network - Local Interconnect Network (LIN) Bus—2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma/3.2L Duratorq-TDCi (148kW/200PS) - Puma, LHD 4WD/LHD RWD

LH

RH

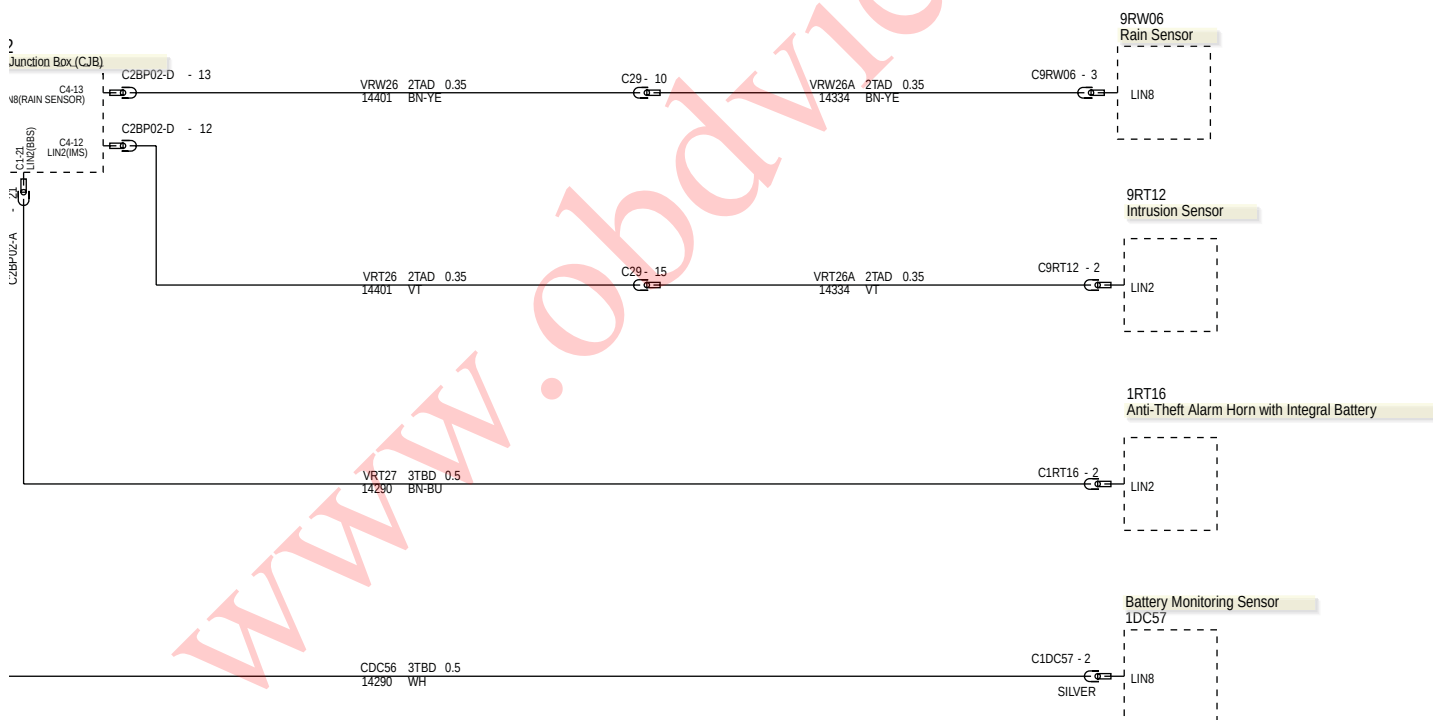


418-00-14 Communications Network - Local Interconnect Network (LIN) Bus—2.5L Duratec-HE (122kW/165PS) - MI4, LHD 4WD/LHD RWD

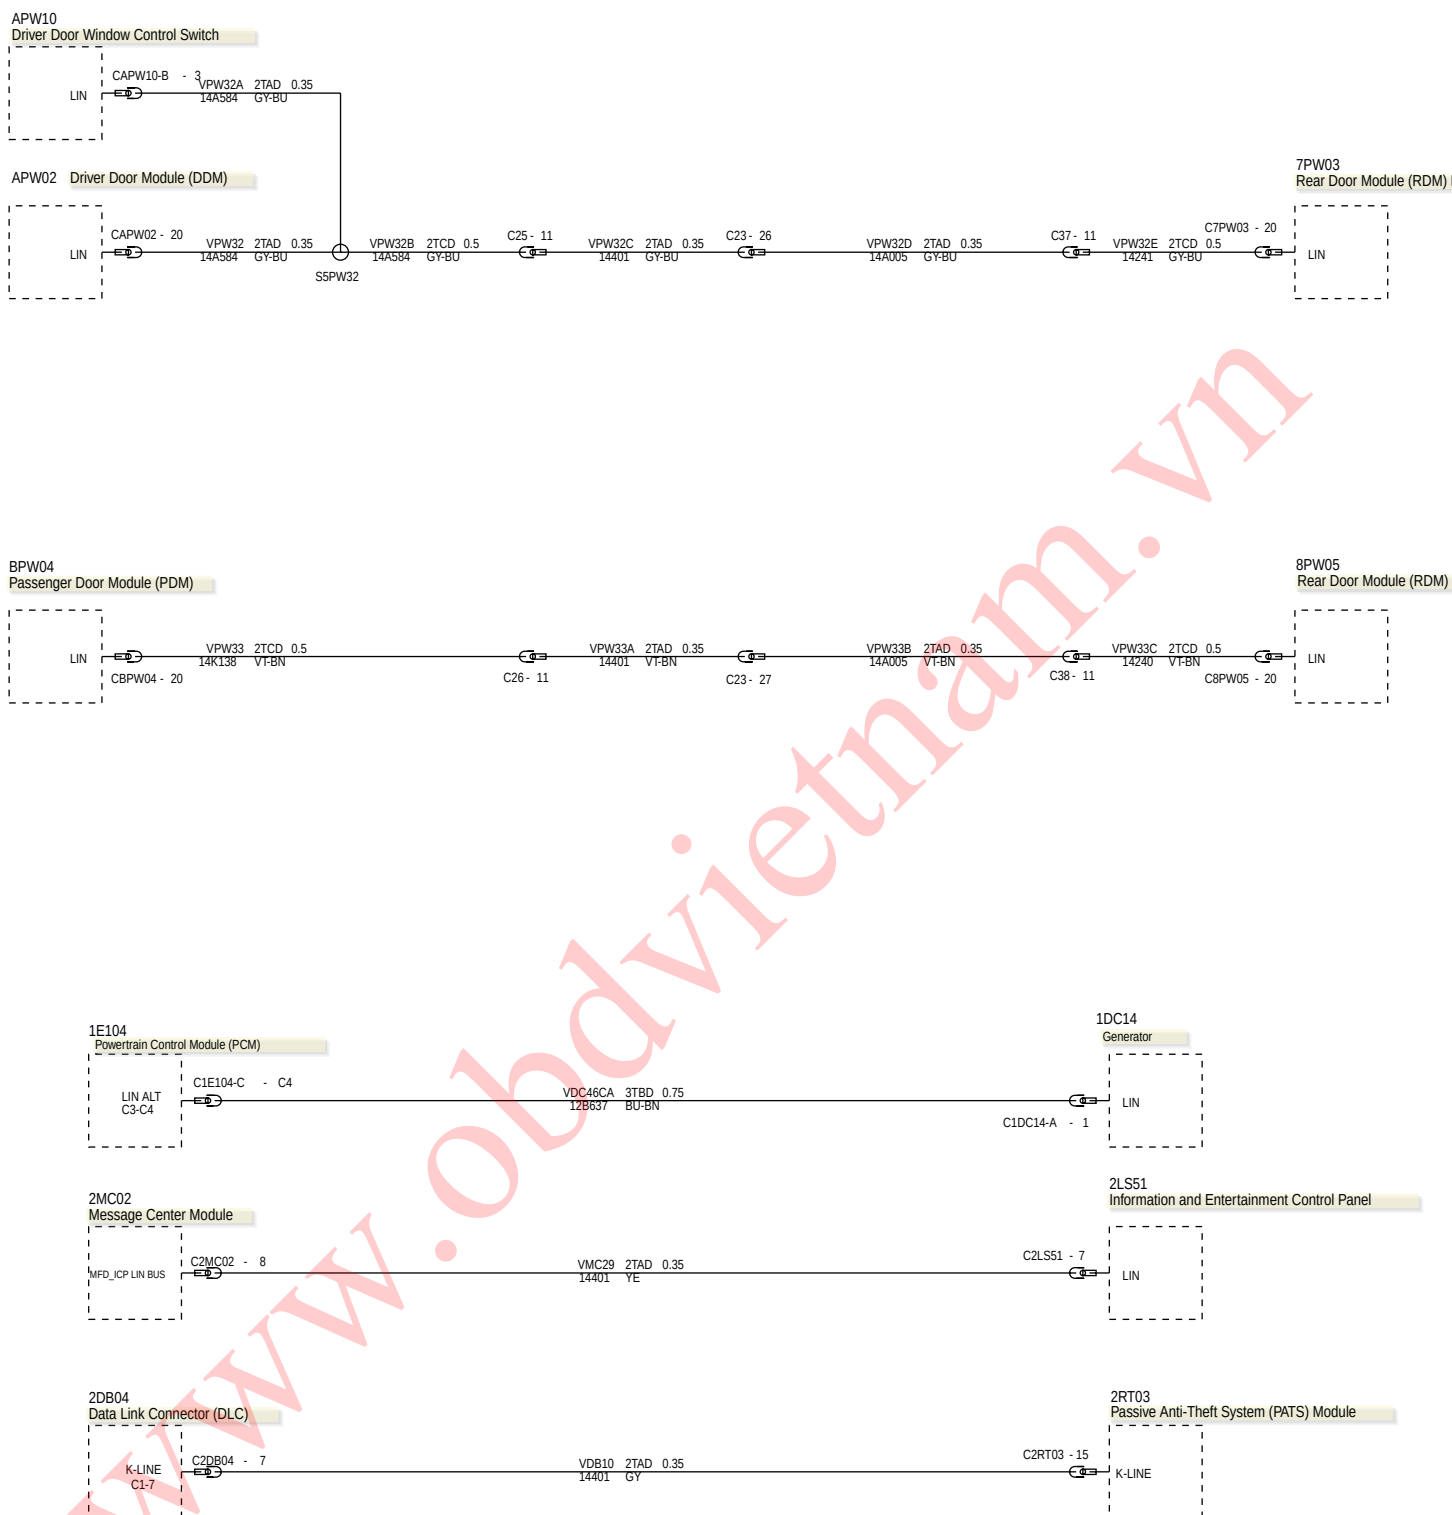


418-00-15 Communications Network - Local Interconnect Network (LIN) Bus—2.5L Duratec-HE (122kW/165PS) - M14, LHD 4WD/LHD RWD

LH

RH

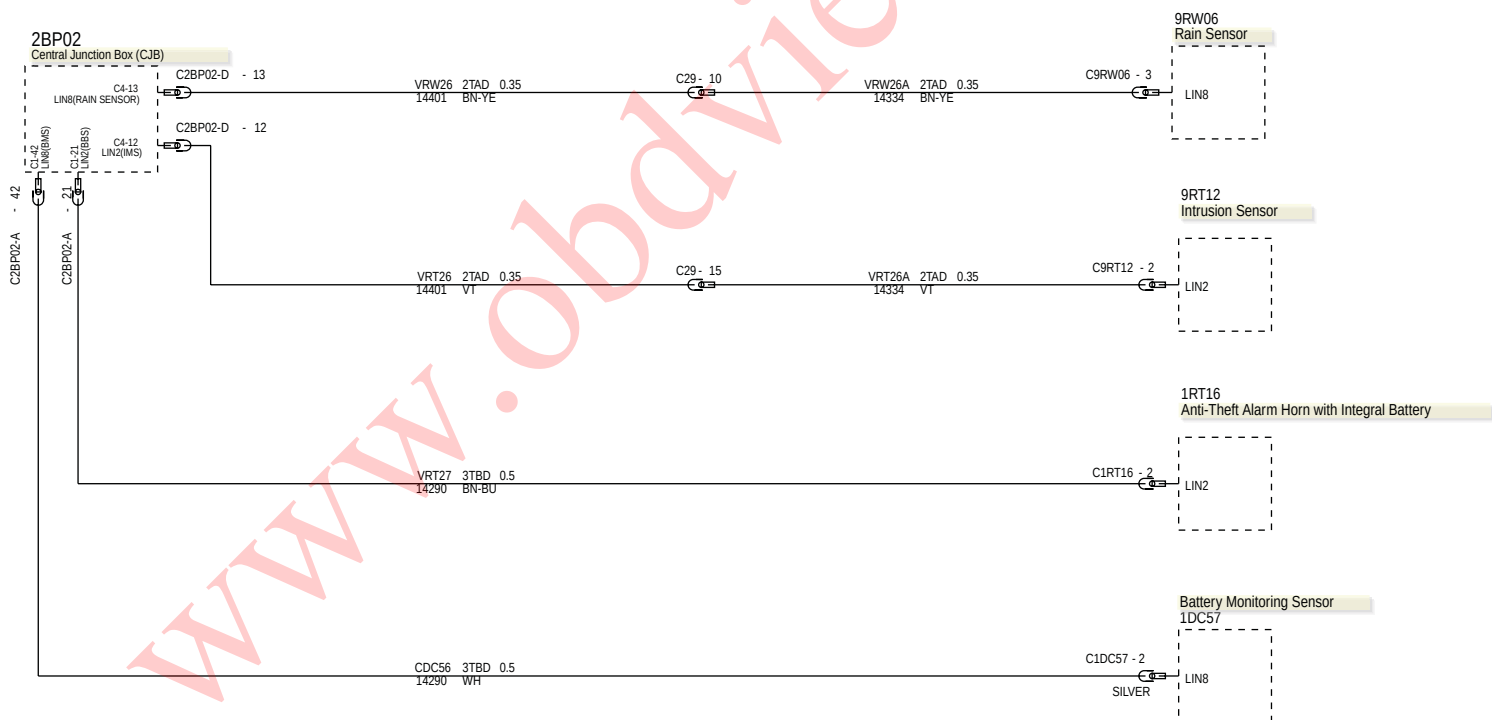


418-00-16 Communications Network - Local Interconnect Network (LIN) Bus—2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma/3.2L Duratorq-TDCi (148kW/200PS) - Puma, RHD 4WD/RHD RWD

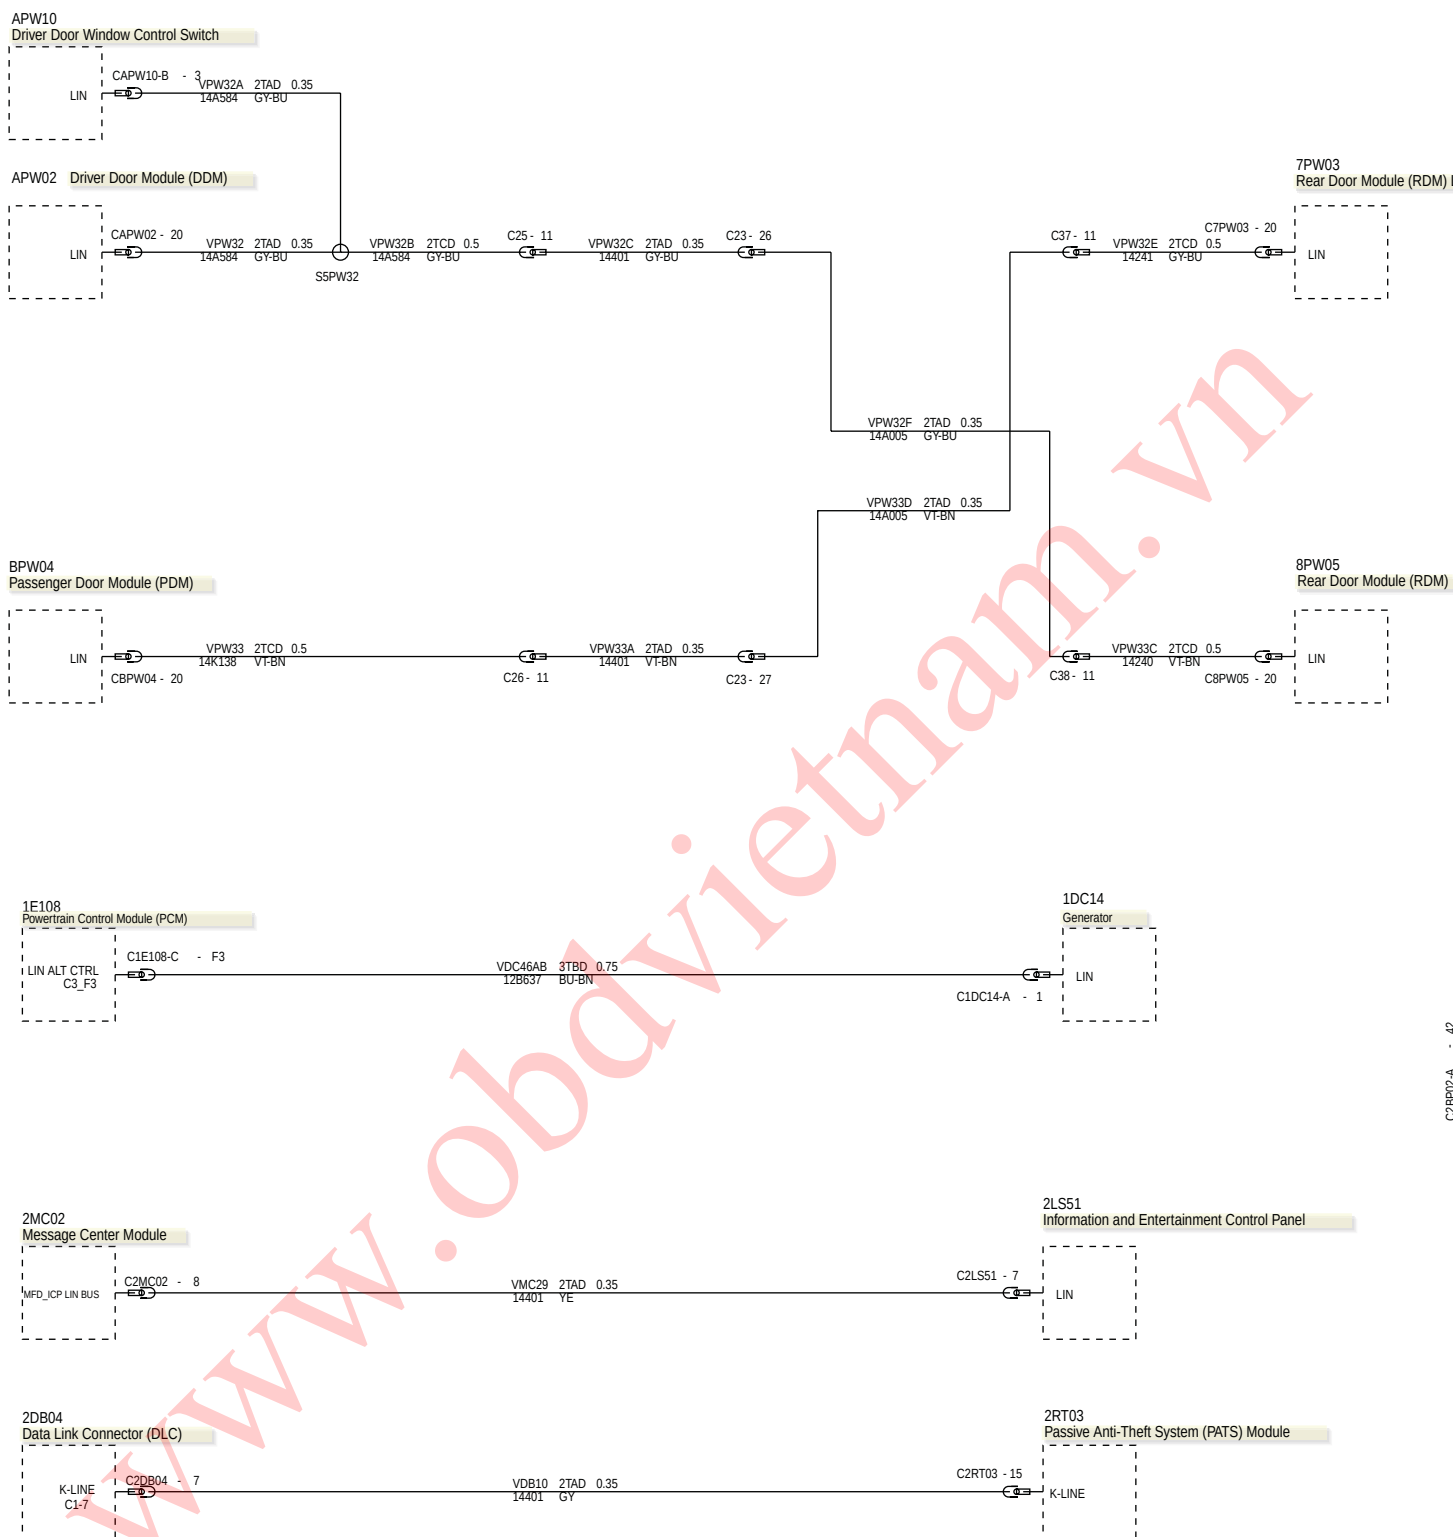

RH


418-00-18 Communications Network - Local Interconnect Network (LIN) Bus—2.5L Duratec-HE (122kW/165PS) - MI4, RHD 4WD/RHD RWD

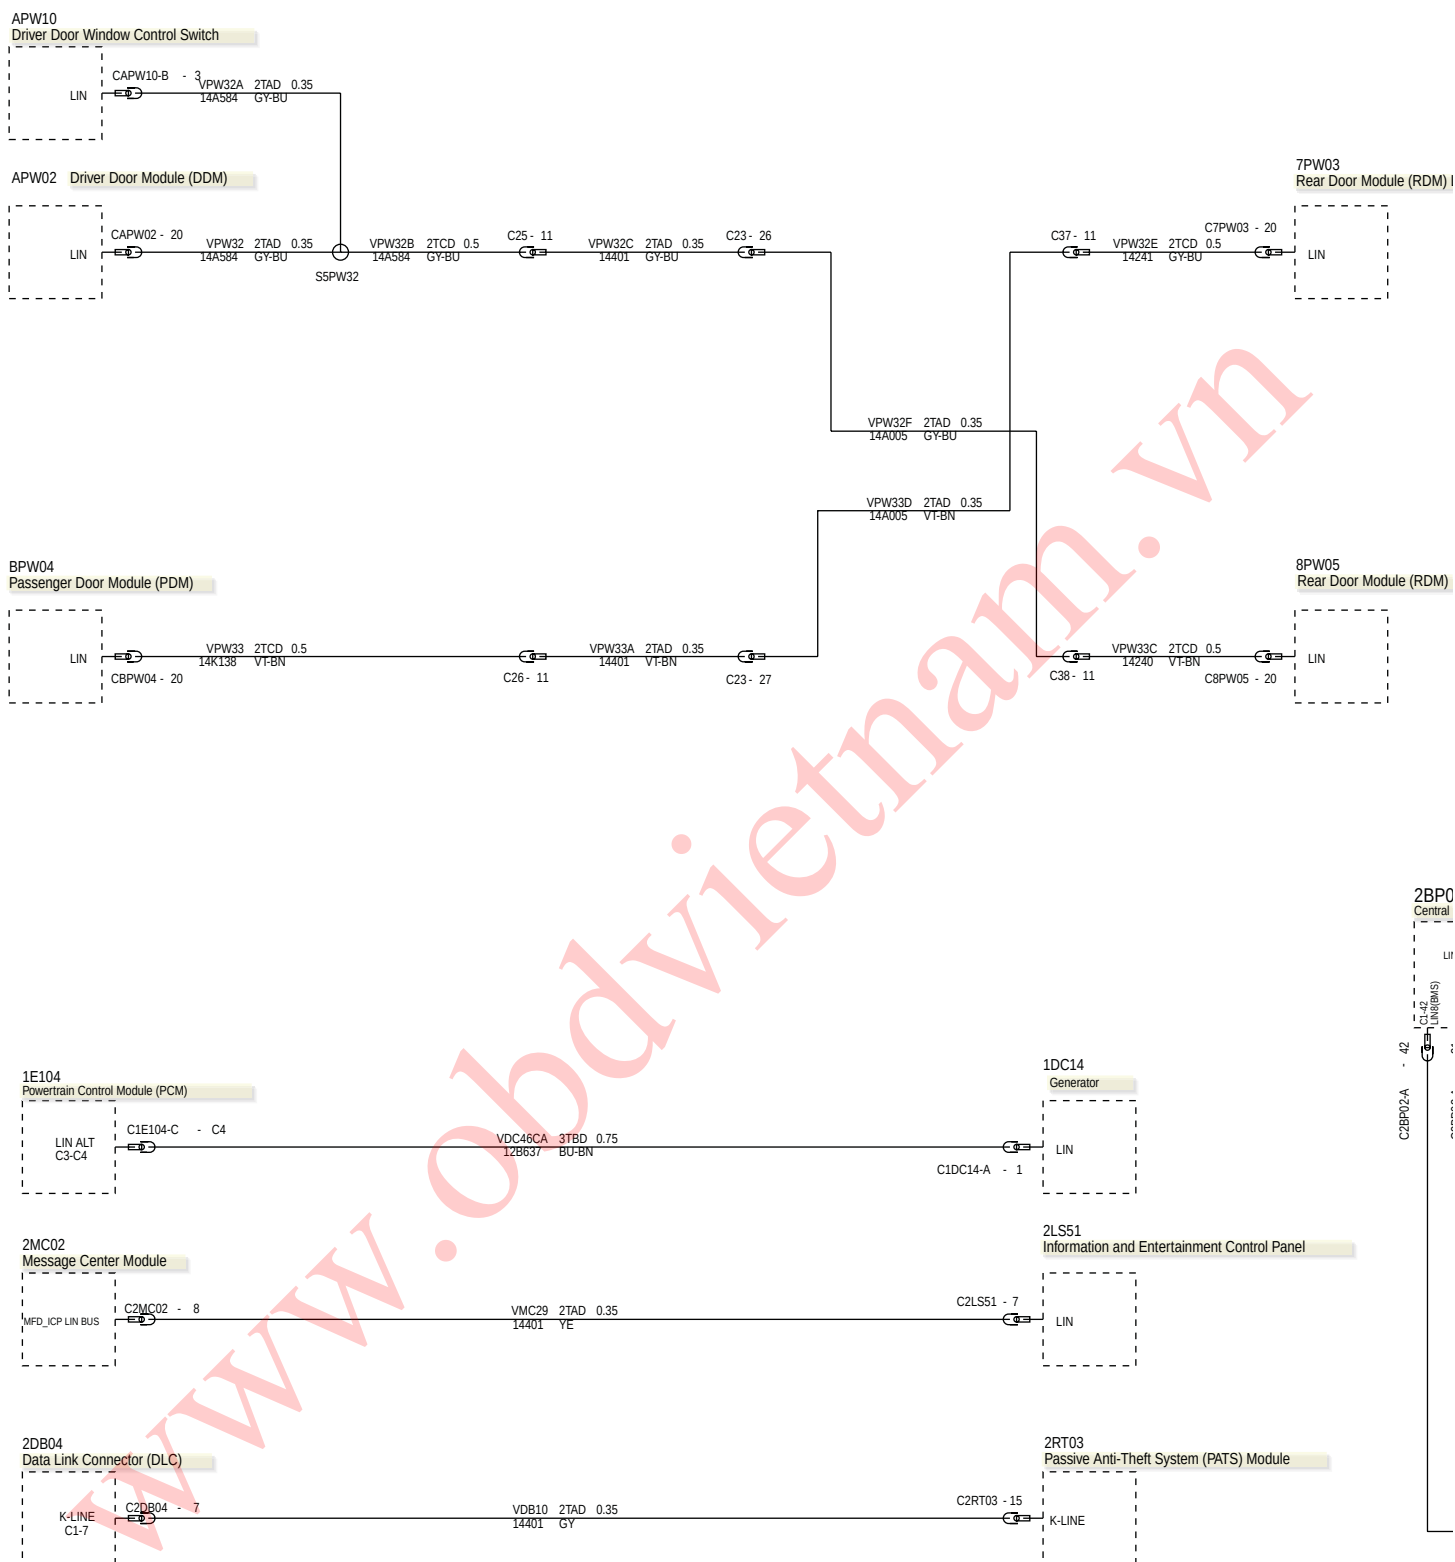

418-00-19 Communications Network - Local Interconnect Network (LIN) Bus—2.5L Duratec-HE (122kW/165PS) - MI4, RHD 4WD/RHD RWD


LH

RH

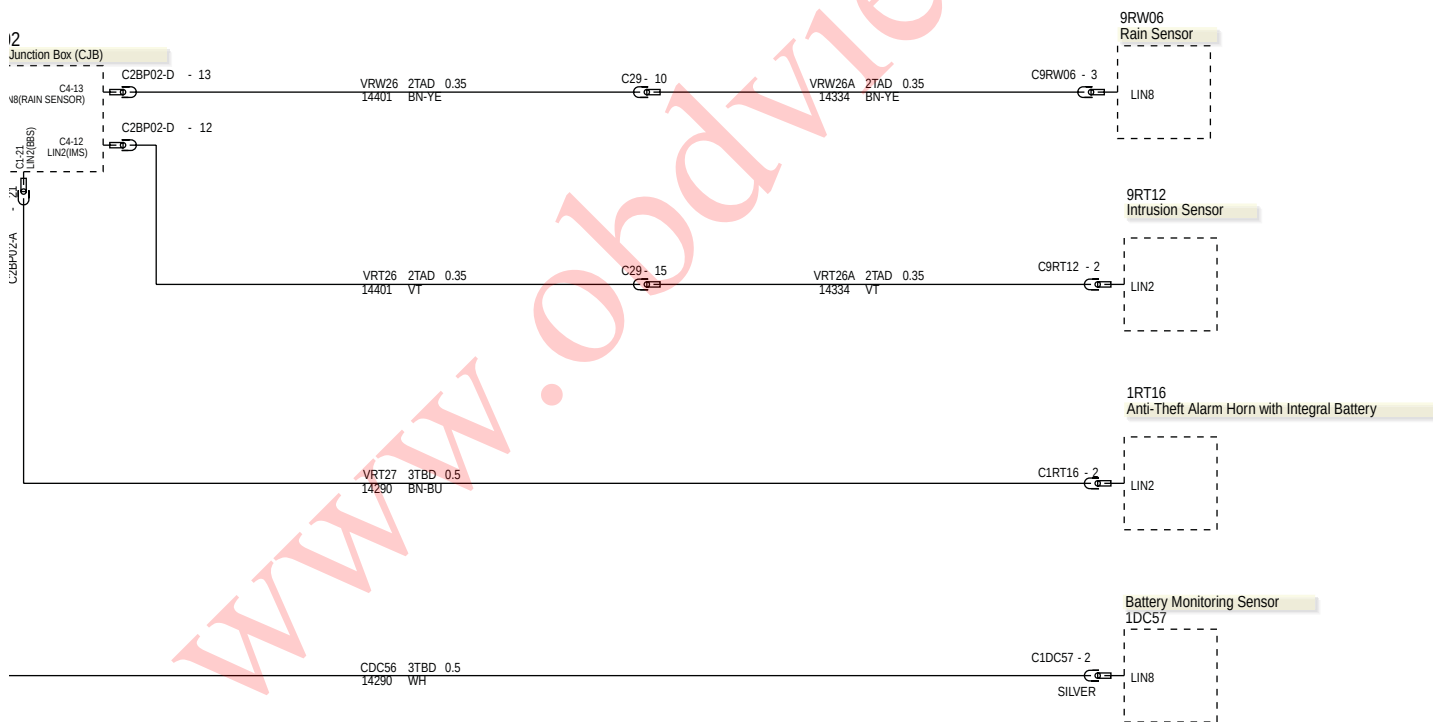


418-00-20

Central Junction Box (CJB)—A (G1404549)

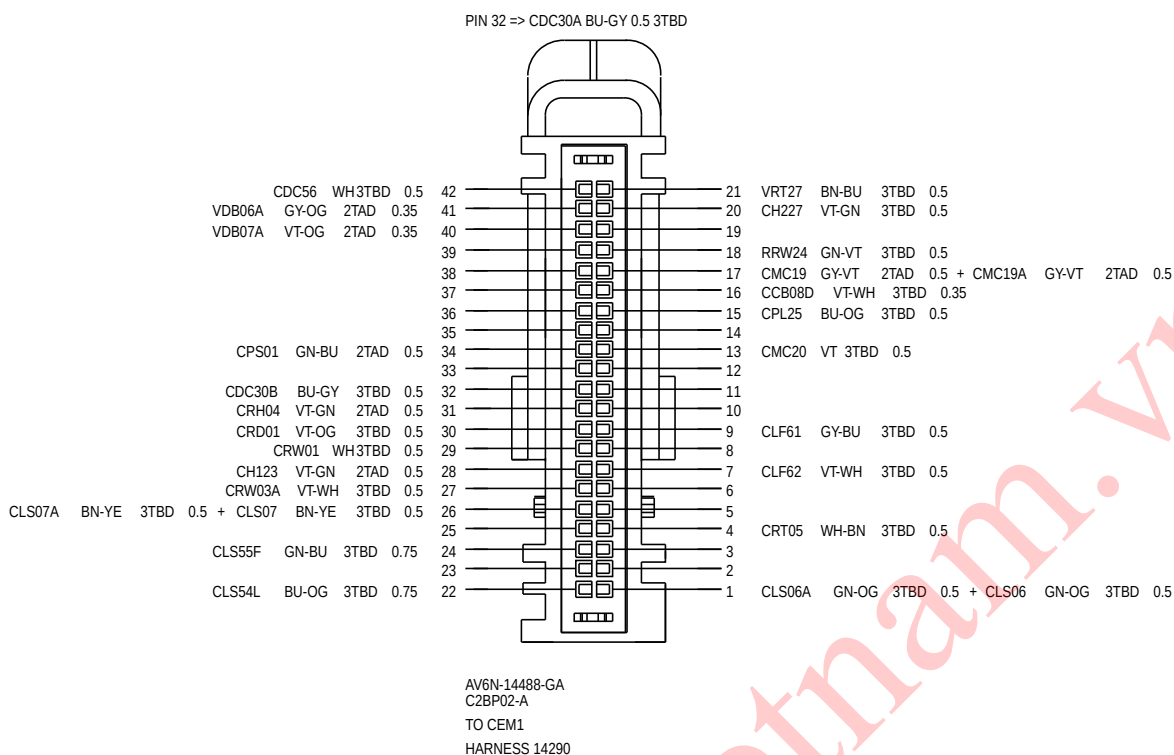


Central Junction Box (CJB)—B (G1404550)

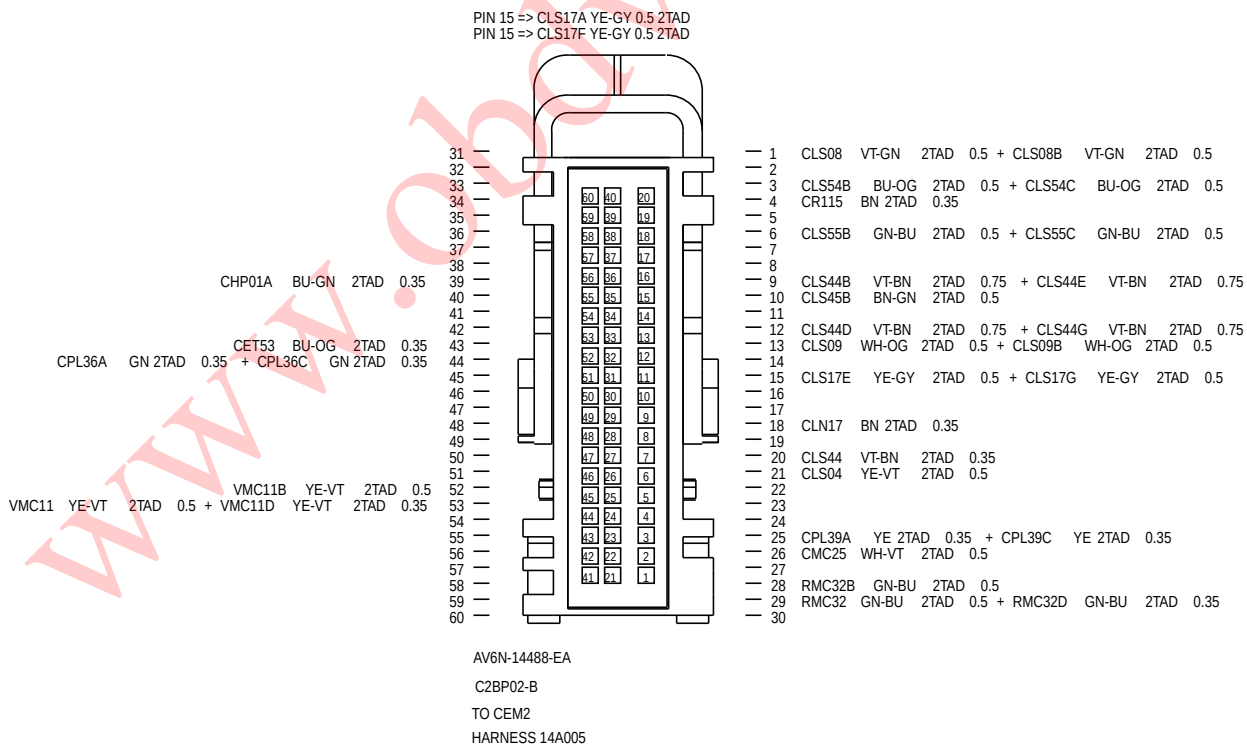

418-00-22


Central Junction Box (CJB)—F (G1404554)

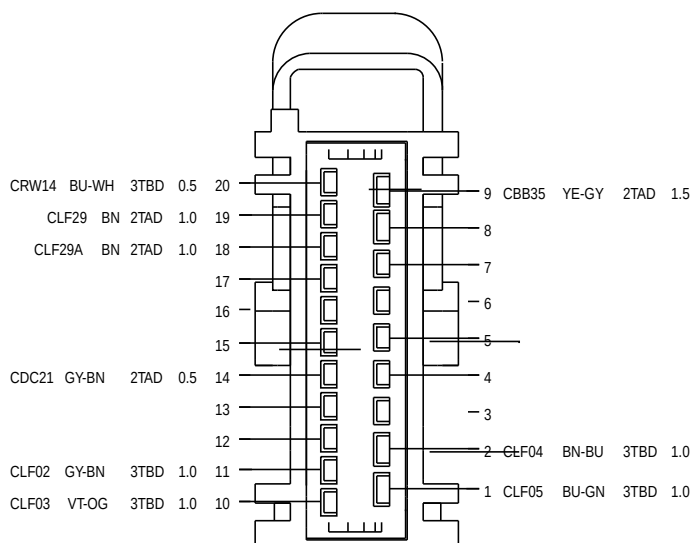

AV6N-14488-NA
C2BP02-F
TO CEM6
HARNESS 14290

Central Junction Box (CJB)—G (G1404555)

PIN 2 => GD343A BK-VT 2.5 2TAD
PIN 17 => CBP85N YE 0.35 2TAD
PIN 17 => CBP85P YE 0.35 2TAD
PIN 18 => CBP60 YE-VT 0.5 2TAD + CBP60AE YE-VT 0.5 2TAD

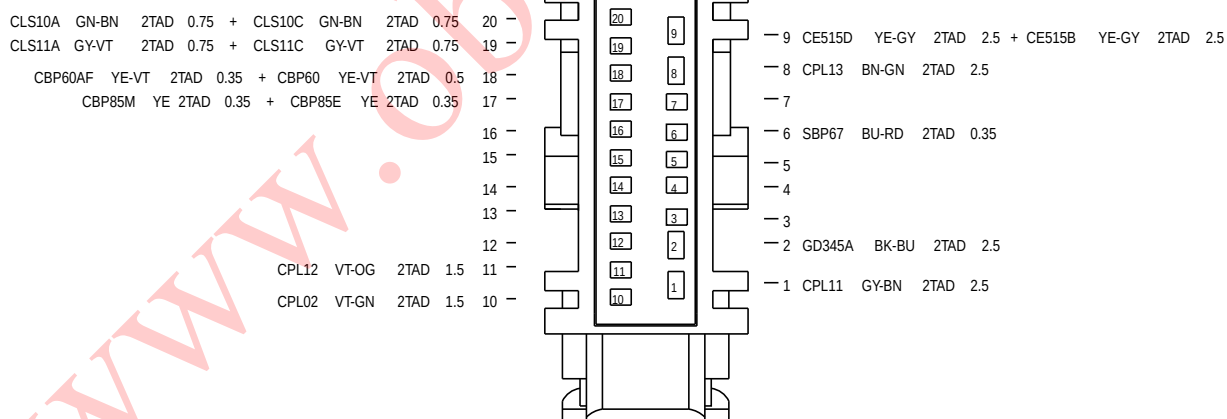


AV6N-14488-LA
C2BP02-G
TO CEM7
HARNESS 14A005


418-00-23

Central Junction Box (CJB)—H (G1404556)

PIN 5 => CBP71 BU-OG 0.35 2TAD
PIN 8 => SBP79A WH-RD 1.0 2TAD
PIN 16 => CBP69D WH-VT 0.35 2TAD

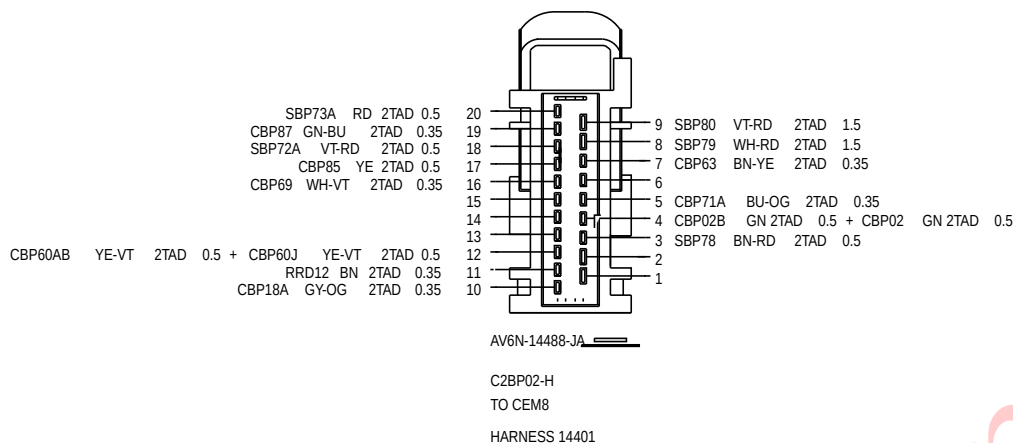


Data Link Connector (DLC) (G1404560)

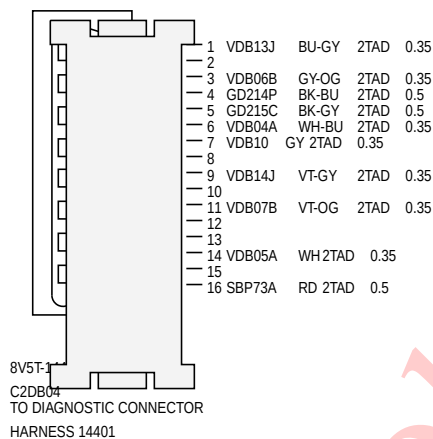

418-00-24


Engine Junction Box (EJB) (G1404561)

Thumbnail

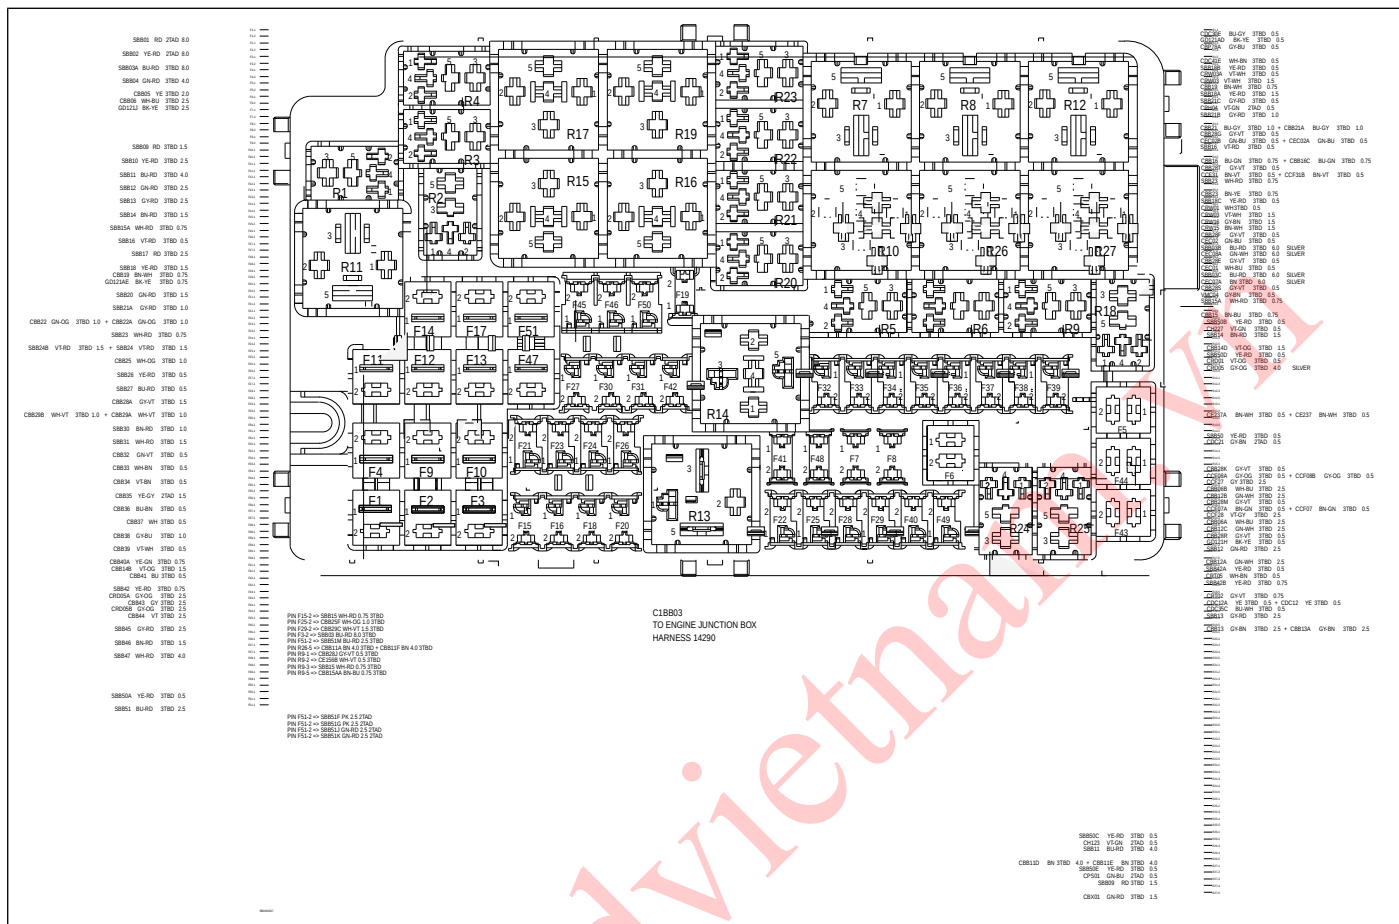

Part 3 of 3

Engine Junction Box (EJB)—A (G1404562)

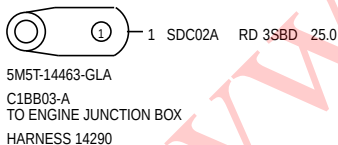

SECTION 419-01A Anti-Theft - Active

VEHICLE APPLICATION: **2012.0 Ranger**

CONTENTS

PAGE


ELECTRICAL SCHEMATICS

Anti-Theft Alarm System — Single Cab, LHD 4WD/LHD RWD.....	419-01A-2
Anti-Theft Alarm System — Double Cab, LHD 4WD/LHD RWD.....	419-01A-4
Anti-Theft Alarm System — Super Cab, LHD 4WD/LHD RWD.....	419-01A-6
Anti-Theft Alarm System — Single Cab, RHD 4WD/RHD RWD.....	419-01A-8
Anti-Theft Alarm System — Double Cab, RHD 4WD/RHD RWD.....	419-01A-10
Anti-Theft Alarm System — Super Cab, RHD 4WD/RHD RWD.....	419-01A-12


ELECTRICAL CONNECTORS


Anti-Theft Alarm Horn.....	419-01A-14
Anti-Theft Alarm Horn with Integral Battery.....	419-01A-14
Anti-Theft Alarm Module.....	419-01A-14
Hood Switch.....	419-01A-14
Intrusion Sensor.....	419-01A-14

419-01A-2 Anti-Theft Alarm System—Single Cab, LHD 4WD/LHD RWD

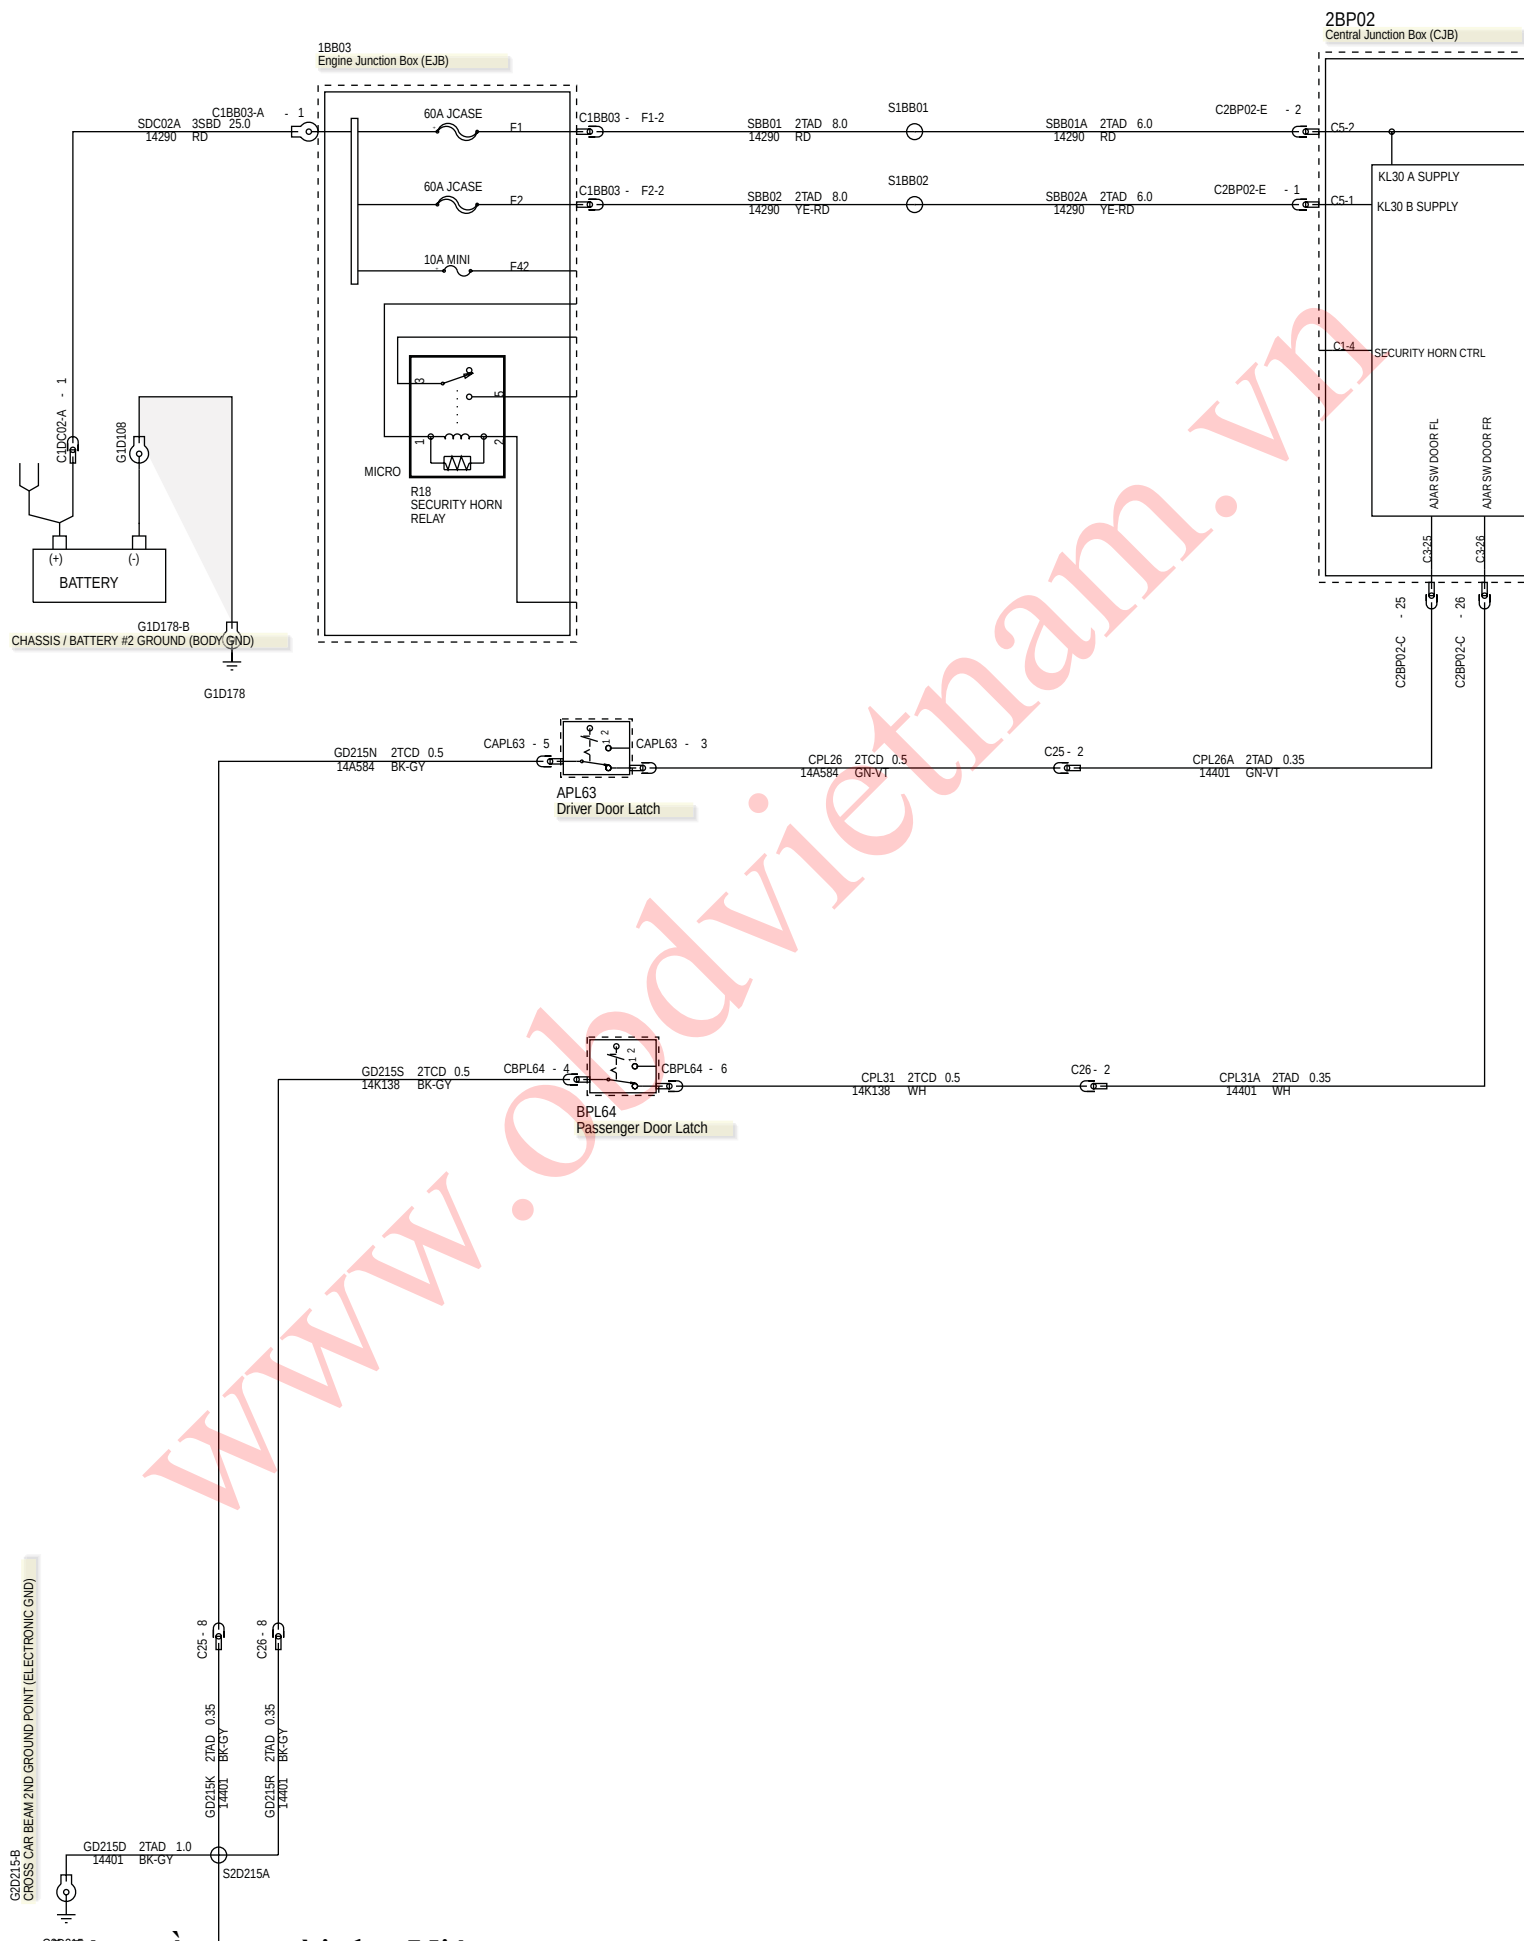


419-01A-3 Anti-Theft Alarm System—Single Cab, LHD 4WD/LHD RWD

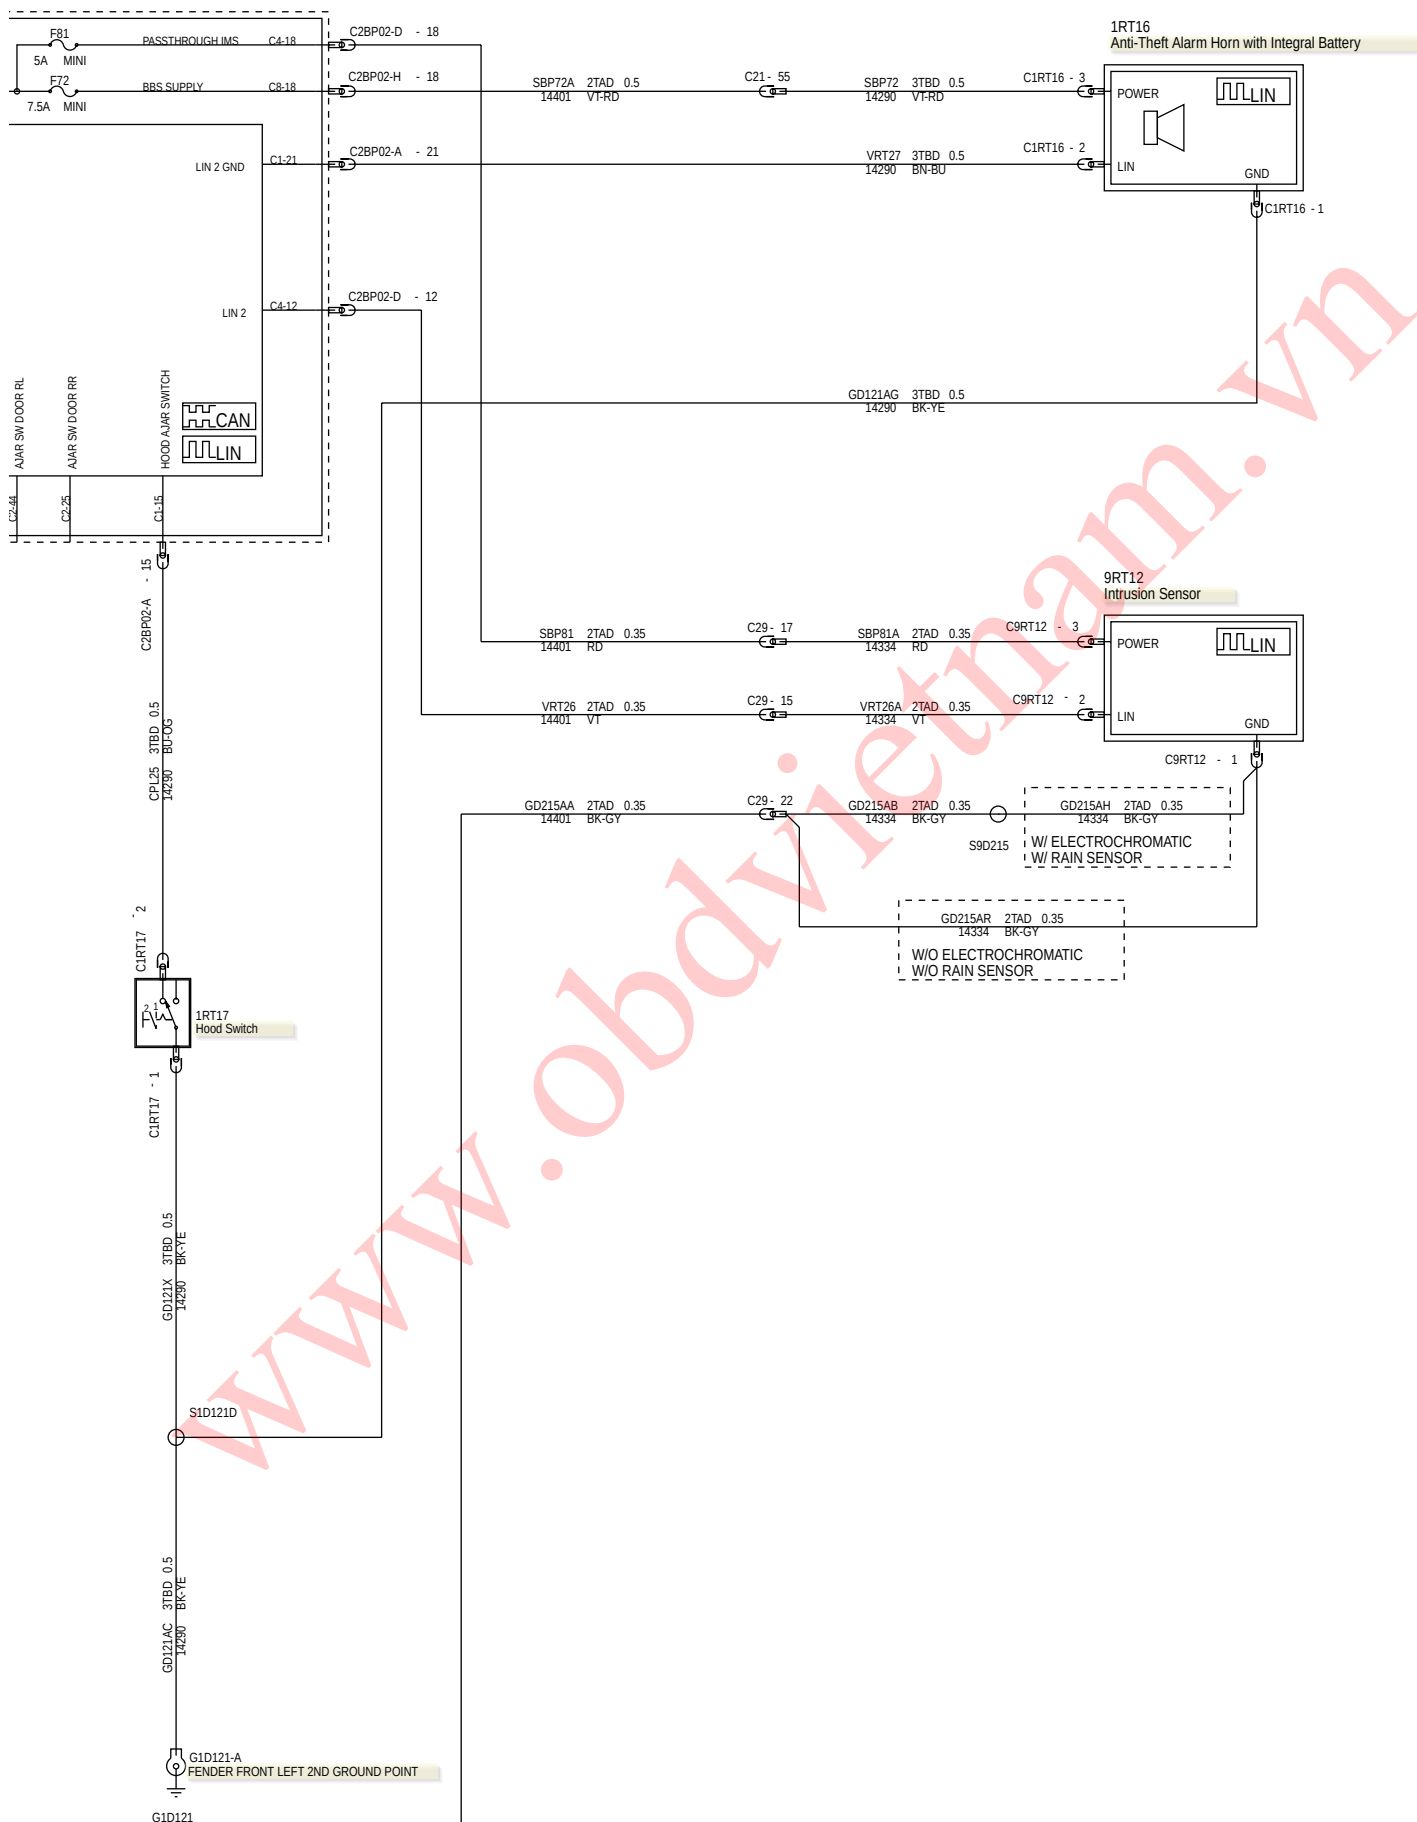


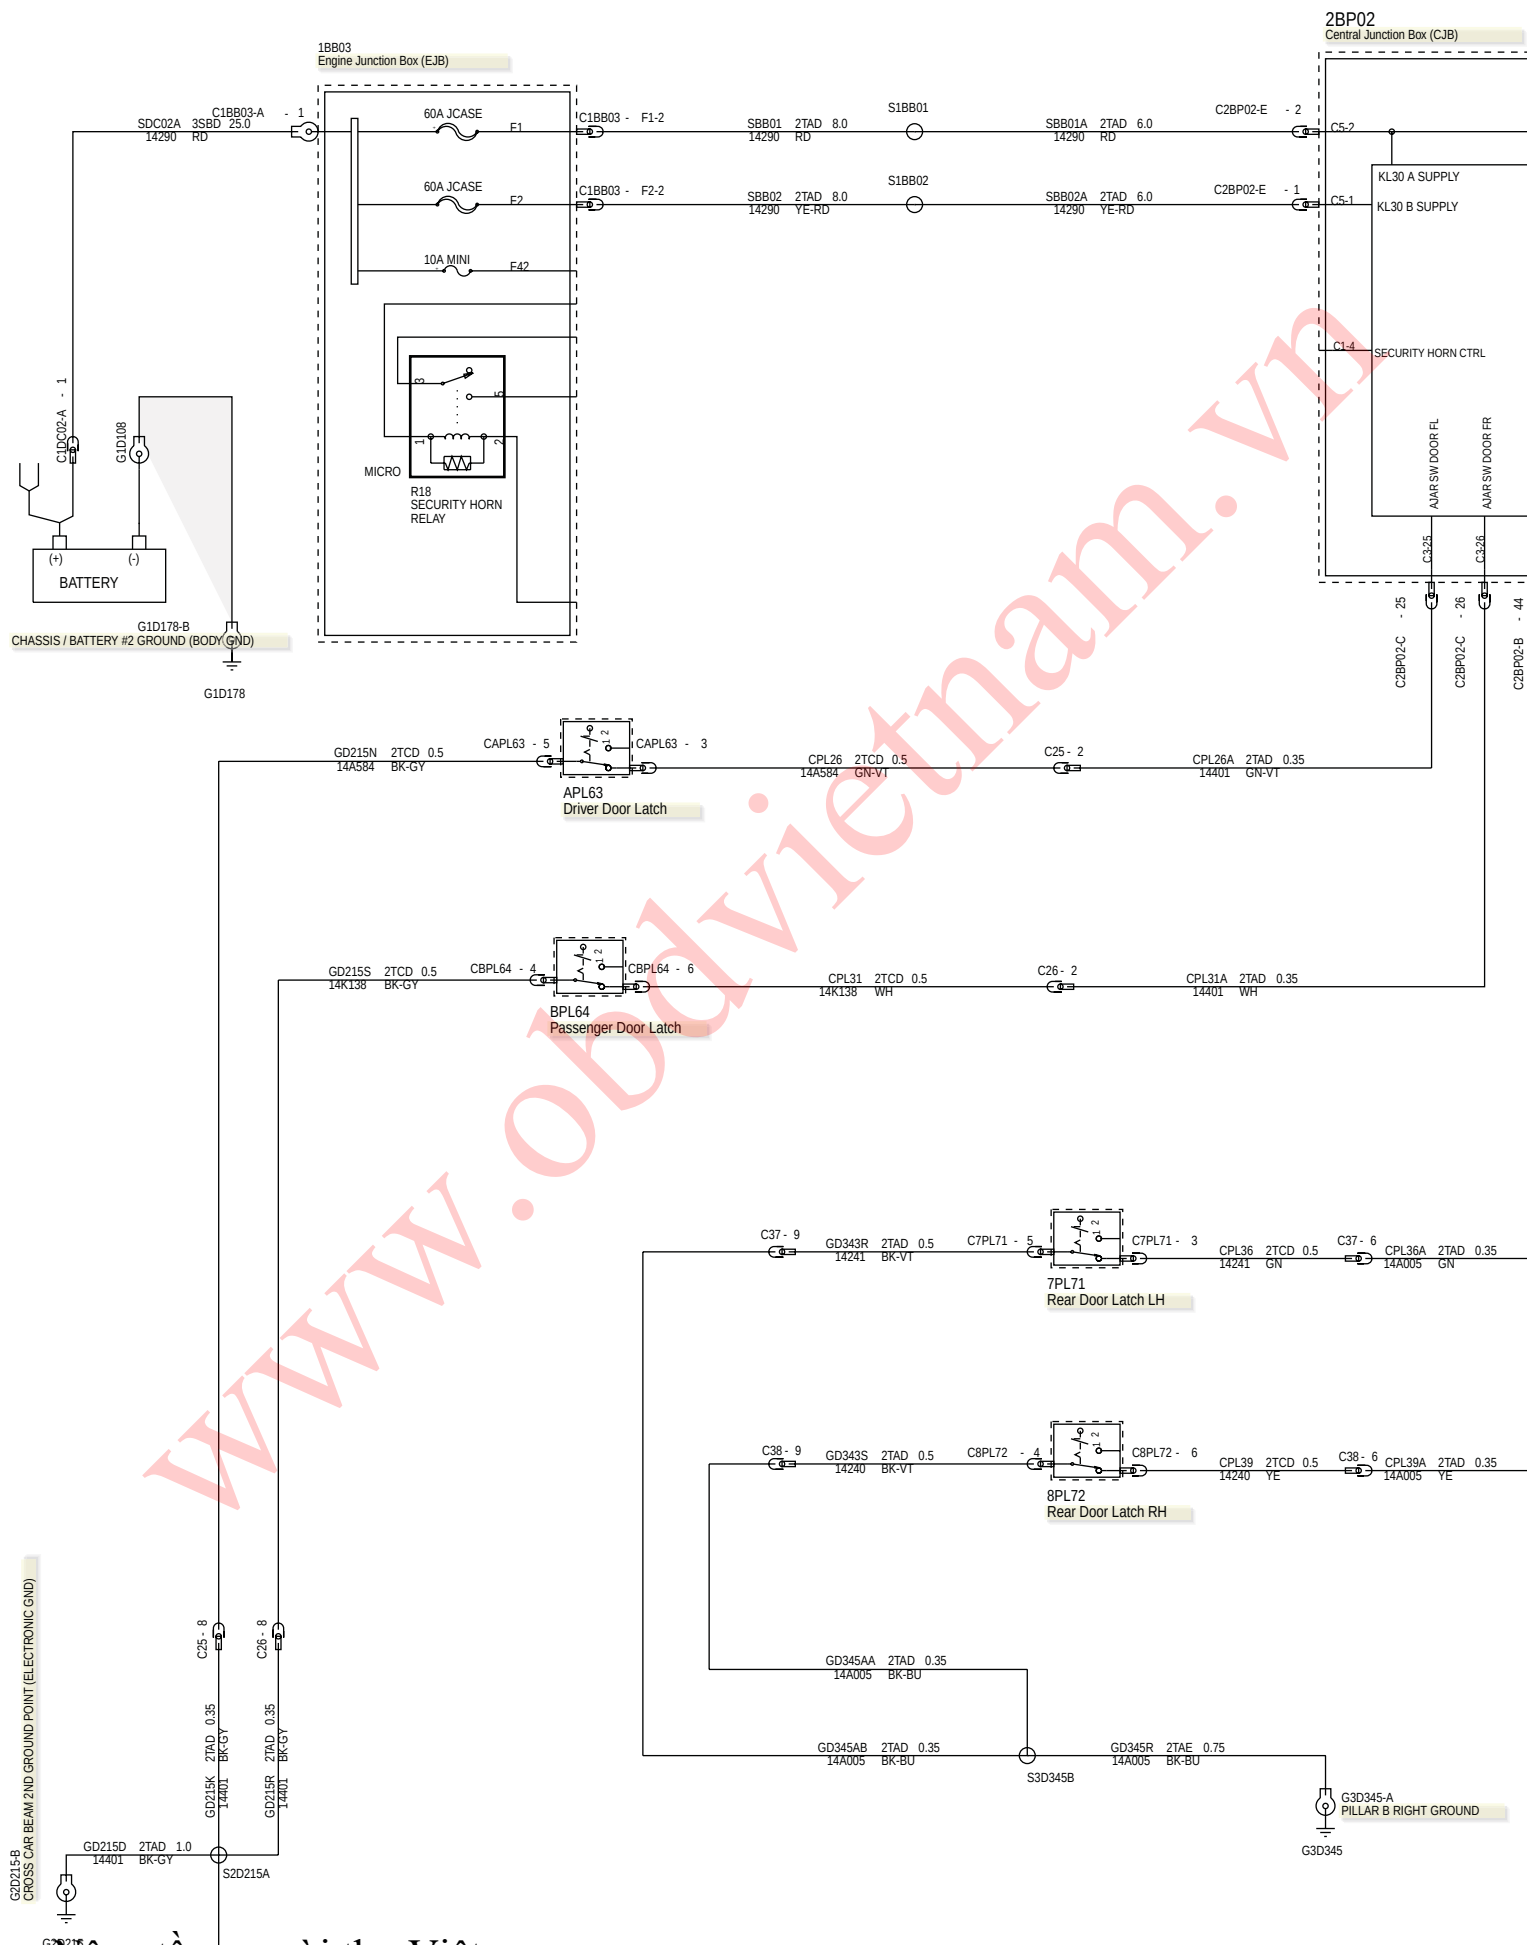


419-01A-6 Anti-Theft Alarm System—Super Cab, LHD 4WD/LHD RWD

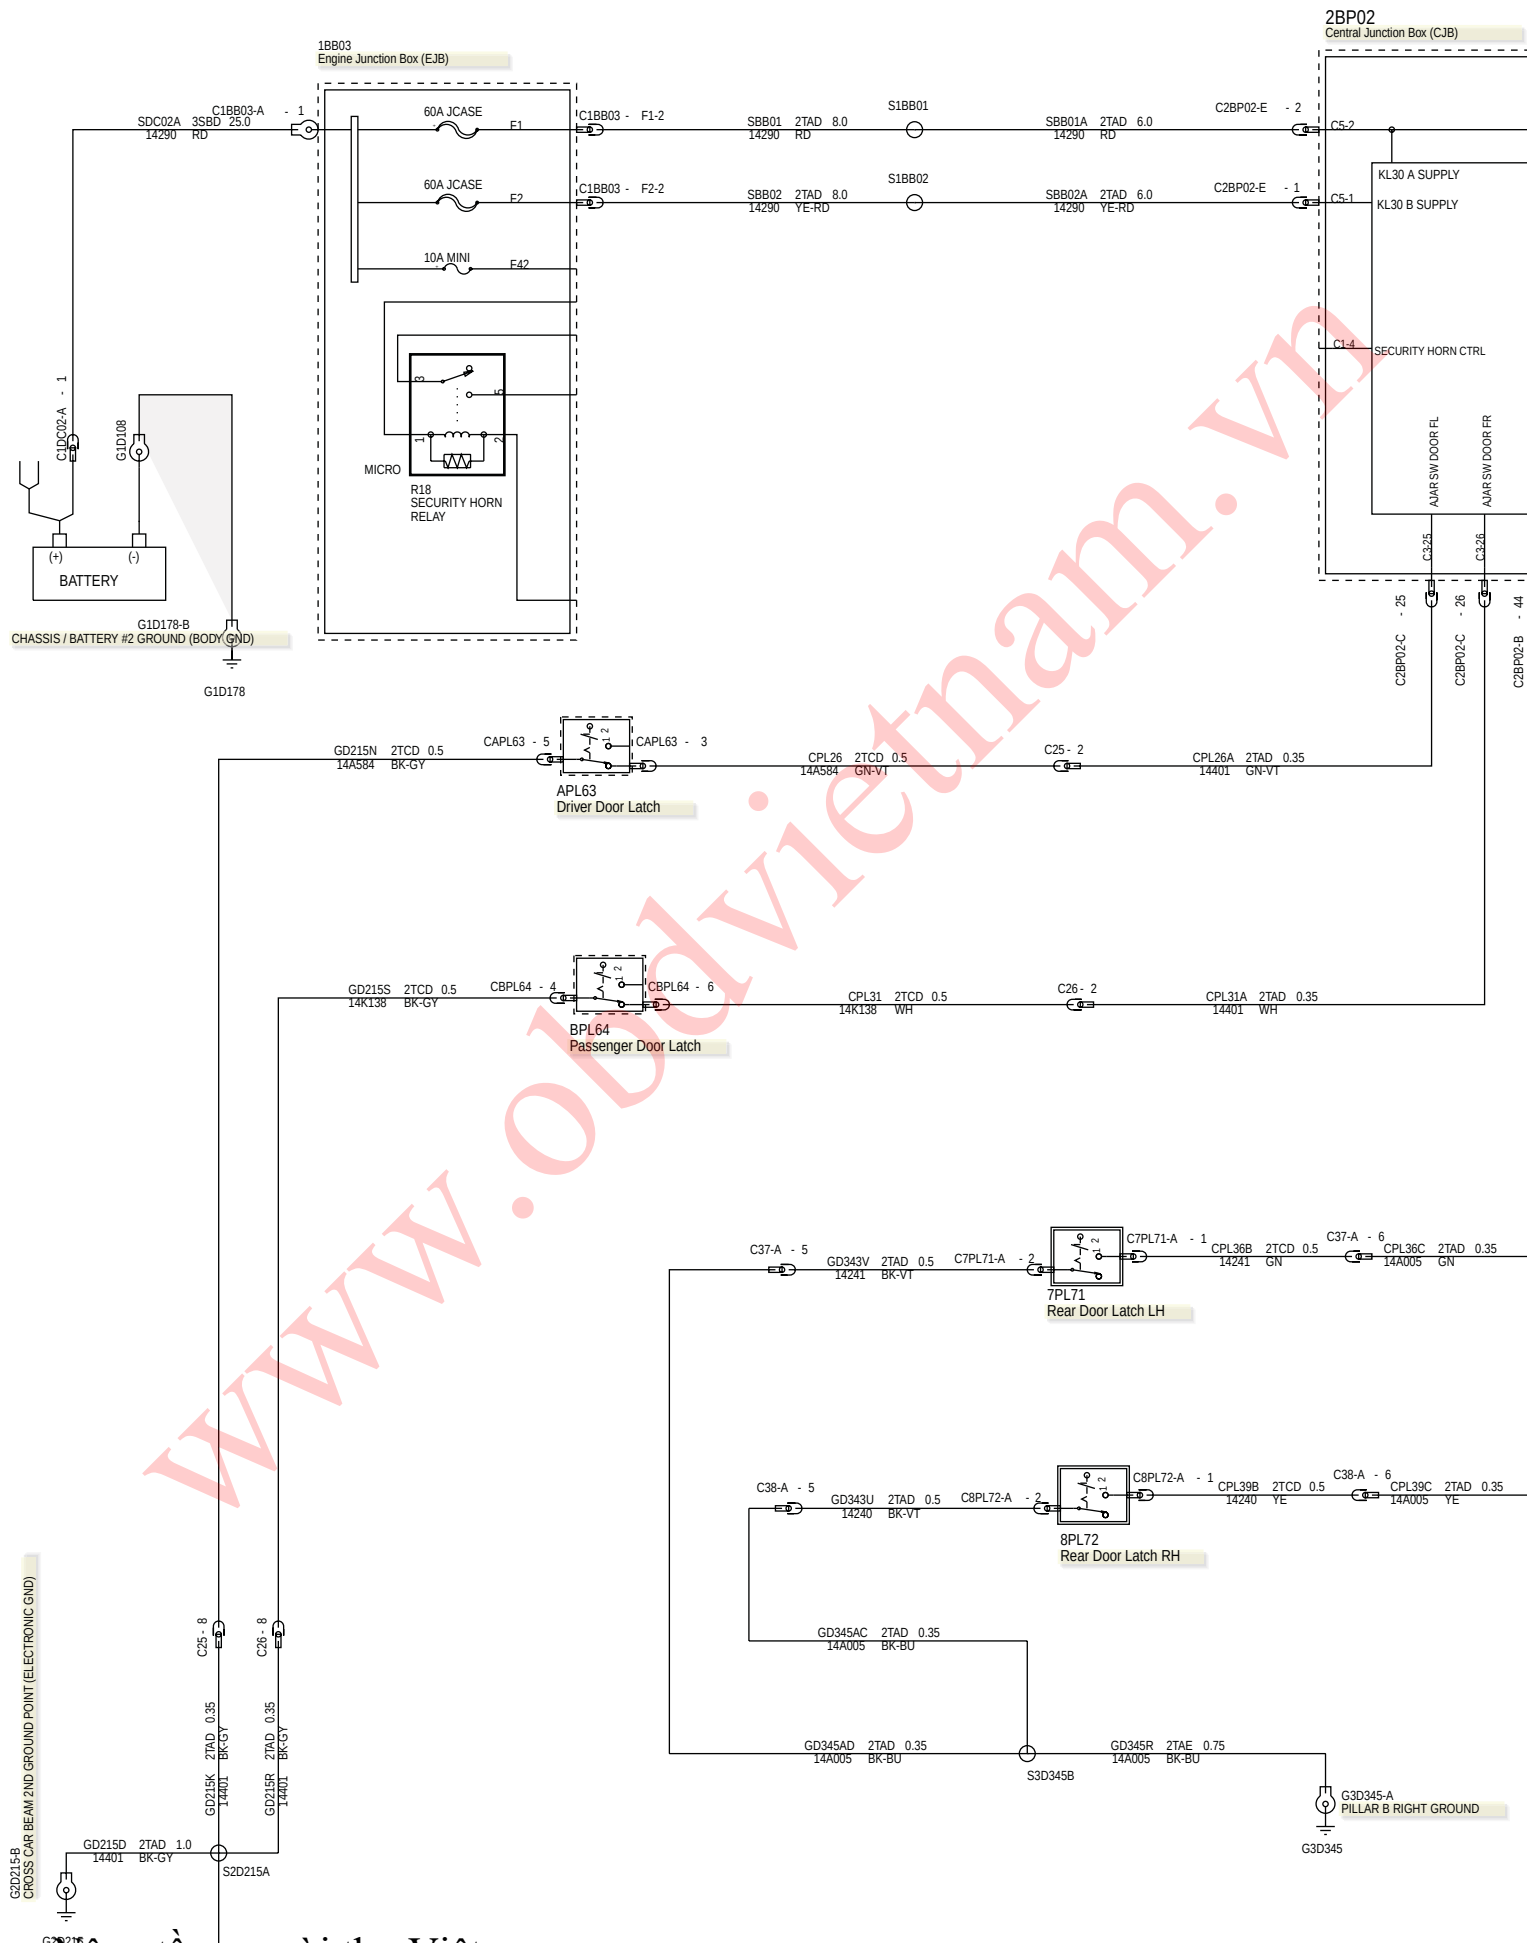


419-01A-7 Anti-Theft Alarm System—Super Cab, LHD 4WD/LHD RWD

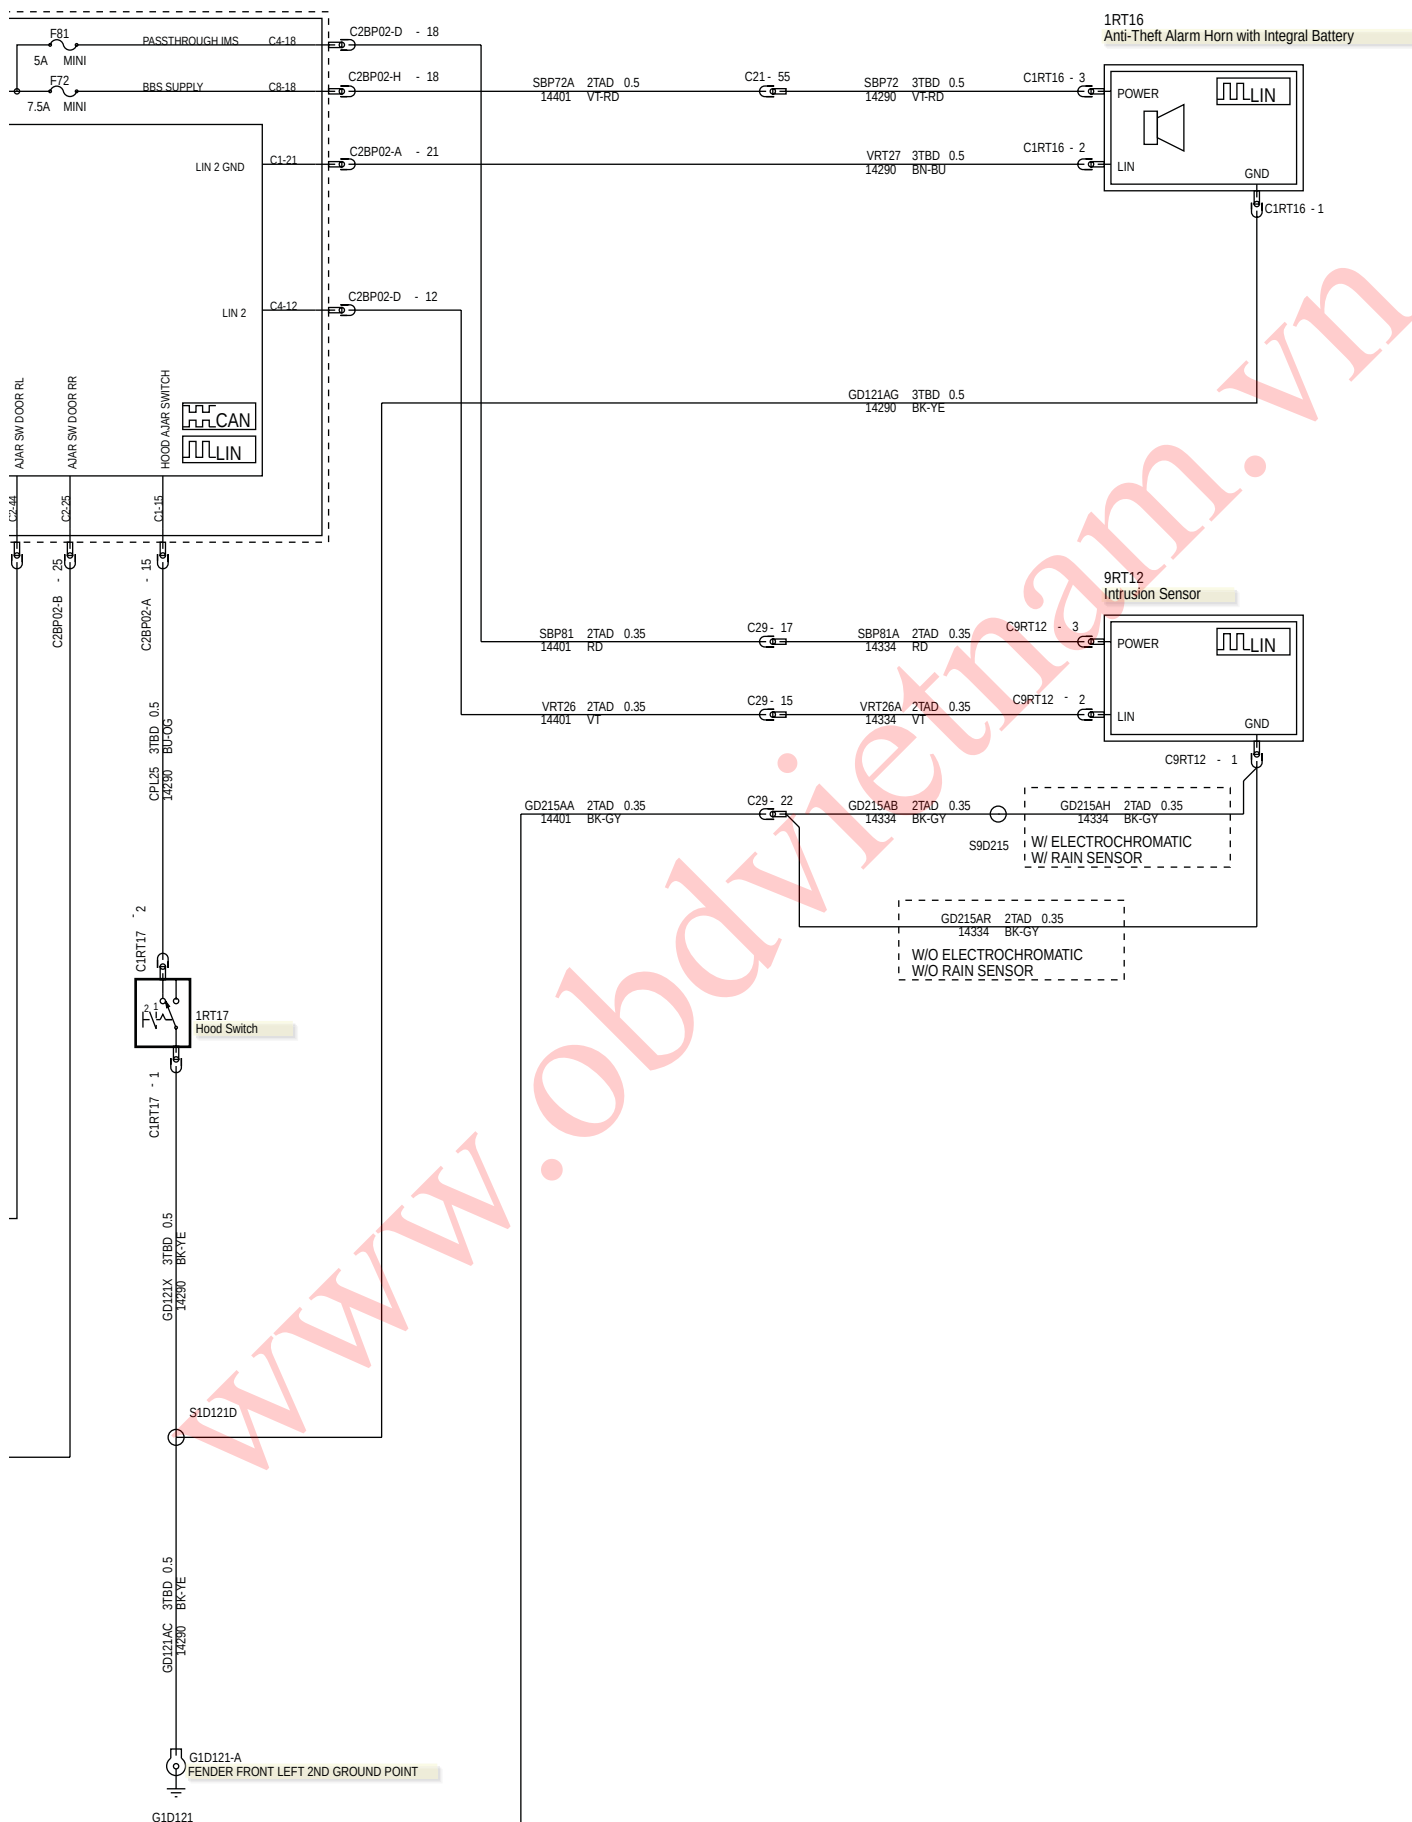


419-01A-8 Anti-Theft Alarm System—Single Cab, RHD 4WD/RHD RWD

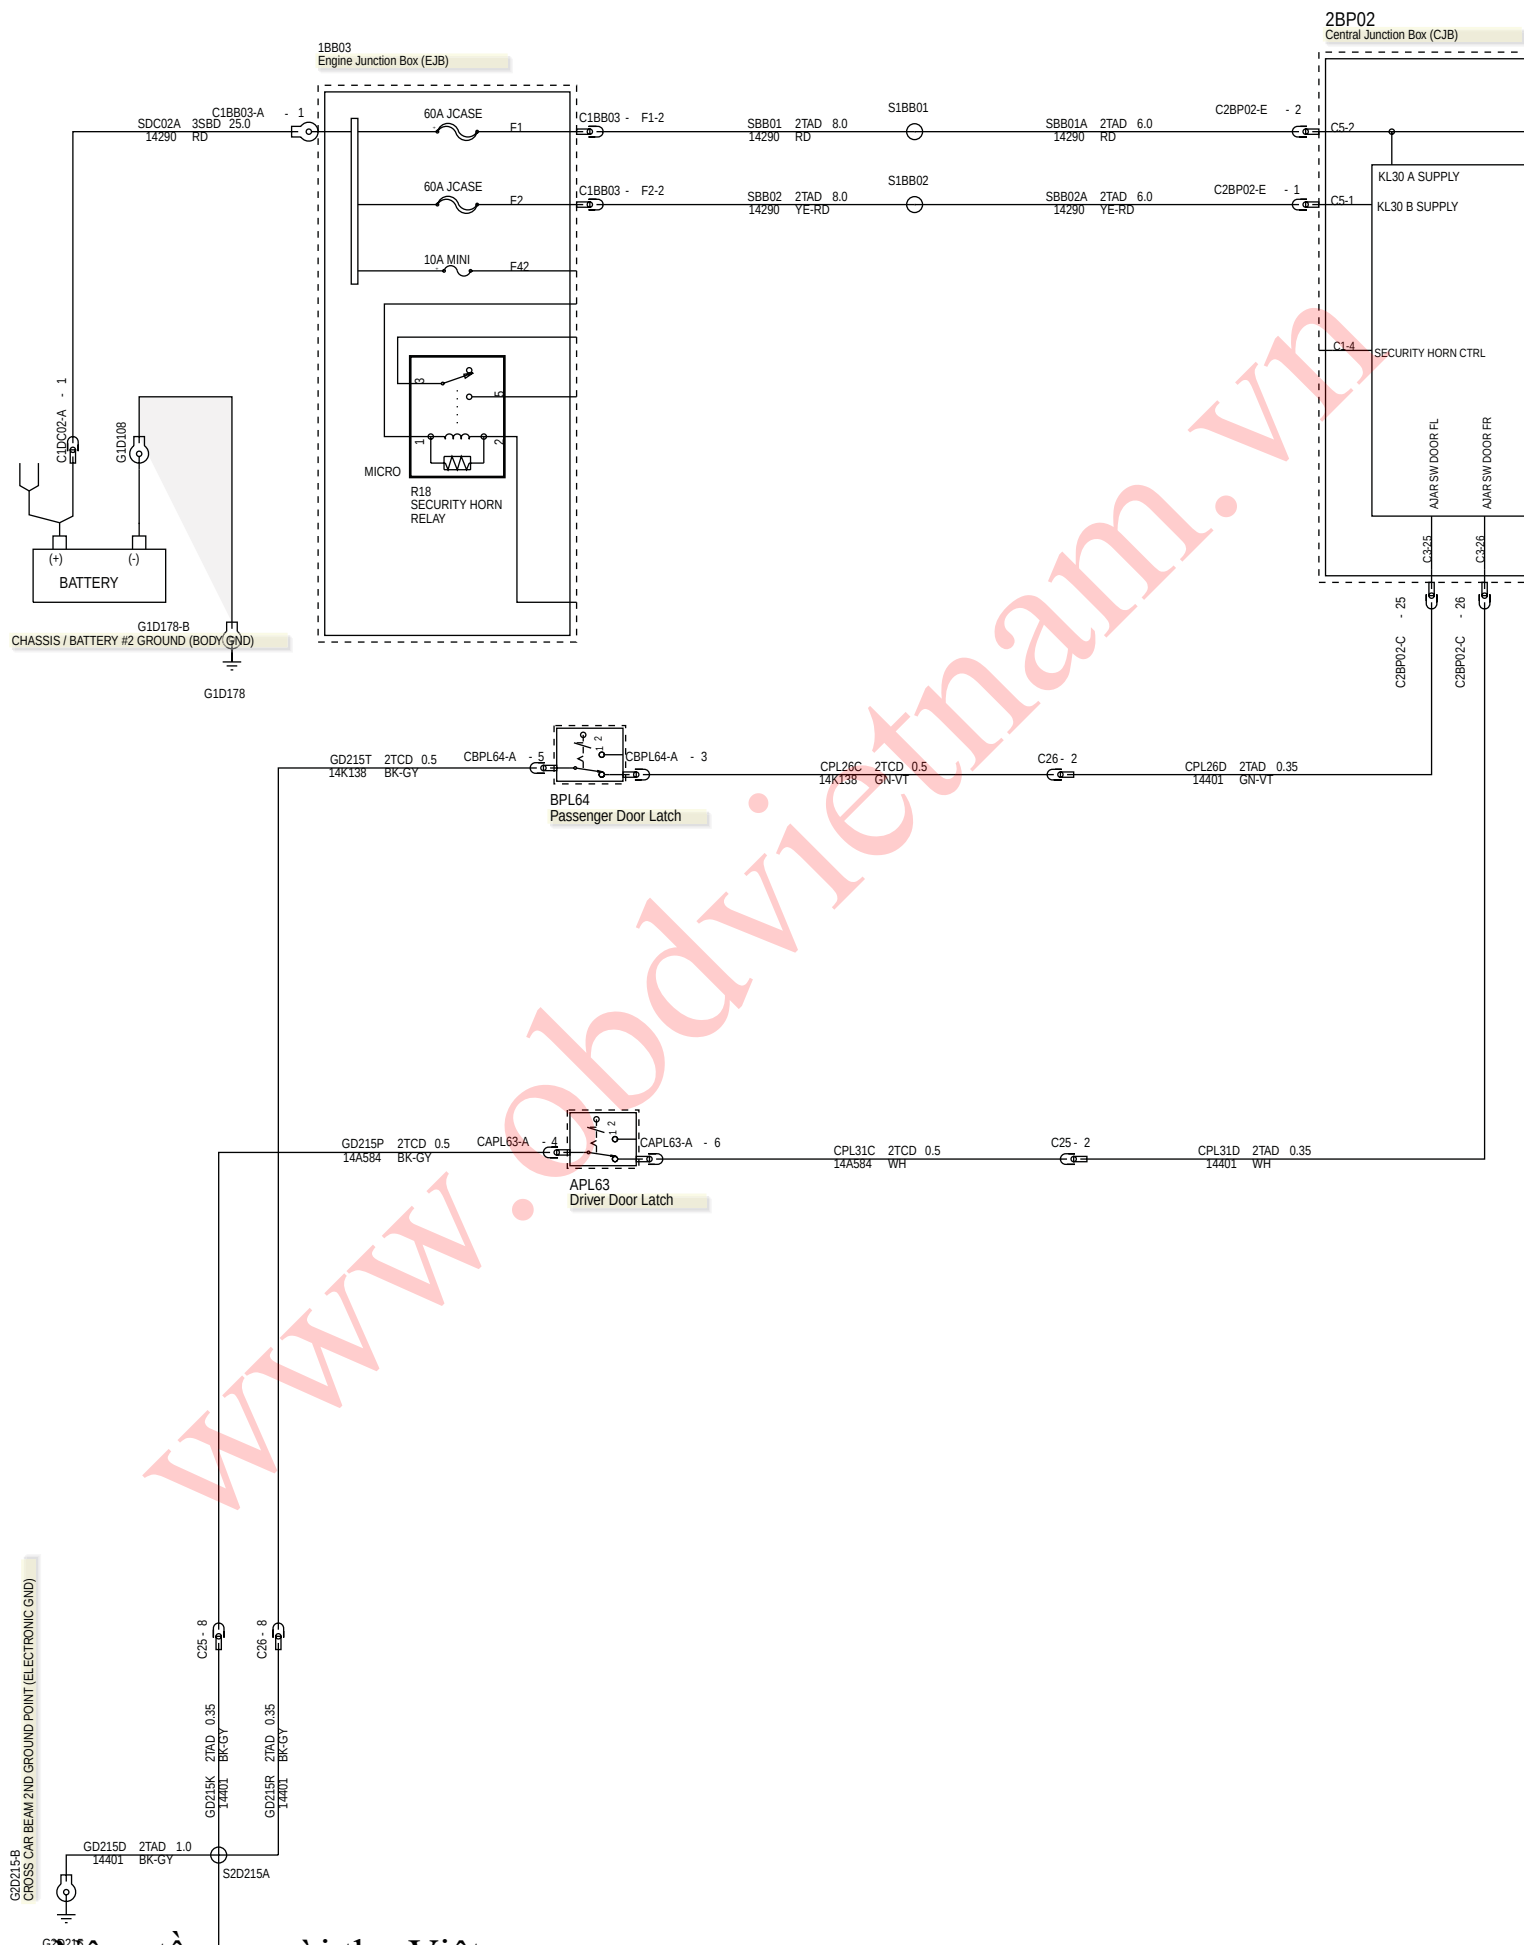

419-01A-9 Anti-Theft Alarm System—Single Cab, RHD 4WD/RHD RWD

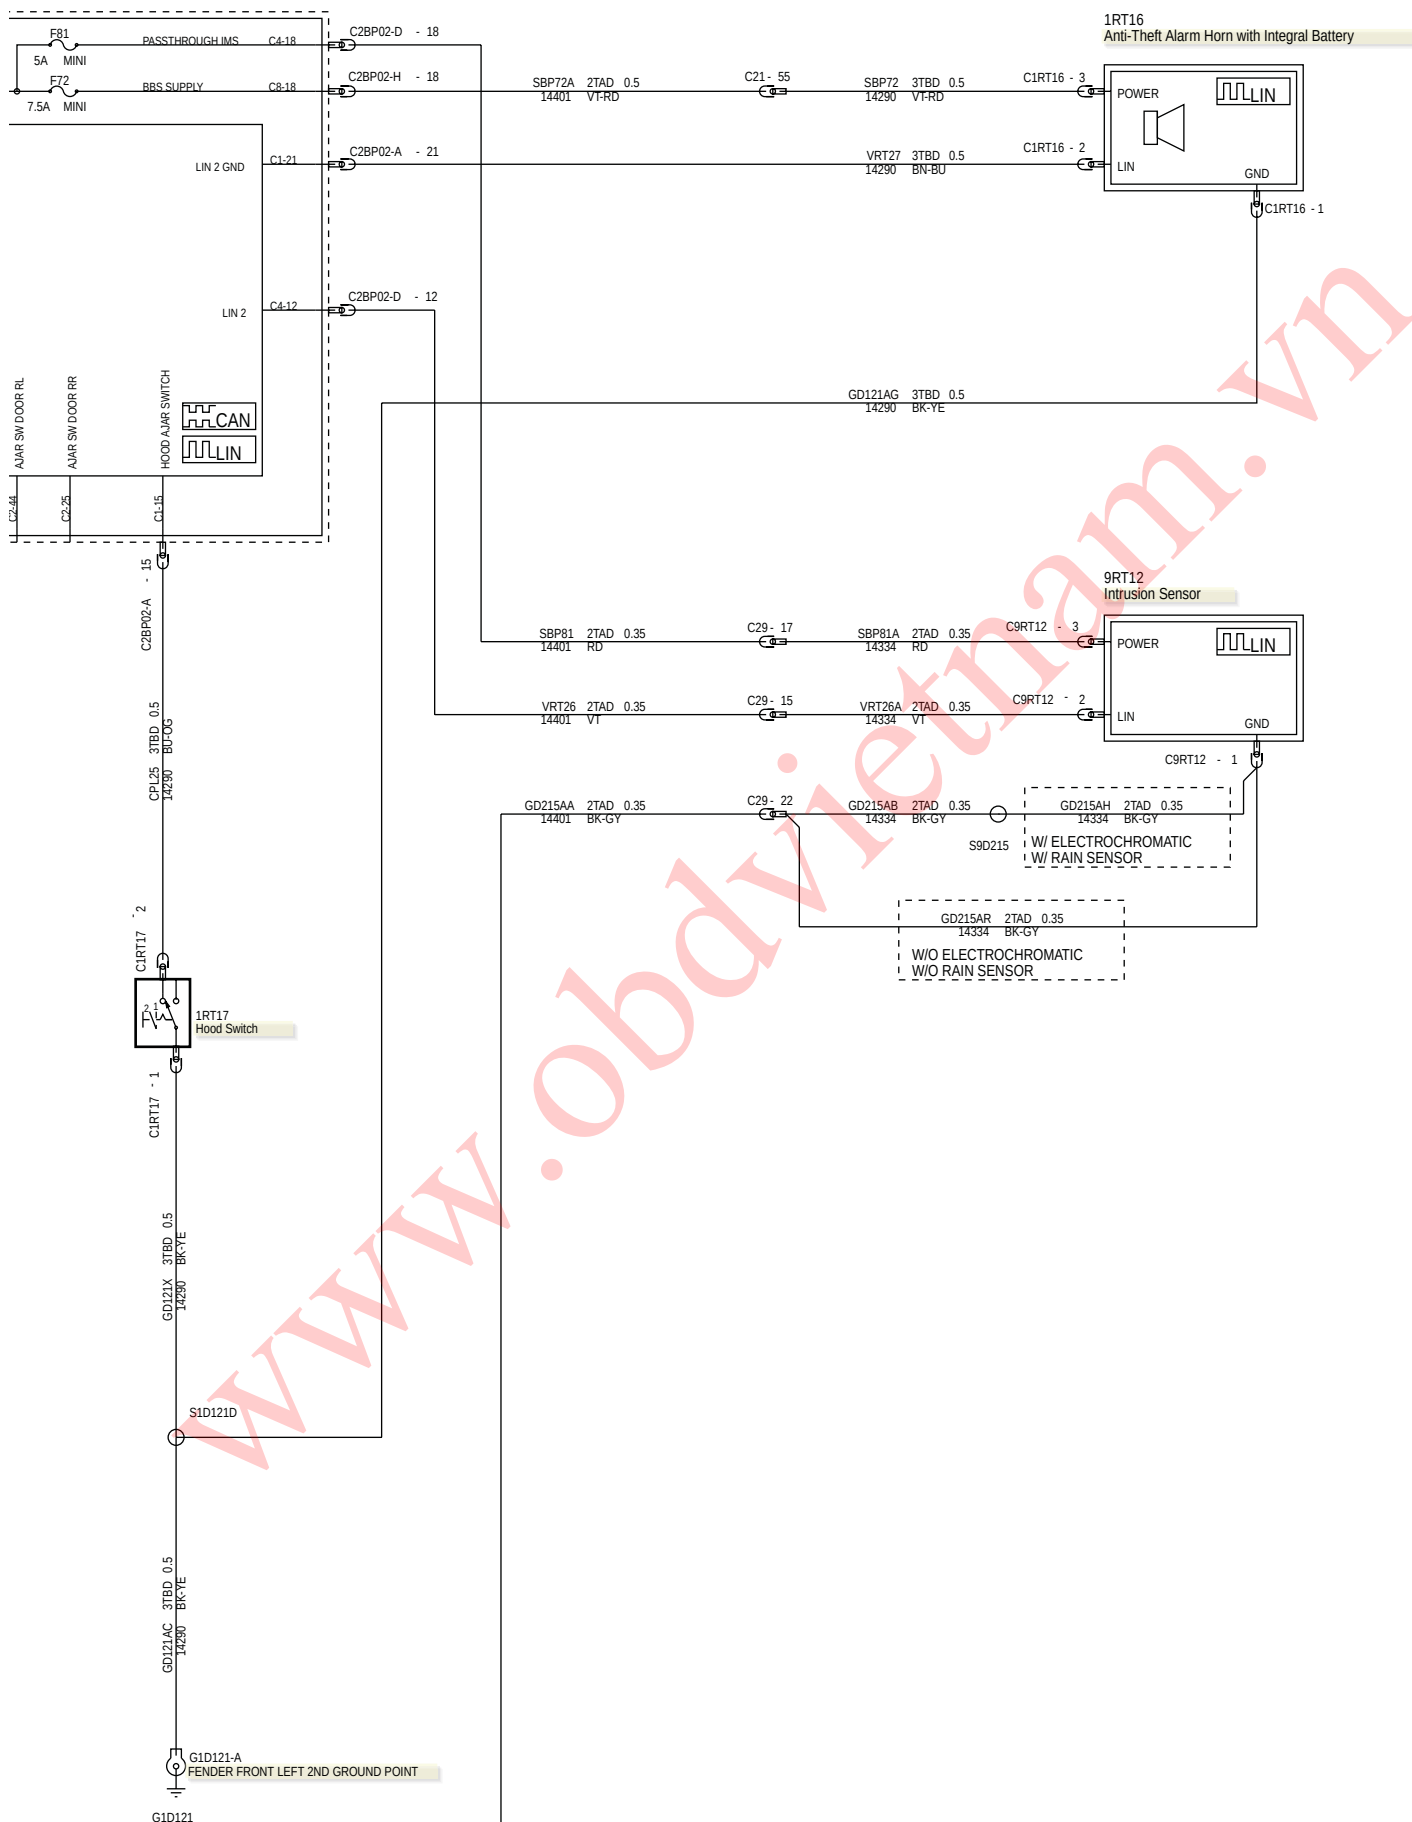


419-01A-10 Anti-Theft Alarm System—Double Cab, RHD 4WD/RHD RWD

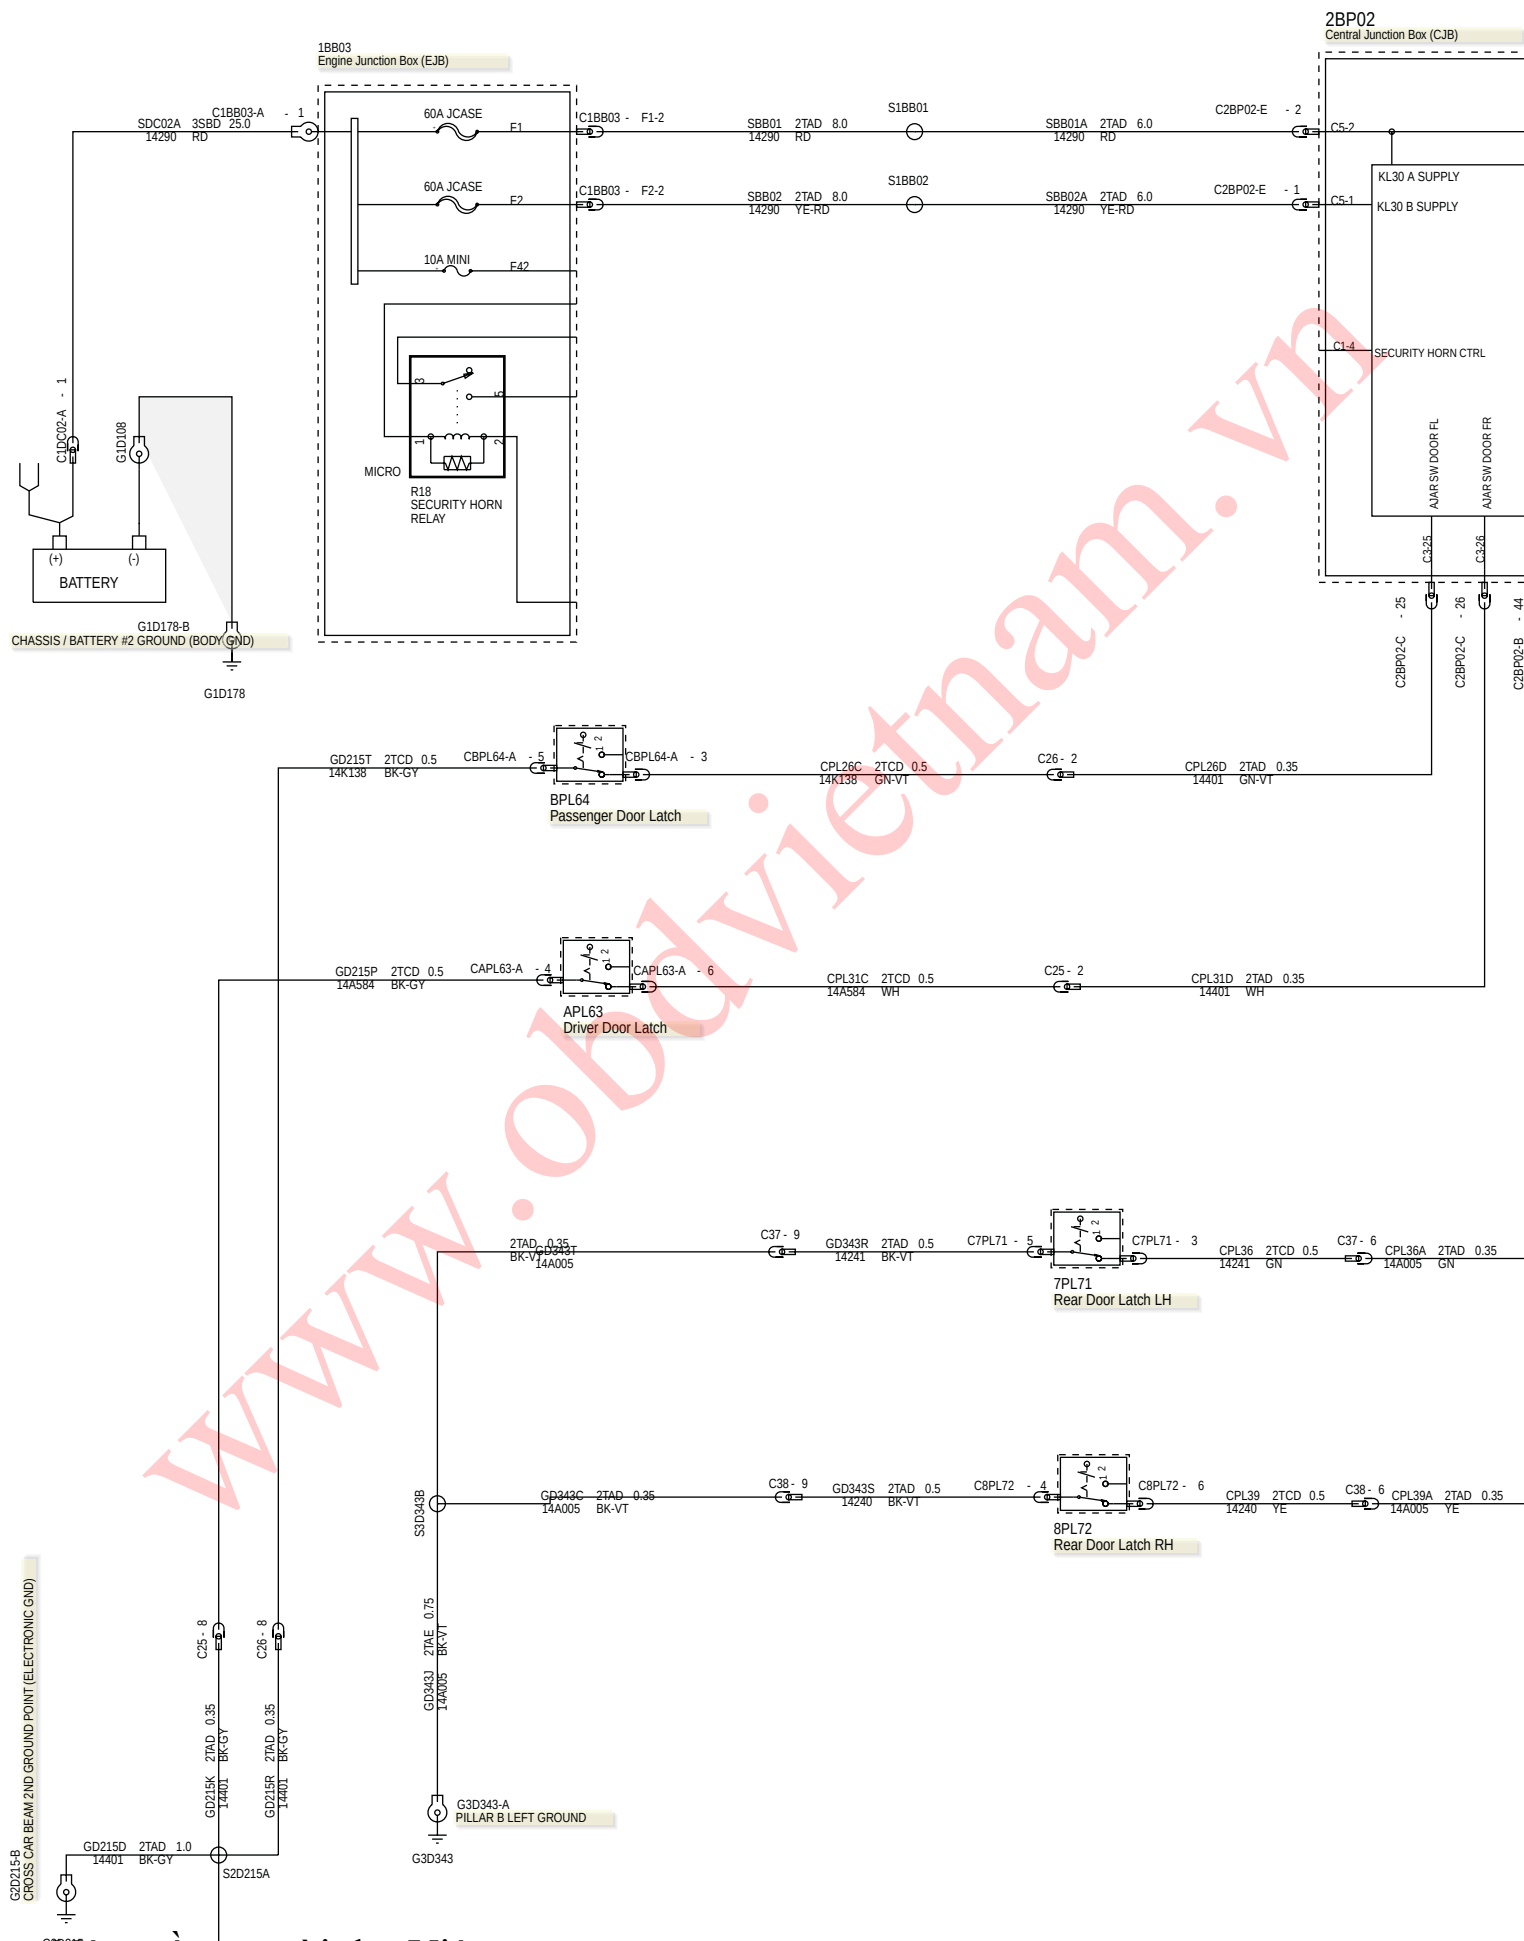




2012.0 Ranger (G1406200)

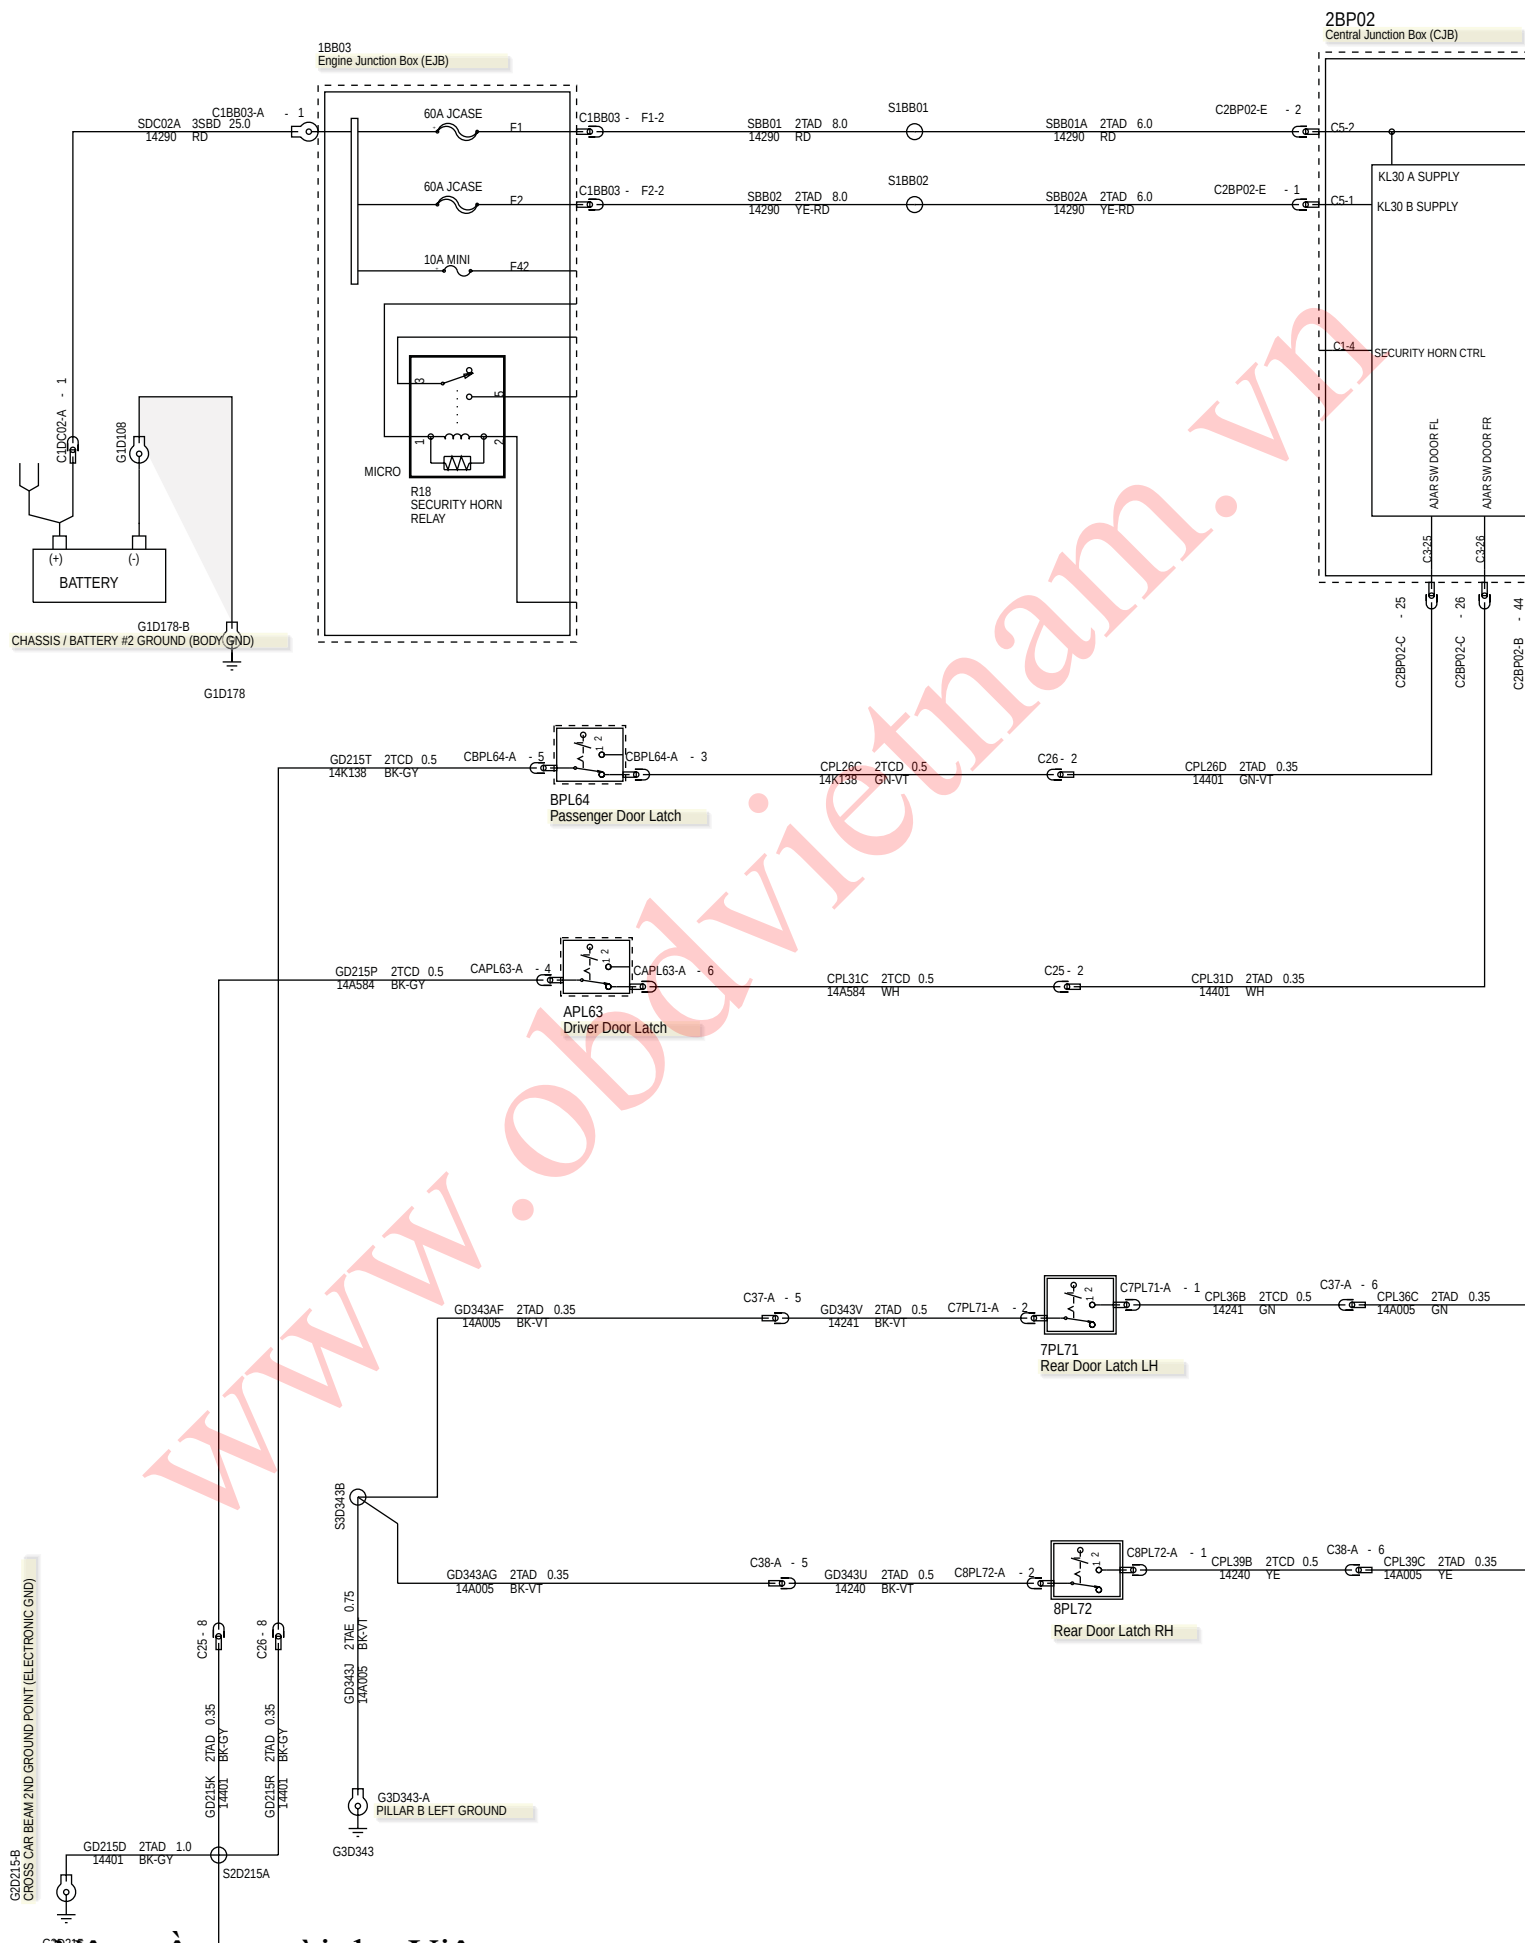


419-01A-13 Anti-Theft Alarm System—Super Cab, RHD 4WD/RHD RWD

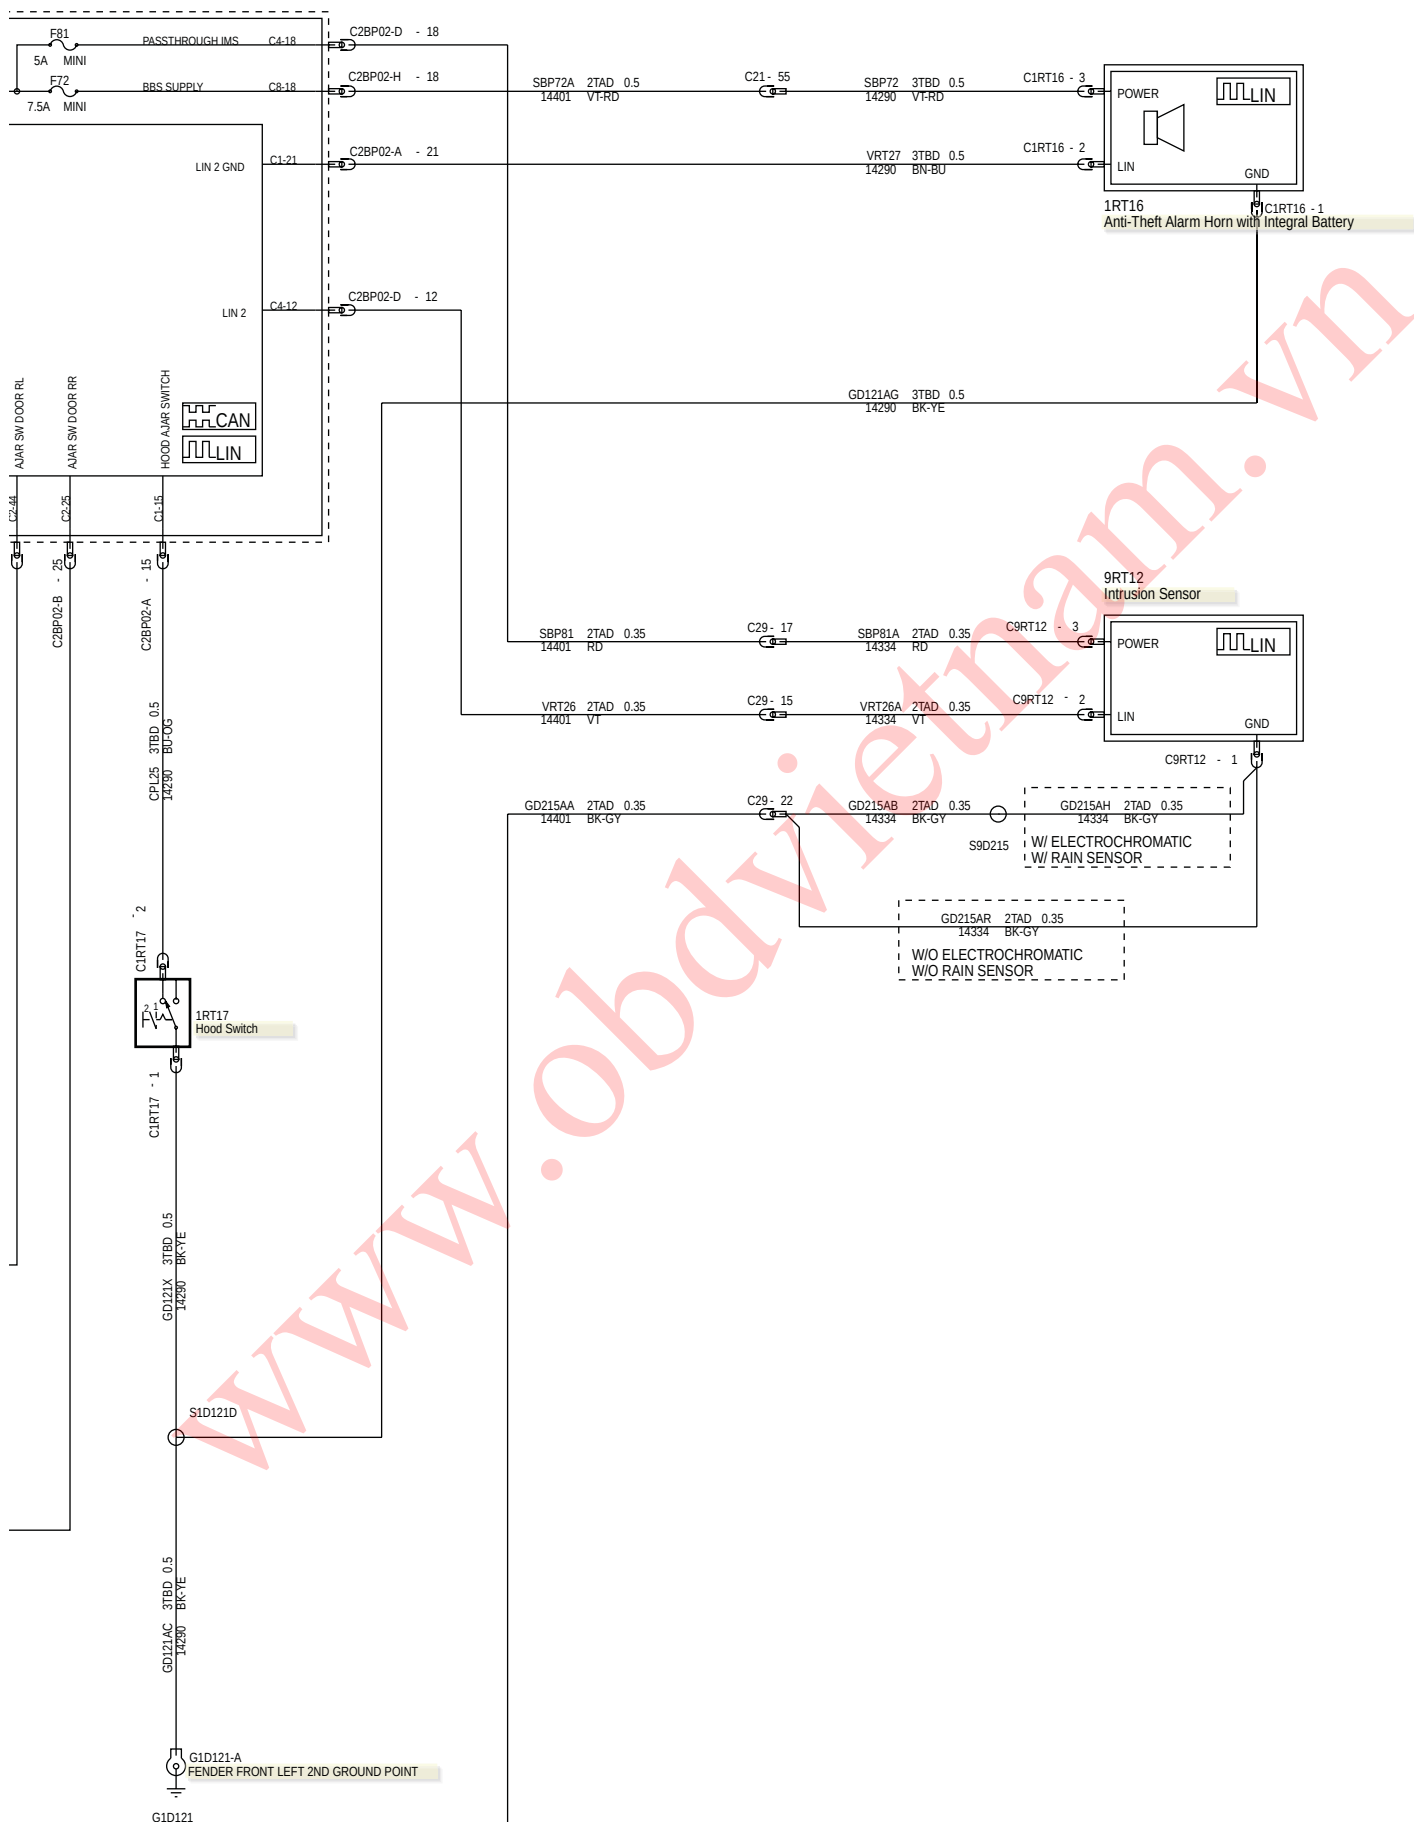

419-01A-14

Anti-Theft Alarm Horn (G1405461)



1 GD123D BK-GY 3TBD 0.75
2 CRT02 GY-VT 3TBD 0.75

4W7T-14A464-BB
C1RT02
TO SECURITY HORN
HARNESS 14290


Anti-Theft Alarm Horn with Integral Battery (G1404588)



1 GD121AG BK-YE 3TBD 0.5
2 VRT27 BN-BU 3TBD 0.5
3 SBP72 VT-RD 3TBD 0.5

2R8T-14A464-EA
C1RT16
TO BATTERY BACKED SOUNDER
HARNESS 14290


Anti-Theft Alarm Module (G1404589)

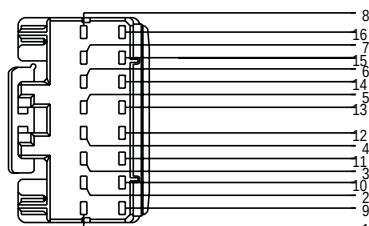

VDB10 GY-2TAD 0.35
VRT22 GY-BN 2TAD 0.35
CRT03 WH-VT 2TAD 0.35
GD215J BK-GY 2TAD 0.35
VRT23B VT-GY 2TAD 0.35
CBP85K YE 2TAD 0.35
CBP69C WH-VT 2TAD 0.35

3W4T-14A464-XA
C2RT03
TO TRACKING & BLOCKING MODULE
HARNESS 14401

Hood Switch (G1404590)

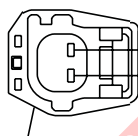

2 CPL25 BU-OG 3TBD 0.5
1 GD121X BK-YE 3TBD 0.5

XW4T-14A464-AJB
C1RT17
TO HOOD AJAR SWITCH
HARNESS 14290

Intrusion Sensor (G1404591)

PIN 1 => GD215AR BK-GY 0.35 2TAD + GD215AH BK-GY 0.35 2TAD



3 SBP81A RD 2TAD 0.35
2 VRT26A VT 2TAD 0.35
GD215AH BK-GY 2TAD 0.35 + GD215AR BK-GY 2TAD 0.35

6G9Z 89-CCA
C9RT12
TO INTERIOR MOTION SENSOR
HARNESS 14334

SECTION 419-01B Anti-Theft - Passive

VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS

PAGE


ELECTRICAL SCHEMATICS

Passive Anti-Theft System (PATS)..... 419-01B-2


ELECTRICAL CONNECTORS

Passive Anti-Theft System (PATS) Transceiver..... 419-01B-4

419-01B-2 Passive Anti-Theft System (PATS)

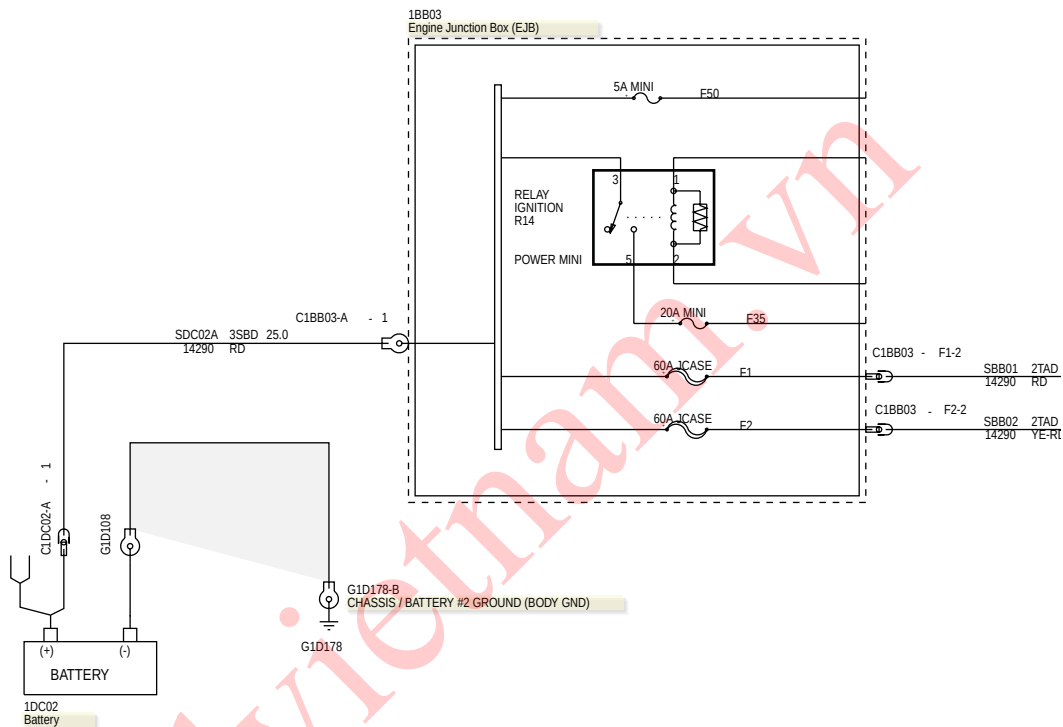


419-01B-3 Passive Anti-Theft System (PATS)

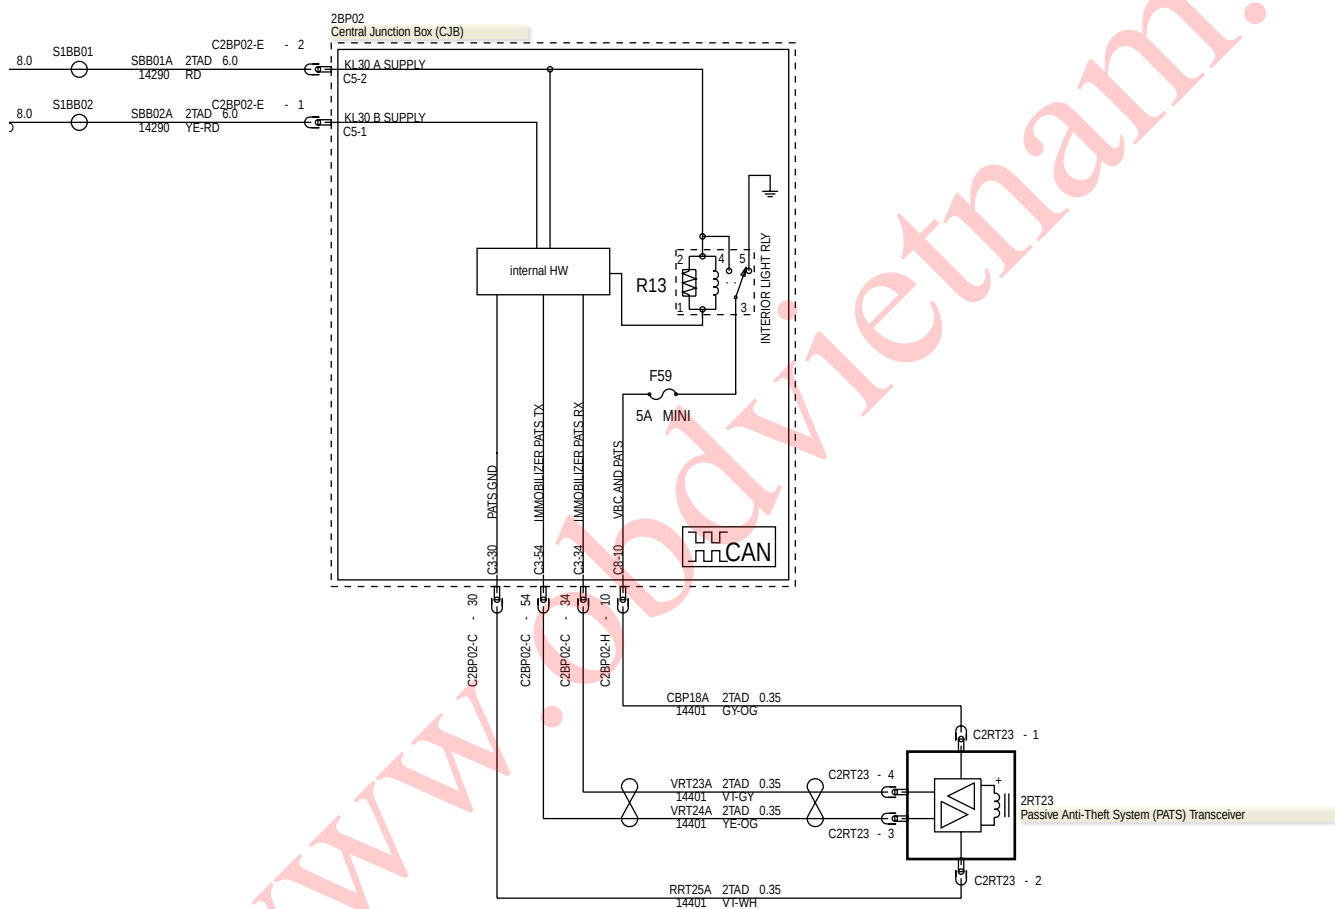

419-01B-4

Passive Anti-Theft System (PATS) Transceiver (G1404593)

PIN 3 => VRT24B YE-OG 0.35 2TAD
PIN 4 => VRT22 GY-BN 0.35 2TAD



— 1	CBP18A	GY-OG	2TAD	0.35
— 2	RRT25A	VT-WH	2TAD	0.35
— 3	VRT24A	YE-OG	2TAD	0.35
— 4	VRT23A	VT-GY	2TAD	0.35

1L2T-14489-GC

C2RT23
TO PATS TRANSCIEVER
HARNESS 14401



SECTION 419-03 Cruise Control

VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS

PAGE

ELECTRICAL CONNECTORS

Cruise Control Switch.....	419-03-2
----------------------------	----------

www.obdviethnam.vn



419-03-2

Cruise Control Switch (G1425385)

IMAGE NOT AVAILABLE

www.obdviethnam.vn

SECTION 419-10 Multifunction Electronic Modules

VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS


PAGE

ELECTRICAL CONNECTORS


Driver Door Module (DDM).....	419-10-2
Driver Door Module (DDM) — A.....	419-10-2
Passenger Door Module (PDM).....	419-10-2
Passenger Door Module (PDM) — A.....	419-10-3
Rear Door Module (RDM) LH.....	419-10-3
Rear Door Module (RDM) RH.....	419-10-3

419-10-2


Driver Door Module (DDM) (G1405466)

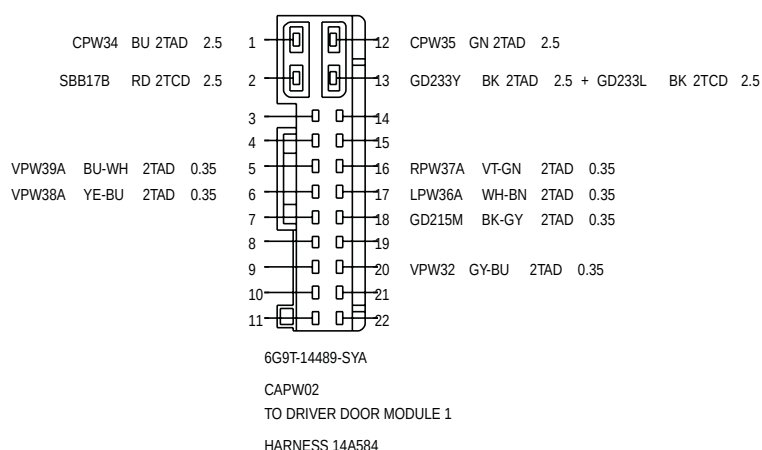

Driver Door Module (DDM)—A (G1405467)

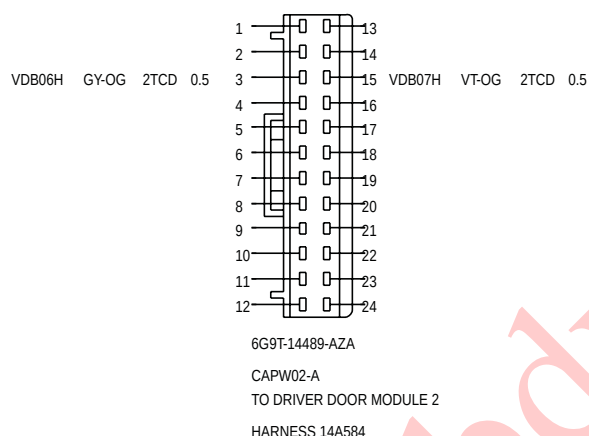


Passenger Door Module (PDM) (G1405468)

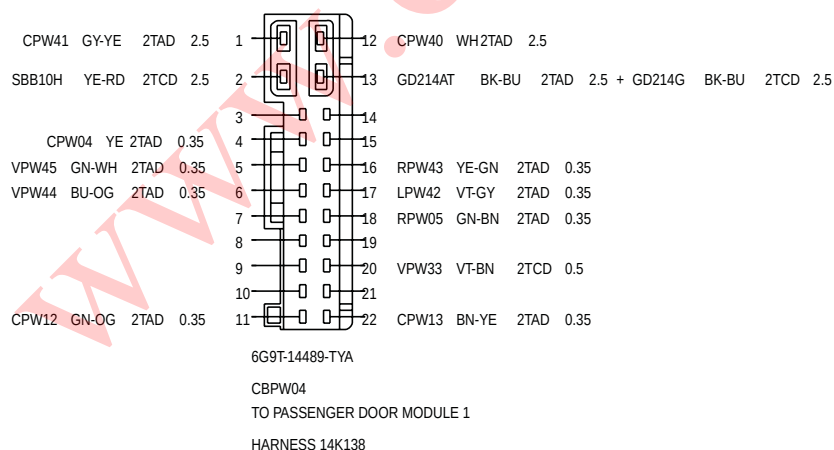


419-10-3


Passenger Door Module (PDM)—A (G1405469)

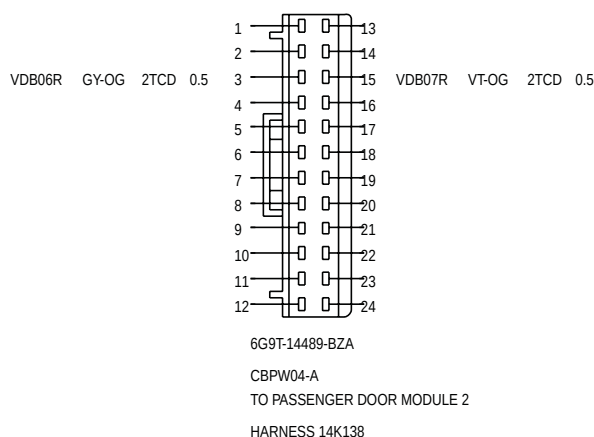

Rear Door Module (RDM) LH (G1404710)

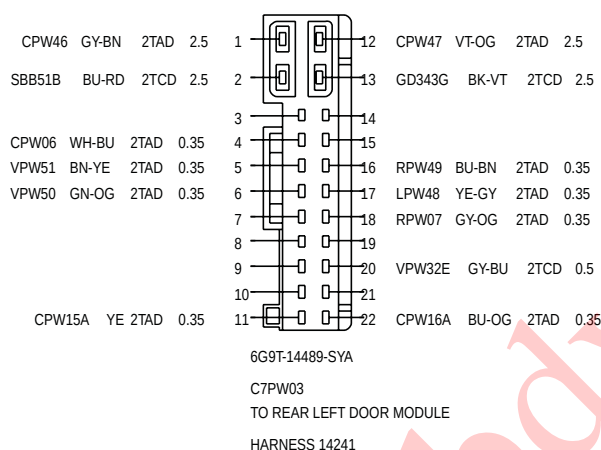

Rear Door Module (RDM) RH (G1404711)

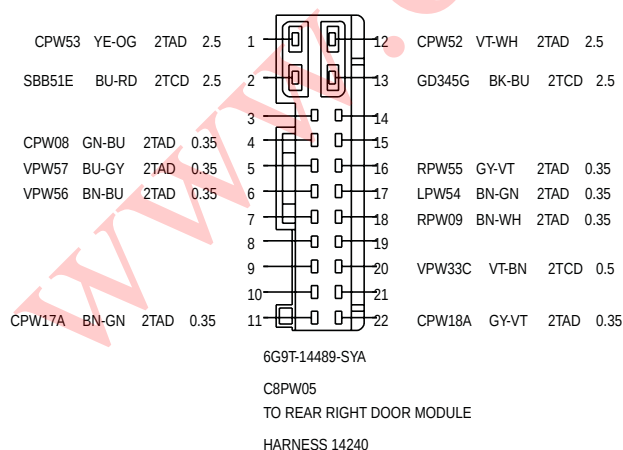

GROUP

5

Body and Paint

SECTION TITLE

PAGE

Body and Paint

Rear View Mirrors.....	501-09
Seating.....	501-10
Glass, Frames and Mechanisms.....	501-11
Instrument Panel and Console.....	501-12
Handles, Locks, Latches and Entry Systems.....	501-14
Wipers and Washers.....	501-16
Safety Belt System.....	501-20A
Supplemental Restraint System.....	501-20B

SECTION 501-09 Rear View Mirrors

VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS


PAGE

ELECTRICAL SCHEMATICS


Auto-Dimming Interior Mirror.....	501-09-2
Power Exterior Mirrors — LHD 4WD/LHD RWD.....	501-09-4
Power Exterior Mirrors — RHD 4WD/RHD RWD.....	501-09-6

ELECTRICAL CONNECTORS


Auto-Dimming Interior Mirror.....	501-09-8
Exterior Mirror Control Switch.....	501-09-8
Exterior Mirror LH.....	501-09-8
Exterior Mirror RH.....	501-09-8

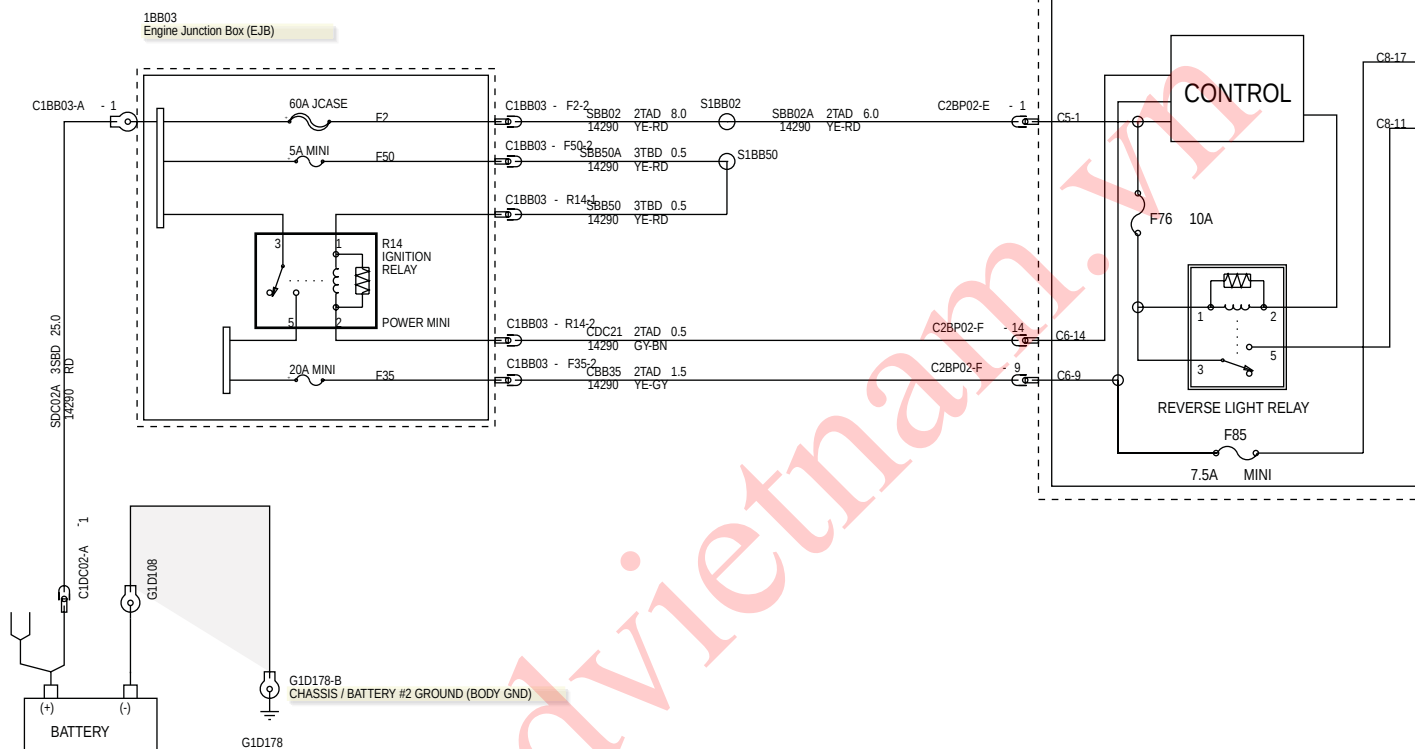

501-09-3 Auto-Dimming Interior Mirror

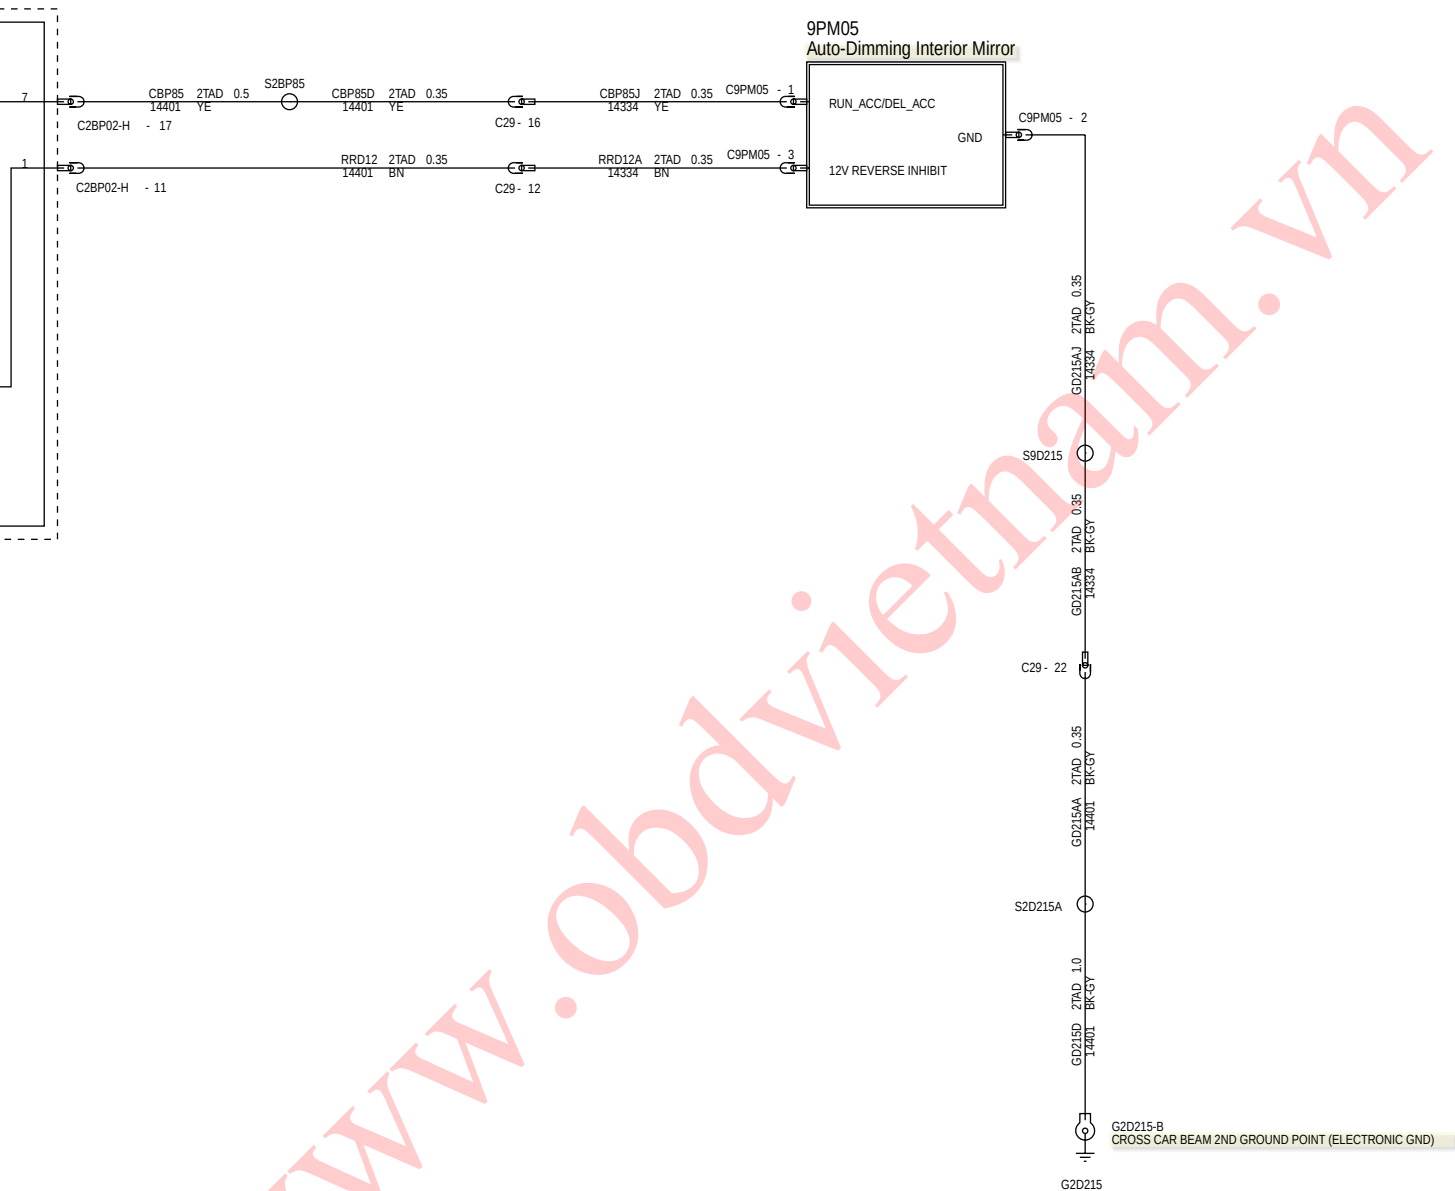


501-09-4 Power Exterior Mirrors—LHD 4WD/LHD RWD

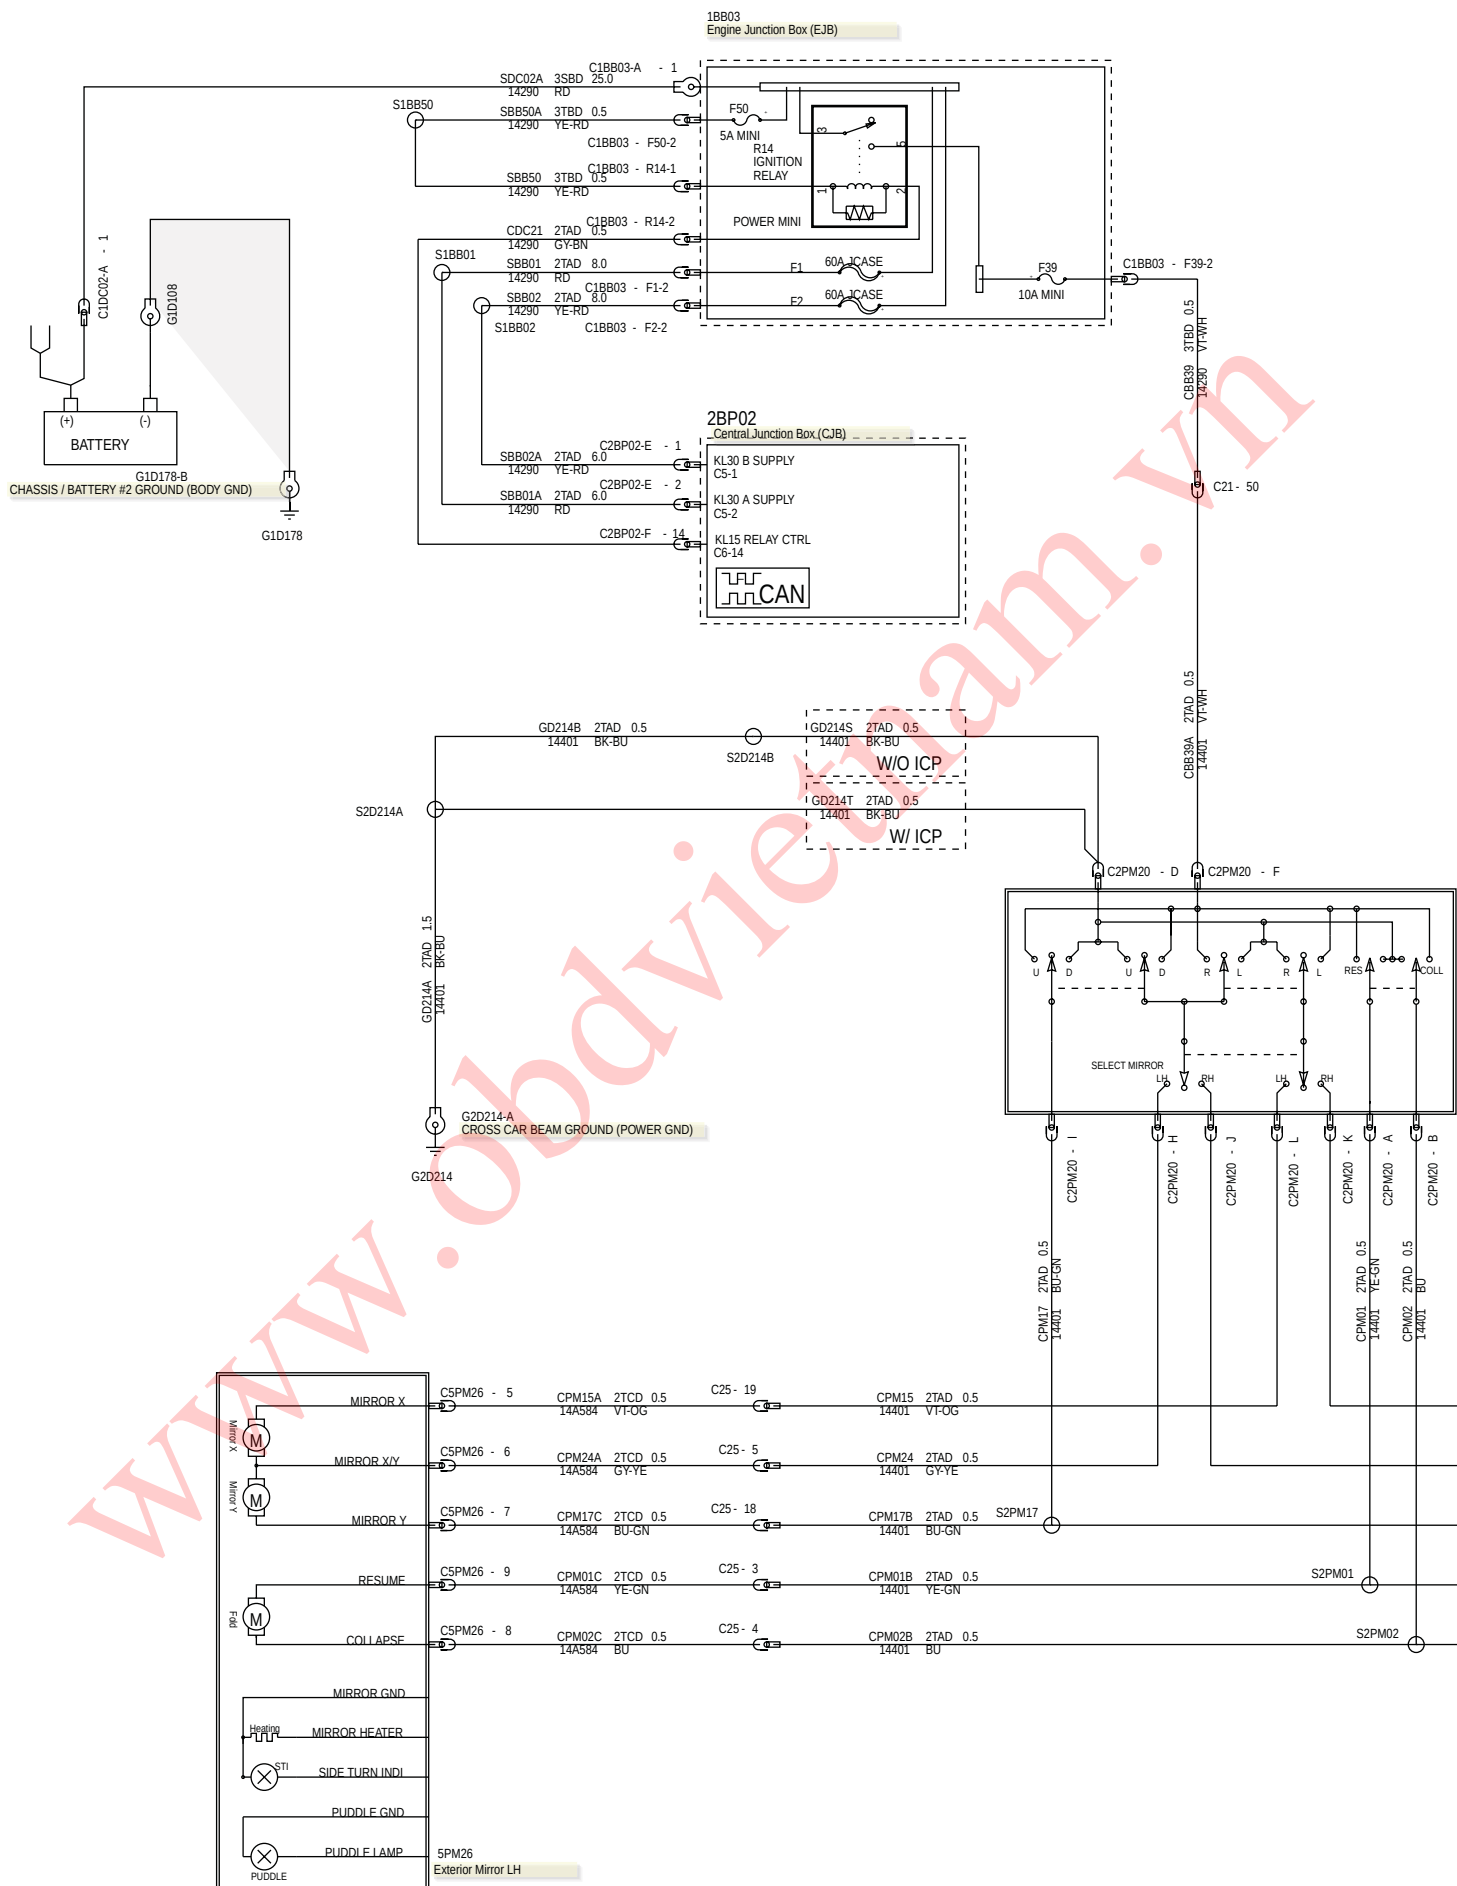

501-09-5 Power Exterior Mirrors—LHD 4WD/LHD RWD


2PM20
Exterior Mirror Control Switch

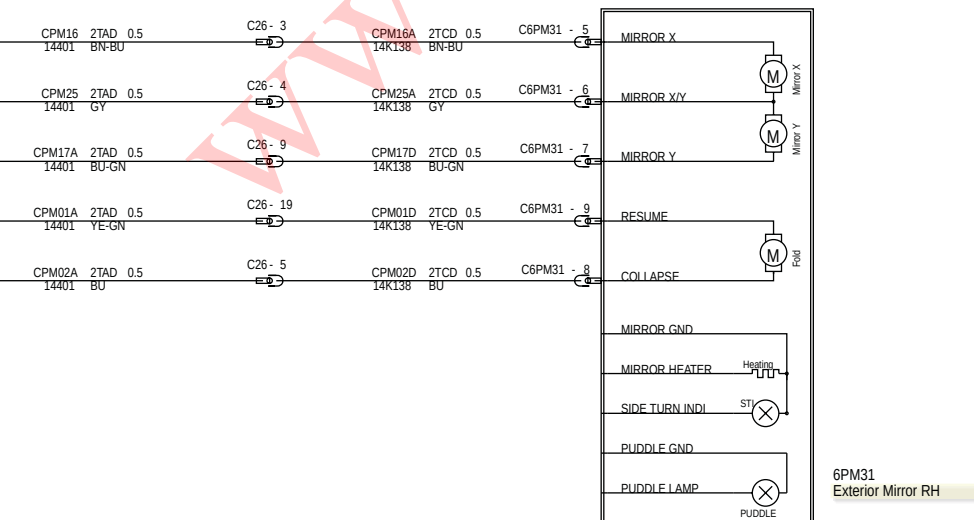

501-09-7 Power Exterior Mirrors—RHD 4WD/RHD RWD


Scroll down to view the diagram

2PM20
Exterior Mirror Control Switch

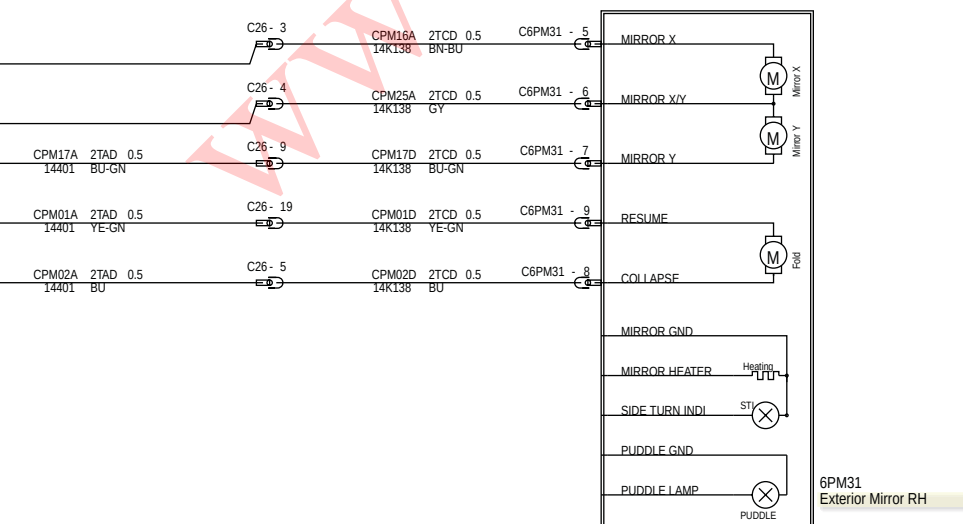

501-09-8

Auto-Dimming Interior Mirror (G1404714)




3M5T-14489-ACB

C9PM05

TO ELECTROCHROMATIC MIRROR

HARNESS 14334


Exterior Mirror Control Switch (G1404729)

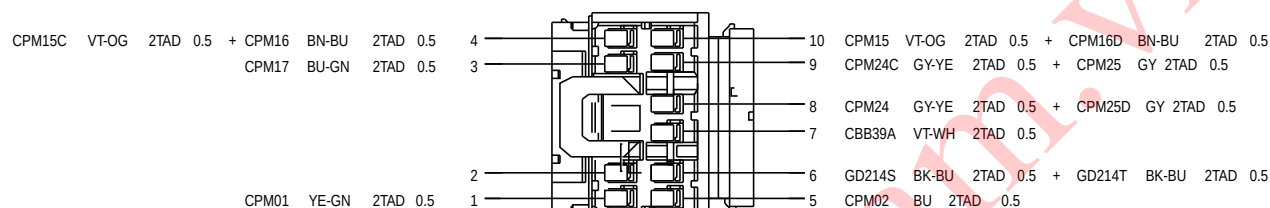

C2PM20
MS-AL-10F
TO MIRROR ADJUST SWITCH
HARNESS 14401

Exterior Mirror LH (G1404730)

PIN 5 => CPM15D VT-OG 0.35 2TAD + CPM15B VT-OG 0.35 2TAD
PIN 6 => CPM24D GY-YE 0.35 2TAD + CPM24B GY-YE 0.35 2TAD
PIN 7 => CPM17F BU-GN 0.35 2TAD
PIN 8 => CPM02F BU 0.35 2TAD
PIN 9 => CPM01F YE-GN 0.35 2TAD

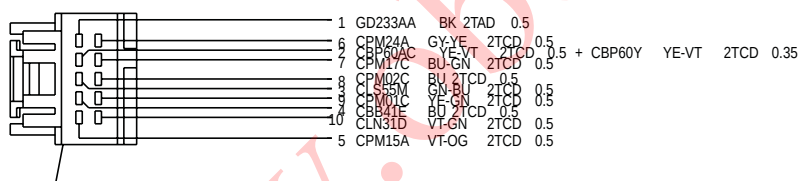

2L1T-14A464-GA


C5PM26

TO DRIVER MIRROR UNIT

HARNESS 14A584

Exterior Mirror RH (G1406842)

PIN 1 => GD214AU BK-BU 0.5 2TAD
PIN 1 => GD214AU BK-BU 0.5 2TAD + GD214AV BK-BU 0.5 2TCD

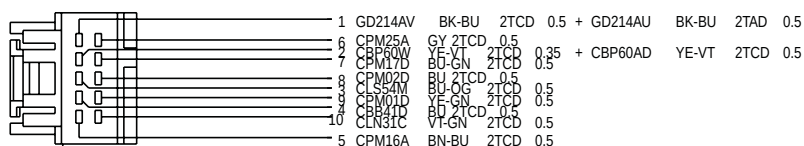

2L1T-14A464-GA

C6PM31

TO PASSENGER MIRROR UNIT

HARNESS 14K138

SECTION 501-10 Seating

VEHICLE APPLICATION: 2012.0 Ranger


CONTENTS

PAGE

ELECTRICAL SCHEMATICS


Heated Seats — LHD 4WD/LHD RWD.....	501-10-2
Heated Seats — RHD 4WD/RHD RWD.....	501-10-4
Power Seats — LHD 4WD/LHD RWD.....	501-10-6
Power Seats — RHD 4WD/RHD RWD.....	501-10-8

501-10-2 Heated Seats—LHD 4WD/LHD RWD

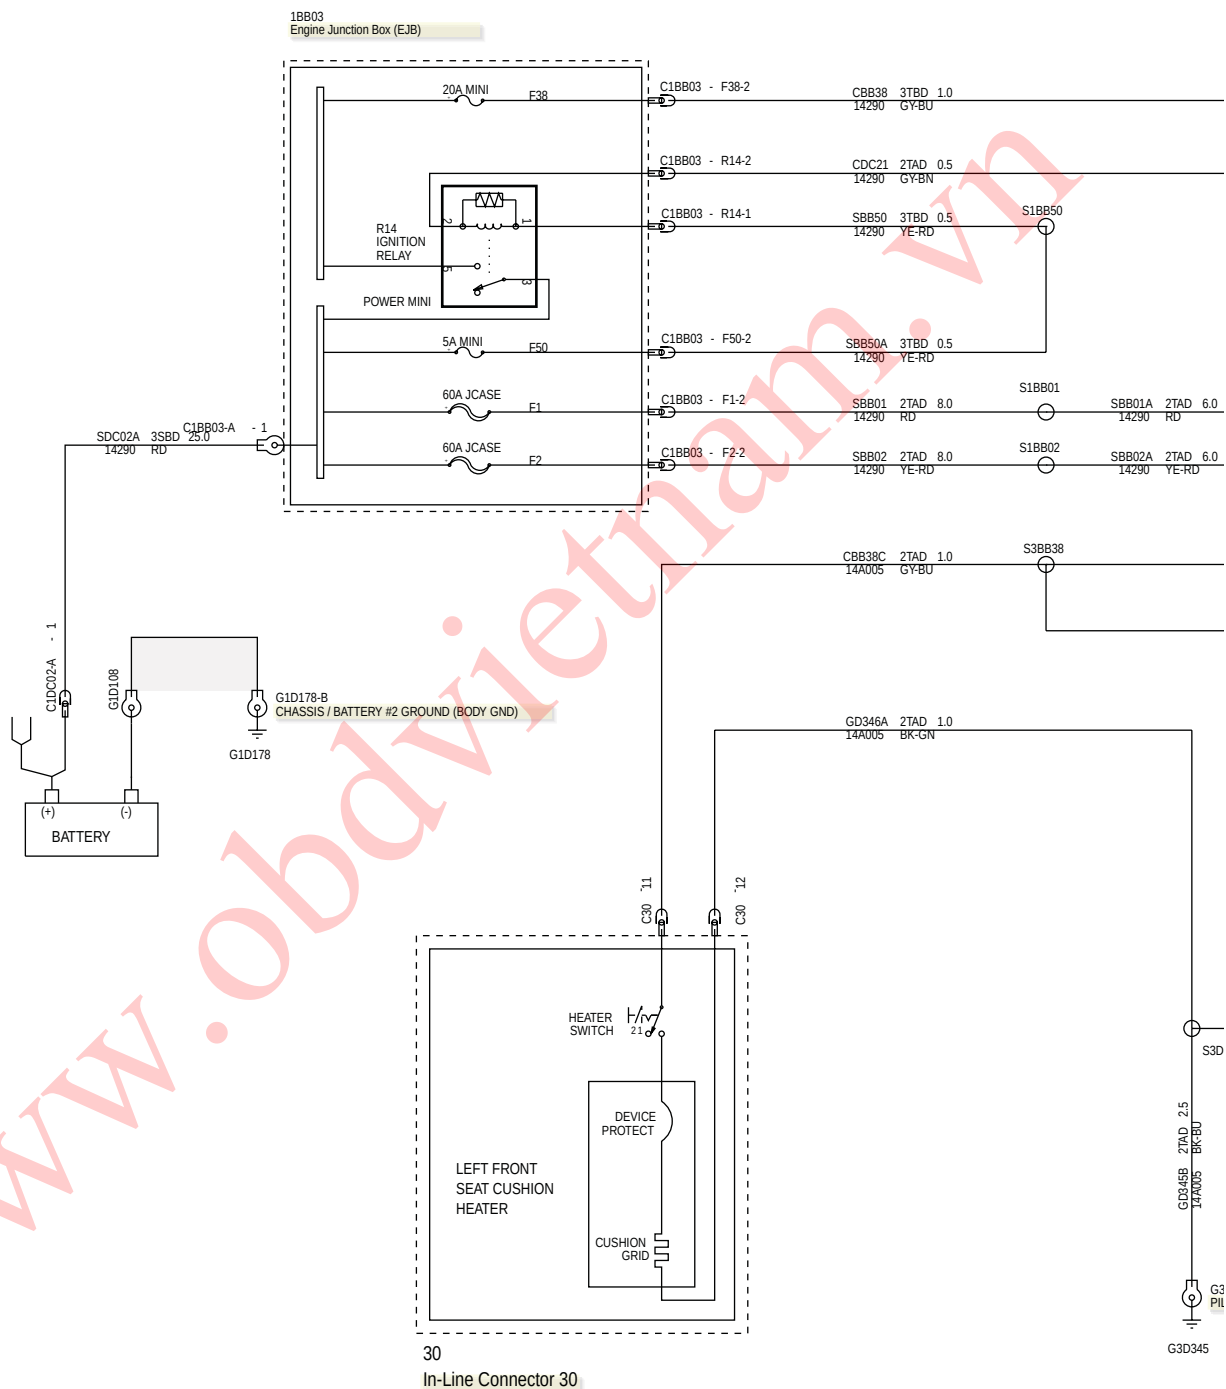


30
In-Line Connector 30

501-10-3 Heated Seats—LHD 4WD/LHD RWD

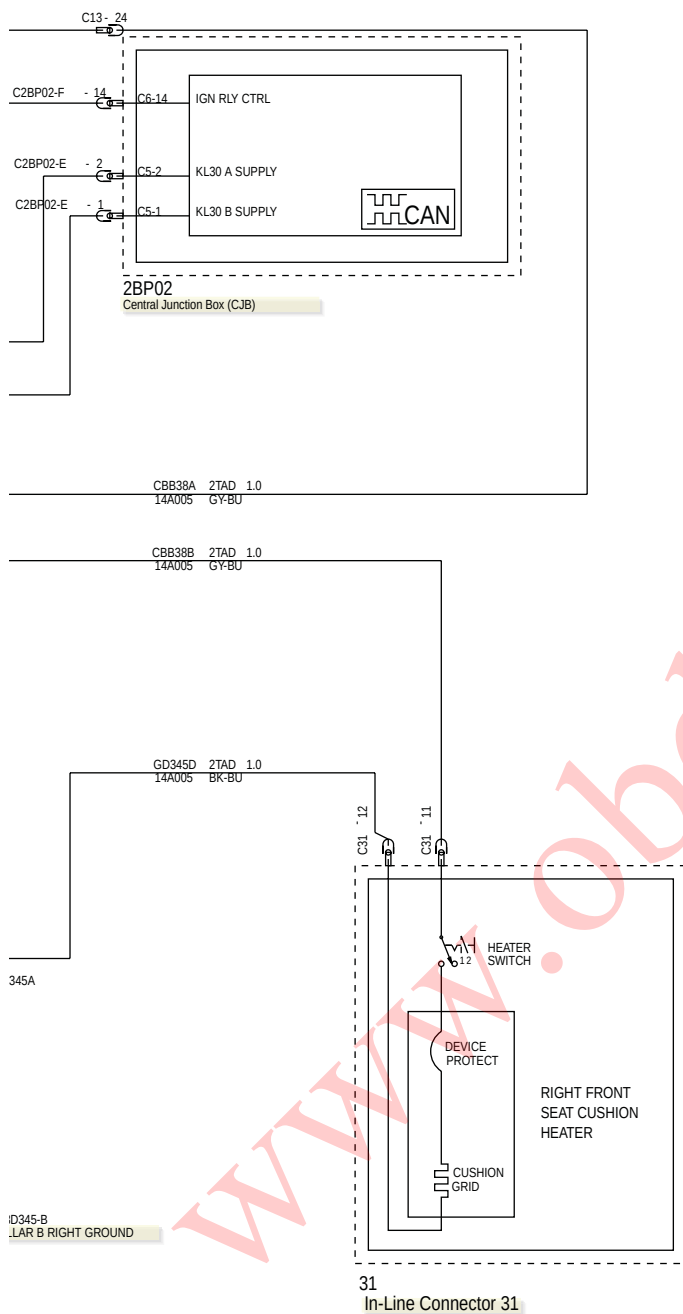



501-10-4 Heated Seats—RHD 4WD/RHD RWD

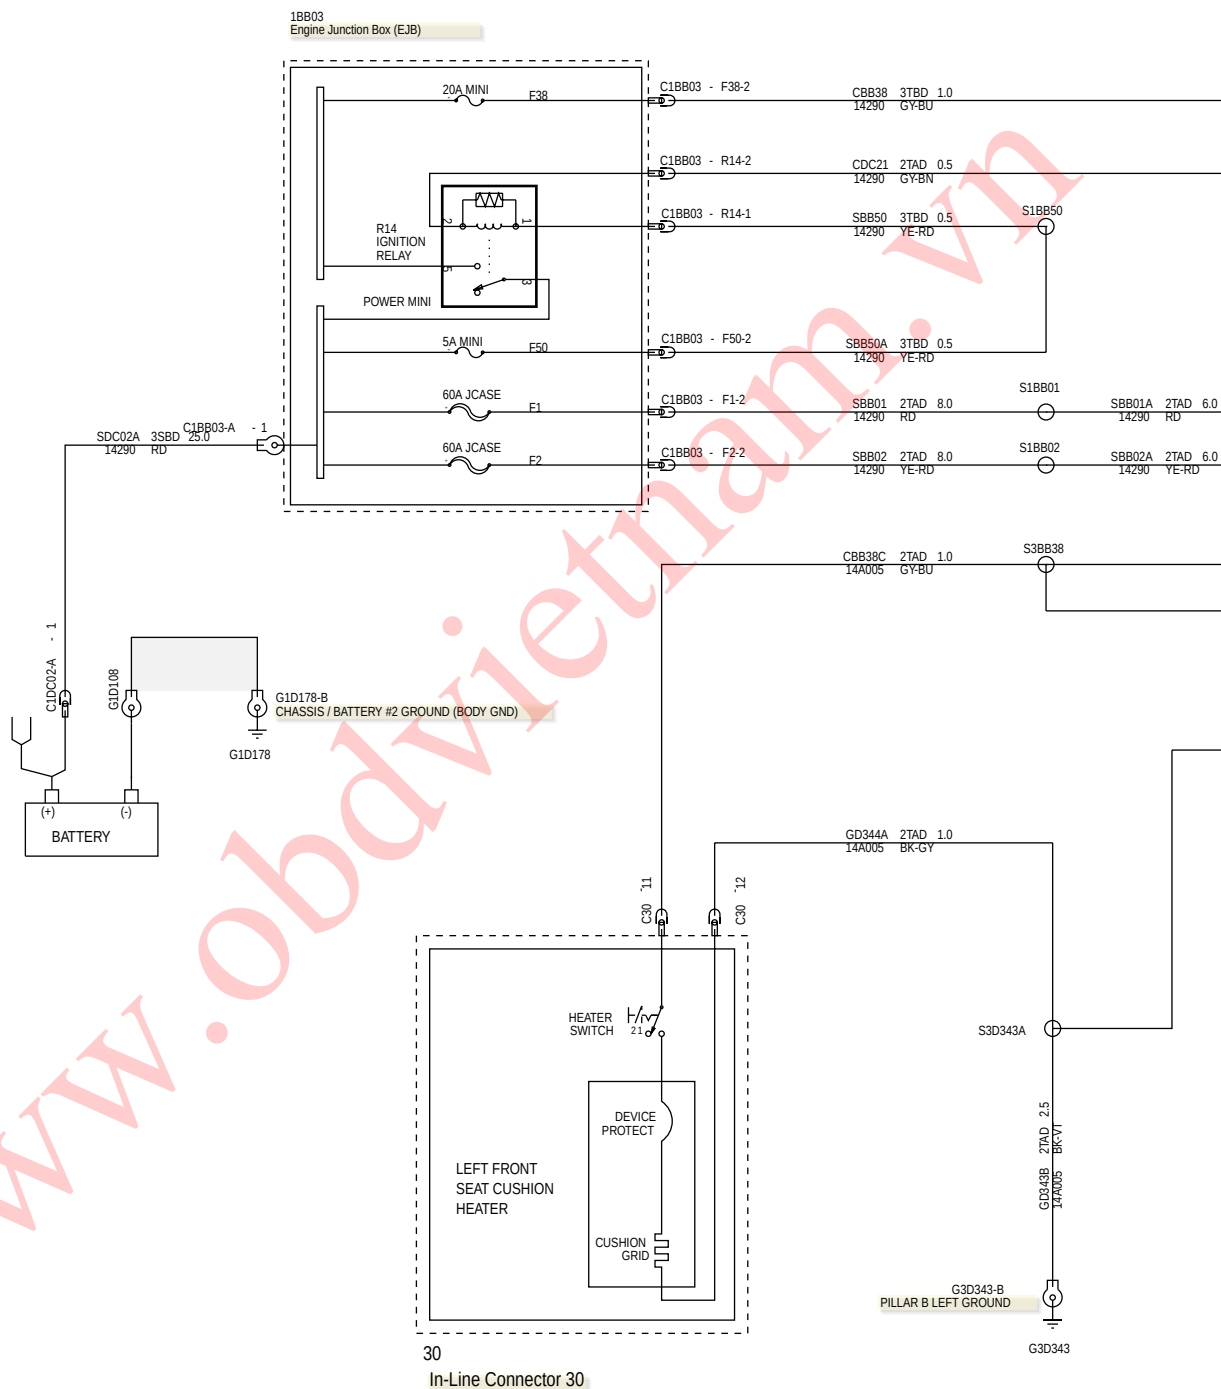


30
In-Line Connector 30

501-10-5 Heated Seats—RHD 4WD/RHD RWD

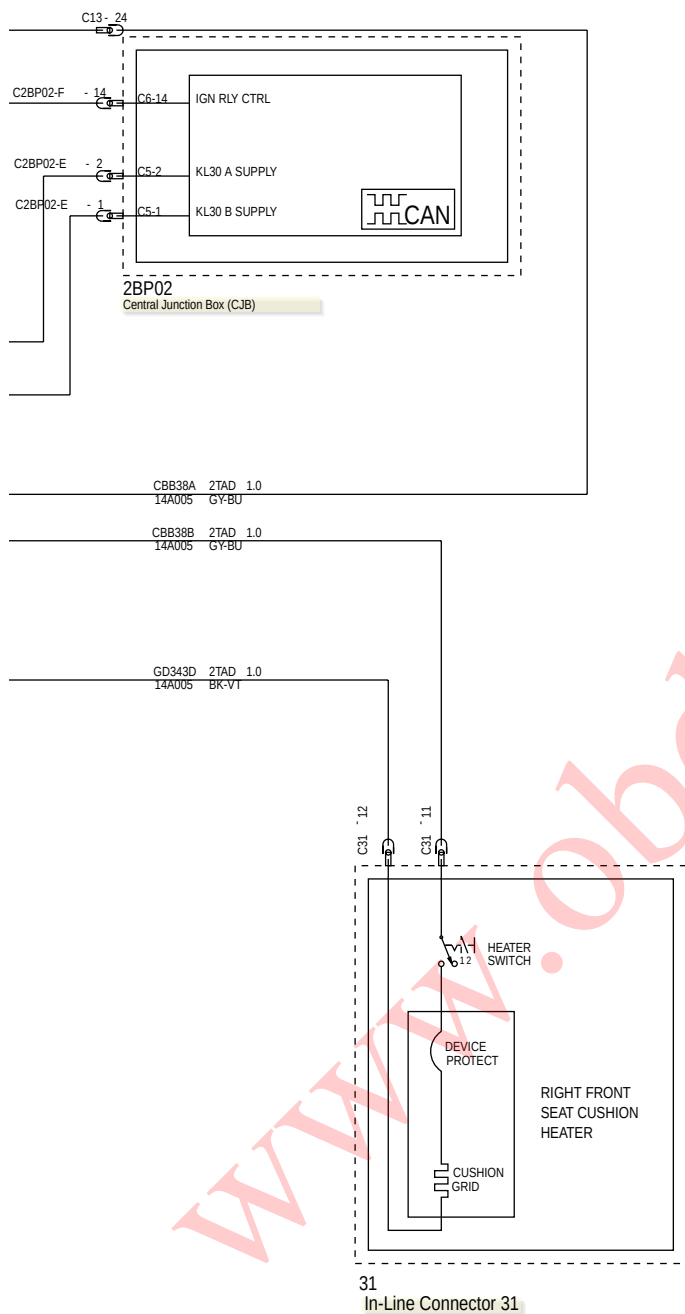


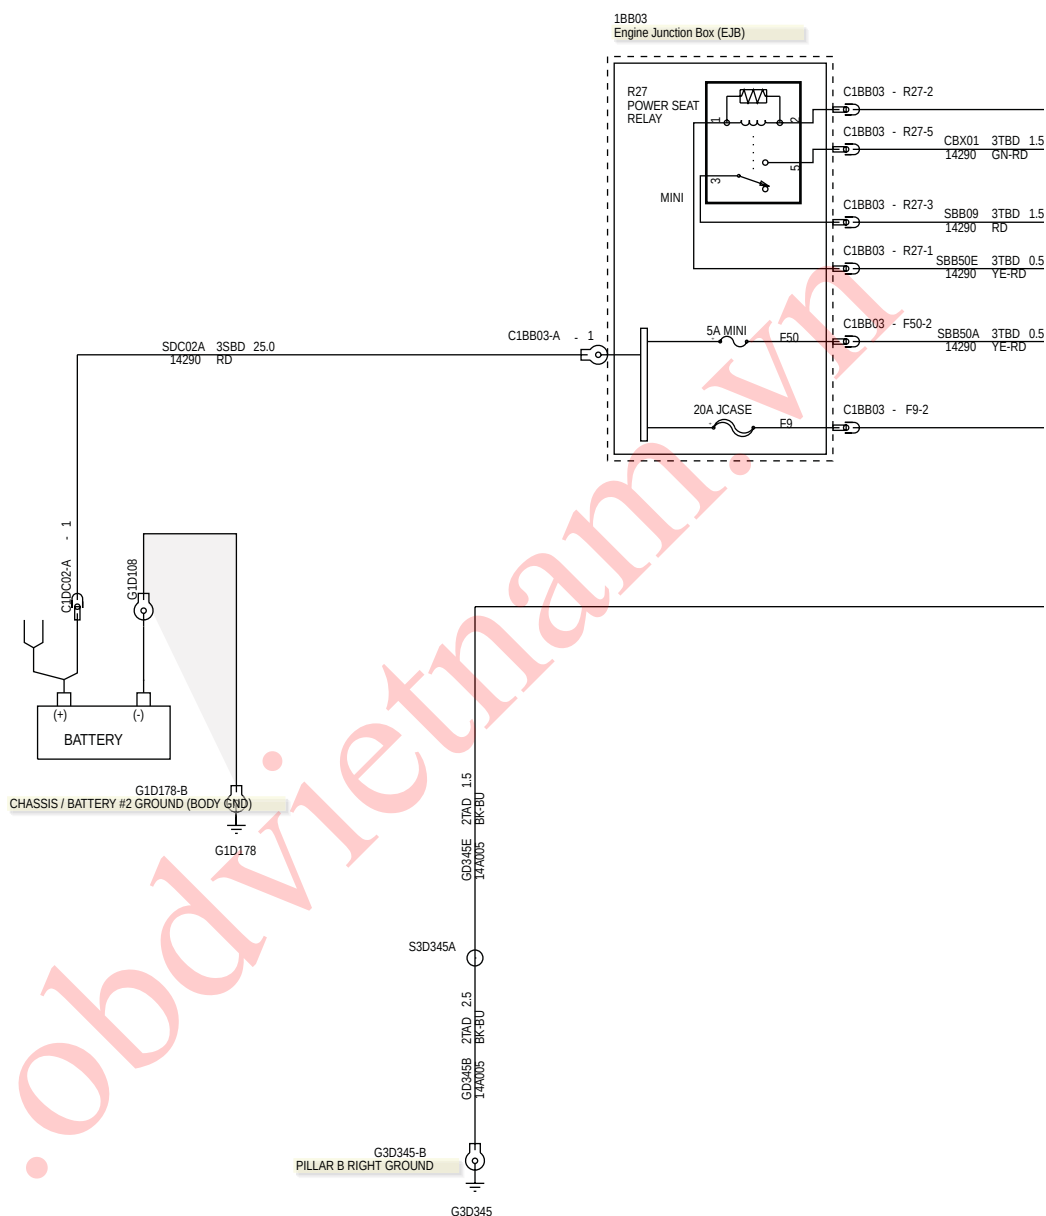


501-10-7 Power Seats—LHD 4WD/LHD RWD

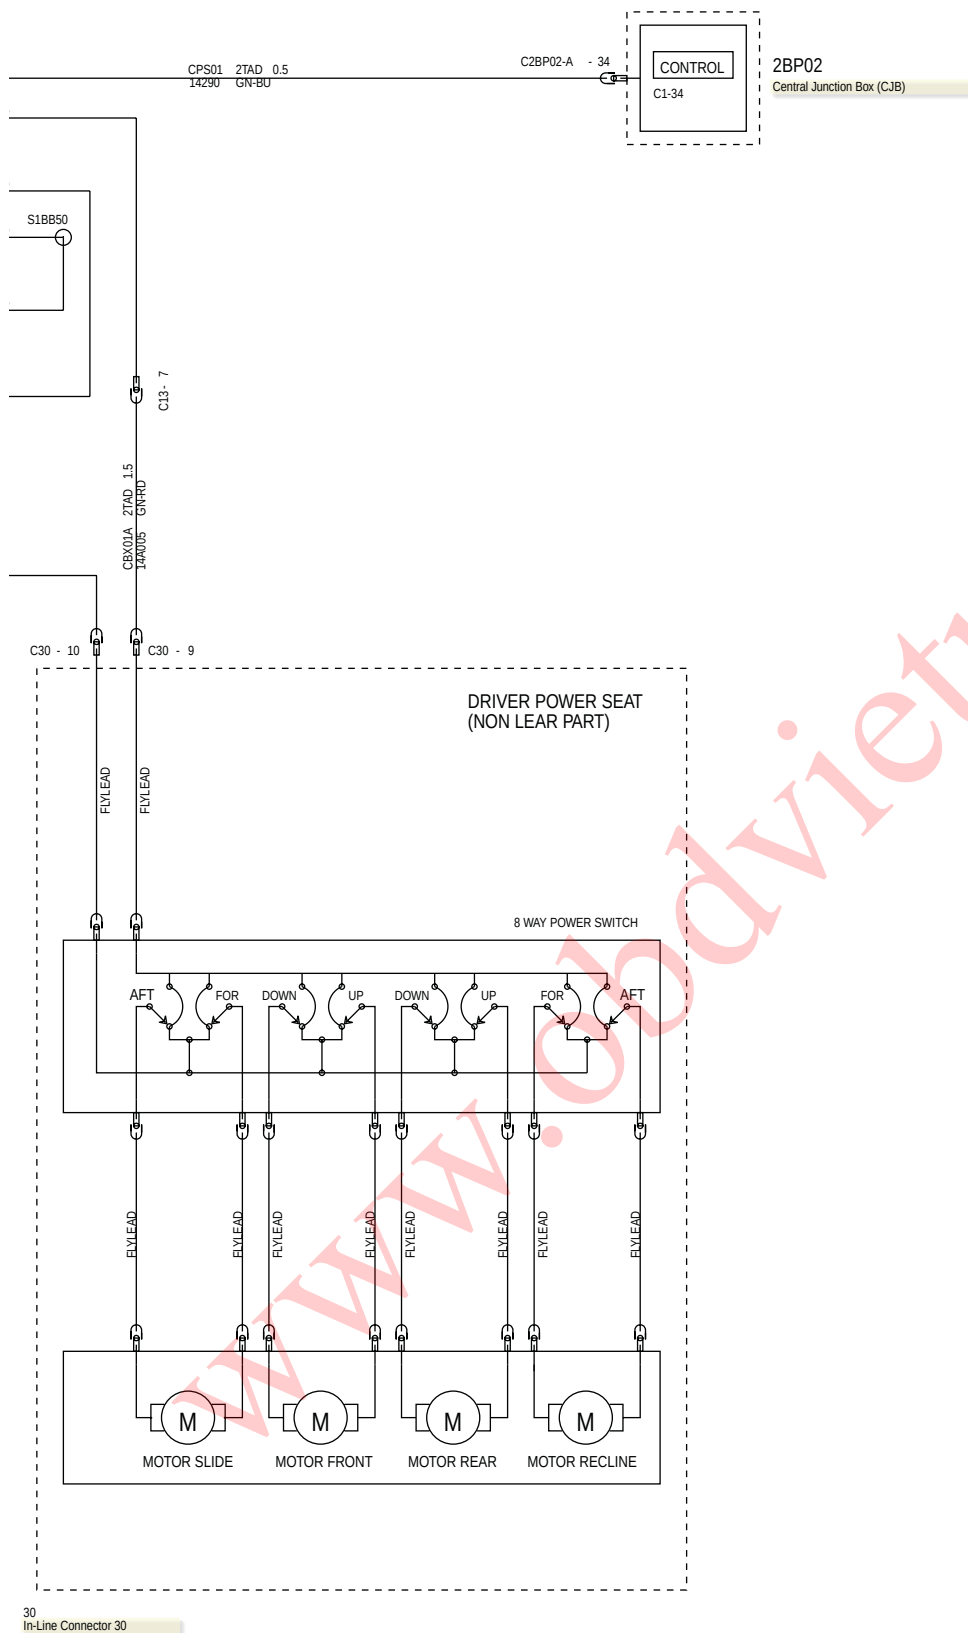

501-10-8 Power Seats—RHD 4WD/RHD RWD

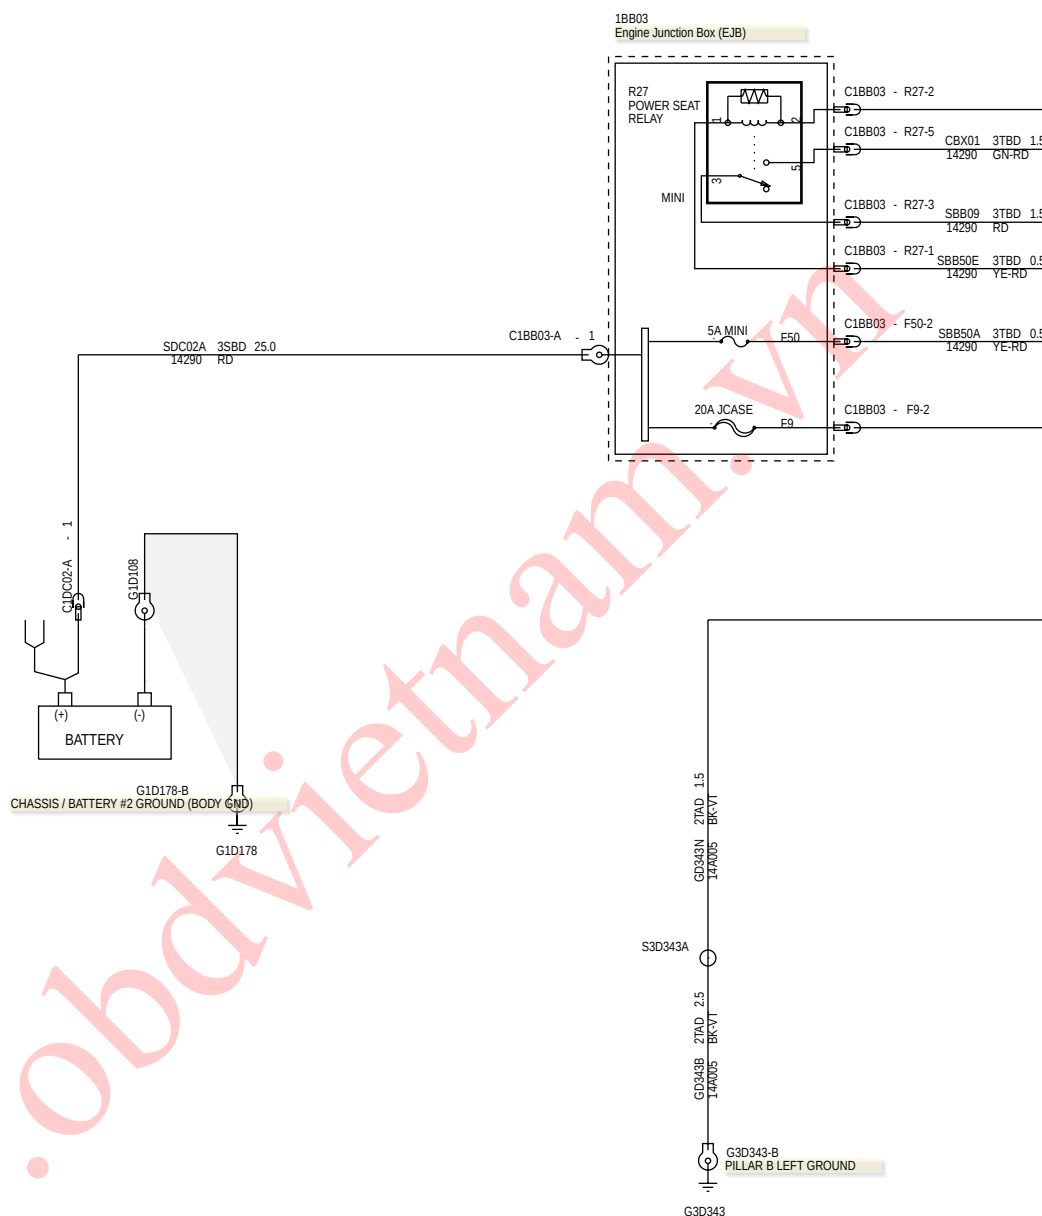

501-10-9 Power Seats—RHD 4WD/RHD RWD

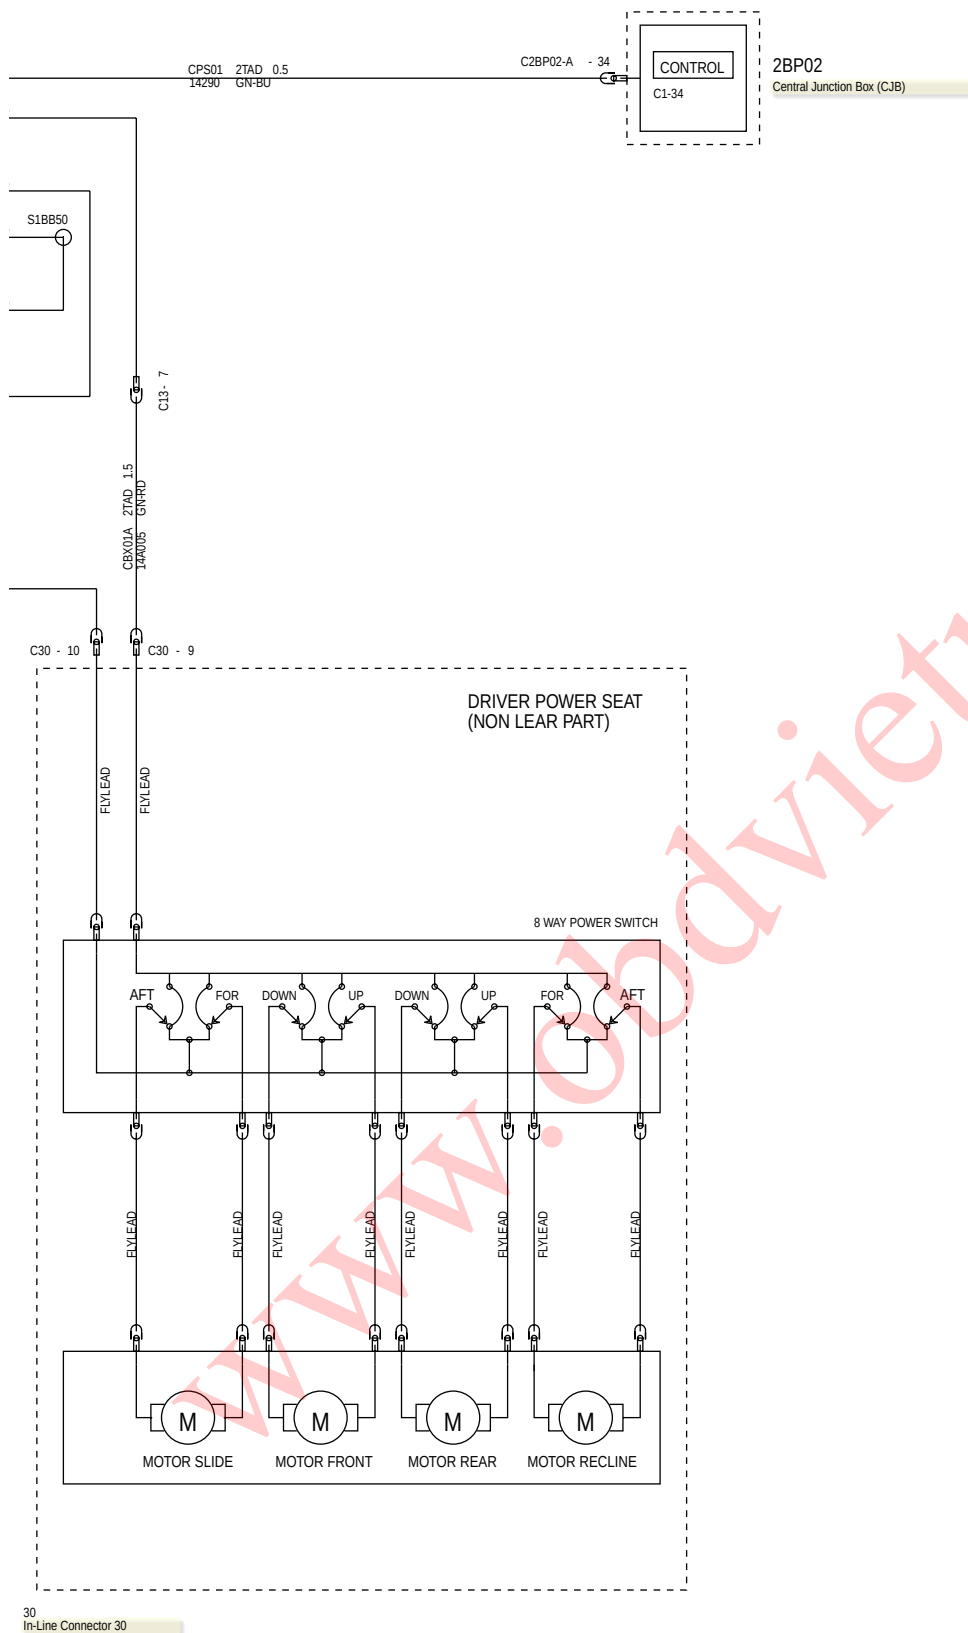

SECTION 501-11 Glass, Frames and Mechanisms

VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS

PAGE


ELECTRICAL SCHEMATICS

Heated Windshield and Rear Window — LHD 4WD/LHD RWD.....	501-11-2
Heated Windshield and Rear Window — RHD 4WD/RHD RWD.....	501-11-4
Power Windows — LHD 4WD/LHD RWD, Vehicles With: Door Module.....	501-11-6
Power Windows — RHD 4WD/RHD RWD, Vehicles With: Door Module.....	501-11-8
Power Windows — LHD 4WD/LHD RWD, Vehicles Without: Door Module.....	501-11-10
Power Windows — RHD 4WD/RHD RWD, Vehicles Without: Door Module.....	501-11-12


ELECTRICAL CONNECTORS

Driver Door Window Control Switch.....	501-11-14
Driver Door Window Control Switch — A.....	501-11-14
Driver Door Window Control Switch — B.....	501-11-14
Driver Door Window Regulator Motor.....	501-11-14
Driver Door Window Regulator Motor — A.....	501-11-15
Heated Rear Window Element.....	501-11-15
Heated Rear Window Element — A.....	501-11-15
Heated Windshield Element LH.....	501-11-15
Heated Windshield Element RH.....	501-11-15
Passenger Door Window Control Switch.....	501-11-15
Passenger Door Window Control Switch — A.....	501-11-16
Passenger Door Window Regulator Motor.....	501-11-16
Passenger Door Window Regulator Motor — A.....	501-11-16
Rear Door Window Control Switch LH.....	501-11-16
Rear Door Window Control Switch LH — A.....	501-11-16
Rear Door Window Control Switch RH.....	501-11-17
Rear Door Window Control Switch RH — A.....	501-11-17
Rear Door Window Regulator Motor LH.....	501-11-17
Rear Door Window Regulator Motor LH — A.....	501-11-17
Rear Door Window Regulator Motor RH.....	501-11-17
Rear Door Window Regulator Motor RH — A.....	501-11-18


501-11-2 Heated Windshield and Rear Window—LHD 4WD/LHD RWD

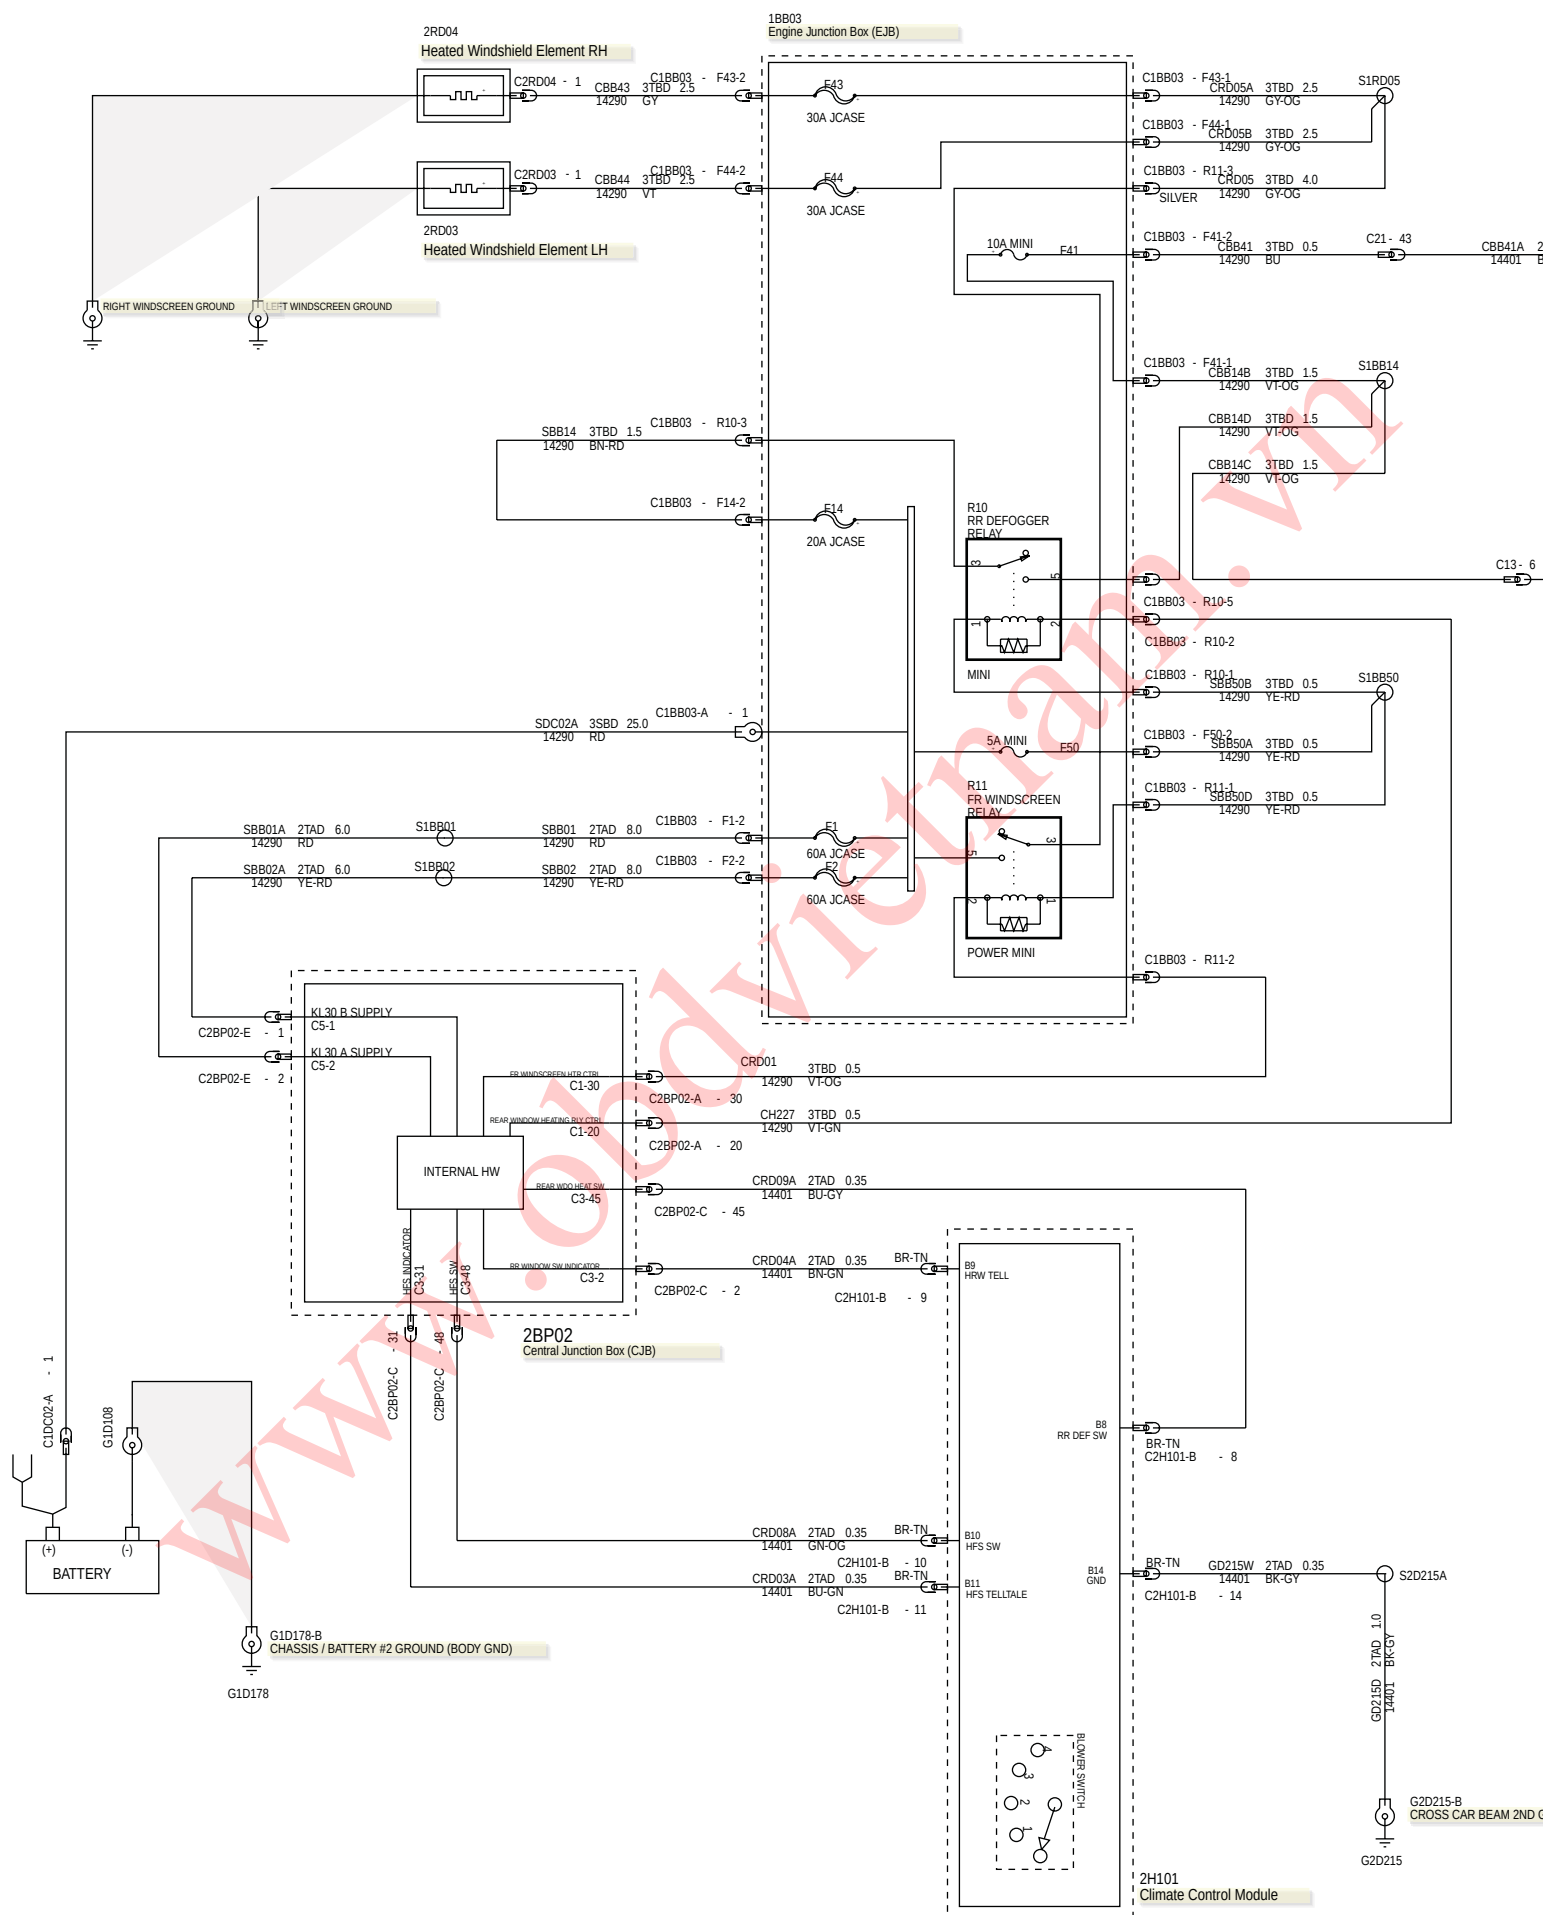


501-11-3 Heated Windshield and Rear Window—LHD 4WD/LHD RWD

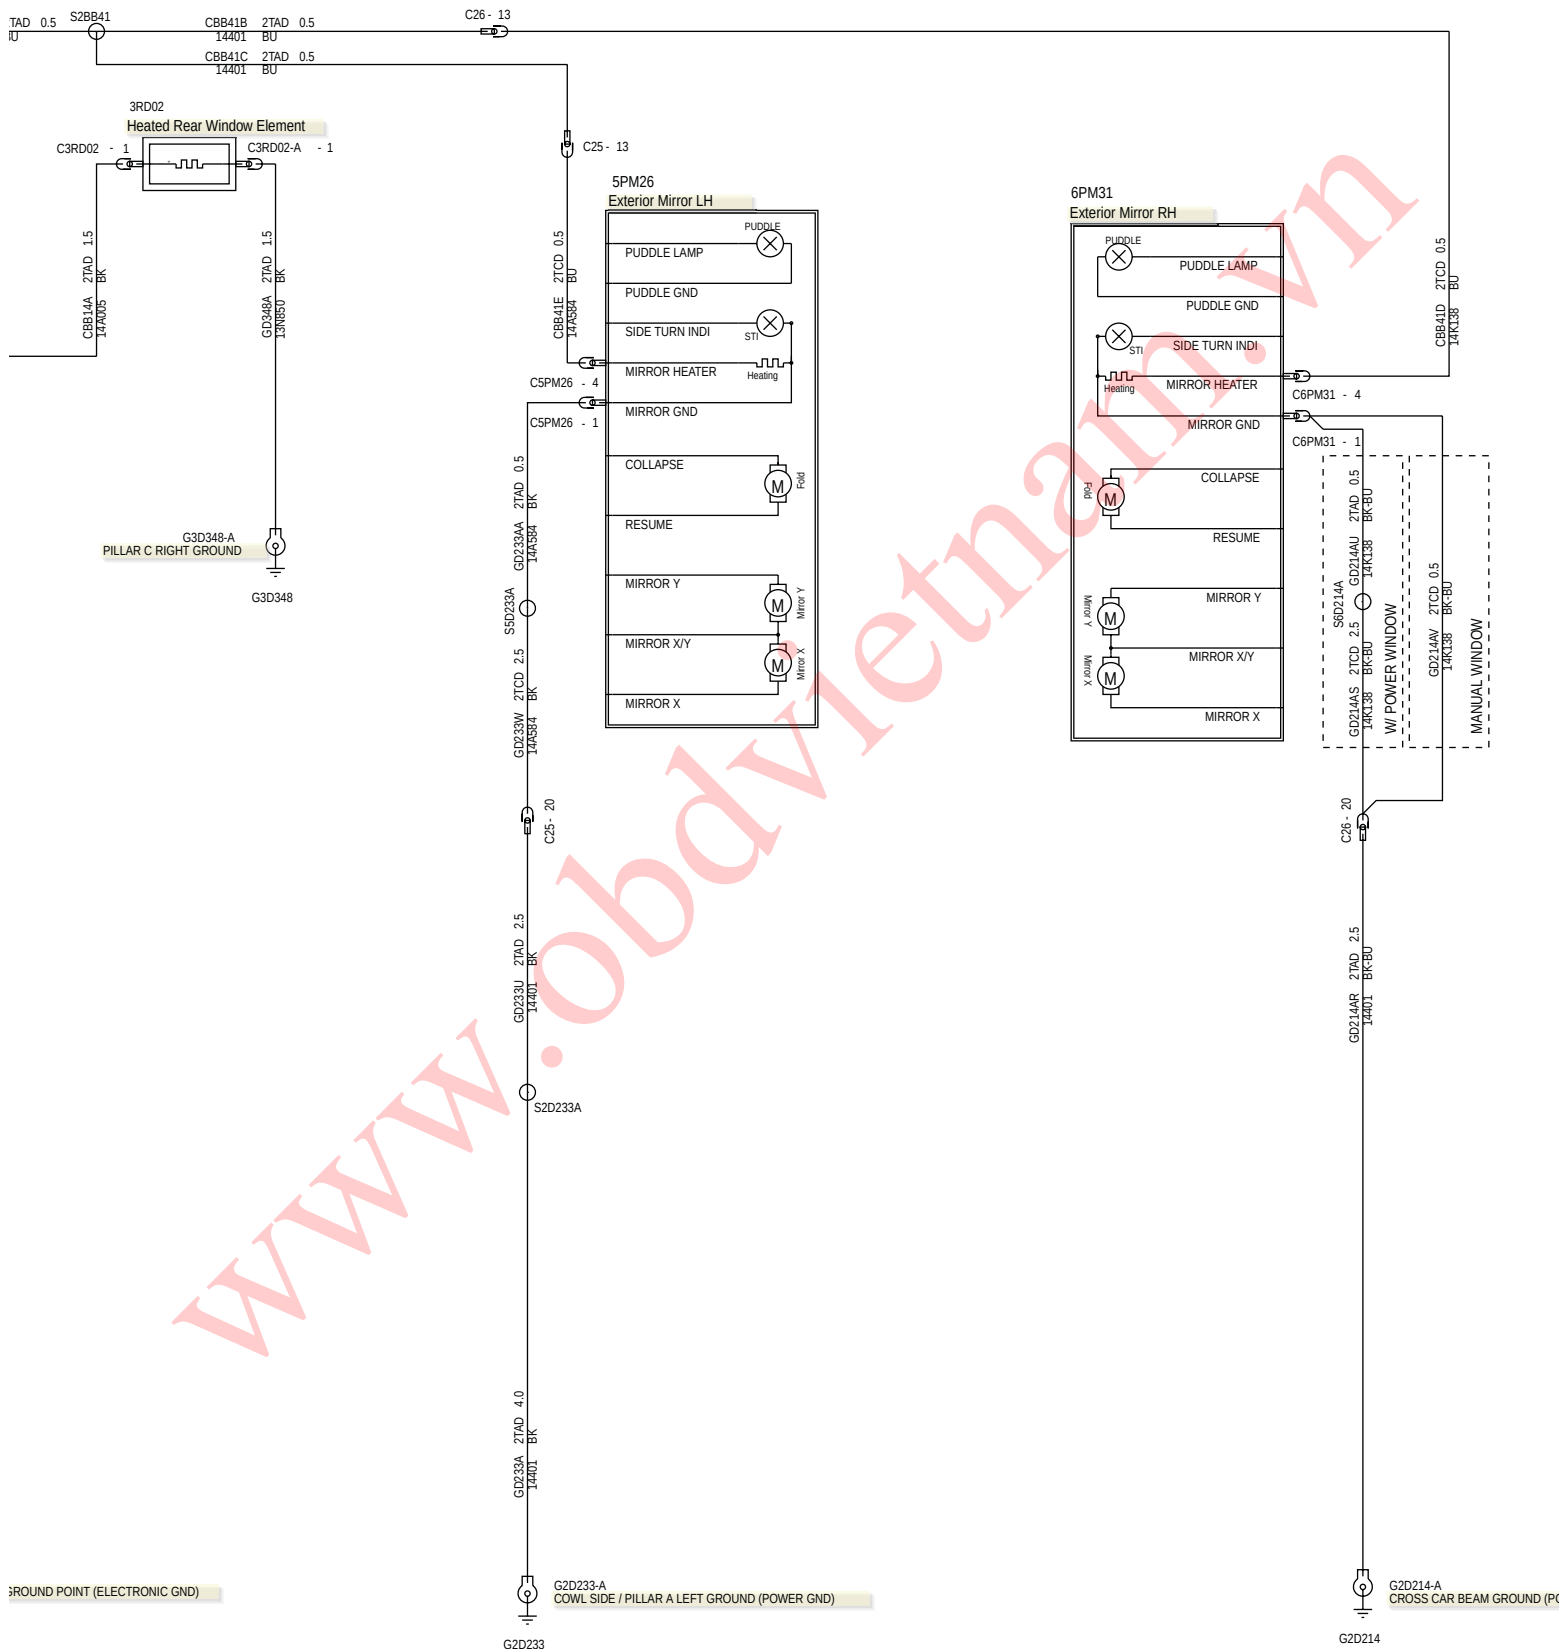


501-11-5 Heated Windshield and Rear Window—RHD 4WD/RHD RWD

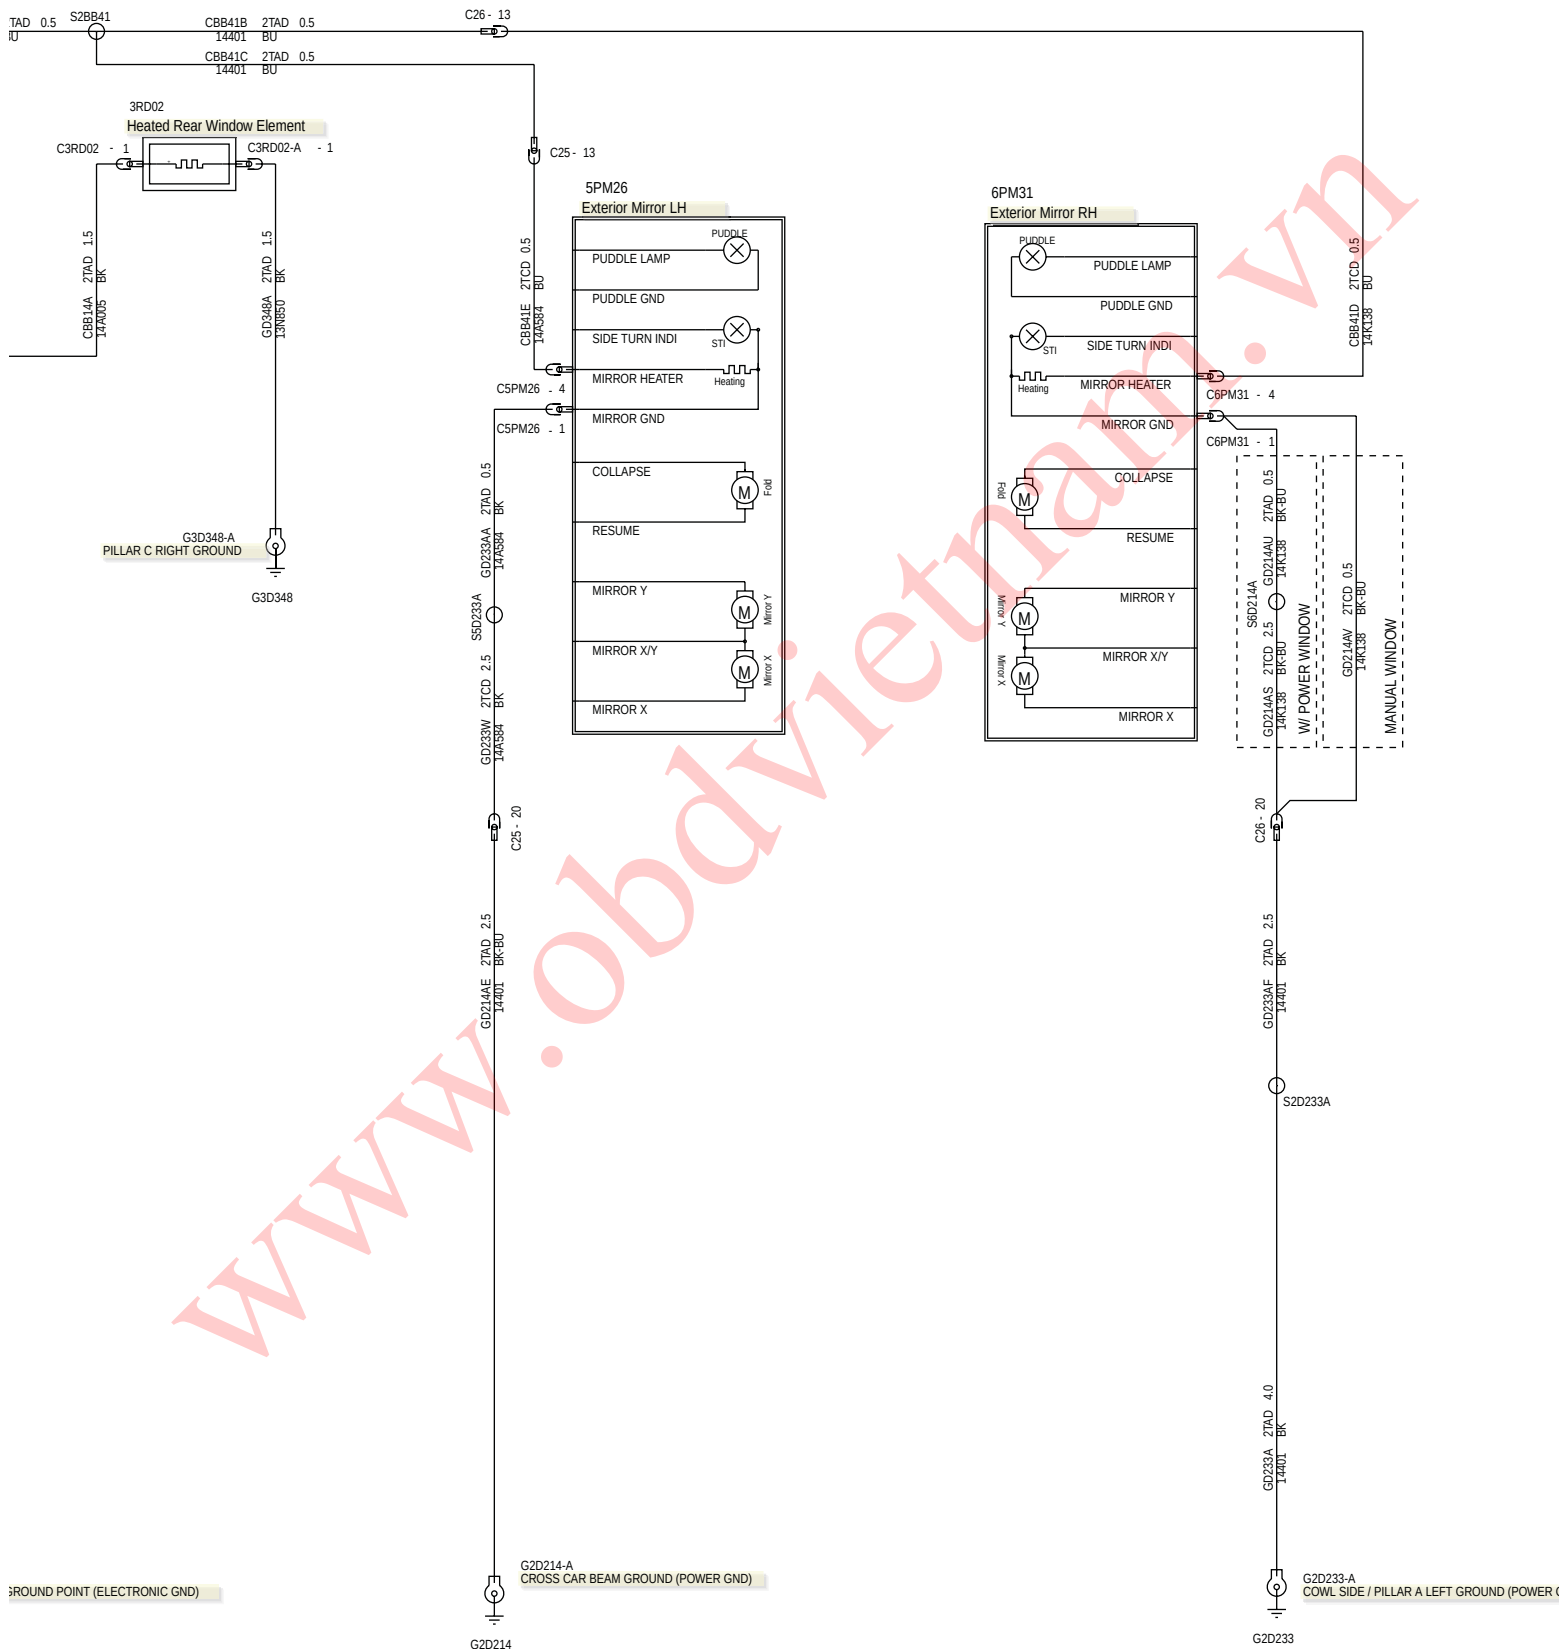


501-11-6 Power Windows—LHD 4WD/LHD RWD, Vehicles With: Door Module

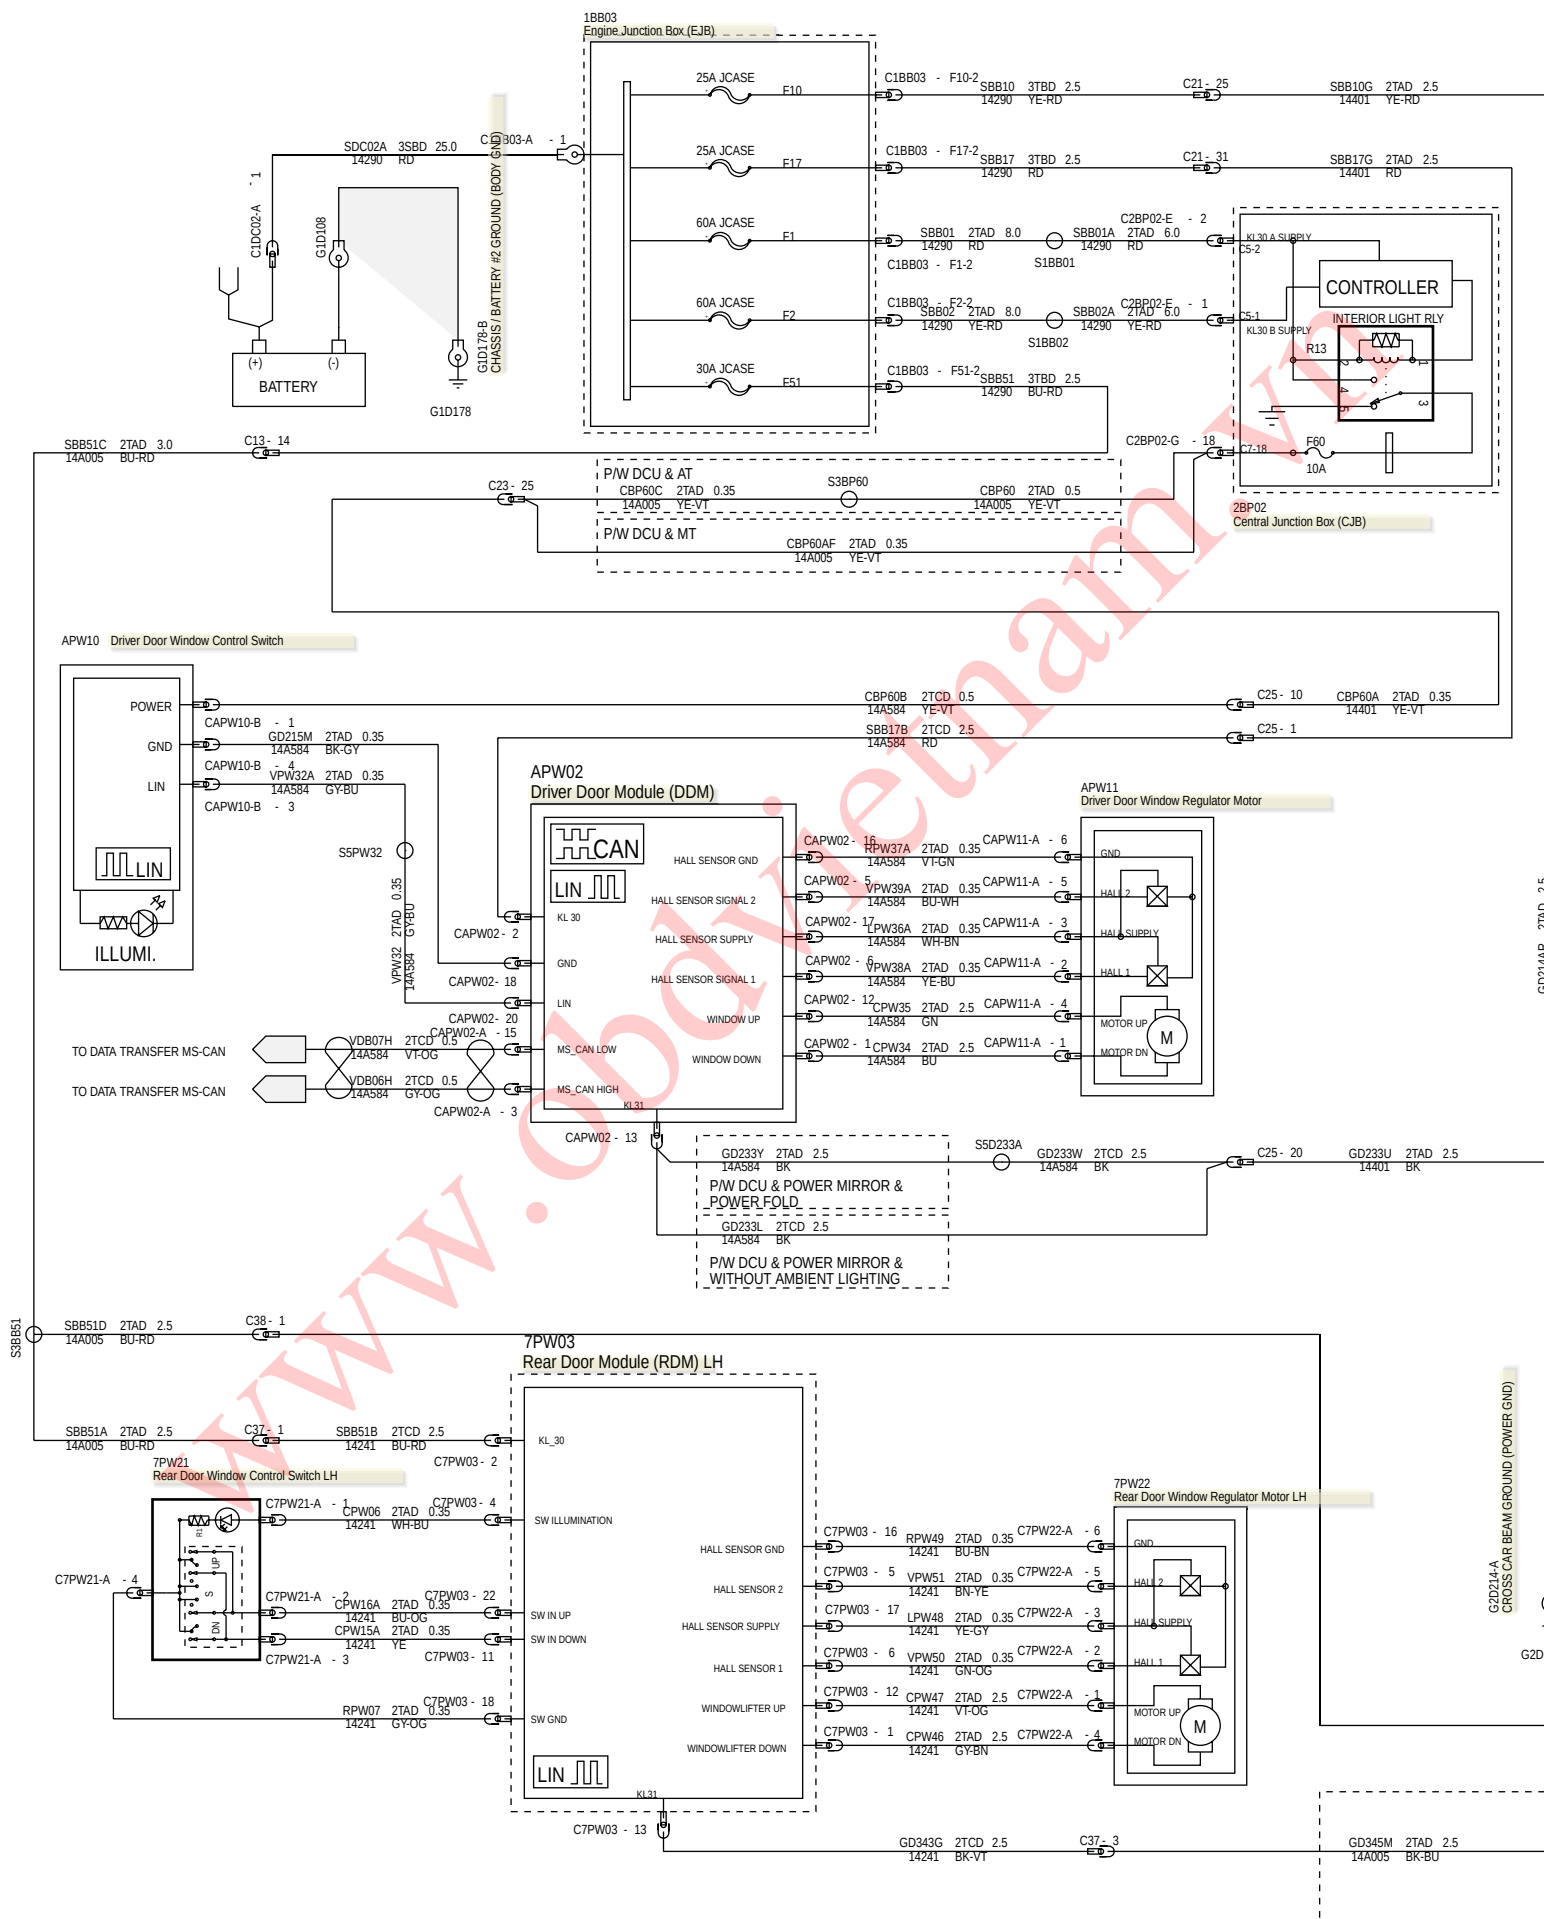


501-11-8 Power Windows—RHD 4WD/RHD RWD, Vehicles With: Door Module

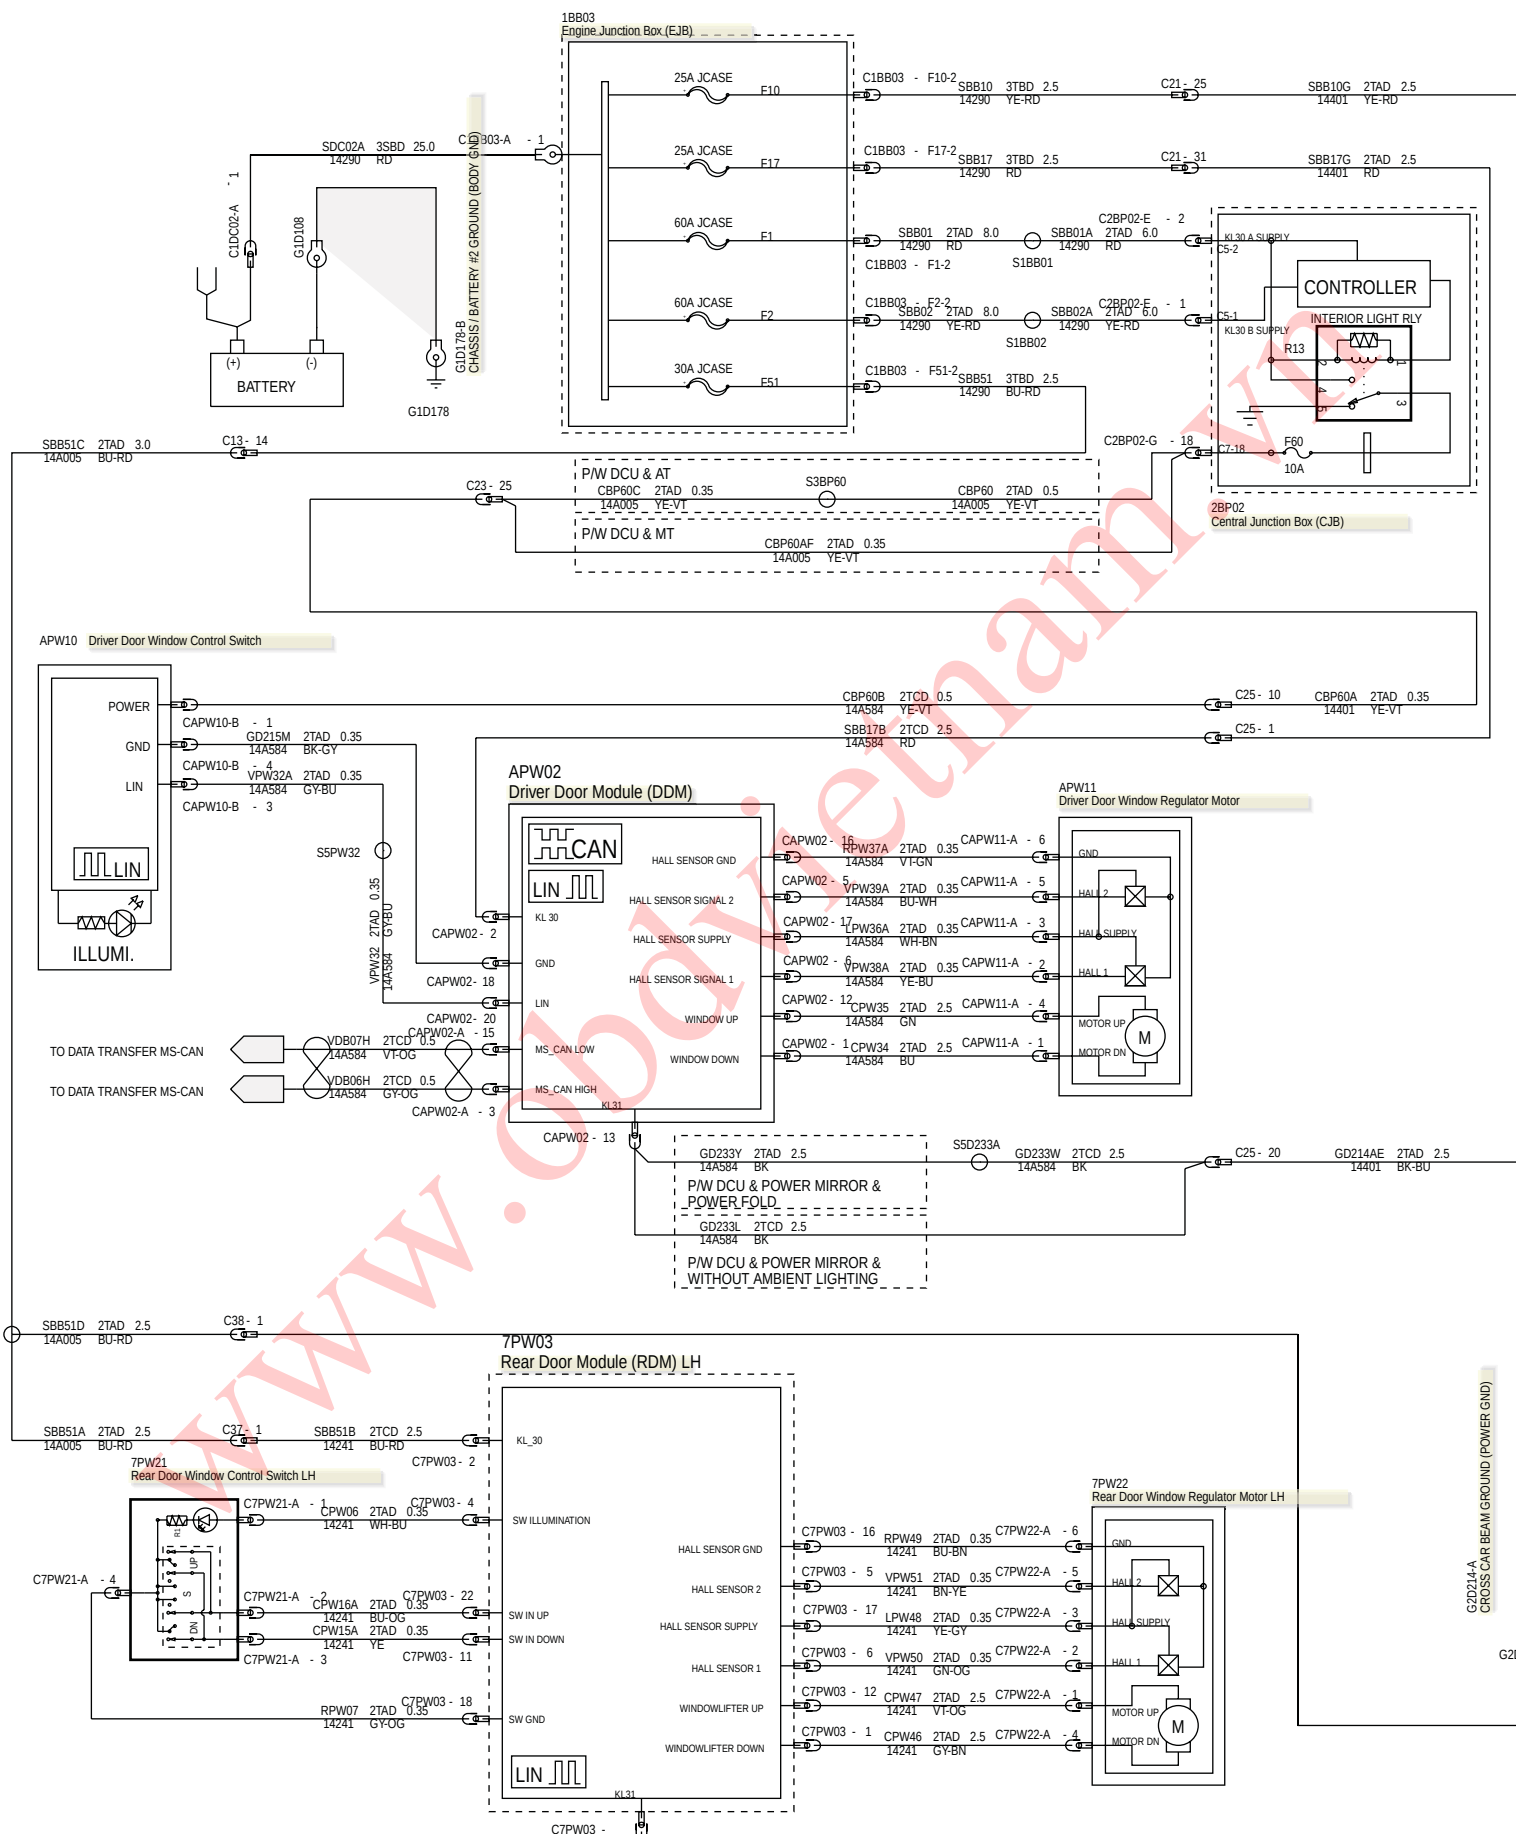

501-11-9 Power Windows—RHD 4WD/RHD RWD, Vehicles With: Door Module

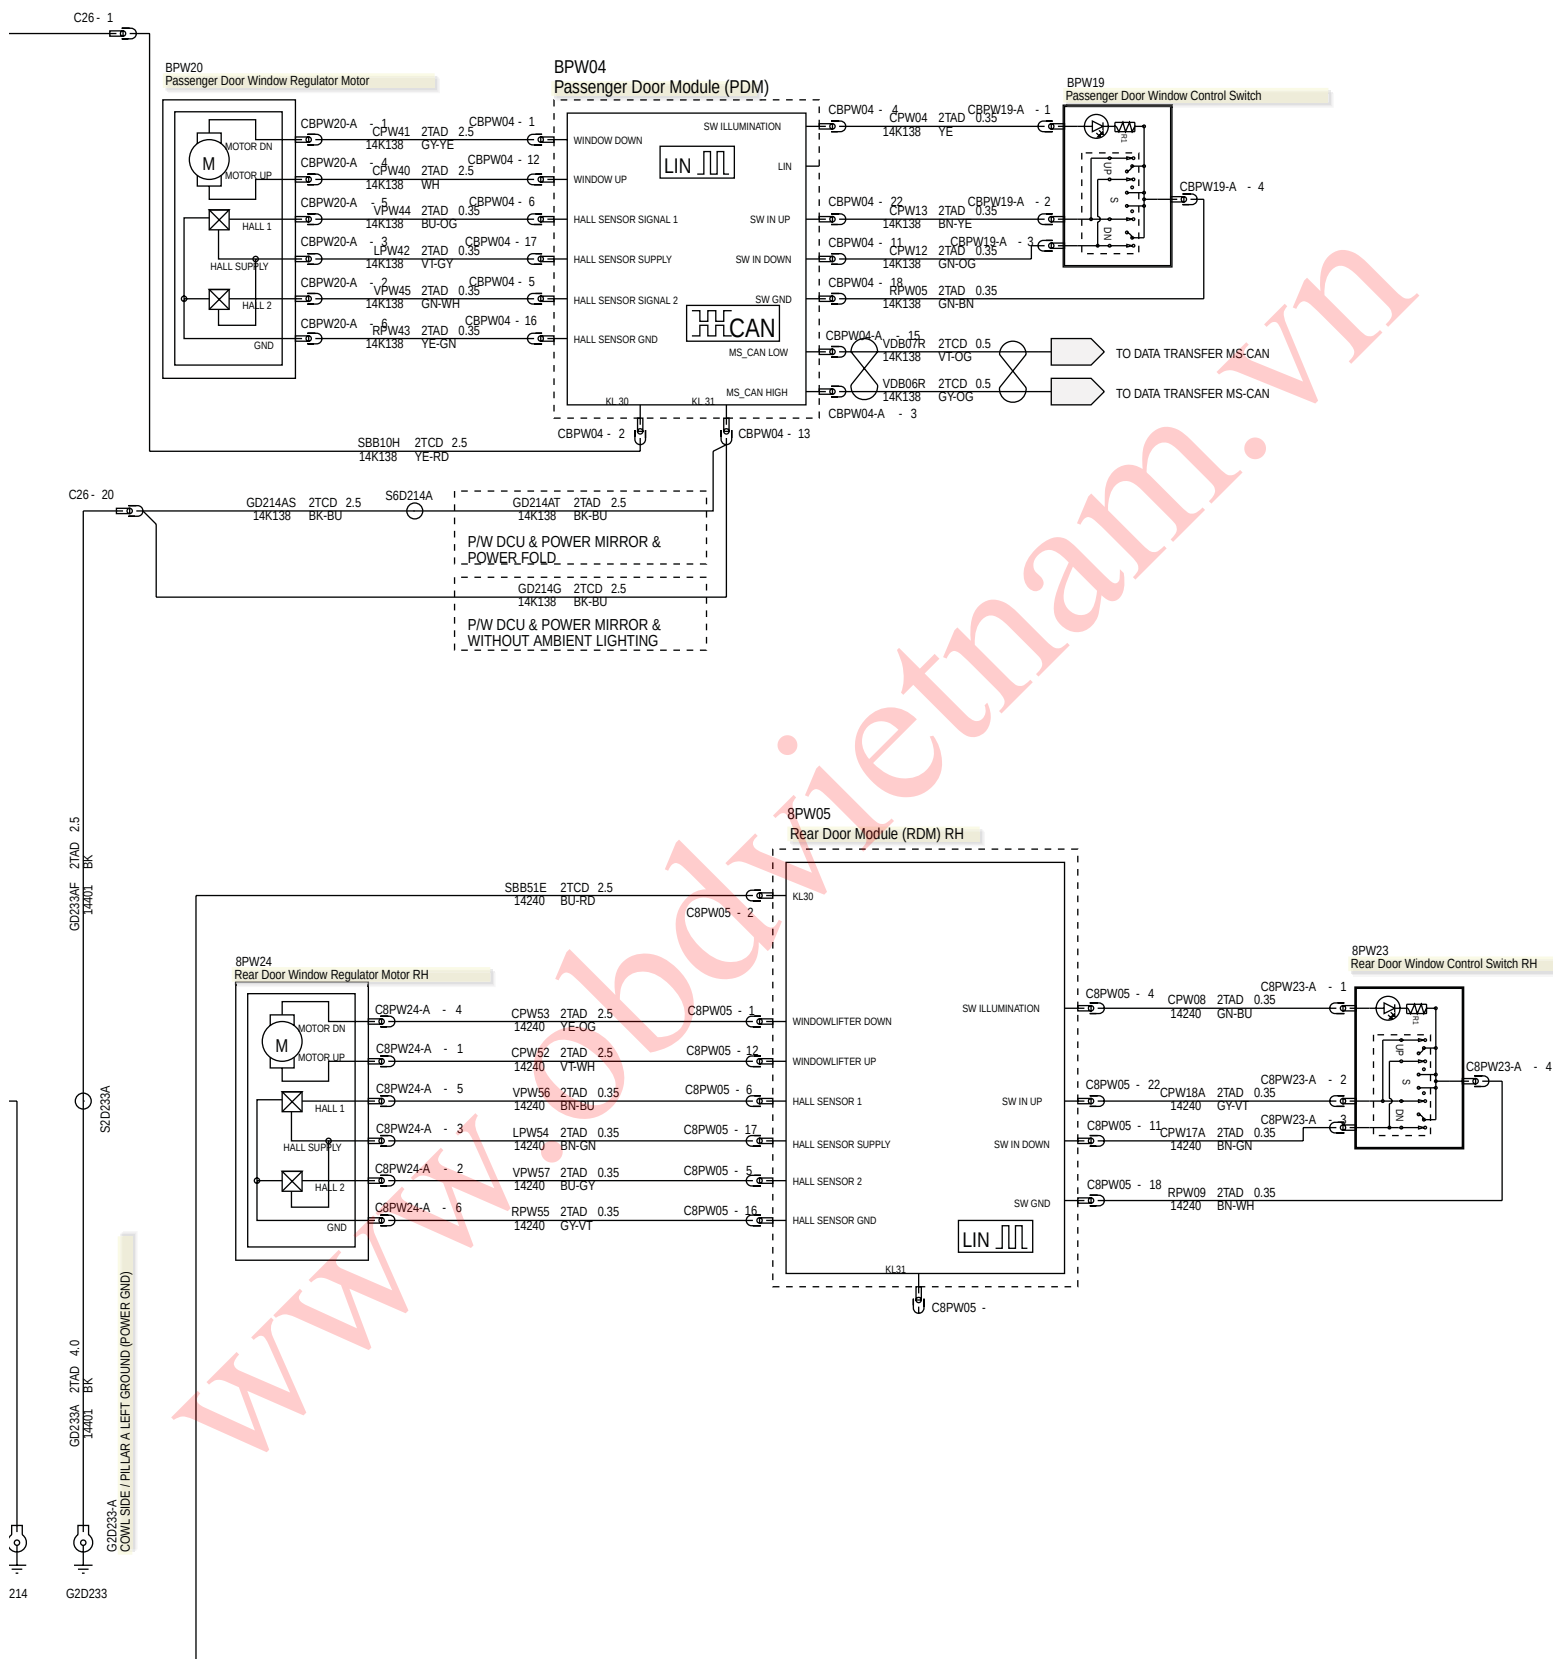


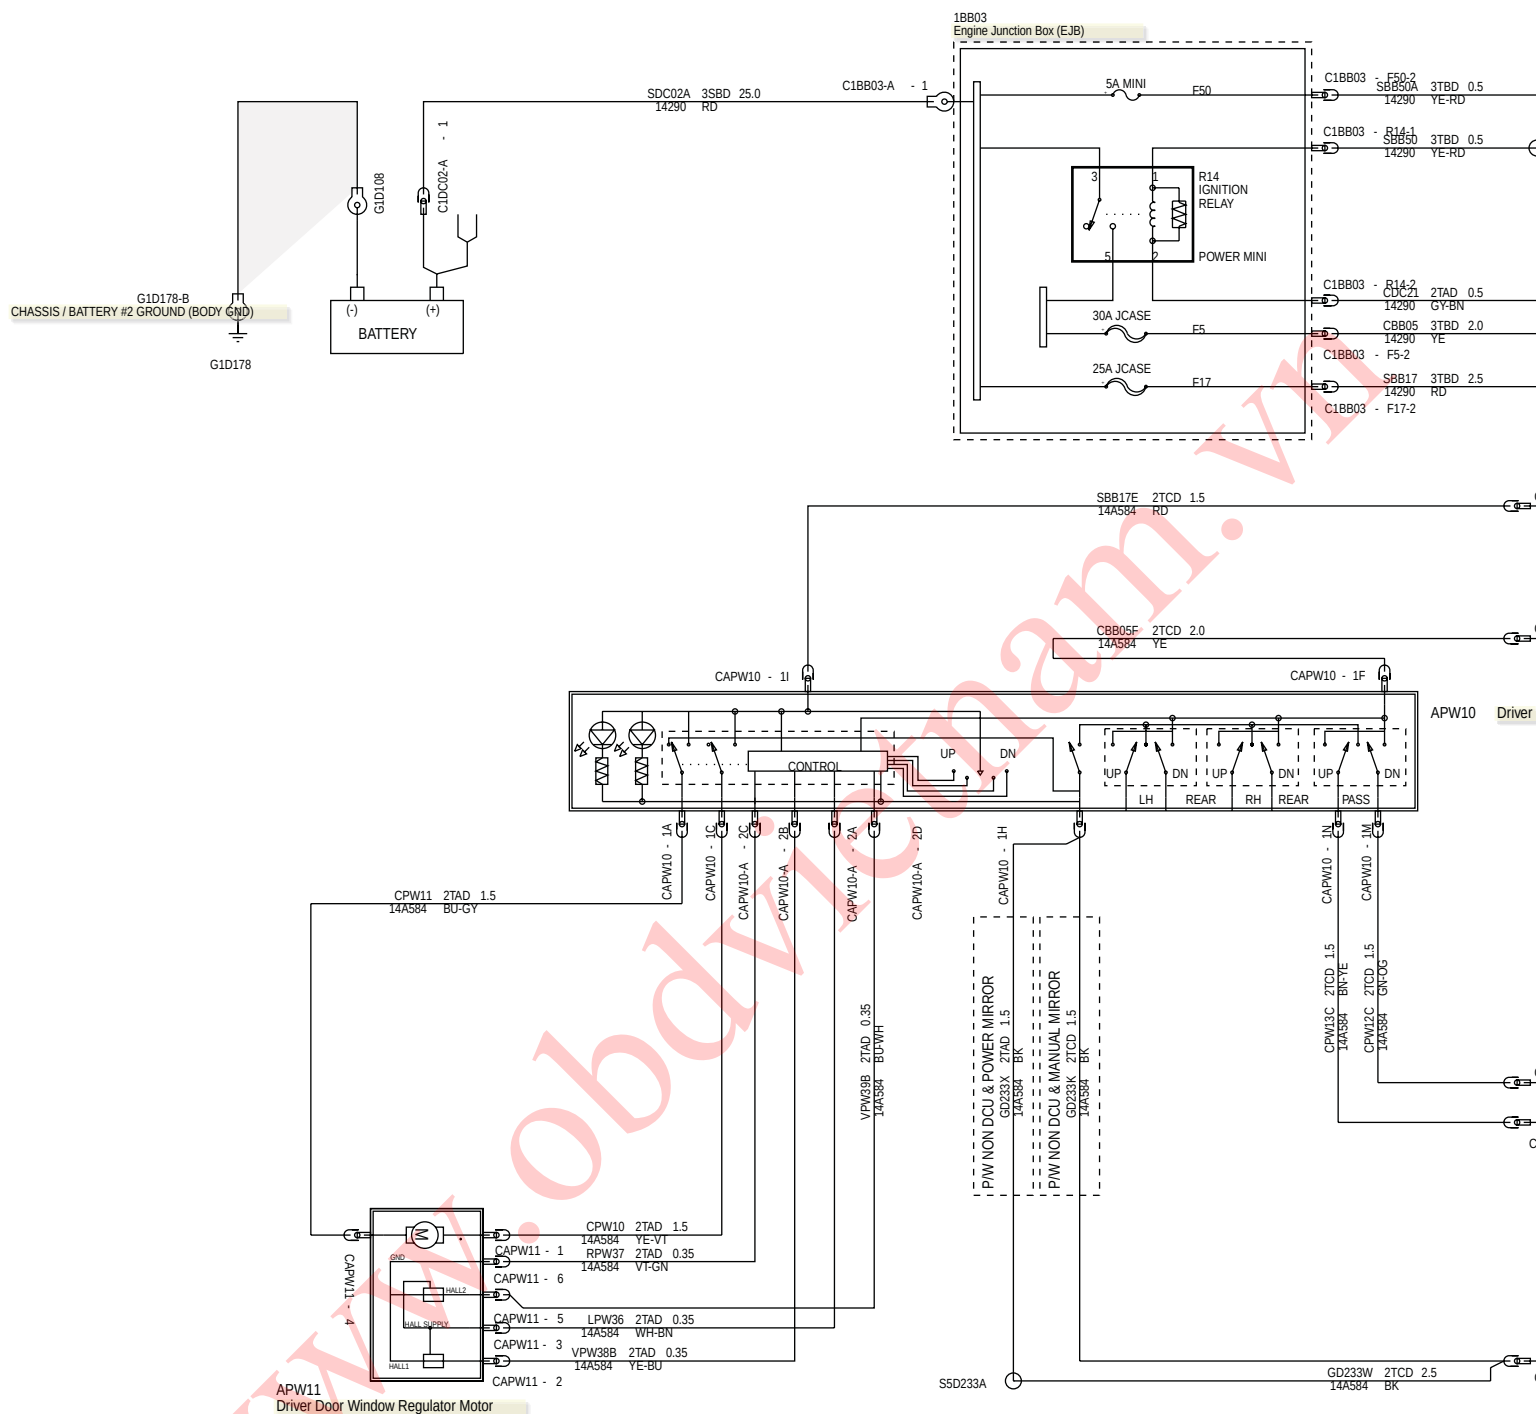

Nâng tầm người thợ Việt
2012.0 Ranger (G1420164)




501-11-12 Power Windows—RHD 4WD/RHD RWD, Vehicles Without: Door Module

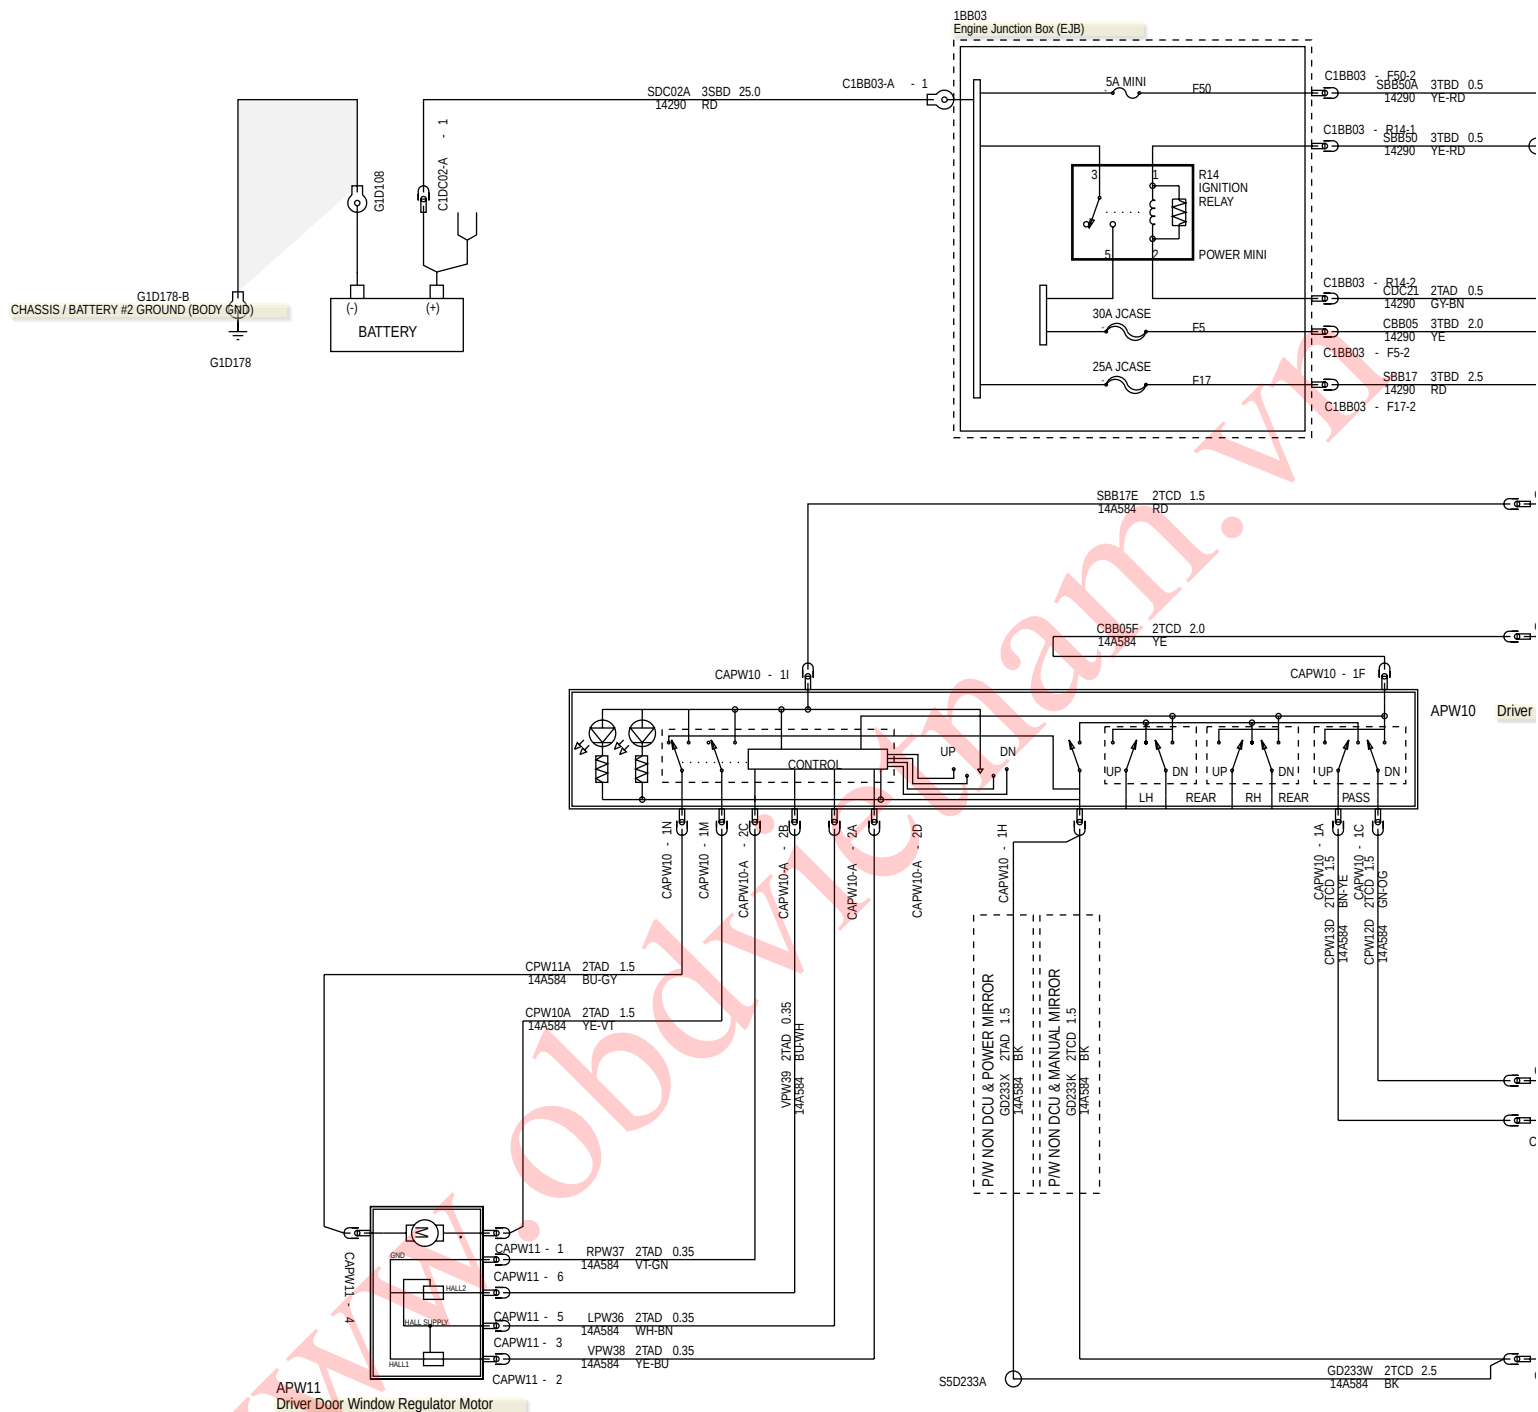




501-11-14

Driver Door Window Control Switch (G1405479)

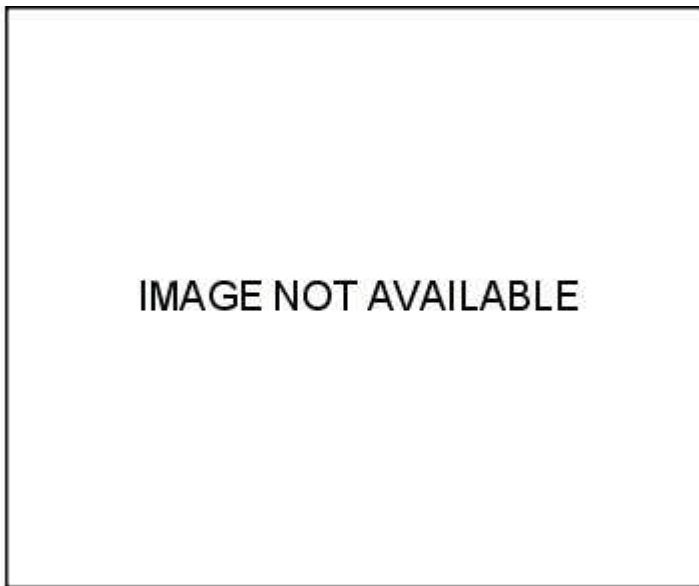


Driver Door Window Control Switch—A (G1405480)




MNN-DL-4F
CAPW10-A
TO WINDOW SWITCH DRIVER DOOR 2
HARNESS 14A584

Driver Door Window Control Switch—B (G1405481)



1L2T-14489-GC
CAPW10-B
TO DRIVER DOOR SWITCH PACK
HARNESS 14A584


Driver Door Window Regulator Motor (G1405489)

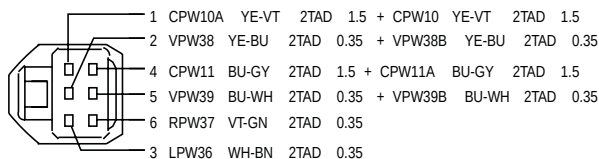

8V5T-14A464-APA
CAPW11
TO DRIVER POWER WINDOW SMART MOTOR
HARNESS 14A584

501-11-15


Driver Door Window Regulator Motor—A (G1405490)

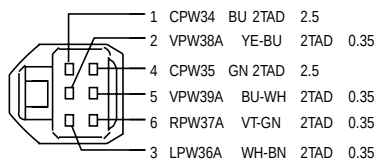

8V5T-14A464-APA

CAPW11-A
TO DRIVER WINDOW MOTOR MODULE
HARNESS 14A584


Heated Rear Window Element (G1405474)

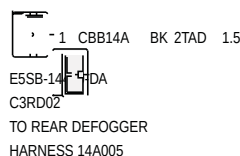

E5SB-14A-DA
C3RD02

TO REAR DEFOGGER
HARNESS 14A005


Heated Rear Window Element—A (G1405475)

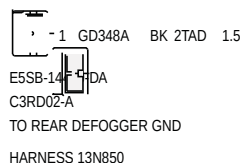

E5SB-14A-DA
C3RD02-A

TO REAR DEFOGGER GND
HARNESS 13N850

Heated Windshield Element LH (G1404732)

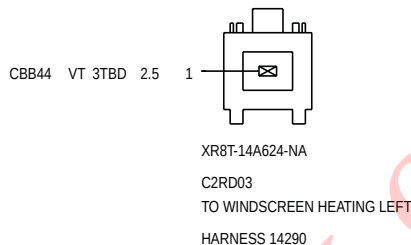


XR8T-14A624-NA

C2RD03

TO WINDSCREEN HEATING LEFT

HARNESS 14290

Heated Windshield Element RH (G1404738)

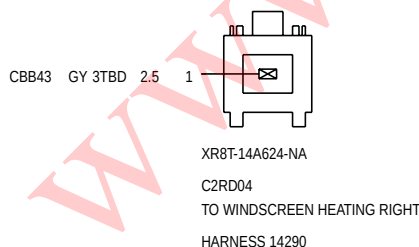


XR8T-14A624-NA

C2RD04

TO WINDSCREEN HEATING RIGHT

HARNESS 14290

Passenger Door Window Control Switch (G1405495)

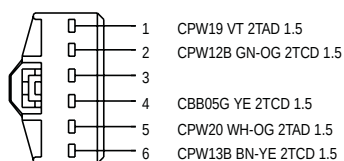

3M5T-14489-DFA


CBPW19

TO PASSENGER DOOR WINDOW SWITCH

HARNESS 14K138

501-11-16

Passenger Door Window Control Switch—A (G1405496)




- 1 CPW04 YE 2TAD 0.35
- 2 CPW13 BN-YE 2TAD 0.35
- 3 CPW12 GN-OG 2TAD 0.35
- 4 RPW05 GN-BN 2TAD 0.35

1L2T-14489-GC

CBPW19-A
TO PASSENGER DOOR WINDOW SWITCH
HARNESS 14K138

Passenger Door Window Regulator Motor (G1405497)




- 2 CPW20 WH-OG 2TAD 1.5
- 1 CPW19 VT 2TAD 1.5

8V5T-14A464-AMA

CBPW20
TO PASSENGER POWER WINDOW MOTOR
HARNESS 14K138

Passenger Door Window Regulator Motor—A (G1405498)




- 1 CPW41 GY-YE 2TAD 2.5
- 2 VPW45 GN-WH 2TAD 0.35
- 4 CPW40 WH2TAD 2.5
- 5 VPW44 BU-OG 2TAD 0.35
- 6 RPW43 YE-GN 2TAD 0.35
- 3 LPW42 VT-GY 2TAD 0.35

8V5T-14A464-APA

CBPW20-A
TO PASSENGER WINDOW MOTOR MODULE
HARNESS 14K138

Rear Door Window Control Switch LH (G1404739)




- 1 CPW15 YE 2TAD 1.5
- 2 CPW21C BN 2TCD 1.5
- 3
- 4 CBB05K YE 2TCD 1.5
- 5 CPW16 BU-OG 2TAD 1.5
- 6 CPW22C GN-VT 2TCD 1.5

3M5T-14489-DFA

C7PW21
TO REAR LEFT DOOR WINDOW SW
HARNESS 14241

Rear Door Window Control Switch LH—A (G1404740)




- 1
- 2
- 3
- 4 RPW07 GY-OG 2TAD 0.35

1L2T-14489-GC

C7PW21-A
TO REAR LEFT WINDOW SWITCH
HARNESS 14241

501-11-17

Rear Door Window Control Switch RH (G1404741)

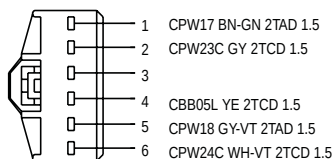


3M5T-14489-DFA

C8PW23

TO REAR RIGHT DOOR WINDOW SW

HARNESS 14240

Rear Door Window Control Switch RH—A (G1404742)




1L2T-14489-GC

C8PW23-A

TO REAR RIGHT WINDOW SWITCH

HARNESS 14240

Rear Door Window Regulator Motor LH (G1404747)

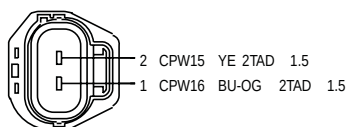


8V5T-14A464-AMA

C7PW22

TO REAR LEFT POWER WINDOW MOTOR

HARNESS 14241

Rear Door Window Regulator Motor LH—A (G1404748)

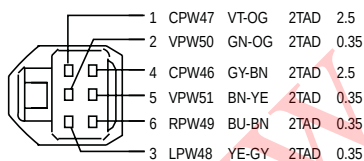


8V5T-14A464-APA

C7PW22-A

TO REAR LEFT WINDOW MOTOR MODULE

HARNESS 14241

Rear Door Window Regulator Motor RH (G1404749)

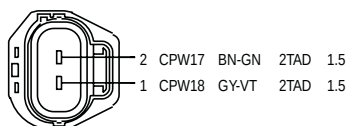

8V5T-14A464-AMA


C8PW24

TO REAR RIGHT POWER WINDOW MOTOR

HARNESS 14240

501-11-18

Rear Door Window Regulator Motor RH—A (G1404750)

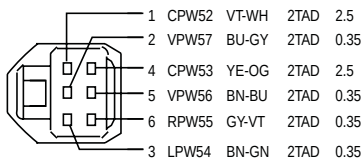

8V5T-14A464-APA

C8PW24-A
TO REAR RIGHT WINDOW MOTOR MODULE
HARNESS 14240

SECTION 501-12 Instrument Panel and Console

VEHICLE APPLICATION: **2012.0 Ranger**

CONTENTS


PAGE

ELECTRICAL CONNECTORS

Cigar Lighter.....	501-12-2
Front Power Outlet Socket.....	501-12-2
Luggage Compartment Power Outlet Socket.....	501-12-2
Rear Passenger Power Outlet Socket.....	501-12-2
Rear Passenger Power Outlet Socket — A.....	501-12-2


501-12-2

Cigar Lighter (G1404760)

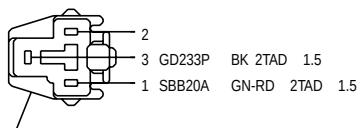


F80B-14489-BC
C2DC07
TO CIGAR LIGHTER IP
HARNESS 14401

Front Power Outlet Socket (G1404761)

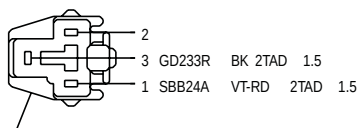

F80B-14489-BC
C2DC08
TO POWER POINT IP
HARNESS 14401


Luggage Compartment Power Outlet Socket (G1404762)

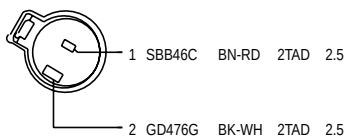

YL5T-14A464-AA
C4DC10
TO POWER POINT BEDLINER
HARNESS 19B966

Rear Passenger Power Outlet Socket (G1404763)


PIN 3 => GD345N BK-BU 2.5 2TAD + GD345P BK-BU 1.5 2TAD



F80B-14489-CD
C3DC09
TO POWER POINT CONSOLE REAR
HARNESS 14A005

Rear Passenger Power Outlet Socket—A (G1404764)

PIN 3 => GD345H BK-BU 2.5 2TAD + GD345F BK-BU 1.5 2TAD



F80B-14489-CD
C3DC09-A
TO POWER POINT CONSOLE TOP
HARNESS 14A005

SECTION 501-14 Handles, Locks, Latches and Entry Systems

VEHICLE APPLICATION: **2012.0 Ranger**

CONTENTS

PAGE


ELECTRICAL SCHEMATICS

Power Door Locks — LHD 4WD/LHD RWD.....	501-14-2
Power Door Locks — RHD 4WD/RHD RWD.....	501-14-4


ELECTRICAL CONNECTORS


Central Locking Lock/Unlock Switch.....	501-14-6
Driver Door Latch.....	501-14-6
Driver Door Latch — A.....	501-14-6
Fuel Filler Door Latch Motor.....	501-14-6
Passenger Door Latch — A.....	501-14-7
Passenger Door Latch.....	501-14-7
Rear Door Latch LH.....	501-14-7
Rear Door Latch LH — A.....	501-14-7
Rear Door Latch RH.....	501-14-8
Rear Door Latch RH — A.....	501-14-8
Radio Frequency (RF) Receiver.....	501-14-8

501-14-2 Power Door Locks—LHD 4WD/LHD RWD

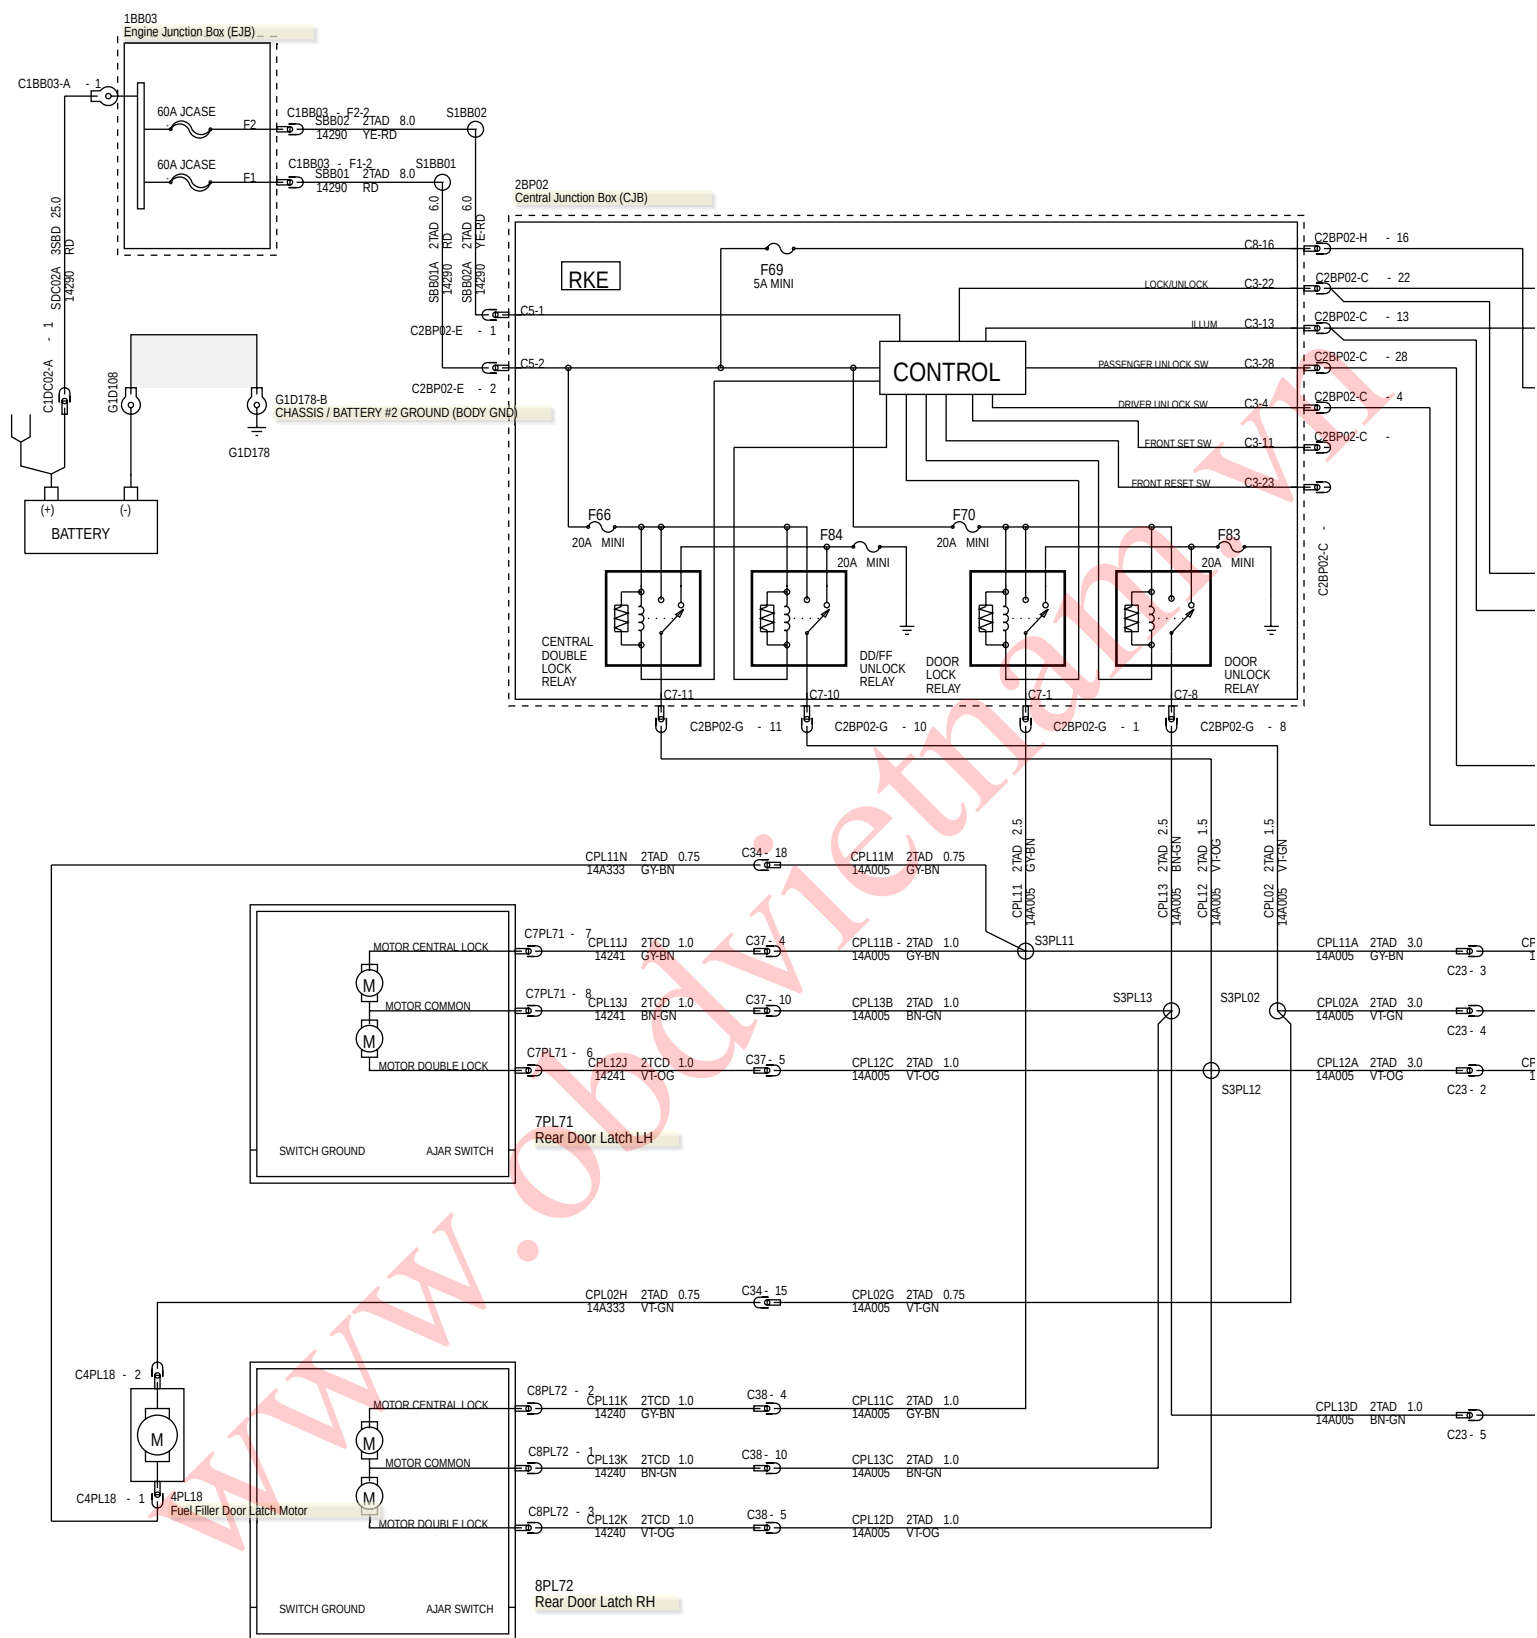


501-14-3 Power Door Locks—LHD 4WD/LHD RWD

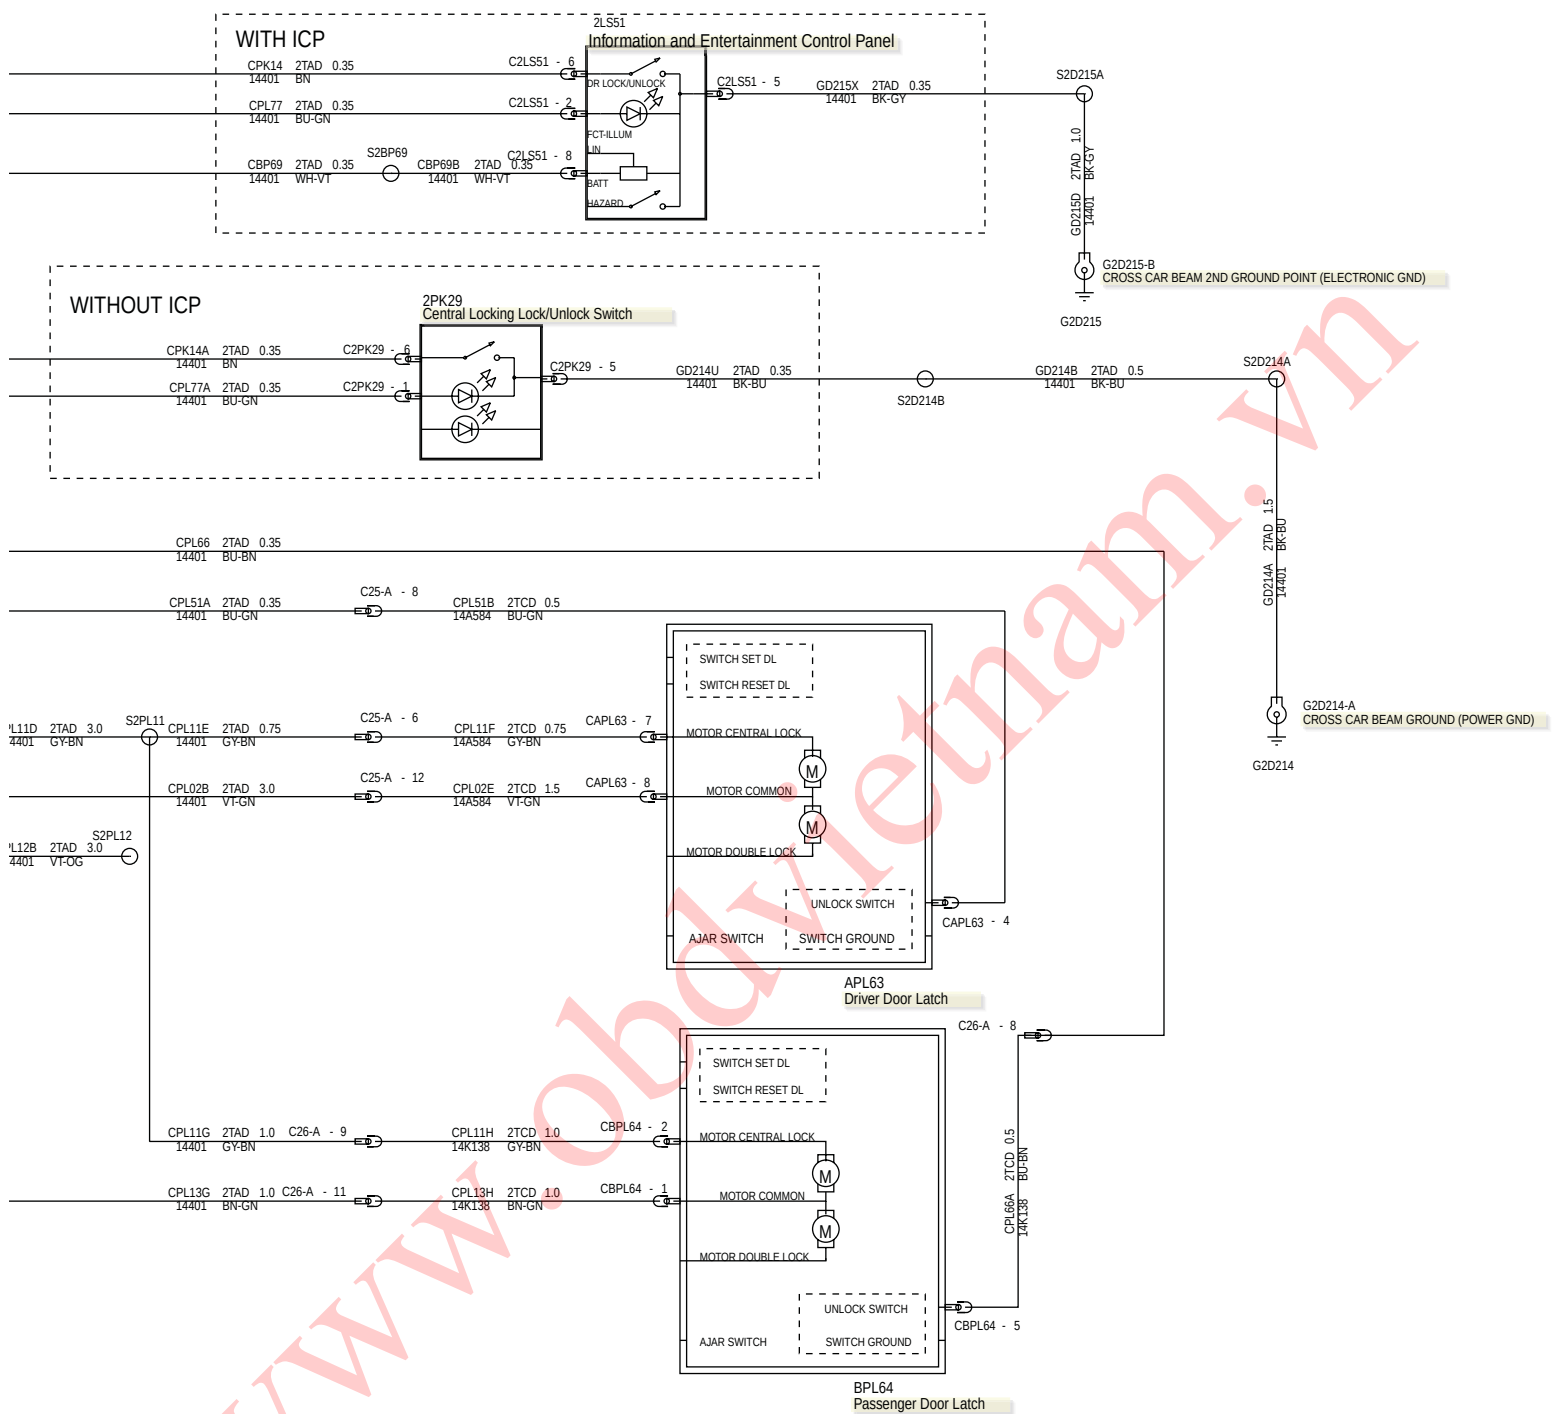

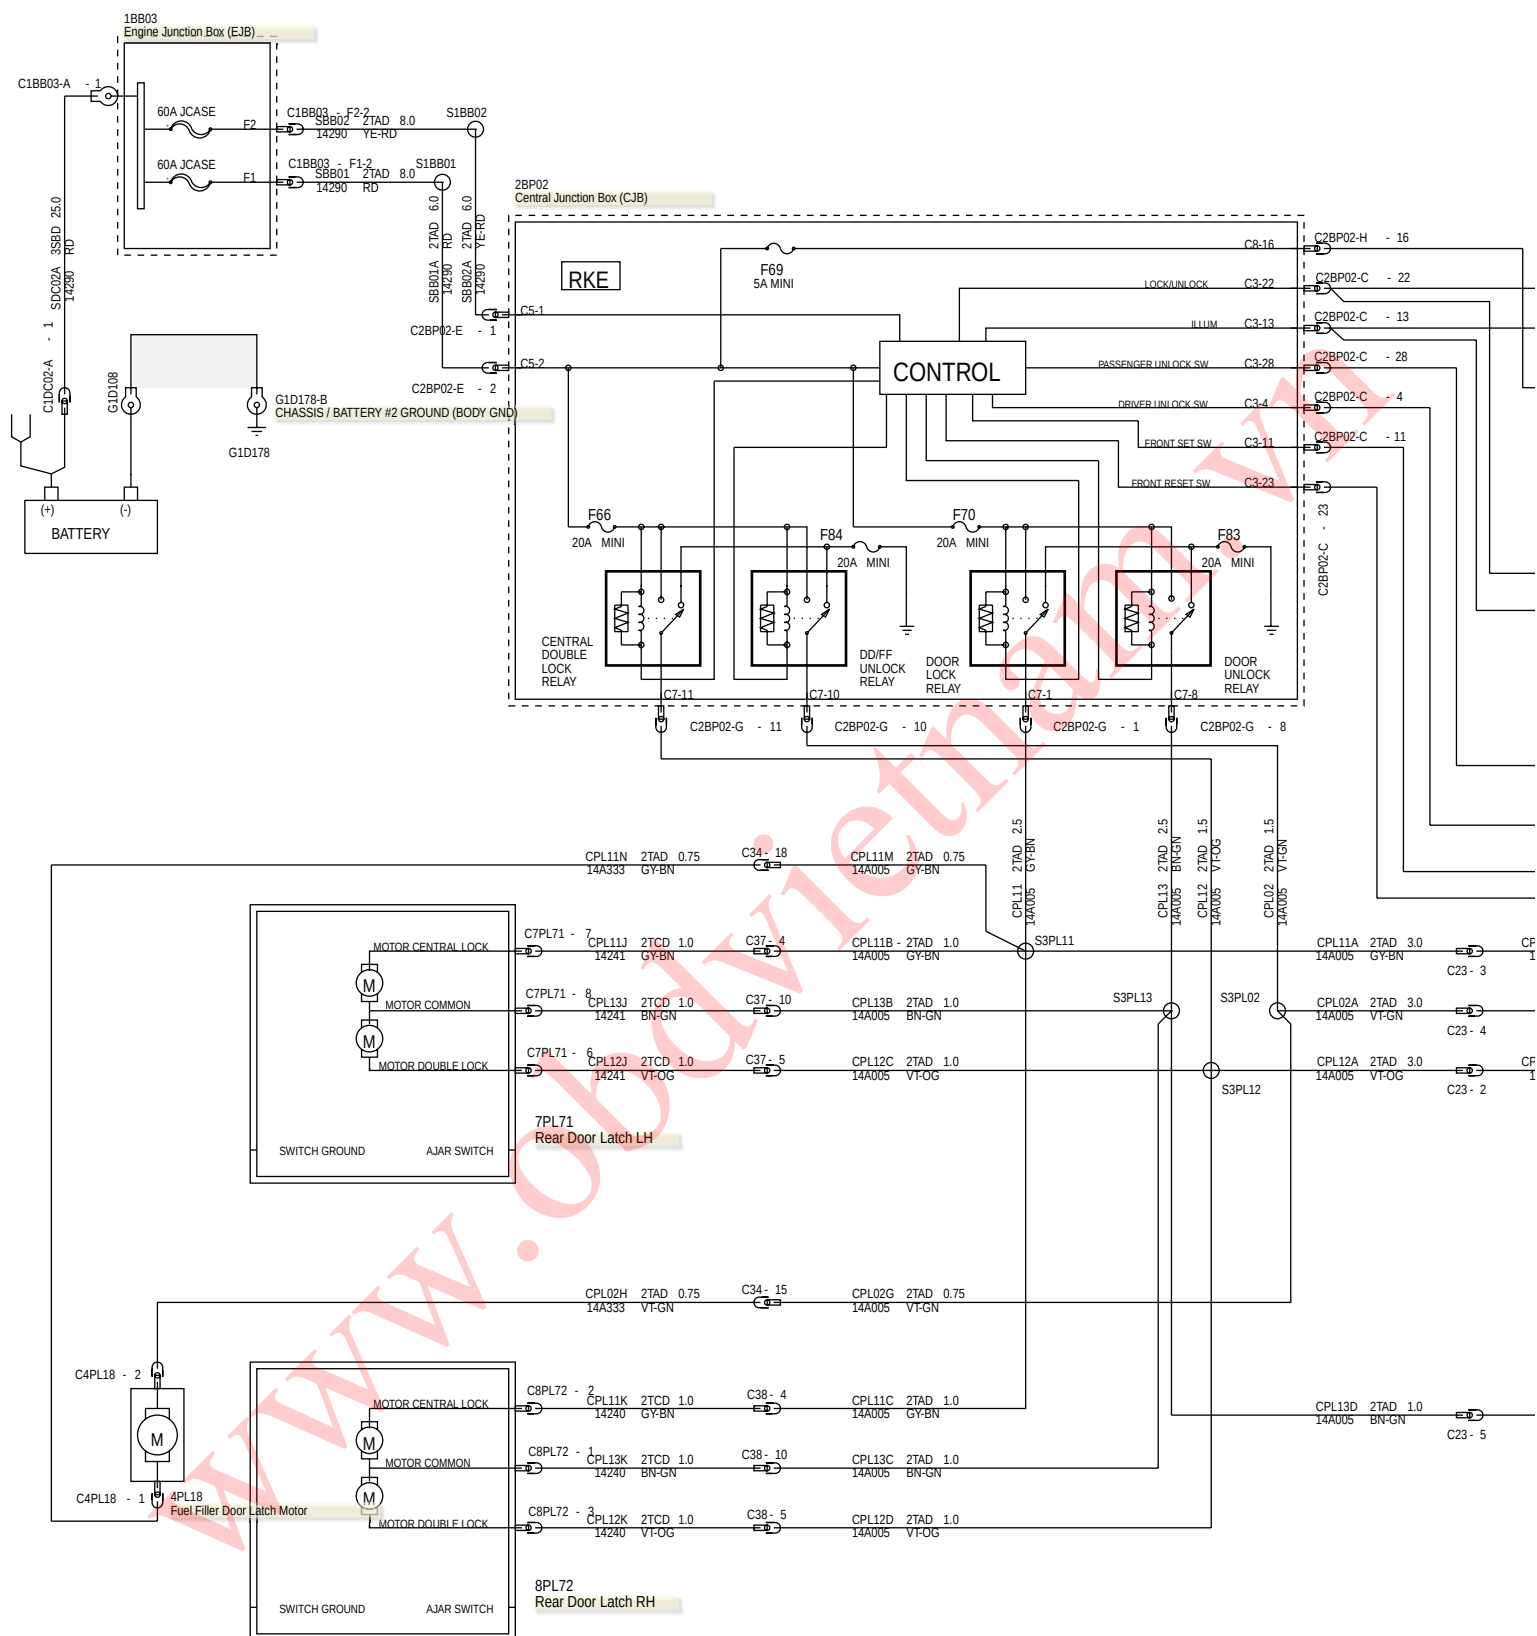


501-14-5 Power Door Locks—RHD 4WD/RHD RWD

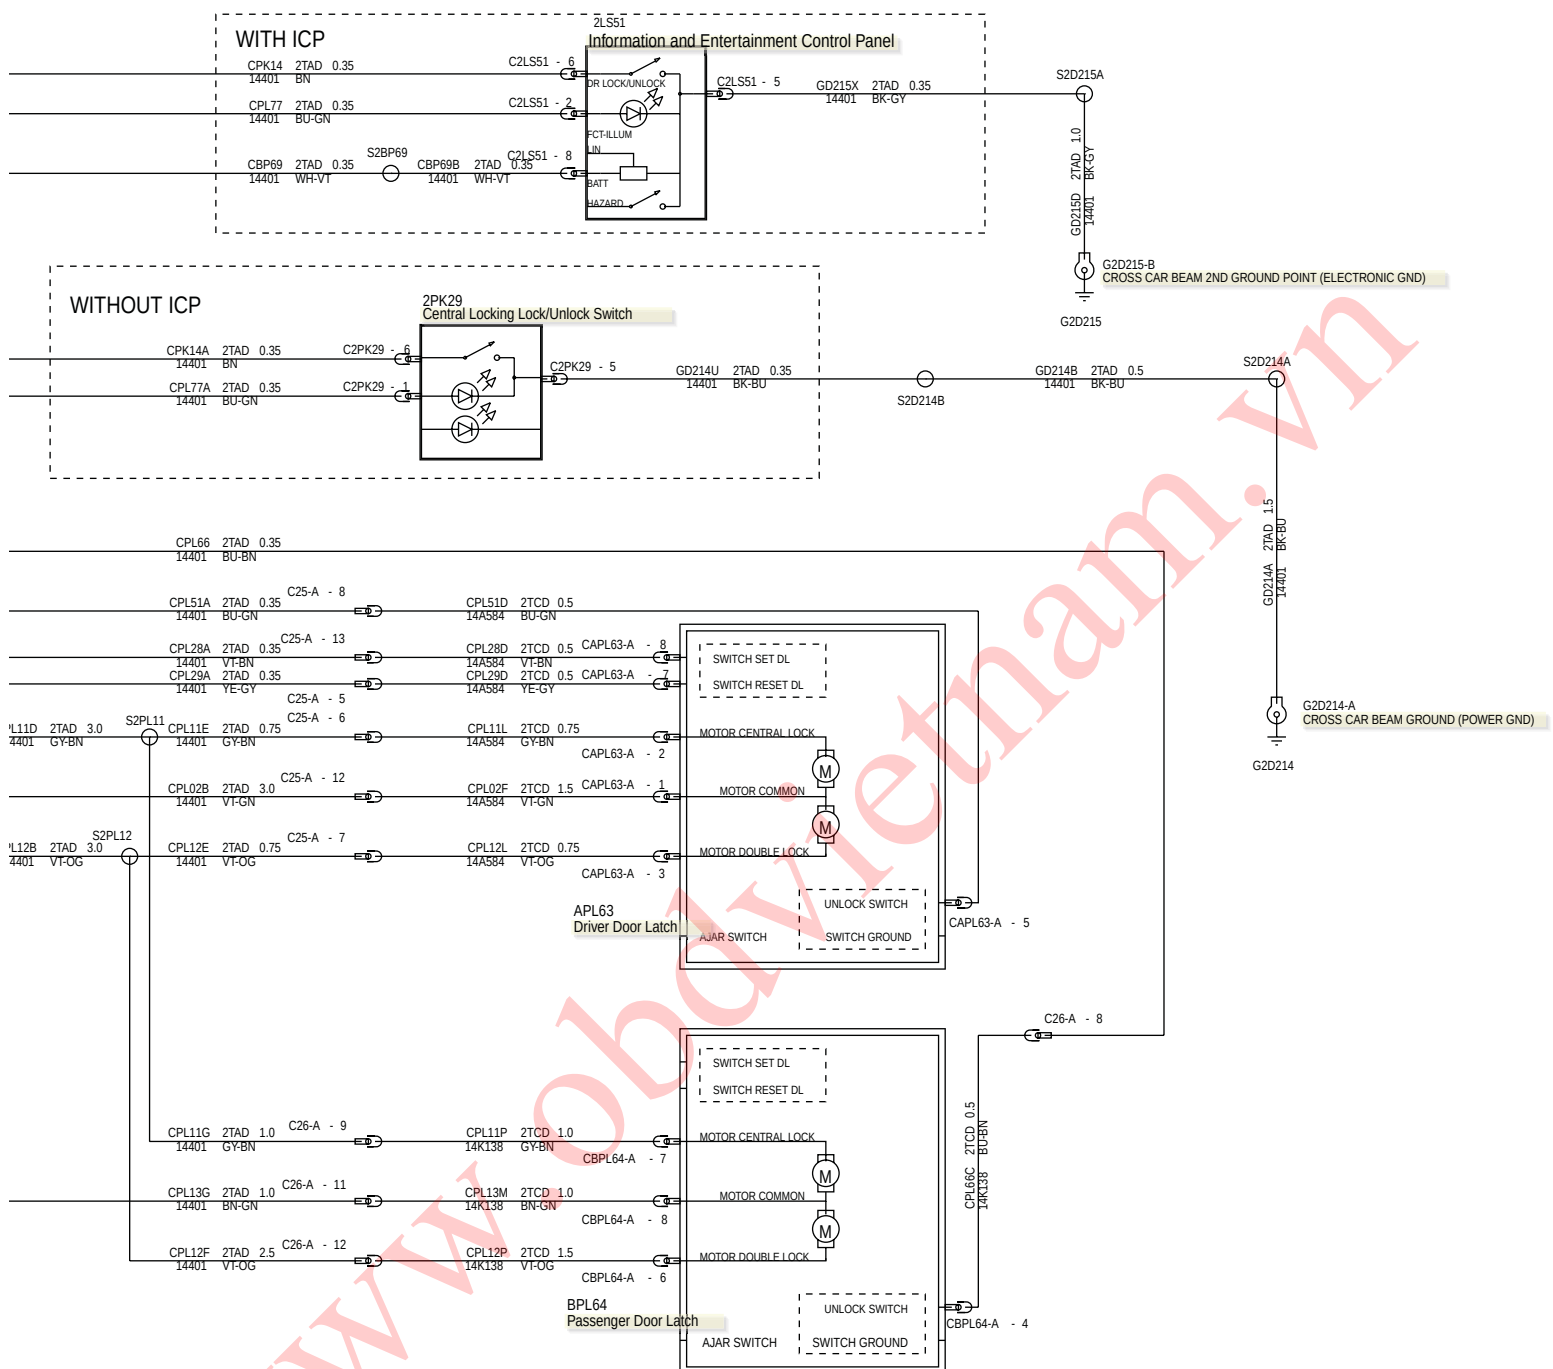

501-14-6

Central Locking Lock/Unlock Switch (G1414613)

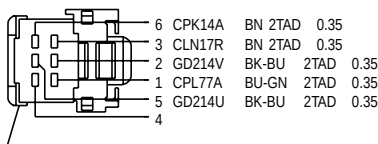


4S7T-14489-DA

C2PK29

TO CENTRAL LOCK SWITCH FORD

HARNESS 14401

Driver Door Latch (G1408453)

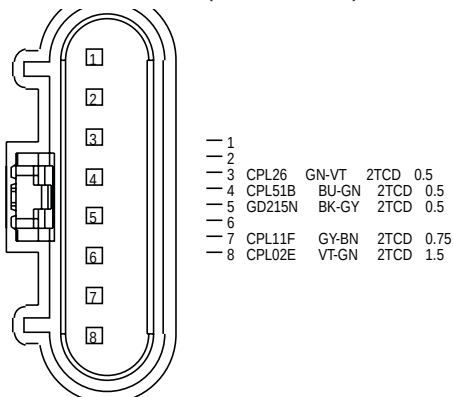


9U5T-14A464-VAA

CAPL63

TO FRONT LEFT DOOR LATCH

HARNESS 14A584

Driver Door Latch—A (G1405510)

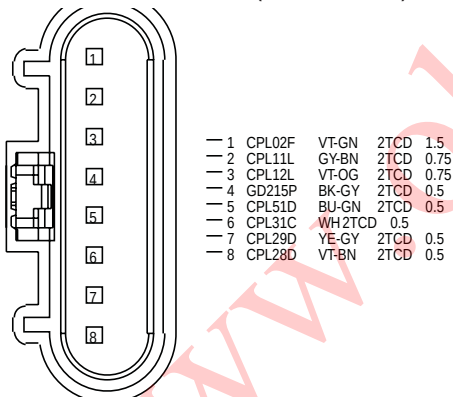


9U5T-14A464-VAA

CAPL63-A

TO FRONT RIGHT DOOR LATCH

HARNESS 14A584

Fuel Filler Door Latch Motor (G1404769)

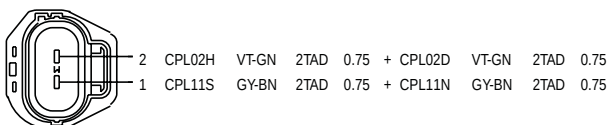

97BG-14A464-VBB


C4PL18

TO FUEL FLAP LOCKING MOTOR

HARNESS 14A333

501-14-7


Passenger Door Latch—A (G1405511)

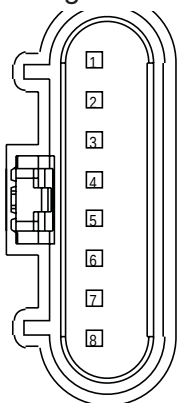

— 1			
— 2			
— 3	CPL26C	GN-VT	2TCD 0.5
— 4	CPL66C	BU-BN	2TCD 0.5
— 5	GD215T	BK-GY	2TCD 0.5
— 6	CPL12P	VT-OG	2TCD 1.5
— 7	CPL11P	GY-BN	2TCD 1.0
— 8	CPL13M	BN-GN	2TCD 1.0

9U5T-14A464-VAA
CBPL64-A
TO FRONT LEFT DOOR LATCH
HARNESS 14K138


Passenger Door Latch (G1408454)

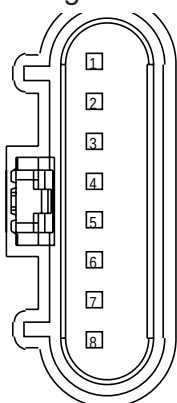

— 1	CPL13H	BN-GN	2TCD 1.0
— 2	CPL11H	GY-BN	2TCD 1.0
— 3			
— 4	GD215S	BK-GY	2TCD 0.5
— 5	CPL66A	BU-BN	2TCD 0.5
— 6	CPL31	WH	2TCD 0.5
— 7			
— 8			

9U5T-14A464-VAA
CBPL64
TO FRONT RIGHT DOOR LATCH
HARNESS 14K138

Rear Door Latch LH (G1404775)

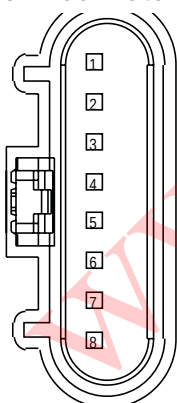

— 1			
— 2			
— 3	CPL36	GN	2TCD 0.5
— 4			
— 5	GD343R	BK-VT	2TAD 0.5
— 6	CPL12J	VT-OG	2TCD 1.0
— 7	CPL11J	GY-BN	2TCD 1.0
— 8	CPL13J	BN-GN	2TCD 1.0

9U5T-14A464-VAA
C7PL71
TO REAR LEFT DOOR LATCH (DOUBLE CAB)
HARNESS 14241

Rear Door Latch LH—A (G1404776)




2	GD343V	BK-VT	2TAD 0.5
1	CPL36B	GN	2TCD 0.5

7T4T-14489-CA
C7PL71-A
TO REAR LEFT DOOR AJAR SW (RAR)
HARNESS 14241

501-14-8

Rear Door Latch RH (G1404777)

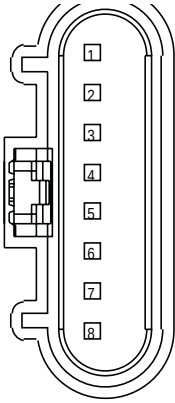

— 1	CPL13K	BN-GN	2TCD	1.0
— 2	CPL11K	GY-BN	2TCD	1.0
— 3	CPL12K	VT-OG	2TCD	1.0
— 4	GD343S	BK-VT	2TAD	0.5
— 5				
— 6	CPL39	YE	2TCD	0.5
— 7				
— 8				

9U5T-14A464-VAA
C8PL72
TO REAR RIGHT DOOR LATCH (DOUBLE CAB)
HARNESS 14240

Rear Door Latch RH—A (G1404778)



2	GD343U	BK-VT	2TAD	0.5
1	CPL39B	YE	2TCD	0.5

7T4T-14489-CA
C8PL72-A
TO REAR RIGHT DOOR AJAR SW (RAP)
HARNESS 14240

Radio Frequency (RF) Receiver (G1406665)



SECTION 501-16 Wipers and Washers

VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS

PAGE

ELECTRICAL SCHEMATICS

Wipers and Washers — LHD 4WD/LHD RWD..... 501-16-2

Wipers and Washers — RHD 4WD/RHD RWD..... 501-16-4

ELECTRICAL CONNECTORS

Rain Sensor..... 501-16-6


Windshield Washer Pump..... 501-16-6

Windshield Wiper Motor..... 501-16-6


Windshield Wiper/Washer Switch..... 501-16-6

Windshield Wiper/Washer Switch — A..... 501-16-7

501-16-2 Wipers and Washers—LHD 4WD/LHD RWD

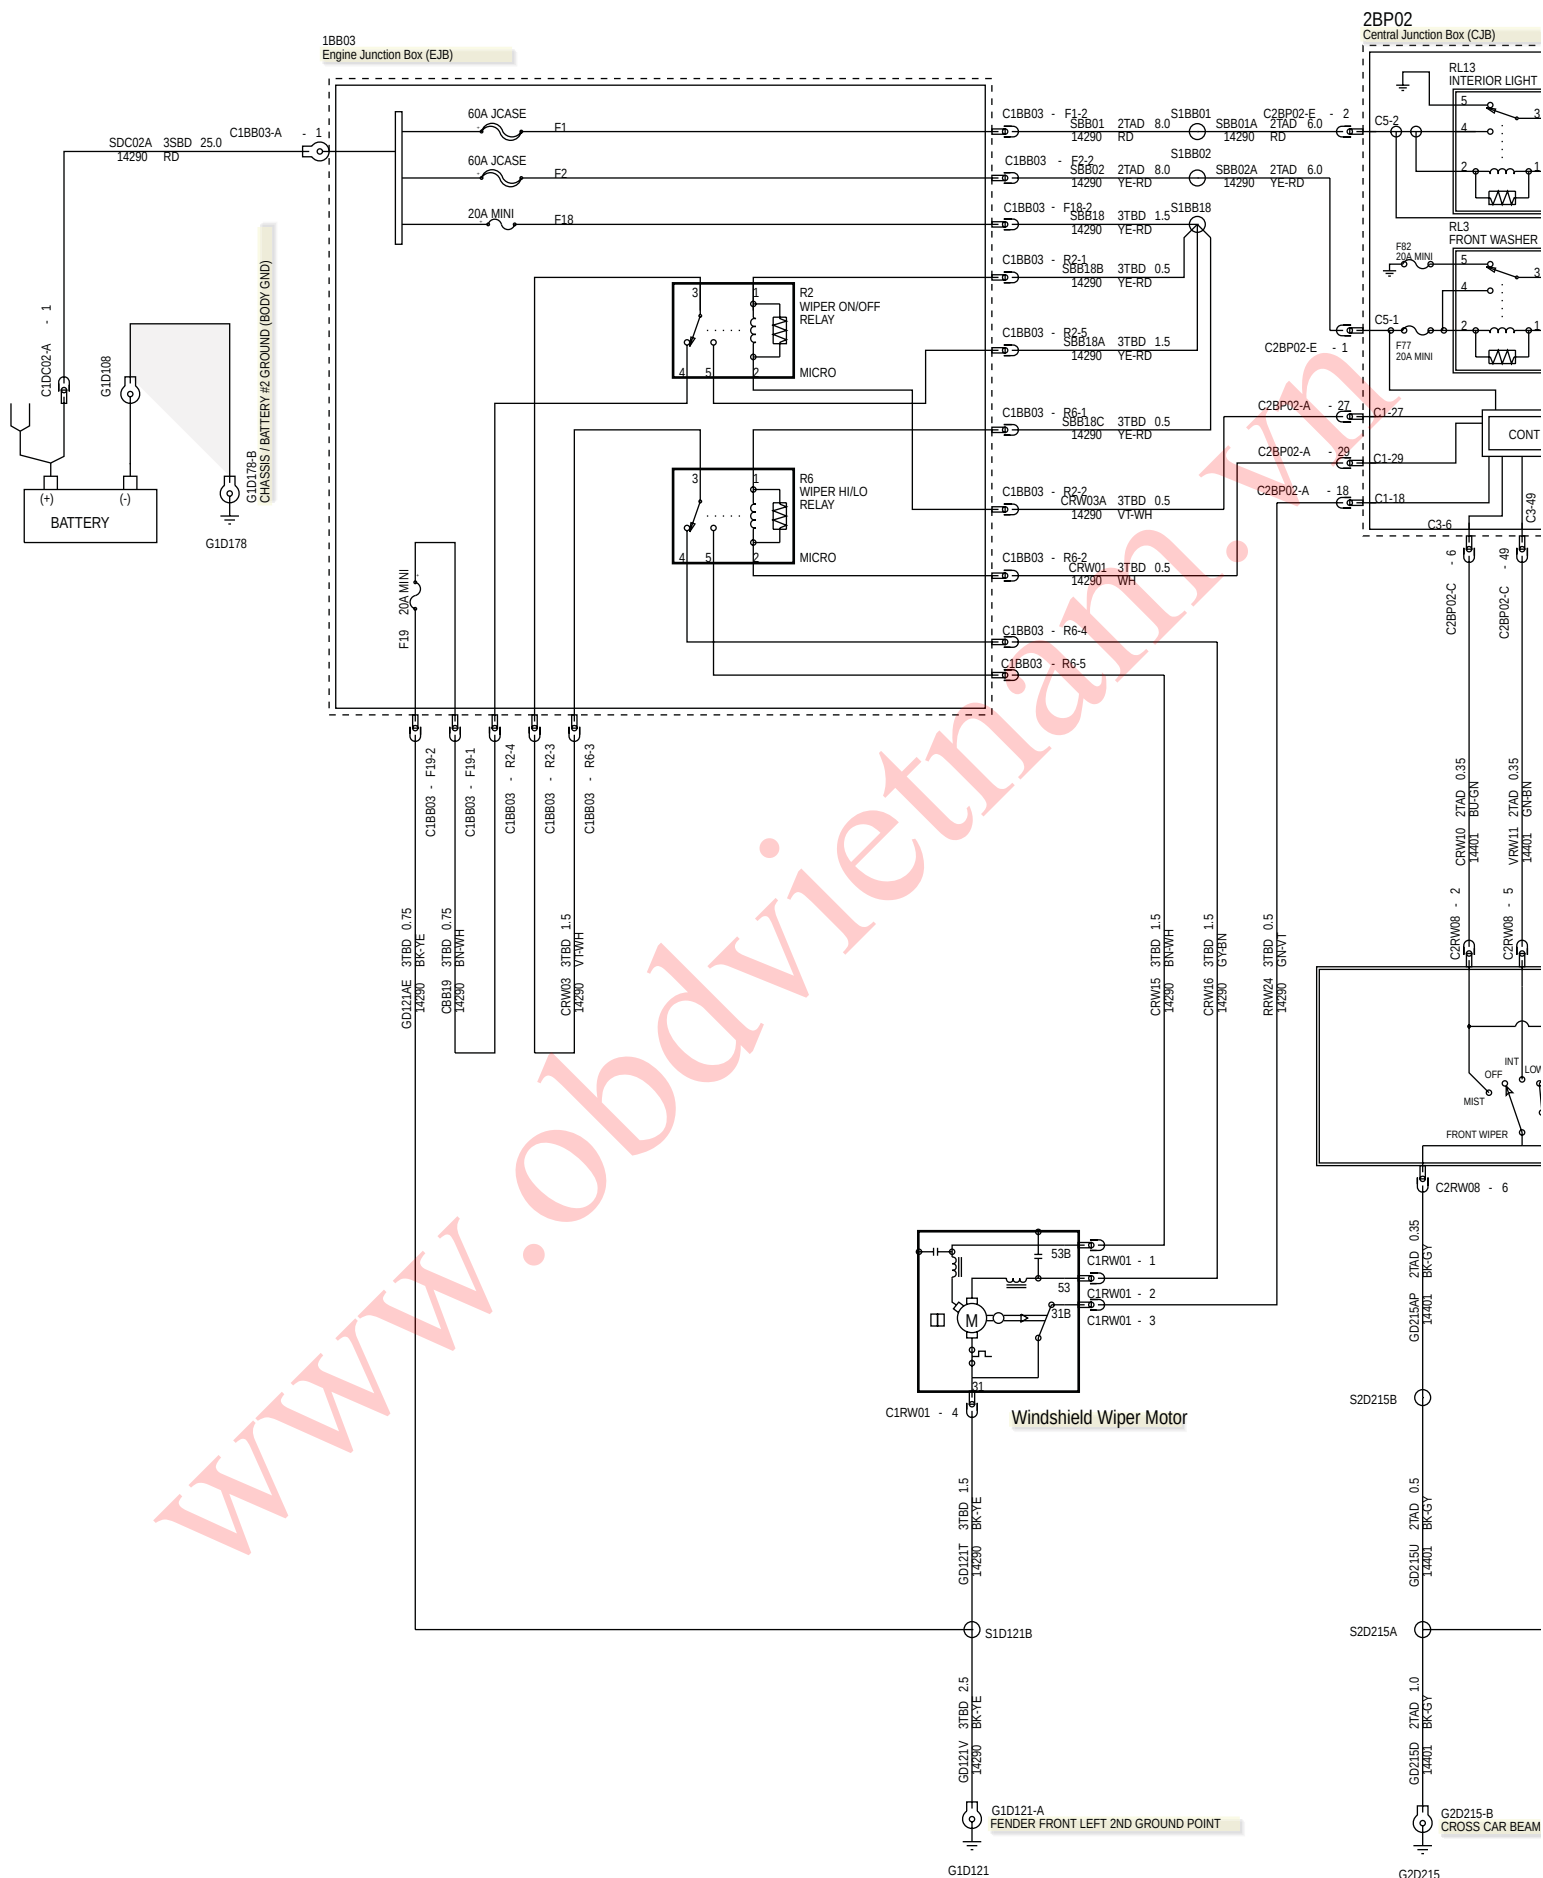


2ND GROUND POINT (ELECTRONIC GND)



P02
Central Junction Box (CJB)




501-16-5 Wipers and Washers—RHD 4WD/RHD RWD

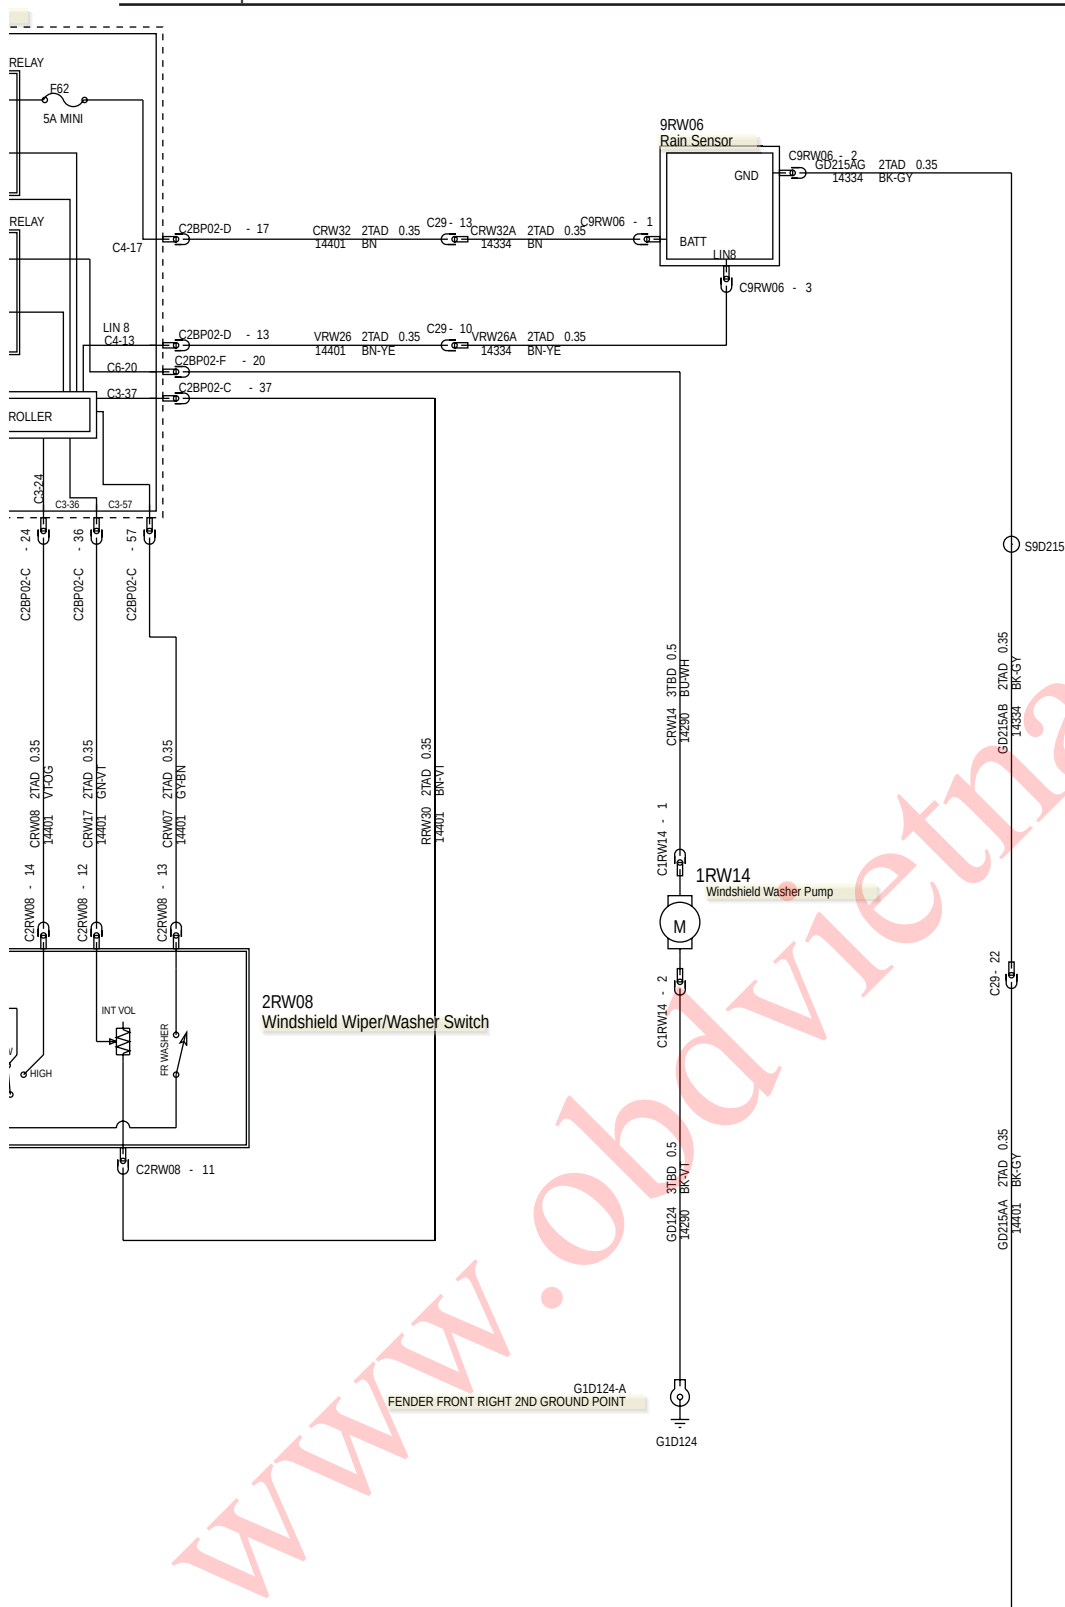

2ND GROUND POINT (ELECTRONIC GND)

501-16-6

Rain Sensor (G1404788)

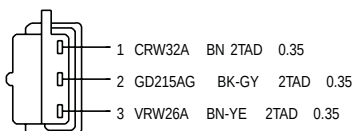


1X4T-14489-RA

C9RW06

TO RAIN SENSOR

HARNESS 14334

Windshield Washer Pump (G1404789)

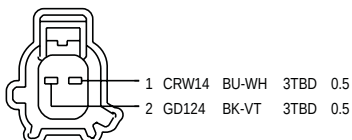


1L2T-14A464-AA

C1RW14

TO WASHER MOTOR

HARNESS 14290

Windshield Wiper Motor (G1404790)

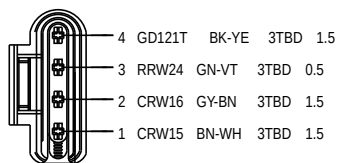


638245-1

C1RW01

TO WIPER MOTOR

HARNESS 14290

Windshield Wiper/Washer Switch (G1404791)

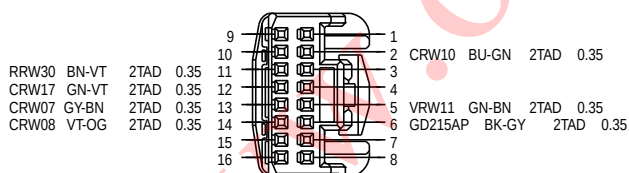

C2RW08

MQTZ-DL-16F

TO STALK SWITCHES WIPER

HARNESS 14401


501-16-7

Windshield Wiper/Washer Switch—A (G1404792)

CRW10A BU-GN 2TAD 0.35

VRW11A GN-BN 2TAD 0.35

GD215AN BK-GY 2TAD 0.35

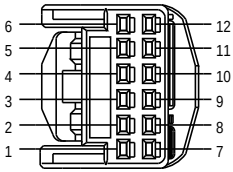

12

11 RRW30A BN-VT 2TAD 0.35

10 CRW17A GN-VT 2TAD 0.35

9 CRW07A GY-BN 2TAD 0.35

8 CRW08A VT-OG 2TAD 0.35

7

C2RW08-A
MQTZ-DL-12F
TO STALK SWITCHES WIPER (RHD W/O RFOG)
HARNESS 14401



SECTION 501-20A Safety Belt System

VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS

PAGE

ELECTRICAL CONNECTORS


Driver Safety Belt Pretensioner.....	501-20A-2
Passenger Safety Belt Pretensioner.....	501-20A-2
Rear Safety Belt Retractor and Pretensioner.....	501-20A-2
Rear Safety Belt Retractor and Pretensioner.....	501-20A-2

www.obdvietsnam.vn



501-20A-2

Driver Safety Belt Pretensioner (G1404795)

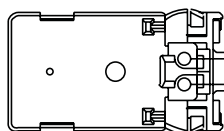

2	RR120	BN-GN	2TAD	0.5	GOLD
1	CR120	BU-OG	2TAD	0.5	GOLD


6EST-14489-AA

C3R120

TO DRIVER BELT PRETENSIONER

HARNESS 14A005

Passenger Safety Belt Pretensioner (G1404796)

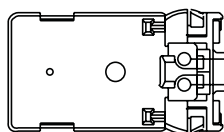

2	RR122	BN	2TAD	0.5	GOLD
1	CR122	WH-OG	2TAD	0.5	GOLD


6EST-14489-AA

C3R122

TO PASSENGER BELT PRETENSIONER

HARNESS 14A005

Rear Safety Belt Retractor and Pretensioner (G1425540)

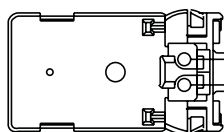

2	RR120B	BN-GN	2TCD	0.5	GOLD
1	CR120B	BU-OG	2TCD	0.5	GOLD


6EST-14489-AA

C3R123

TO LEFT BELT PRETENSIONER LHD=DRIVER SIDE / RHD=PASSENGER SIDE

HARNESS 14241

Rear Safety Belt Retractor and Pretensioner (G1425541)

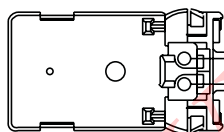

2	RR122B	BN	2TCD	0.5	GOLD
1	CR122B	WH-OG	2TCD	0.5	GOLD

6EST-14489-AA

C3R125

TO RIGHT BELT PRETENSIONER LHD=PASSENGER SIDE / RHD=DRIVER SIDE

HARNESS 14240

SECTION 501-20B Supplemental Restraint System

VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS PAGE

ELECTRICAL SCHEMATICS

Air Bags and Safety Belt Pretensioners — Single Cab, LHD 4WD/LHD RWD, Vehicles With: Passenger Air Bag Deactivation Switch.....	501-20B-3
Air Bags and Safety Belt Pretensioners — Single Cab, LHD 4WD/LHD RWD, Vehicles Without: Passenger Air Bag Deactivation Switch.....	501-20B-5
Air Bags and Safety Belt Pretensioners — Double Cab, LHD 4WD/LHD RWD, Vehicles With: Passenger Air Bag Deactivation Switch.....	501-20B-7
Air Bags and Safety Belt Pretensioners — Double Cab, LHD 4WD/LHD RWD, Vehicles Without: Passenger Air Bag Deactivation Switch.....	501-20B-9
Air Bags and Safety Belt Pretensioners — Super Cab, LHD 4WD/LHD RWD, Vehicles With: Passenger Air Bag Deactivation Switch.....	501-20B-11
Air Bags and Safety Belt Pretensioners — Super Cab, LHD 4WD/LHD RWD, Vehicles Without: Passenger Air Bag Deactivation Switch.....	501-20B-13
Air Bags and Safety Belt Pretensioners — Single Cab, RHD 4WD/RHD RWD, Vehicles With: Passenger Air Bag Deactivation Switch.....	501-20B-15
Air Bags and Safety Belt Pretensioners — Single Cab, RHD 4WD/RHD RWD, Vehicles Without: Passenger Air Bag Deactivation Switch.....	501-20B-17
Air Bags and Safety Belt Pretensioners — Double Cab, RHD 4WD/RHD RWD, Vehicles With: Passenger Air Bag Deactivation Switch.....	501-20B-19
Air Bags and Safety Belt Pretensioners — Double Cab, RHD 4WD/RHD RWD, Vehicles Without: Passenger Air Bag Deactivation Switch.....	501-20B-21
Air Bags and Safety Belt Pretensioners — Super Cab, RHD 4WD/RHD RWD, Vehicles With: Passenger Air Bag Deactivation Switch.....	501-20B-23
Air Bags and Safety Belt Pretensioners — Super Cab, RHD 4WD/RHD RWD, Vehicles Without: Passenger Air Bag Deactivation Switch.....	501-20B-25

ELECTRICAL CONNECTORS

Clockspring.....	501-20B-27
Clockspring — A.....	501-20B-27
Driver Door Side Impact Sensor.....	501-20B-27
Driver Lower Air Bag Module.....	501-20B-27
Driver Side Air Curtain Module.....	501-20B-28
Front Impact Severity Sensor.....	501-20B-28
Passenger Air Bag Deactivation (PAD) Indicator.....	501-20B-28
Passenger Air Bag Deactivation (PAD) Indicator — A.....	501-20B-28
Passenger Air Bag Deactivation (PAD) Switch.....	501-20B-29
Passenger Air Bag Module.....	501-20B-29
Passenger Side Air Curtain Module.....	501-20B-29
Passenger Door Side Impact Sensor.....	501-20B-29
Restraints Control Module (RCM).....	501-20B-30
Restraints Control Module (RCM) — A.....	501-20B-30
Side Impact Sensor LH.....	501-20B-30




Side Impact Sensor RH..... 501-20B-30


www.obdviethnam.vn








501-20B-4 Air Bags and Safety Belt Pretensioners—Single Cab, LHD 4WD/LHD RWD, Vehicles With: Passenger Air Bag Deactivation Switch

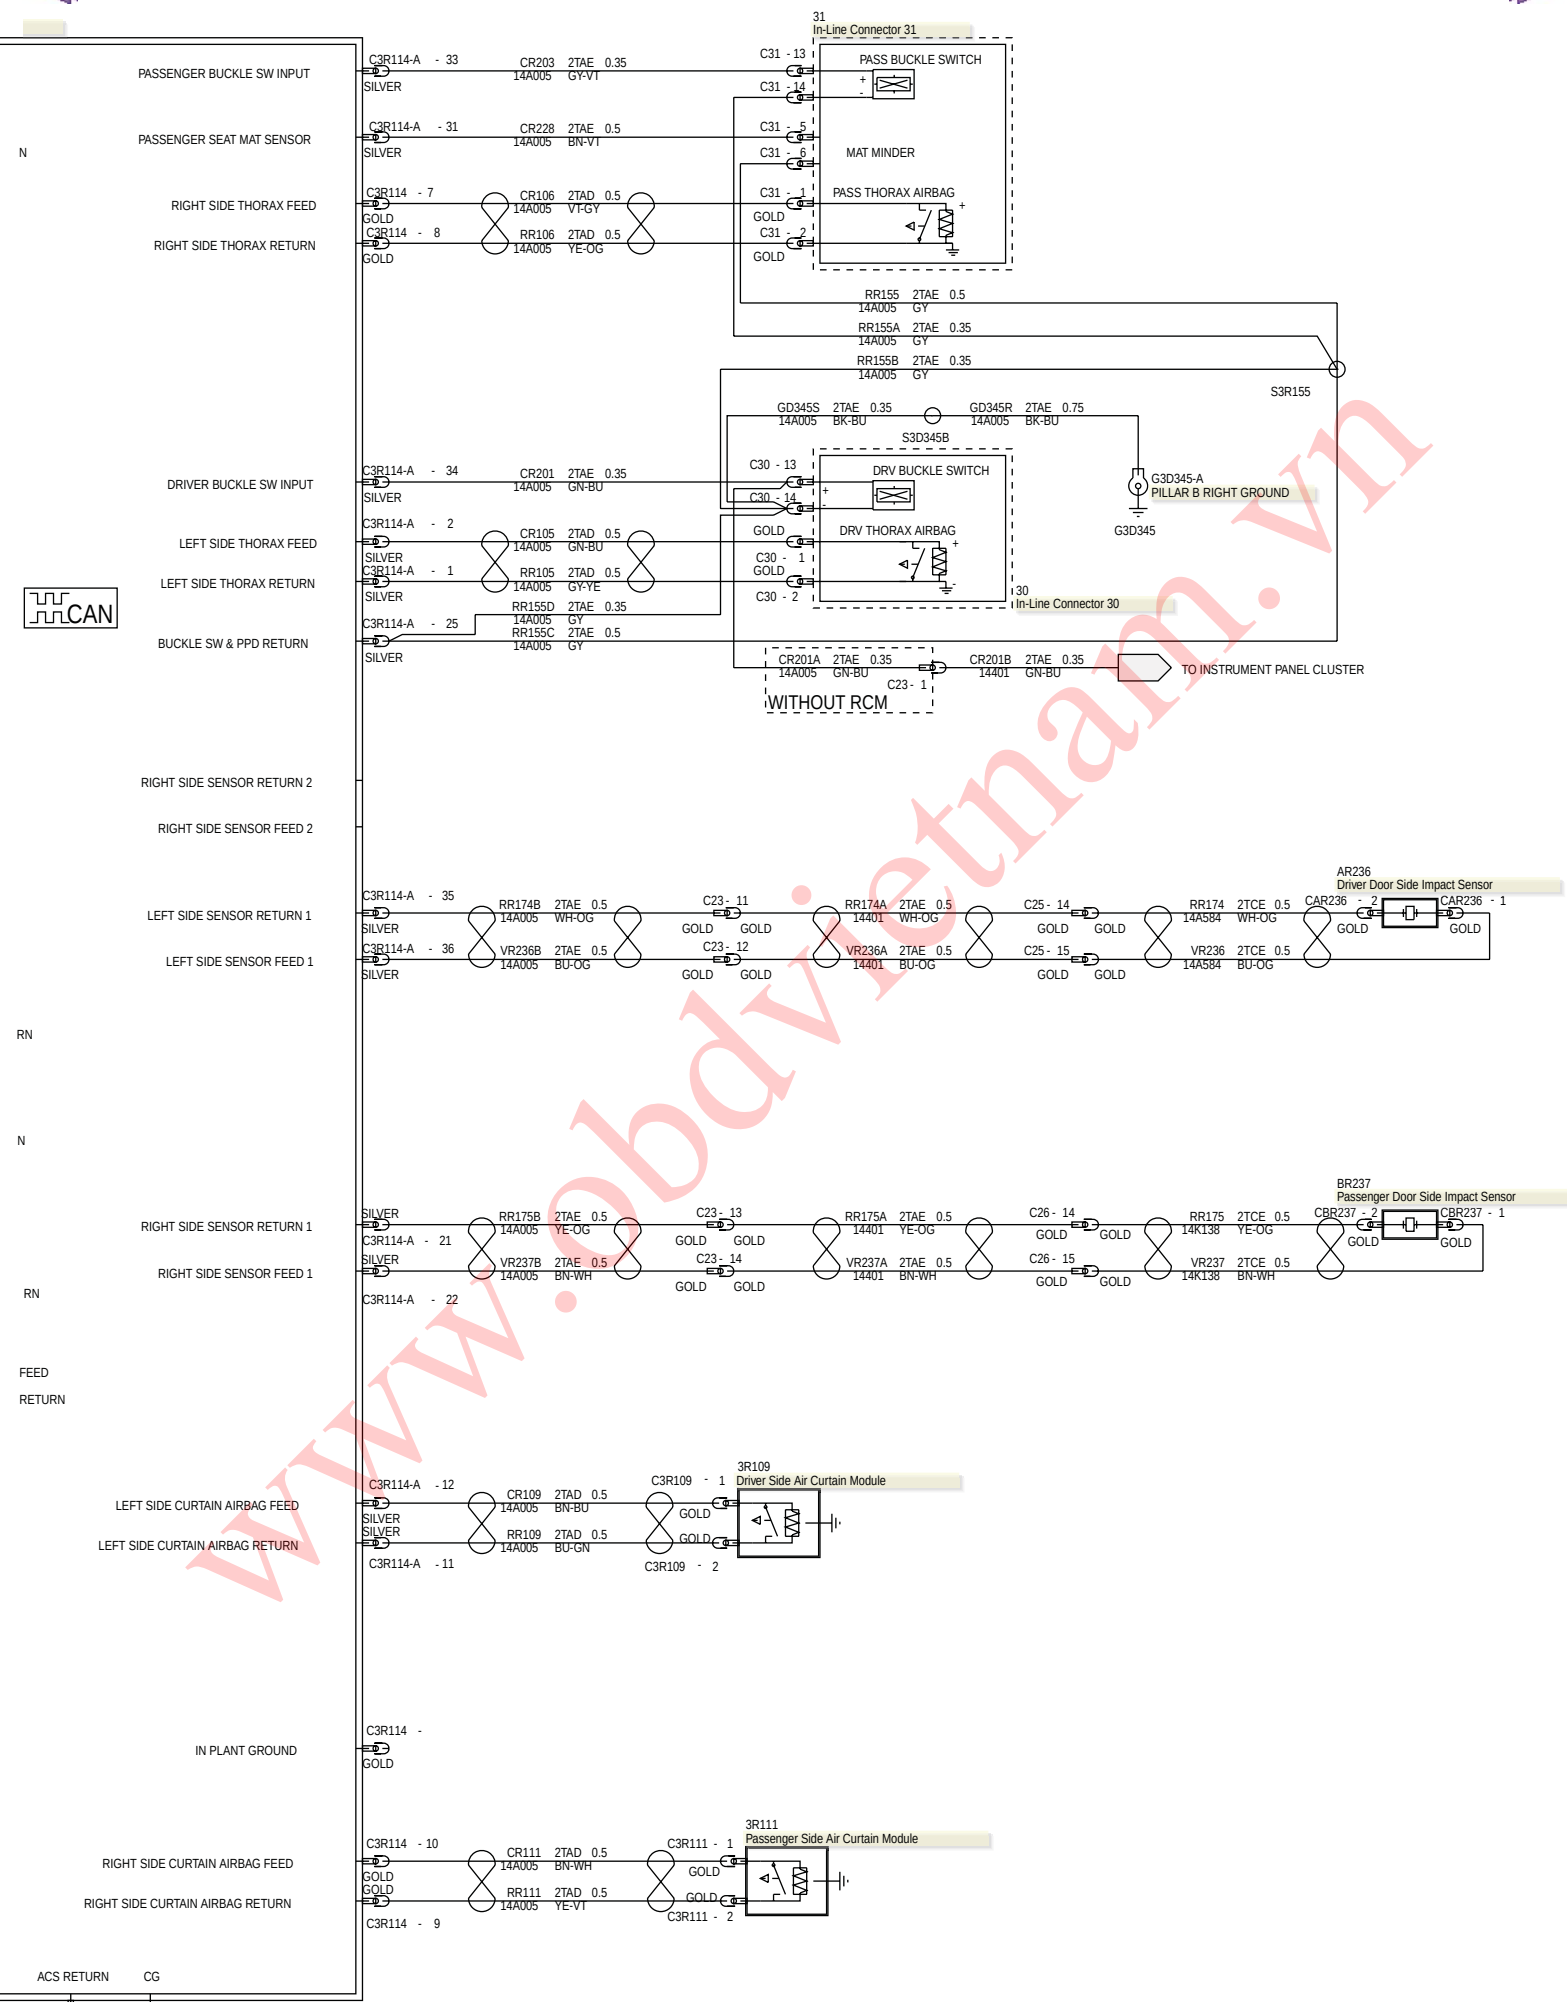

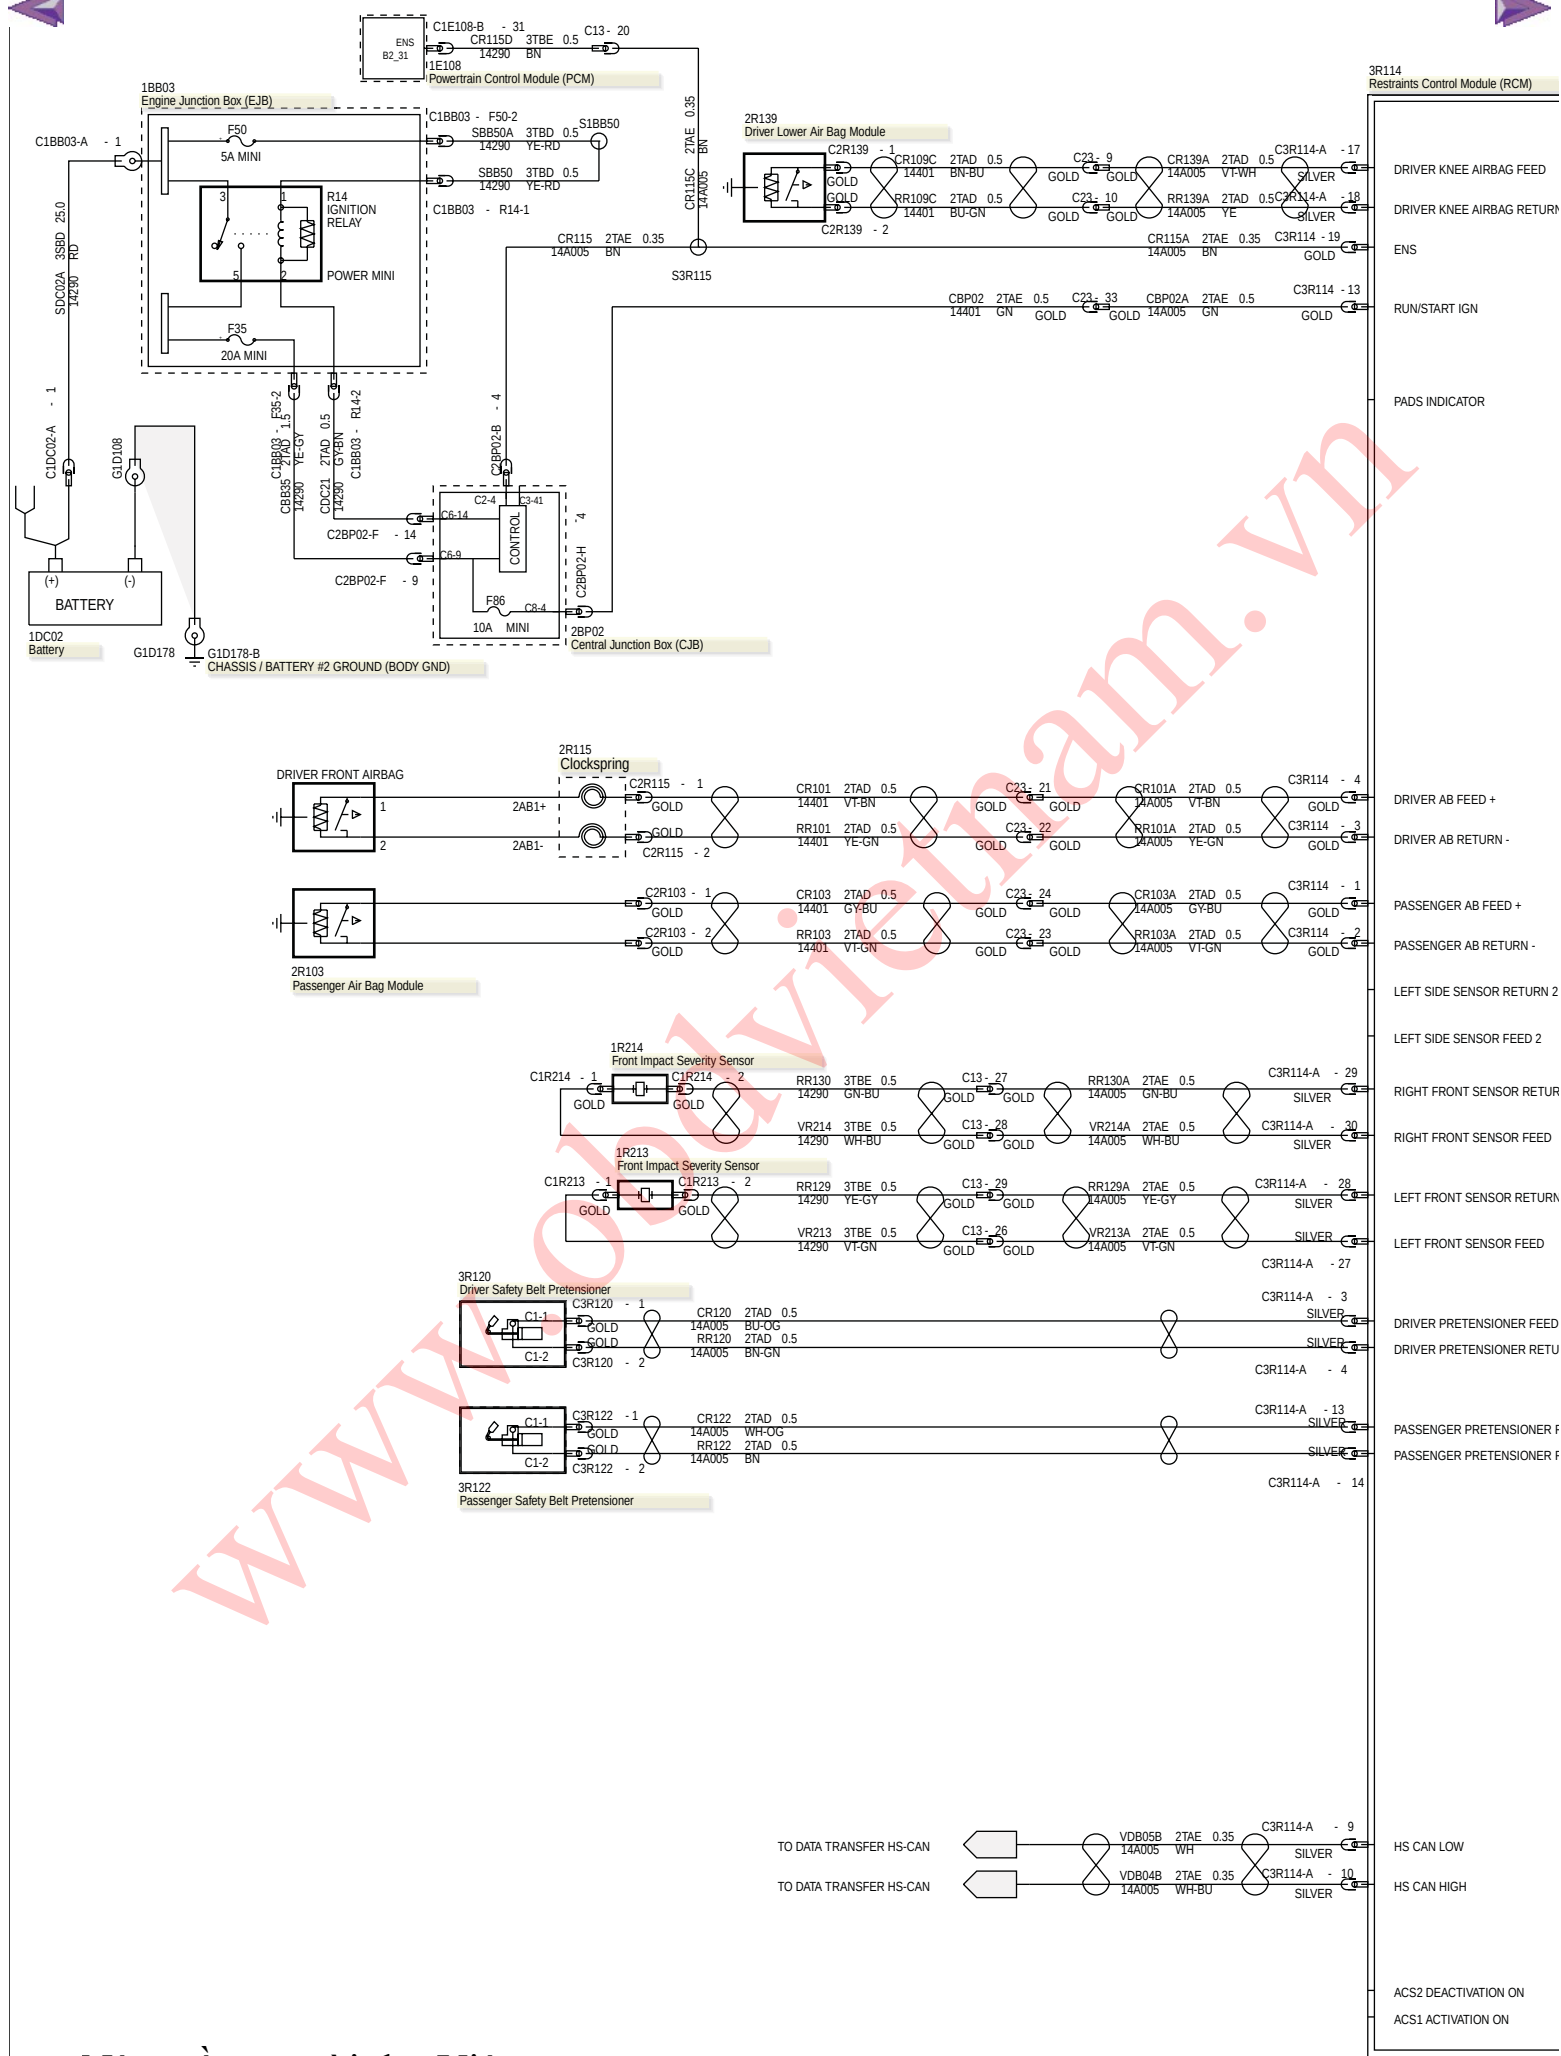


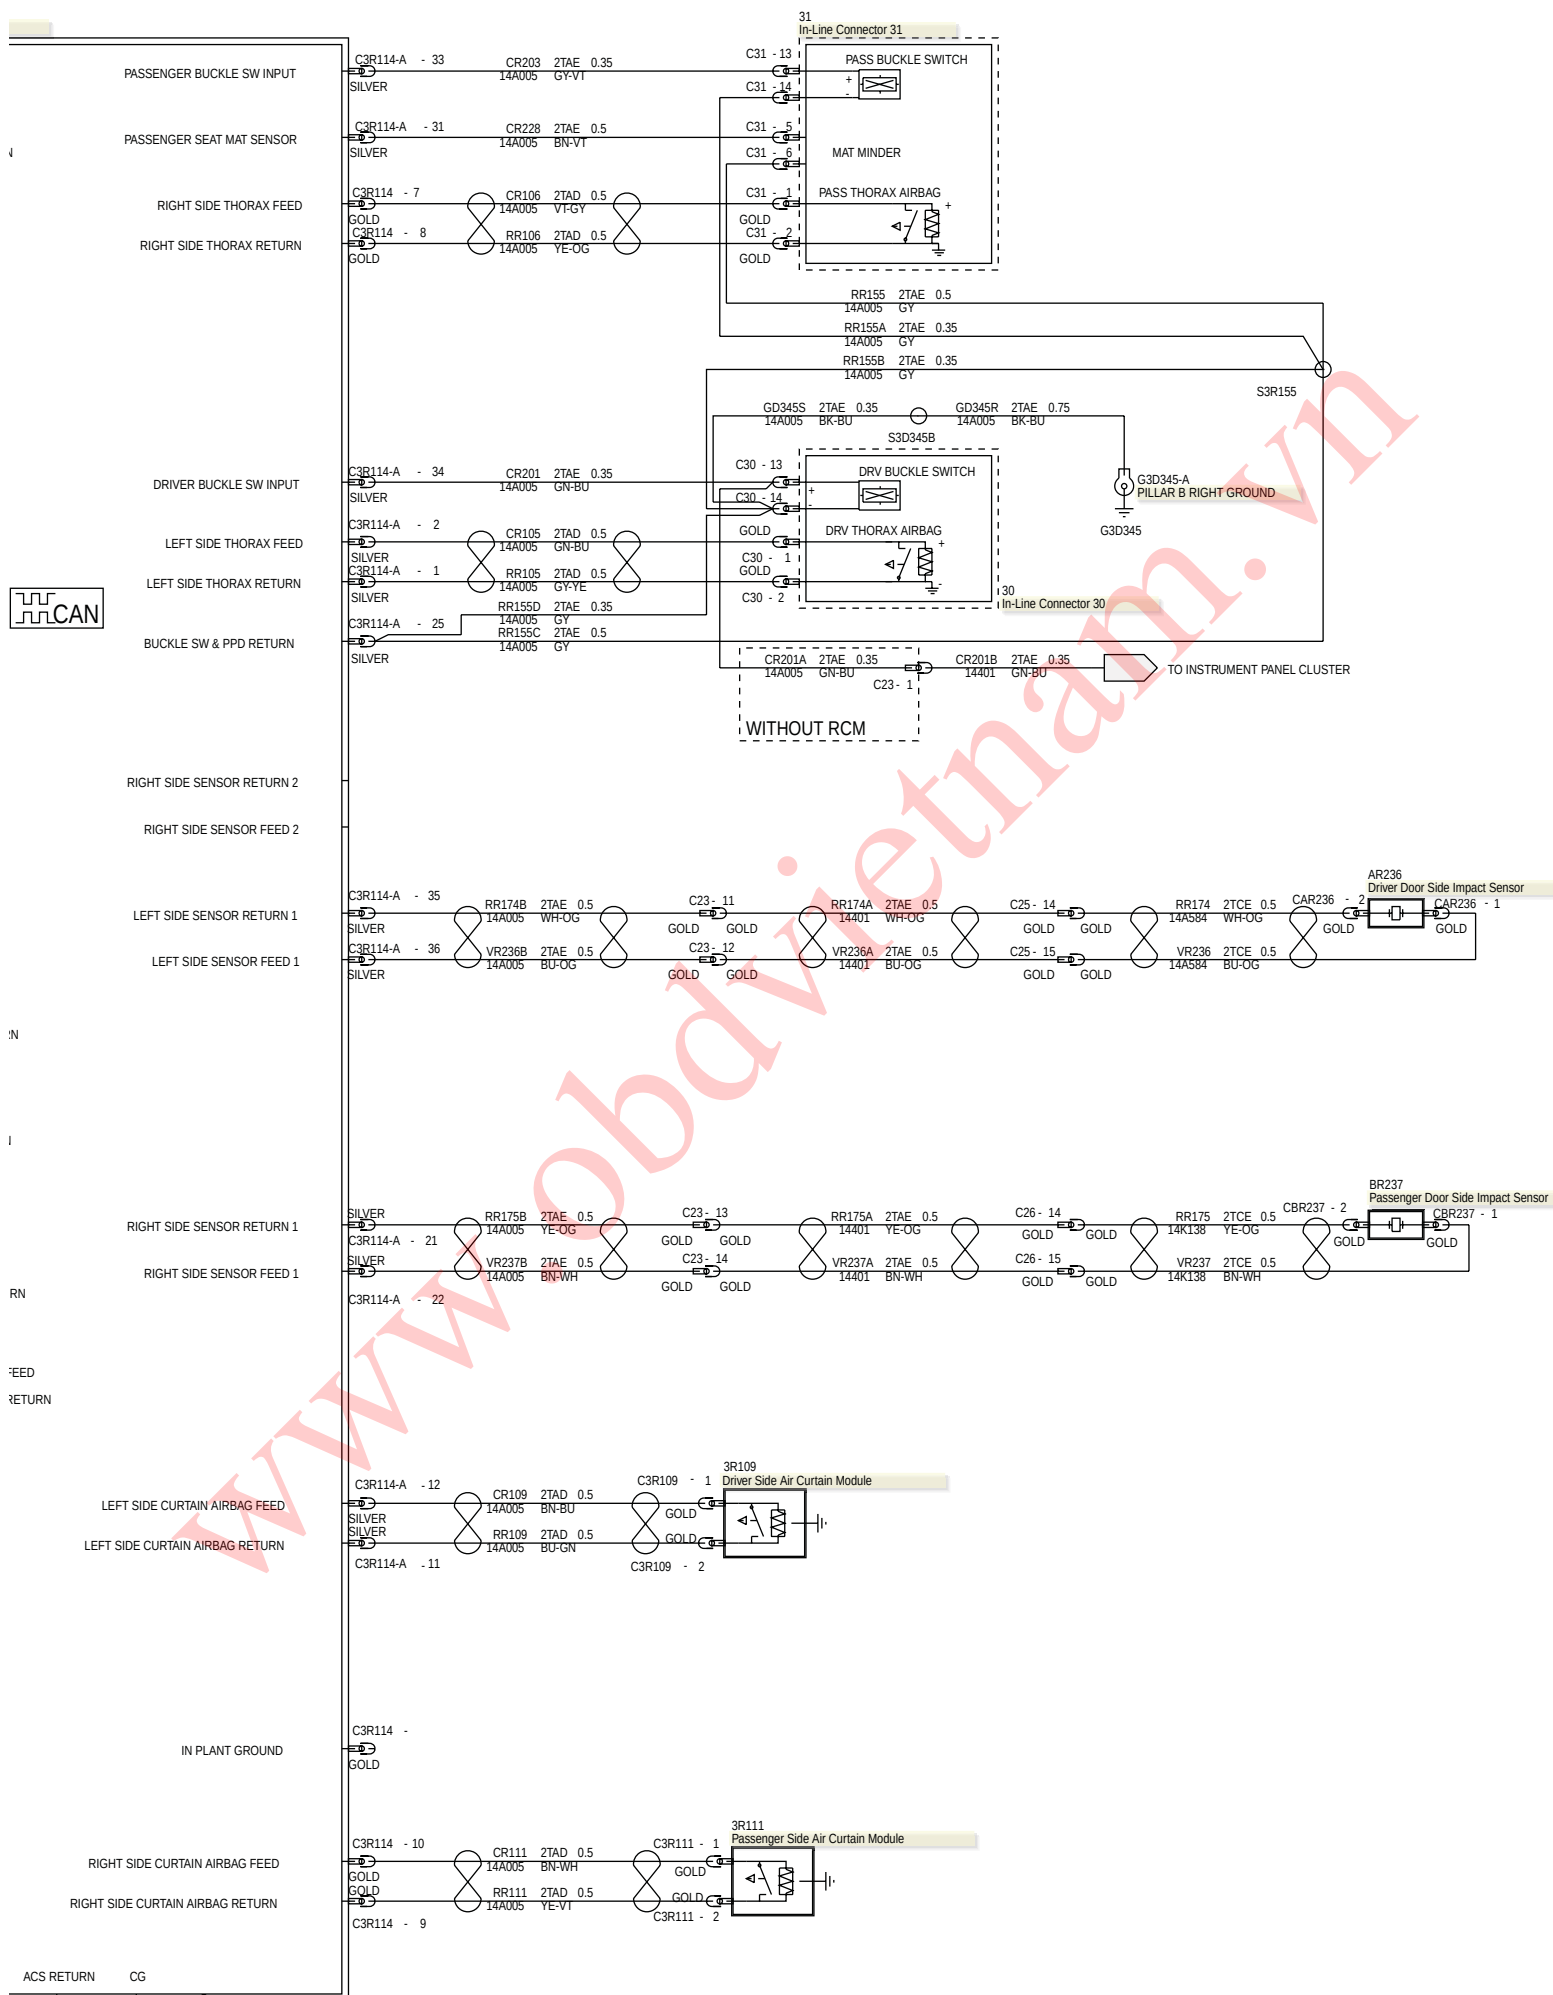

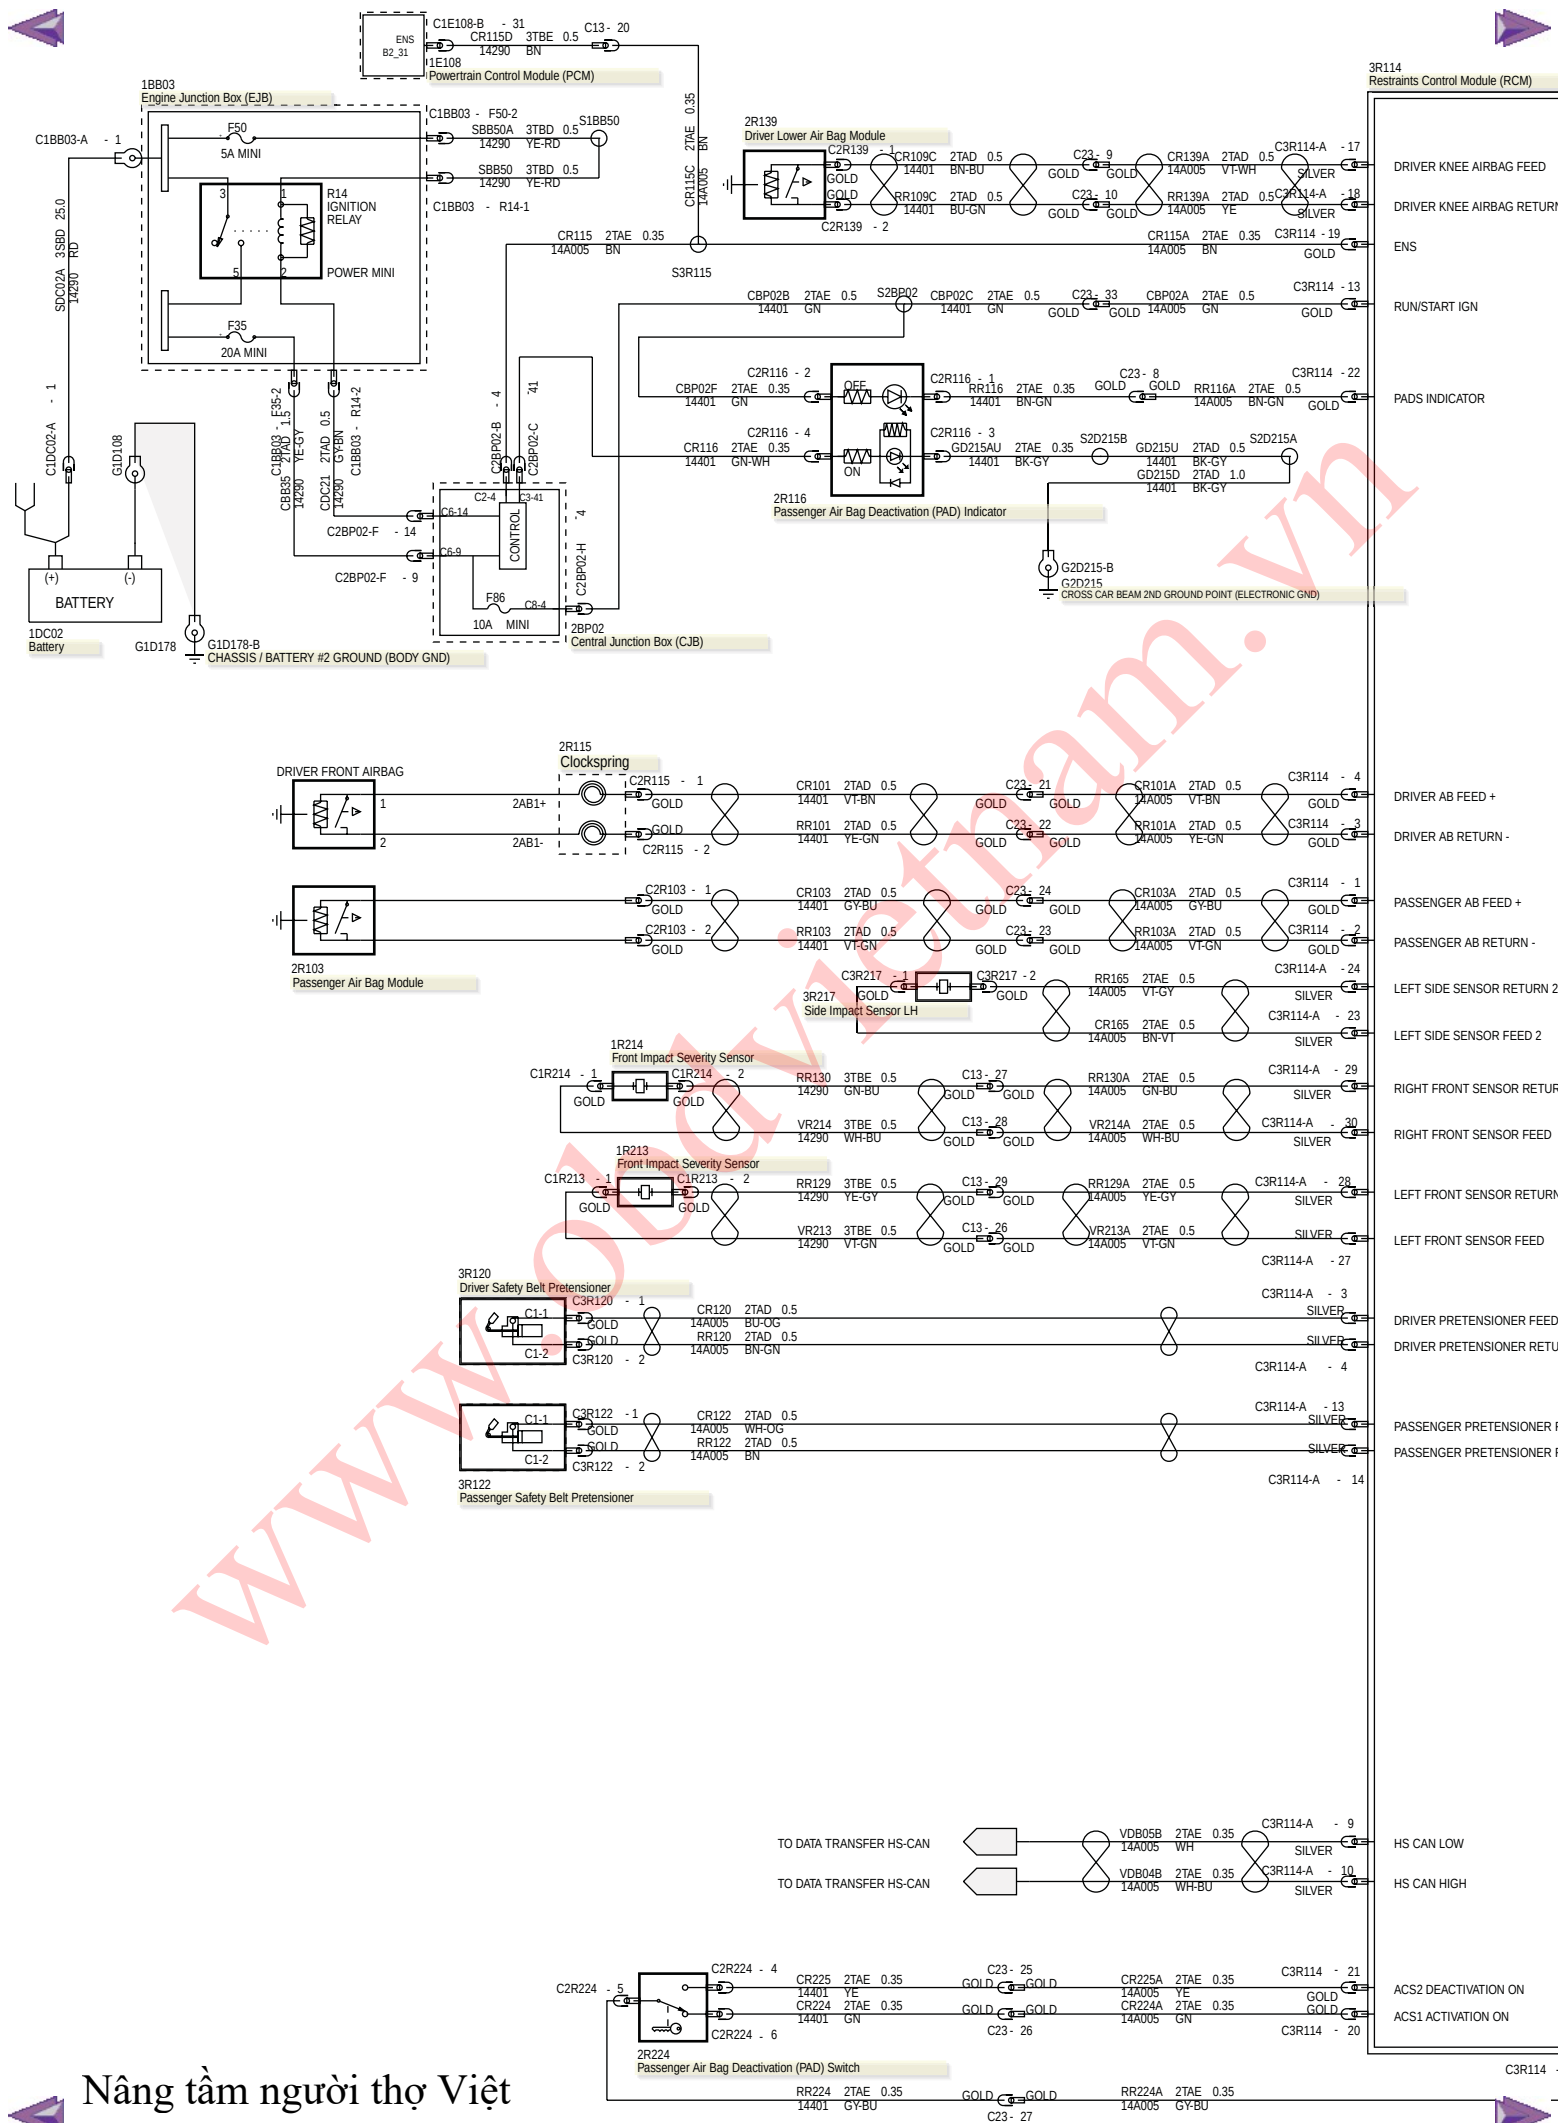

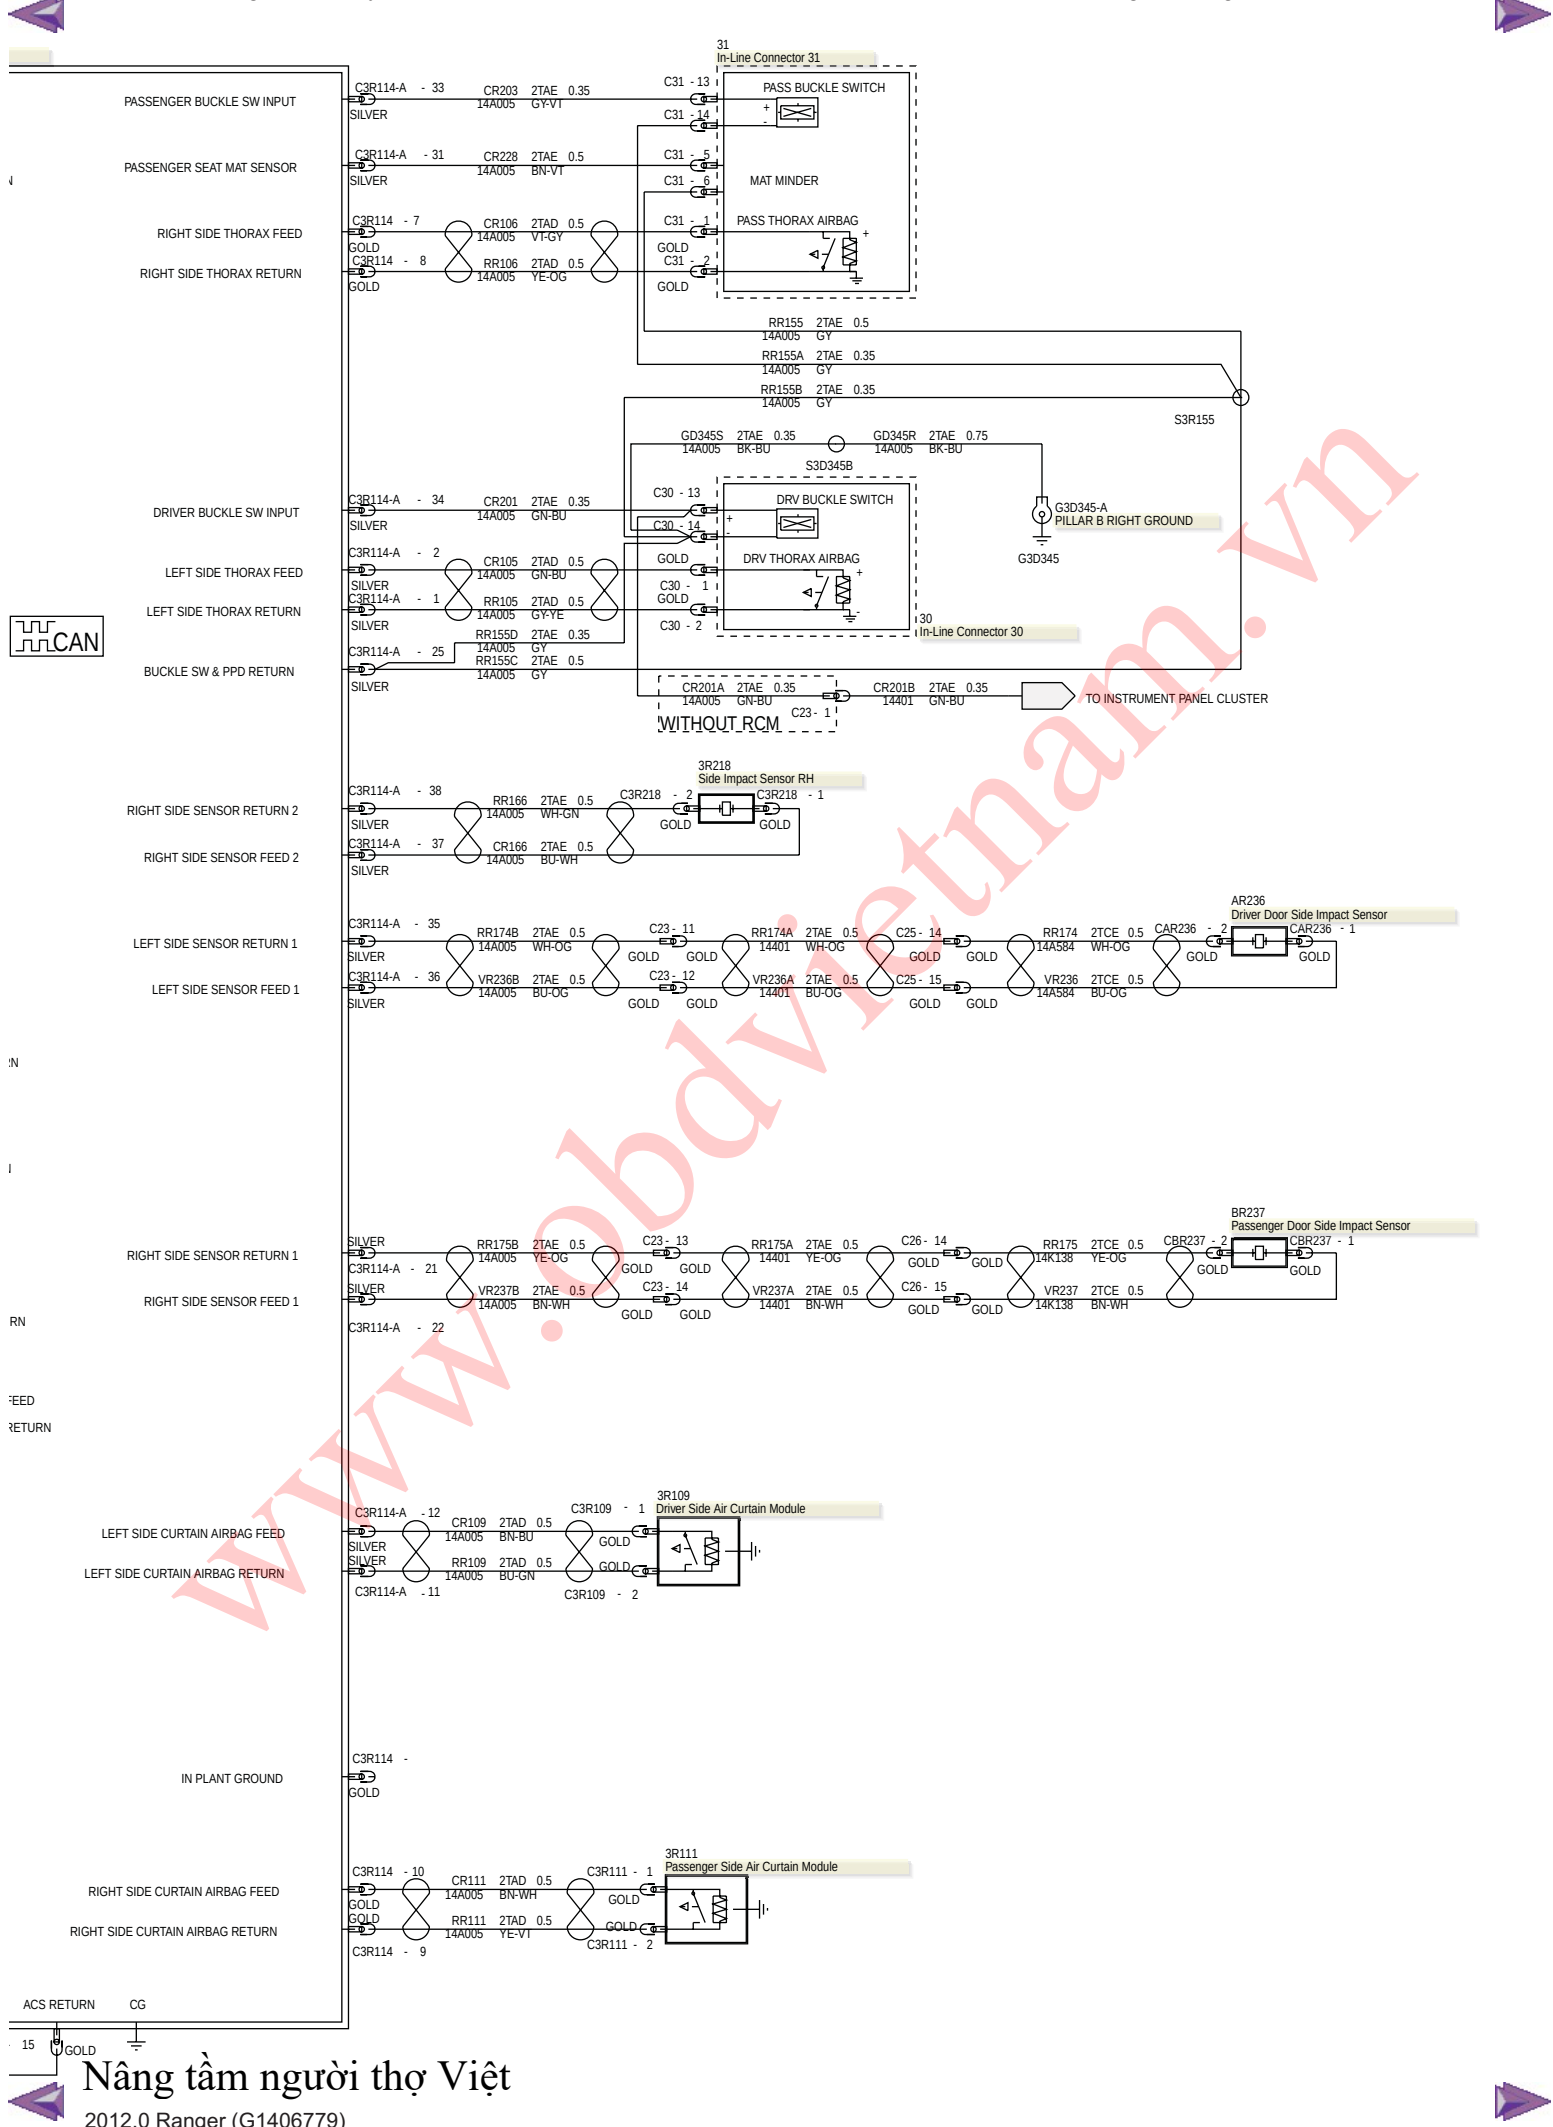




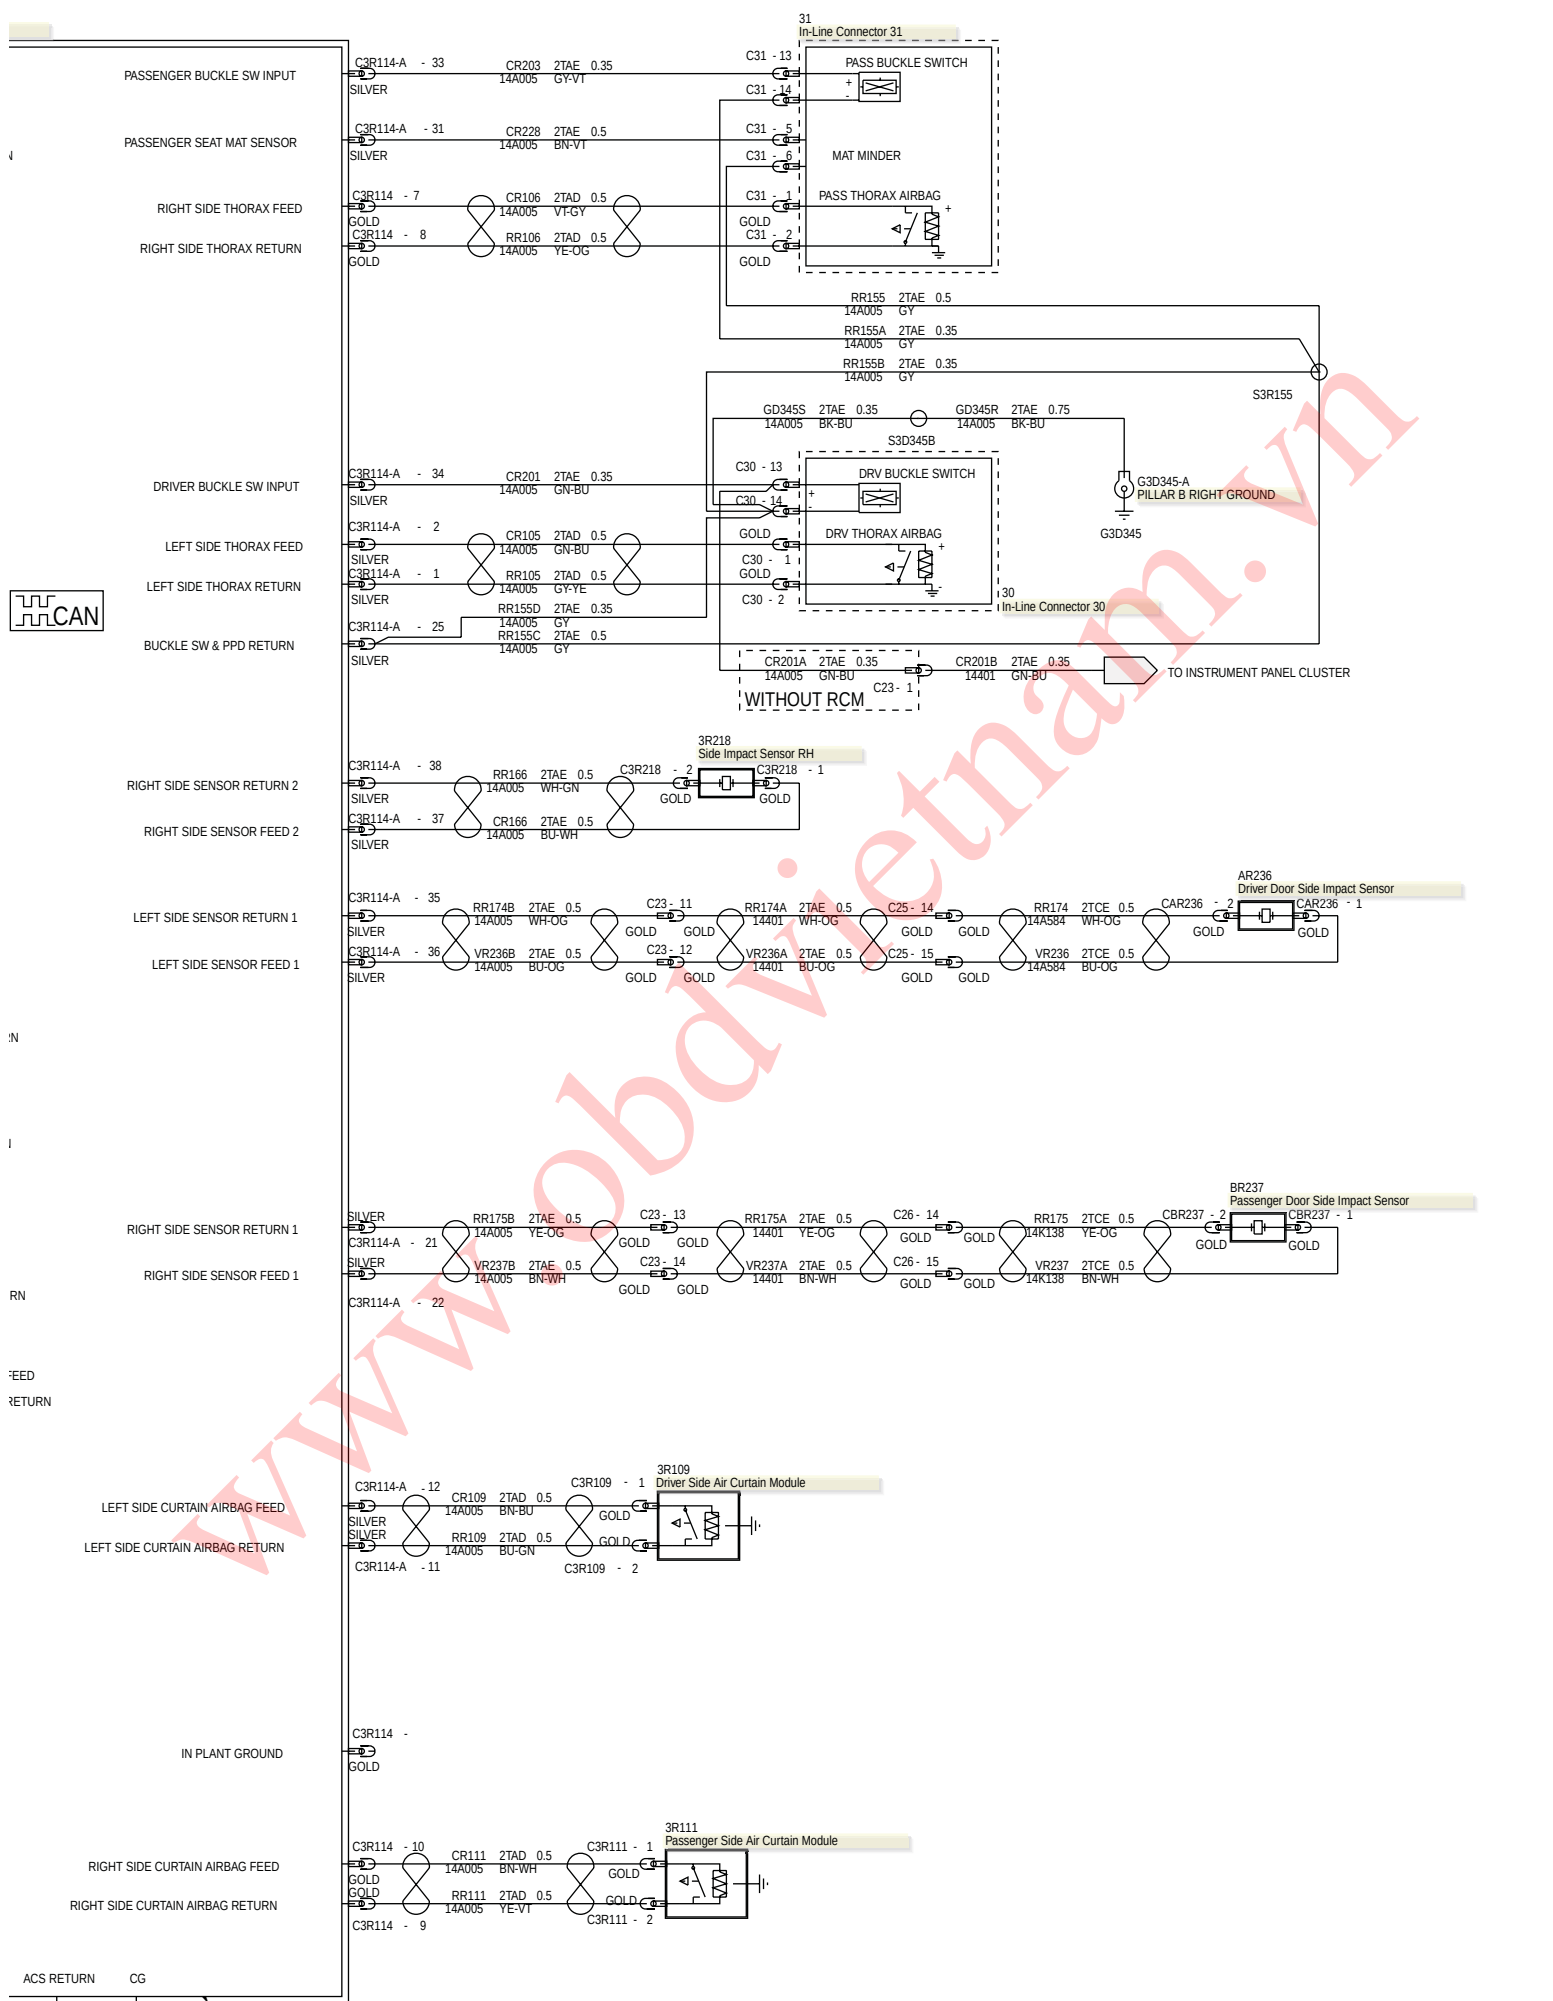




501-20B-12 Air Bags and Safety Belt Pretensioners—Super Cab, LHD 4WD/LHD RWD, Vehicles With: Passenger Air Bag Deactivation Switch

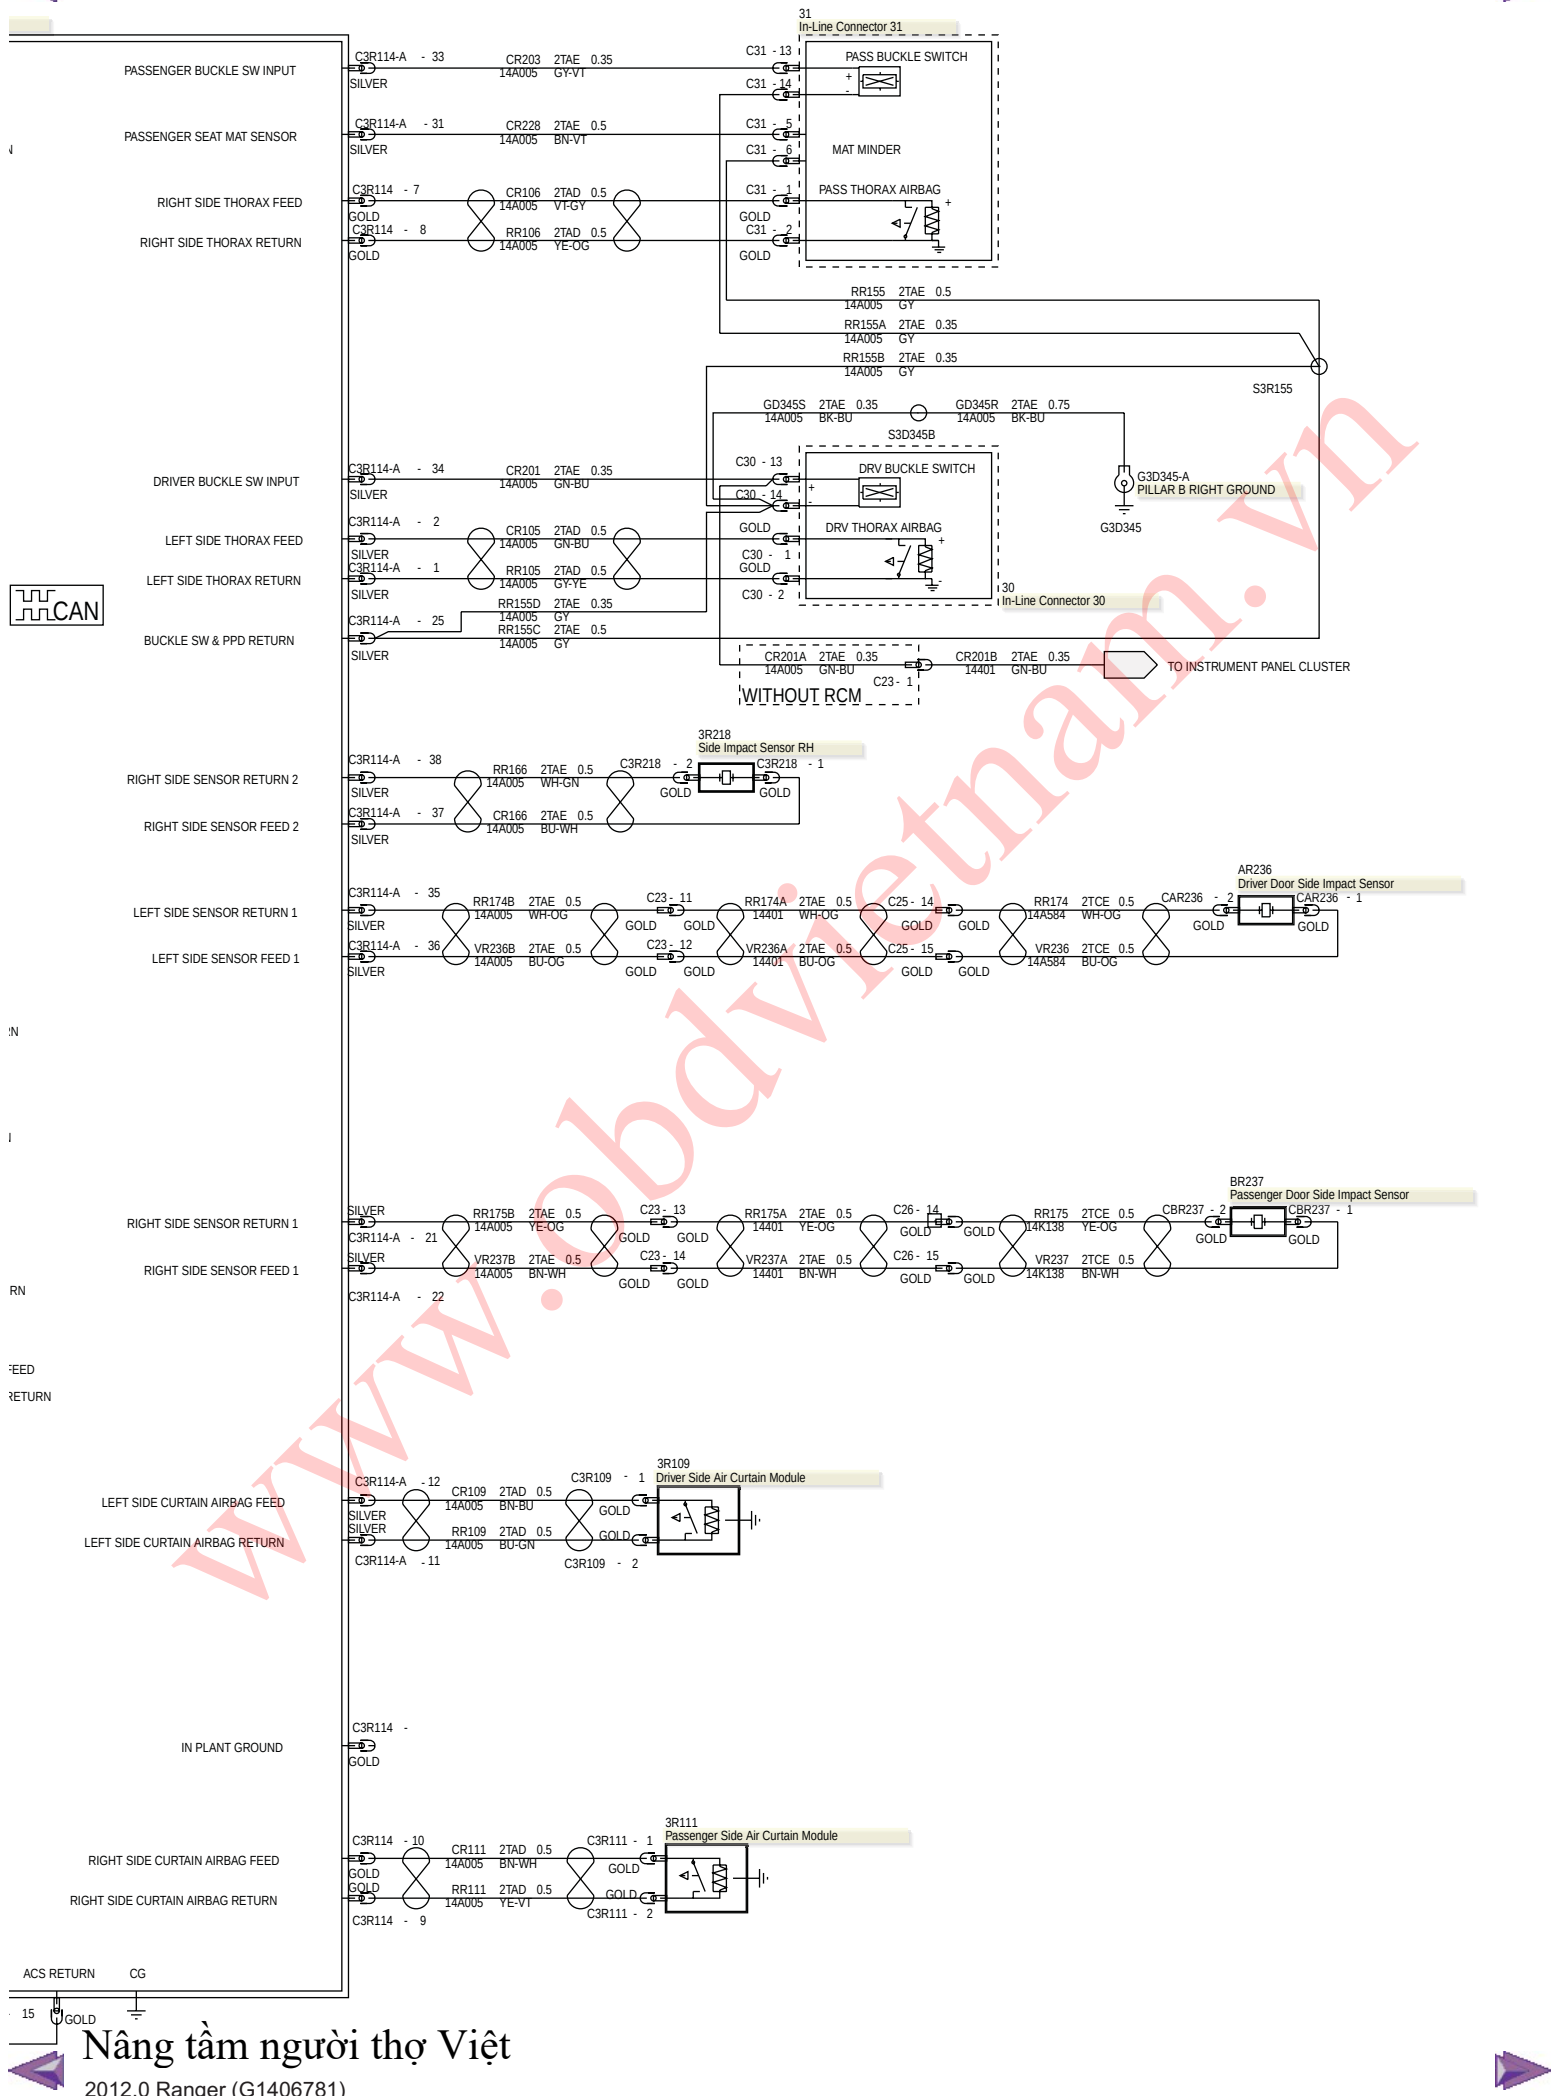


501-20B-13 Air Bags and Safety Belt Pretensioners—Super Cab, LHD 4WD/LHD RWD, Vehicles Without: Passenger Air Bag Deactivation Switch





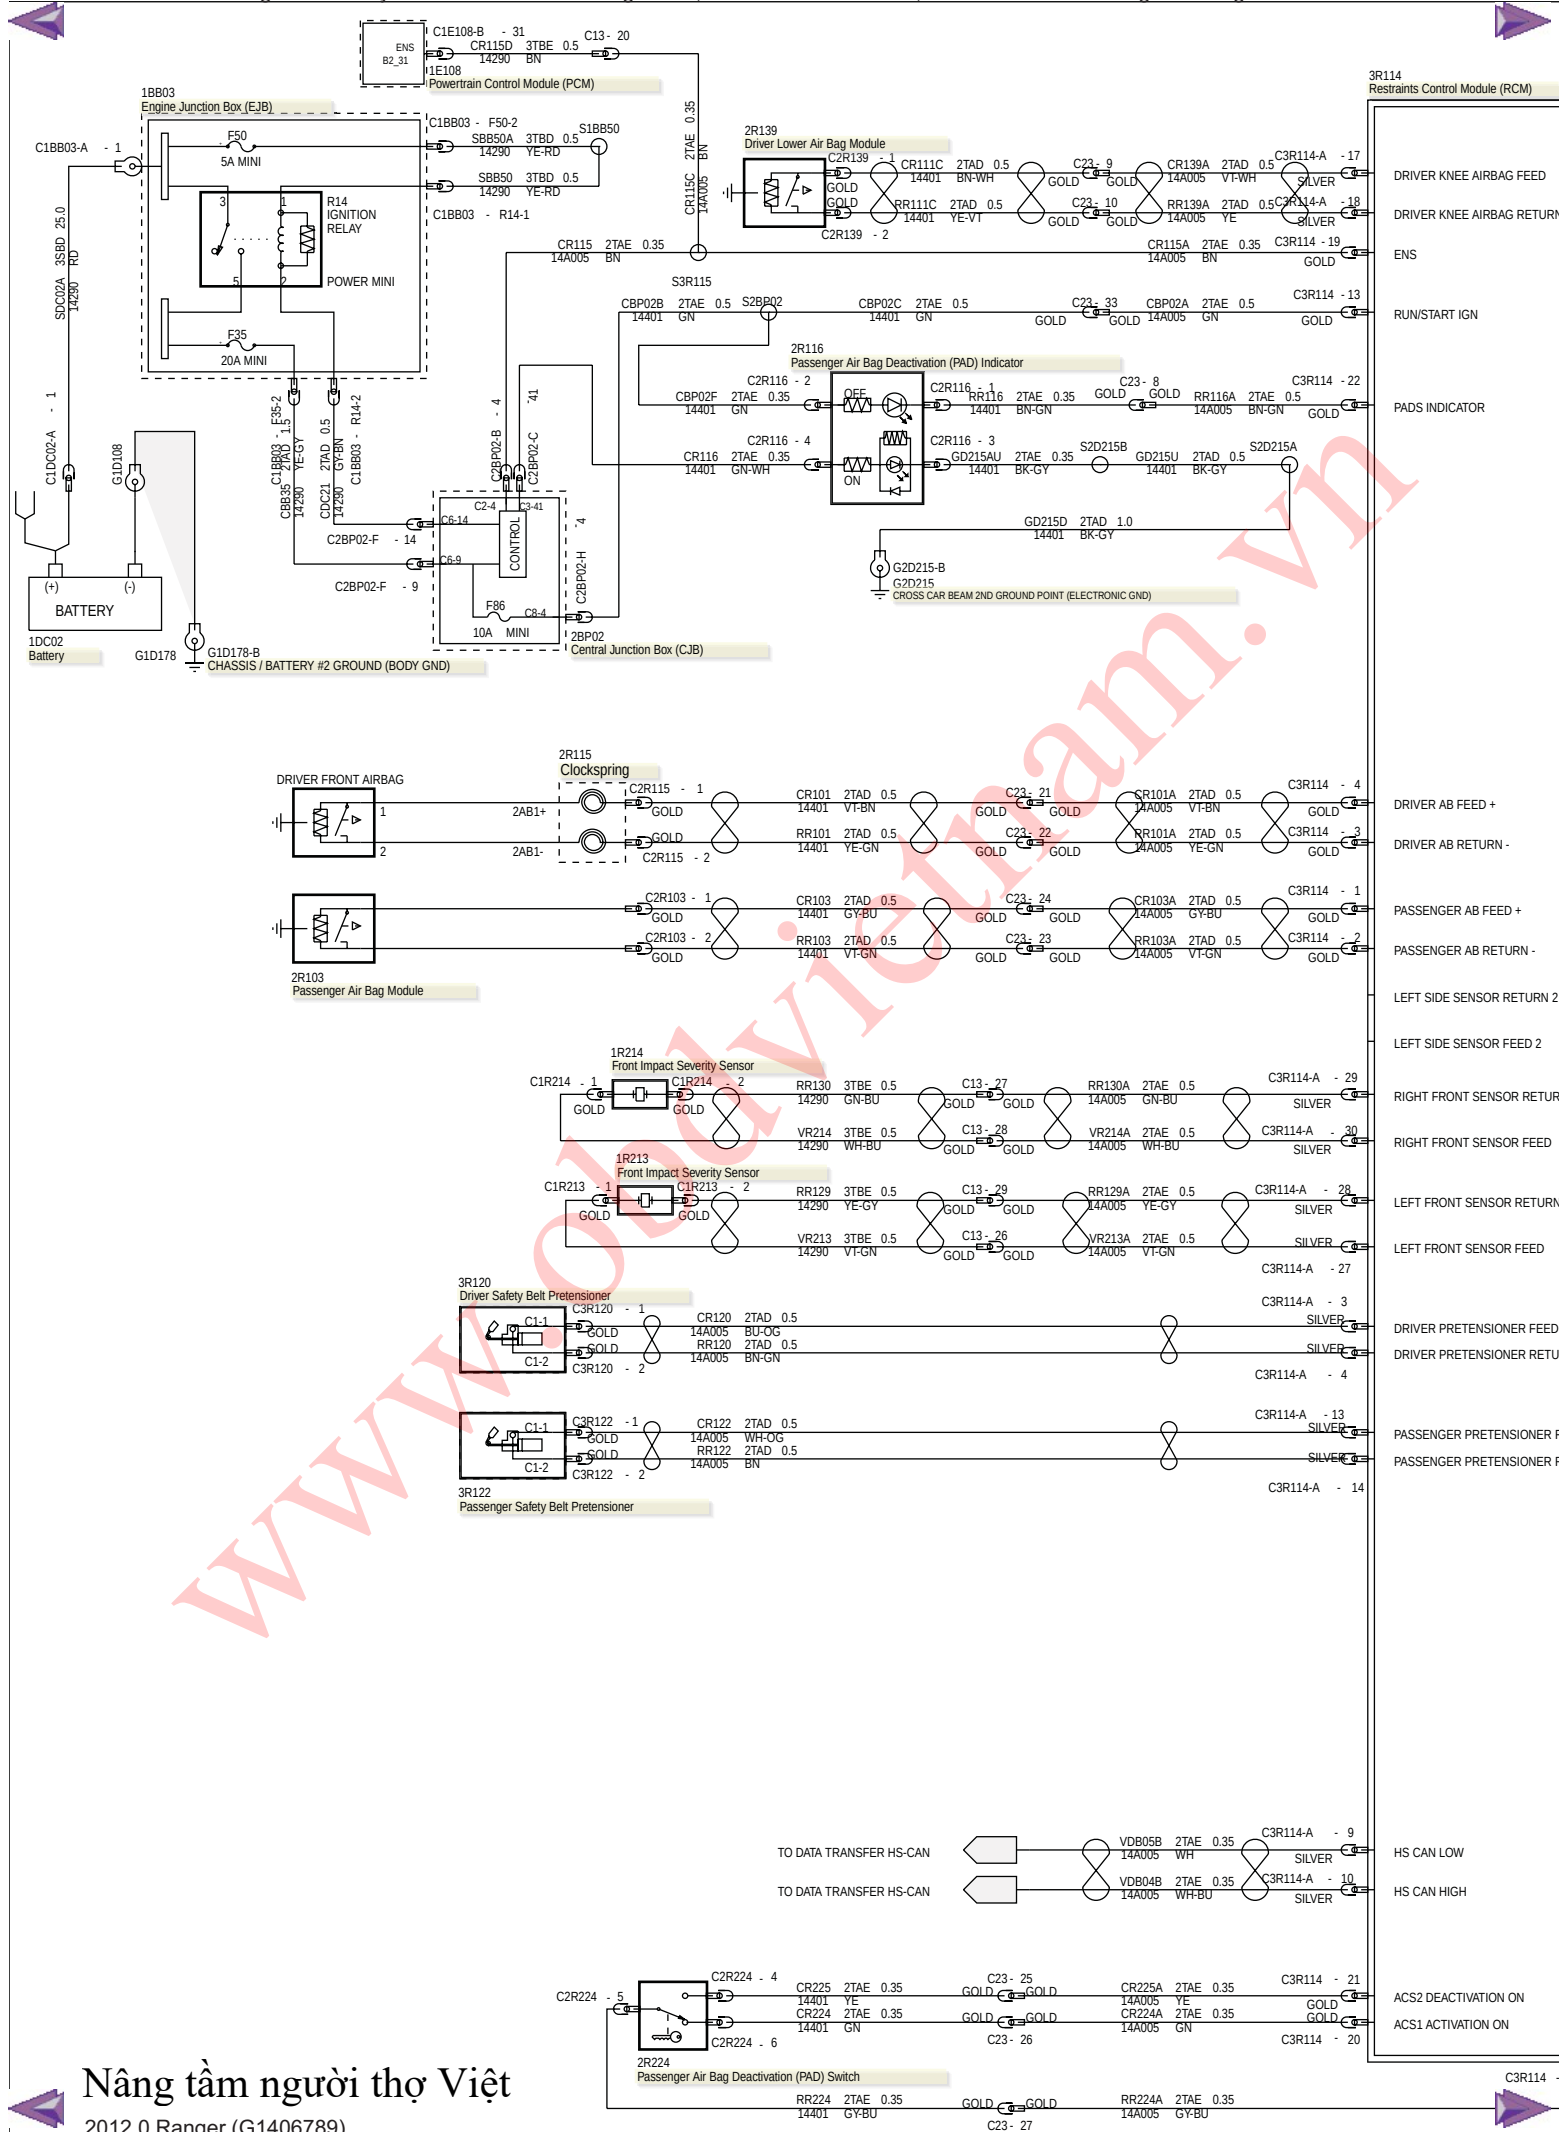


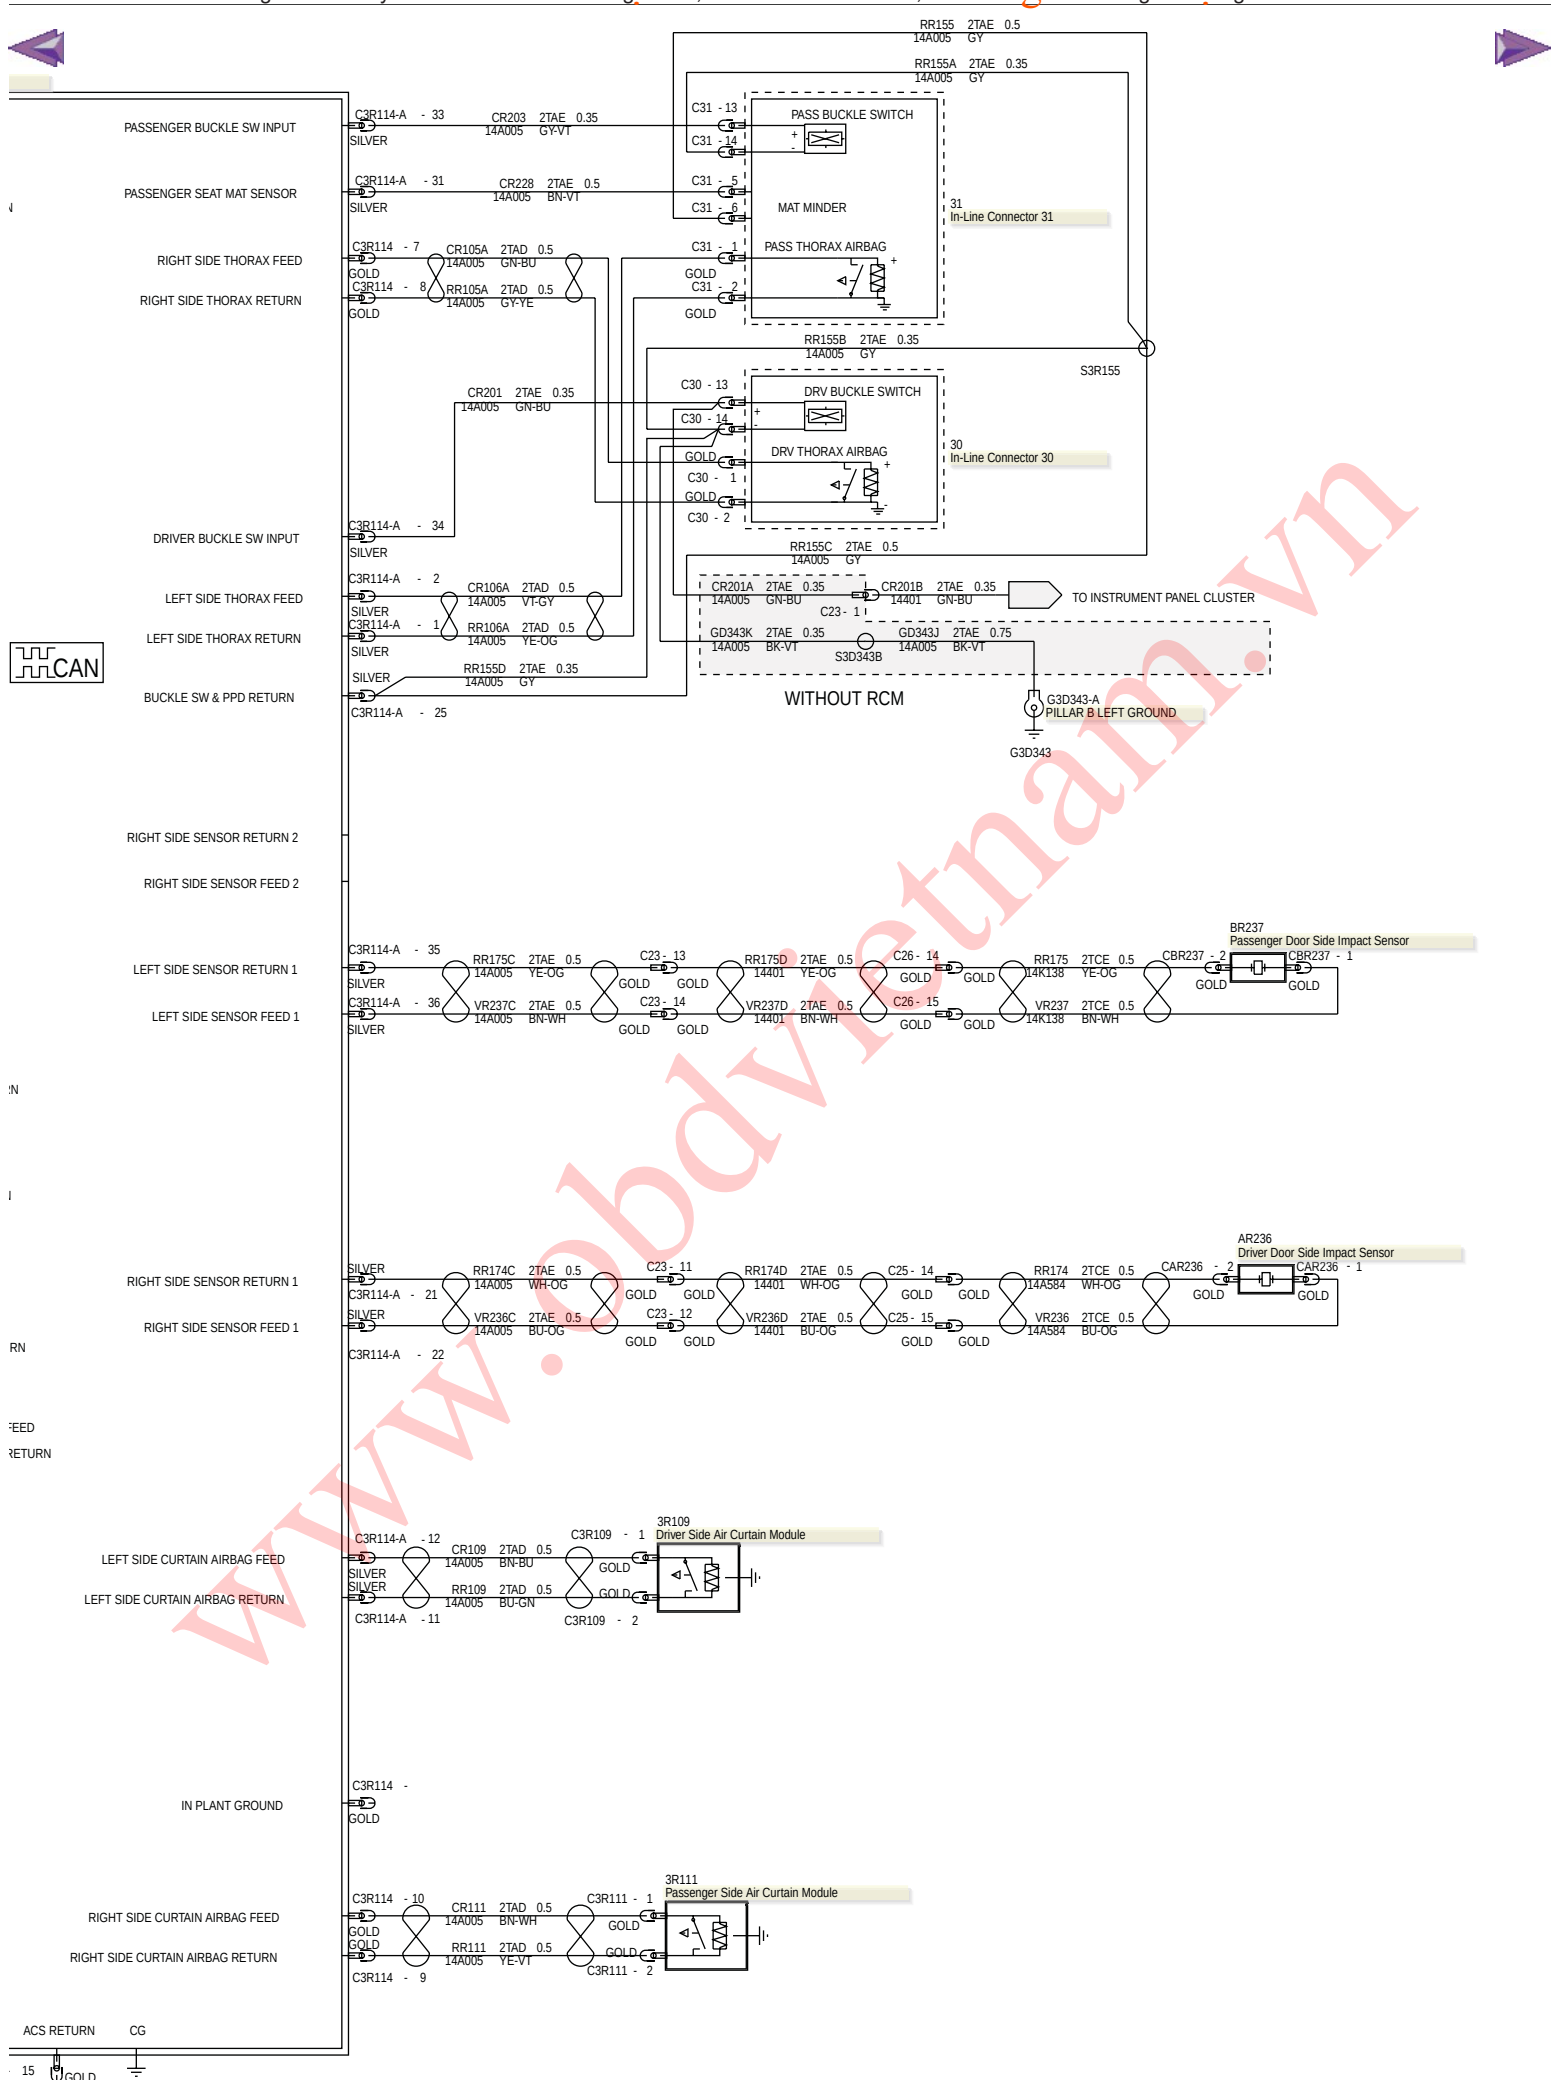



501-20B-17 Air Bags and Safety Belt Pretensioners—Single Cab, RHD 4WD/RHD RWD, Vehicles Without: Passenger Air Bag Deactivation Switch




501-20B-18 Air Bags and Safety Belt Pretensioners—Single Cab, RHD 4WD/RHD RWD, Vehicles Without: Passenger Air Bag Deactivation Switch

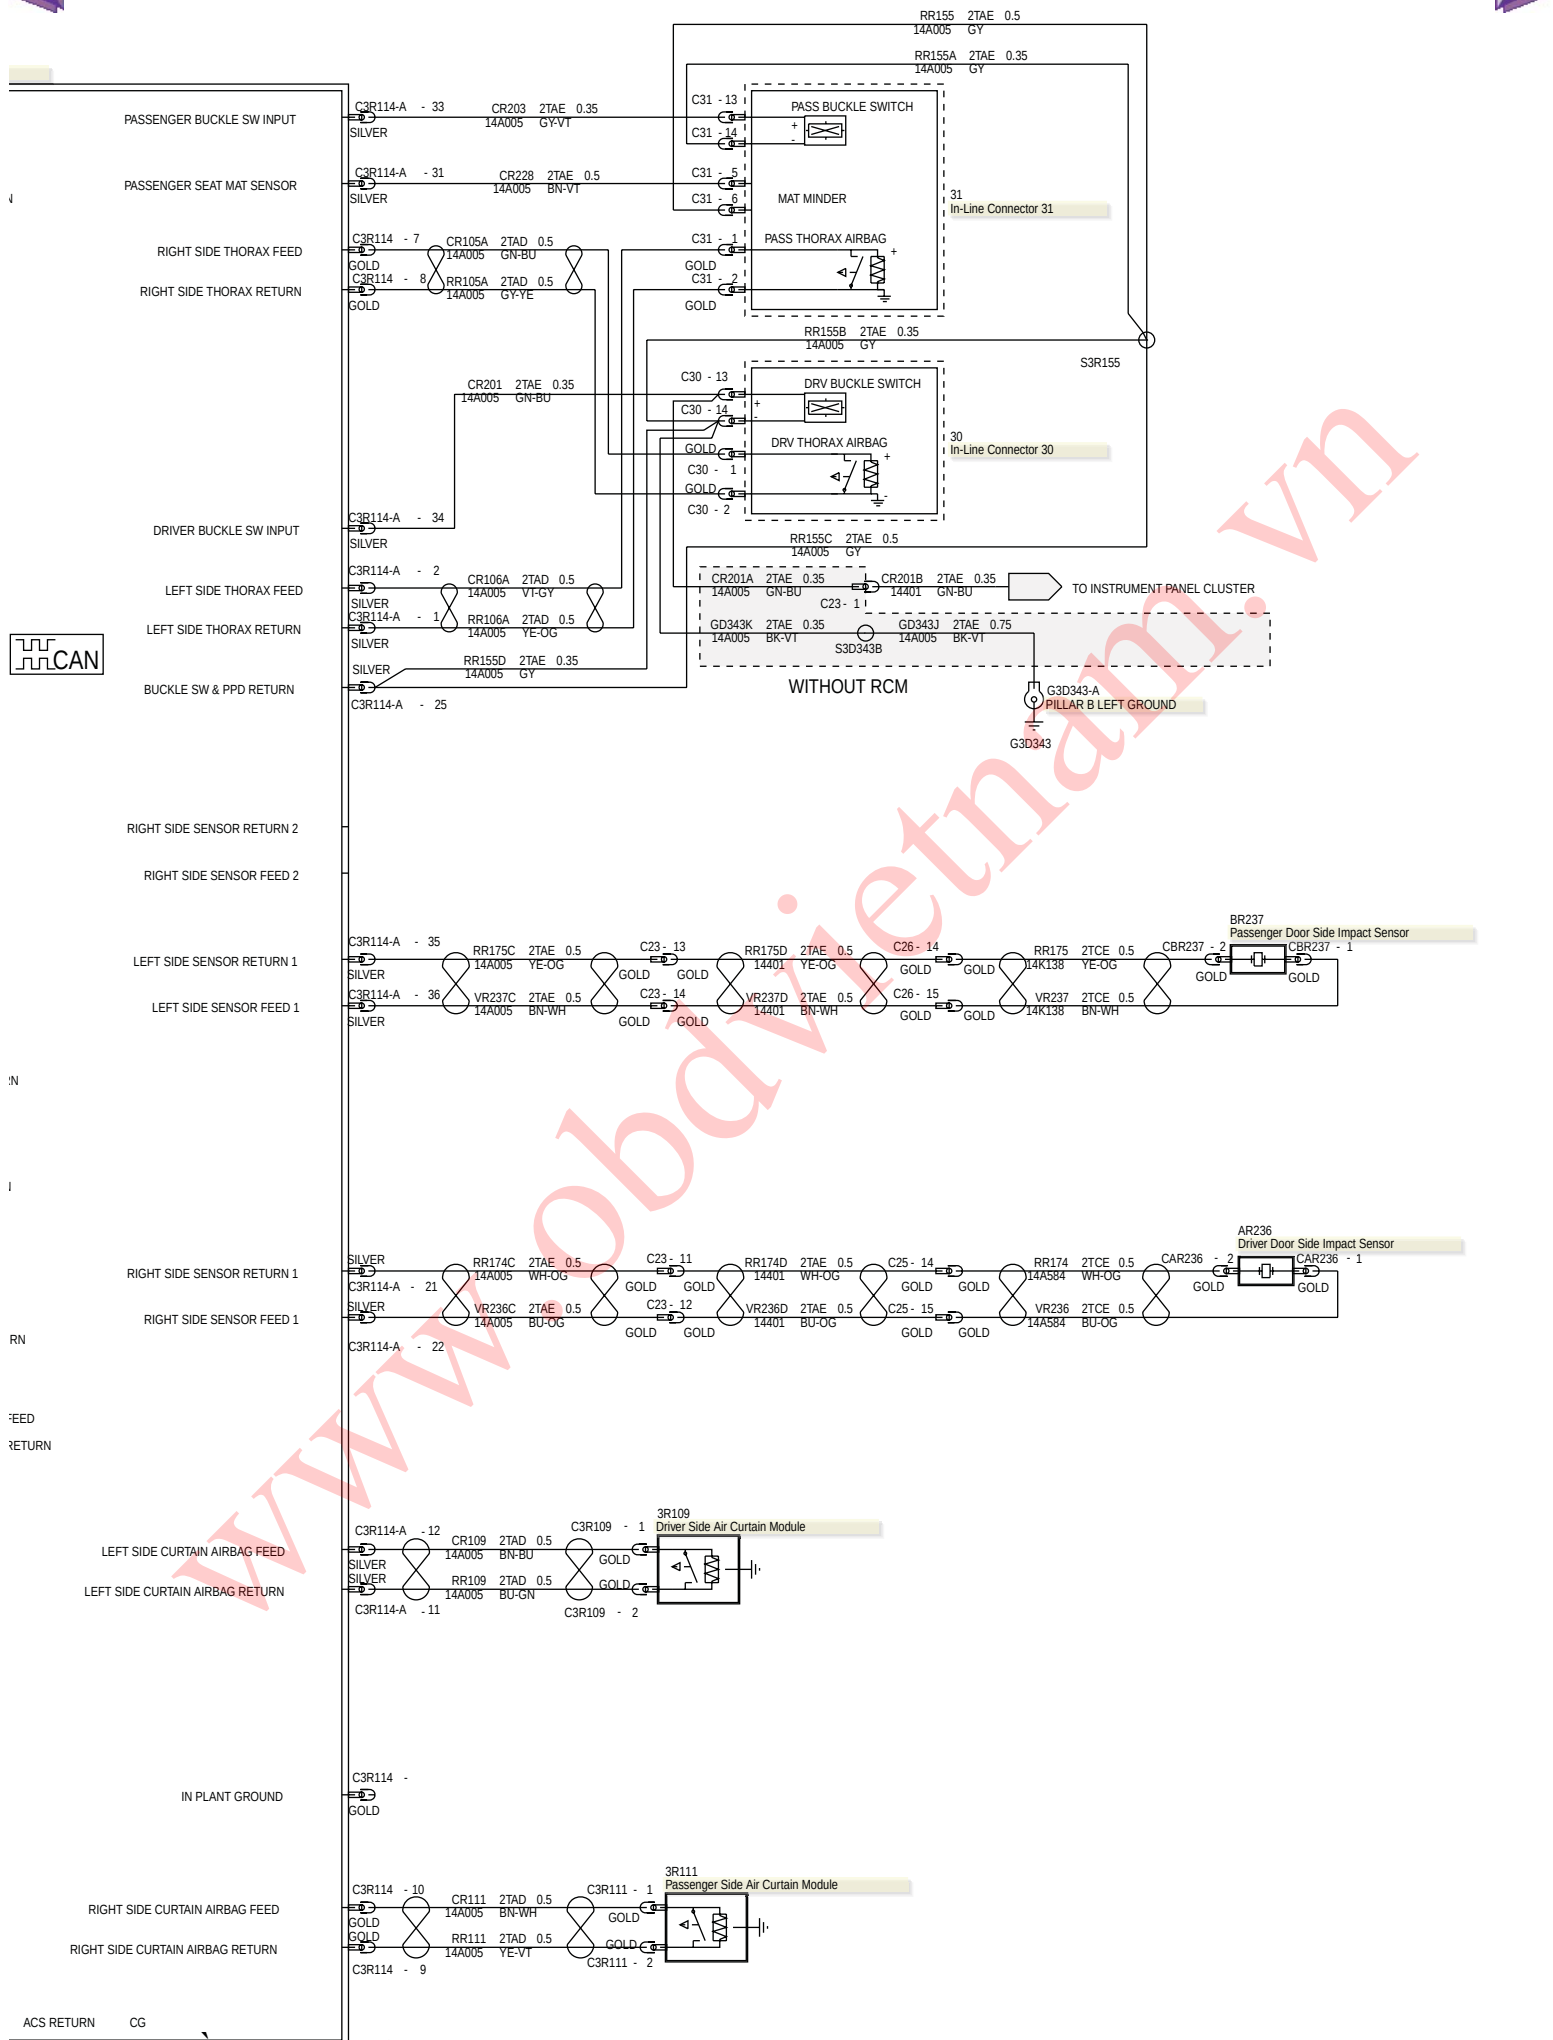

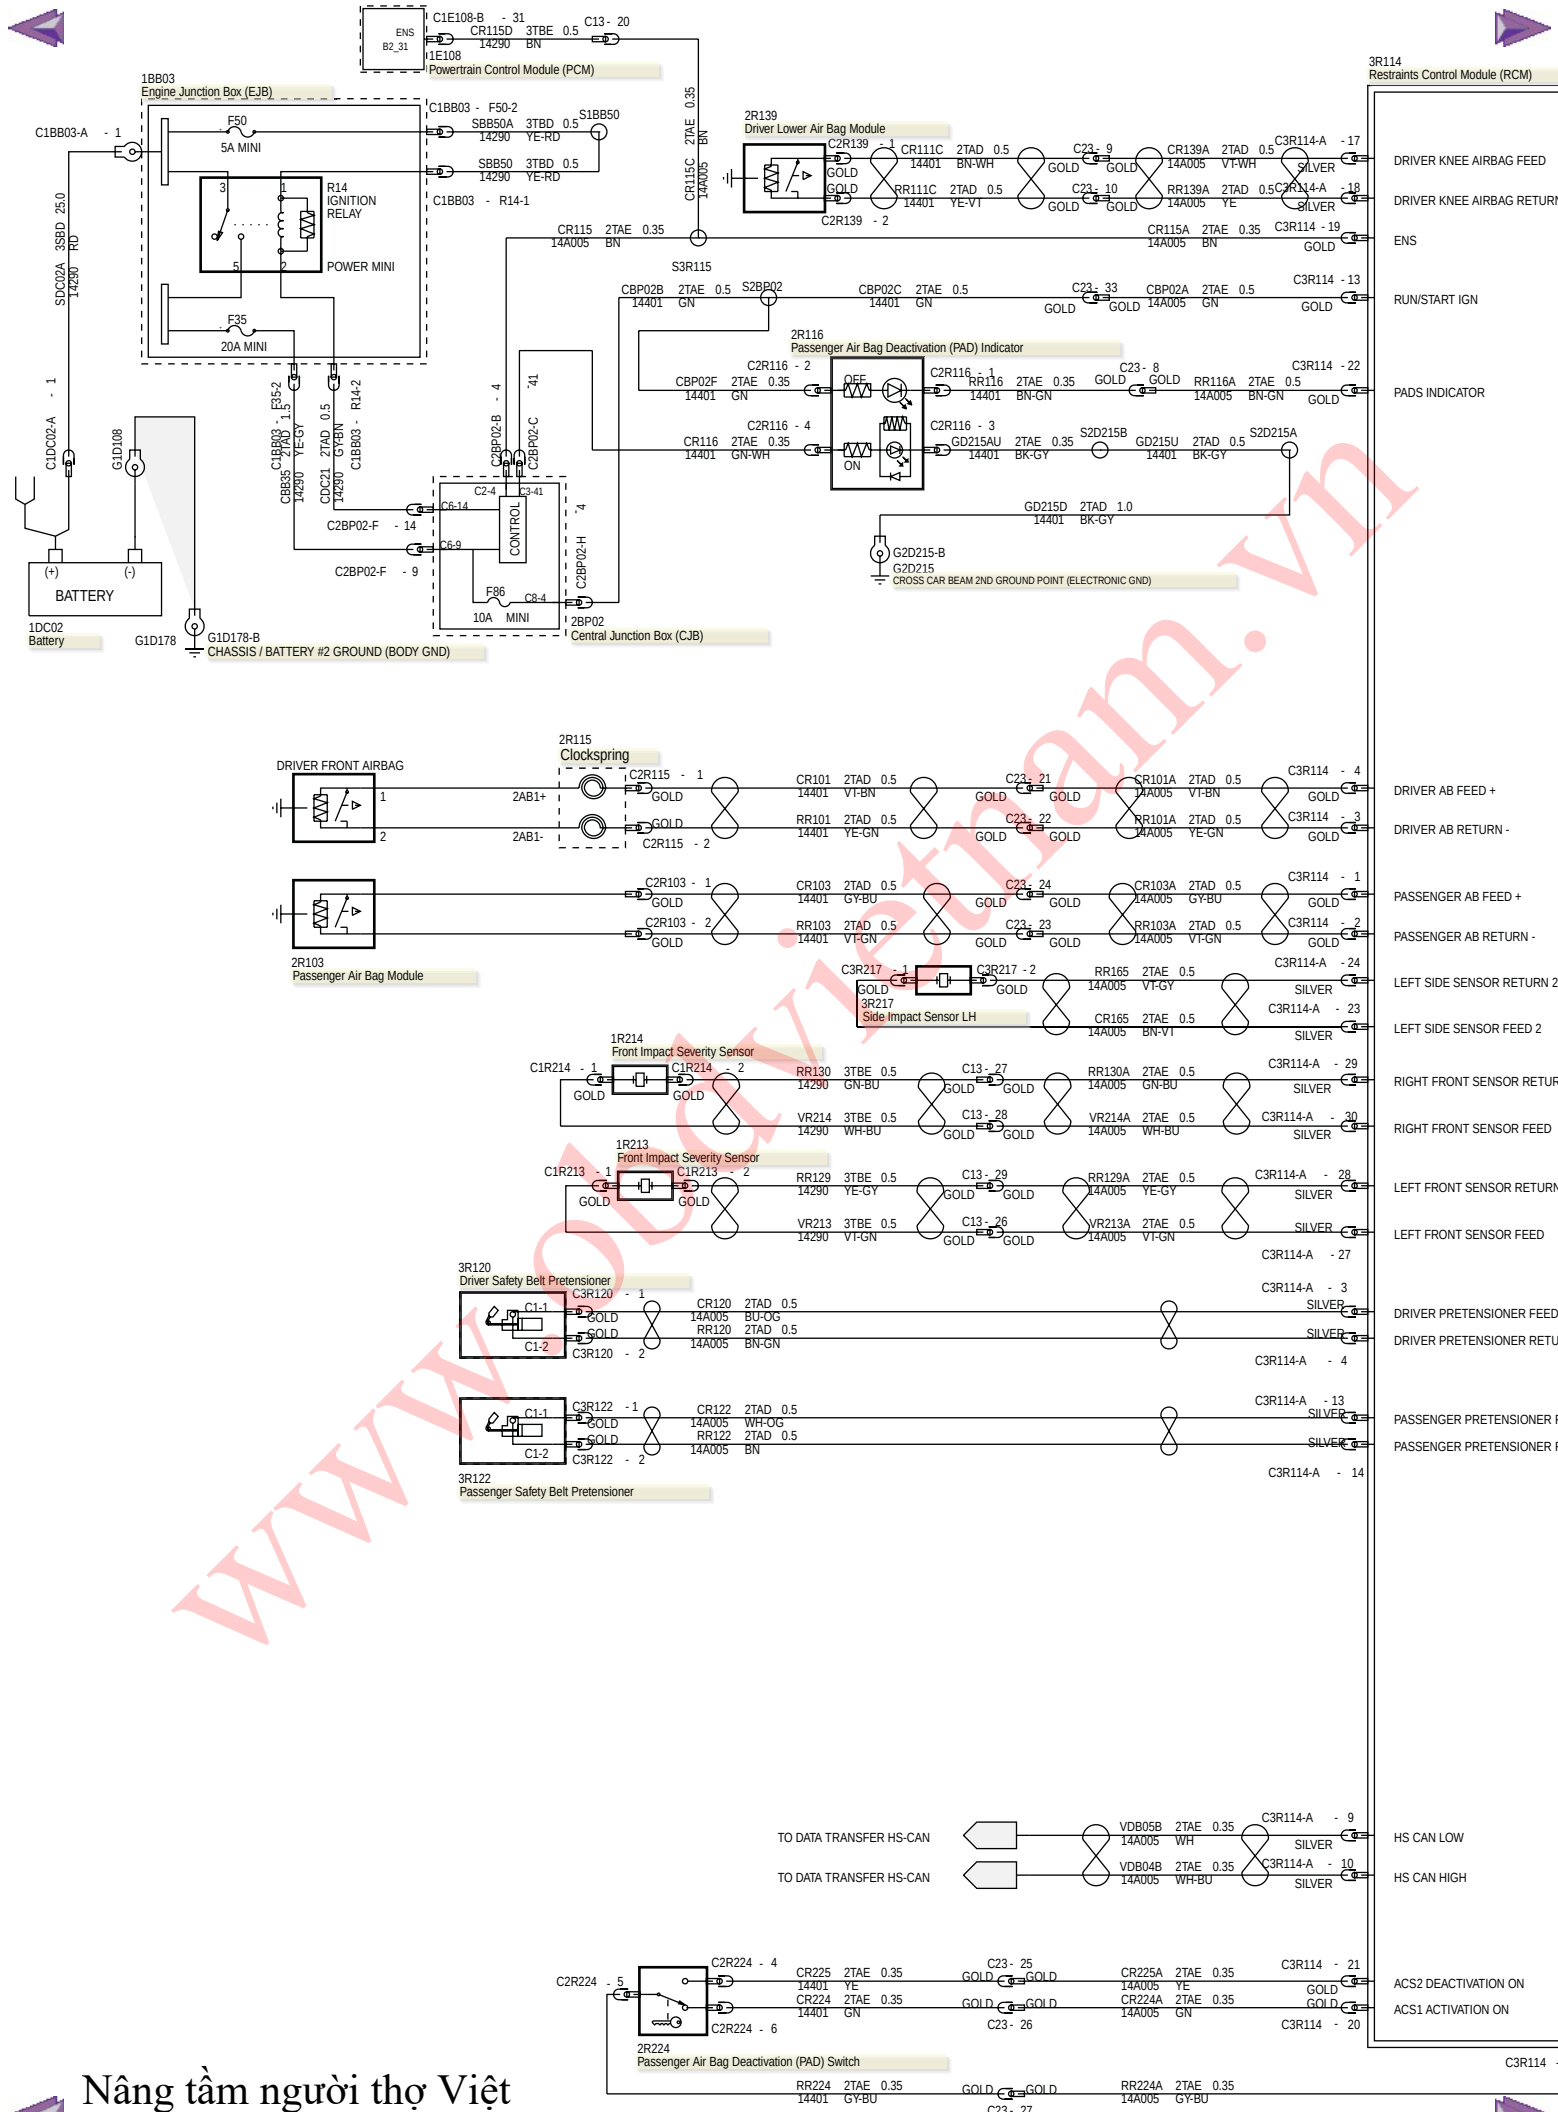


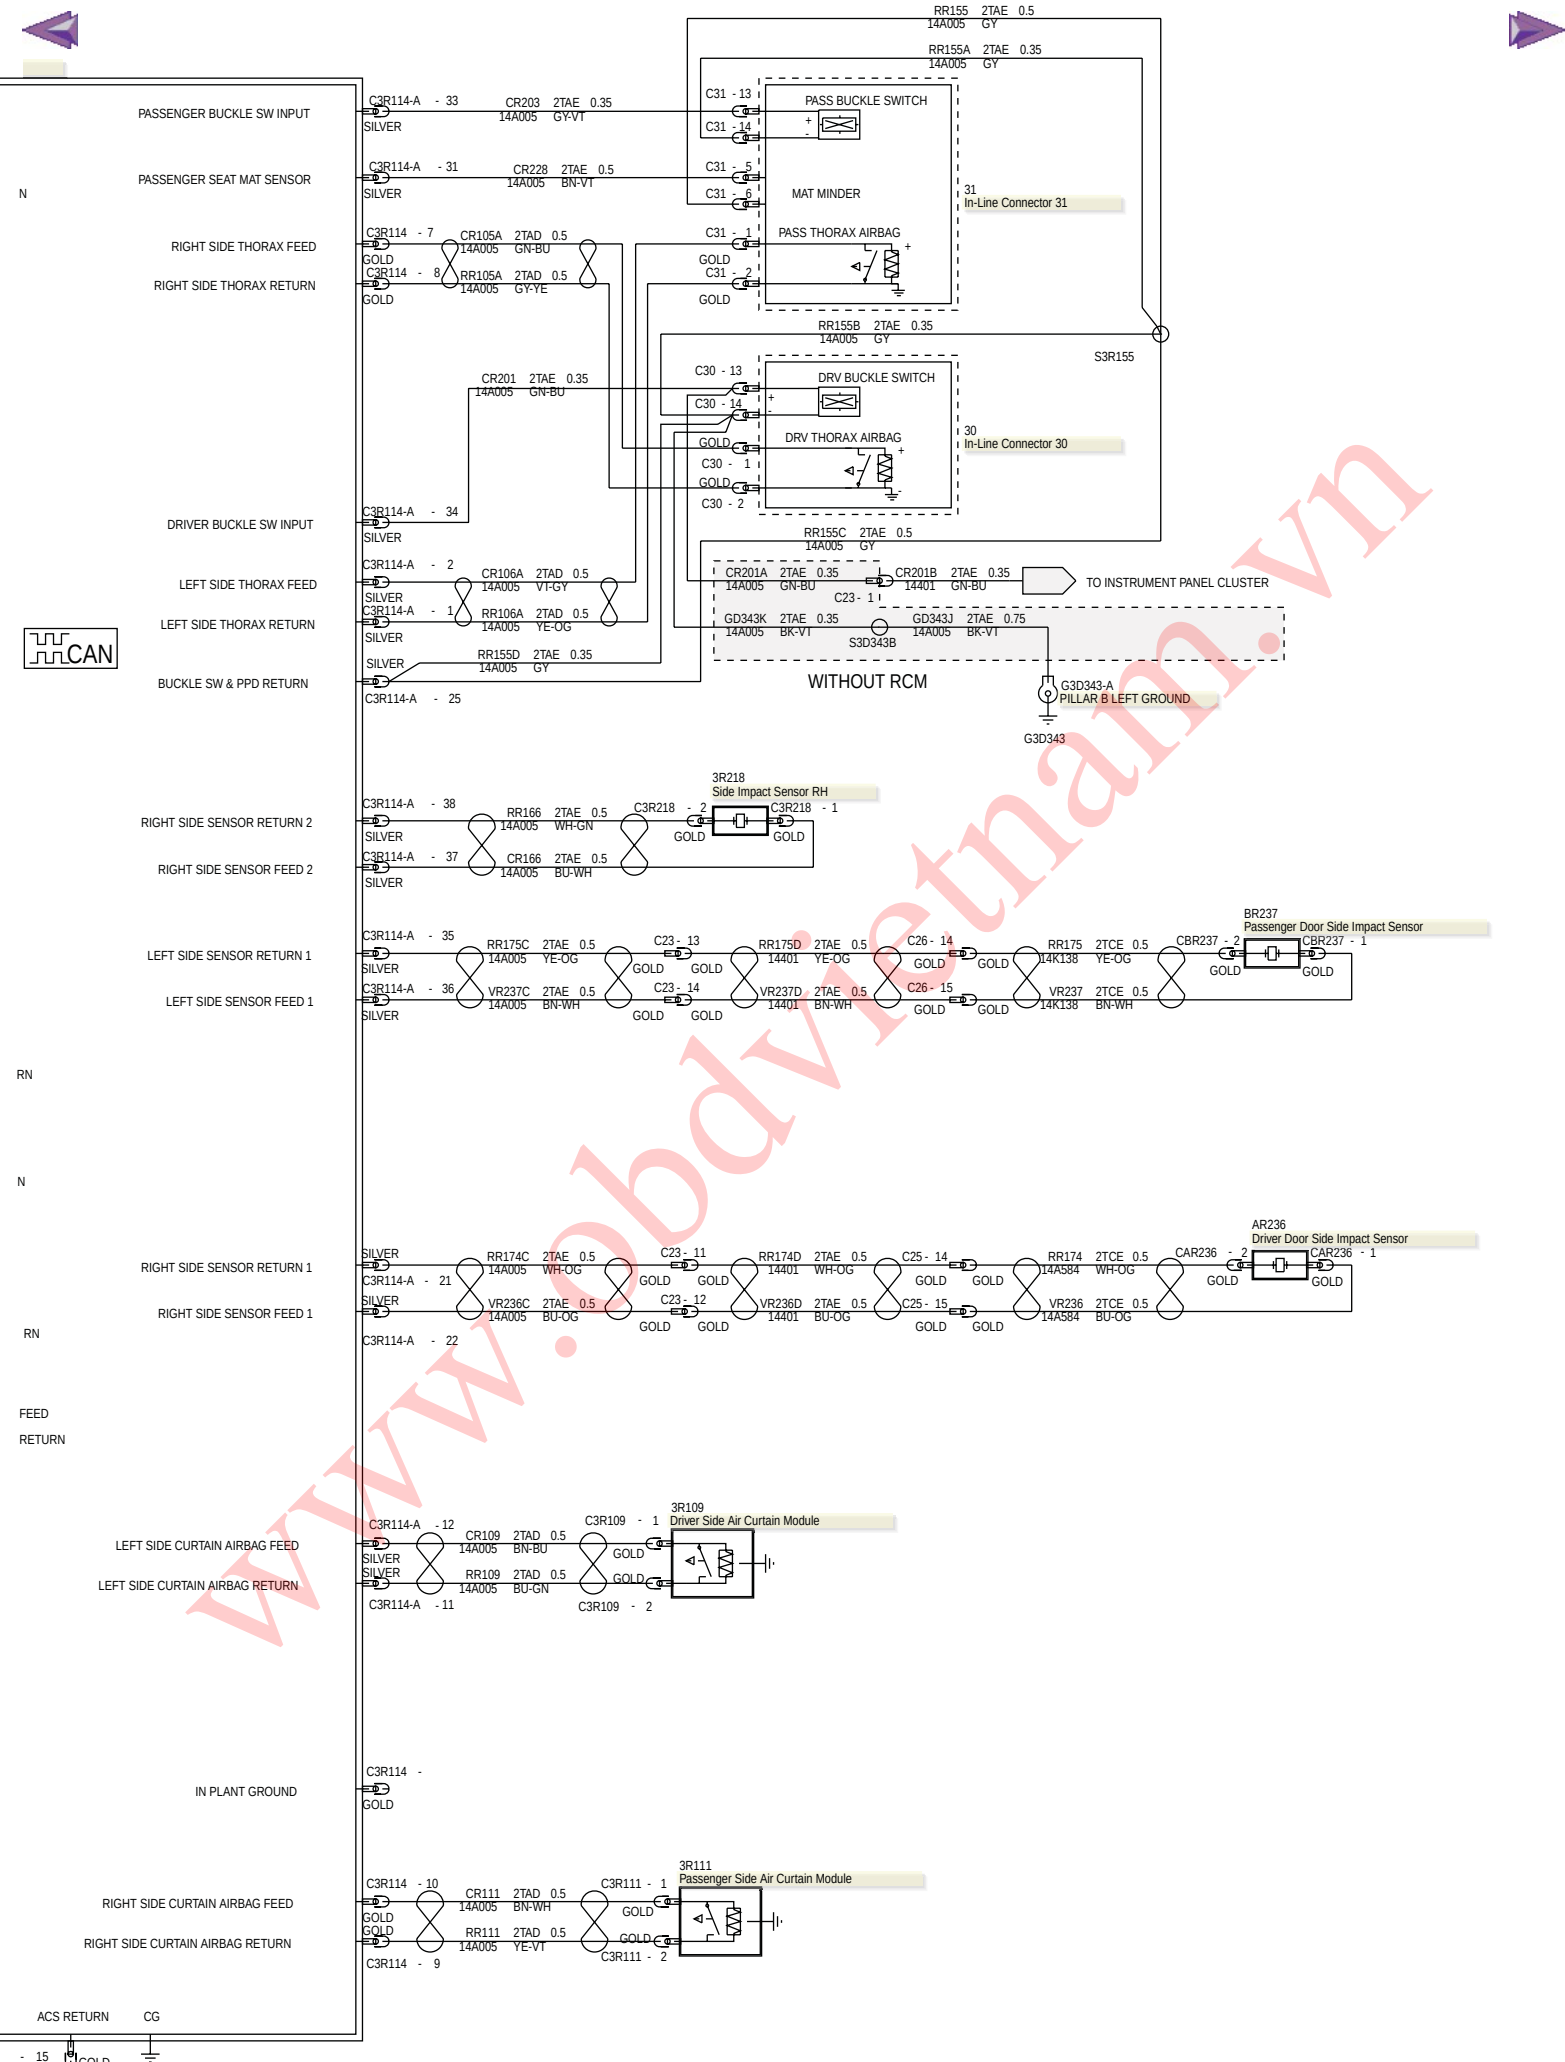



501-20B-21 Air Bags and Safety Belt Pretensioners—Double Cab, RHD 4WD/RHD RWD, Vehicles Without: Passenger Air Bag Deactivation Switch

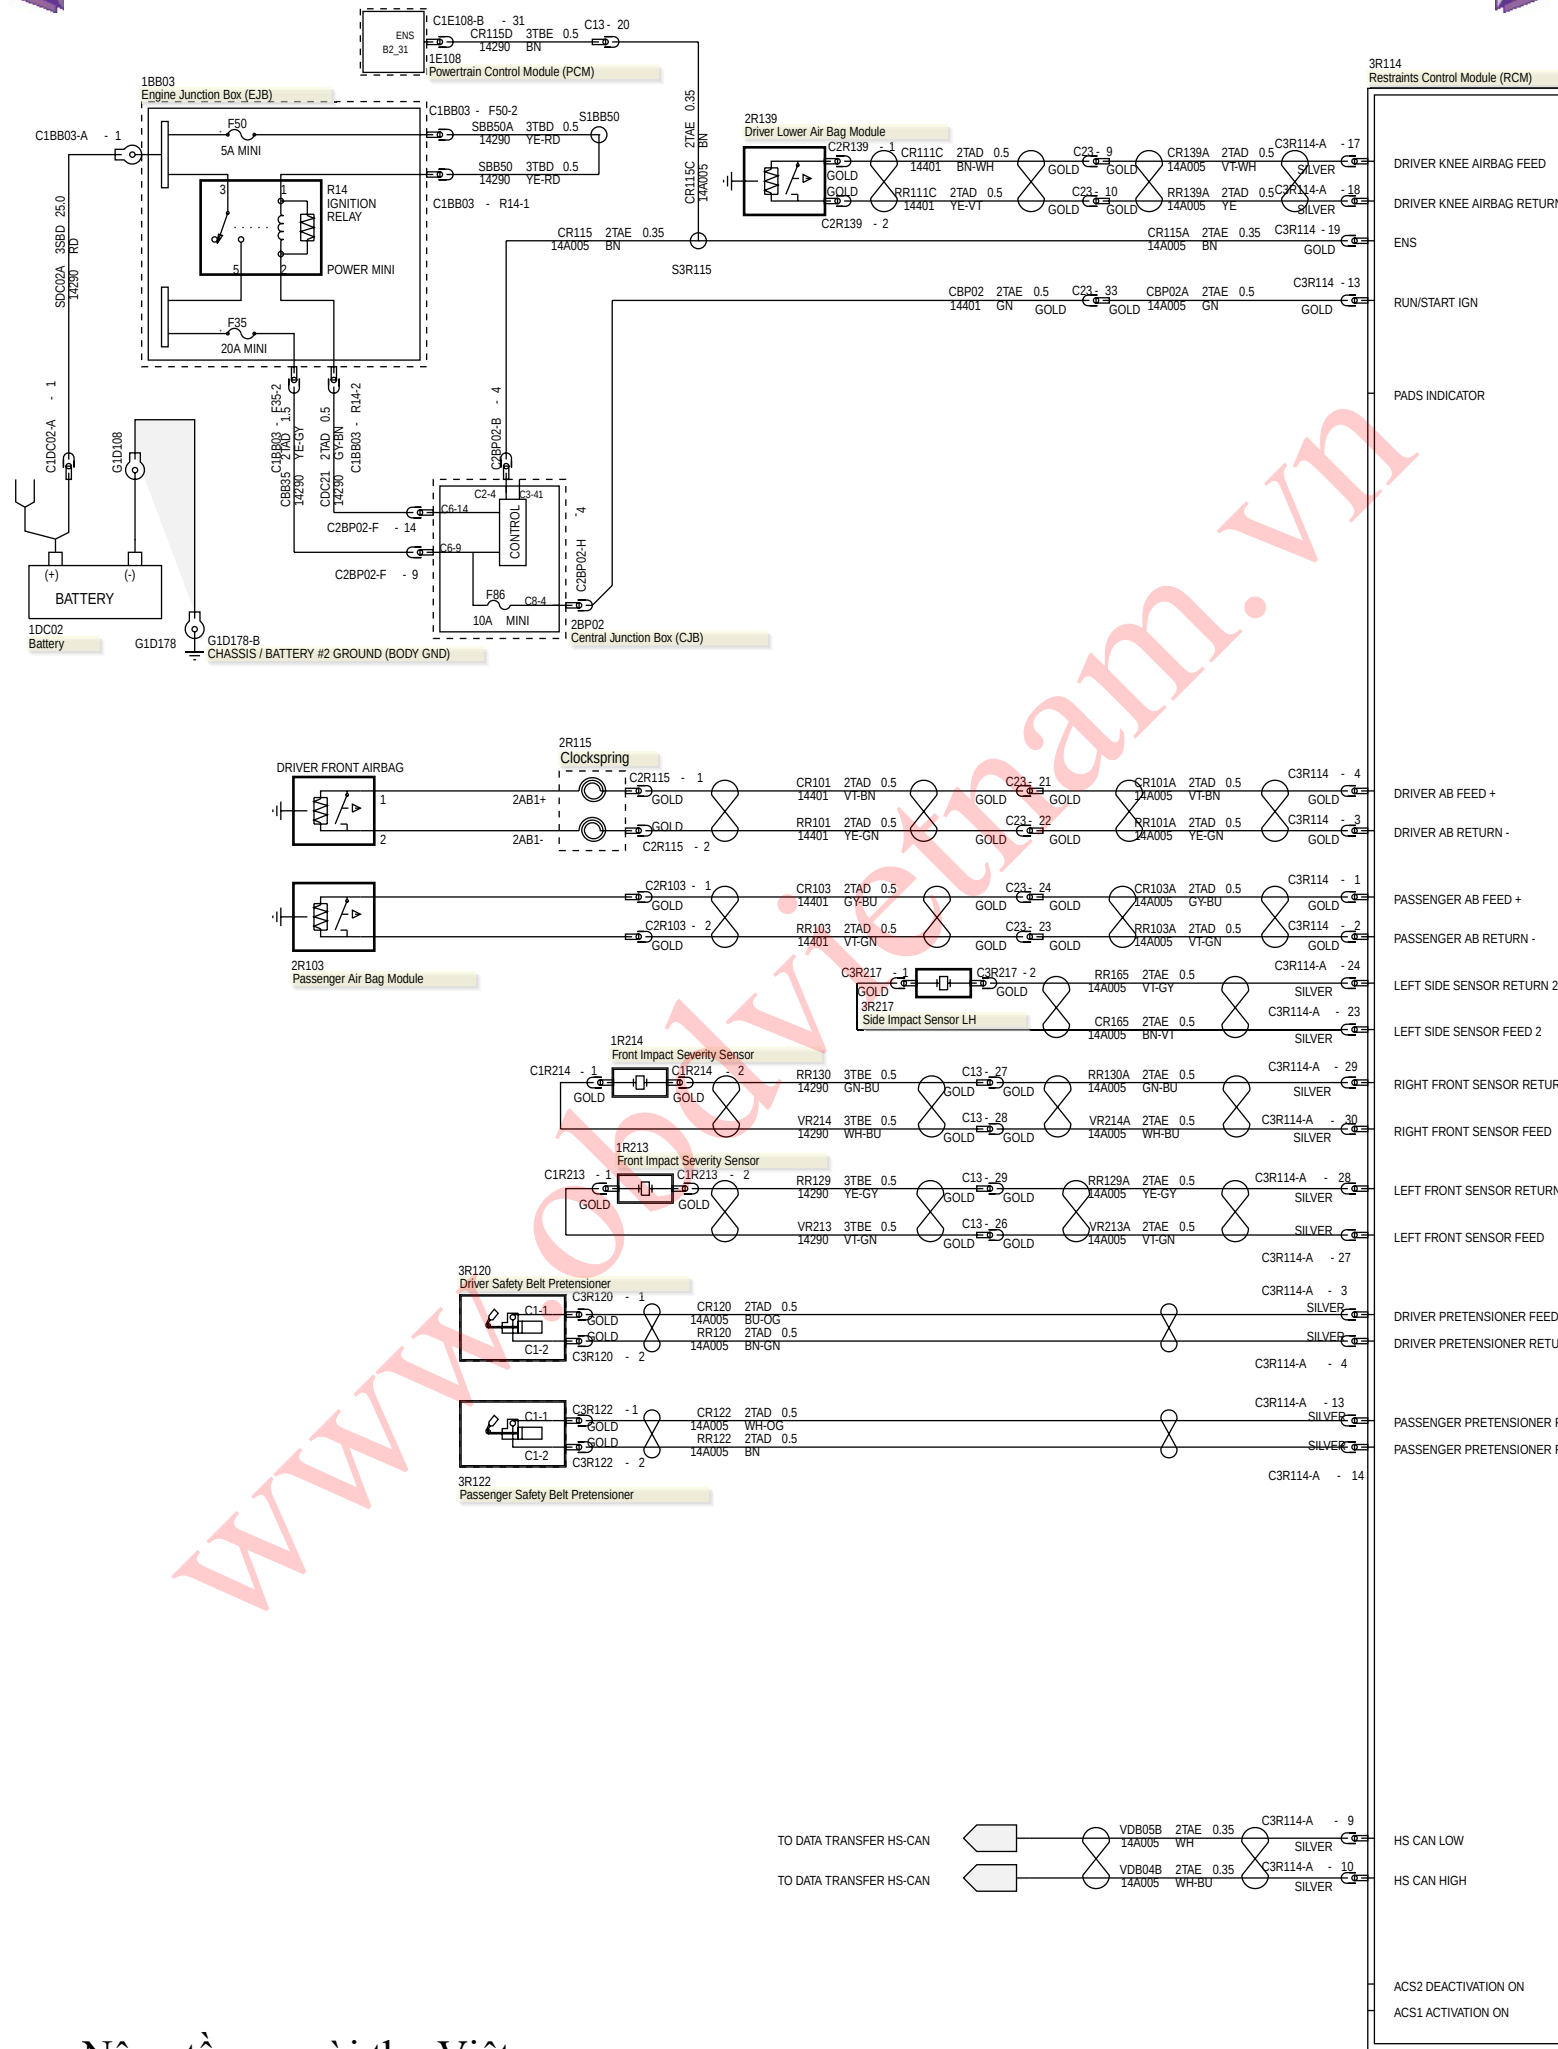


501-20B-22 Air Bags and Safety Belt Pretensioners—Double Cab, RHD 4WD/RHD RWD, Vehicles Without: Passenger Air Bag Deactivation Switch

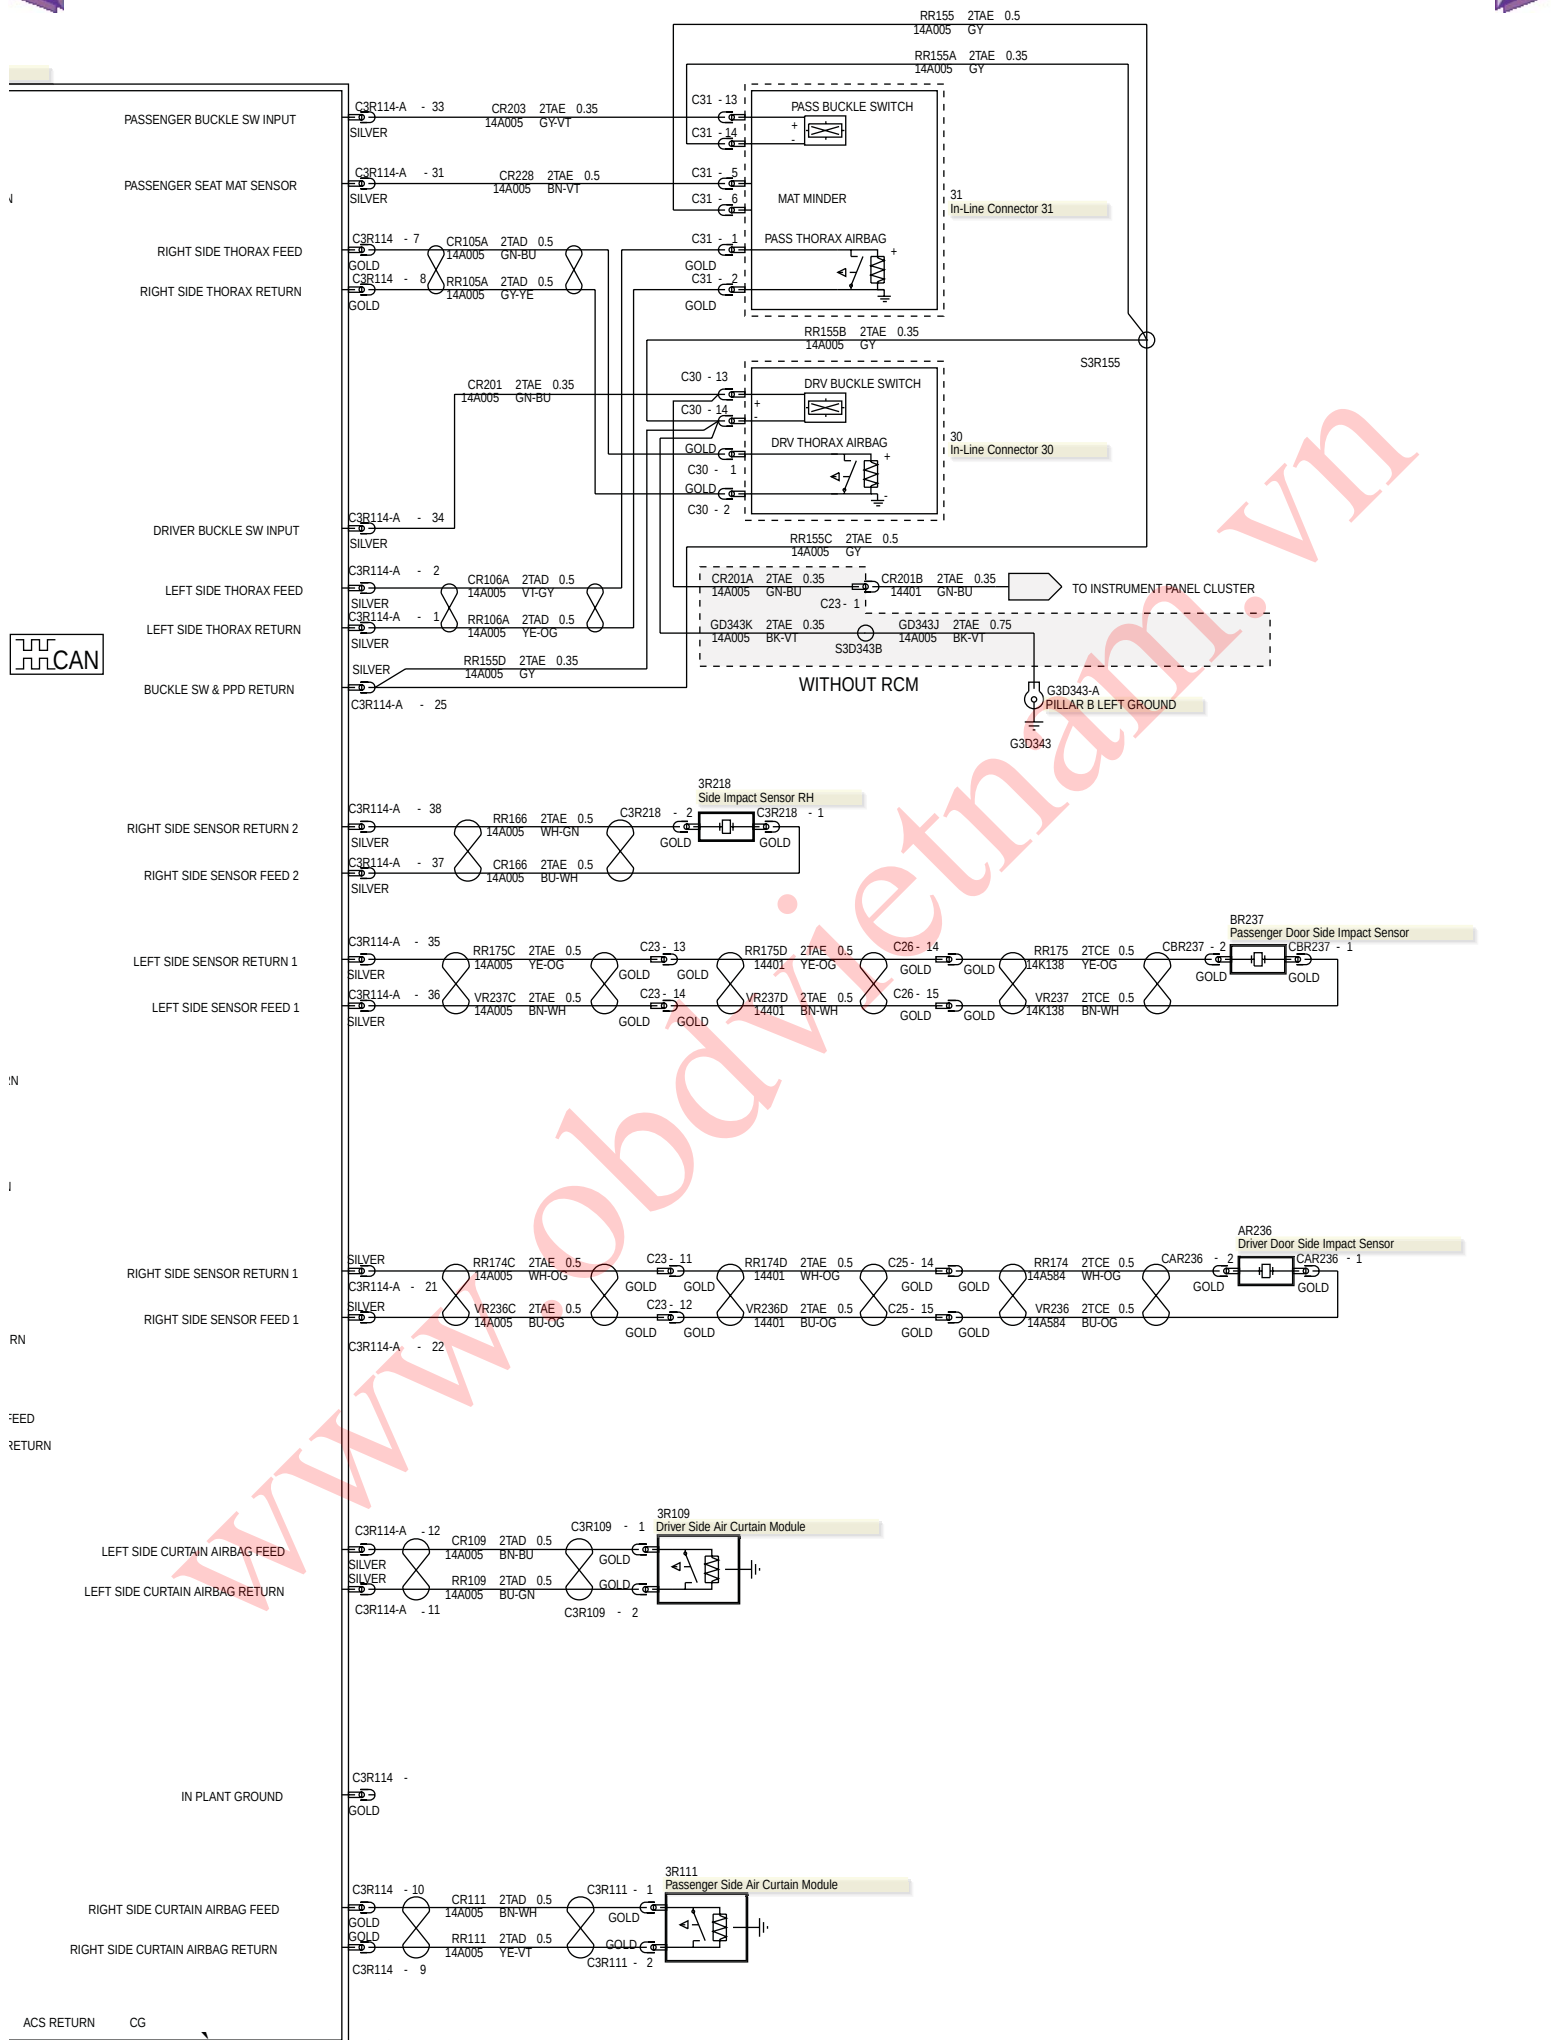

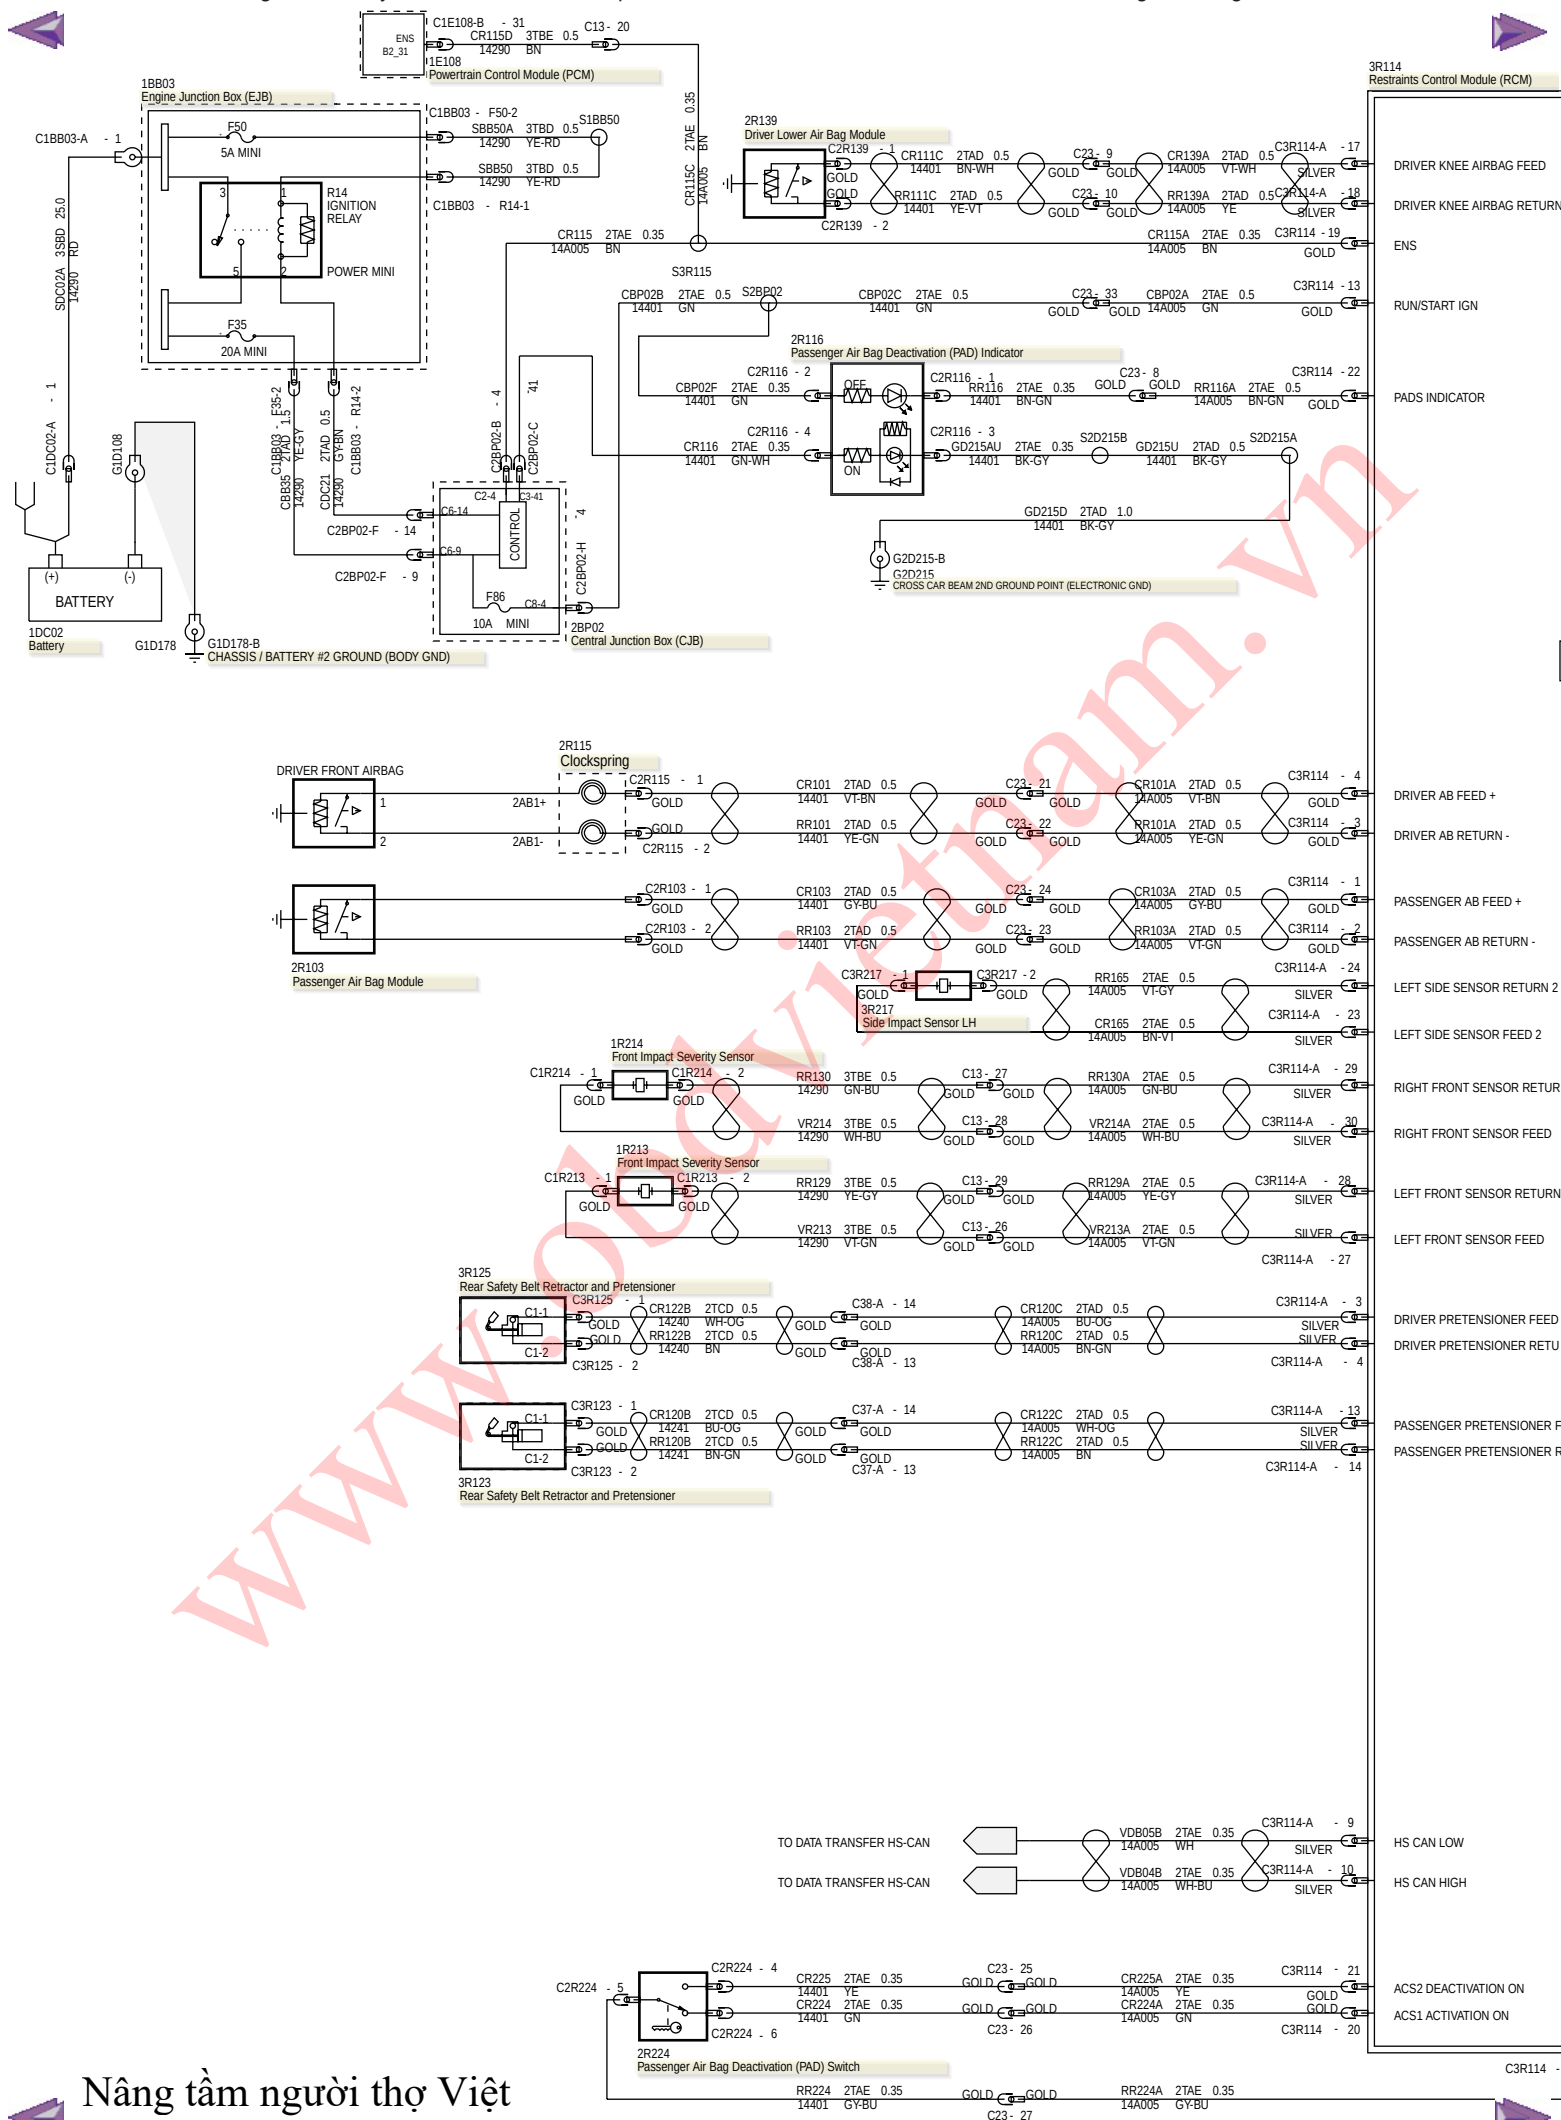


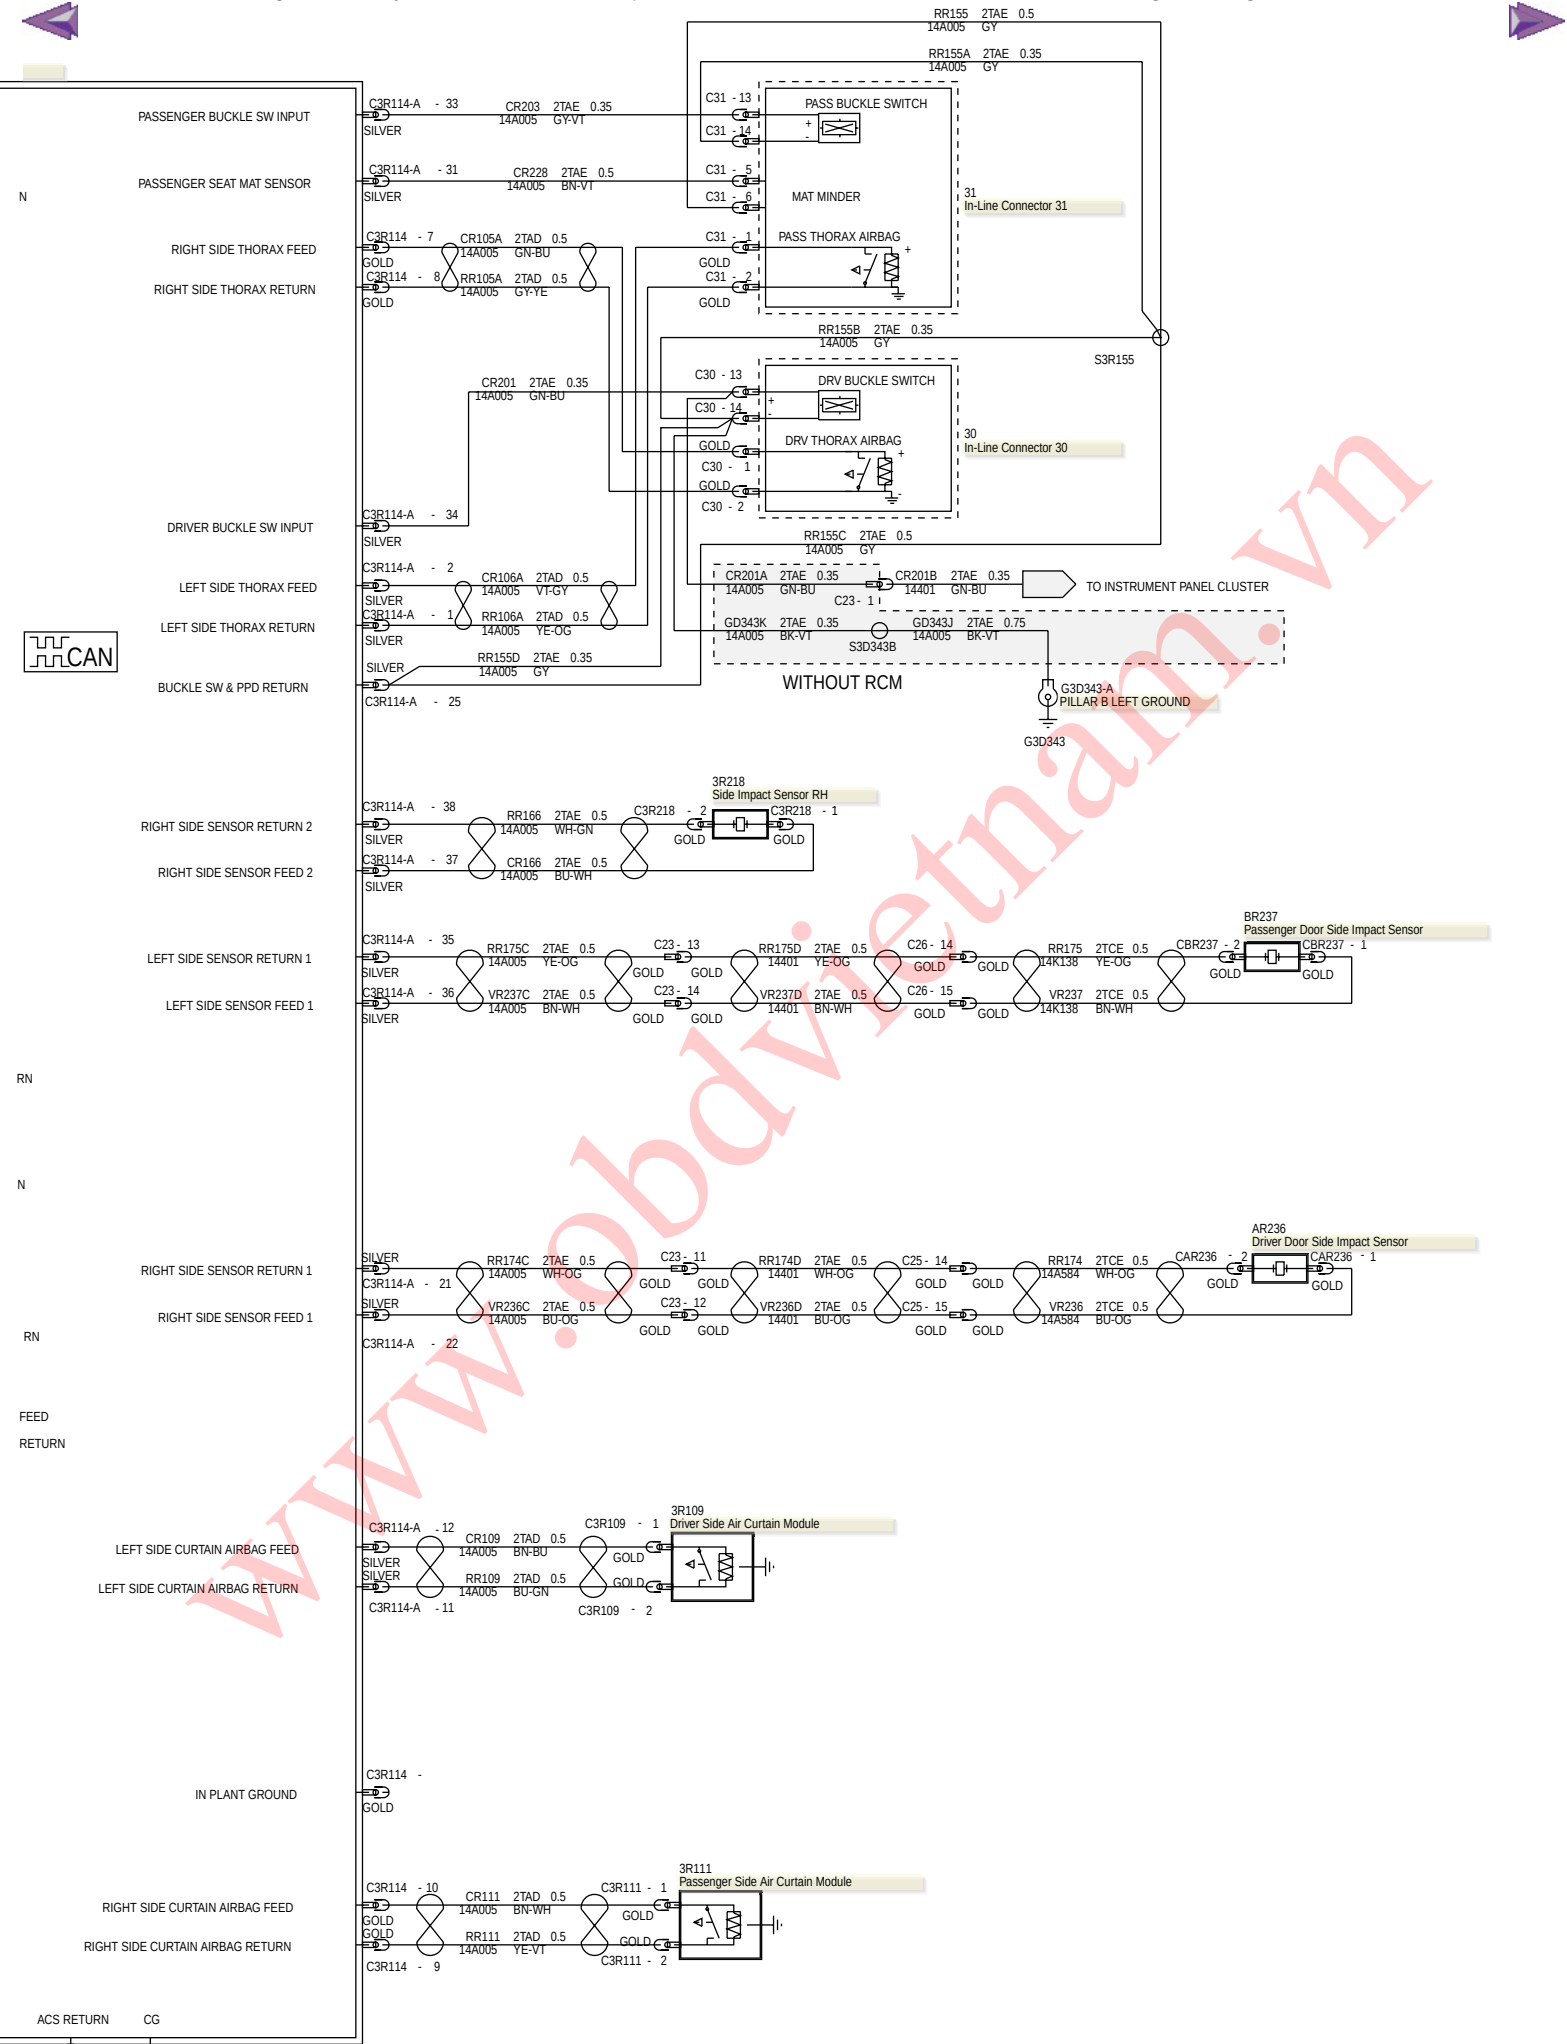

501-20B-25 Air Bags and Safety Belt Pretensioners—Super Cab, RHD 4WD/RHD RWD, Vehicles Without: Passenger Air Bag Deactivation Switch

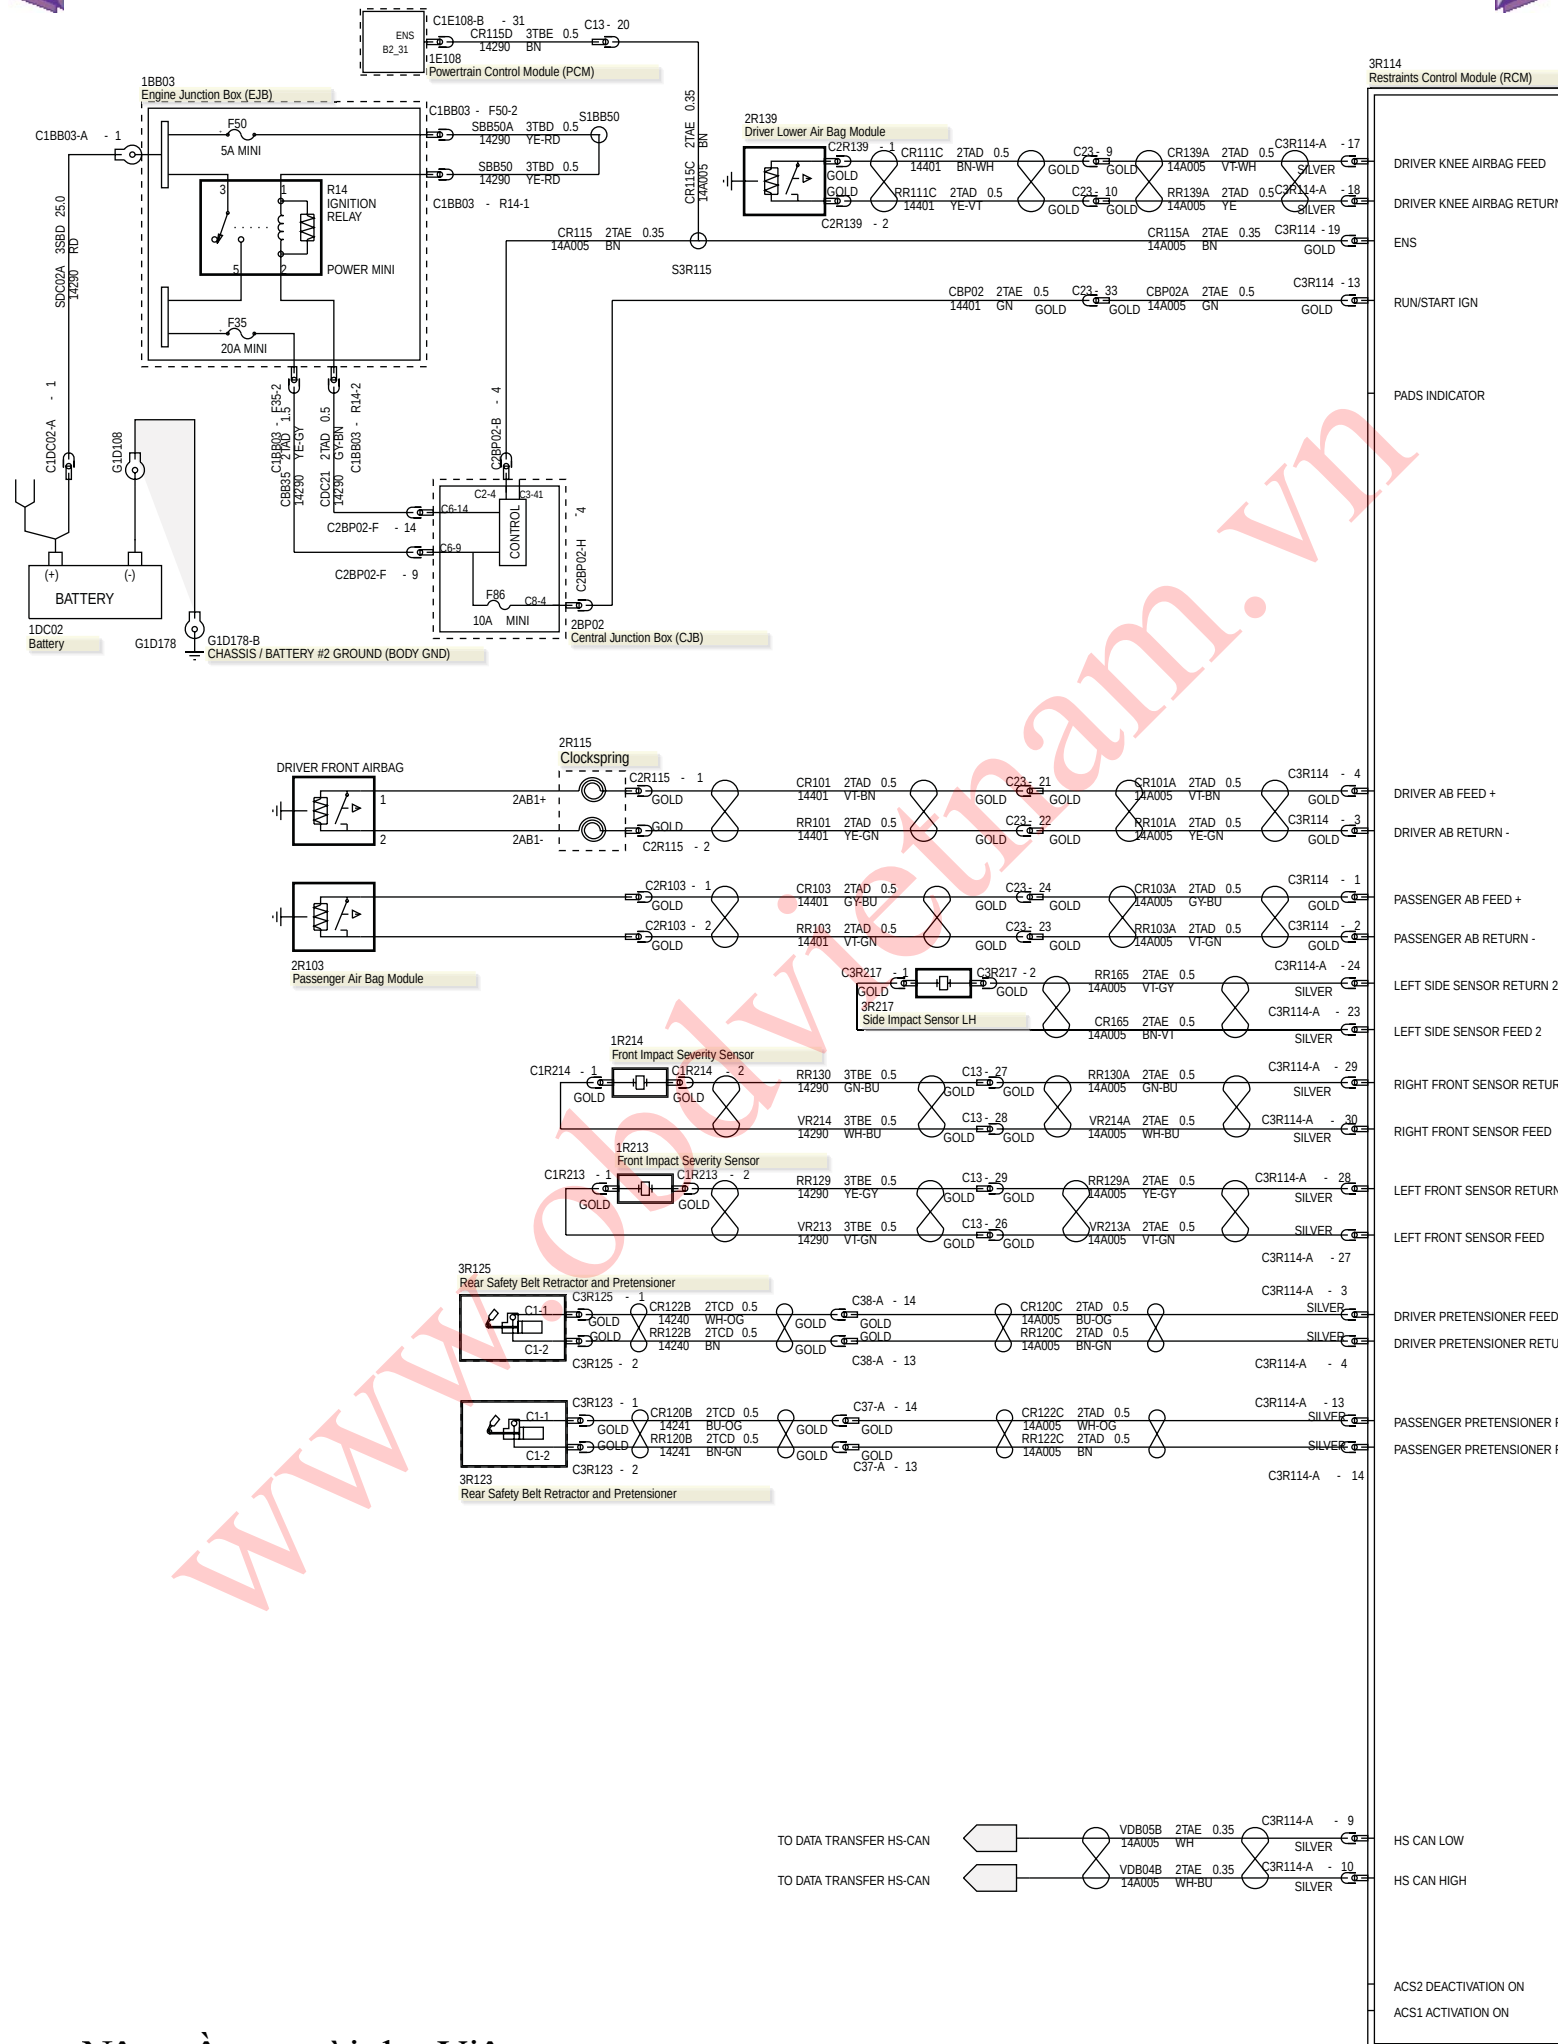


501-20B-26 Air Bags and Safety Belt Pretensioners—Super Cab, RHD 4WD/RHD RWD, Vehicles Without: Passenger Air Bag Deactivation Switch

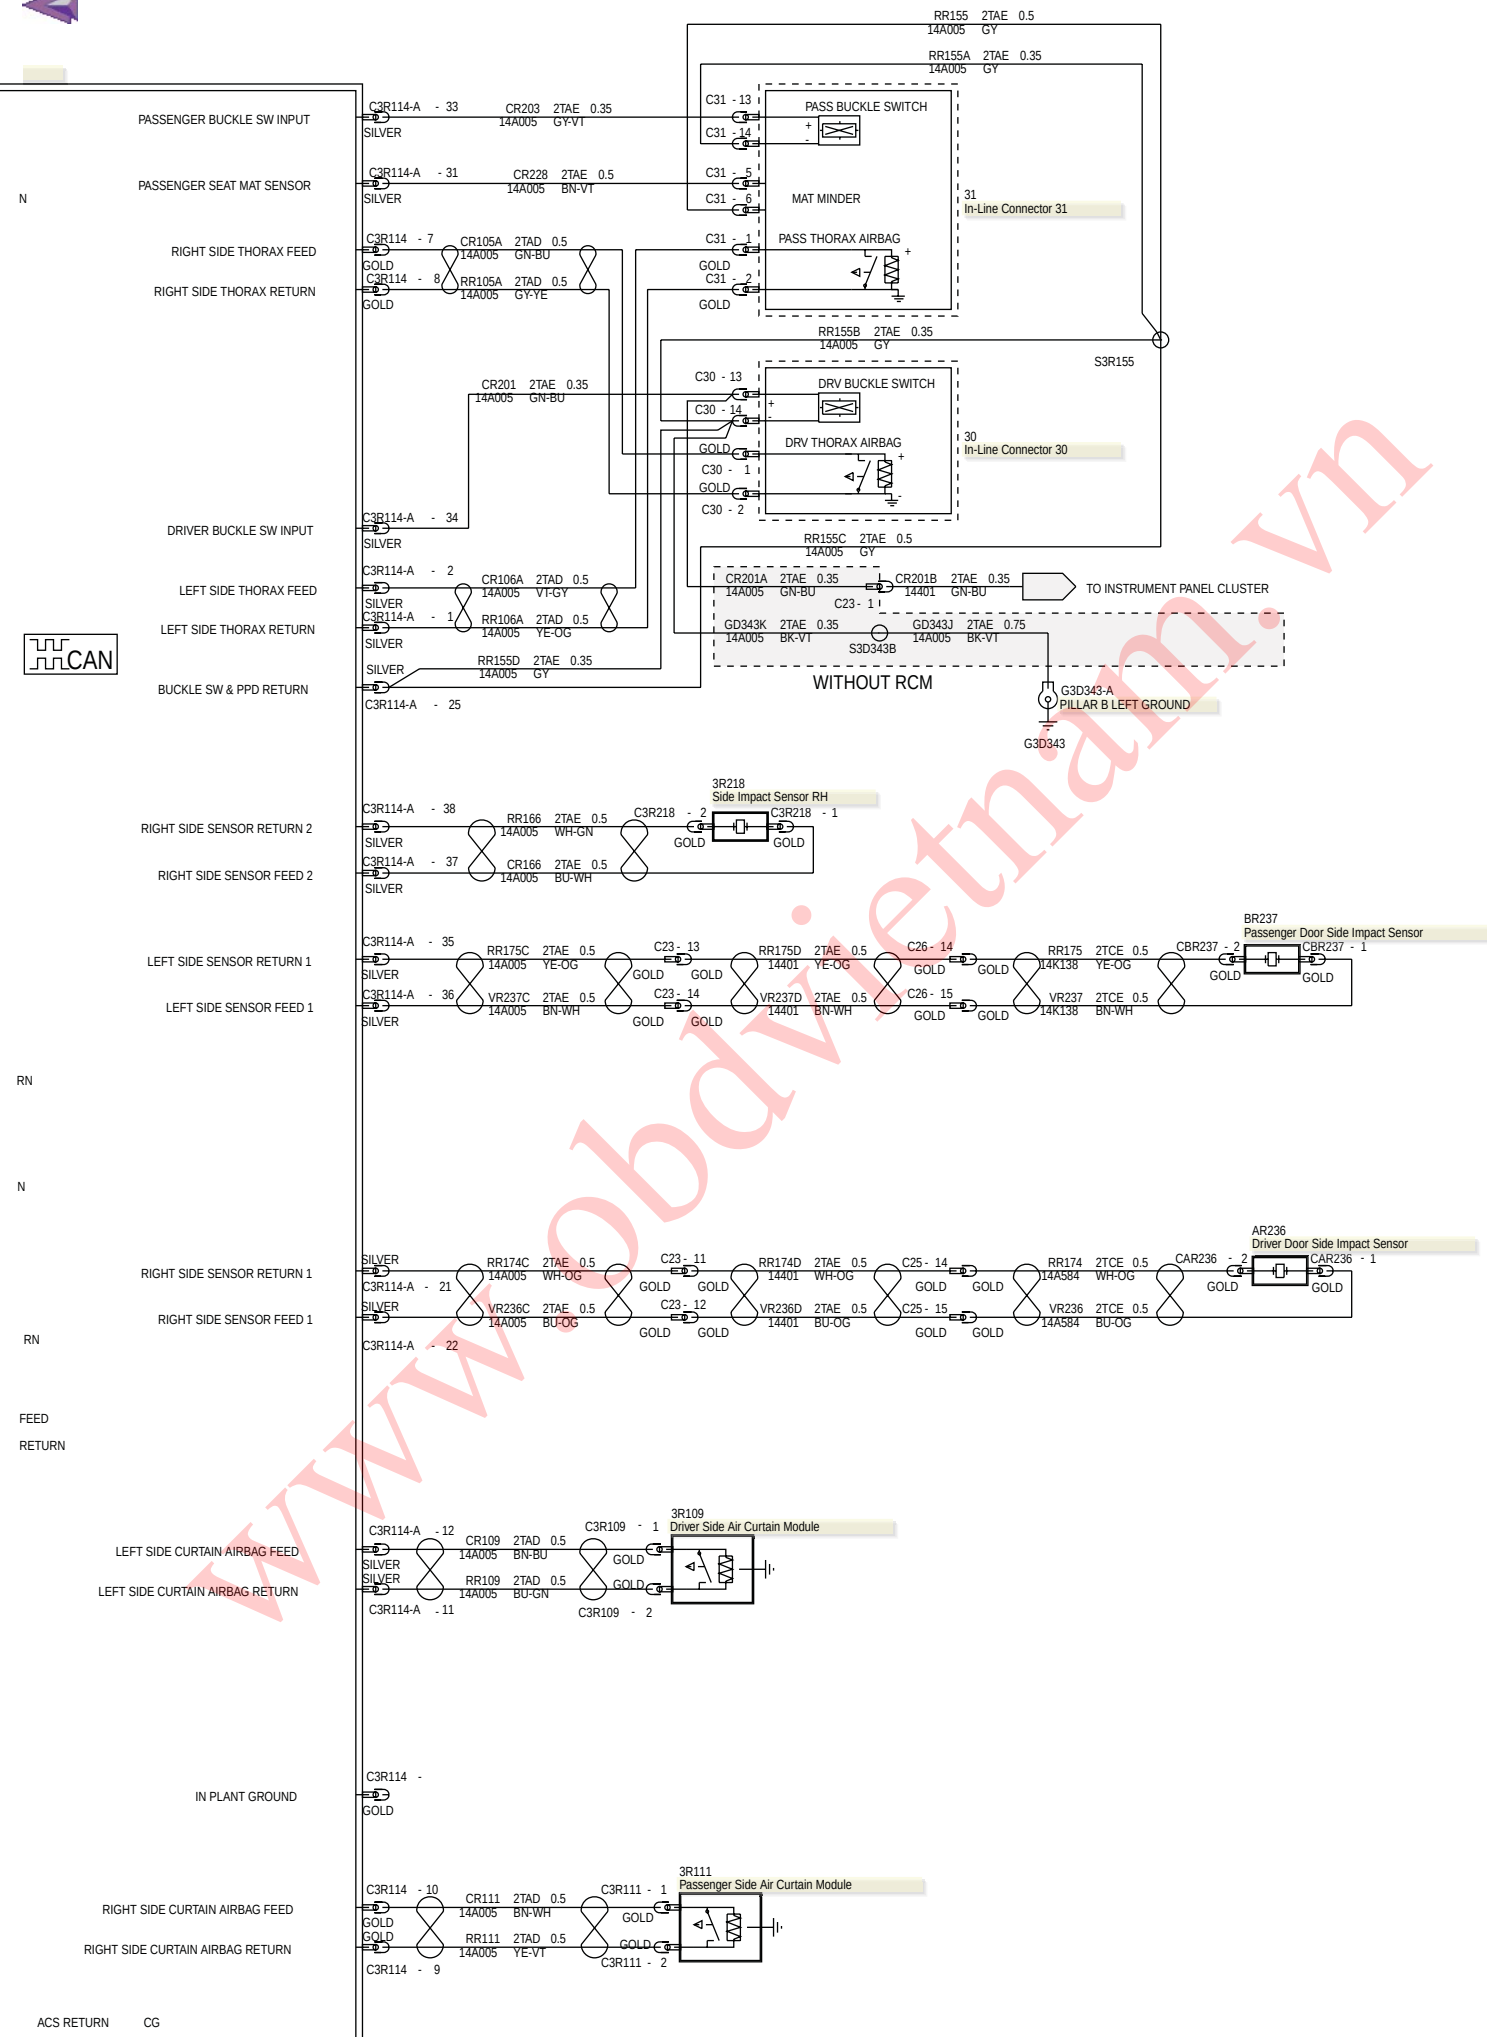


501-20B-27

Clockspring (G1404843)

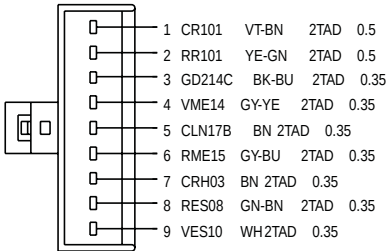


1S7T-14489-YA
C2R115
TO CLOCKSPRING
HARNESS 14401

Clockspring—A (G1404844)

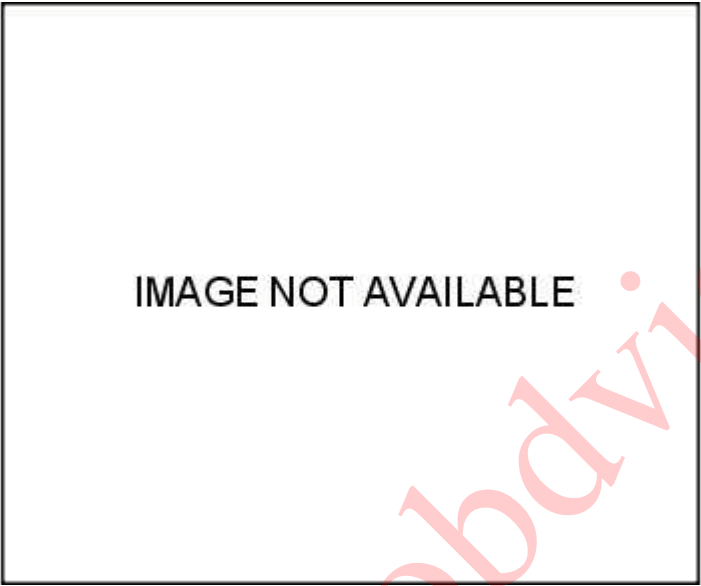


Driver Door Side Impact Sensor (G1414600)

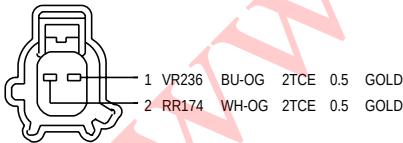

1L2T-14A464-AA
CAR236
TO PERIPHERAL PRESSURE SENSOR DRIVER SIDE
HARNESS 14A584


Driver Lower Air Bag Module (G1404860)

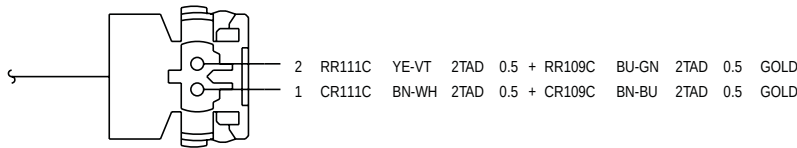

8U5T-14A464-EA
C2R139
TO DRIVER KNEE AIRBAG
HARNESS 14401

501-20B-28

Driver Side Air Curtain Module (G1404865)

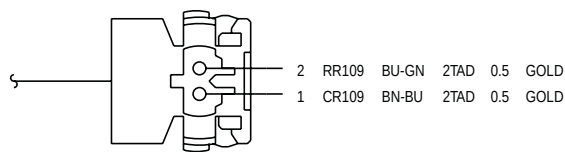


8U5T-14A464-EA

C3R109

TO LEFT SIDE CURTAIN AIRBAG

HARNESS 14A005

Front Impact Severity Sensor (G1404866)

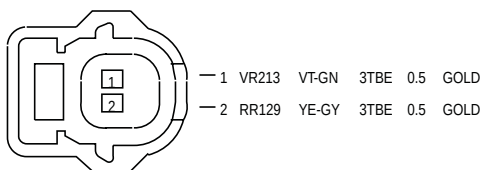


9A8T-14A464-DA

C1R213

TO PERIPHERAL CRASH SENSOR FRONT LEFT

HARNESS 14290

Passenger Air Bag Deactivation (PAD) Indicator (G1404867)

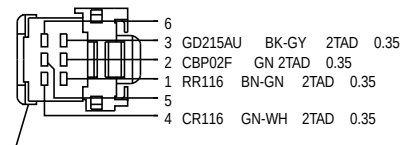

4S7T-14489-DA

C2R116

TO PADS INDICATOR (FORD)


HARNESS 14401

Passenger Air Bag Deactivation (PAD) Indicator—A (G1404868)



501-20B-29

Passenger Air Bag Deactivation (PAD) Switch (G1404876)

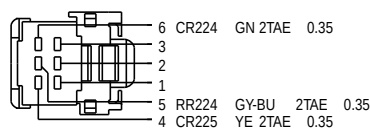


2S6T-14489-GA

C2R224

TO PASSENGER AIRBAG DEACTIVATION SWITCH

HARNESS 14401

Passenger Air Bag Module (G1404877)

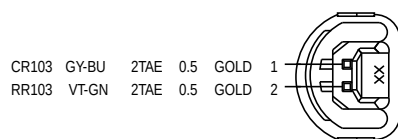


3218500B6

C2R103

TO PASSENGER FRONT AIRBAG

HARNESS 14401

Passenger Side Air Curtain Module (G1404878)

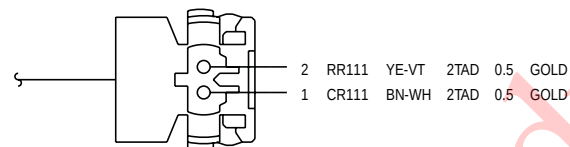


8U5T-14A464-EA

C3R111

TO RIGHT SIDE CURTAIN AIRBAG

HARNESS 14A005

Passenger Door Side Impact Sensor (G1408833)

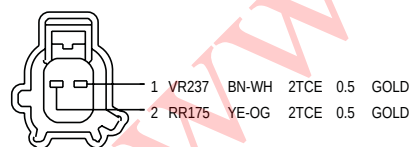

1L2T-14A464-AA


CBR237

TO PERIPHERAL PRESSURE SENSOR PASSENGER SIDE


HARNESS 14K138

501-20B-30


Restraints Control Module (RCM) (G1404879)

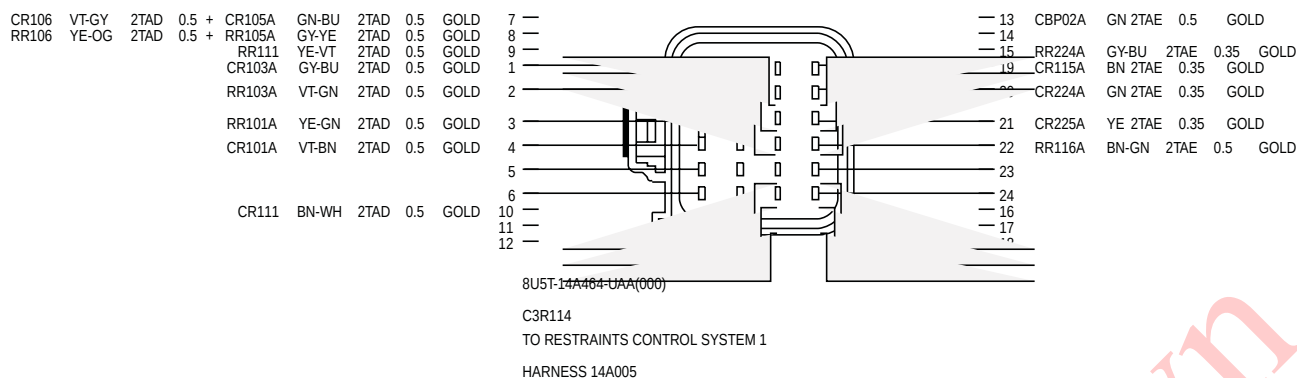


Restraints Control Module (RCM)—A (G1404880)

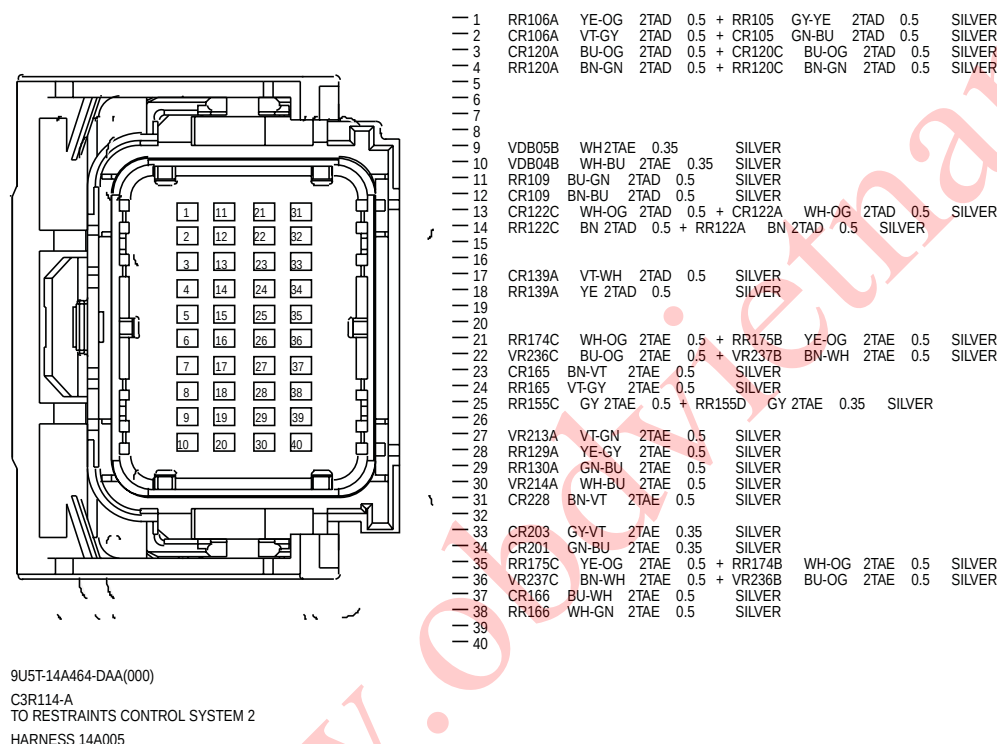

Side Impact Sensor LH (G1404881)

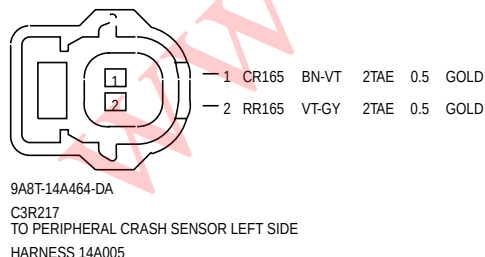

Side Impact Sensor RH (G1404882)

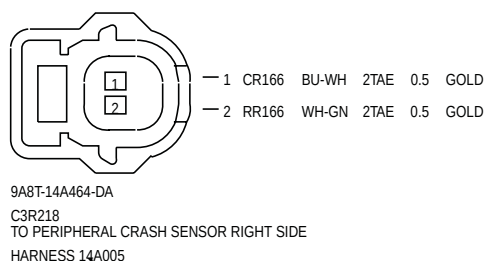

GROUP

General Wiring Information

7

SECTION TITLE

PAGE

Wiring Information

General Information.....	700-00
Fuse and Relay Information.....	700-01
Power Distribution.....	700-02
Grounding Strategy.....	700-03
Electrical Connectors.....	700-04

www.obdvietham.vn

SECTION 700-00 General Information

VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS

PAGE

PAGE 1 OF 2

COMPONENT LOCATION


B-Pillar LH — Single Cab.....	700-00-3
B-Pillar RH — Single Cab.....	700-00-4
B-Pillar LH — Super Cab.....	700-00-5
B-Pillar RH — Super Cab.....	700-00-6
Central Junction Box (CJB) — LHD.....	700-00-7
Central Junction Box (CJB) — RHD.....	700-00-8
Climate Control Assembly — Vehicles With: Dual Automatic Temperature Control, LHD..	700-00-9
Climate Control Assembly — Vehicles With: Manual Temperature Control, LHD.....	700-00-10
Climate Control Assembly — Vehicles With: Air Conditioning, LHD.....	700-00-11
Climate Control Assembly — Vehicles Without: Air Conditioning, LHD.....	700-00-12
Climate Control Assembly — Vehicles With: Dual Automatic Temperature Control, RHD..	700-00-13
Climate Control Assembly — Vehicles With: Manual Temperature Control, RHD.....	700-00-14
Climate Control Assembly — Vehicles With: Air Conditioning, RHD.....	700-00-15
Climate Control Assembly — Vehicles Without: Air Conditioning, RHD.....	700-00-16
Driver Door Interior View — Double Cab, LHD.....	700-00-17
Driver Door Interior View — Single Cab/Super Cab, LHD.....	700-00-18
Driver Door Interior View — Double Cab, RHD.....	700-00-19
Driver Door Interior View — Single Cab/Super Cab, RHD.....	700-00-20
Engine Compartment Left-Hand View — LHD.....	700-00-21
Engine Compartment Left-Hand View — RHD.....	700-00-22
Engine Compartment Right-Hand View — LHD.....	700-00-23
Engine Compartment Right-Hand View — RHD.....	700-00-24
Engine Left-Hand View — 2.5L Duratec-HE (122kW/165PS) - MI4.....	700-00-25
Engine Right-Hand View — 2.5L Duratec-HE (122kW/165PS) - MI4.....	700-00-26
Engine Left-Hand View — 2.5L Duratec-HE (122kW/165PS) - MI4, Compressed Natural Gas (CNG)/Ethanol/Liquefied Petroleum Gas (LPG).....	700-00-27
Engine Right-Hand View — 2.5L Duratec-HE (122kW/165PS) - MI4, Compressed Natural Gas (CNG)/Ethanol/Liquefied Petroleum Gas (LPG).....	700-00-28
Engine Upper View — 2.5L Duratec-HE (122kW/165PS) - MI4, Compressed Natural Gas (CNG)/Ethanol/Liquefied Petroleum Gas (LPG).....	700-00-29
Engine Left-Hand View — 2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma.....	700-00-30
Engine Right-Hand View — 2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma.....	700-00-31
Engine Right-Hand View — 2.2L Duratorq-TDCi (110kW/150PS) - Puma.....	700-00-32
Engine Upper View — 2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma.....	700-00-33
Engine Left-Hand View — 2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma.....	700-00-34
Engine Left-Hand View — 3.2L Duratorq-TDCi (148kW/200PS) - Puma.....	700-00-35
Engine Right-Hand View — 3.2L Duratorq-TDCi (148kW/200PS) - Puma.....	700-00-36
Engine Upper View — 3.2L Duratorq-TDCi (148kW/200PS) - Puma.....	700-00-37

PAGE 2 OF 2

Engine Left-Hand View — 3.2L Duratorq-TDCi (148kW/200PS) - Puma.....	700-00-38
Engine Right-Hand View — 3.2L Duratorq-TDCi (148kW/200PS) - Puma.....	700-00-39
Engine Upper View — 3.2L Duratorq-TDCi (148kW/200PS) - Puma.....	700-00-40
Front Fender LH.....	700-00-41
Front Fender RH.....	700-00-42
Front Floor Left-Hand View — Single Cab, LHD.....	700-00-43
Front Floor Right-Hand View — Single Cab, LHD.....	700-00-44
Front Floor Left-Hand View — Double Cab, LHD.....	700-00-45
Front Floor Right-Hand View — Double Cab, LHD.....	700-00-46
Front Floor Left-Hand View — Super Cab, LHD.....	700-00-47
Front Floor Right-Hand View — Super Cab, LHD.....	700-00-48
Front Floor Left-Hand View — Single Cab, RHD.....	700-00-49
Front Floor Right-Hand View — Single Cab, RHD.....	700-00-50
Front Floor Left-Hand View — Double Cab, RHD.....	700-00-51
Front Floor Right-Hand View — Double Cab, RHD.....	700-00-52
Front Floor Left-Hand View — Super Cab, RHD.....	700-00-53
Front Floor Right-Hand View — Super Cab, RHD.....	700-00-54
Fuel Tank.....	700-00-55
Headliner — Single Cab, LHD.....	700-00-56
Headliner — Double Cab, LHD.....	700-00-57
Headliner — Super Cab, LHD.....	700-00-58
Headliner — Single Cab, RHD.....	700-00-59
Headliner — Double Cab, RHD.....	700-00-60
Headliner — Super Cab, RHD.....	700-00-61
Instrument Panel — LHD.....	700-00-62
Instrument Panel — RHD.....	700-00-63
Passenger Door Interior View — Double Cab, LHD.....	700-00-64
Passenger Door Interior View — Single Cab/Super Cab, LHD.....	700-00-65
Passenger Door Interior View — Double Cab, RHD.....	700-00-66
Passenger Door Interior View — Single Cab/Super Cab, RHD.....	700-00-67
Rear Bumper.....	700-00-68
Rear Door LH Interior View.....	700-00-69
Rear Door RH Interior View.....	700-00-70
Rear Axle.....	700-00-71
Rear Under Floor View.....	700-00-72
Steering Column Switches Front View.....	700-00-73
Steering Column Switches Rear View.....	700-00-74
Steering Wheel.....	700-00-75
Transmission Left-Hand View — Vehicles With: 5-Speed Manual Transmission - MT75 4x2.....	700-00-76
Transmission Right-Hand View — Vehicles With: 6-Speed Manual Transmission - MT82 4x2.....	700-00-77
Transmission Right-Hand View — Vehicles With: 6-Speed Automatic Transaxle - 6R80 4x2.....	700-00-78
Transmission Left-Hand View — Vehicles With: 5-Speed Manual Transmission - MT75 4x4.....	700-00-79
Transmission Right-Hand View — Vehicles With: 6-Speed Manual Transmission (MT82 4x4).....	700-00-80
Transmission Right-Hand View — Vehicles With: 6-Speed Automatic Transaxle - 6R80 4x4.....	700-00-81


COMPONENT LOCATION

B-Pillar LH - Single Cab

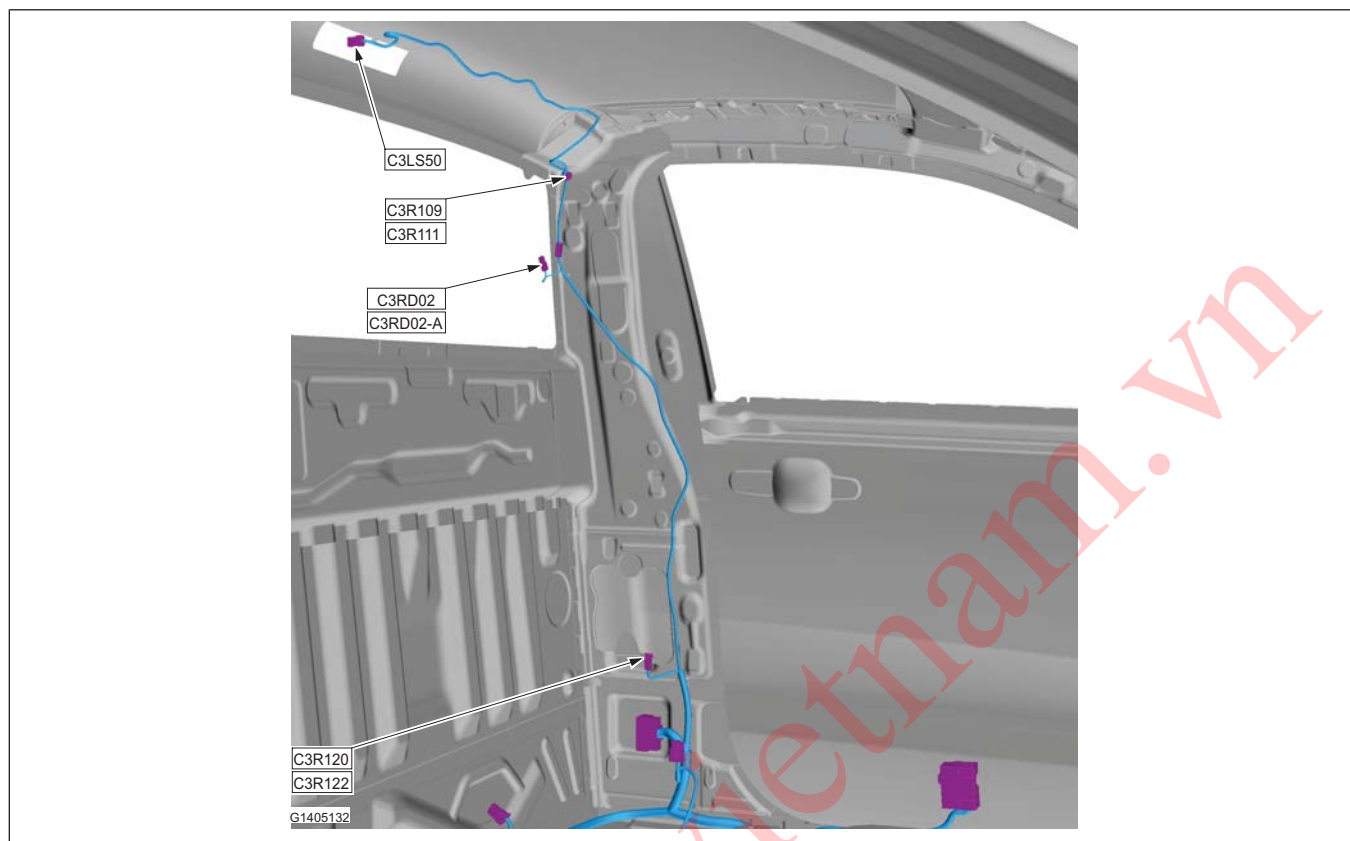


COMPONENT LOCATION

B-Pillar RH - Single Cab

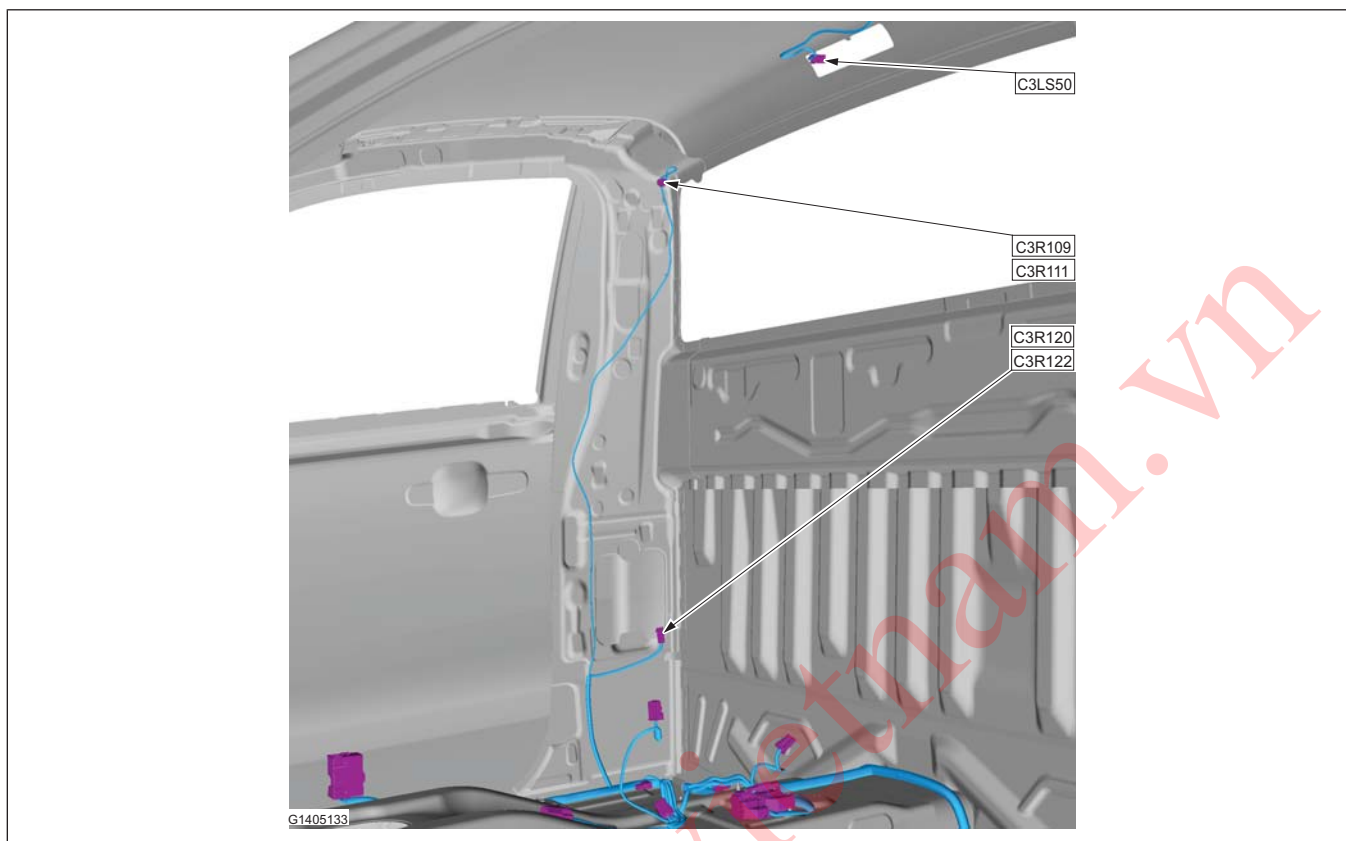


COMPONENT LOCATION

B-Pillar LH - Super Cab

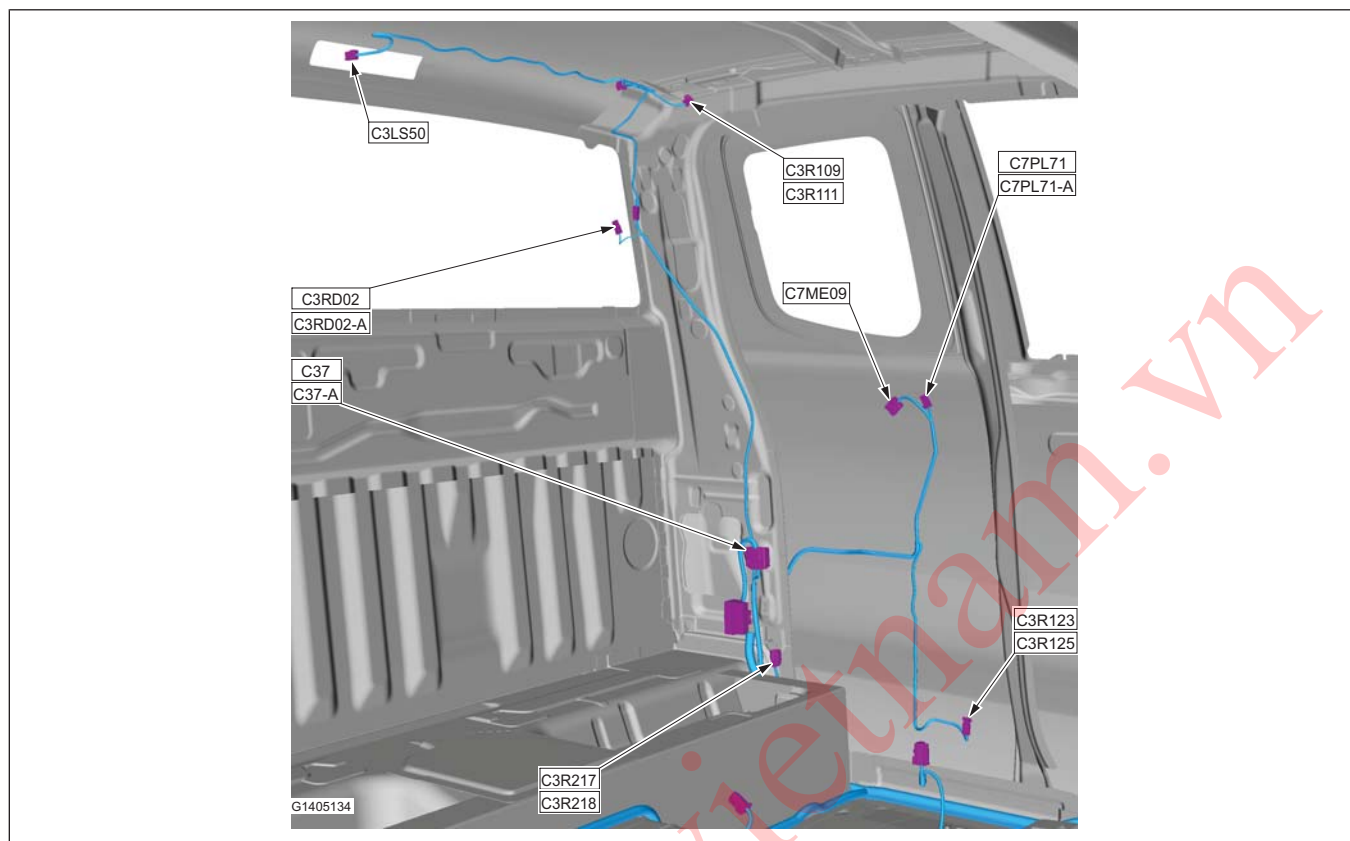


COMPONENT LOCATION

B-Pillar RH - Super Cab

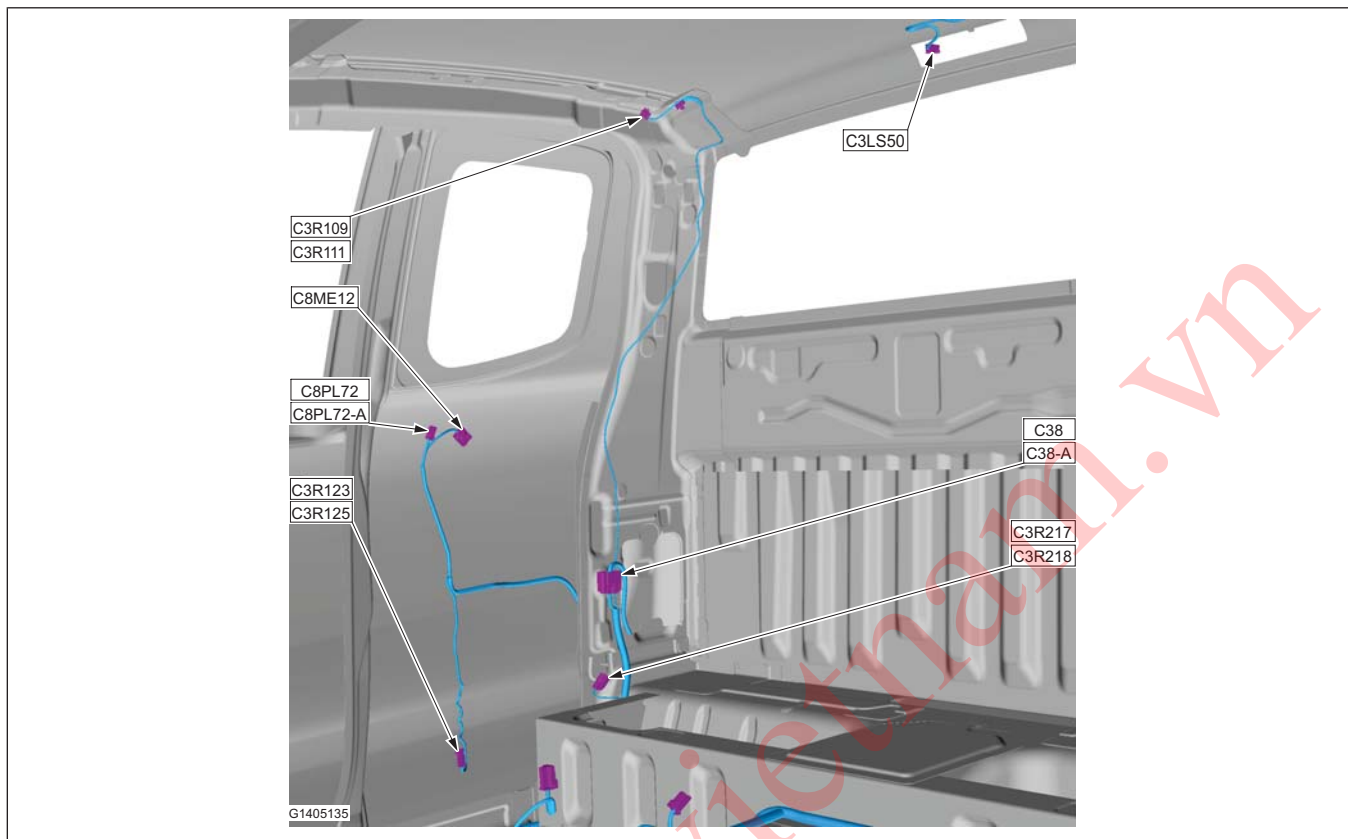


COMPONENT LOCATION

Central Junction Box (CJB) - LHD

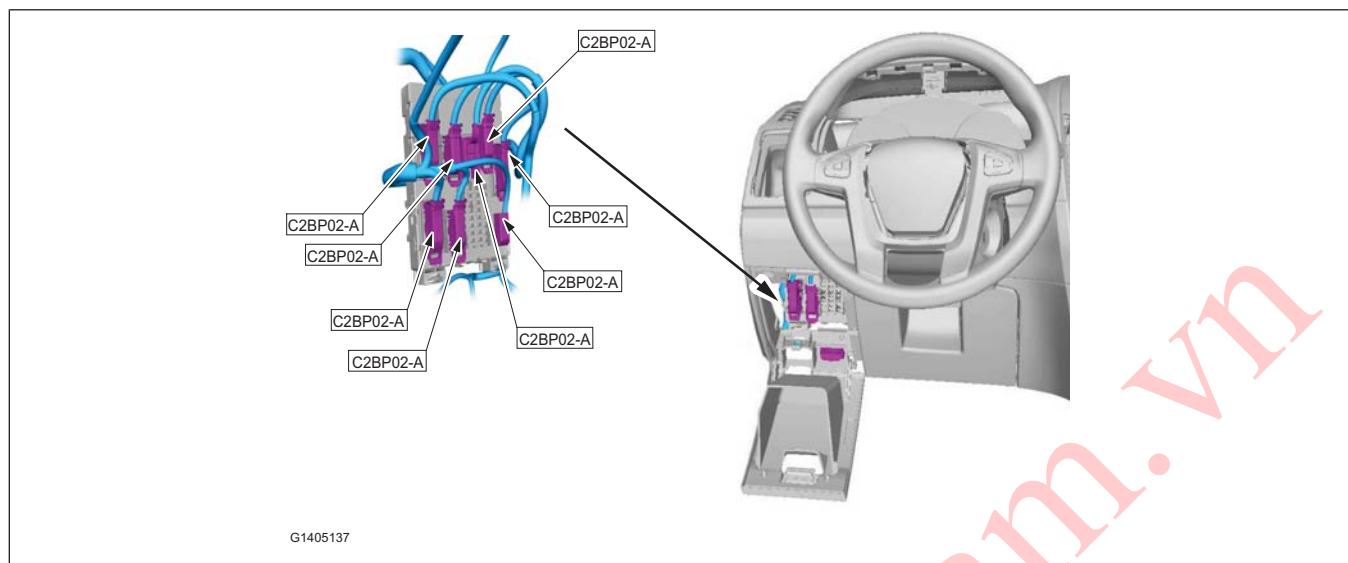


COMPONENT LOCATION

Central Junction Box (CJB) - RHD

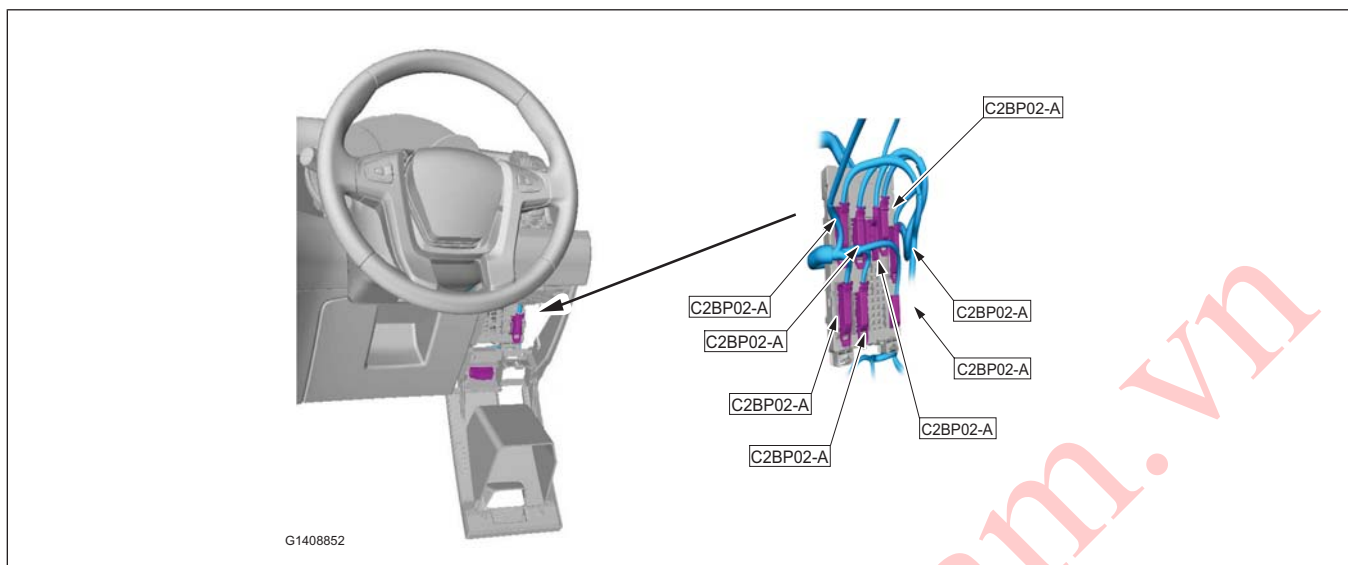


COMPONENT LOCATION

Climate Control Assembly - Vehicles With: Dual Automatic Temperature Control, LHD

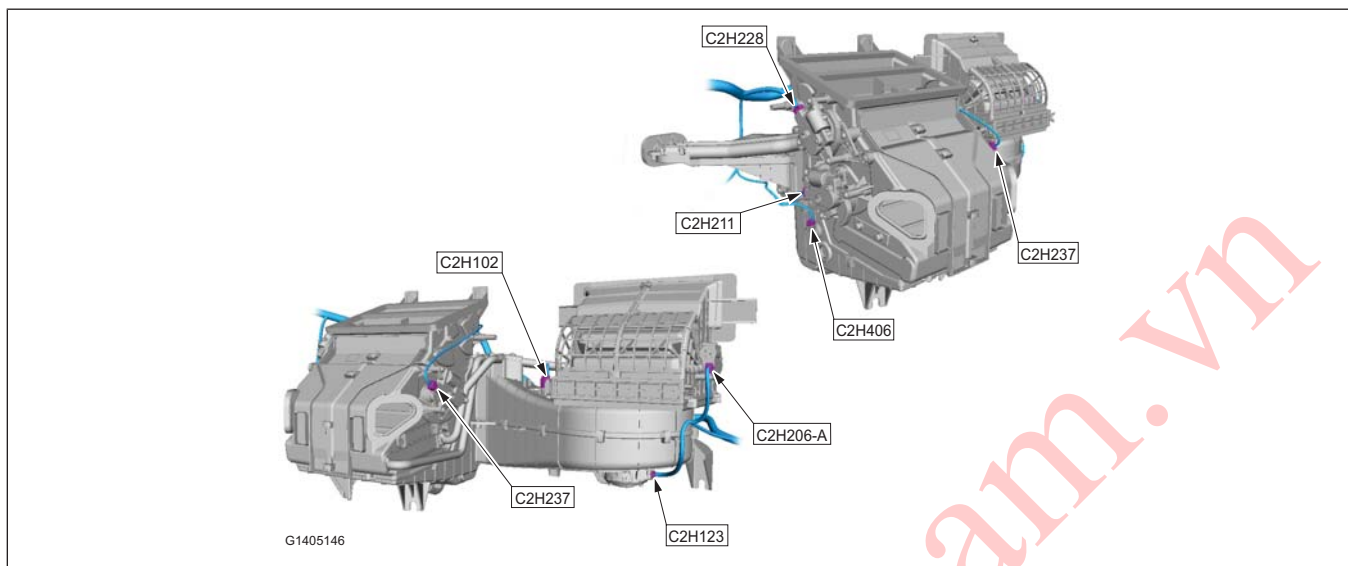


COMPONENT LOCATION

Climate Control Assembly - Vehicles With: Manual Temperature Control, LHD

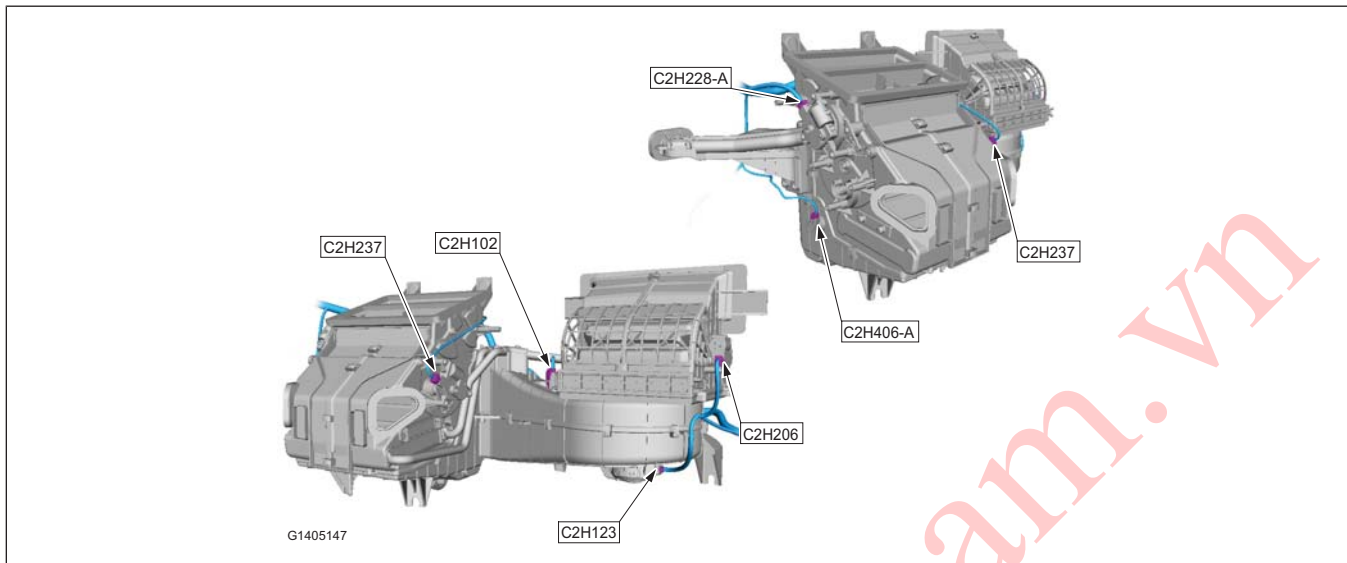


COMPONENT LOCATION

Climate Control Assembly - Vehicles With: Air Conditioning, LHD

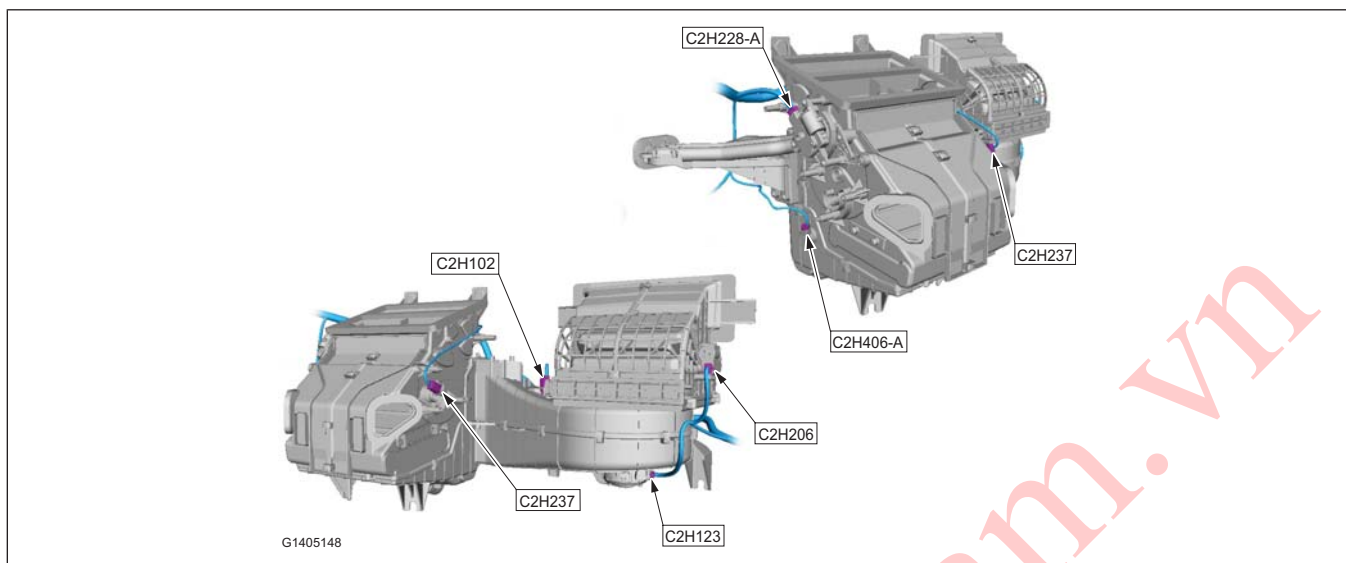


COMPONENT LOCATION

Climate Control Assembly - Vehicles Without: Air Conditioning, LHD

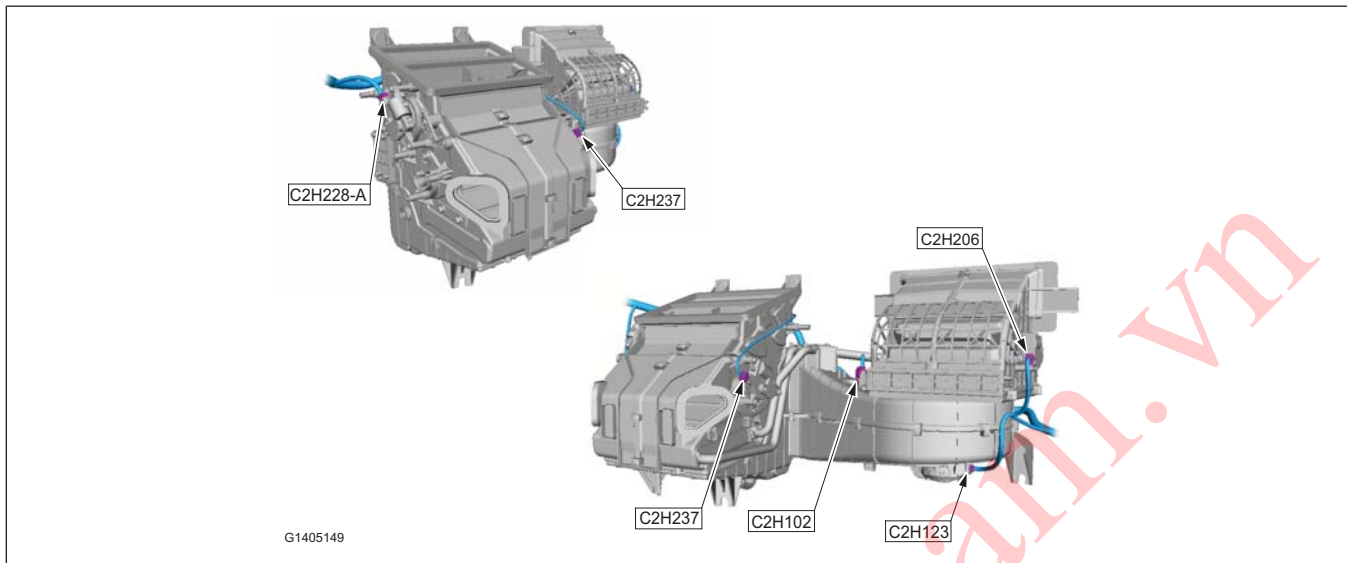


COMPONENT LOCATION

Climate Control Assembly - Vehicles With: Dual Automatic Temperature Control, RHD

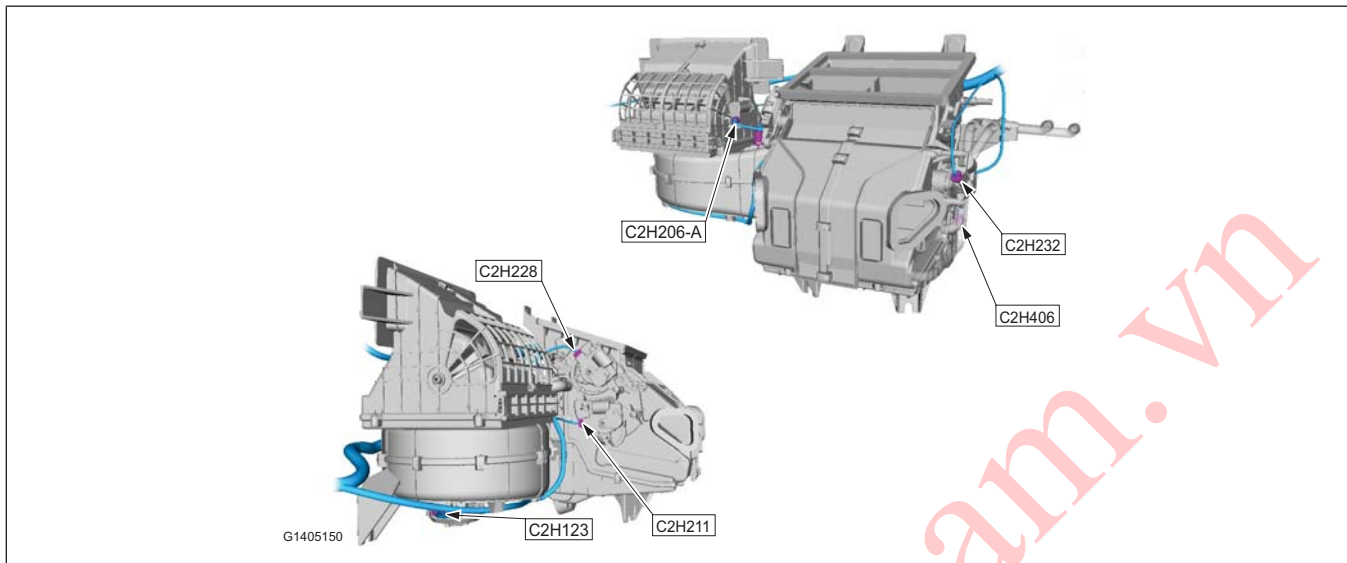


COMPONENT LOCATION

Climate Control Assembly - Vehicles With: Manual Temperature Control, RHD

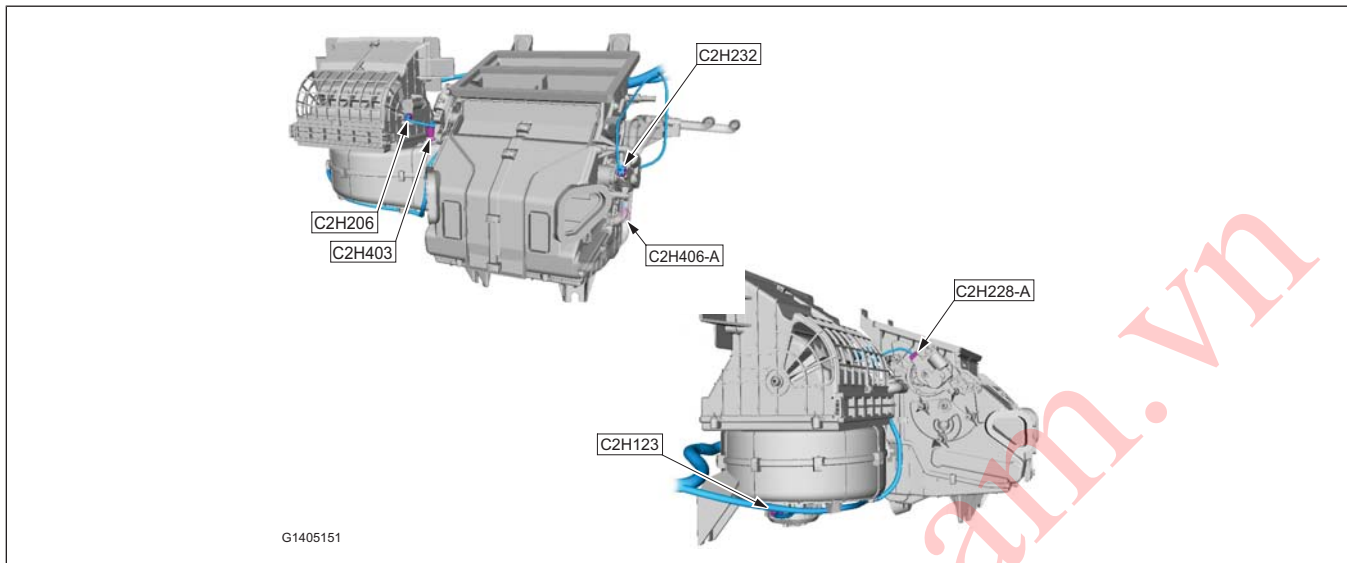


COMPONENT LOCATION

Climate Control Assembly - Vehicles With: Air Conditioning, RHD

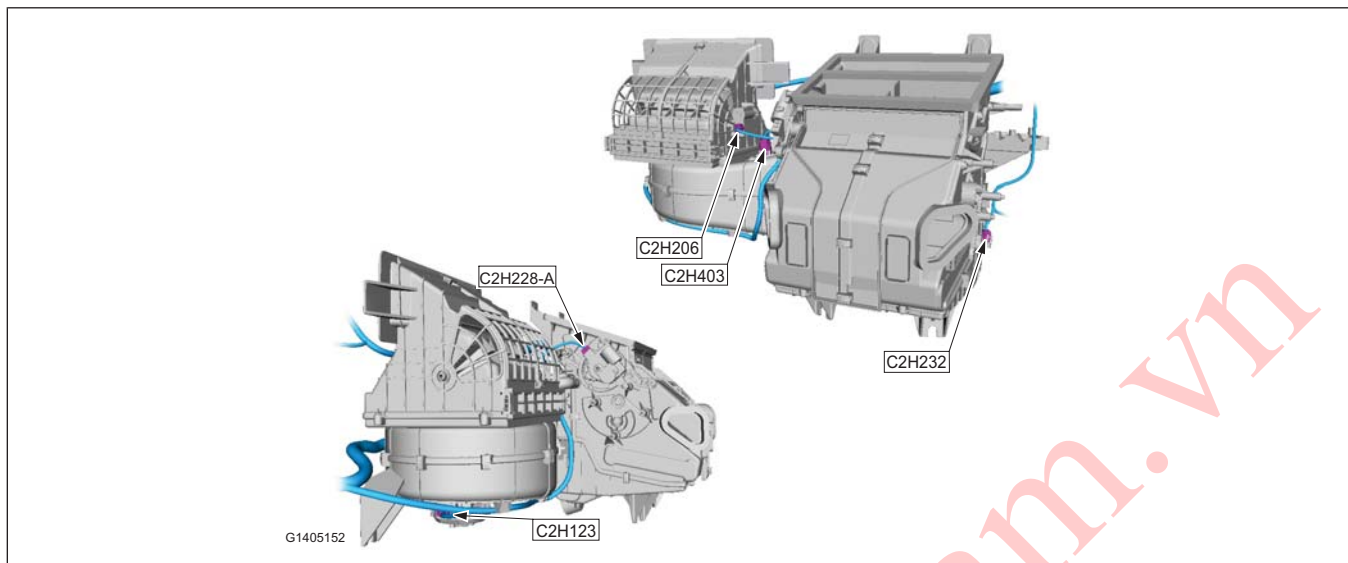


COMPONENT LOCATION

Climate Control Assembly - Vehicles Without: Air Conditioning, RHD

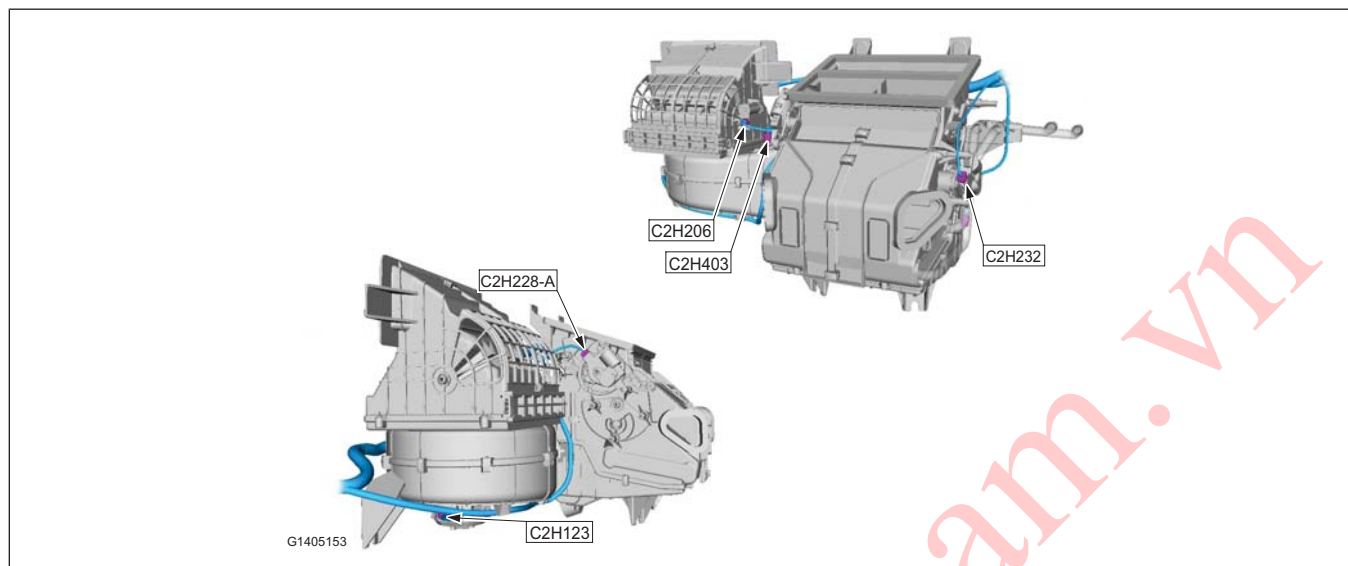


COMPONENT LOCATION

Driver Door Interior View - Double Cab, LHD

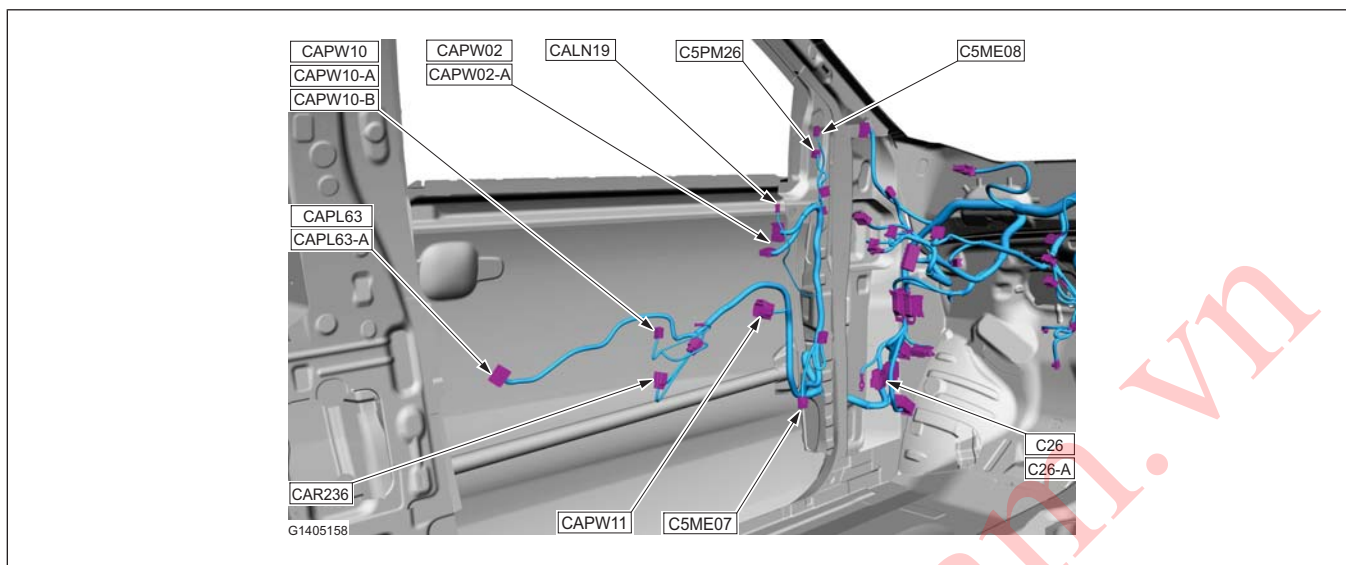


COMPONENT LOCATION

Driver Door Interior View - Single Cab/Super Cab, LHD

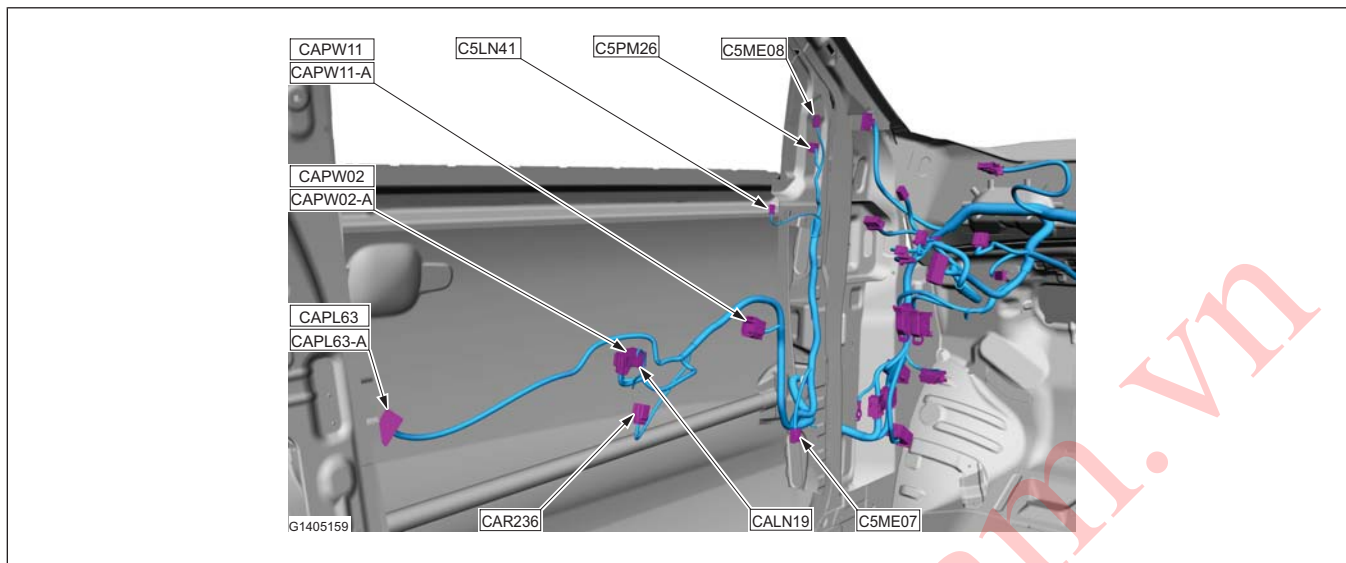


COMPONENT LOCATION

Driver Door Interior View - Double Cab, RHD

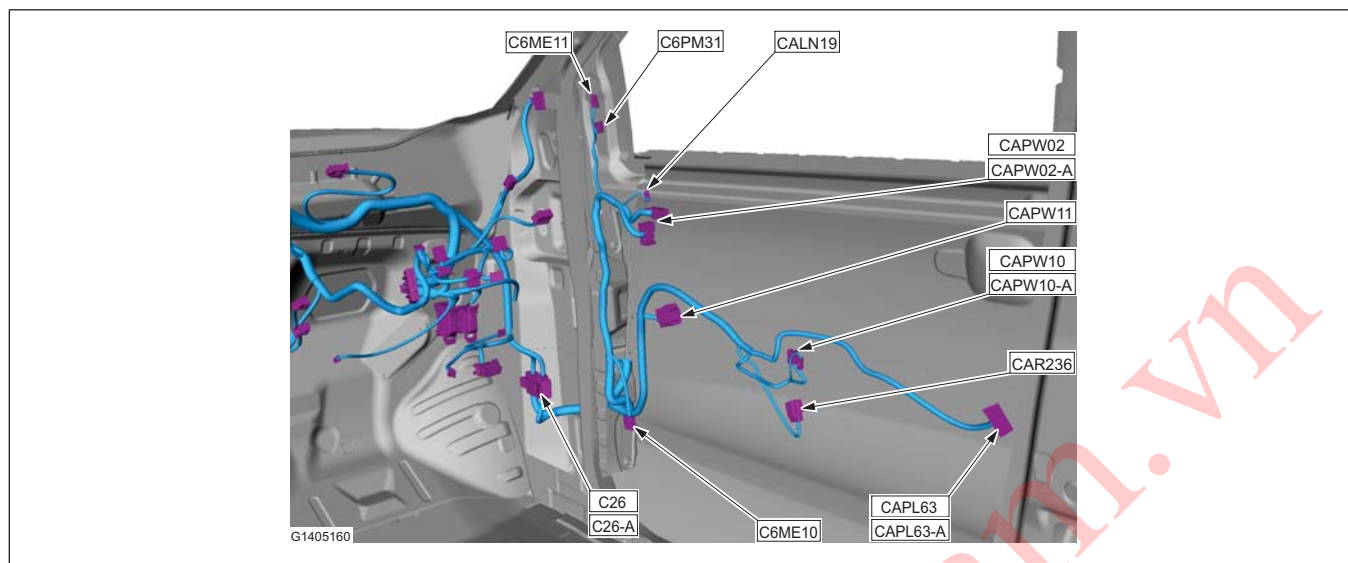


COMPONENT LOCATION

Driver Door Interior View - Single Cab/Super Cab, RHD

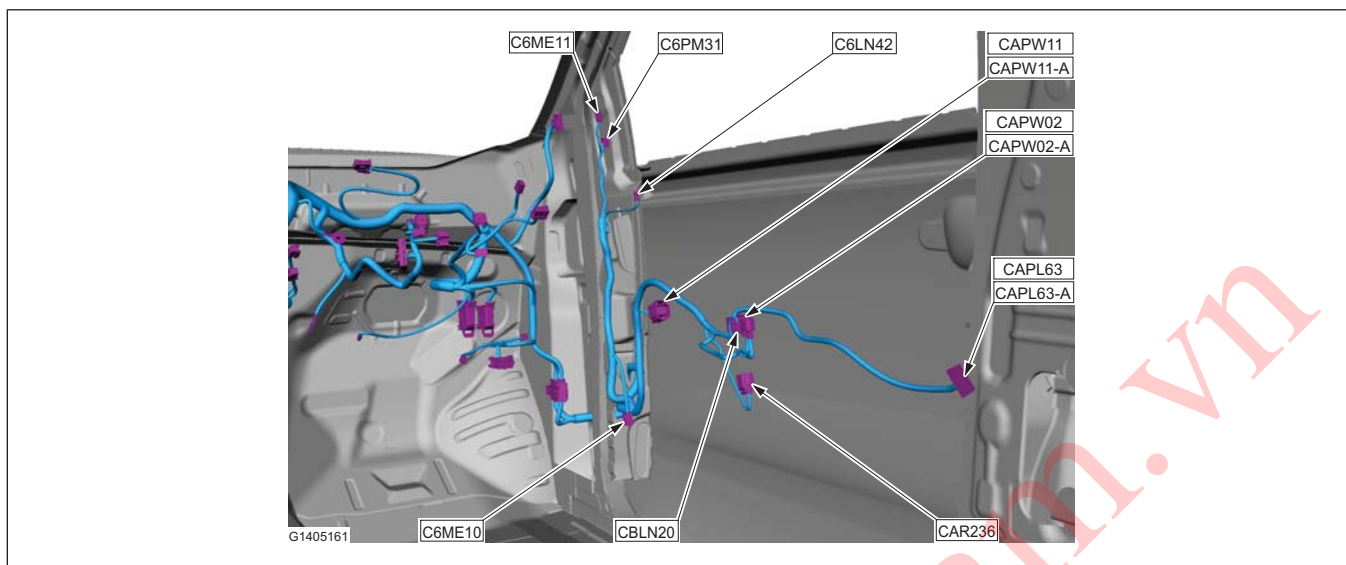


COMPONENT LOCATION

Engine Compartment Left-Hand View - LHD

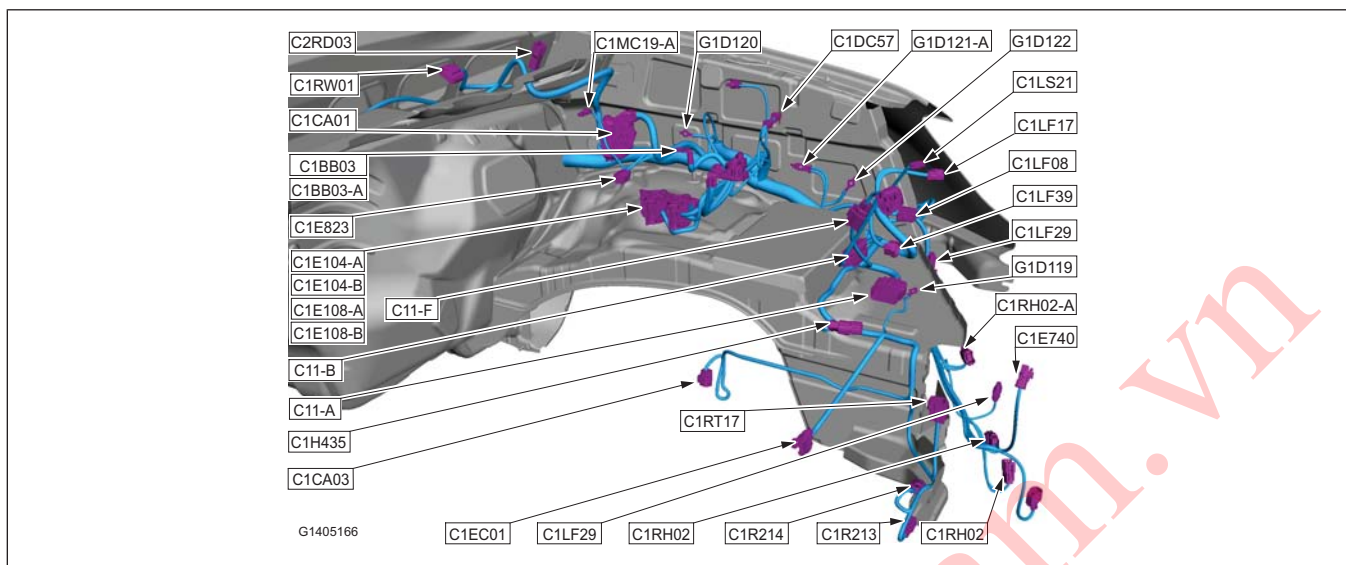


COMPONENT LOCATION

Engine Compartment Left-Hand View - RHD

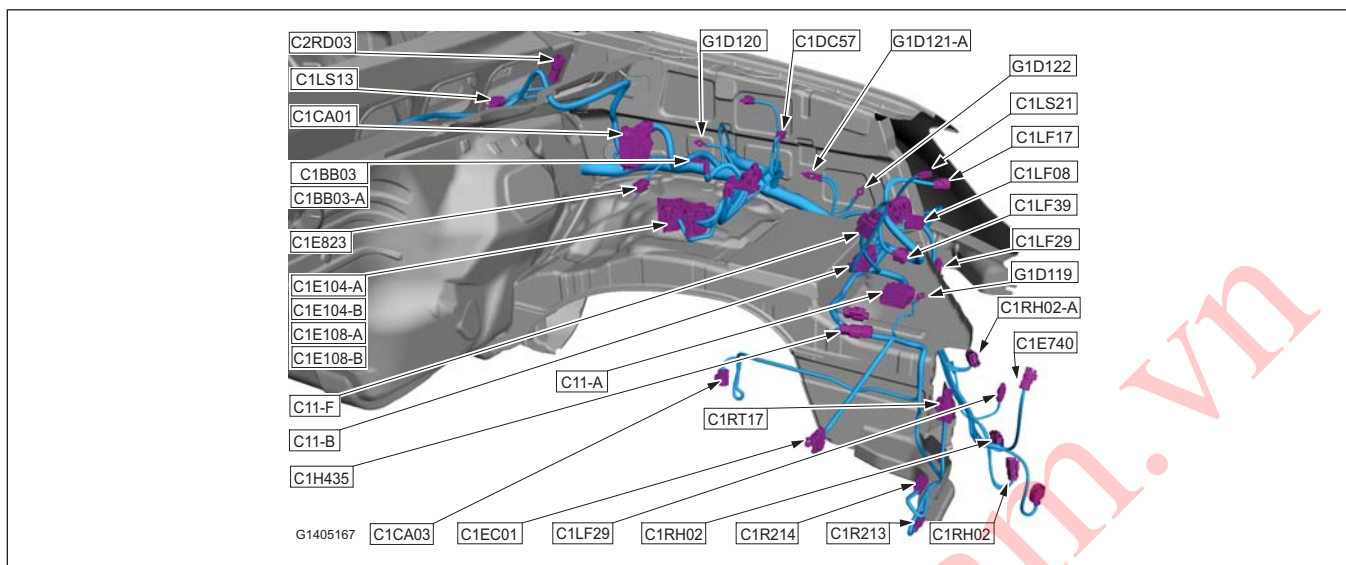


COMPONENT LOCATION

Engine Compartment Right-Hand View - LHD

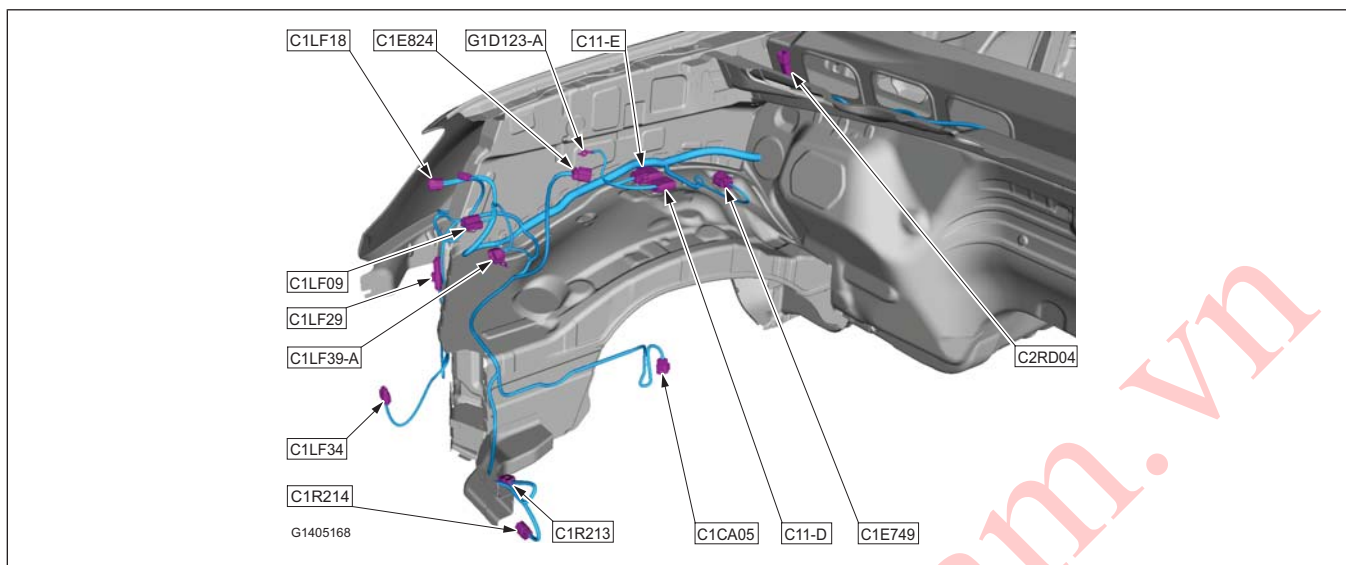


COMPONENT LOCATION

Engine Compartment Right-Hand View - RHD

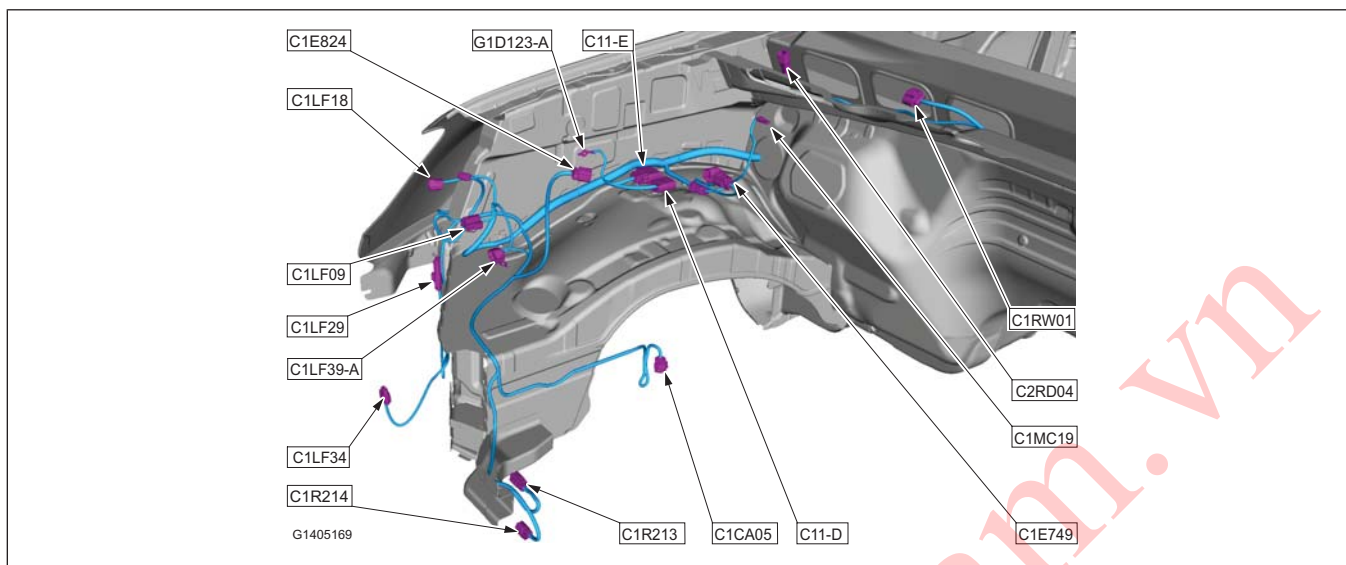


COMPONENT LOCATION

Engine Left-Hand View - 2.5L Duratec-HE (122kW/165PS) - MI4

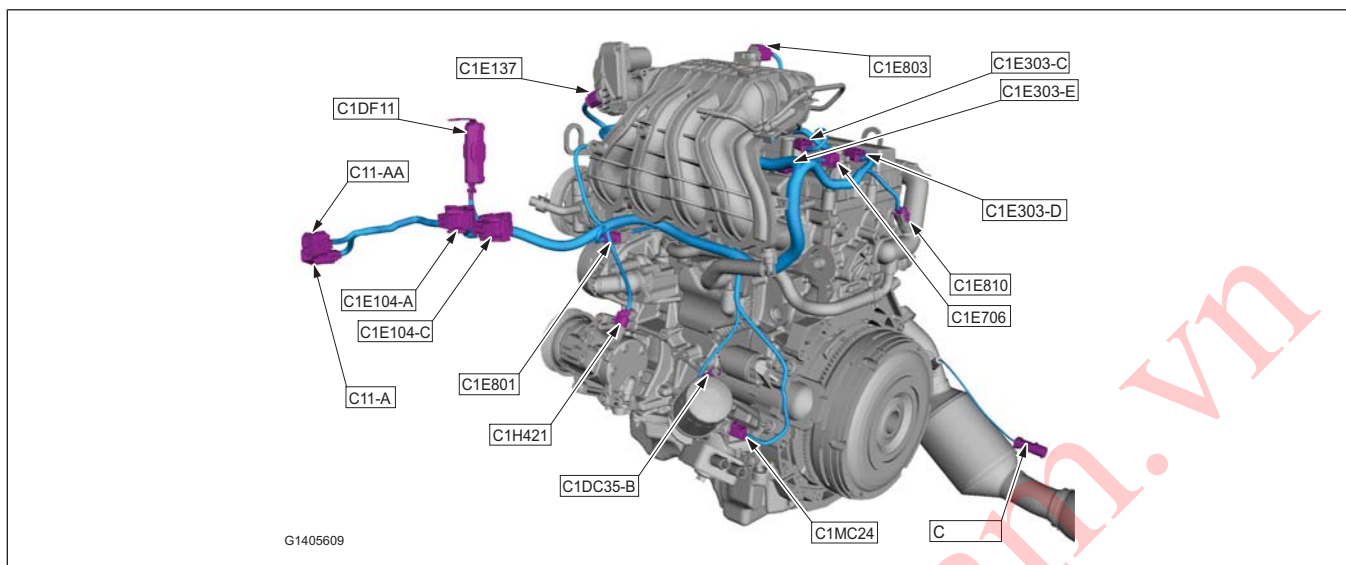


COMPONENT LOCATION

Engine Right-Hand View - 2.5L Duratec-HE (122kW/165PS) - MI4

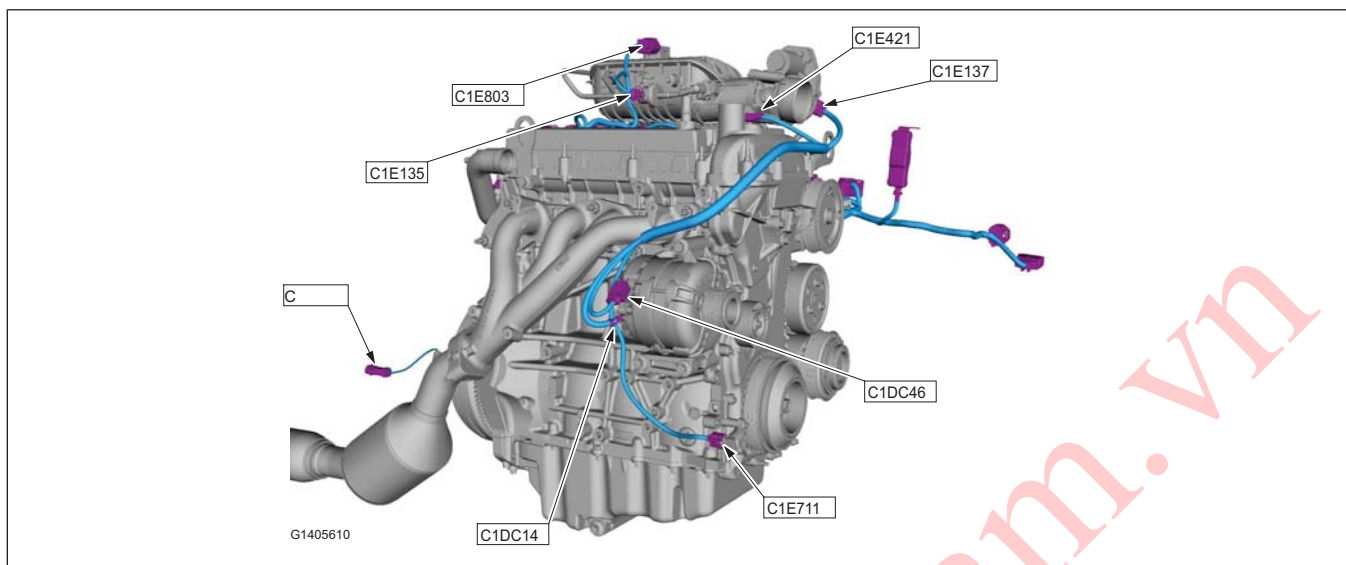


COMPONENT LOCATION

**Engine Left-Hand View - 2.5L Duratec-HE (122kW/165PS) - MI4,
Compressed Natural Gas (CNG)/Ethanol/Liquefied Petroleum Gas
(LPG)**

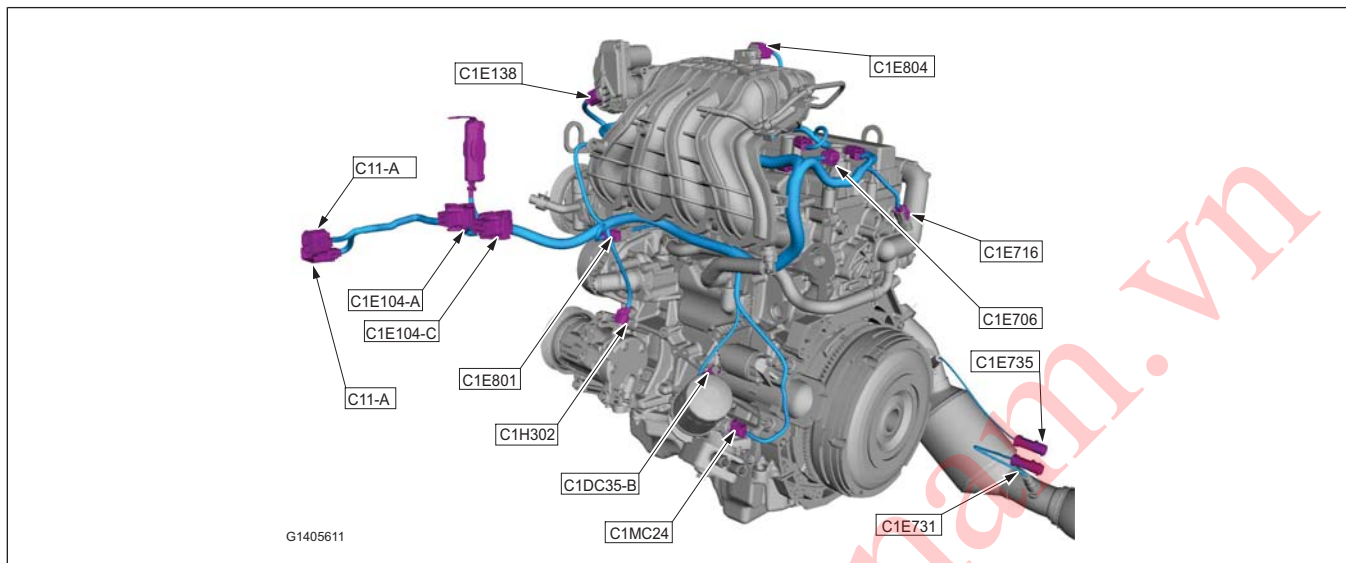


COMPONENT LOCATION

**Engine Right-Hand View - 2.5L Duratec-HE (122kW/165PS) - M14,
Compressed Natural Gas (CNG)/Ethanol/Liquefied Petroleum Gas
(LPG)**

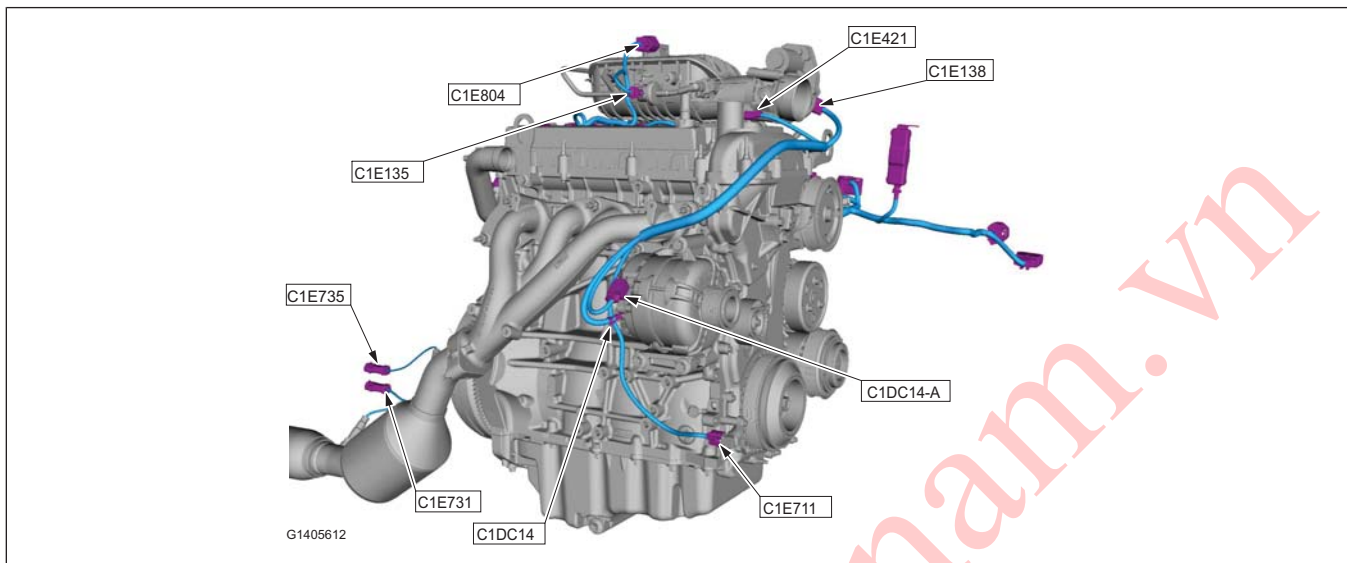


COMPONENT LOCATION

**Engine Upper View - 2.5L Duratec-HE (122kW/165PS) - MI4,
Compressed Natural Gas (CNG)/Ethanol/Liquefied Petroleum Gas
(LPG)**

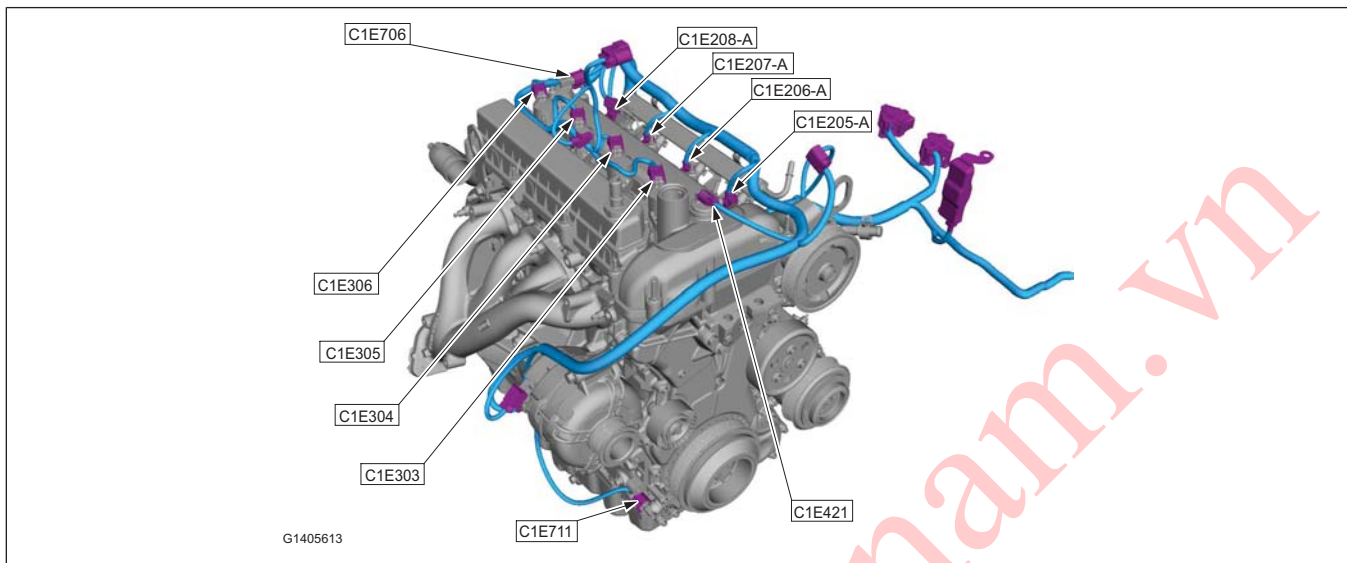


COMPONENT LOCATION

Engine Left-Hand View - 2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma

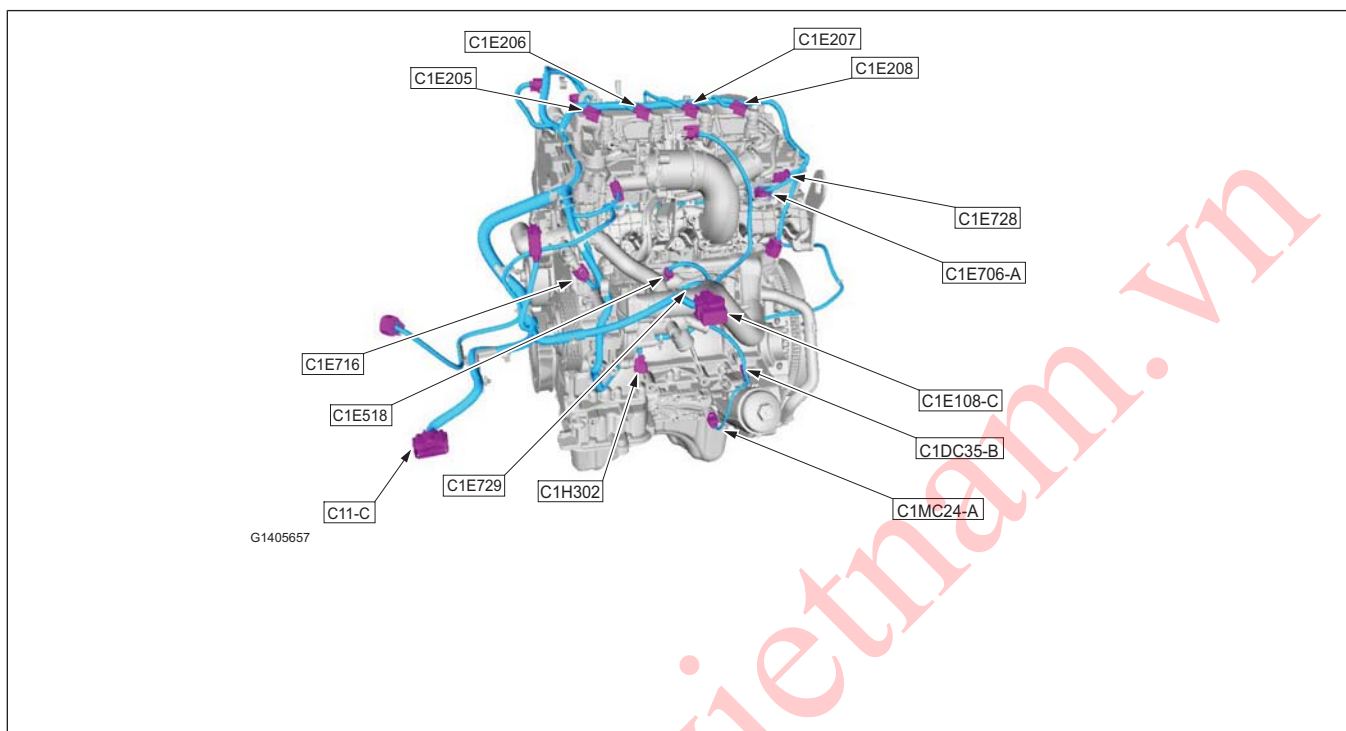


COMPONENT LOCATION

Engine Right-Hand View - 2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma

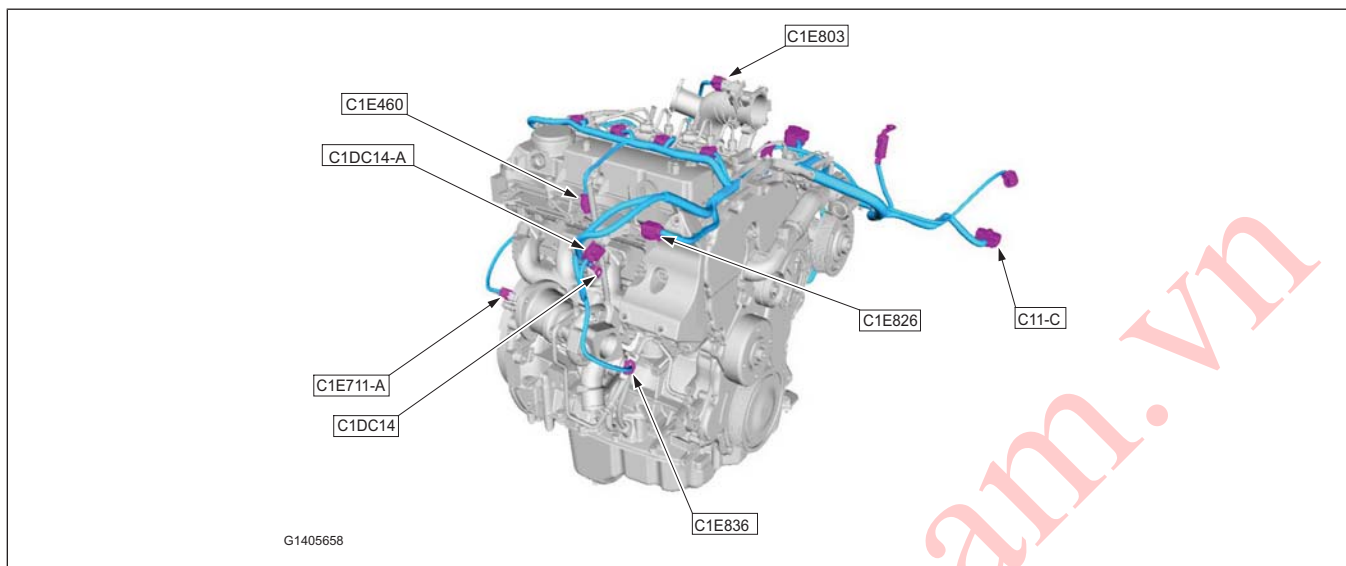


COMPONENT LOCATION

Engine Right-Hand View - 2.2L Duratorq-TDCi (110kW/150PS) - Puma

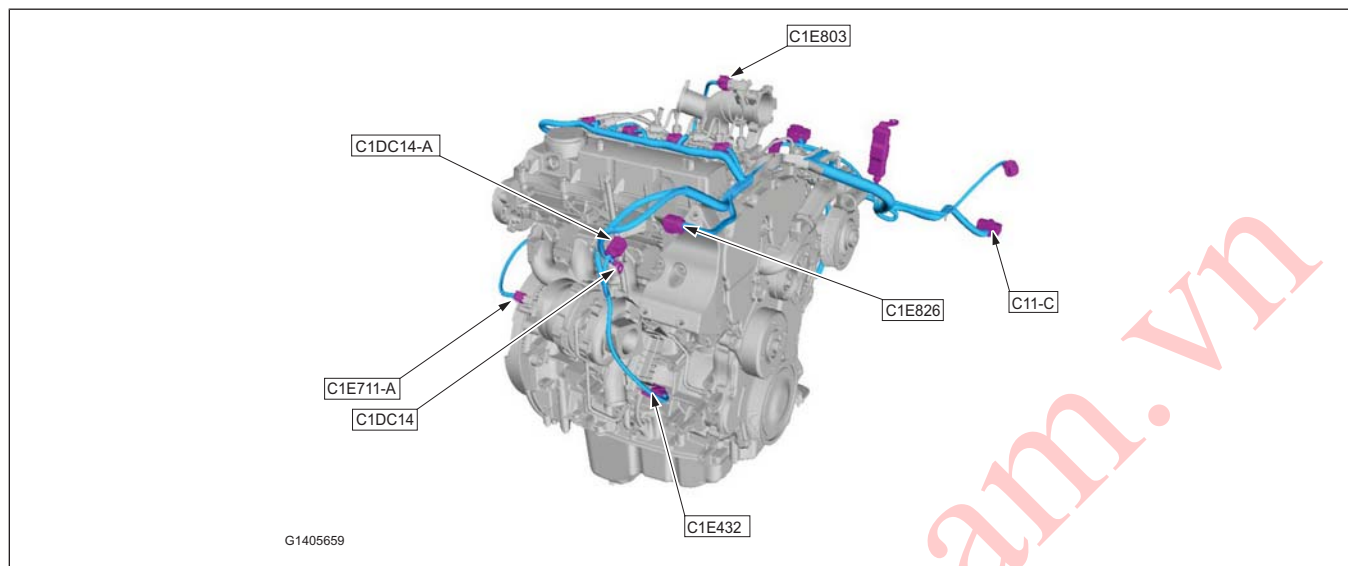


COMPONENT LOCATION

Engine Upper View - 2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma

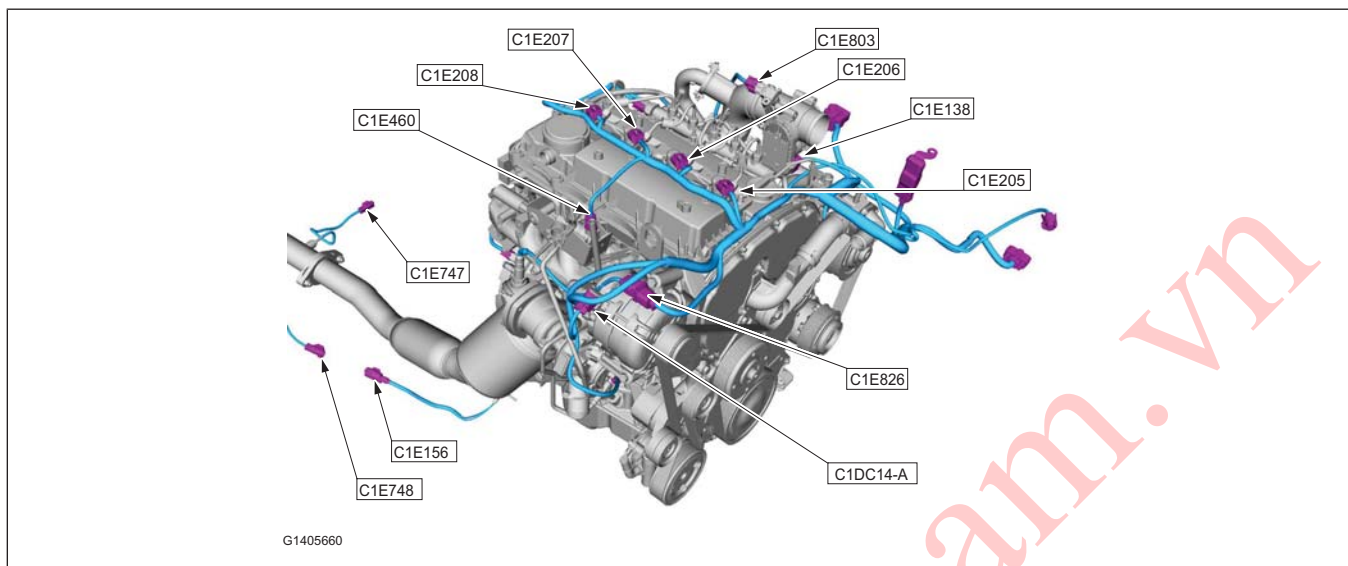


COMPONENT LOCATION

Engine Left-Hand View - 2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma

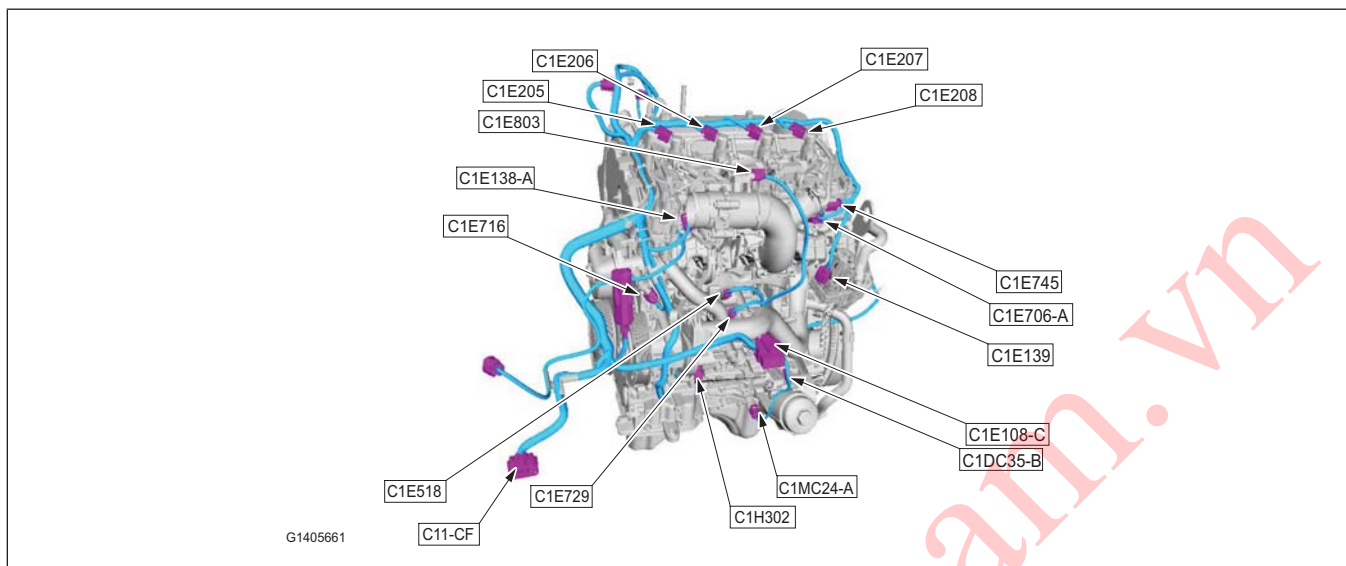


COMPONENT LOCATION

Engine Left-Hand View - 3.2L Duratorq-TDCi (148kW/200PS) - Puma

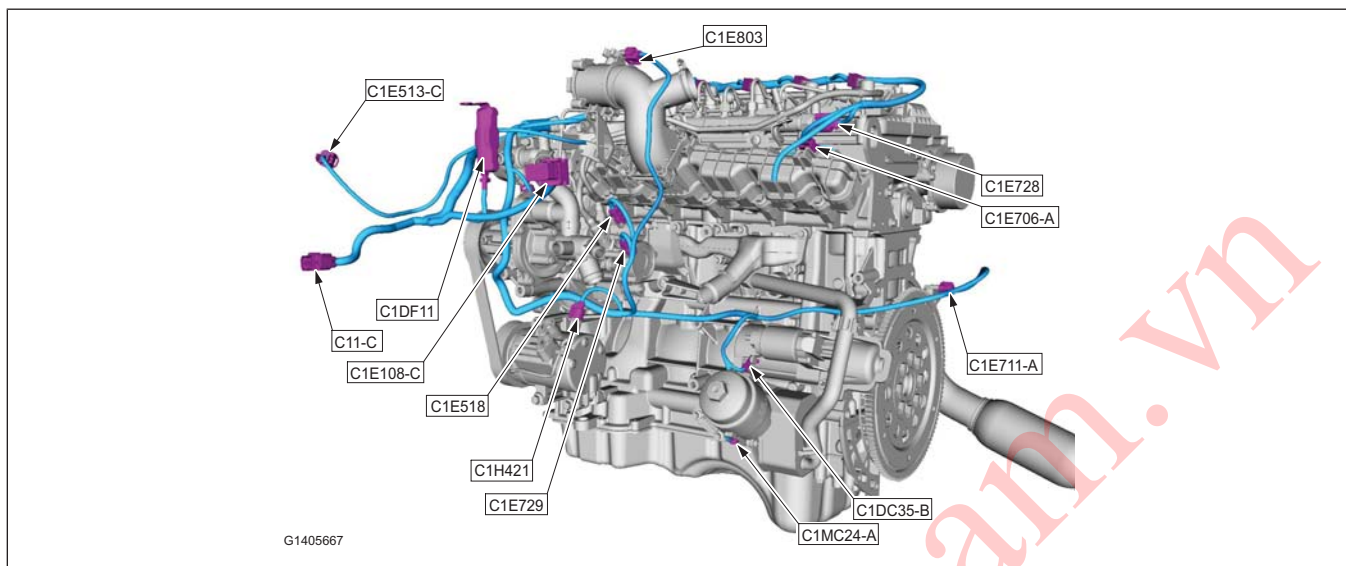


COMPONENT LOCATION

Engine Right-Hand View - 3.2L Duratorq-TDCi (148kW/200PS) - Puma

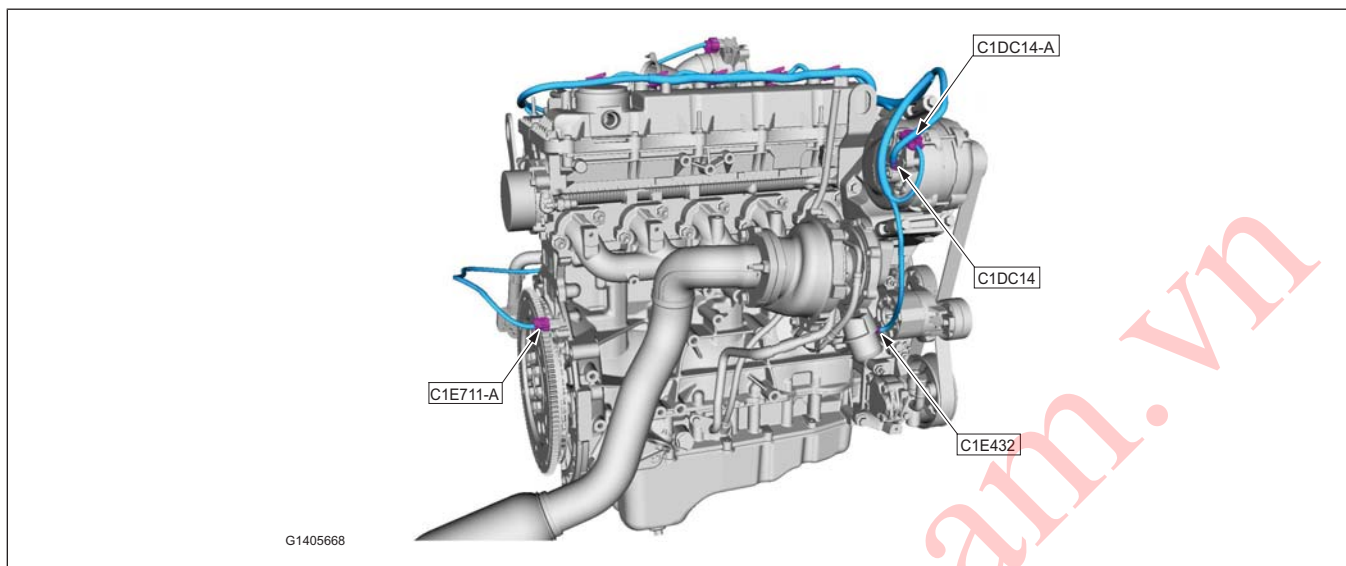


COMPONENT LOCATION

Engine Upper View - 3.2L Duratorq-TDCi (148kW/200PS) - Puma

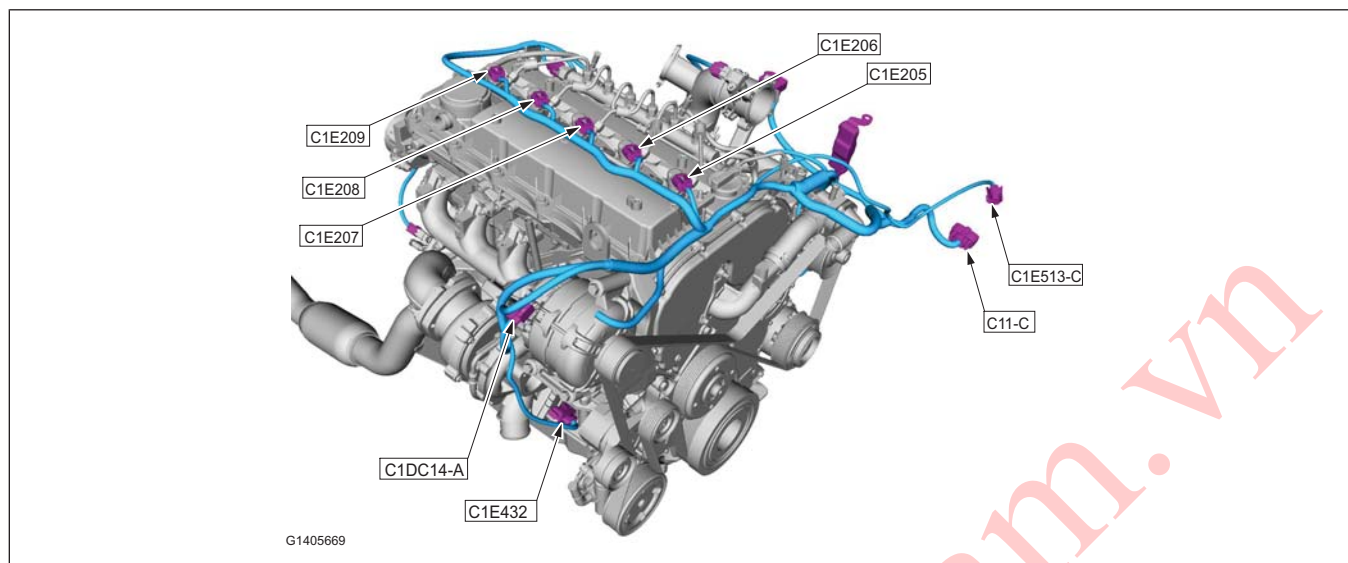


COMPONENT LOCATION

Engine Left-Hand View - 3.2L Duratorq-TDCi (148kW/200PS) - Puma

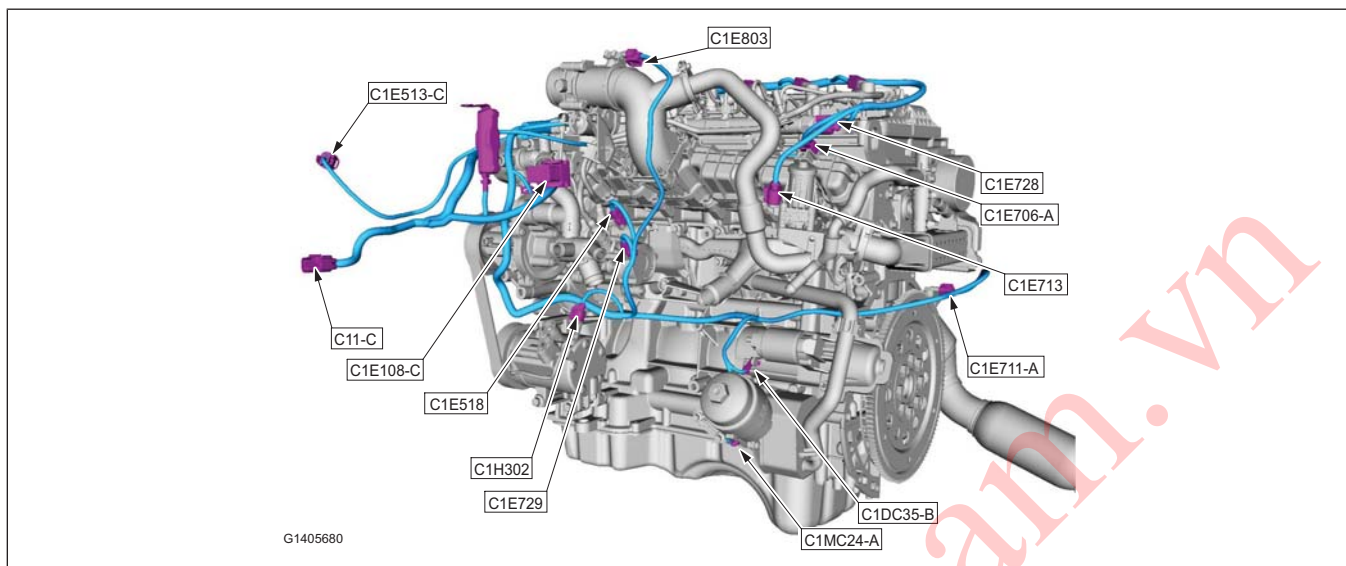


COMPONENT LOCATION

Engine Right-Hand View - 3.2L Duratorq-TDCi (148kW/200PS) - Puma

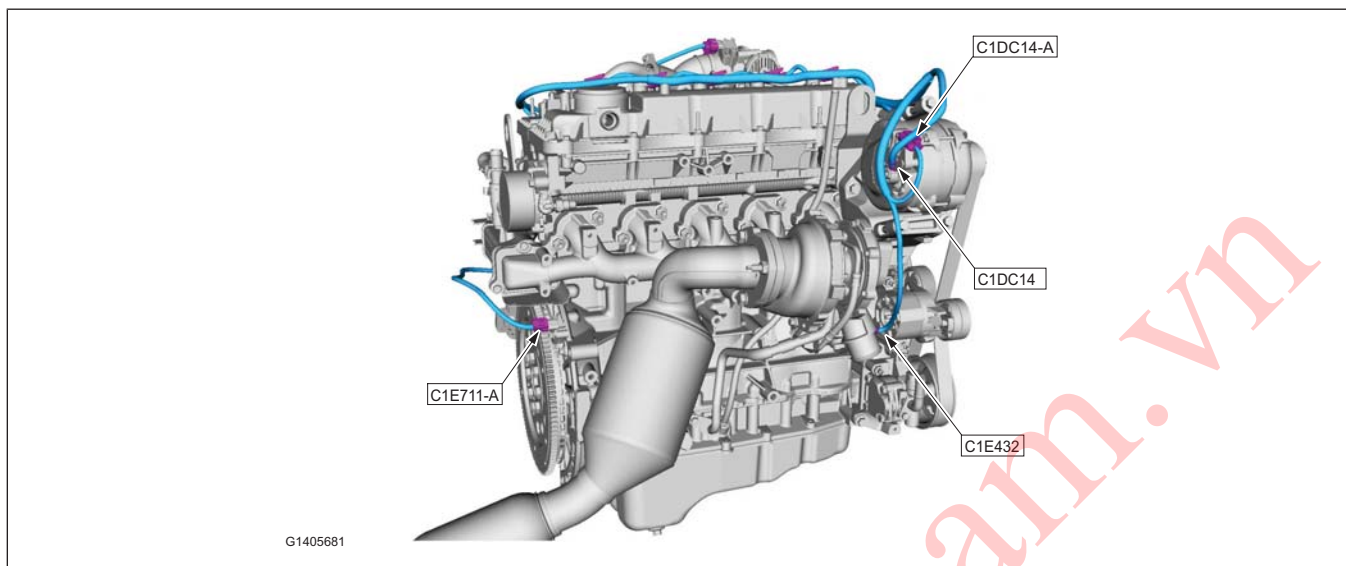


COMPONENT LOCATION

Engine Upper View - 3.2L Duratorq-TDCi (148kW/200PS) - Puma

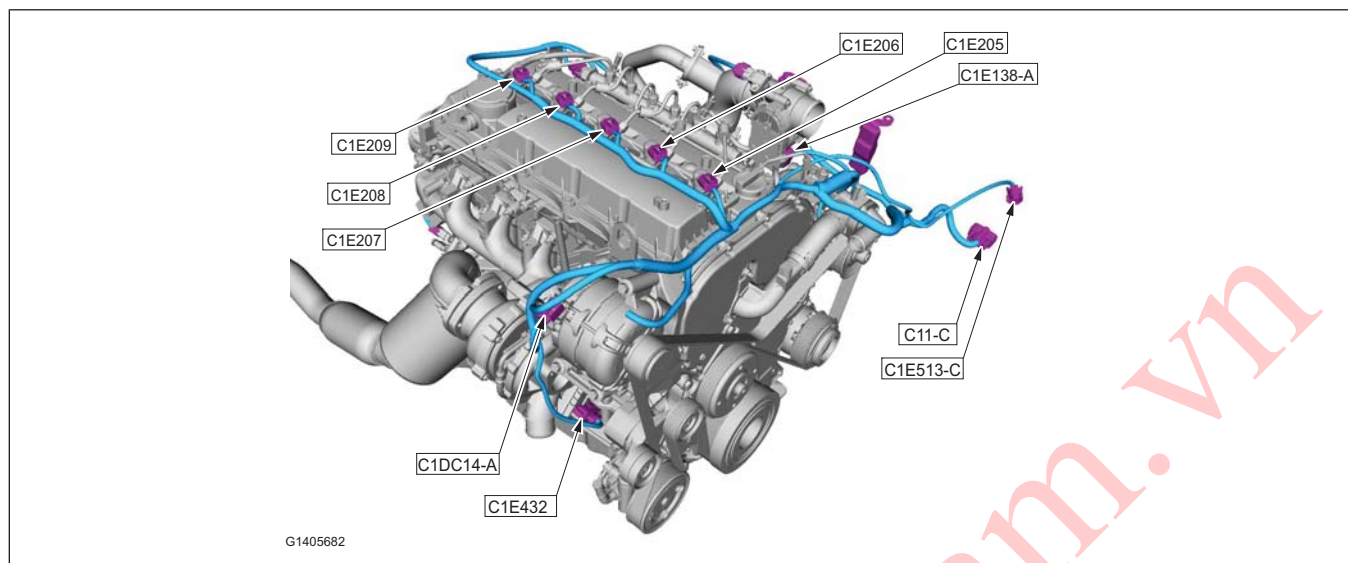


COMPONENT LOCATION

Front Fender LH

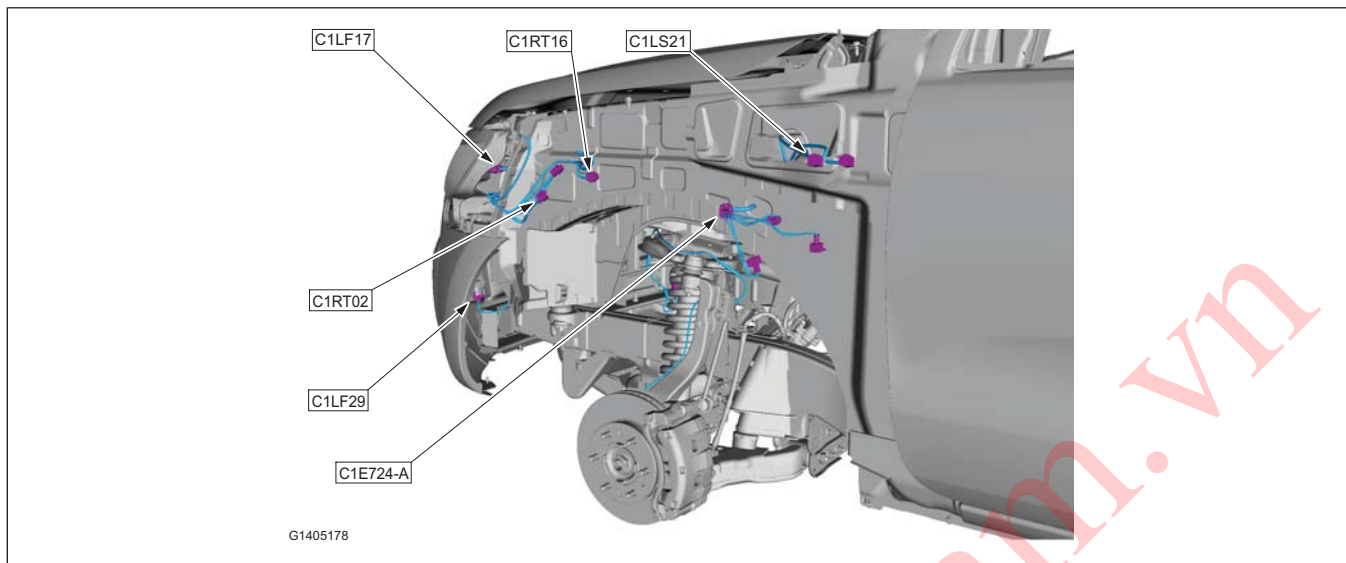


COMPONENT LOCATION

Front Fender RH

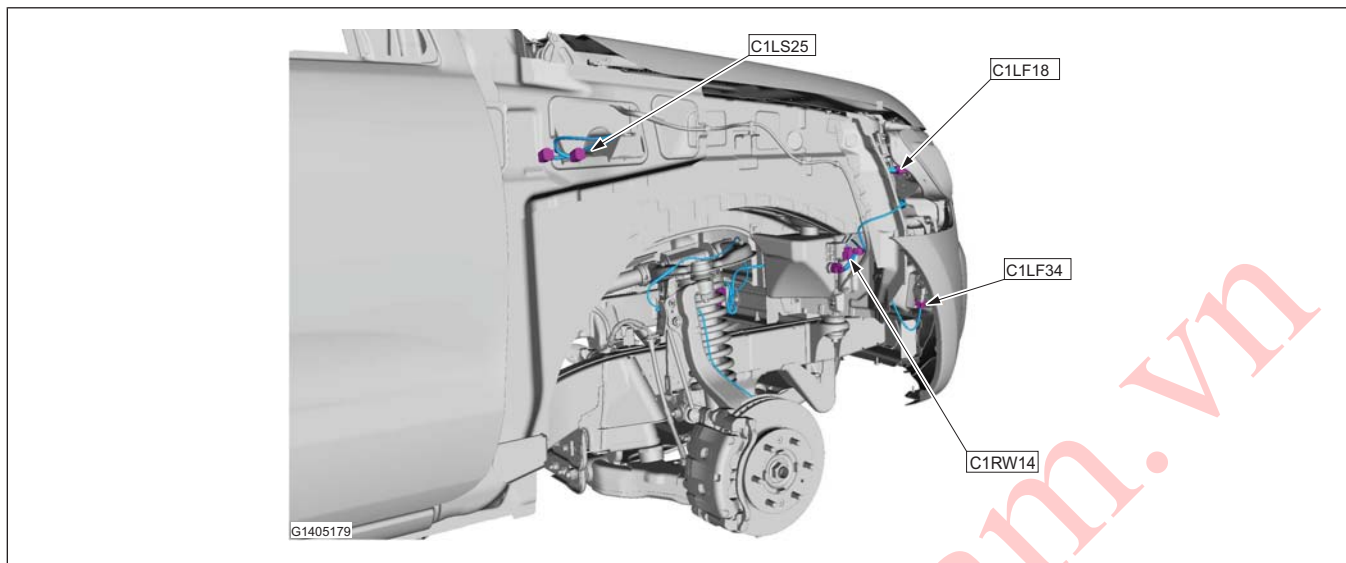

COMPONENT LOCATION

Front Floor Left-Hand View - Single Cab, LHD

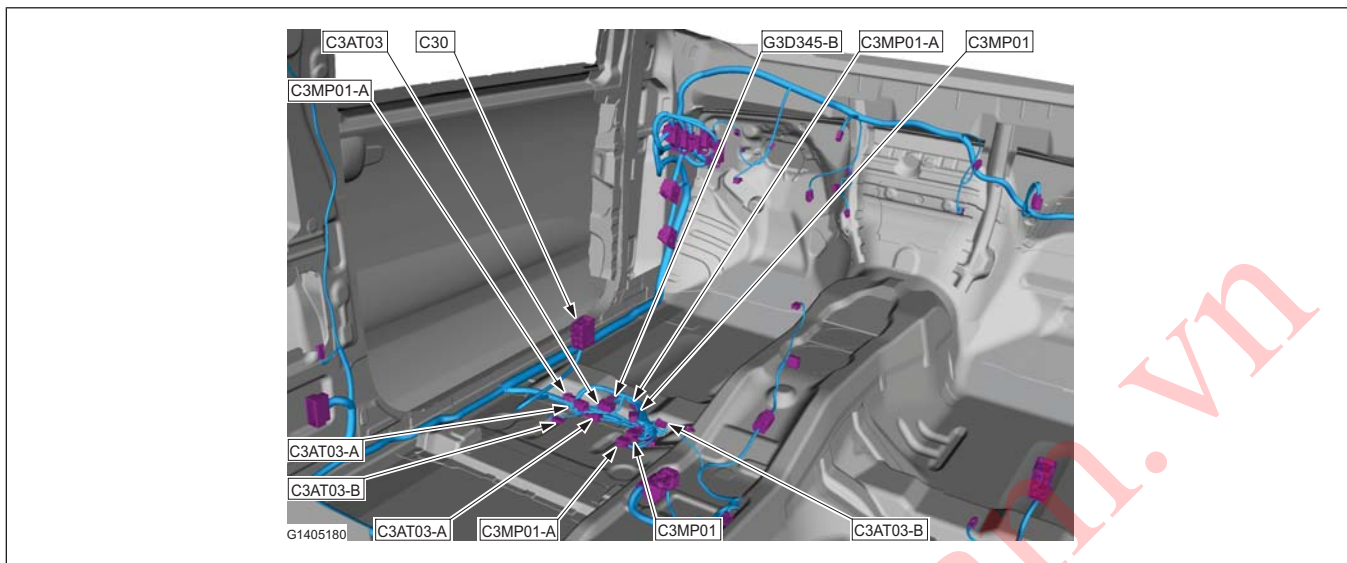


COMPONENT LOCATION

Front Floor Right-Hand View - Single Cab, LHD




COMPONENT LOCATION

Front Floor Left-Hand View - Double Cab, LHD

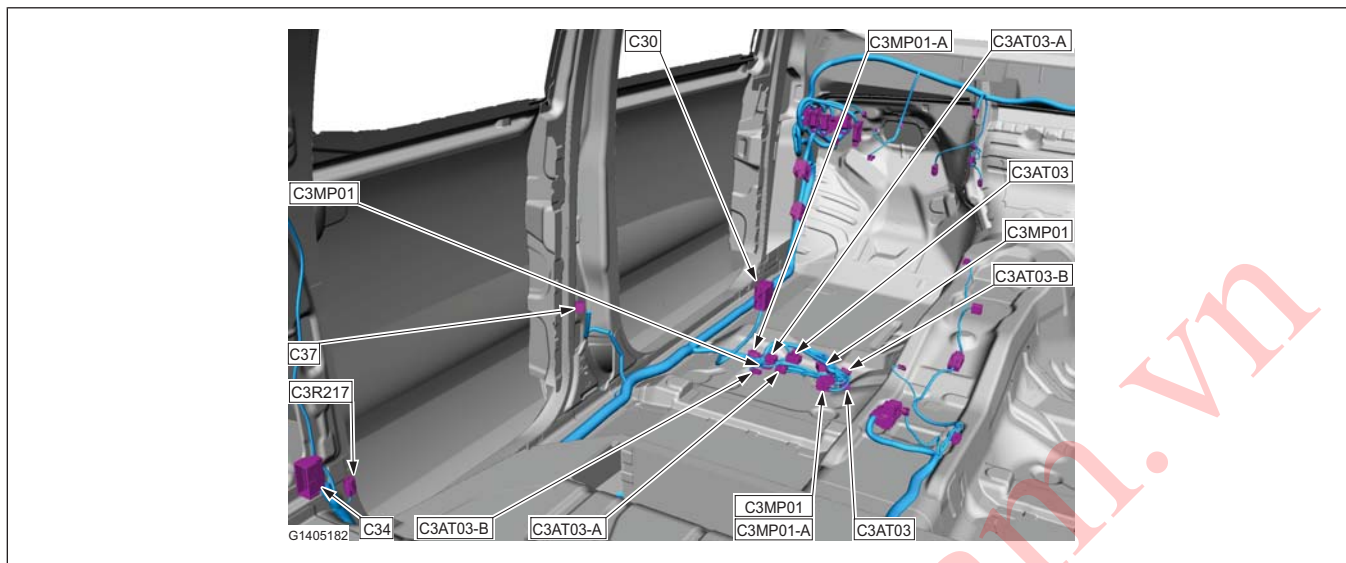


COMPONENT LOCATION

Front Floor Right-Hand View - Double Cab, LHD

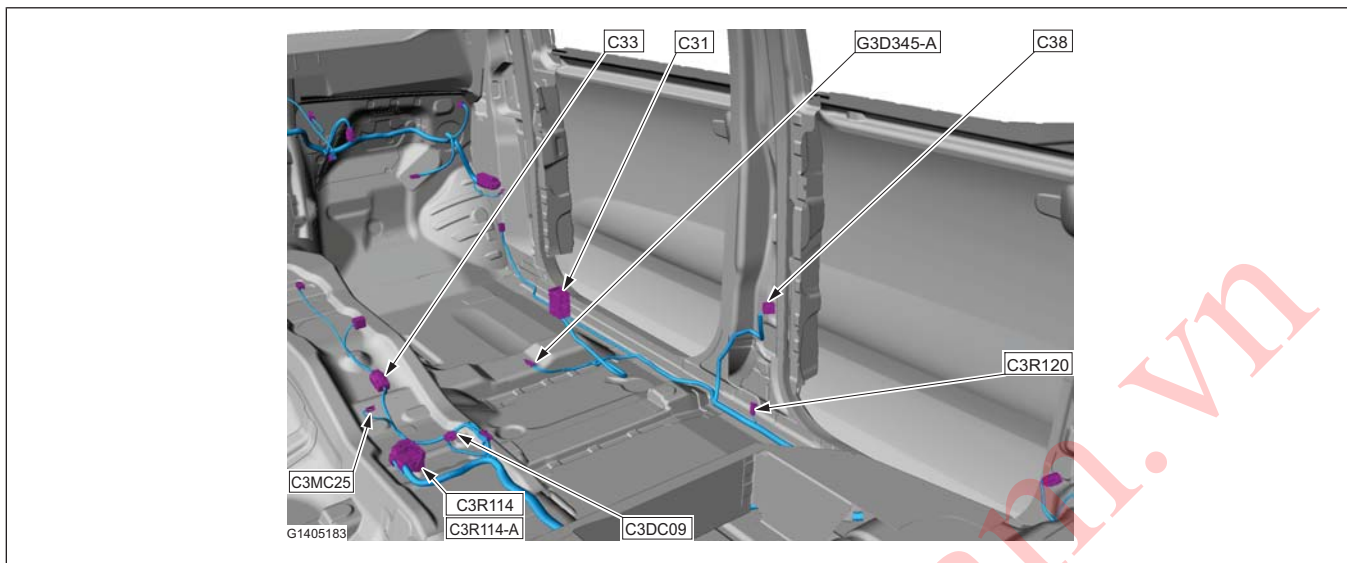


COMPONENT LOCATION

Front Floor Left-Hand View - Super Cab, LHD

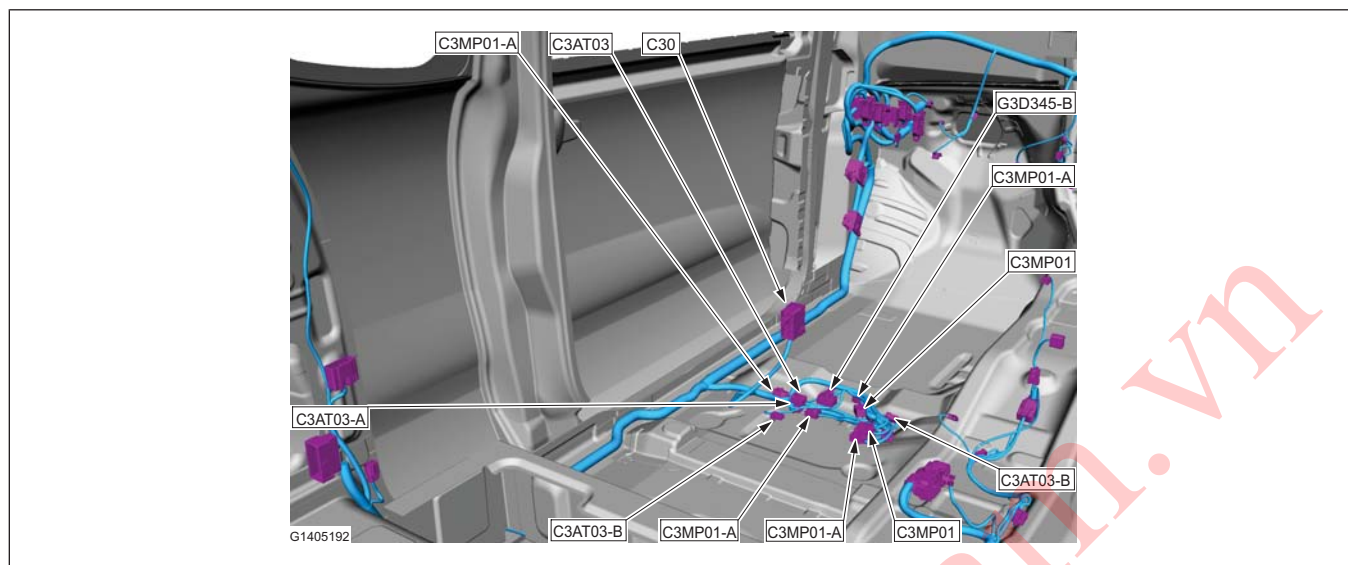


COMPONENT LOCATION

Front Floor Right-Hand View - Super Cab, LHD

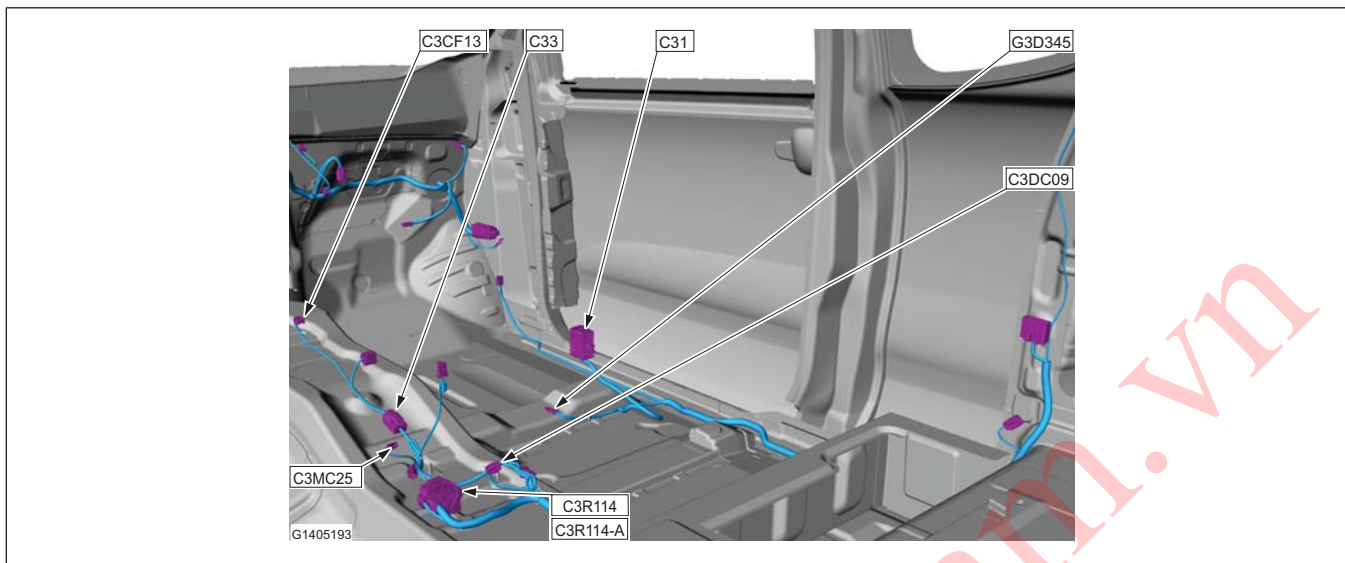


COMPONENT LOCATION

Front Floor Left-Hand View - Single Cab, RHD

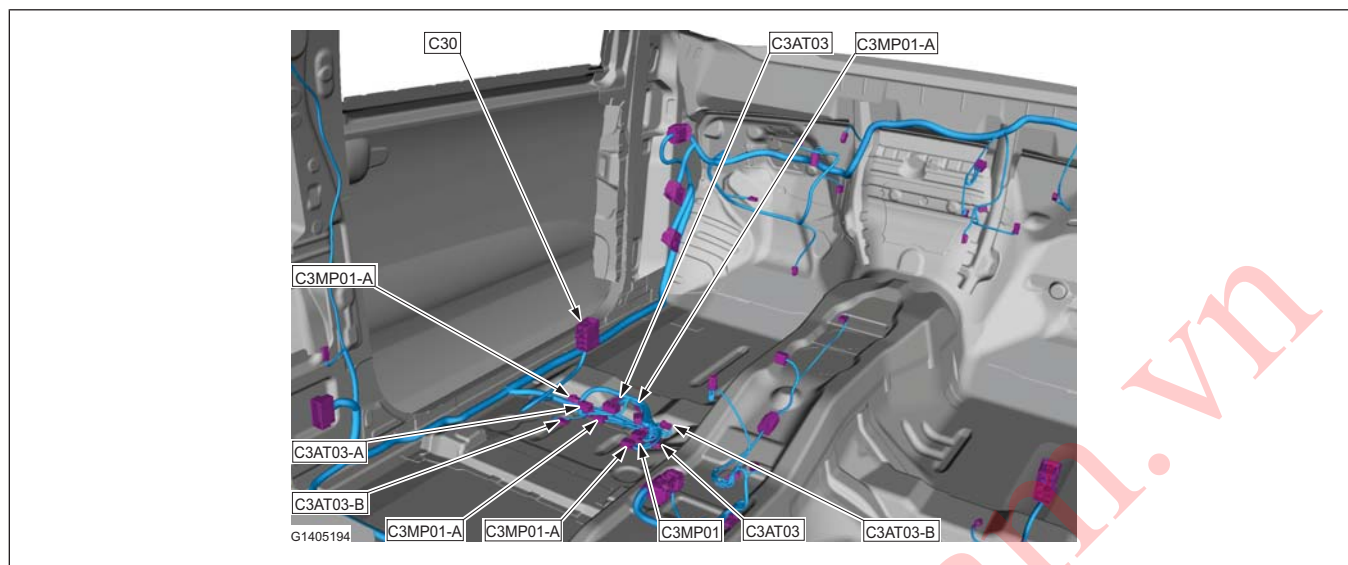


COMPONENT LOCATION

Front Floor Right-Hand View - Single Cab, RHD

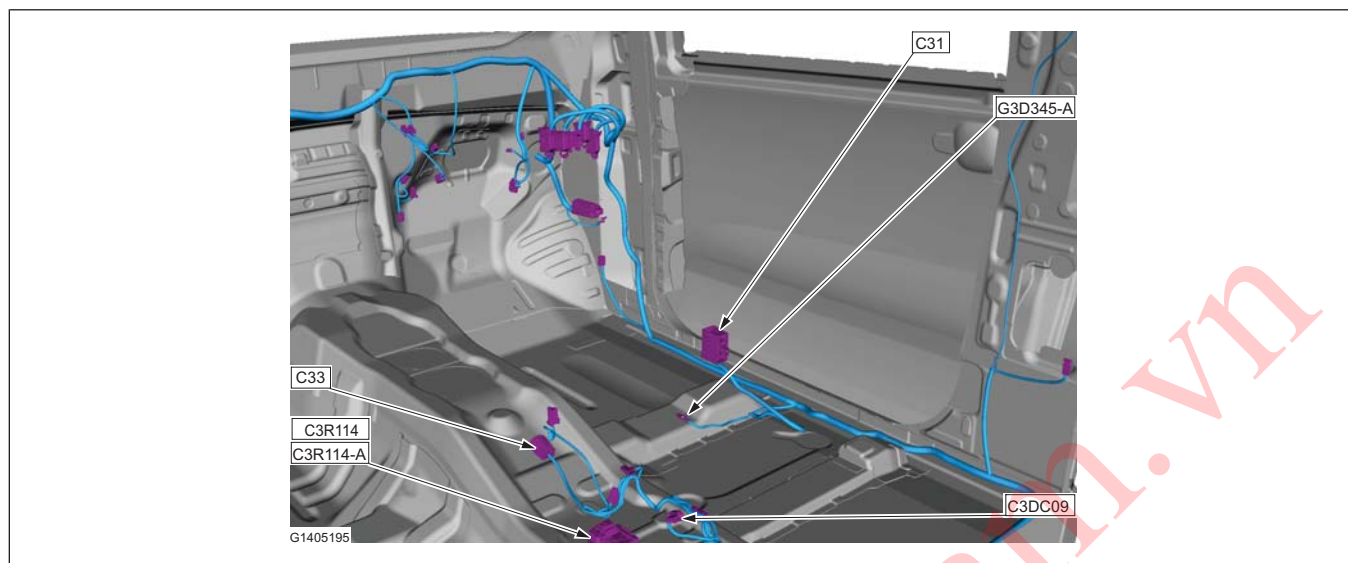


COMPONENT LOCATION

Front Floor Left-Hand View - Double Cab, RHD

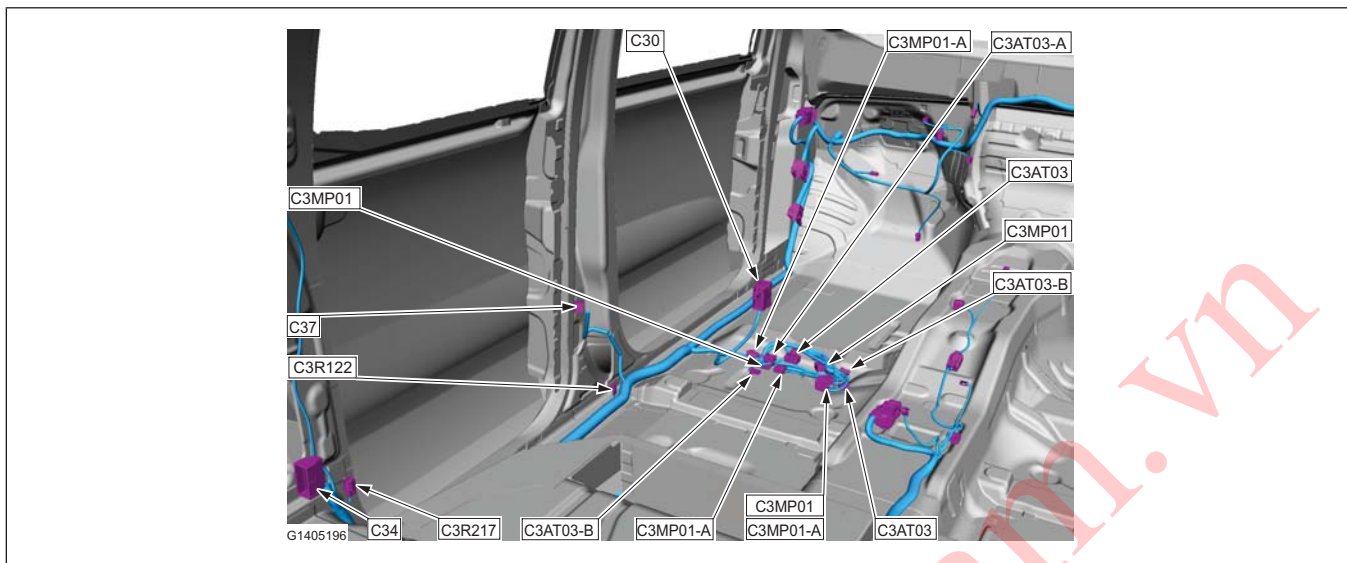


COMPONENT LOCATION

Front Floor Right-Hand View - Double Cab, RHD

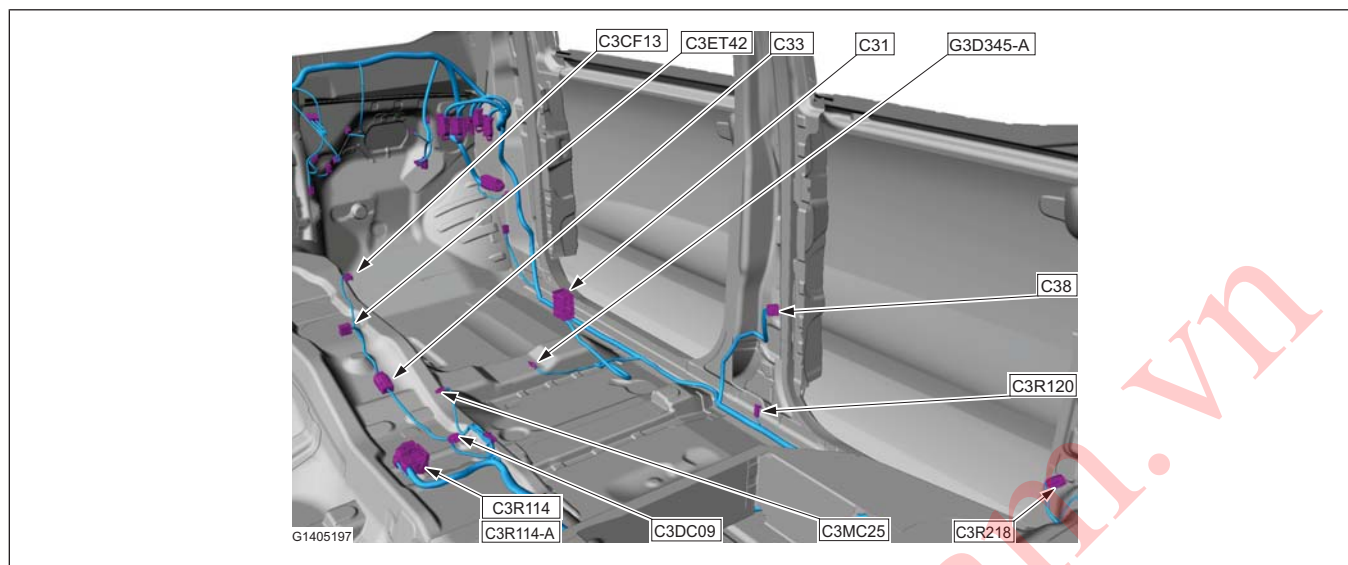


COMPONENT LOCATION

Front Floor Left-Hand View - Super Cab, RHD

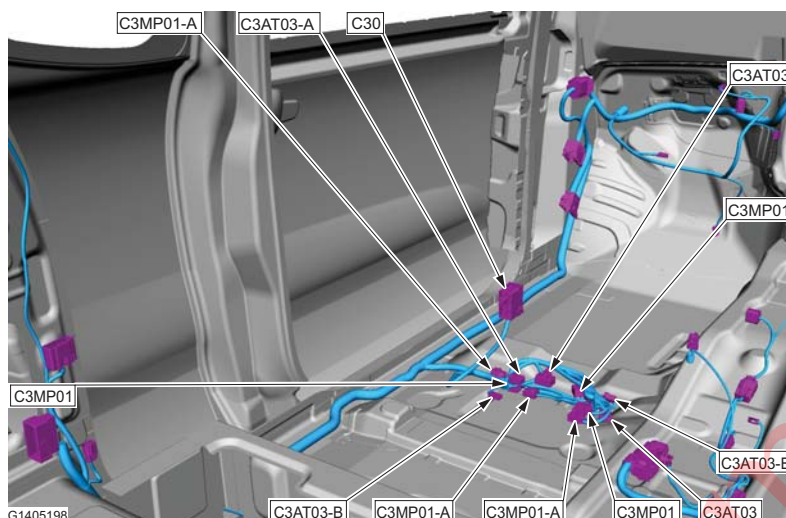


COMPONENT LOCATION

Front Floor Right-Hand View - Super Cab, RHD

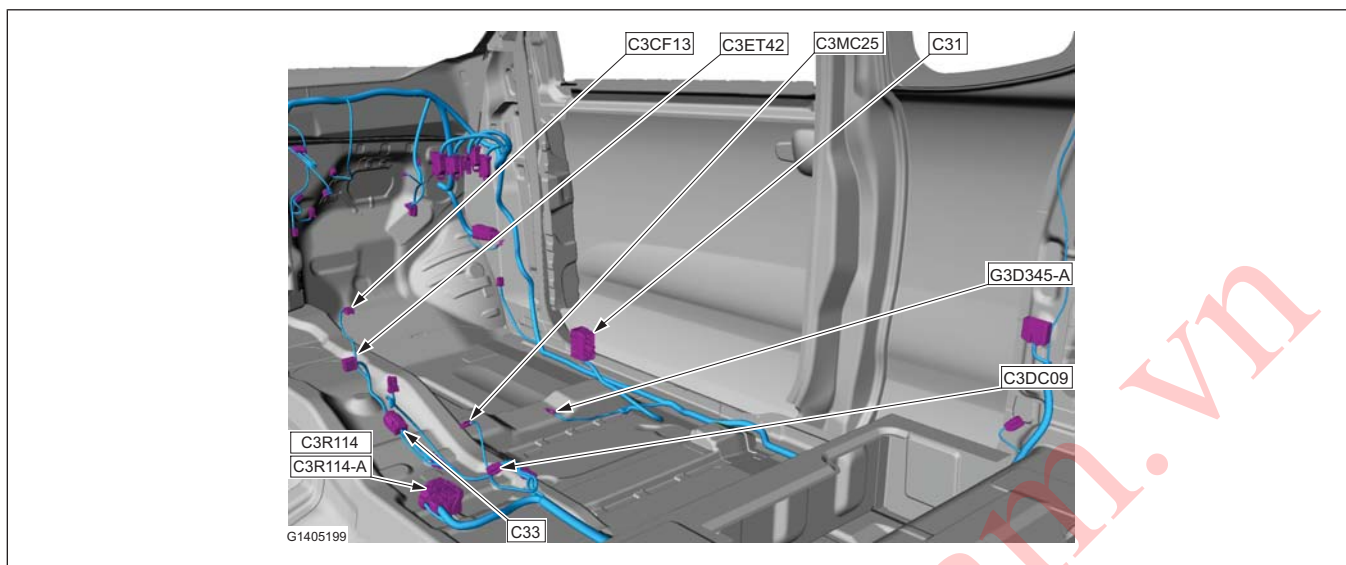


COMPONENT LOCATION

Fuel Tank

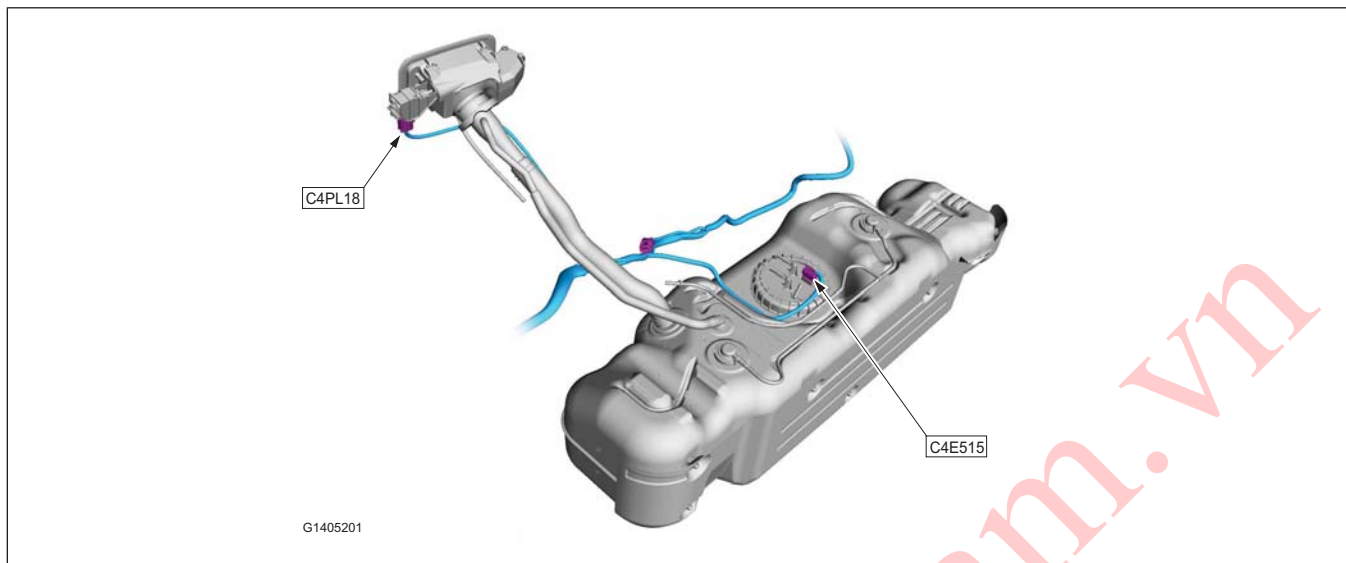


COMPONENT LOCATION

Headliner - Single Cab, LHD

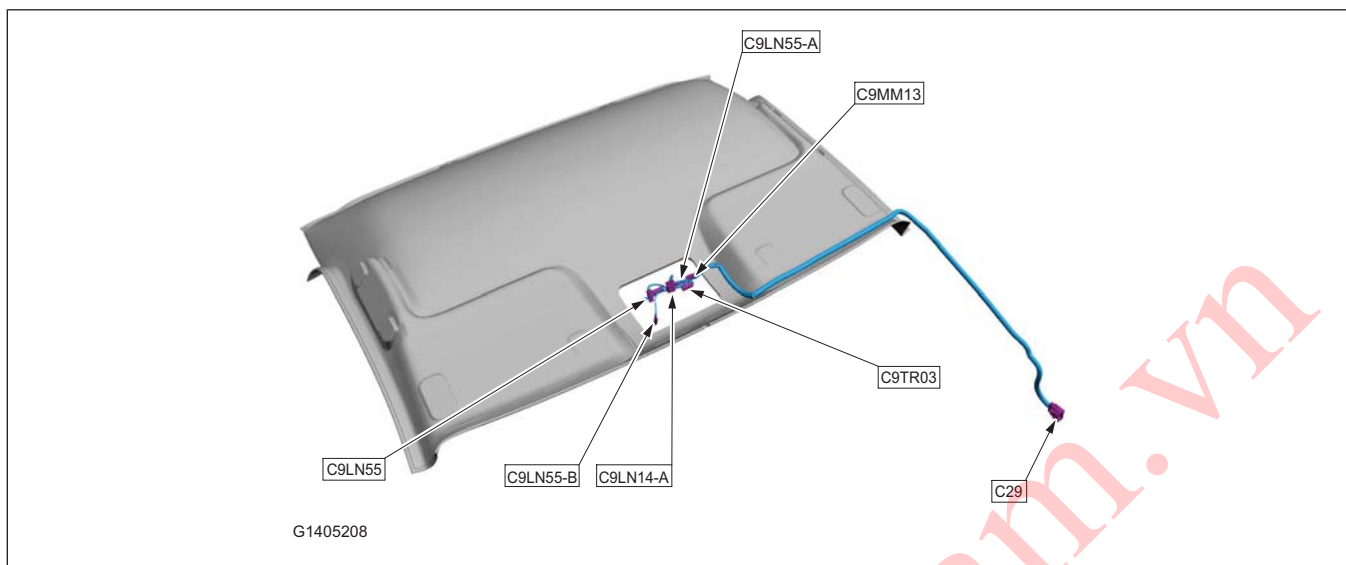


COMPONENT LOCATION

Headliner - Double Cab, LHD

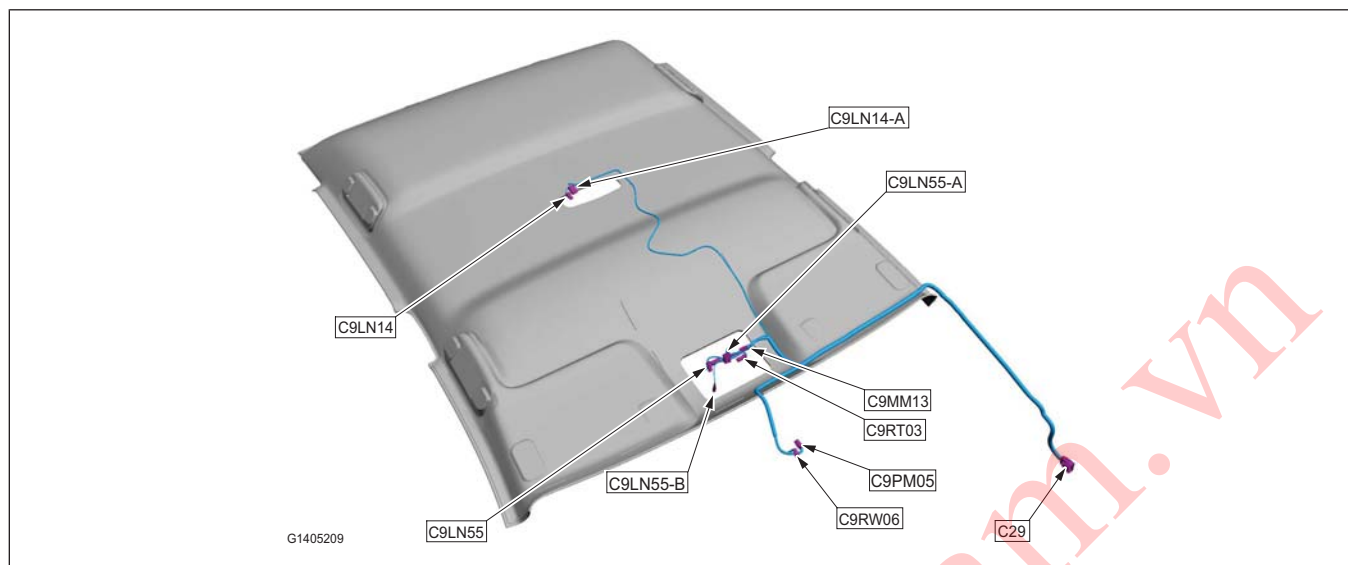


COMPONENT LOCATION

Headliner - Super Cab, LHD

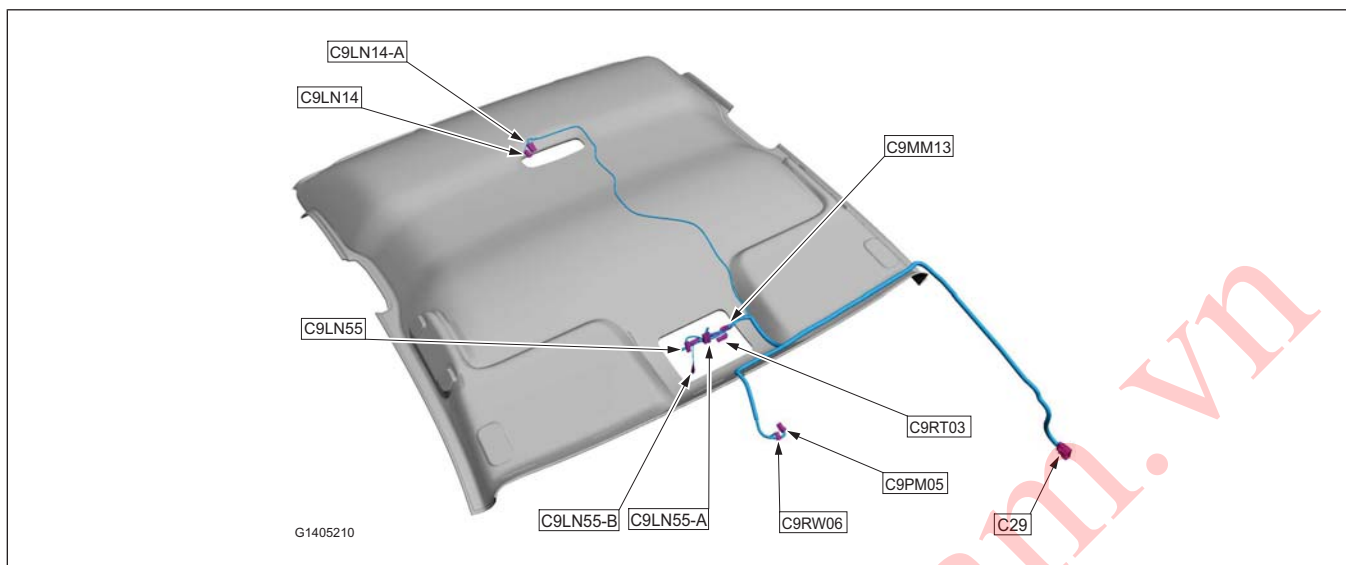


COMPONENT LOCATION

Headliner - Single Cab, RHD

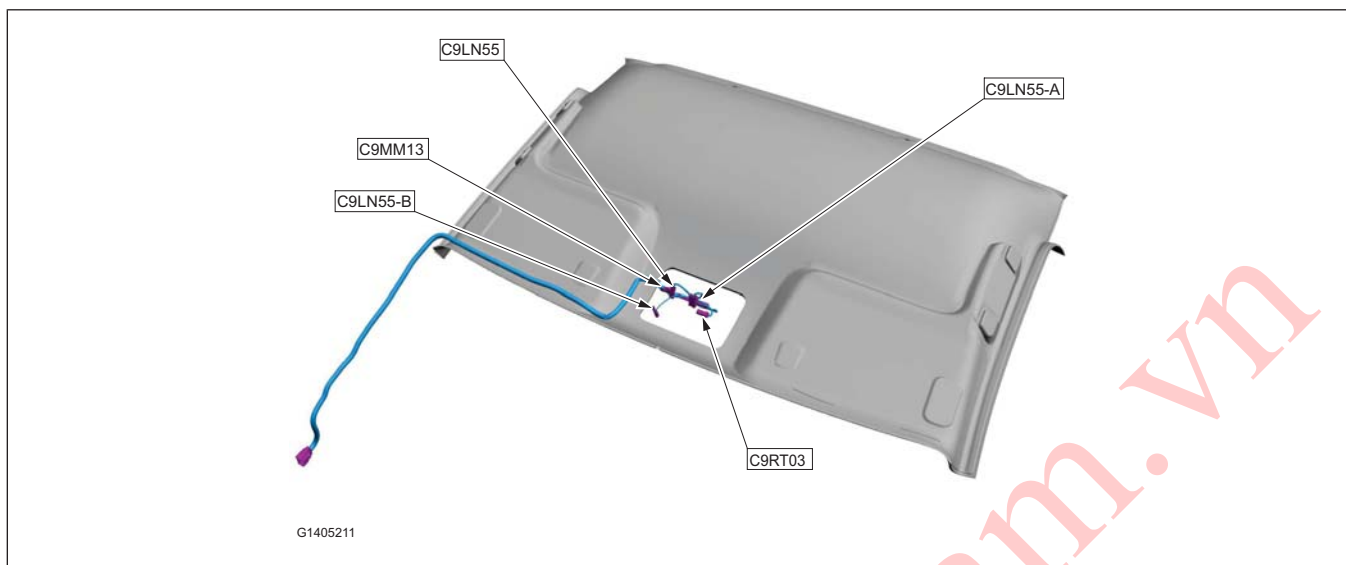


COMPONENT LOCATION

Headliner - Double Cab, RHD

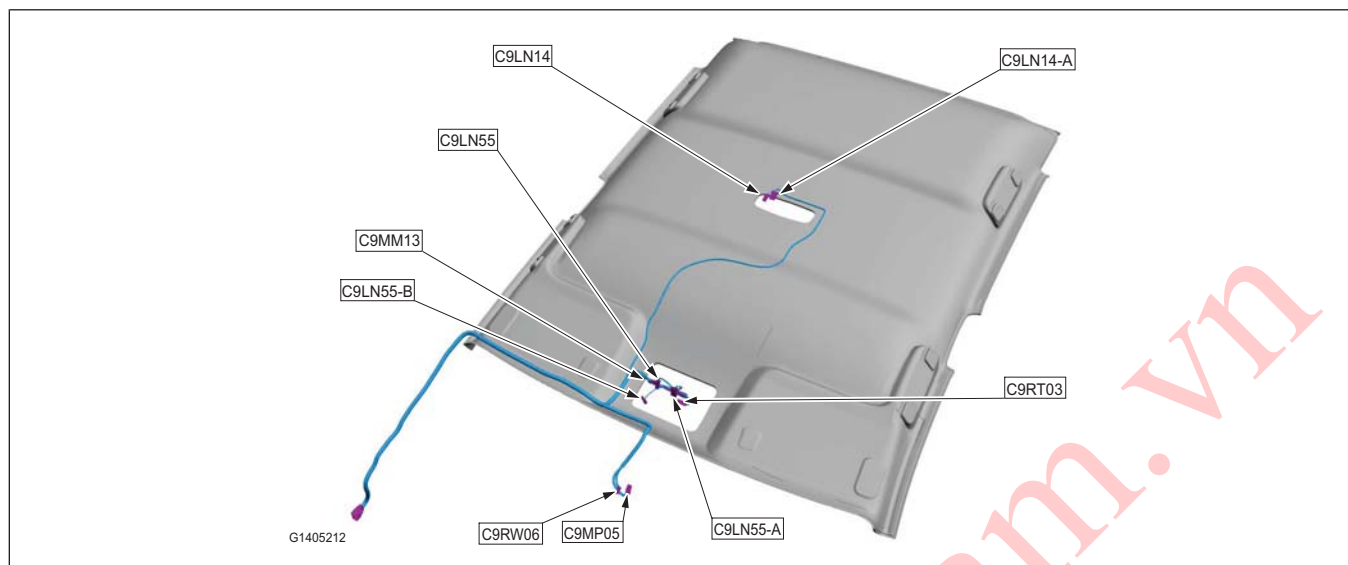


COMPONENT LOCATION

Headliner - Super Cab, RHD

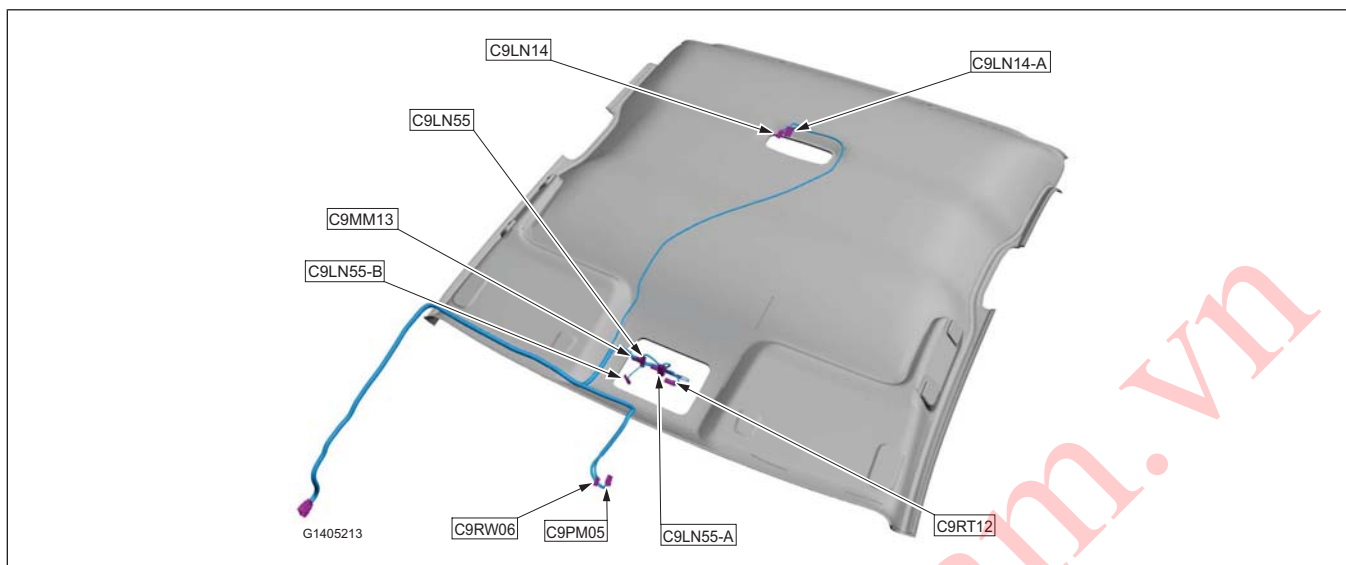


COMPONENT LOCATION

Instrument Panel - LHD

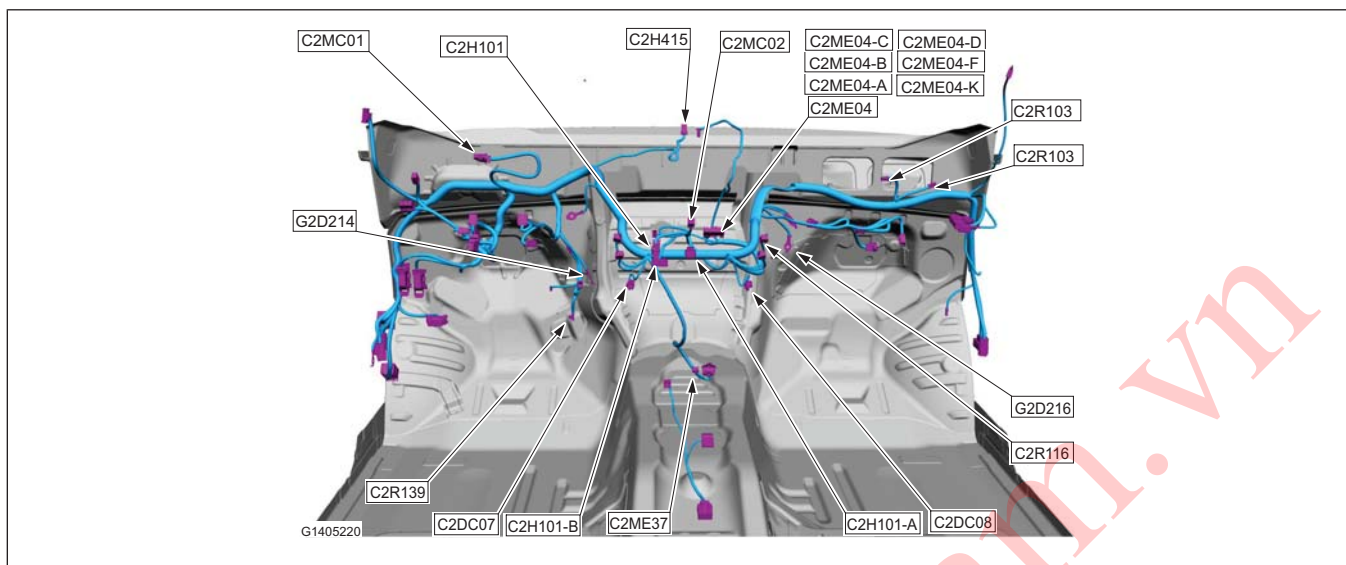


COMPONENT LOCATION

Instrument Panel - RHD

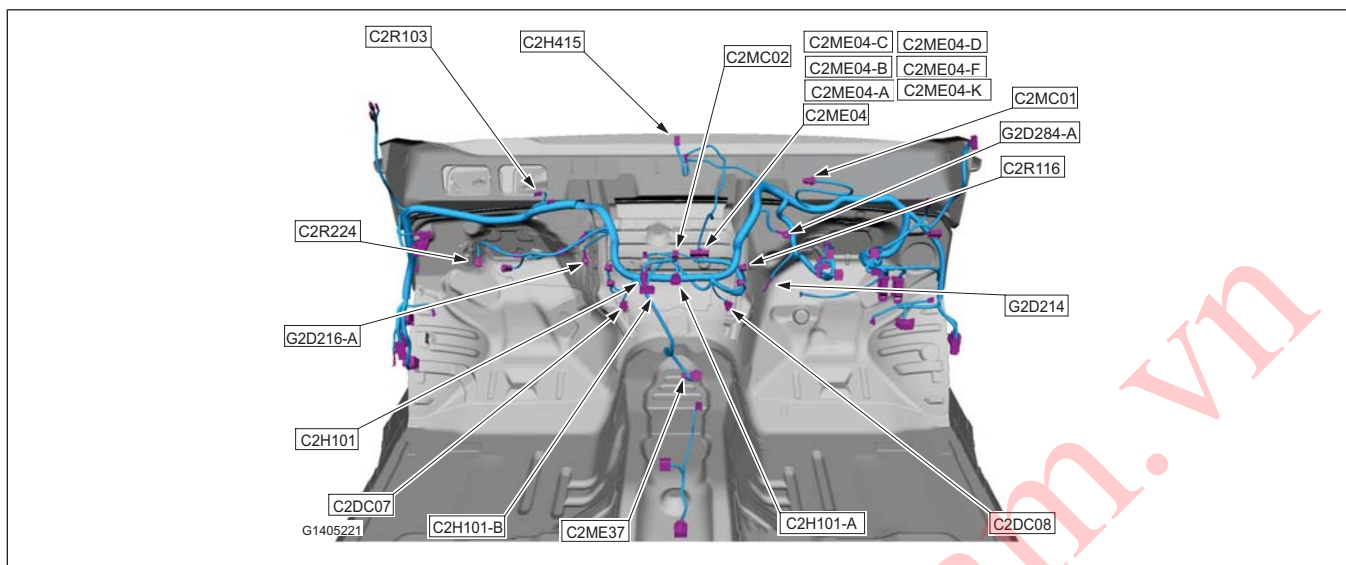


COMPONENT LOCATION

Passenger Door Interior View - Double Cab, LHD

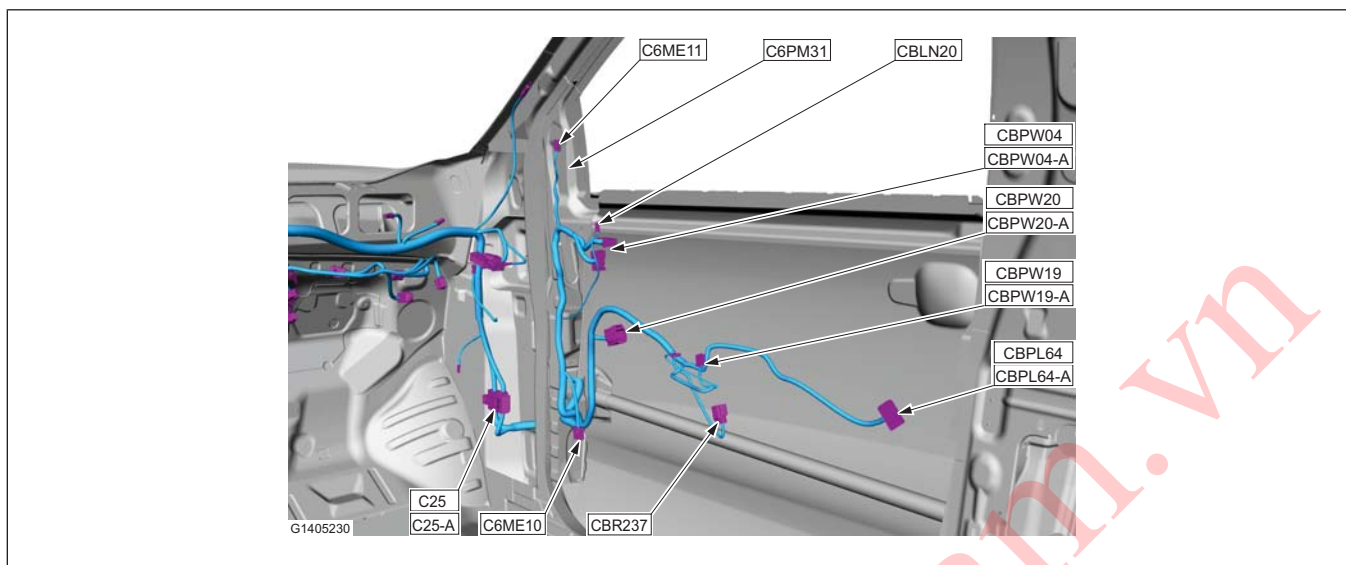


COMPONENT LOCATION

Passenger Door Interior View - Single Cab/Super Cab, LHD

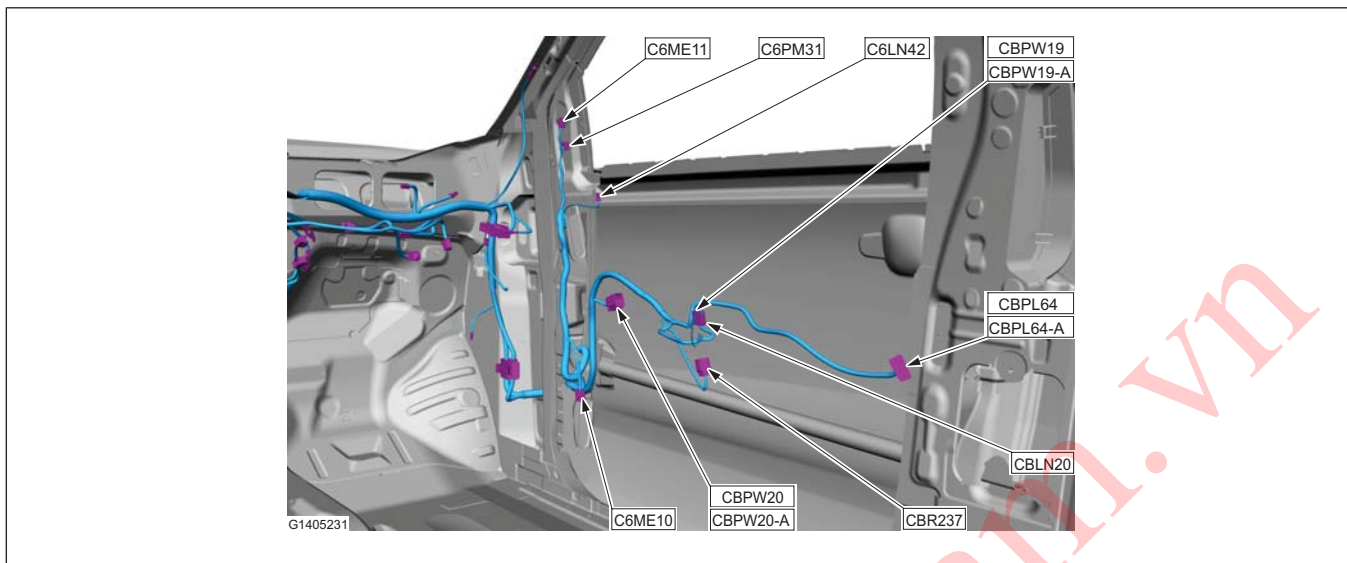


COMPONENT LOCATION

Passenger Door Interior View - Double Cab, RHD

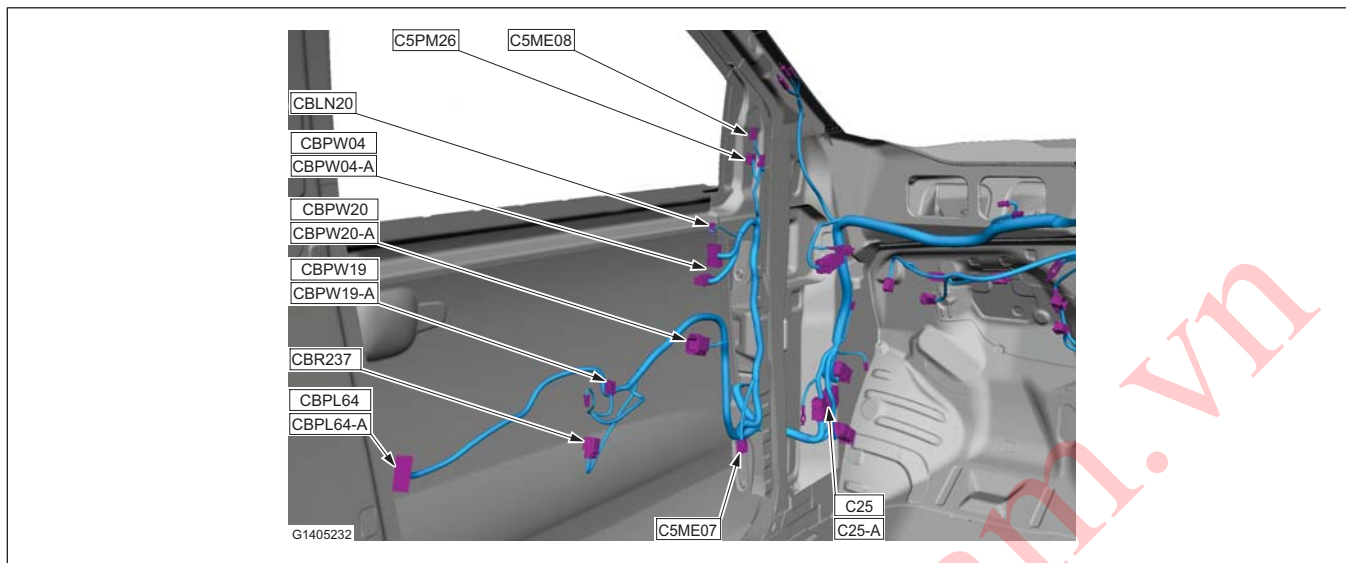


COMPONENT LOCATION

Passenger Door Interior View - Single Cab/Super Cab, RHD

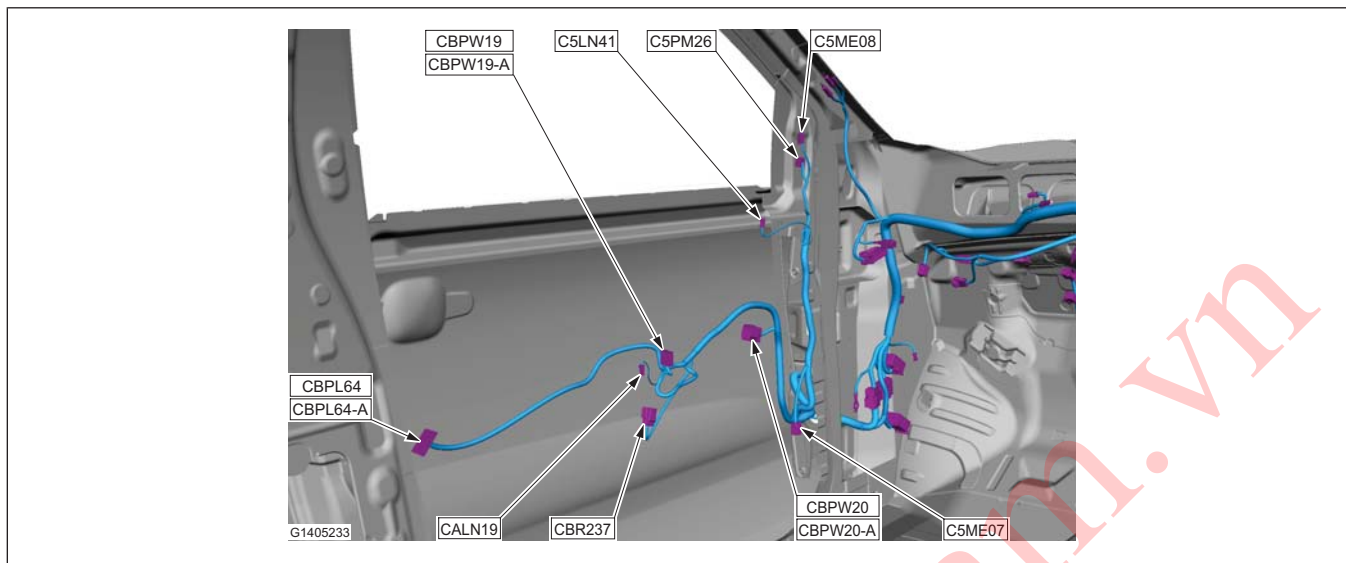


COMPONENT LOCATION

Rear Bumper

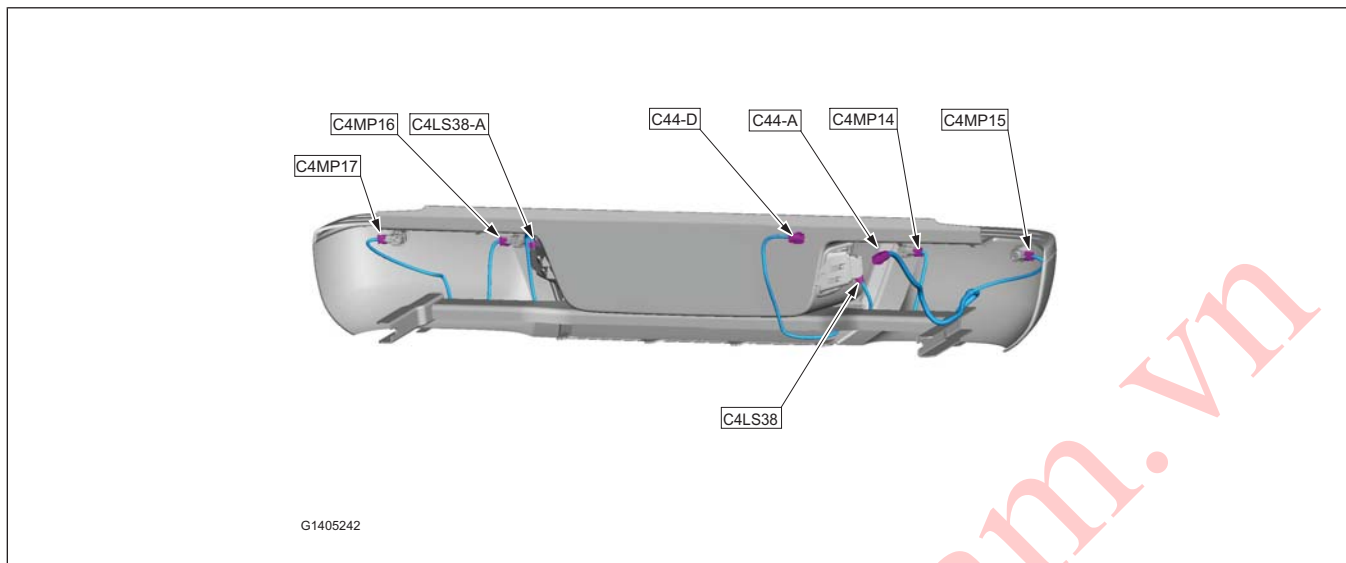


COMPONENT LOCATION

Rear Door LH Interior View

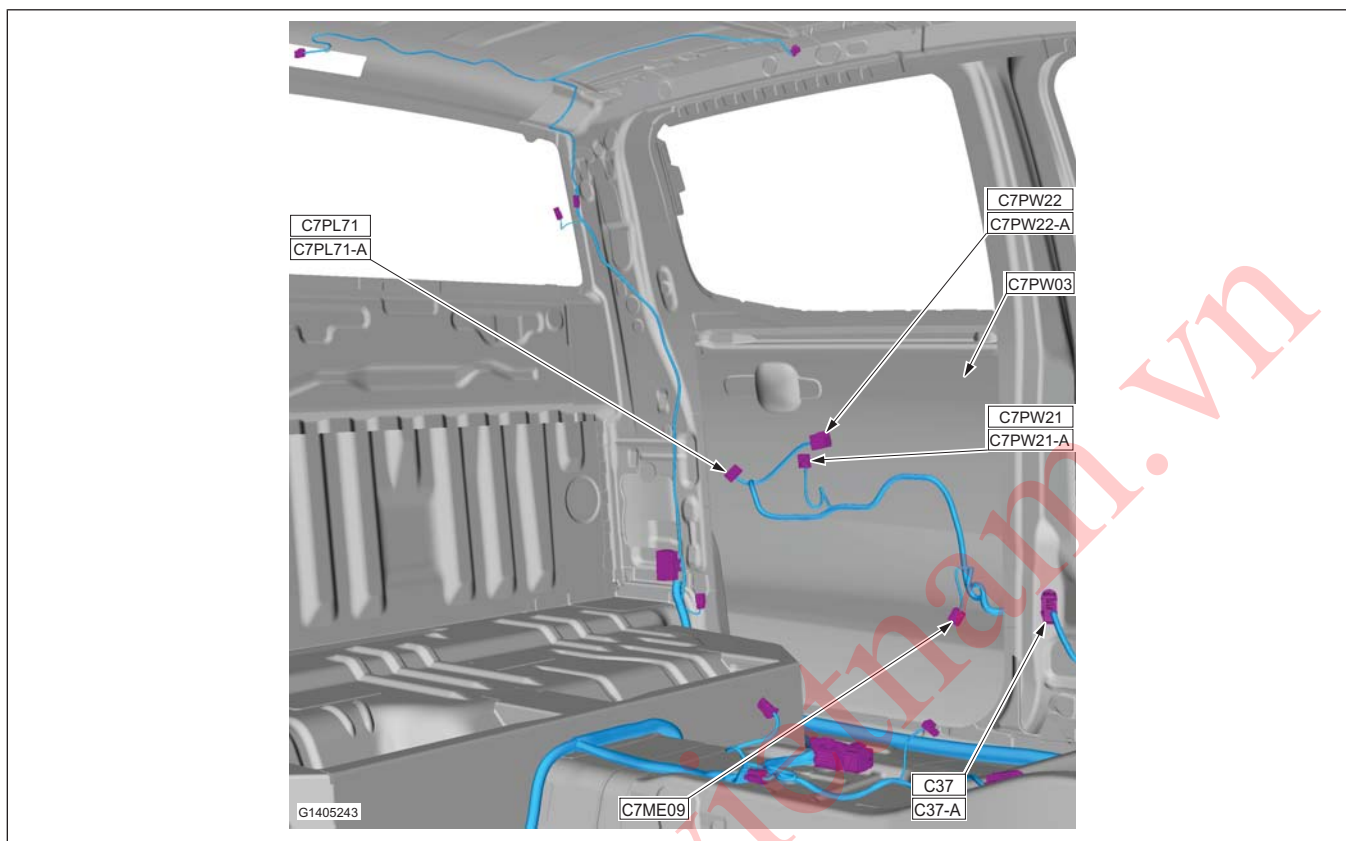


COMPONENT LOCATION

Rear Door RH Interior View

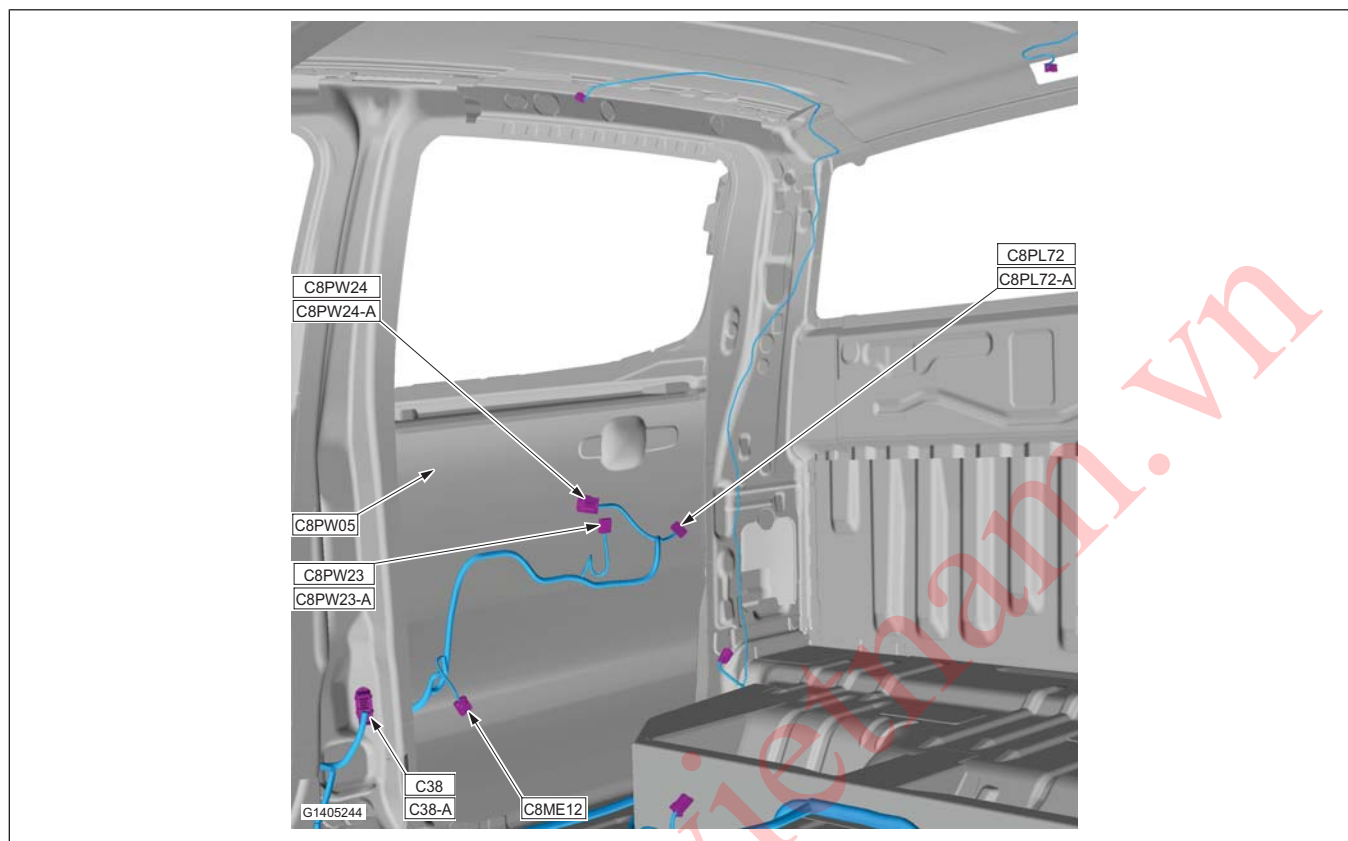


COMPONENT LOCATION

Rear Axle

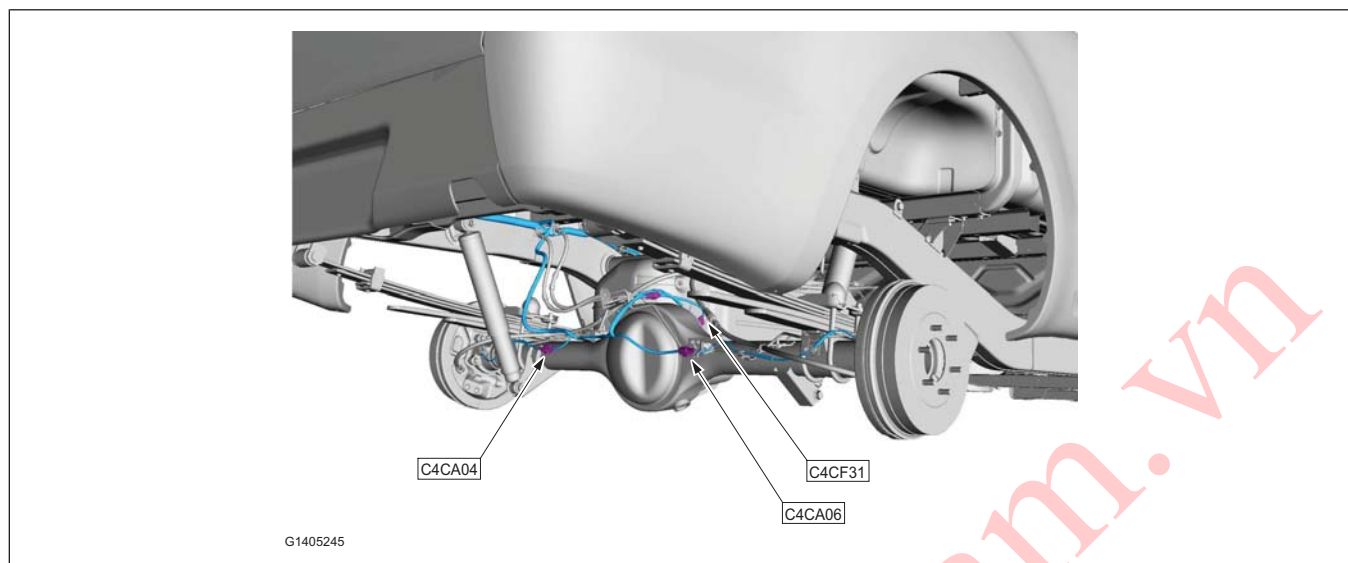


COMPONENT LOCATION

Rear Under Floor View

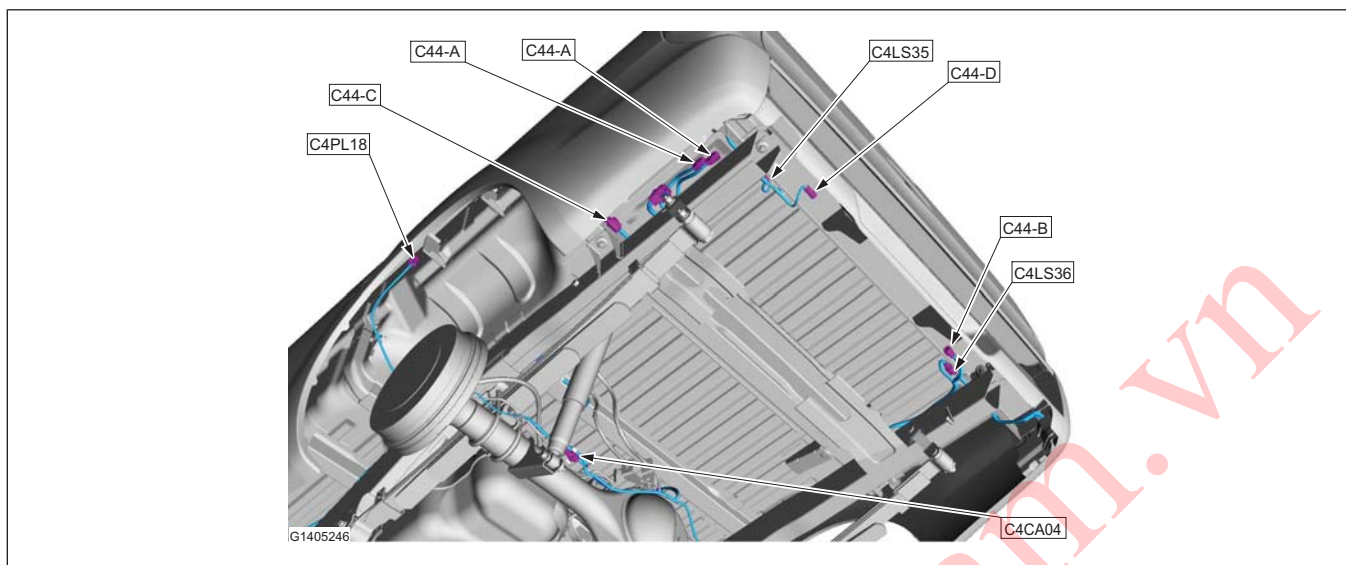


COMPONENT LOCATION

Steering Column Switches Front View

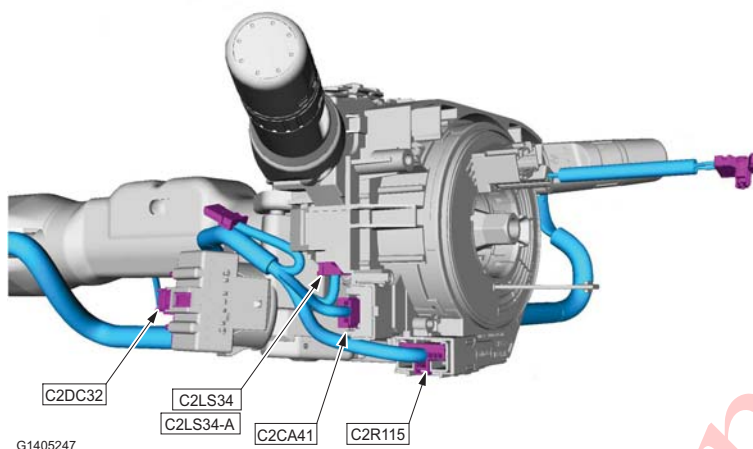

COMPONENT LOCATION

Steering Column Switches Rear View

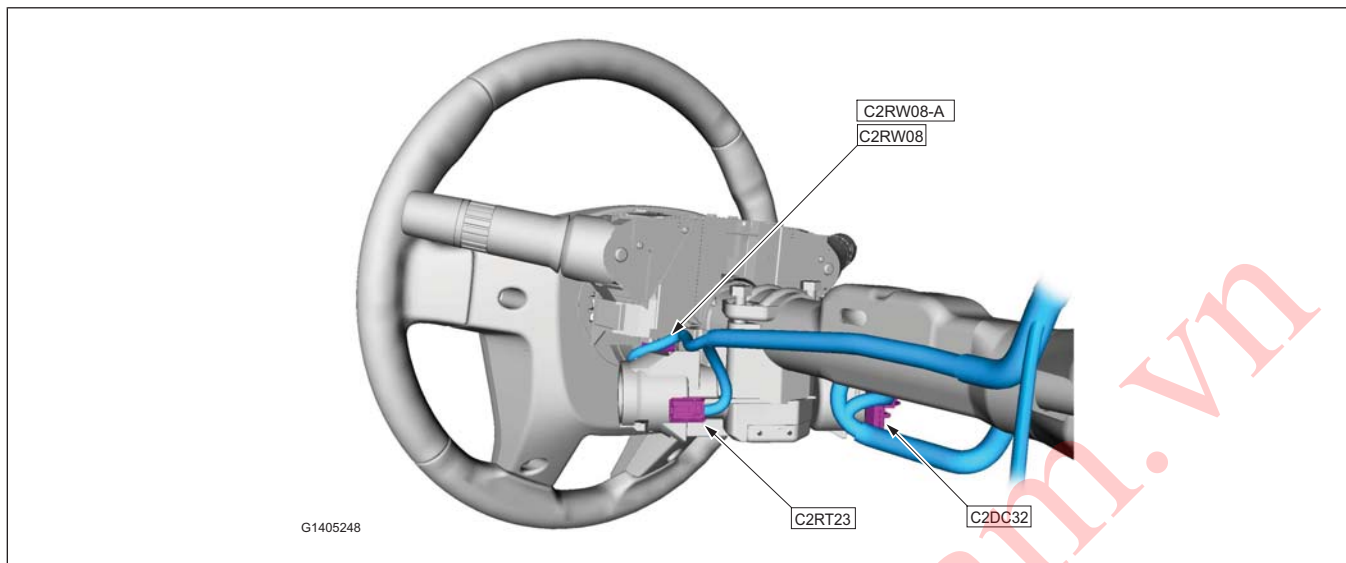


700-00-75

General Information

700-00-75


COMPONENT LOCATION

Steering Wheel

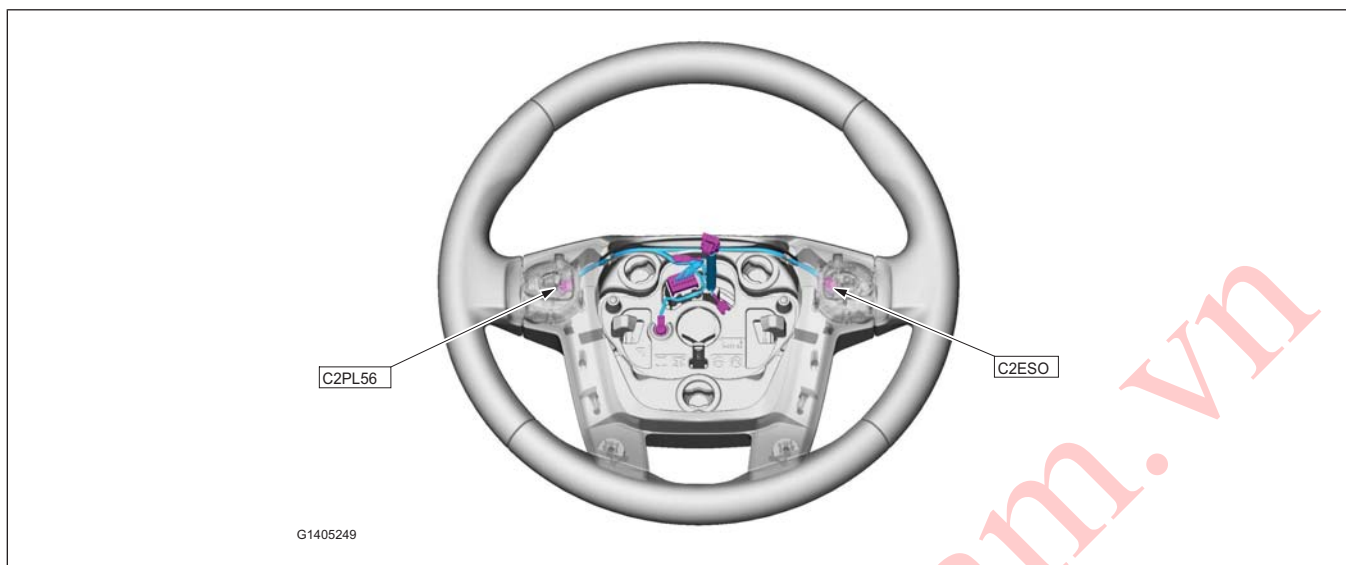


COMPONENT LOCATION

Transmission Left-Hand View - Vehicles With: 5-Speed Manual Transmission - MT75 4x2

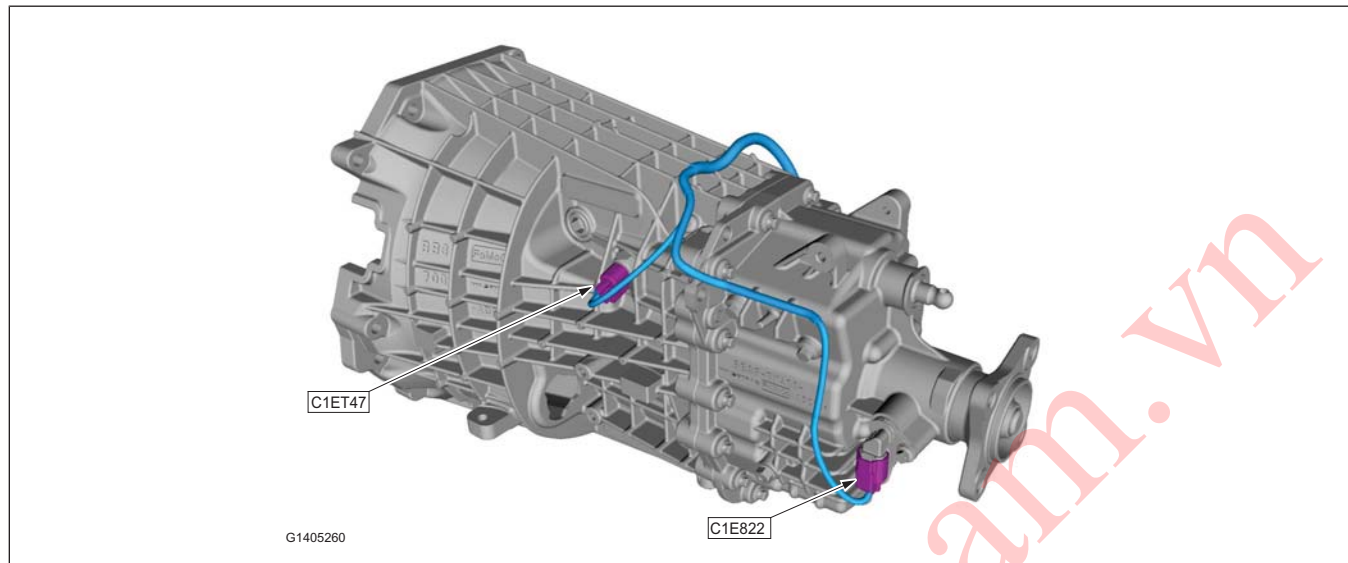


COMPONENT LOCATION

Transmission Right-Hand View - Vehicles With: 6-Speed Manual Transmission - MT82 4x2

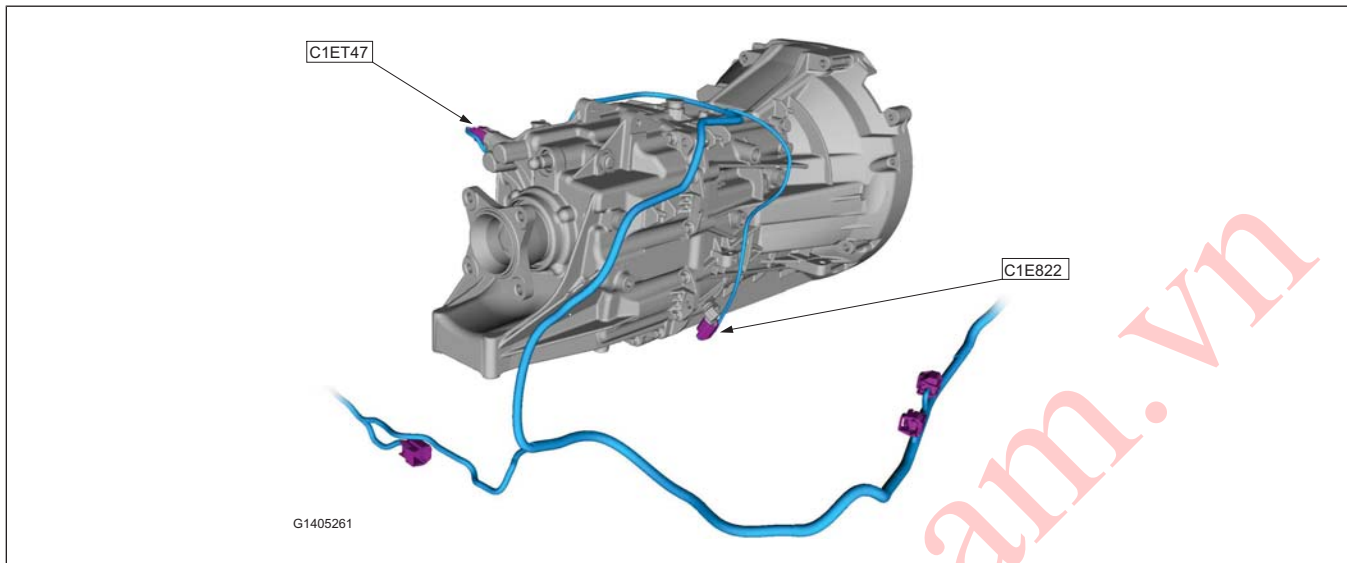


COMPONENT LOCATION

Transmission Right-Hand View - Vehicles With: 6-Speed Automatic Transaxle - 6R80 4x2

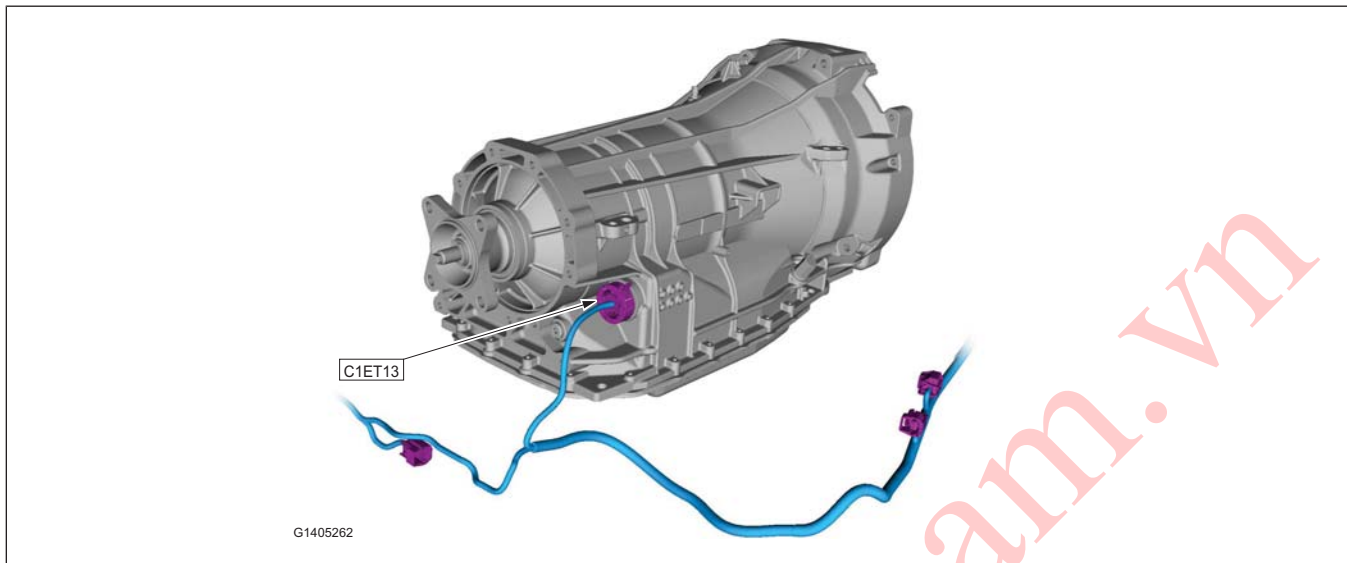


COMPONENT LOCATION

Transmission Left-Hand View - Vehicles With: 5-Speed Manual Transmission - MT75 4x4

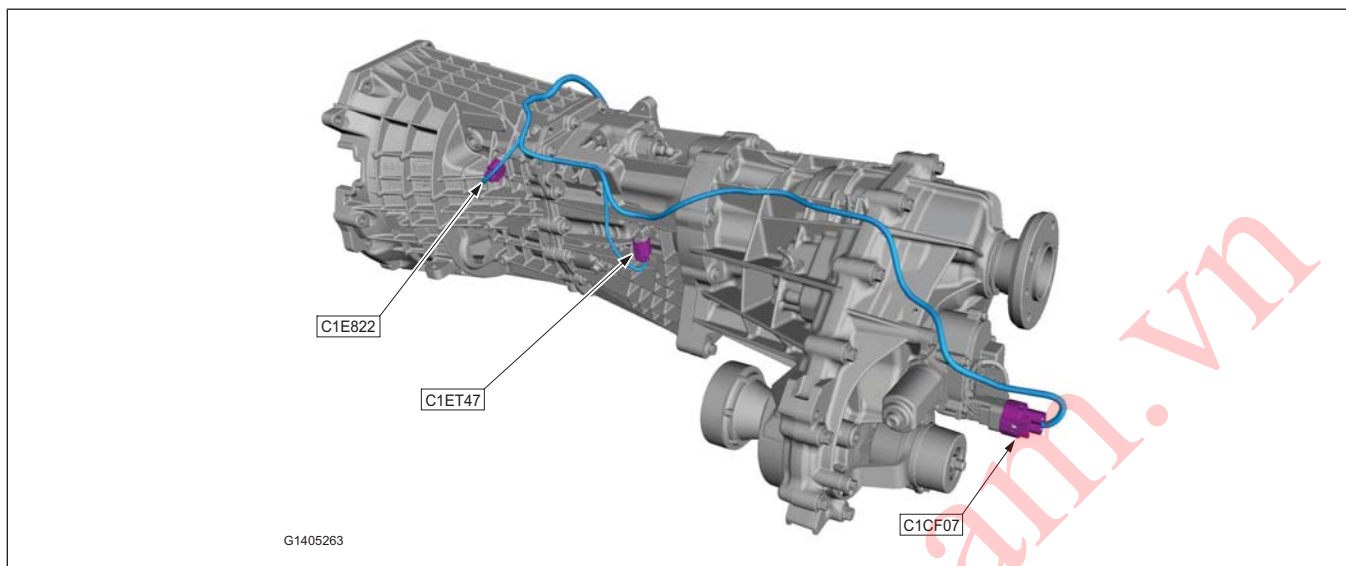


COMPONENT LOCATION

Transmission Right-Hand View - Vehicles With: 6-Speed Manual Transmission (MT82 4x4)

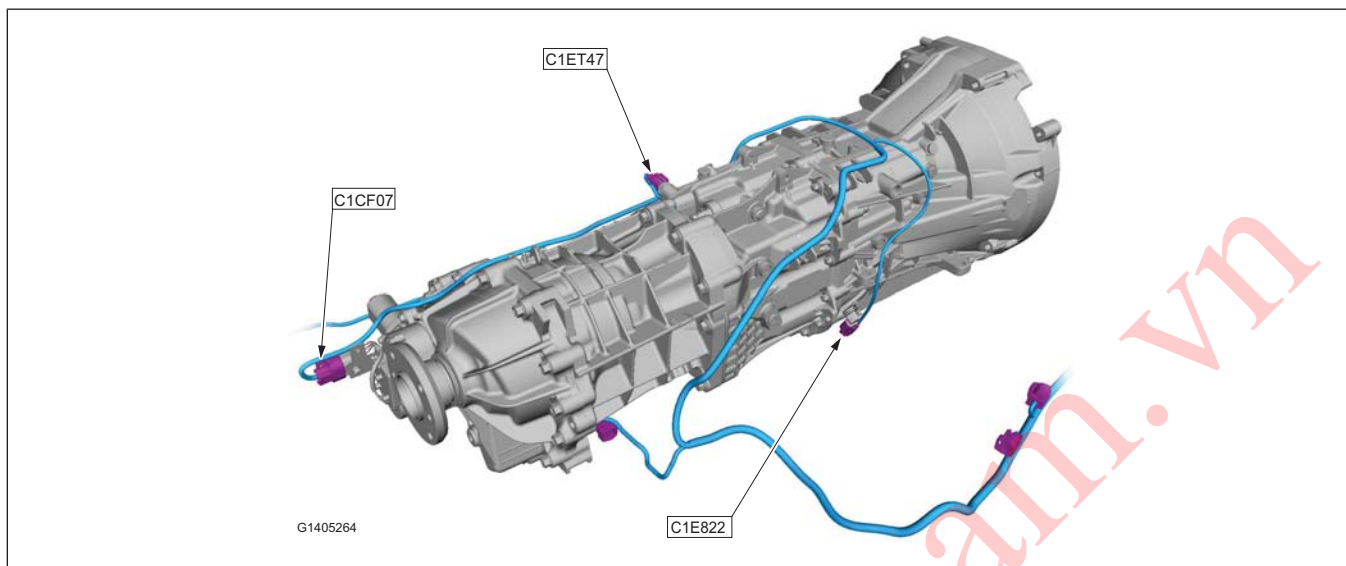

COMPONENT LOCATION

Transmission Right-Hand View - Vehicles With: 6-Speed Automatic Transaxle - 6R80 4x4

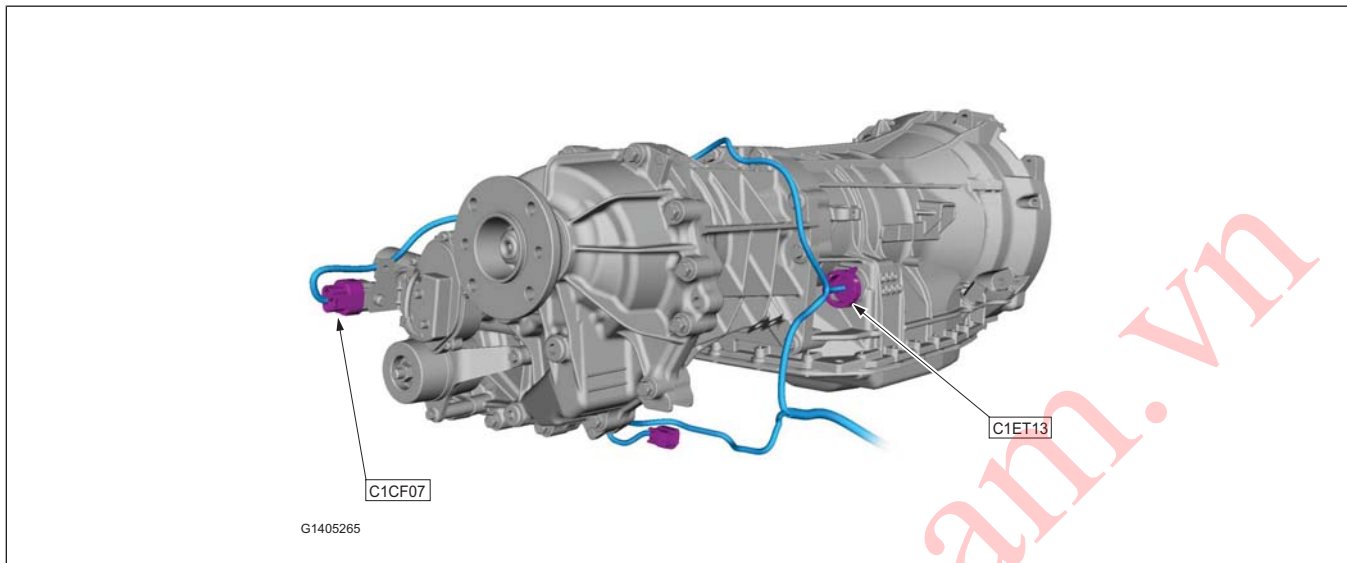

SECTION 700-01 Fuse and Relay Information

VEHICLE APPLICATION: **2012.0 Ranger**


CONTENTS

PAGE


ELECTRICAL SCHEMATICS

Central Junction Box (CJB) — LHD 4WD/LHD RWD.....	700-01-2
Central Junction Box (CJB) — RHD 4WD/RHD RWD.....	700-01-4


700-01-2 Central Junction Box (CJB)—LHD 4WD/LHD RWD

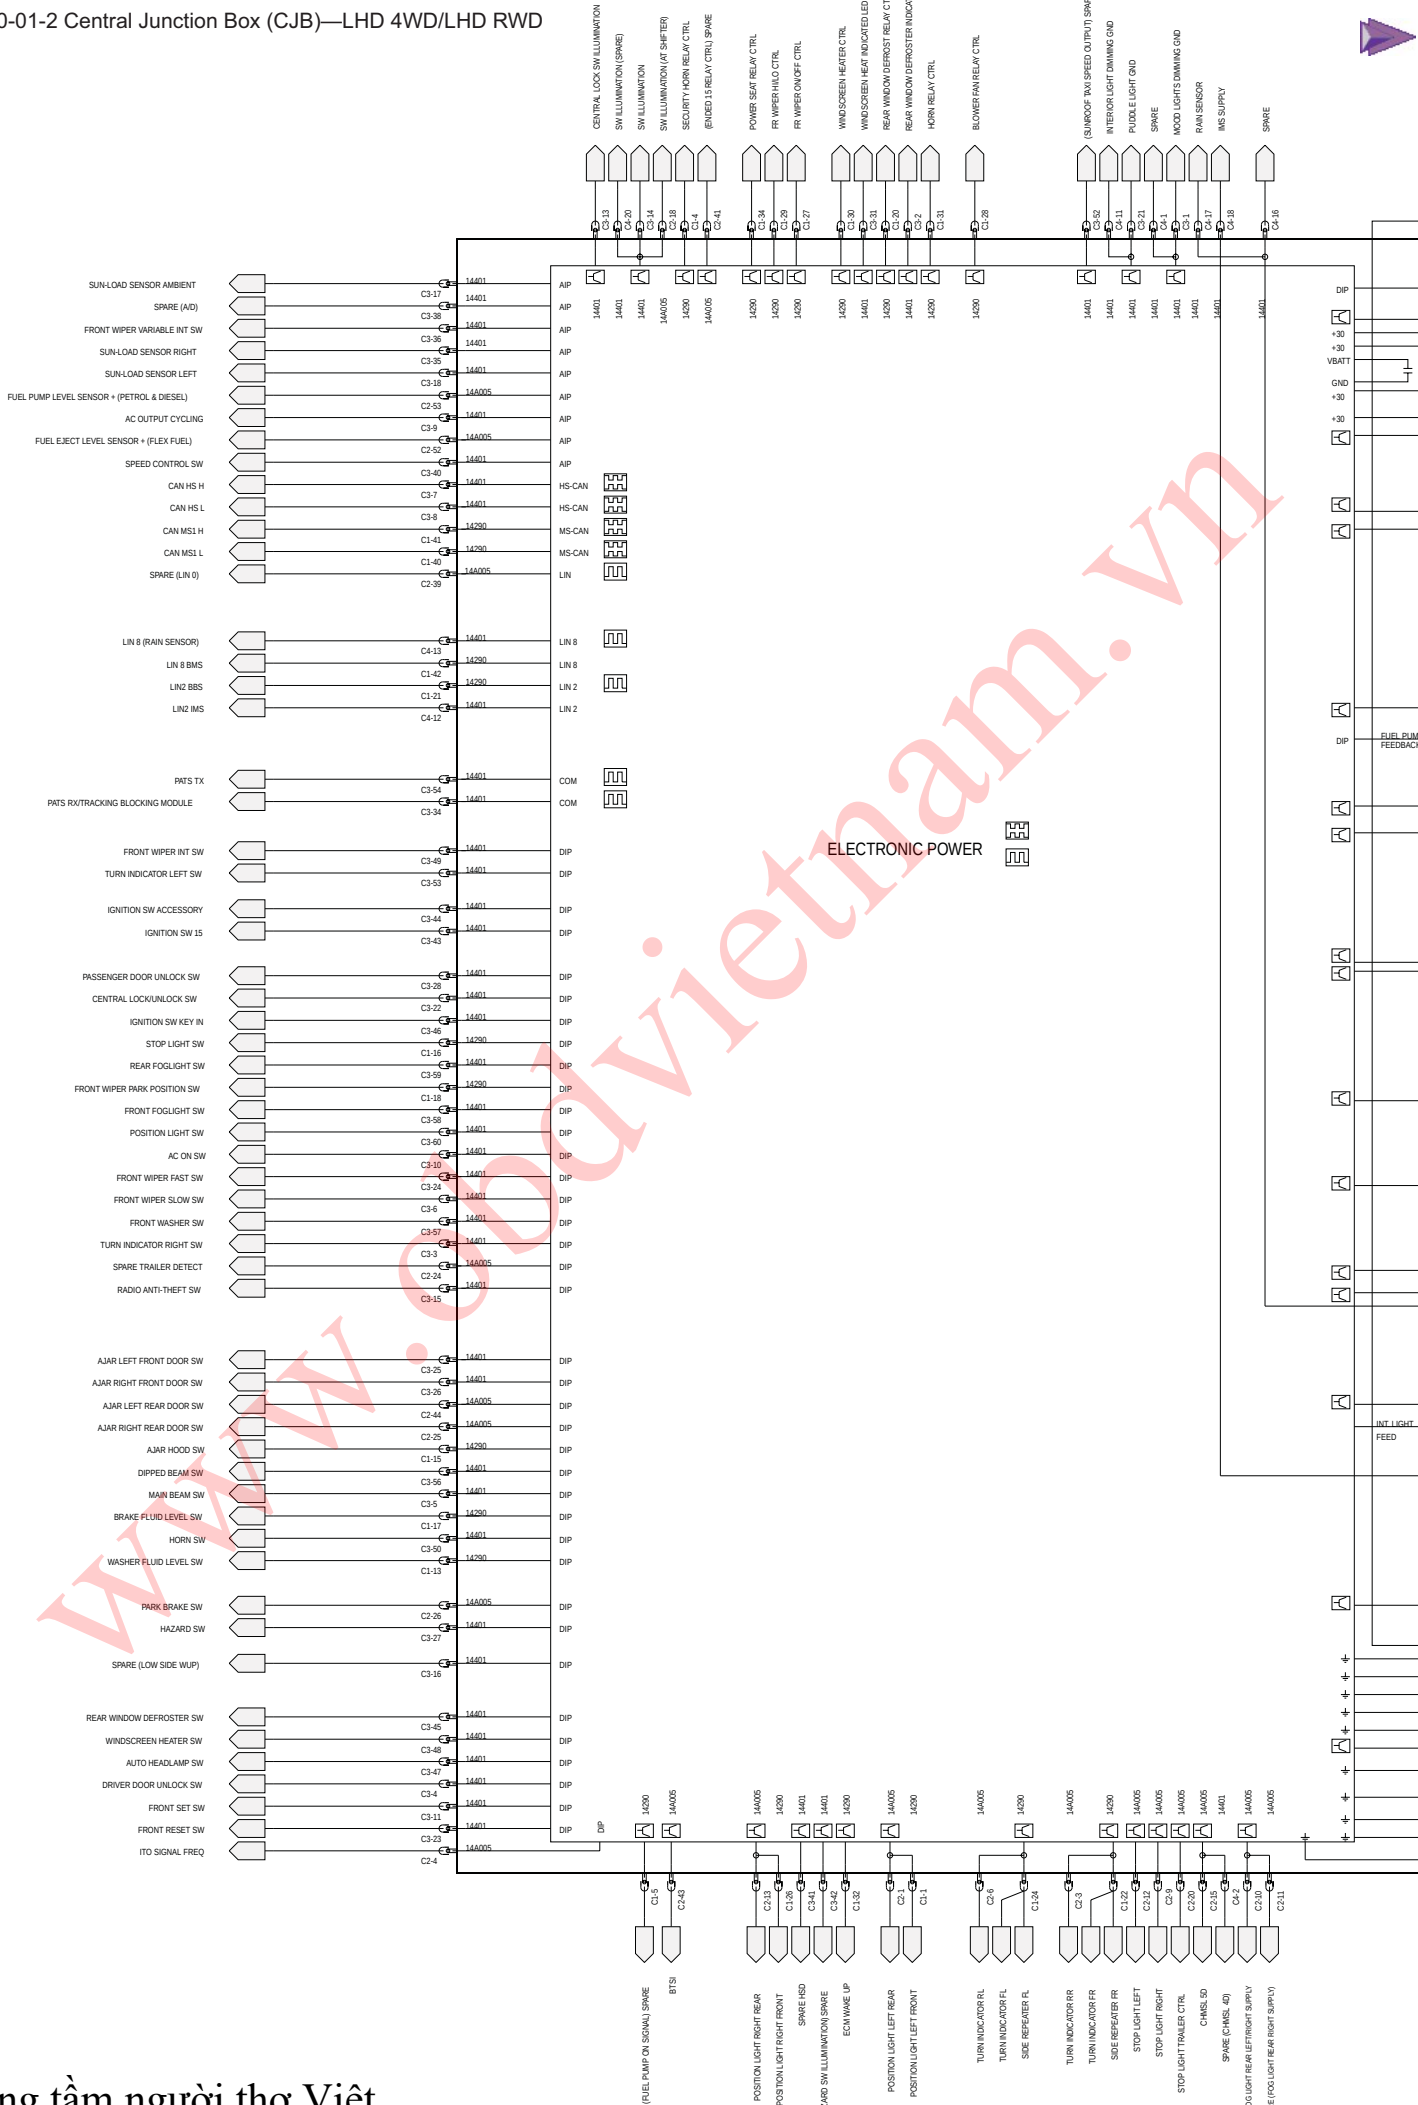


700-01-3 Central Junction Box (CJB)—LHD 4WD/LHD RWD

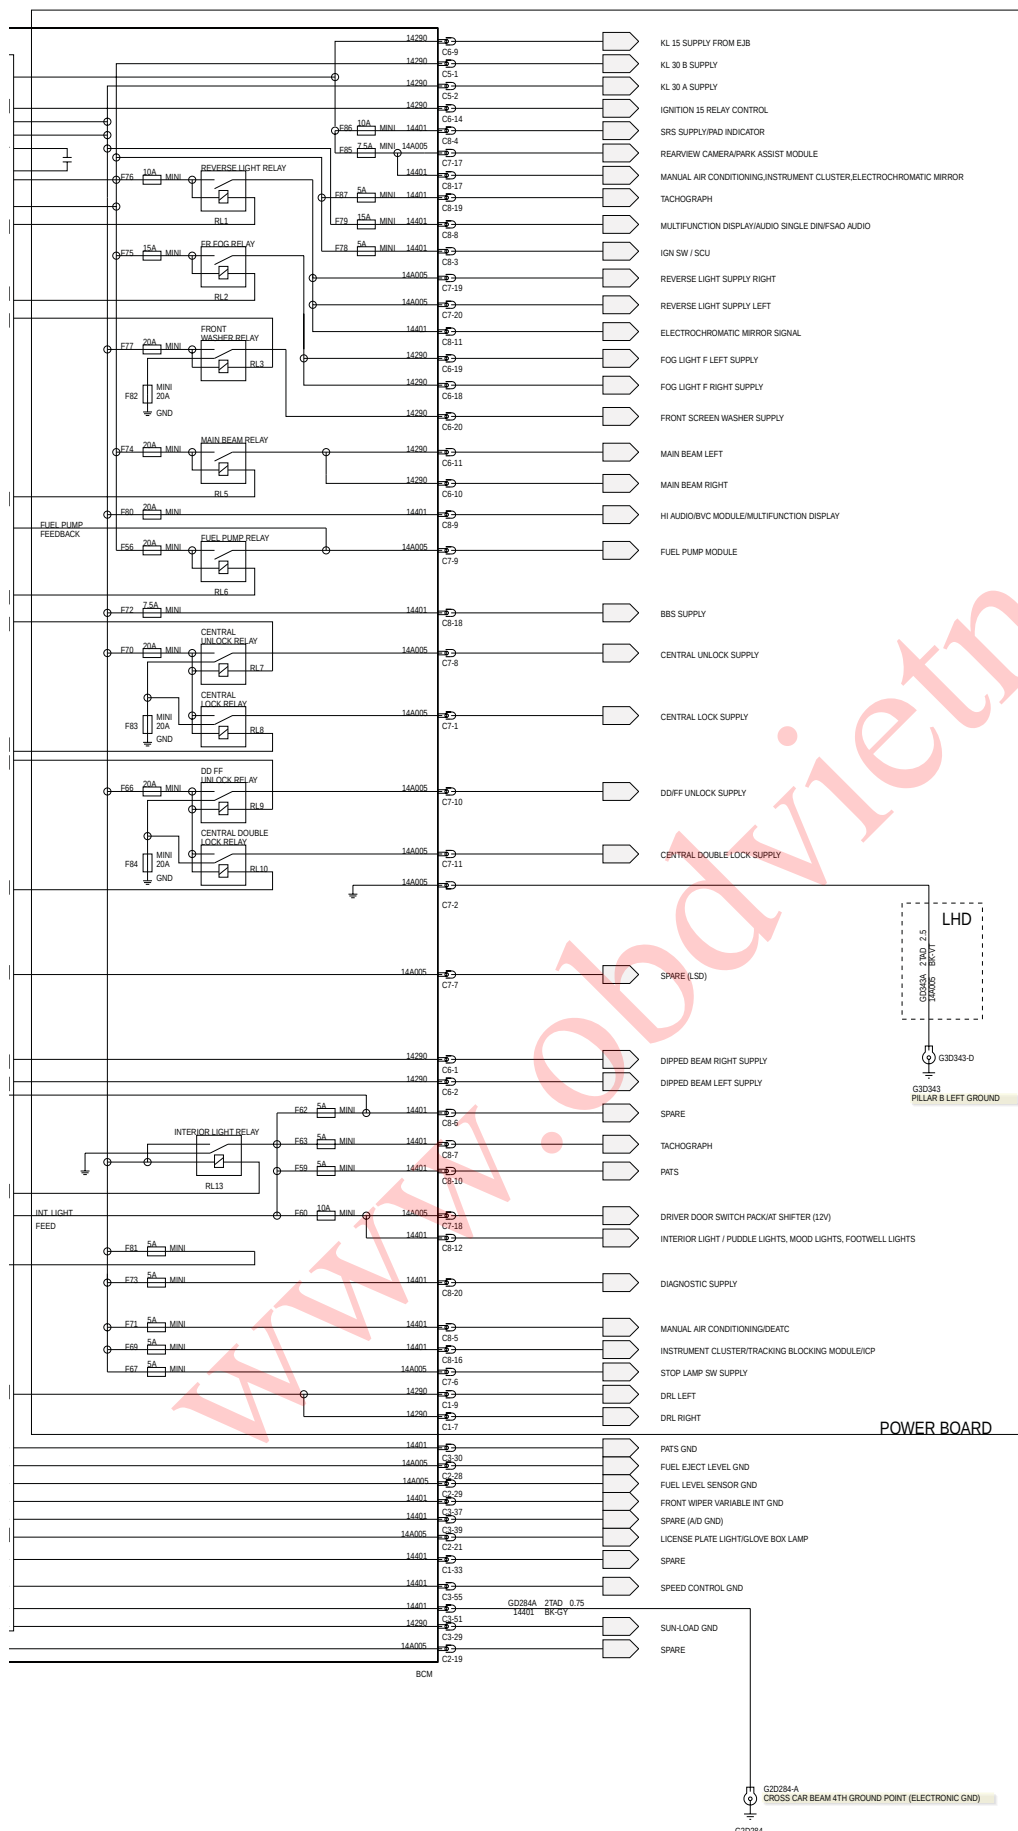

700-01-4 Central Junction Box (CJB)—RHD 4WD/RHD RWD

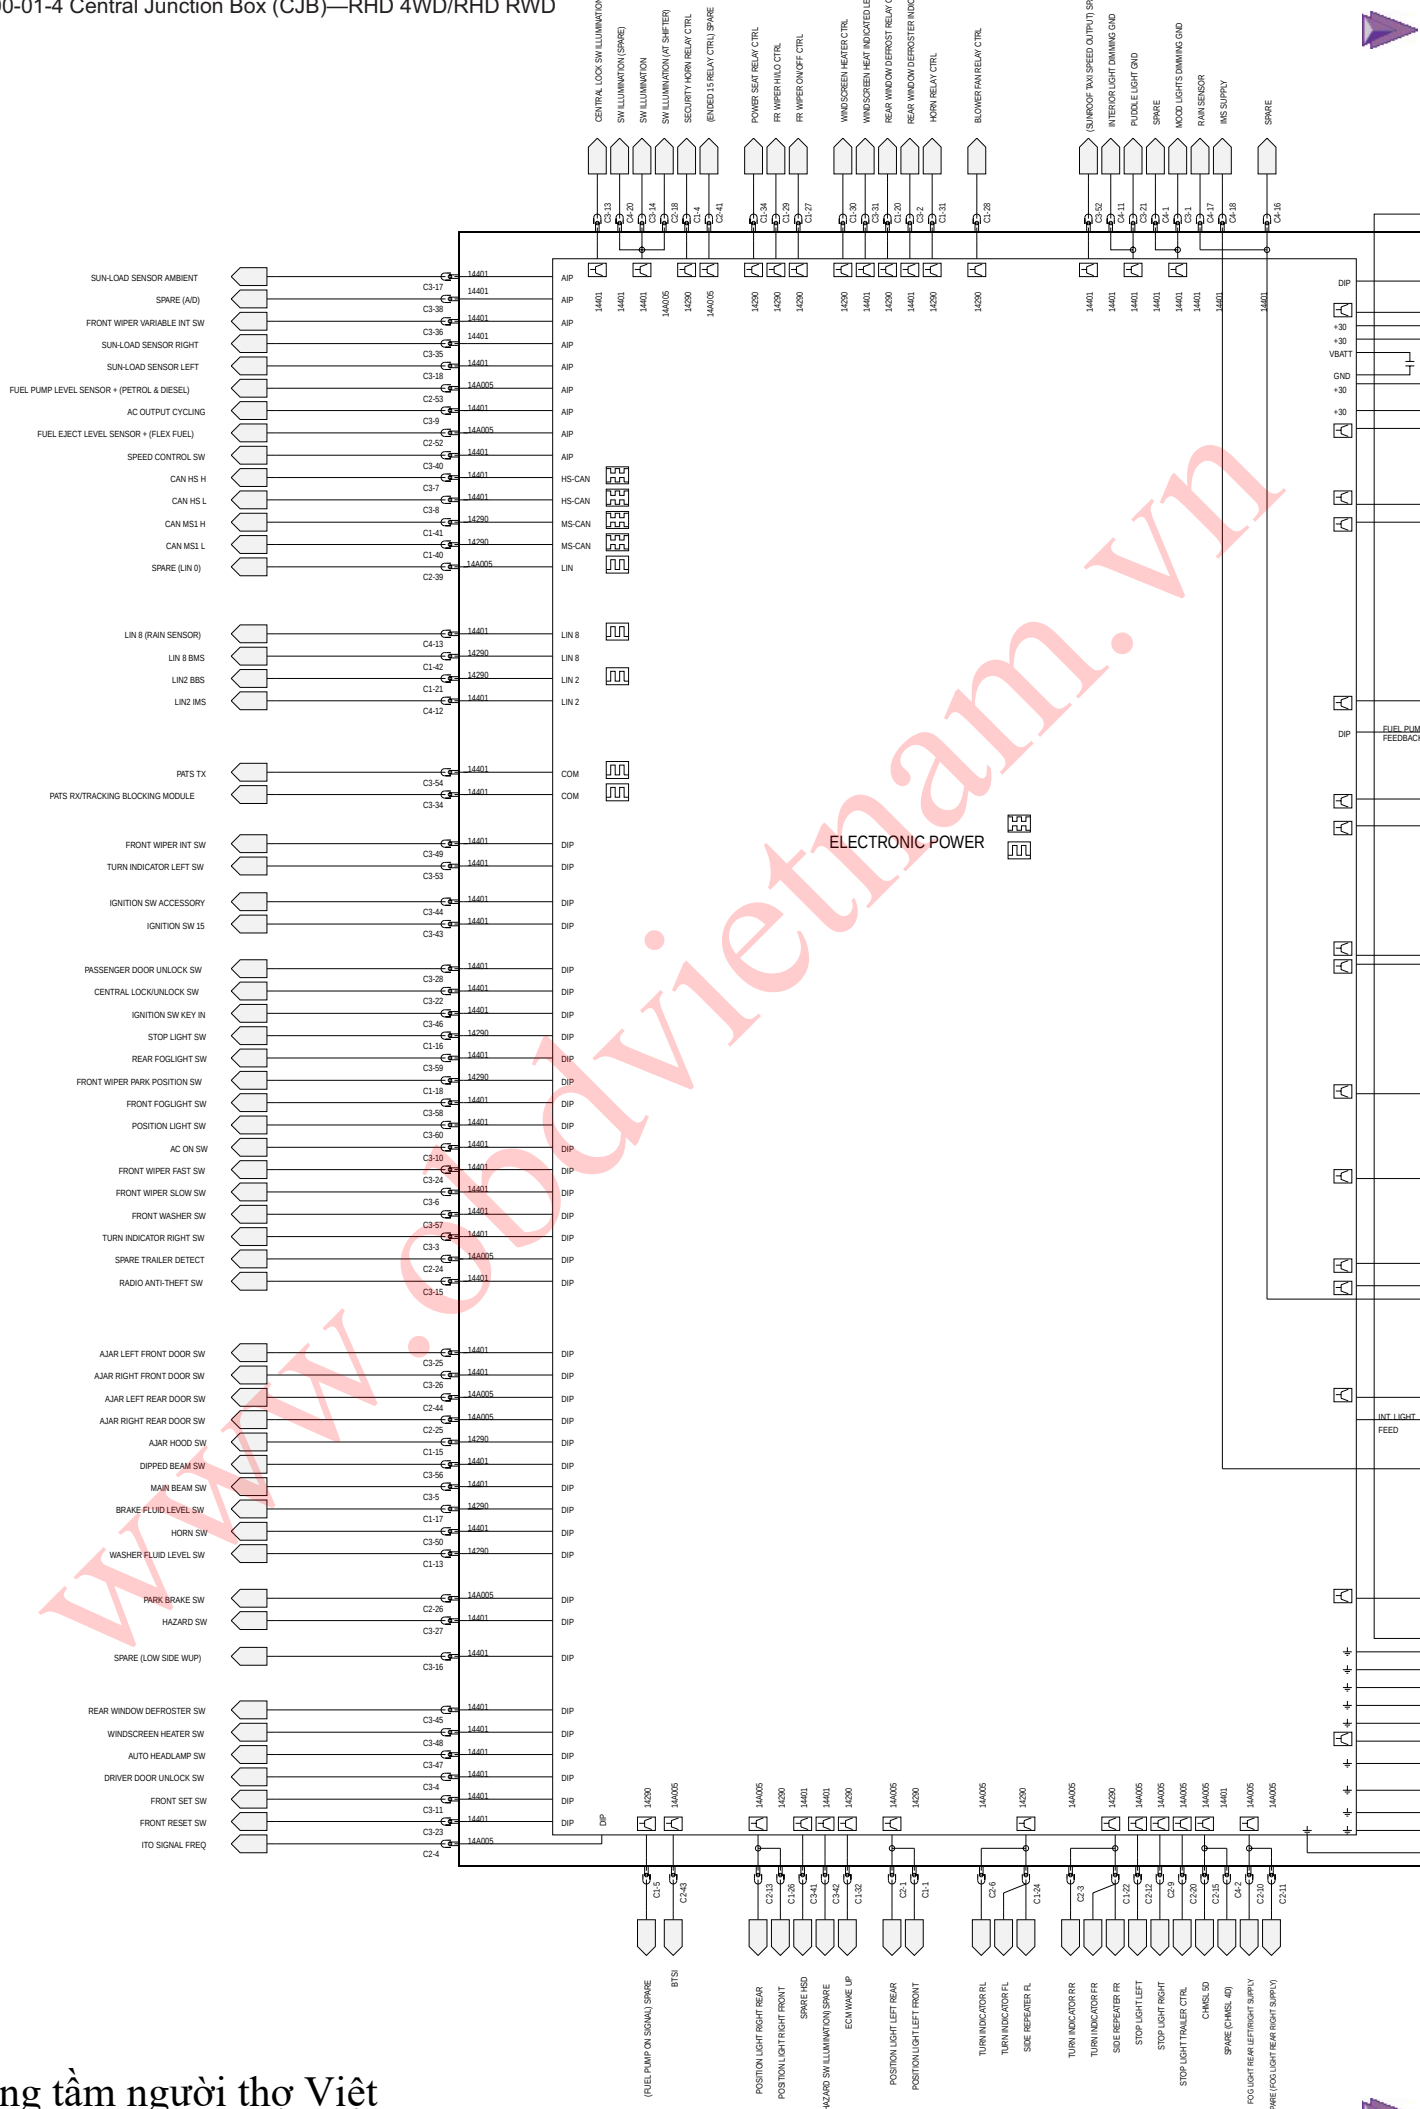

700-01-5 Central Junction Box (CJB)—RHD 4WD/RHD RWD

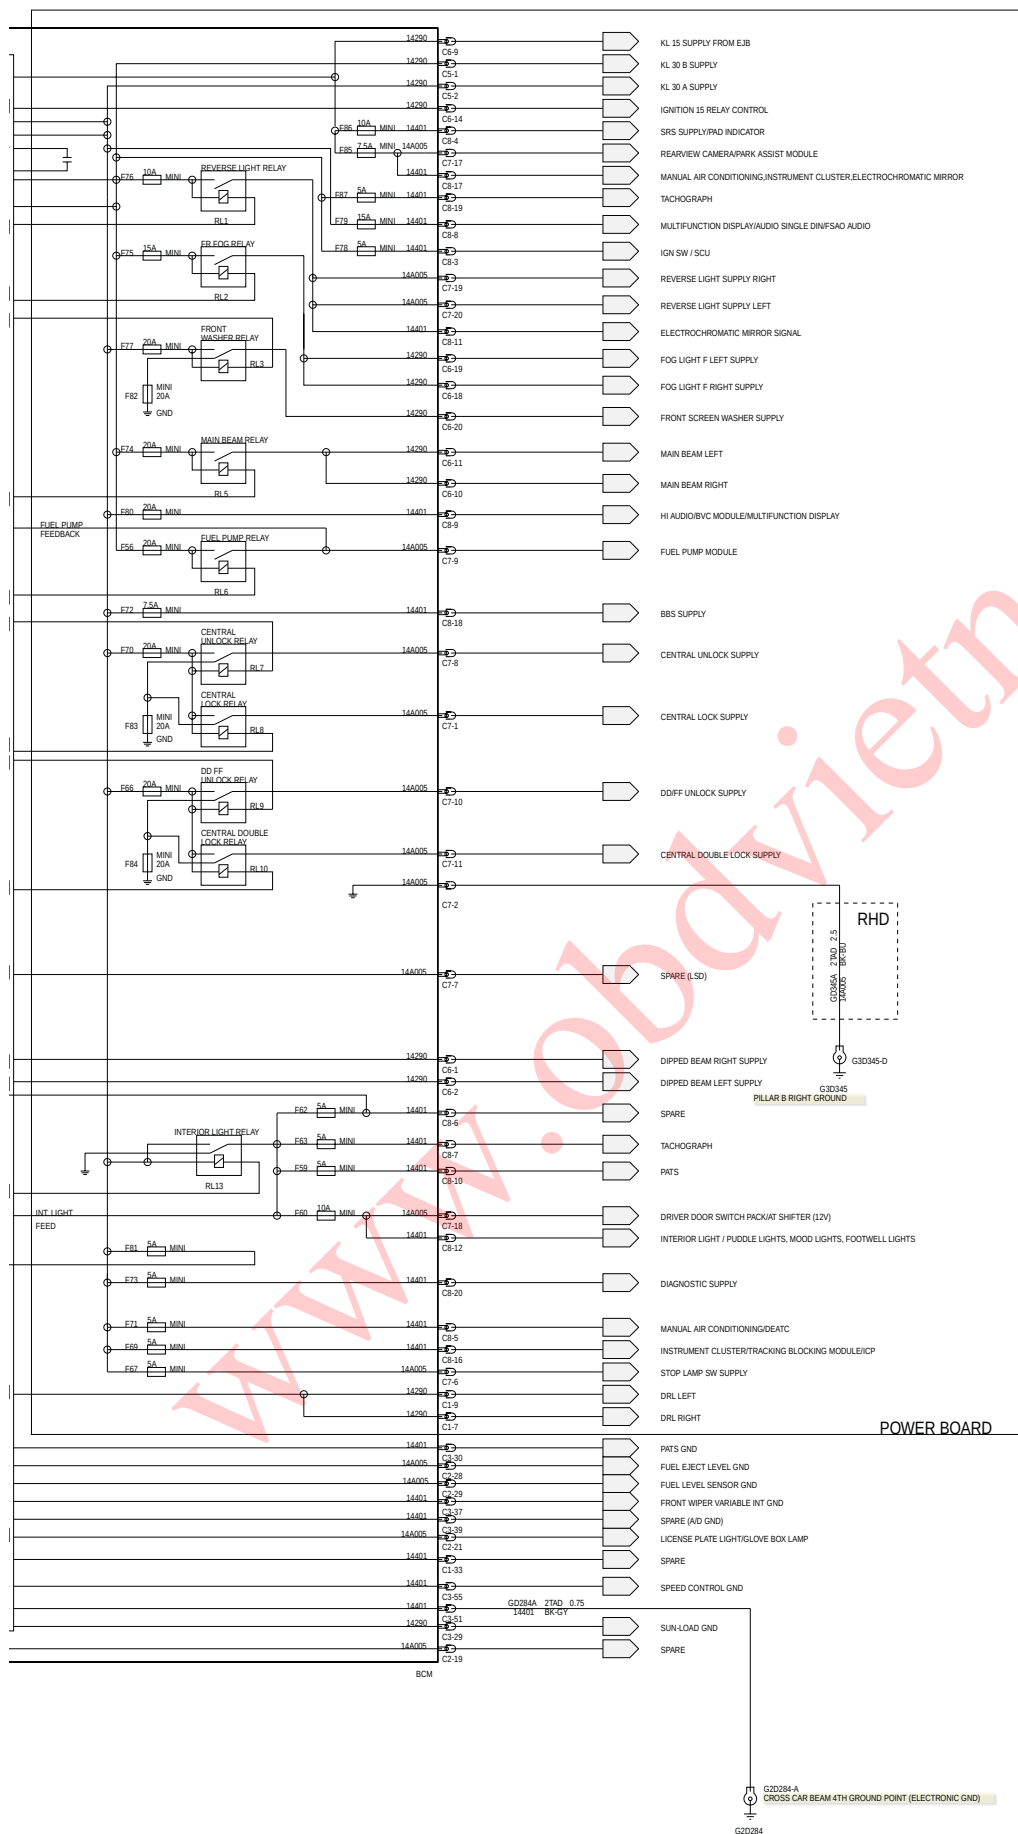

NOTE :

- AIP - ANALOG INPUT
- DIP - DIGITAL INPUT
- FET - HIGH SIDE DRIVER OR LOW SIDE DRIVER
- ALL RELAYS IN BCM ARE SOLDERED

SECTION 700-02 Power Distribution


VEHICLE APPLICATION: **2012.0 Ranger**

CONTENTS


PAGE

ELECTRICAL SCHEMATICS


Cigar Lighter and Power Points — LHD 4WD/LHD RWD.....	700-02-2
Cigar Lighter and Power Points — RHD 4WD/RHD RWD.....	700-02-4
Power Distribution.....	700-02-6

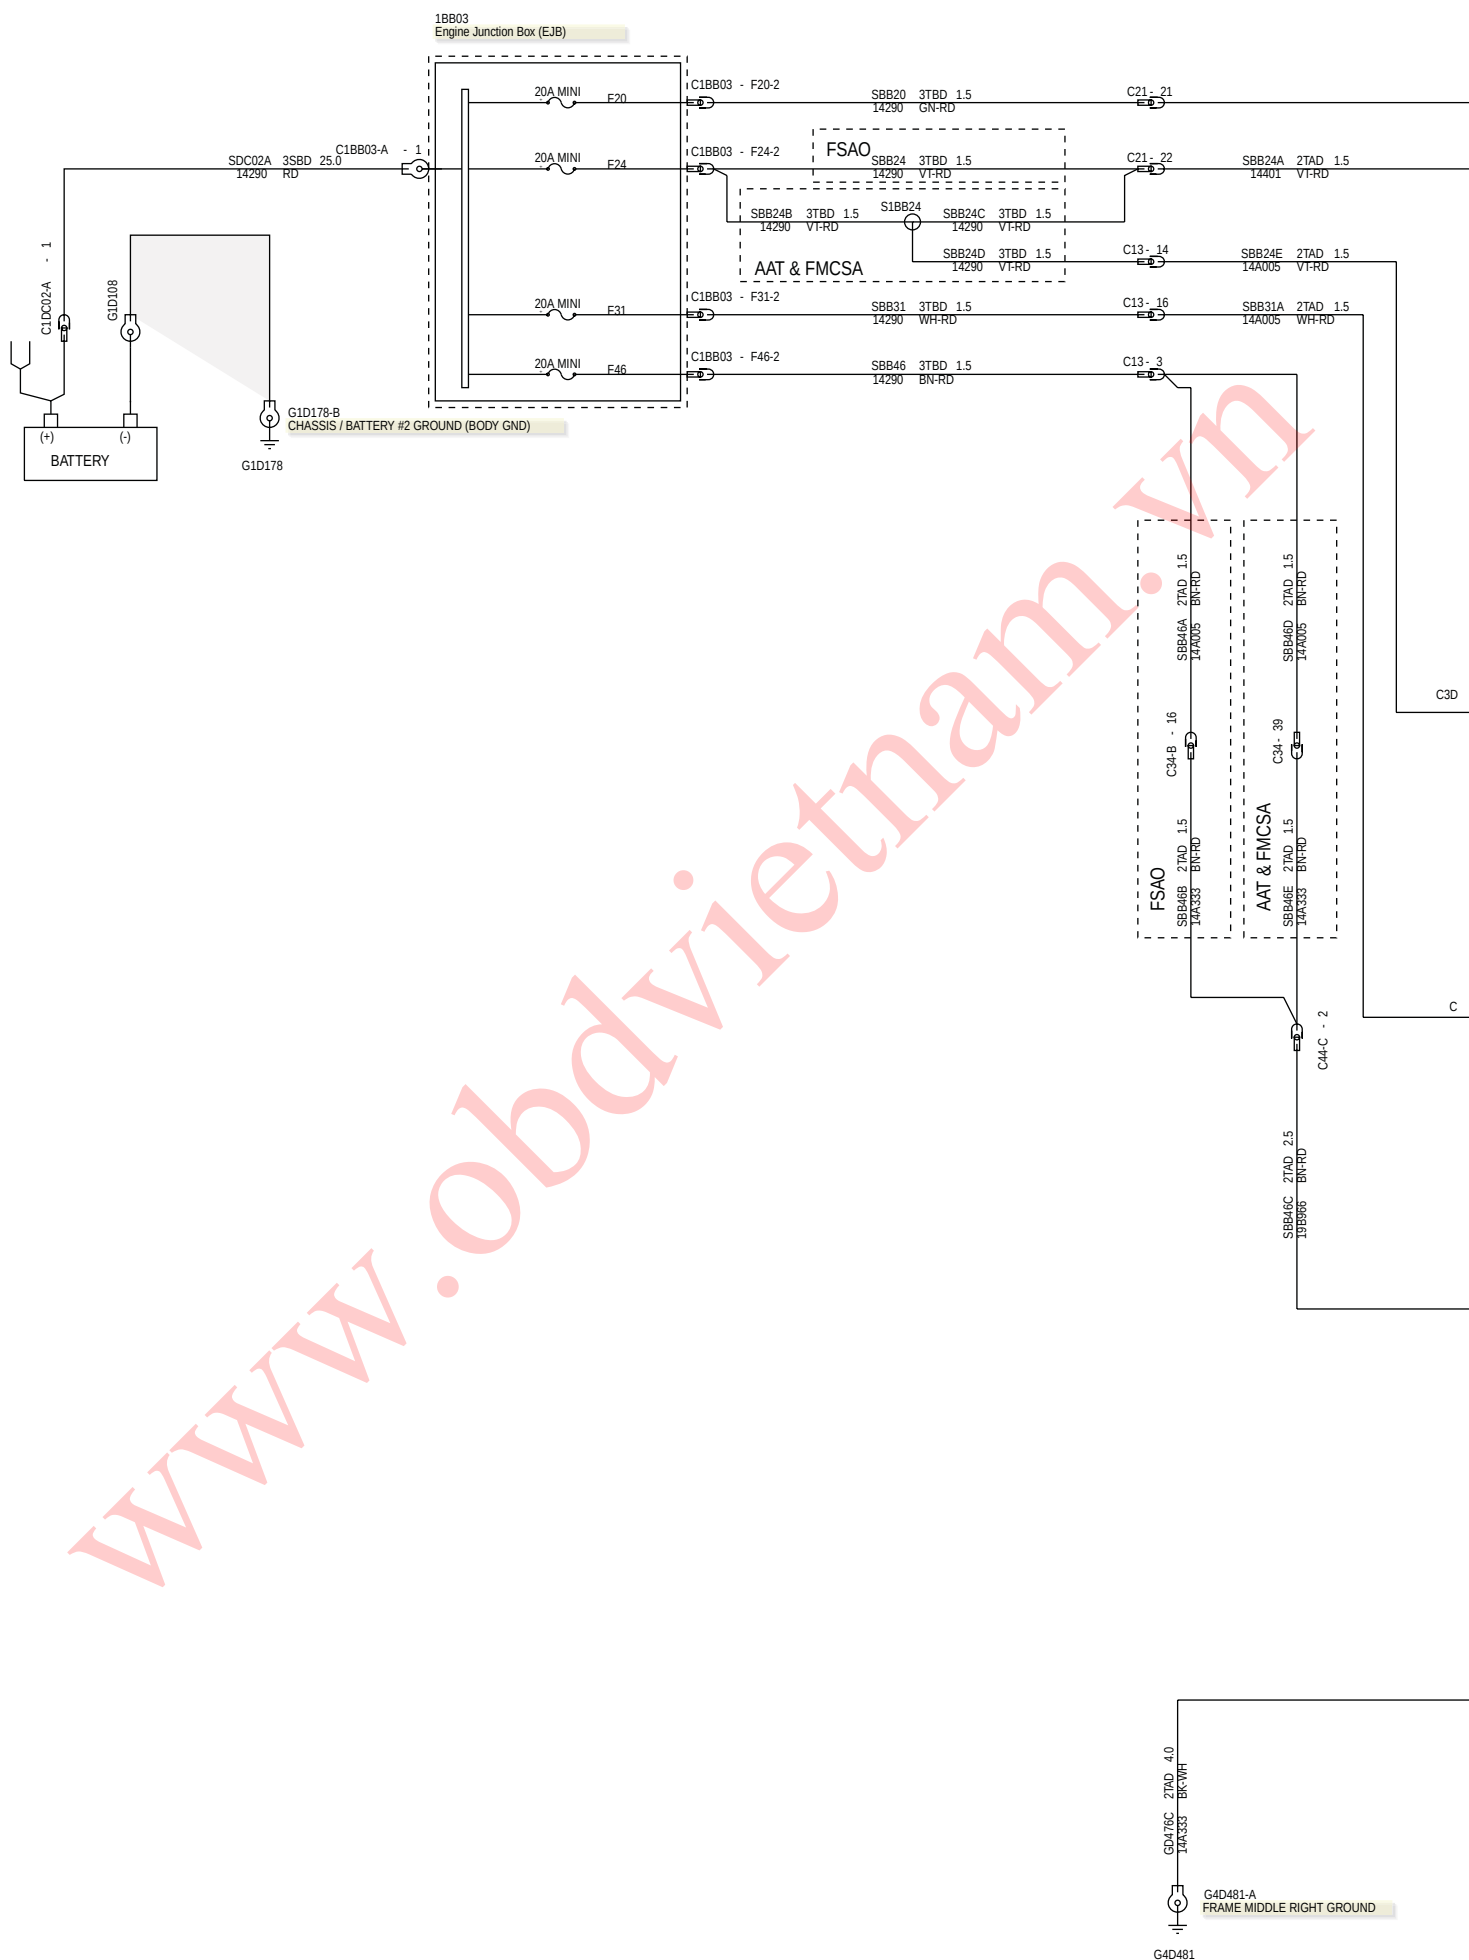


700-02-3 Cigar Lighter and Power Points—LHD 4WD/LHD RWD

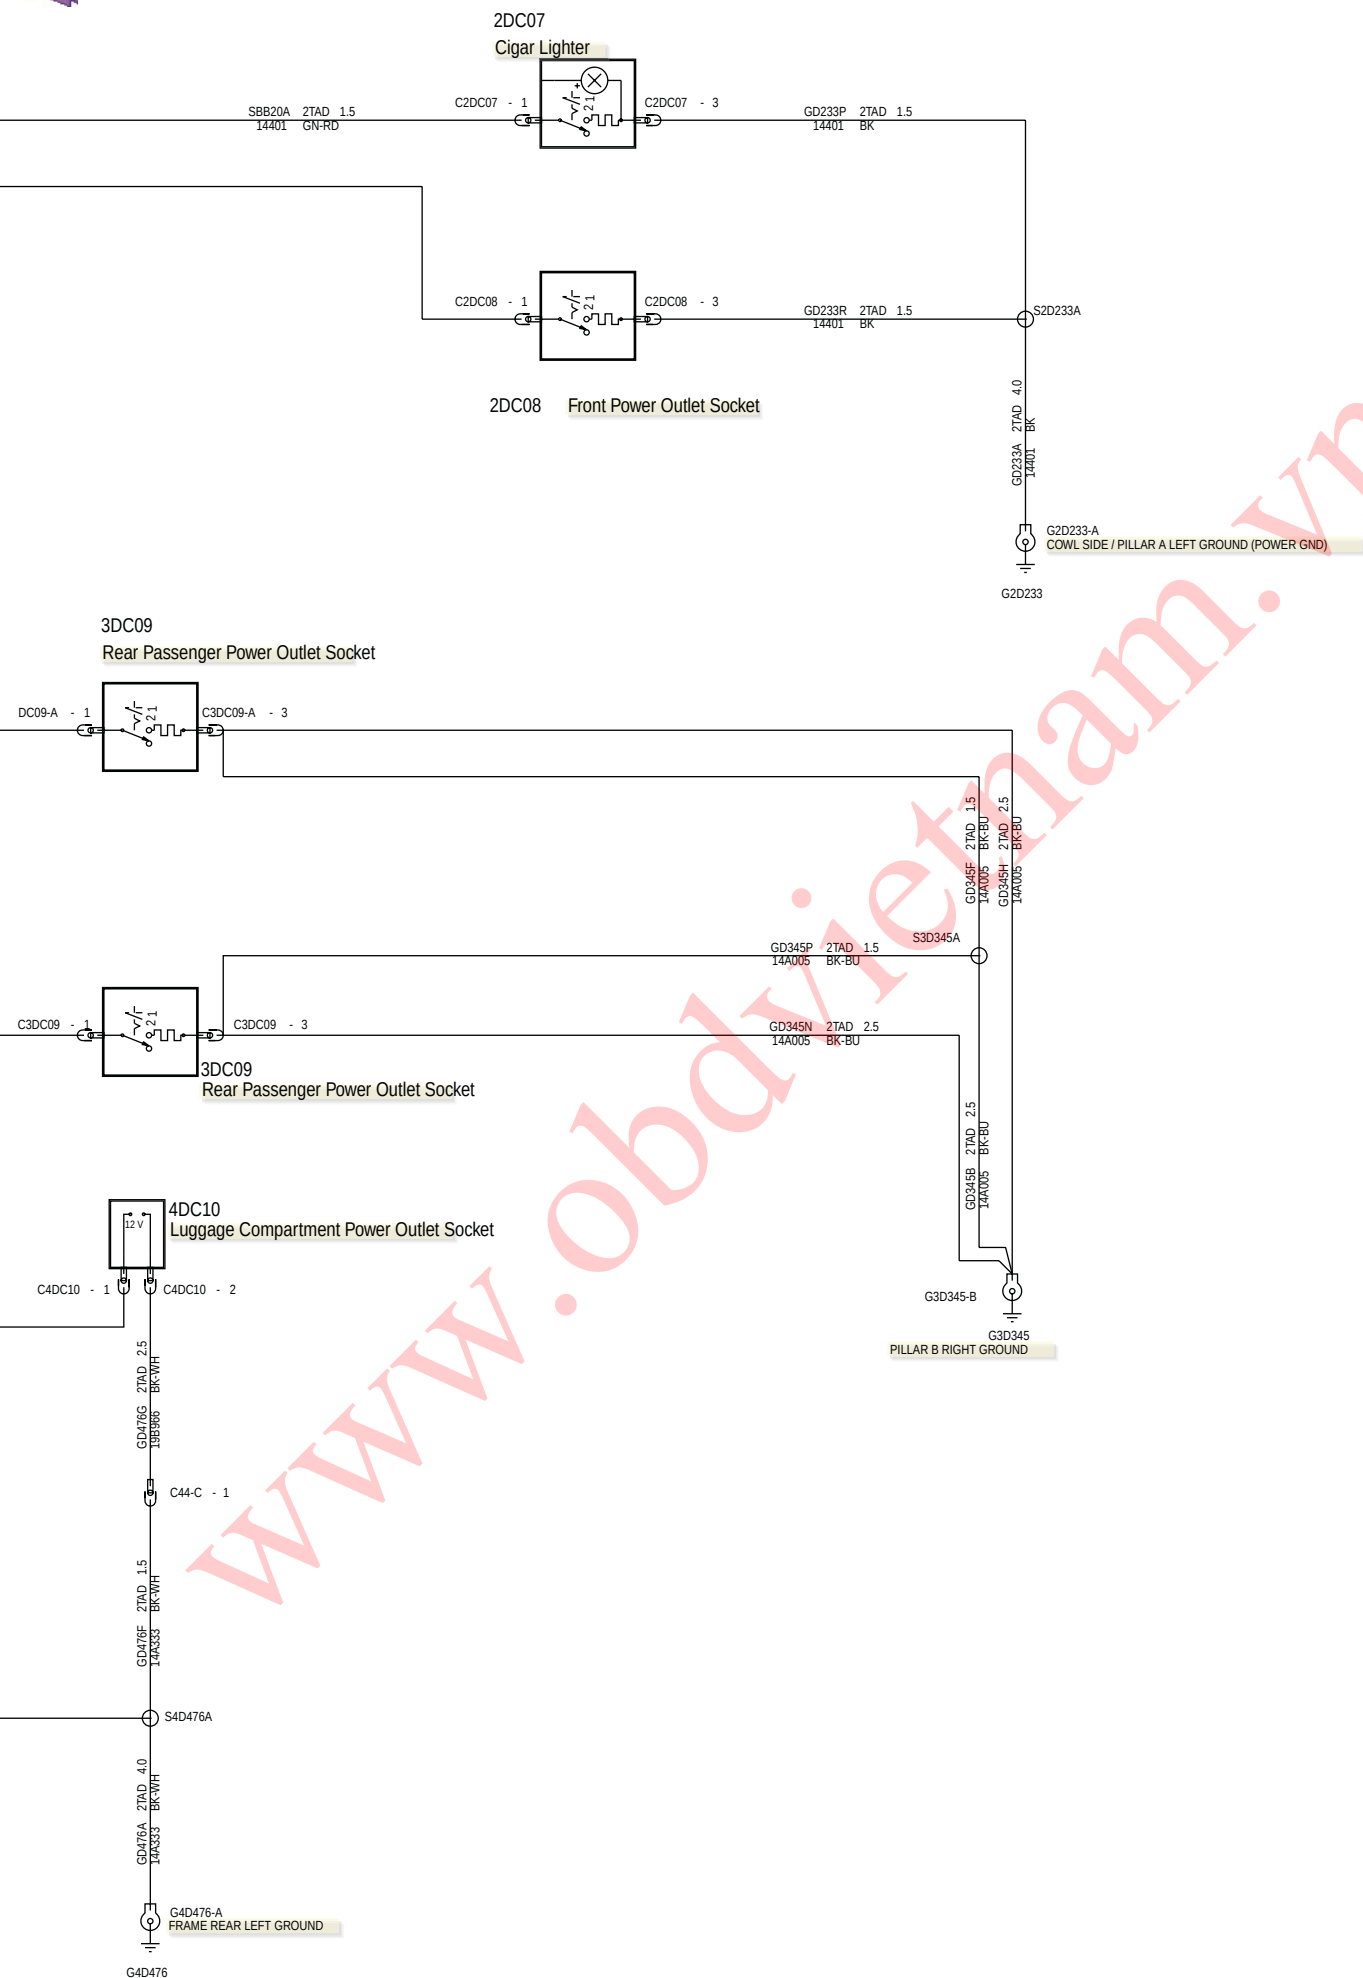


700-02-4 Cigar Lighter and Power Points—RHD 4WD/RHD RWD

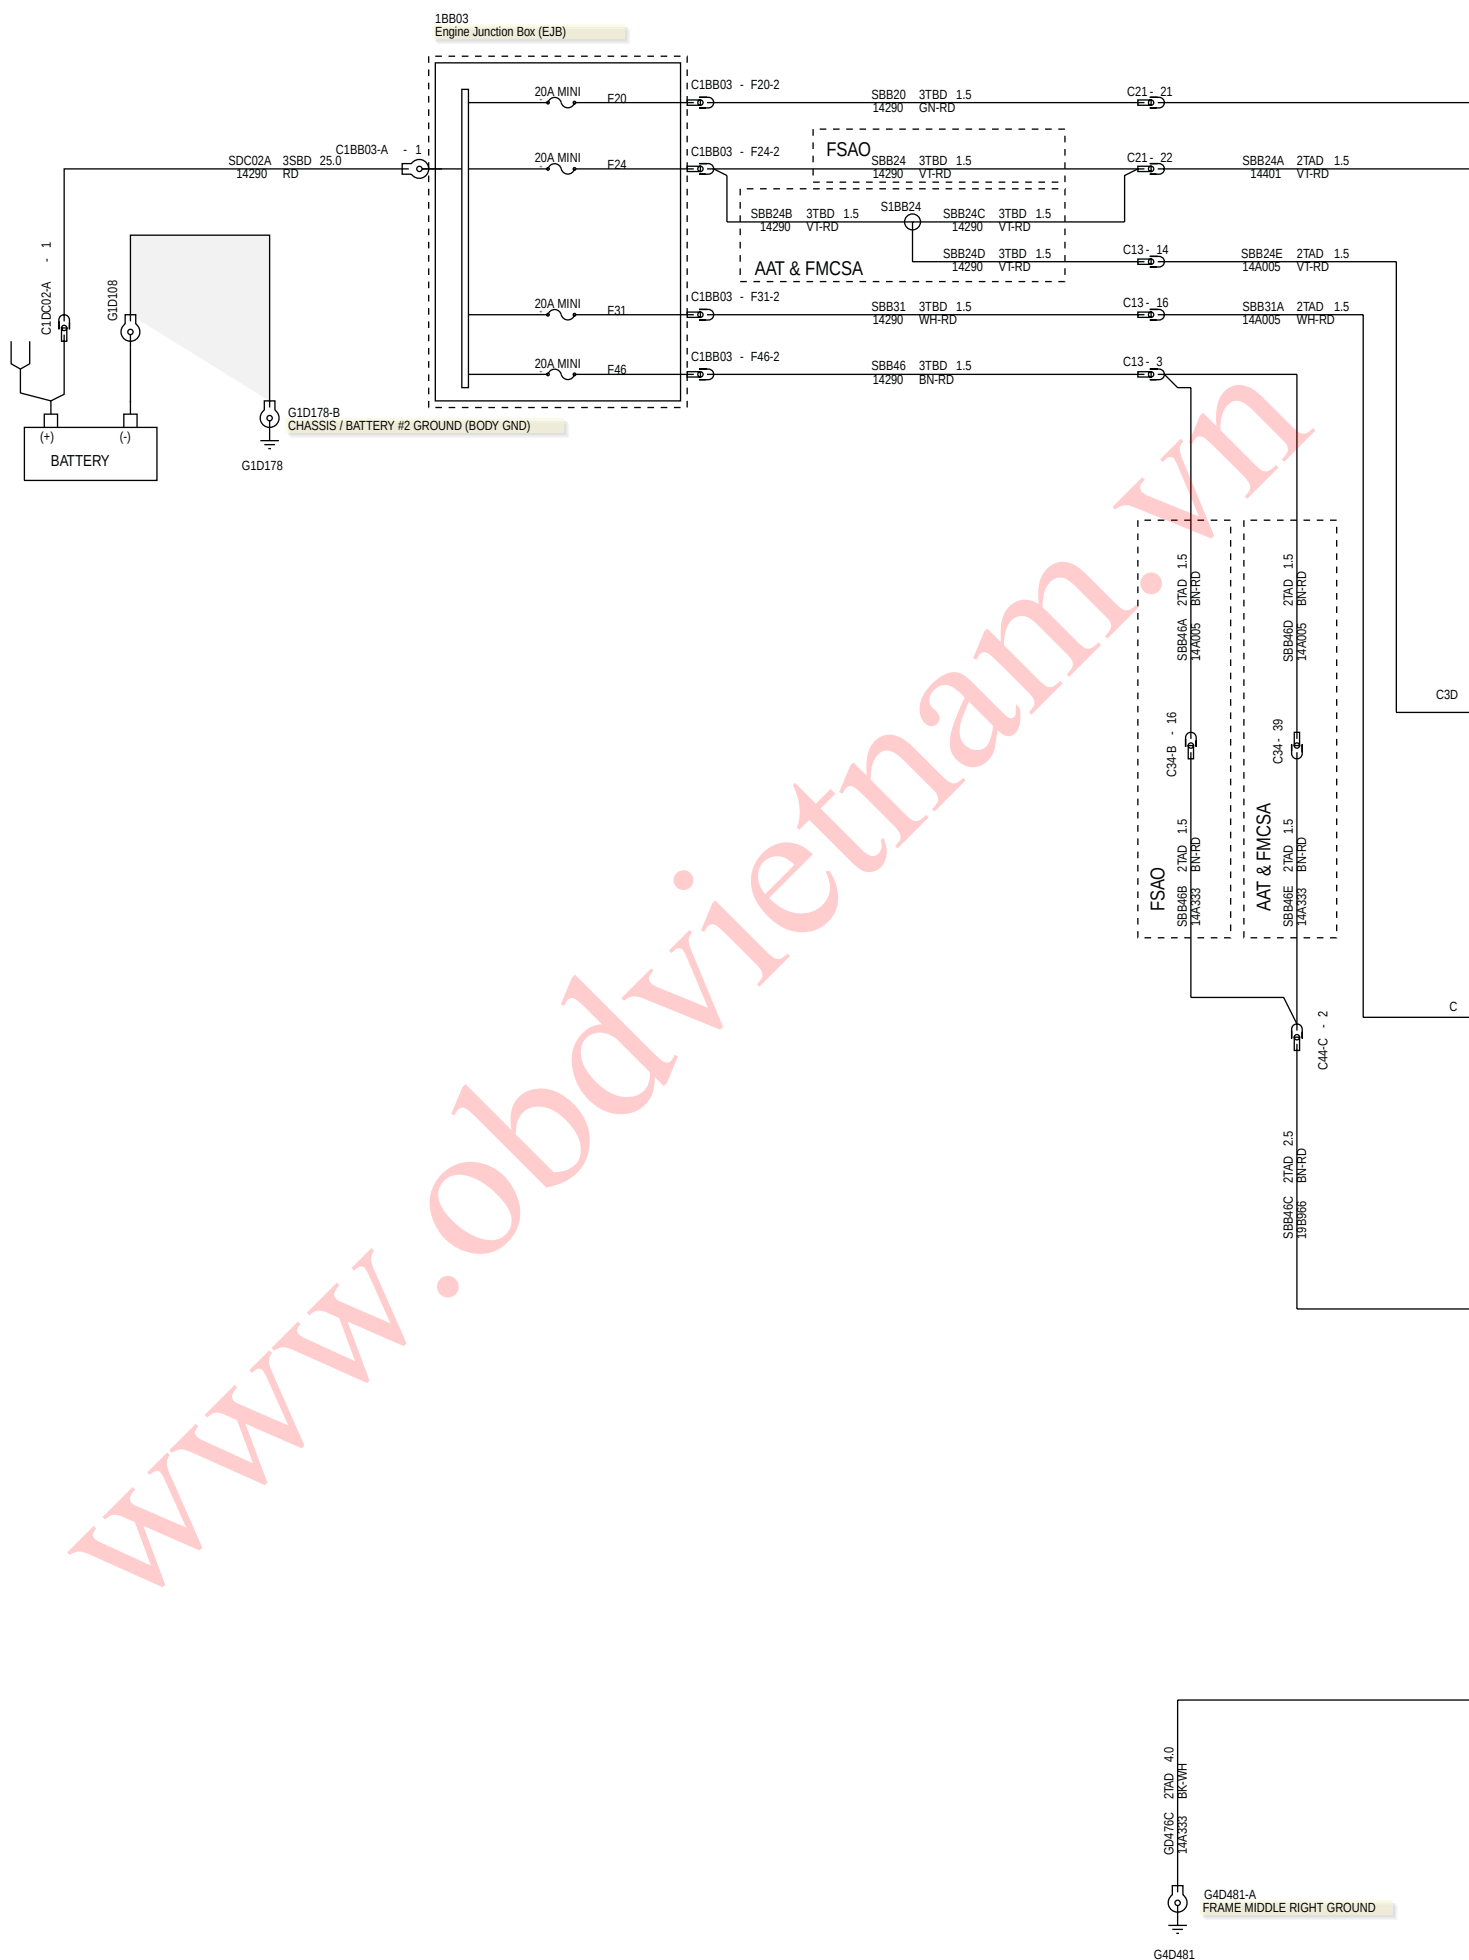


700-02-5 Cigar Lighter and Power Points—RHD 4WD/RHD RWD

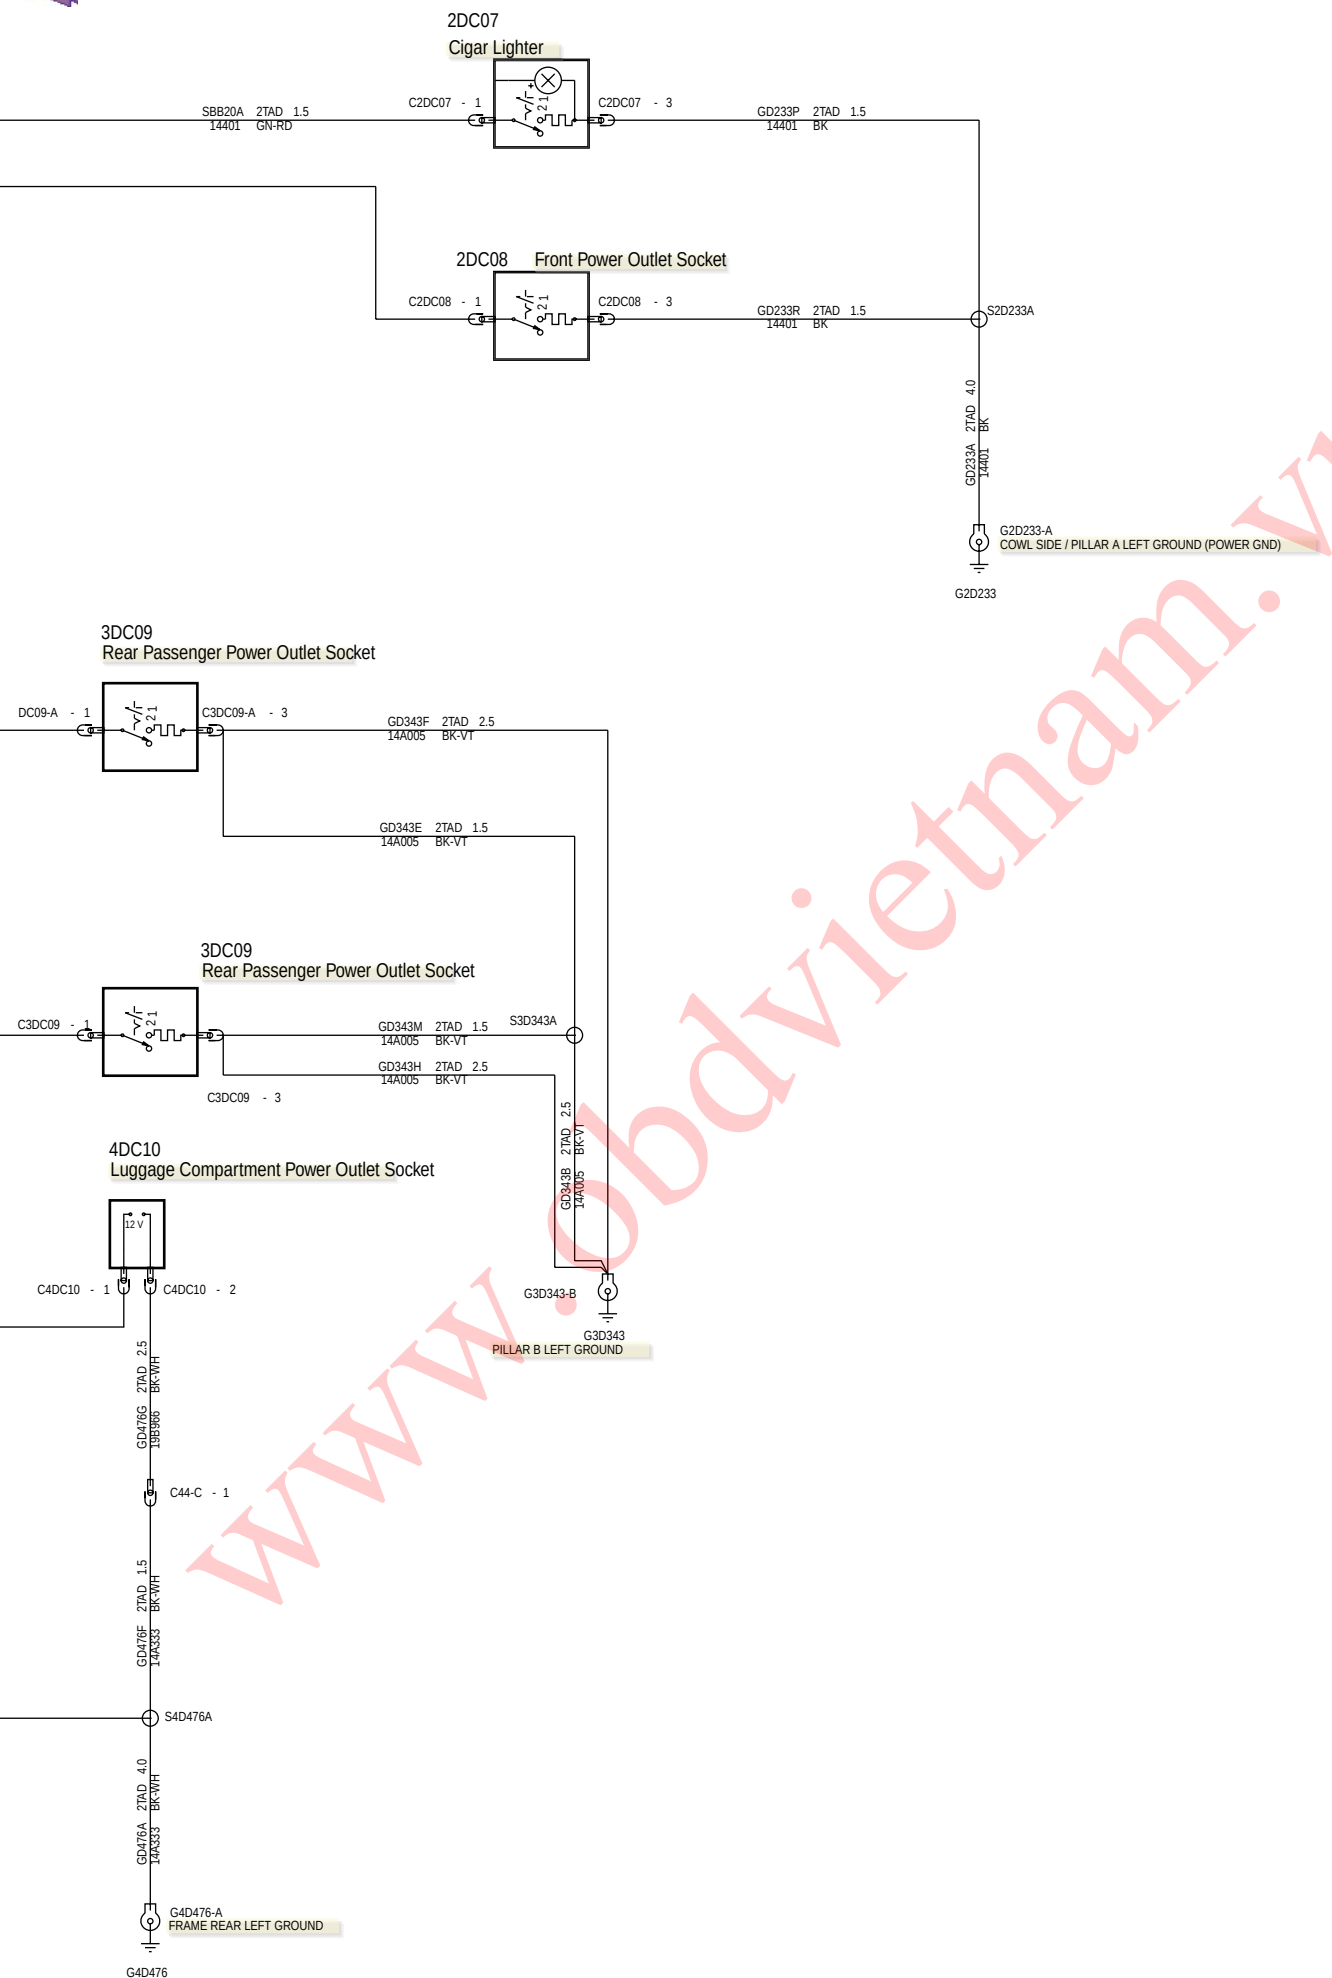

700-02-6 Power Distribution

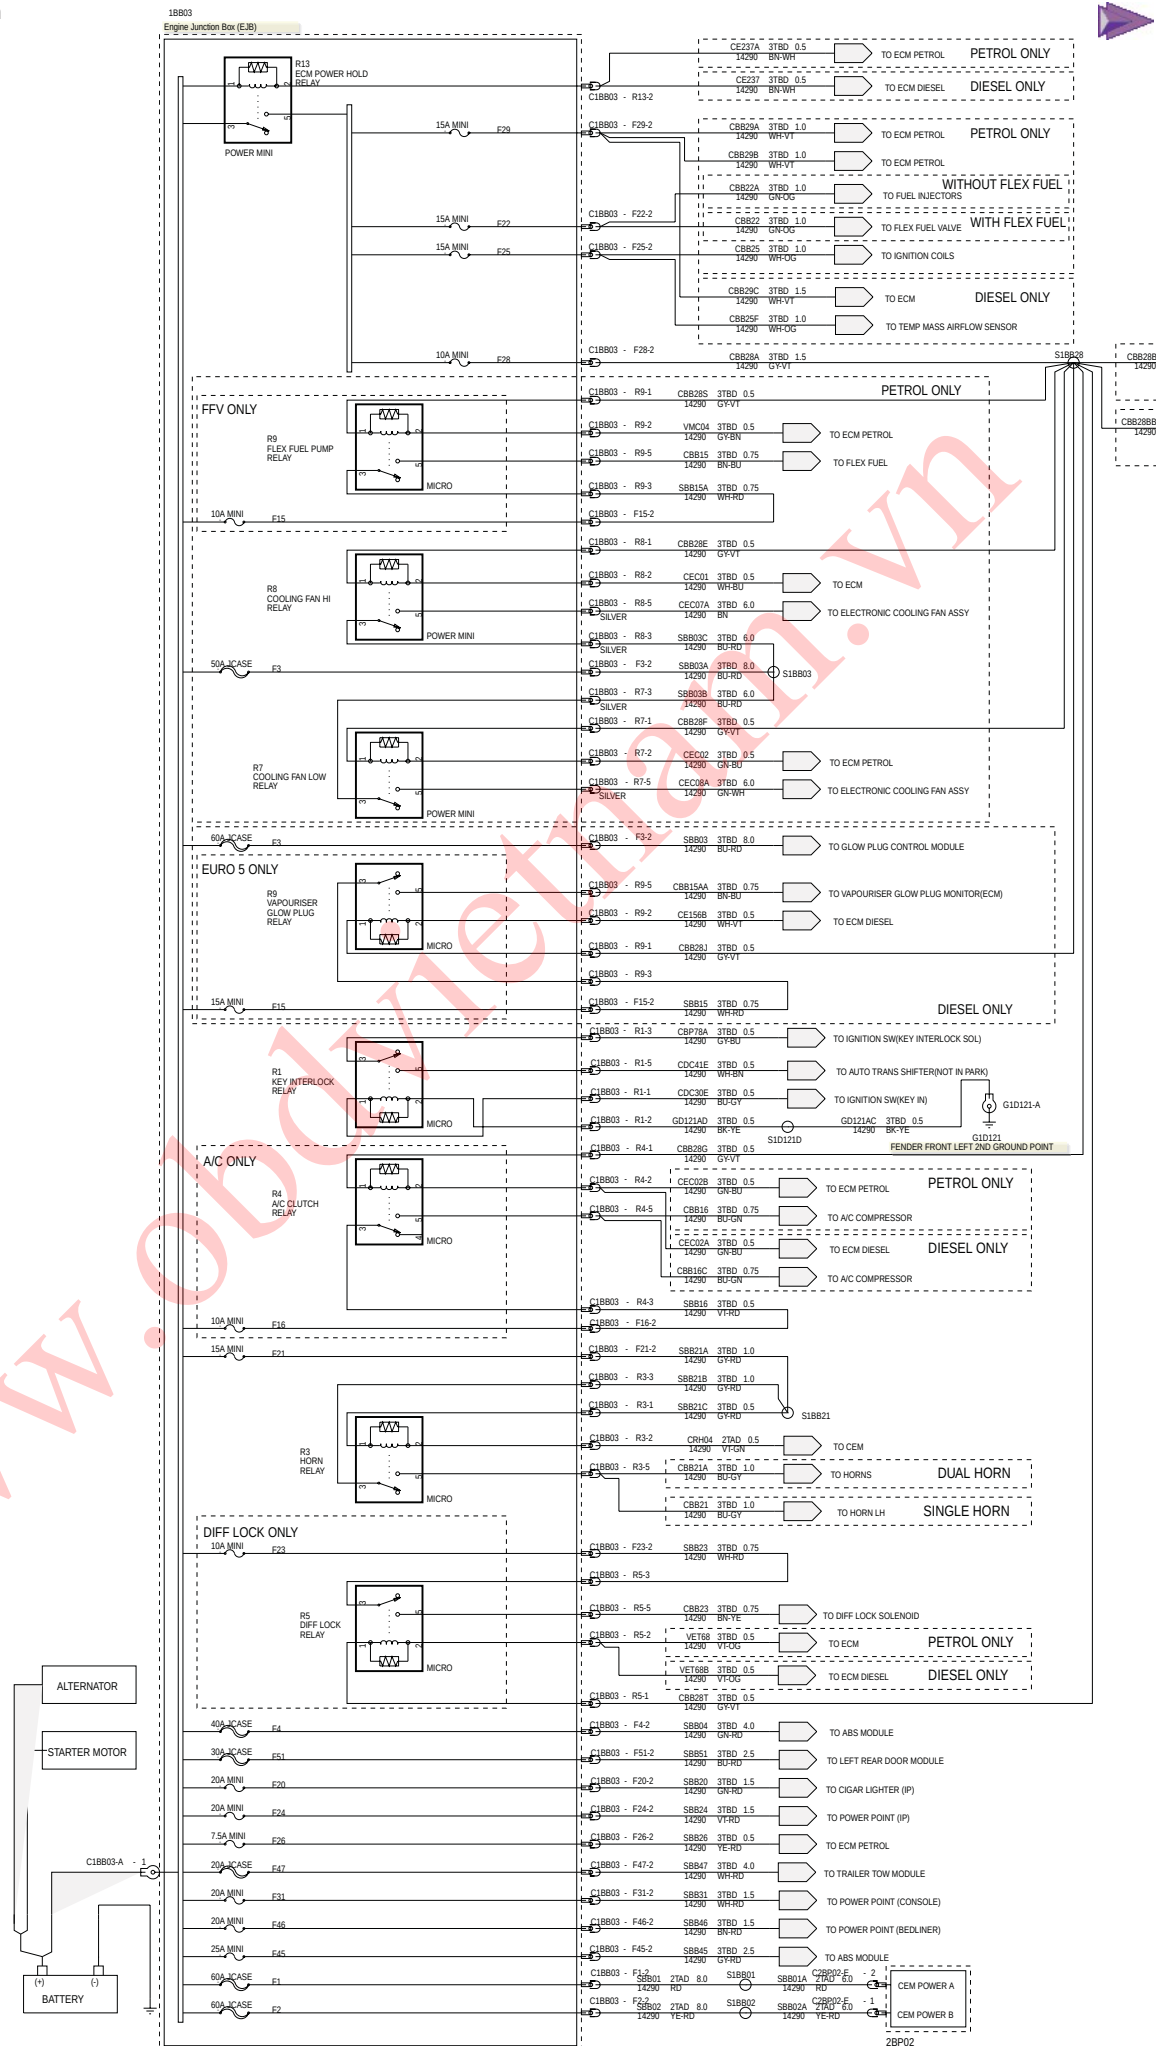


700-02-7 Power Distribution

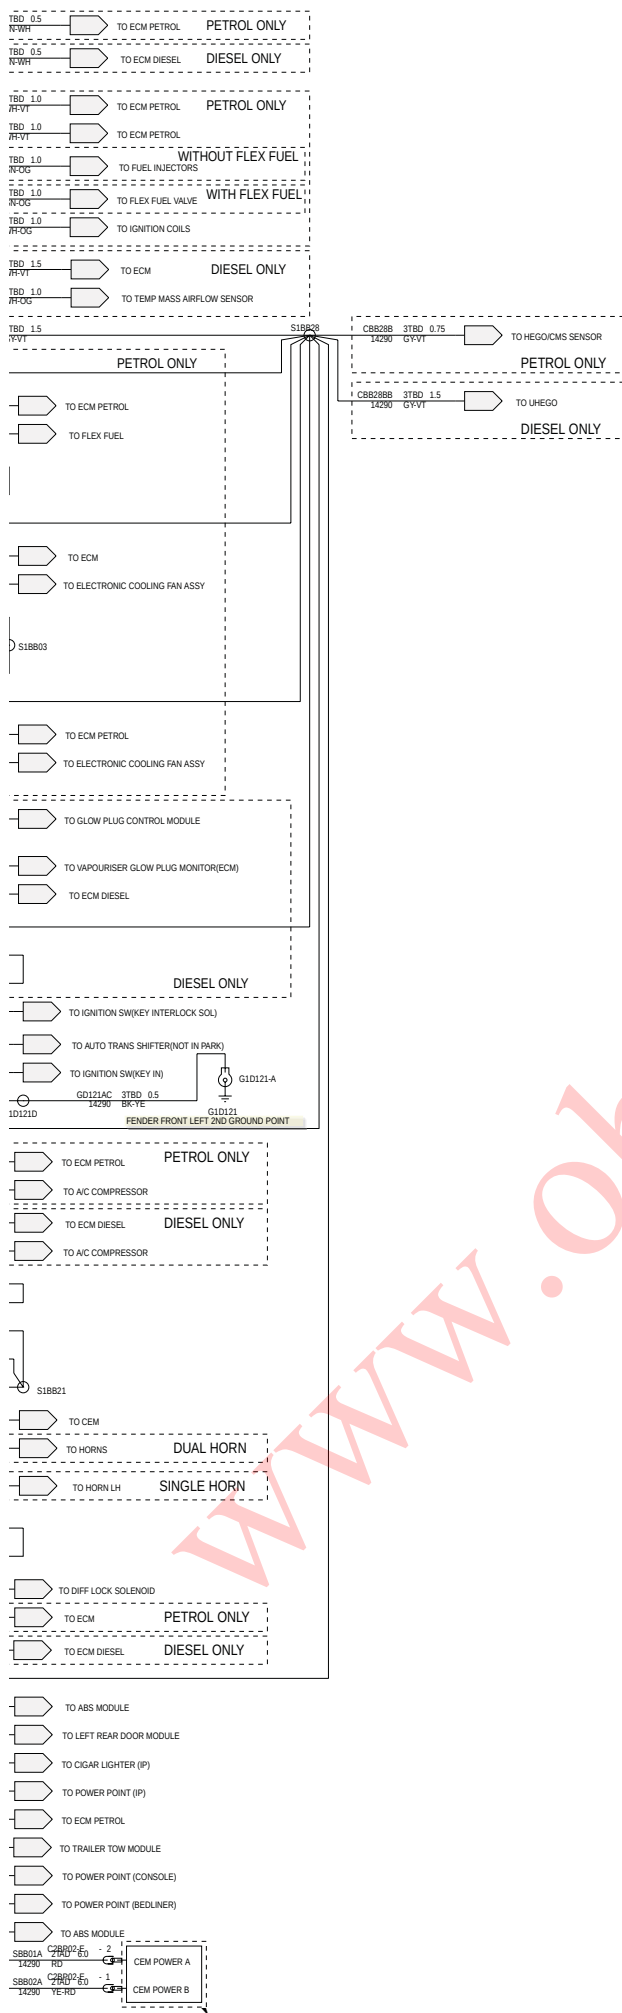


Năng tâm người thợ Việt

2012.0 Ranger (G1406811)

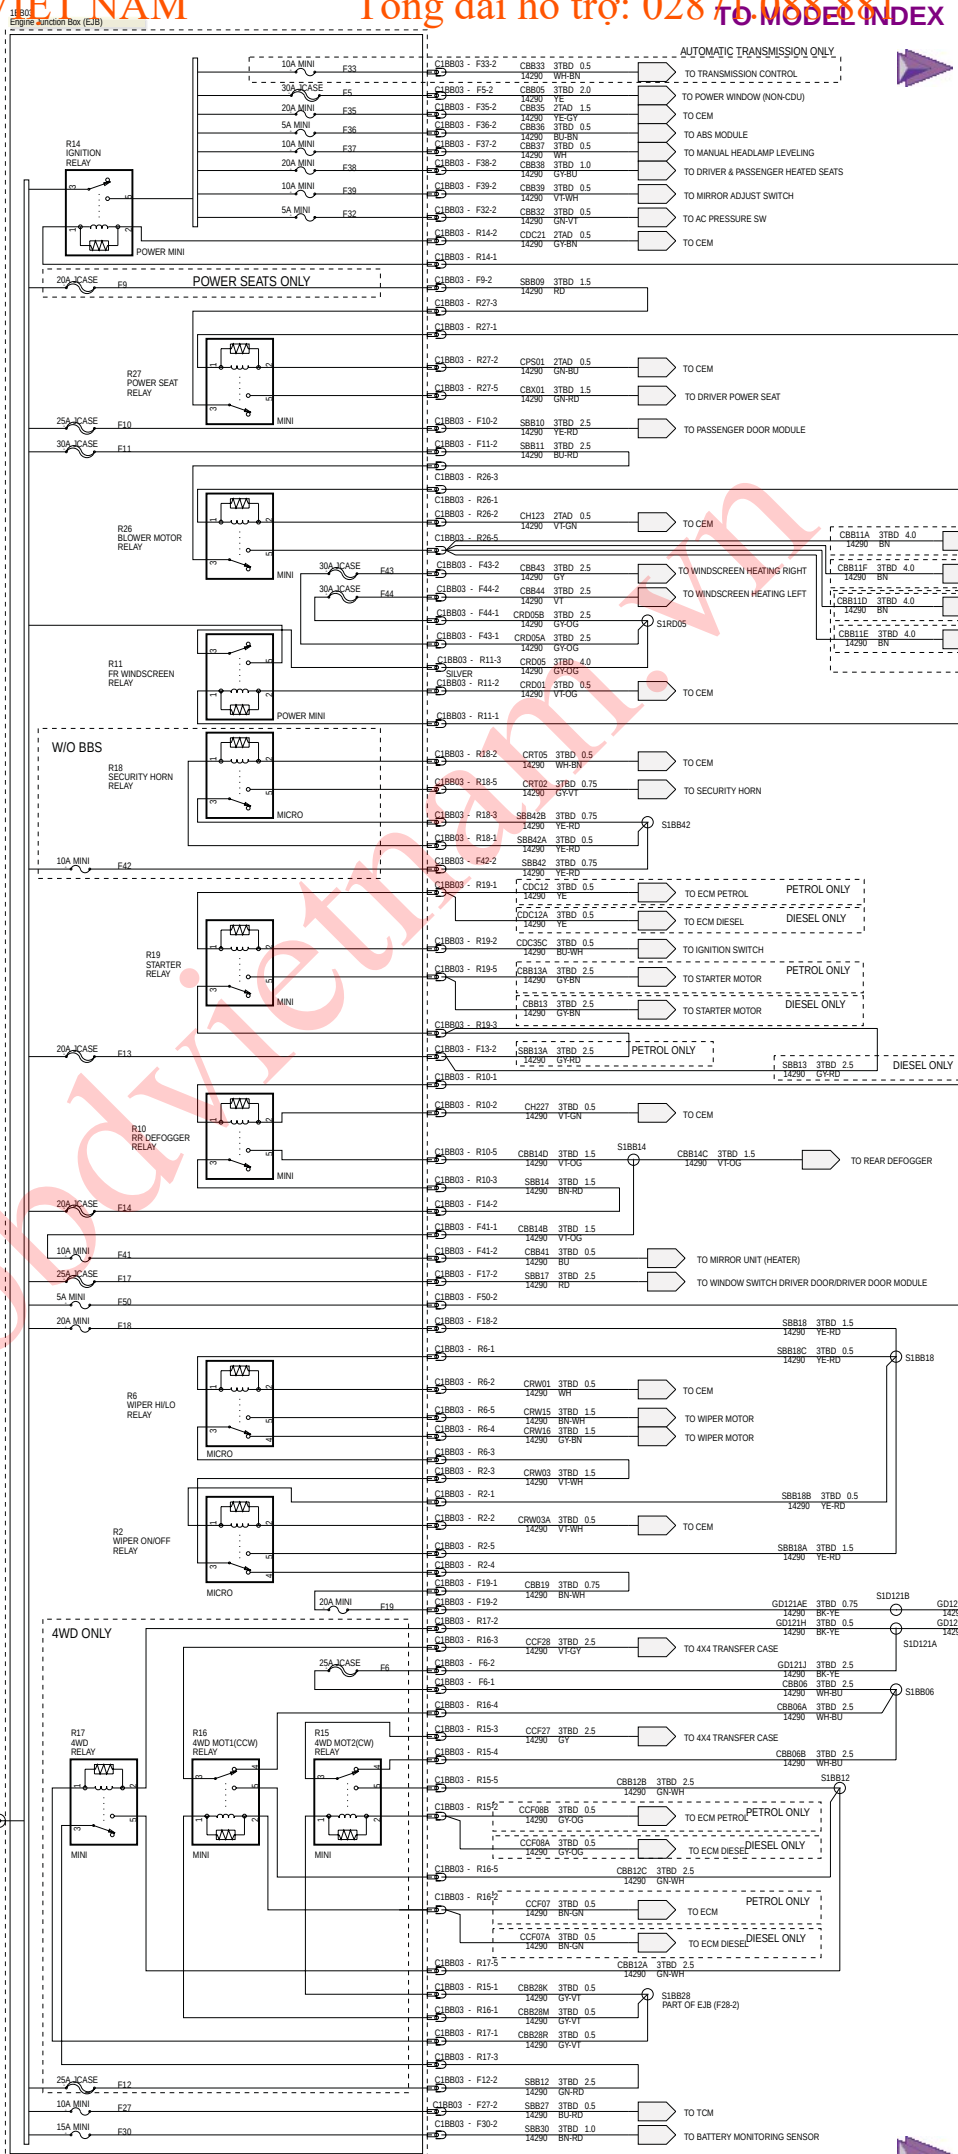

700-02-9 Power Distribution

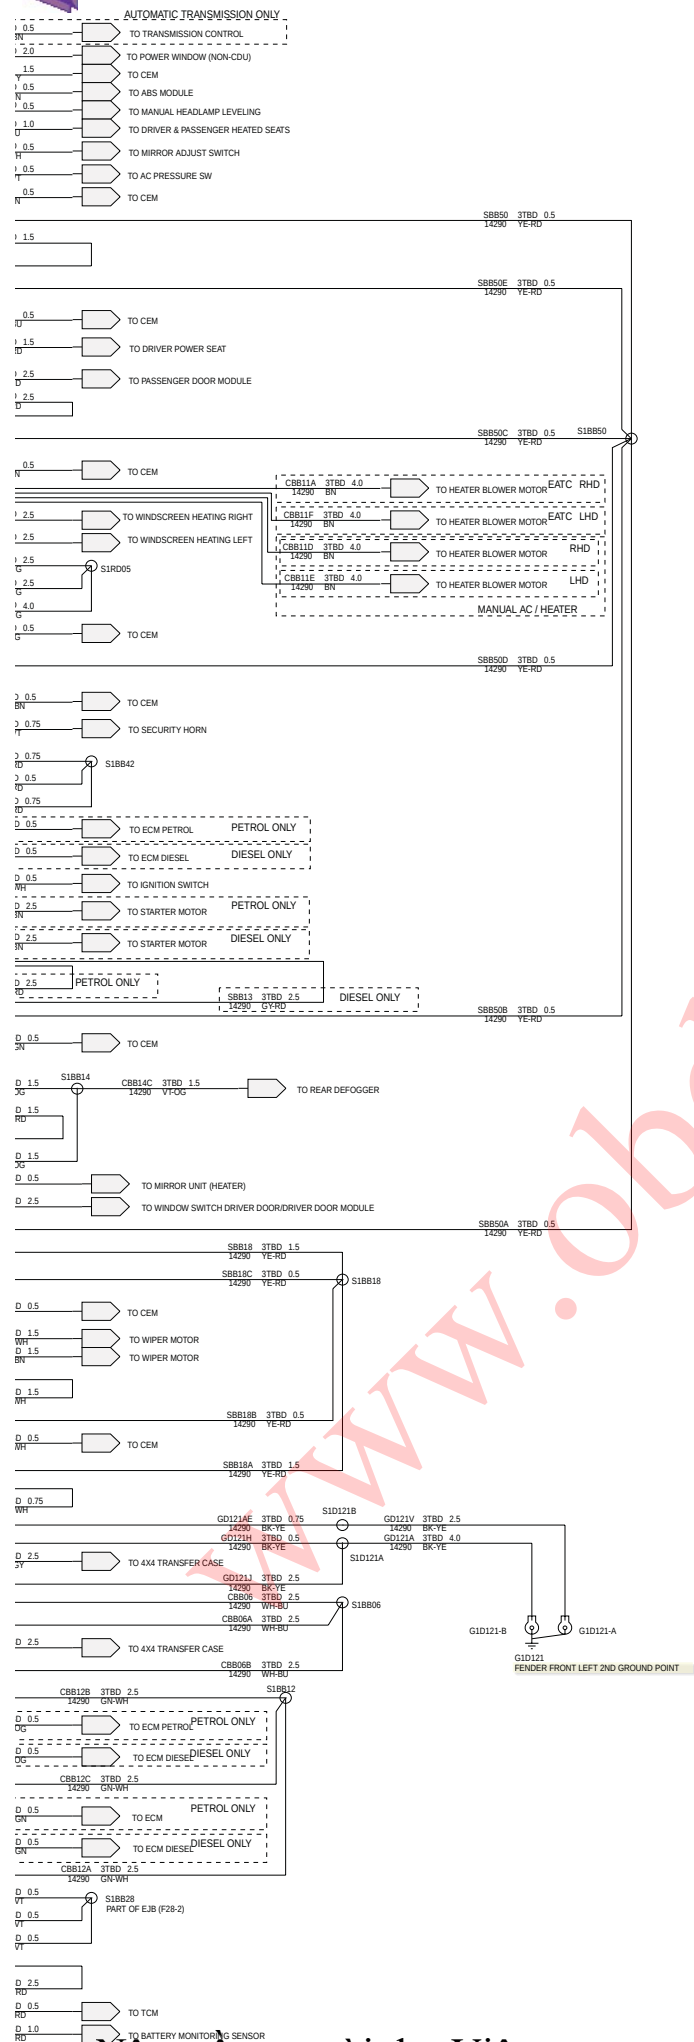

SECTION 700-03 Grounding Strategy

VEHICLE APPLICATION: 2012.0 Ranger


CONTENTS

PAGE


ELECTRICAL SCHEMATICS

Grounding — LHD.....	700-03-2
Grounding — RHD.....	700-03-10


700-03-2 Grounding—LHD

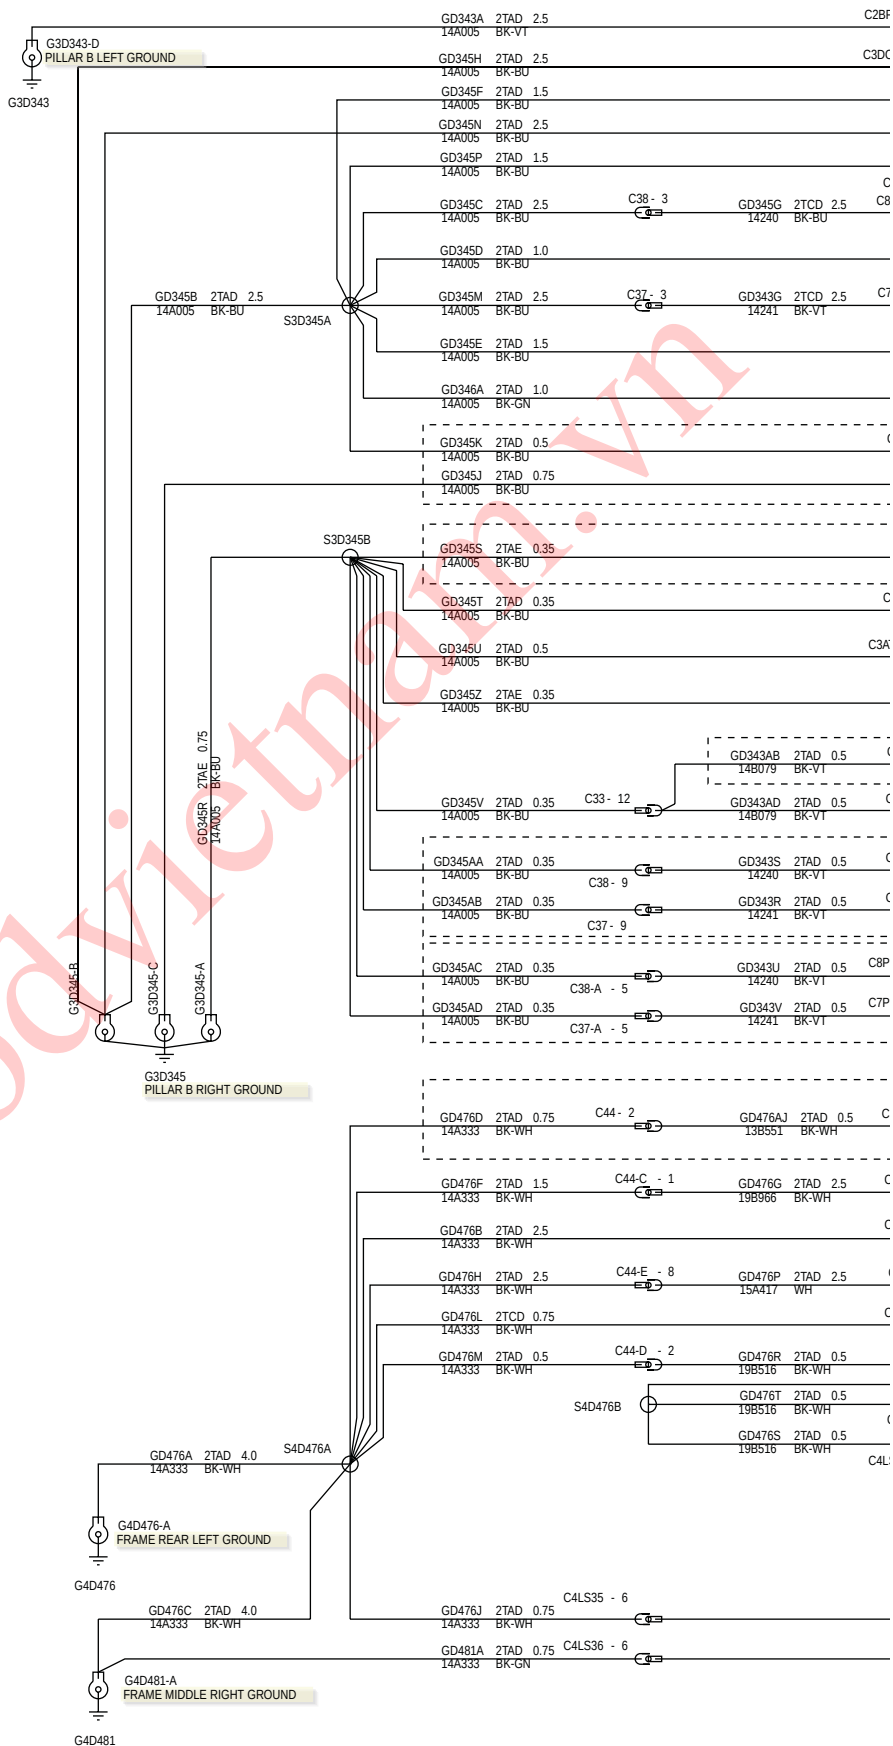


700-03-3 Grounding—LHD

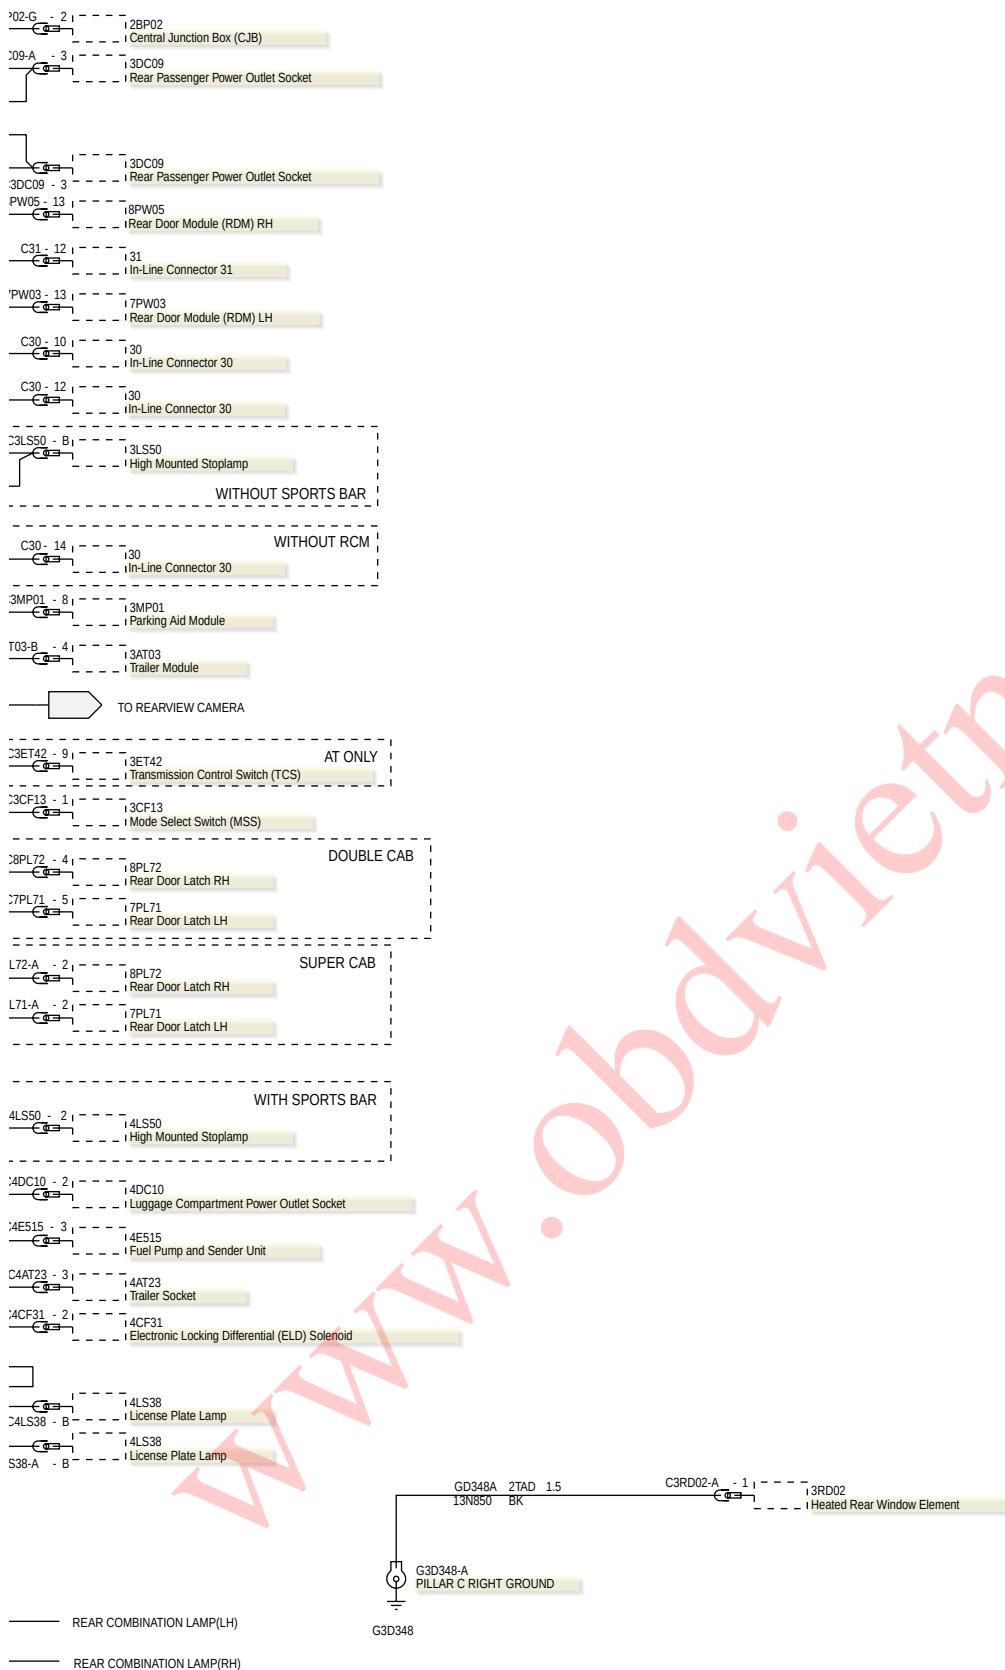


700-03-4 Grounding—LHD

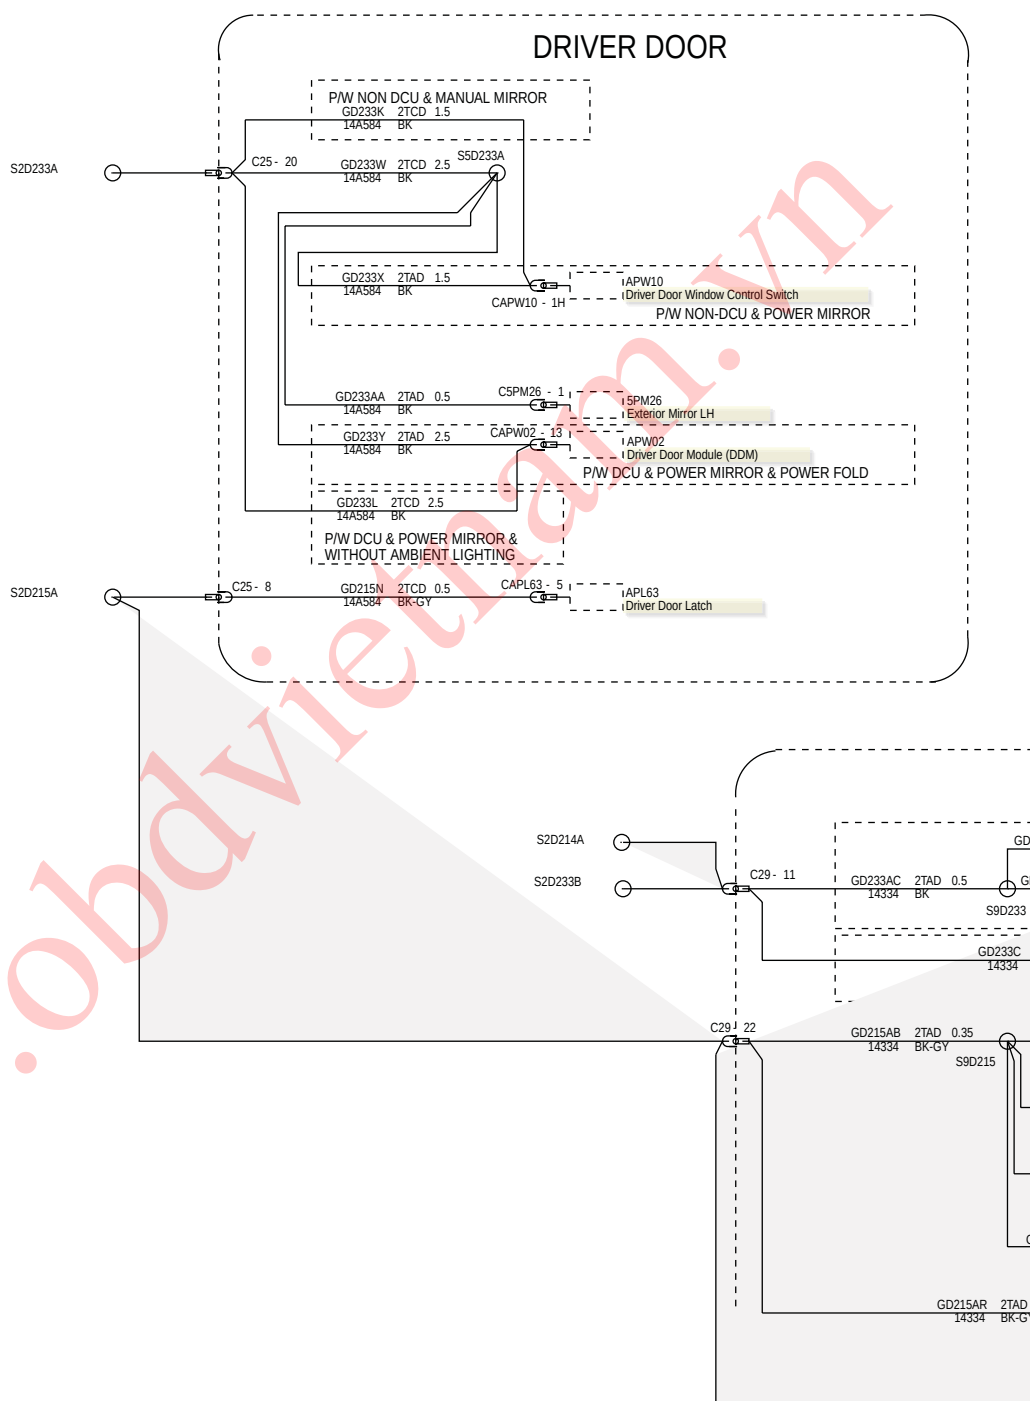


700-03-5 Grounding—LHD

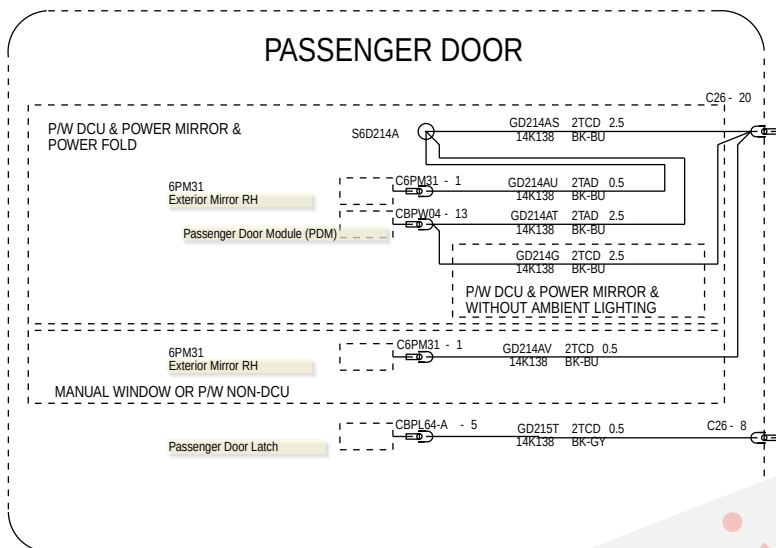


ROOF






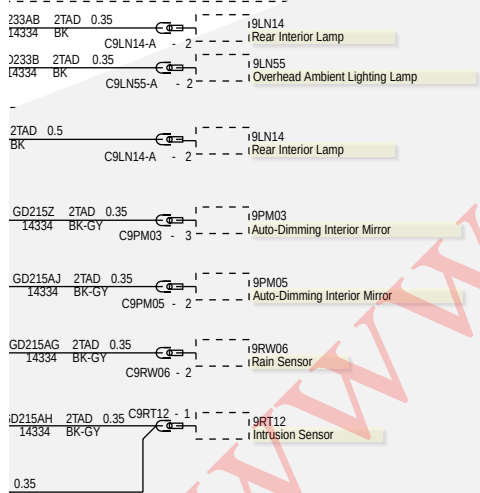



700-03-6 Grounding—LHD

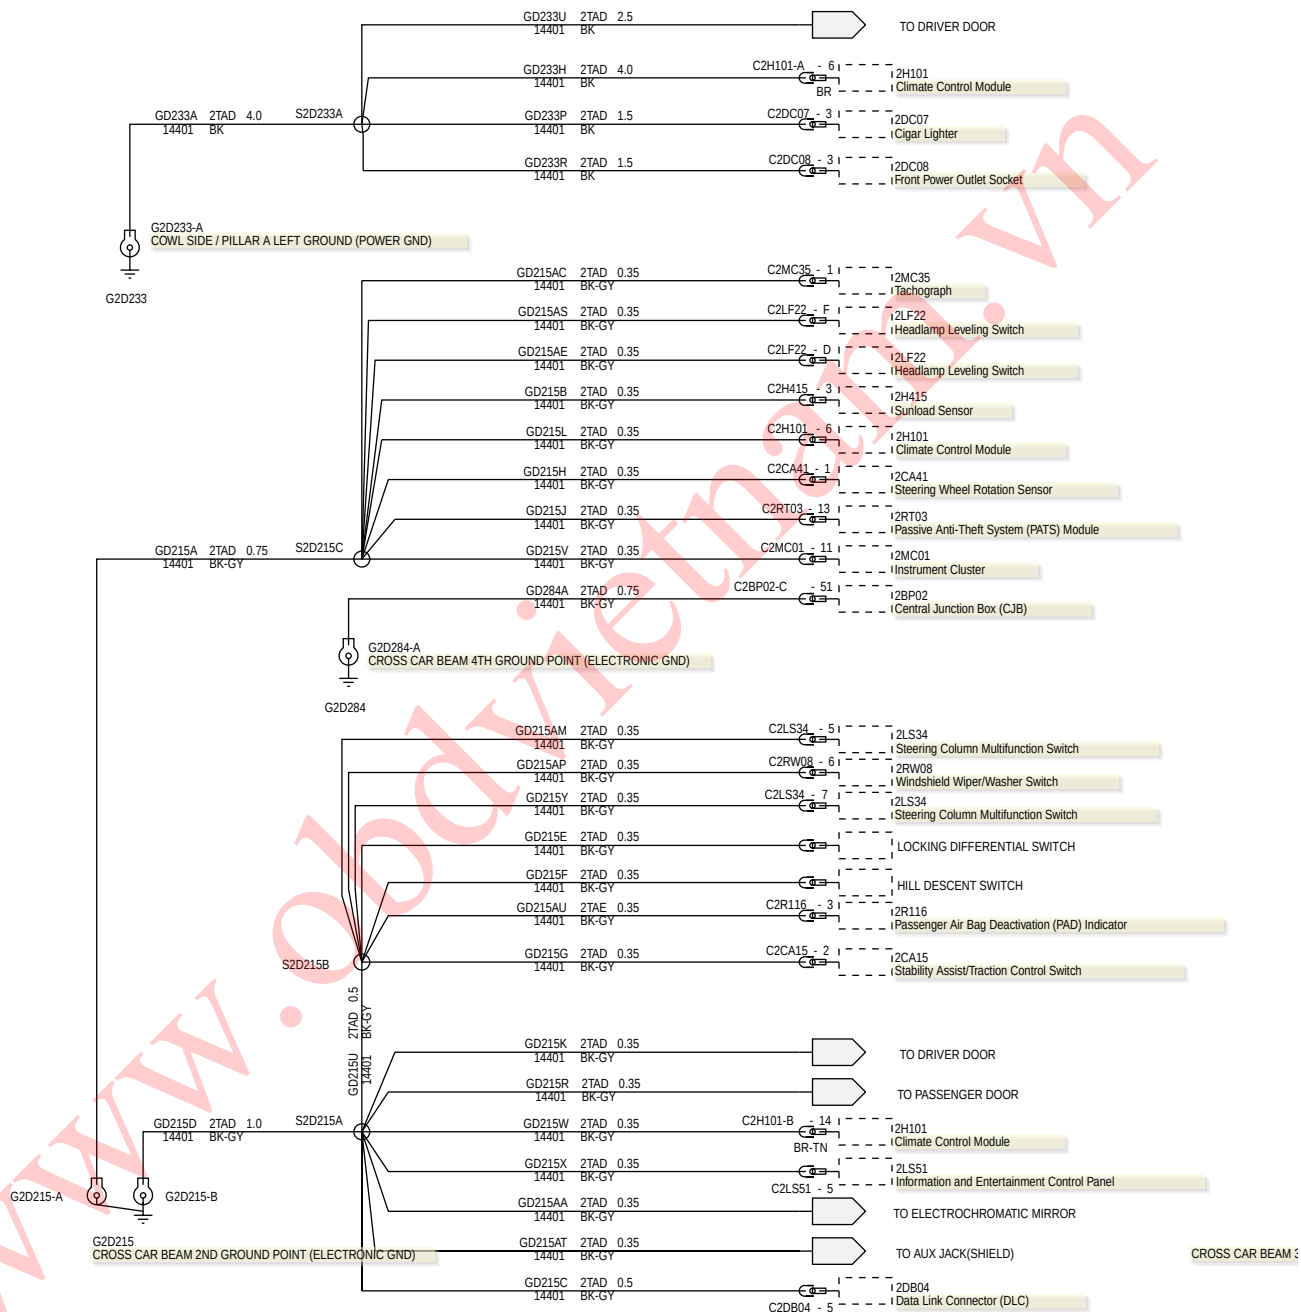





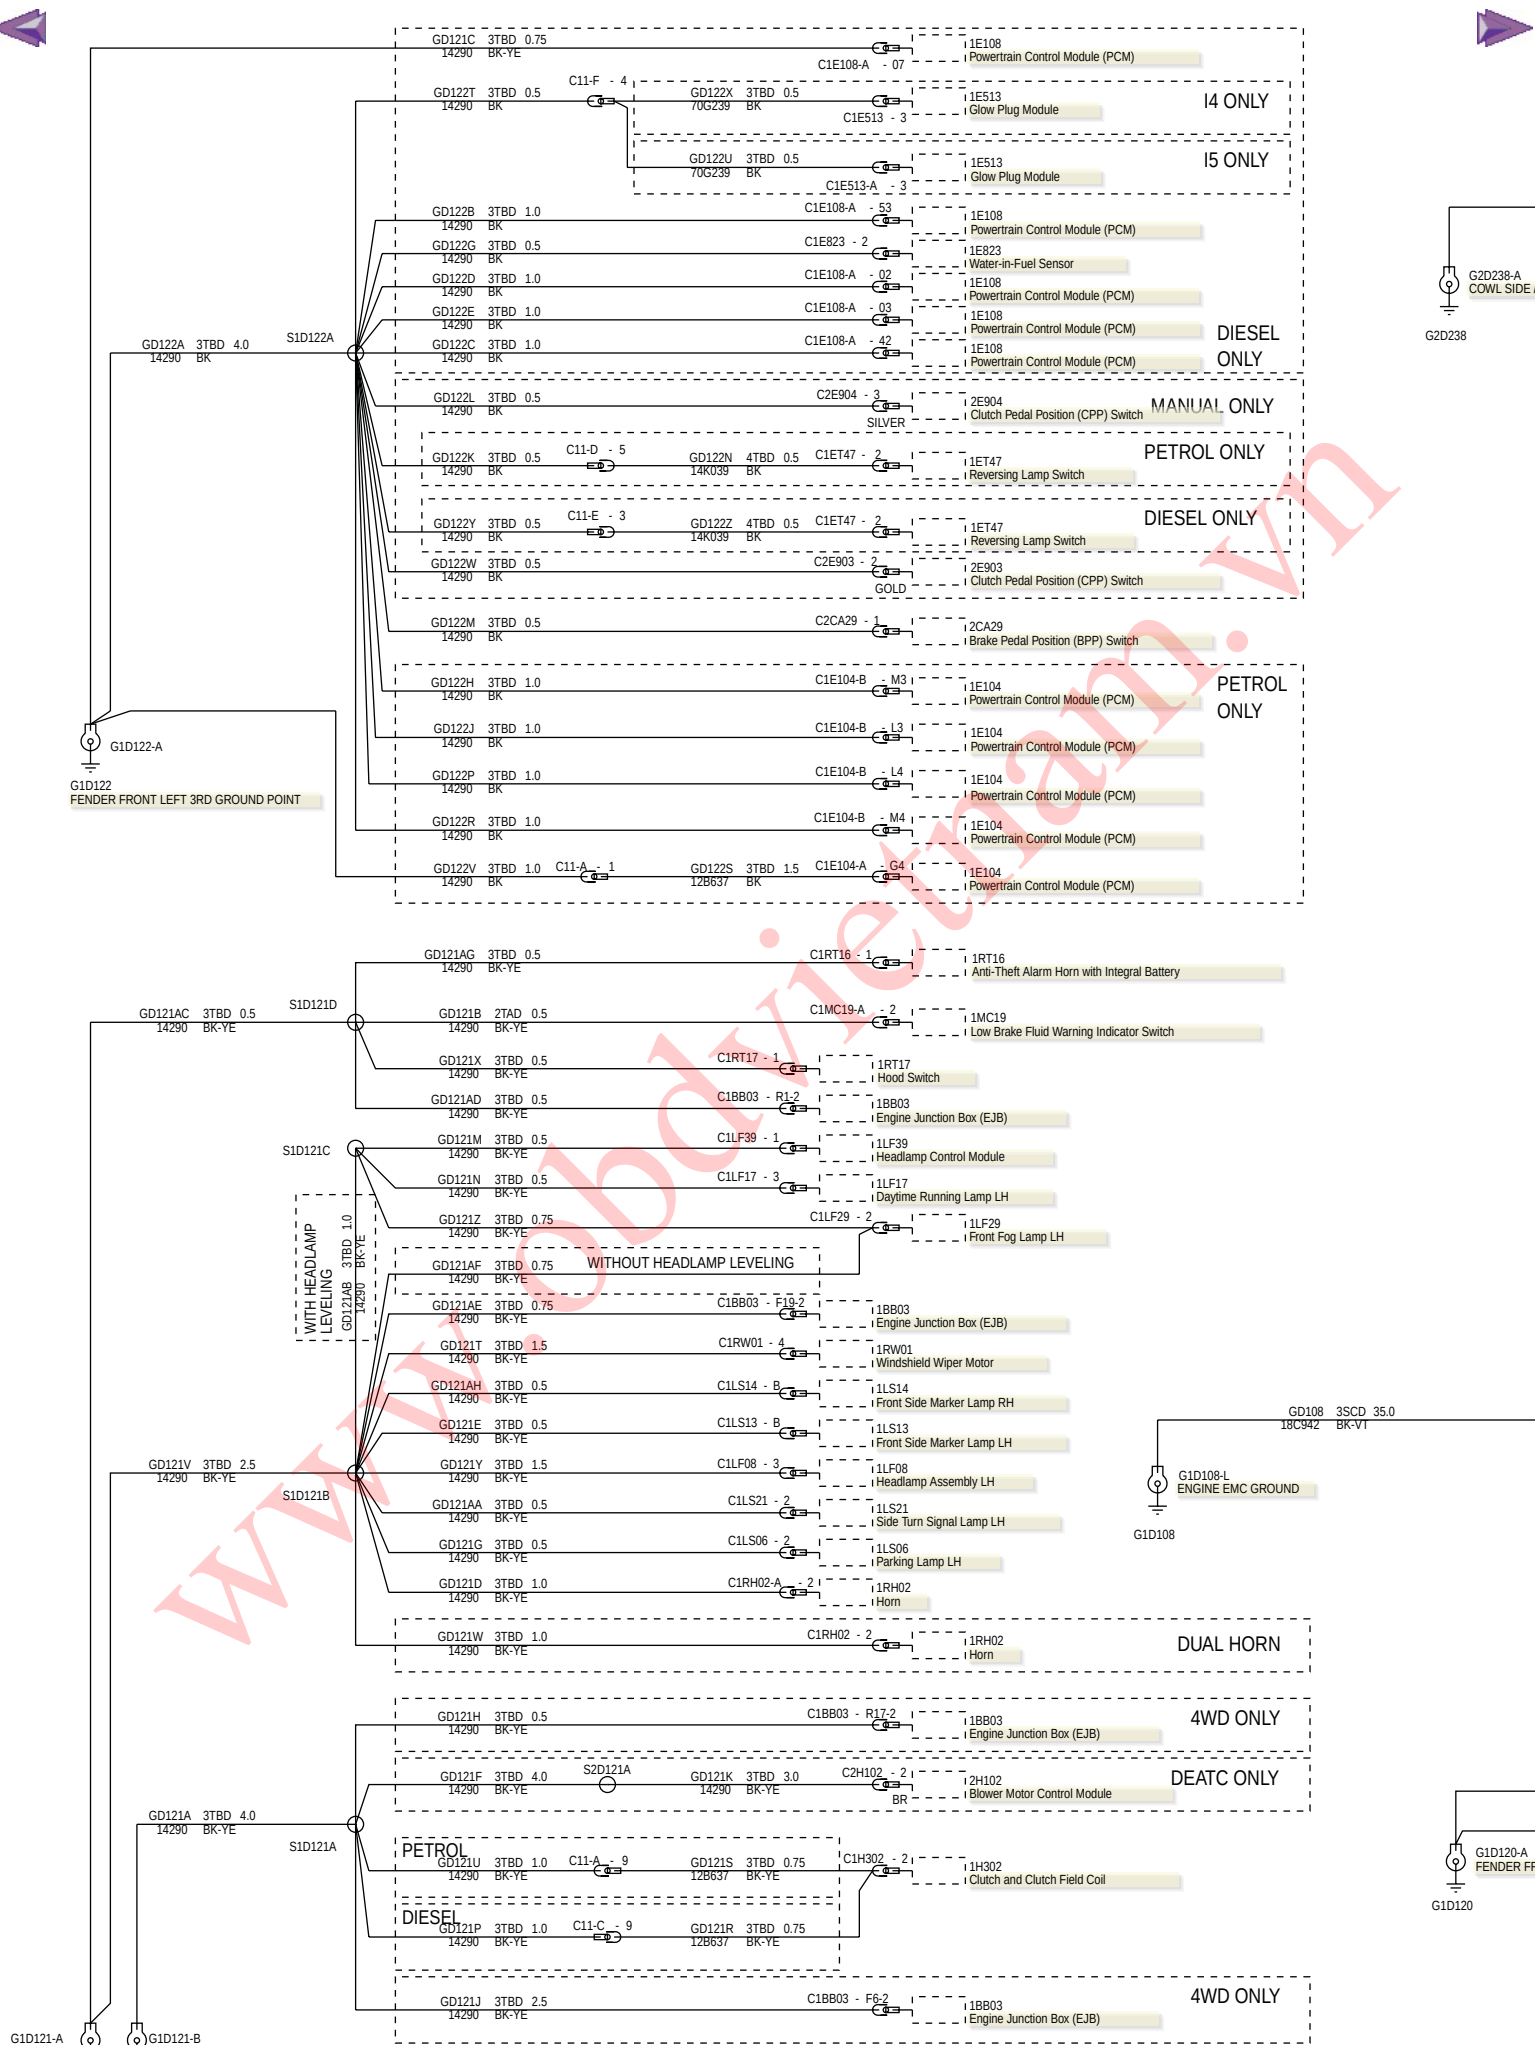


700-03-9 Grounding—LHD

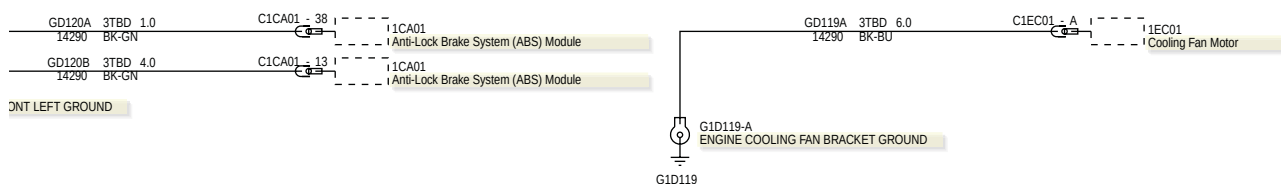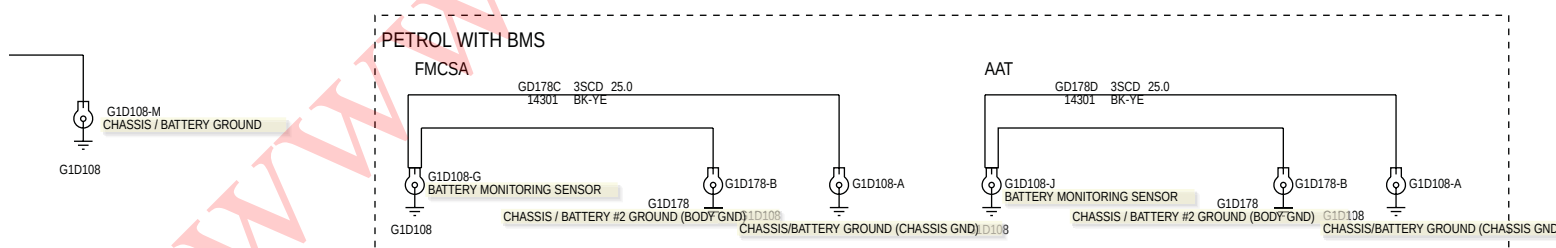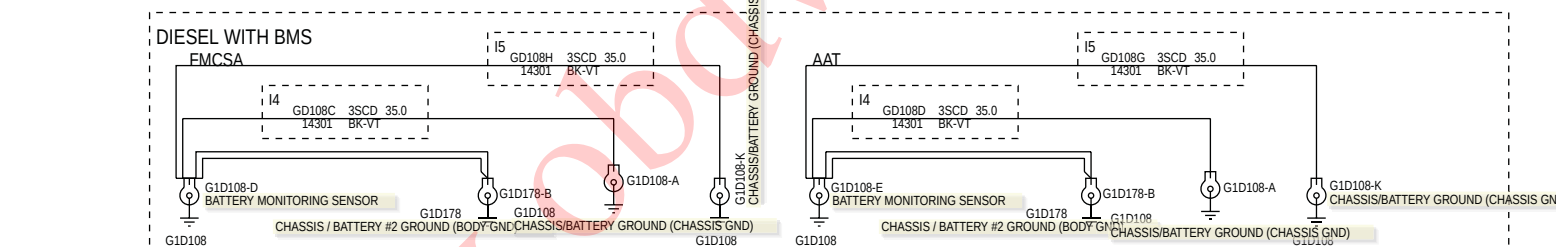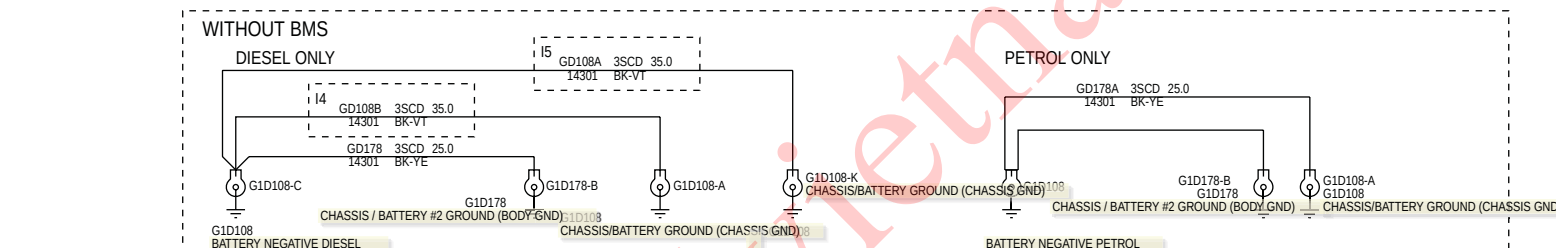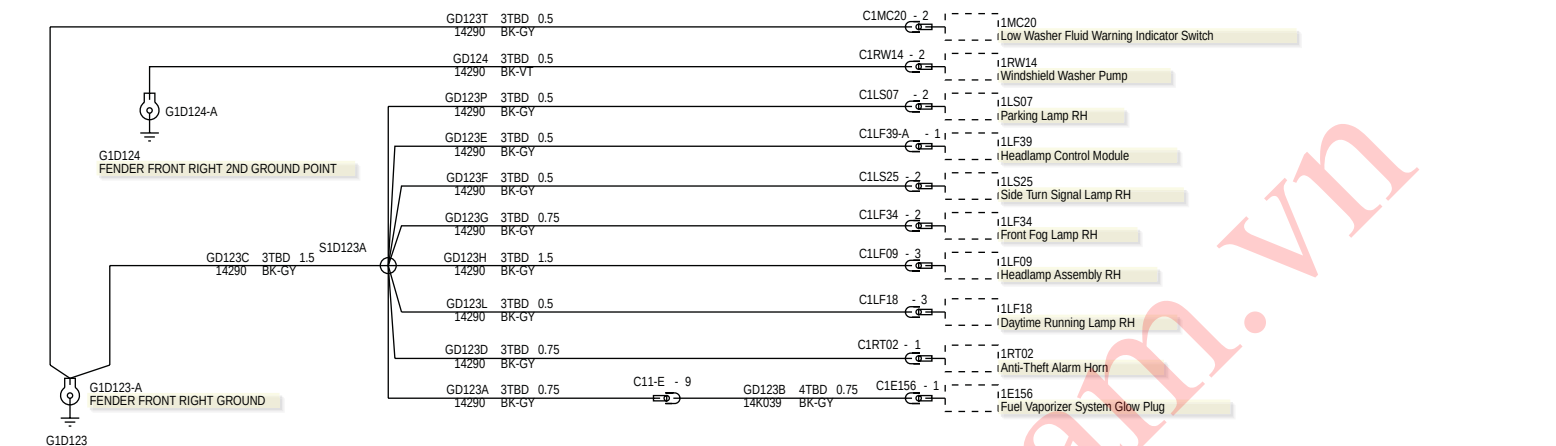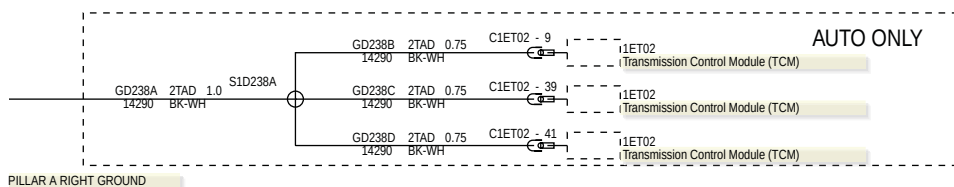

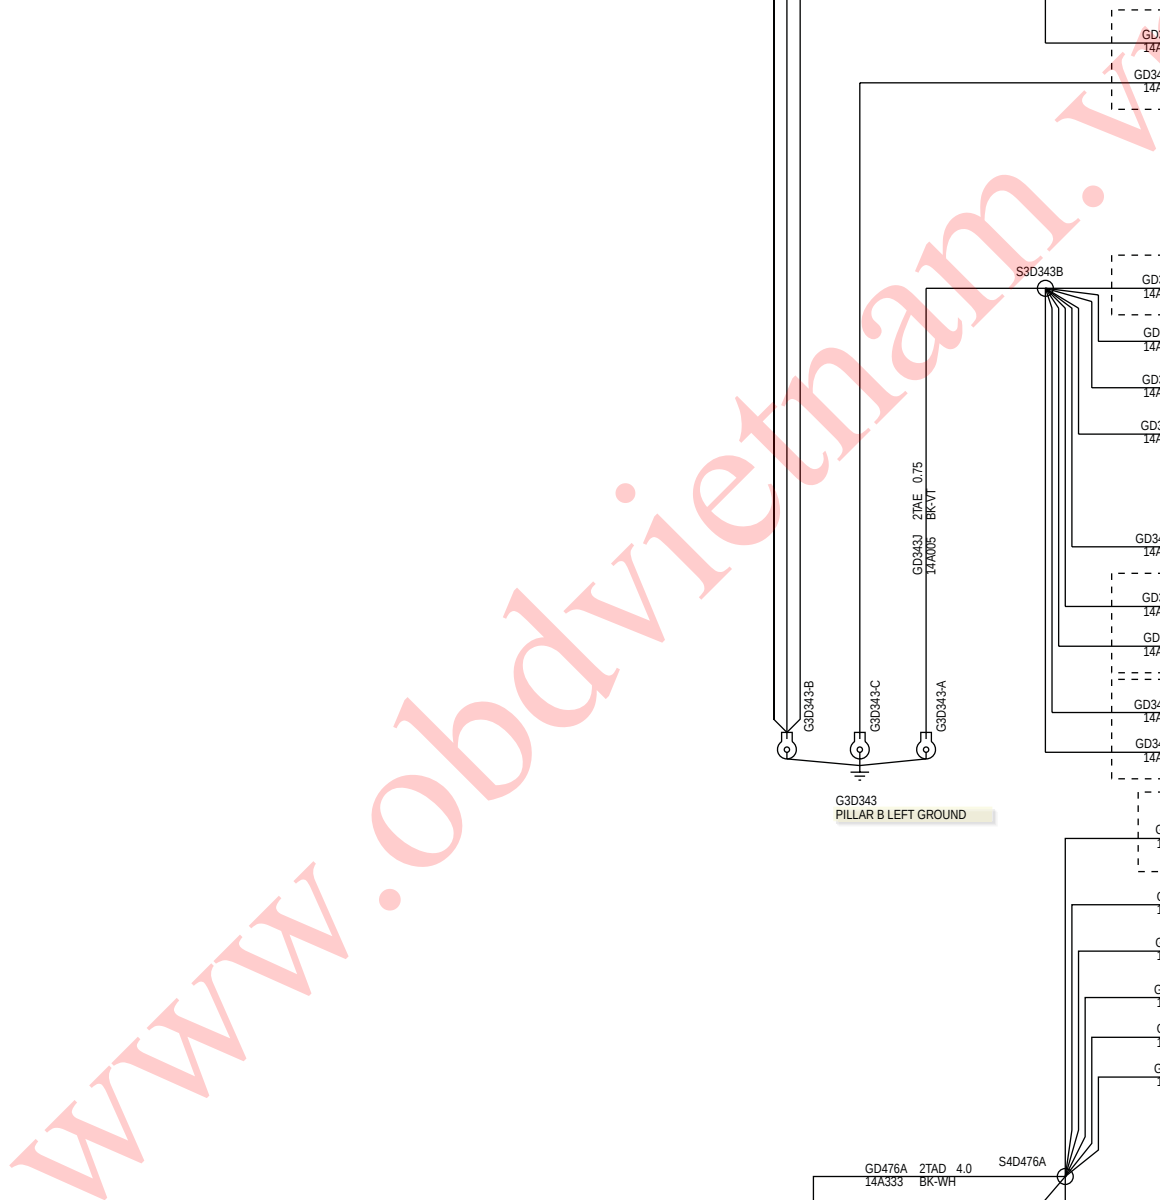


700-03-11 Grounding—RHD

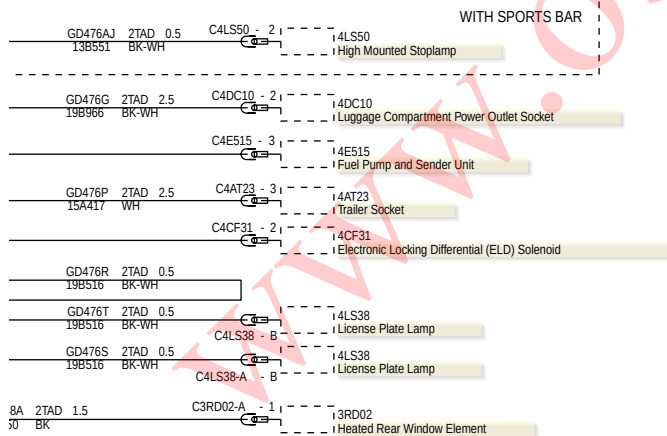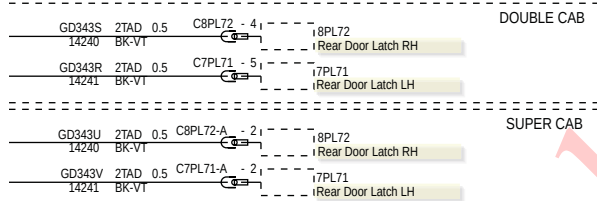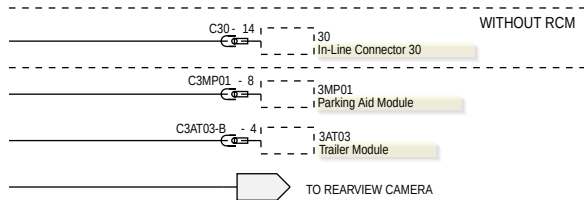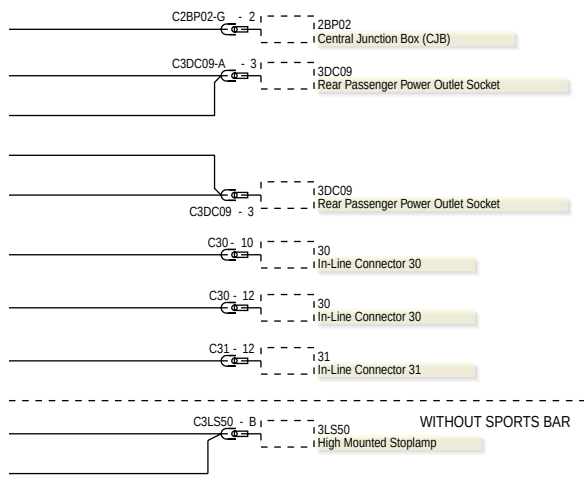


3HT GROUND


REAR COMBINATION LAMP(LH)
REAR COMBINATION LAMP(RH)

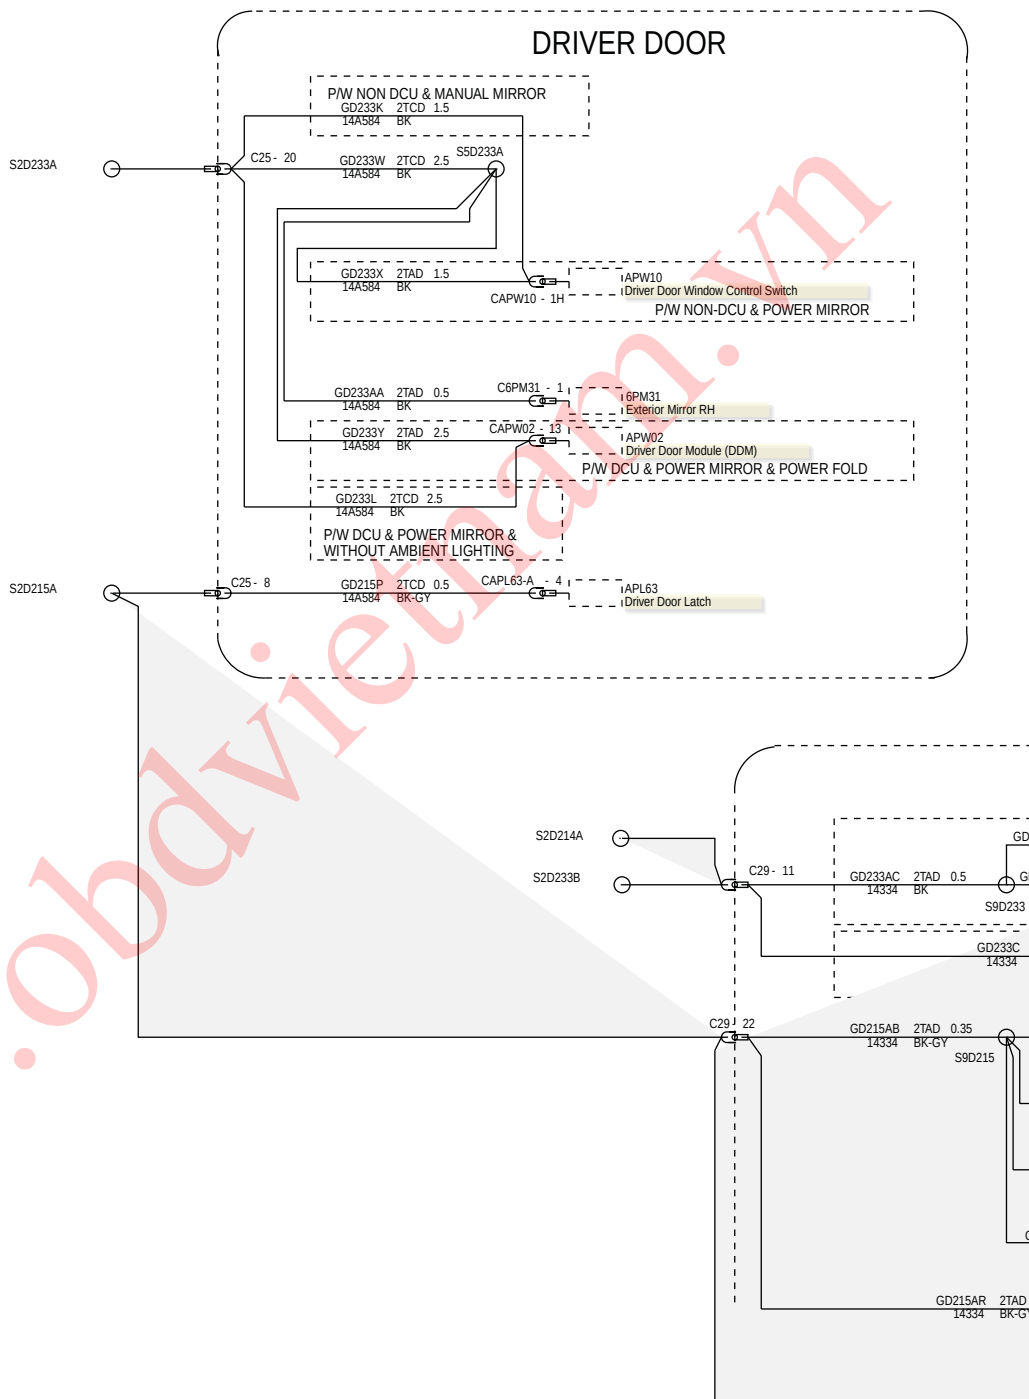


700-03-13 Grounding—RHD

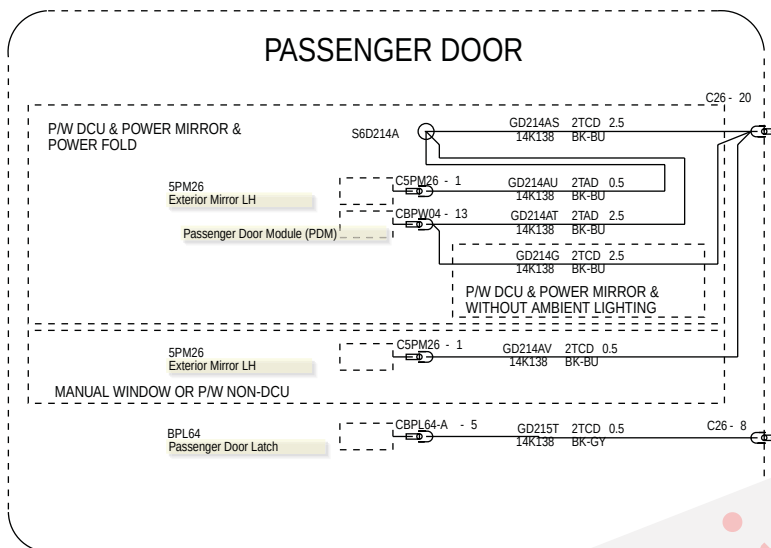


ROOF

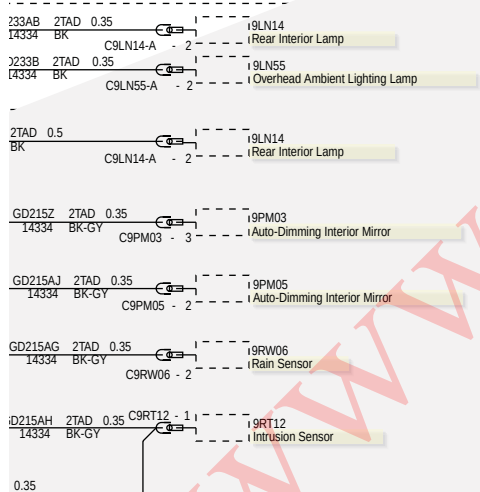


700-03-14 Grounding—RHD

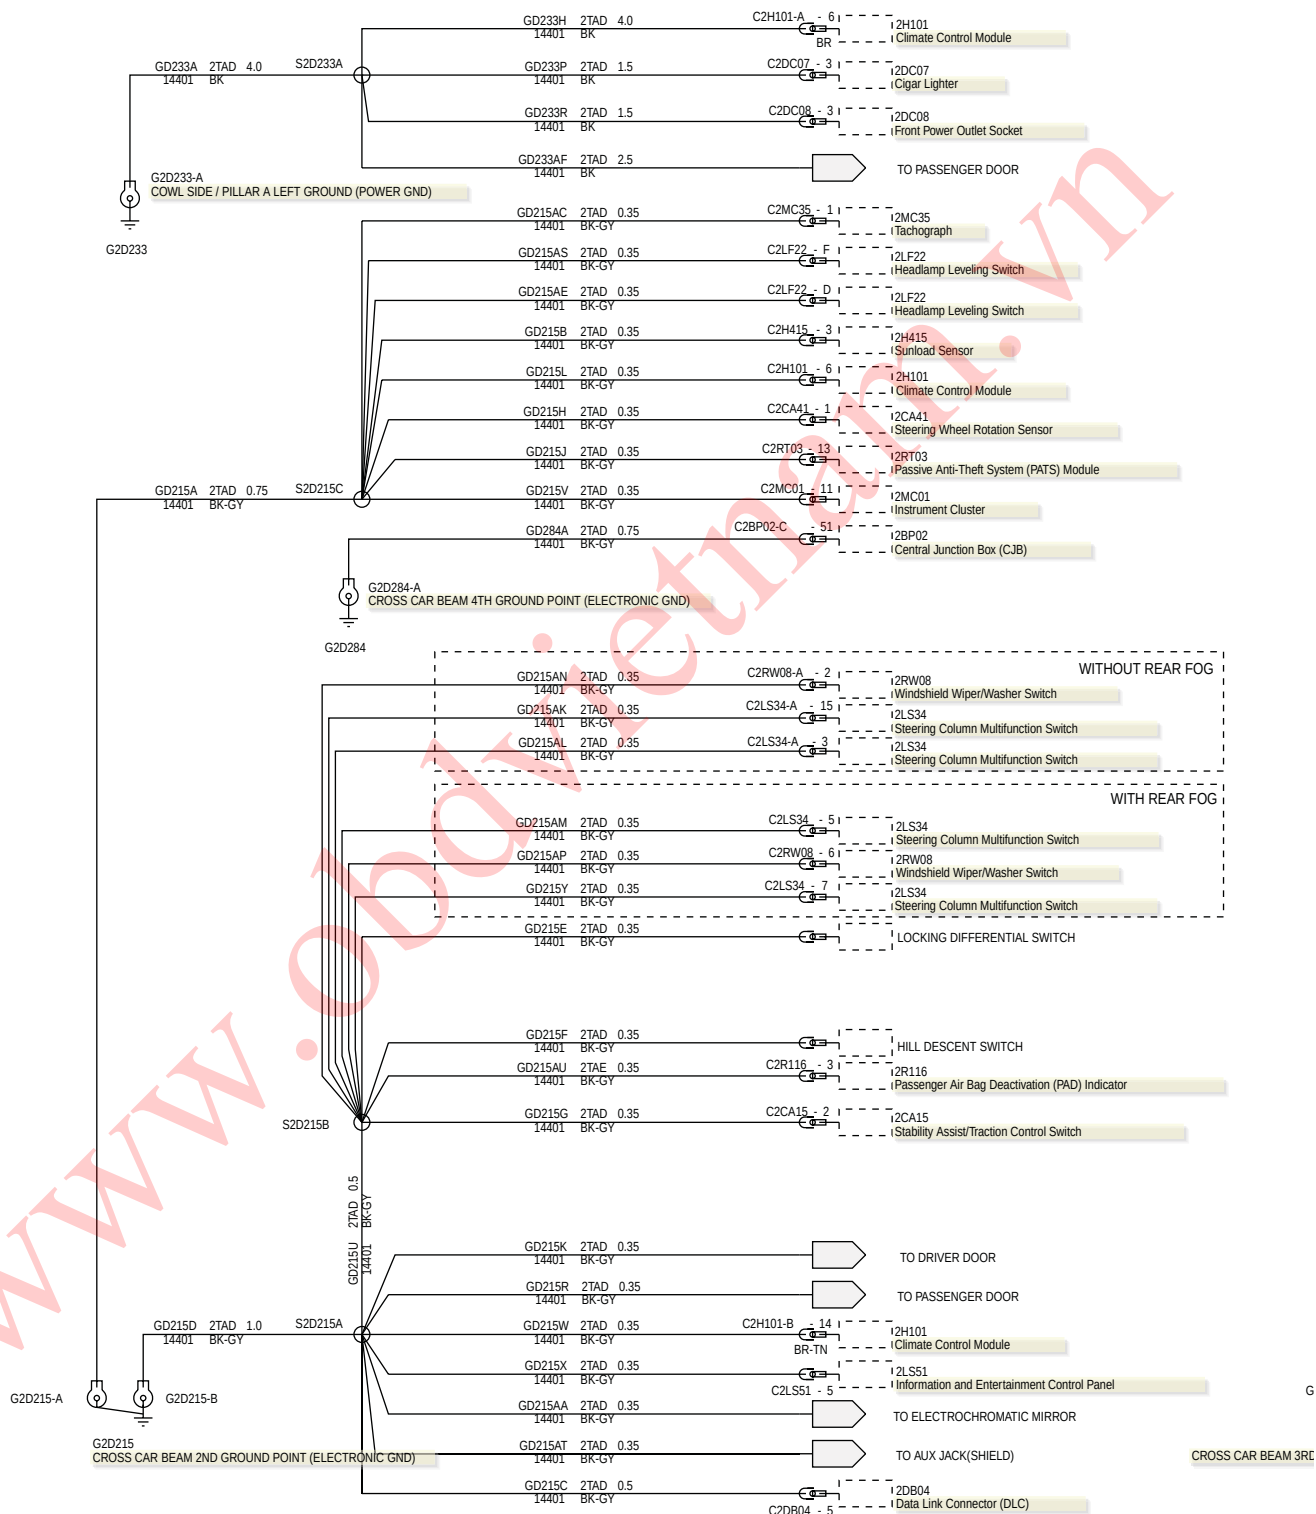


700-03-15 Grounding—RHD

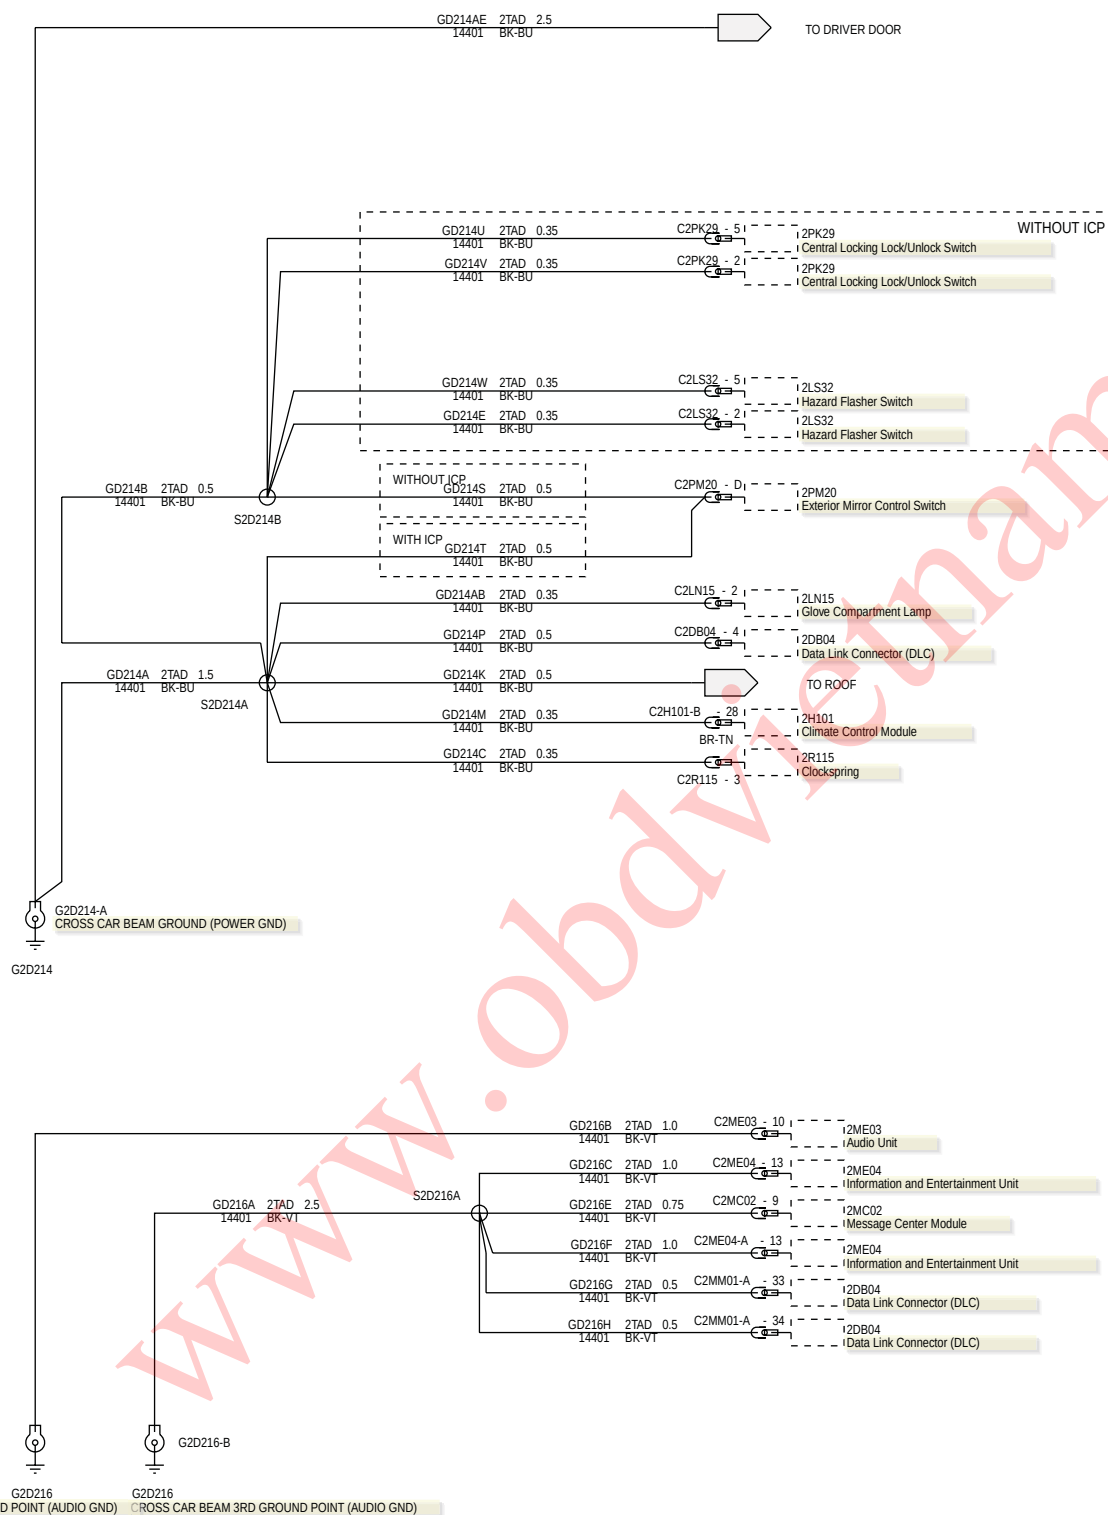

700-03-16 Grounding—RHD

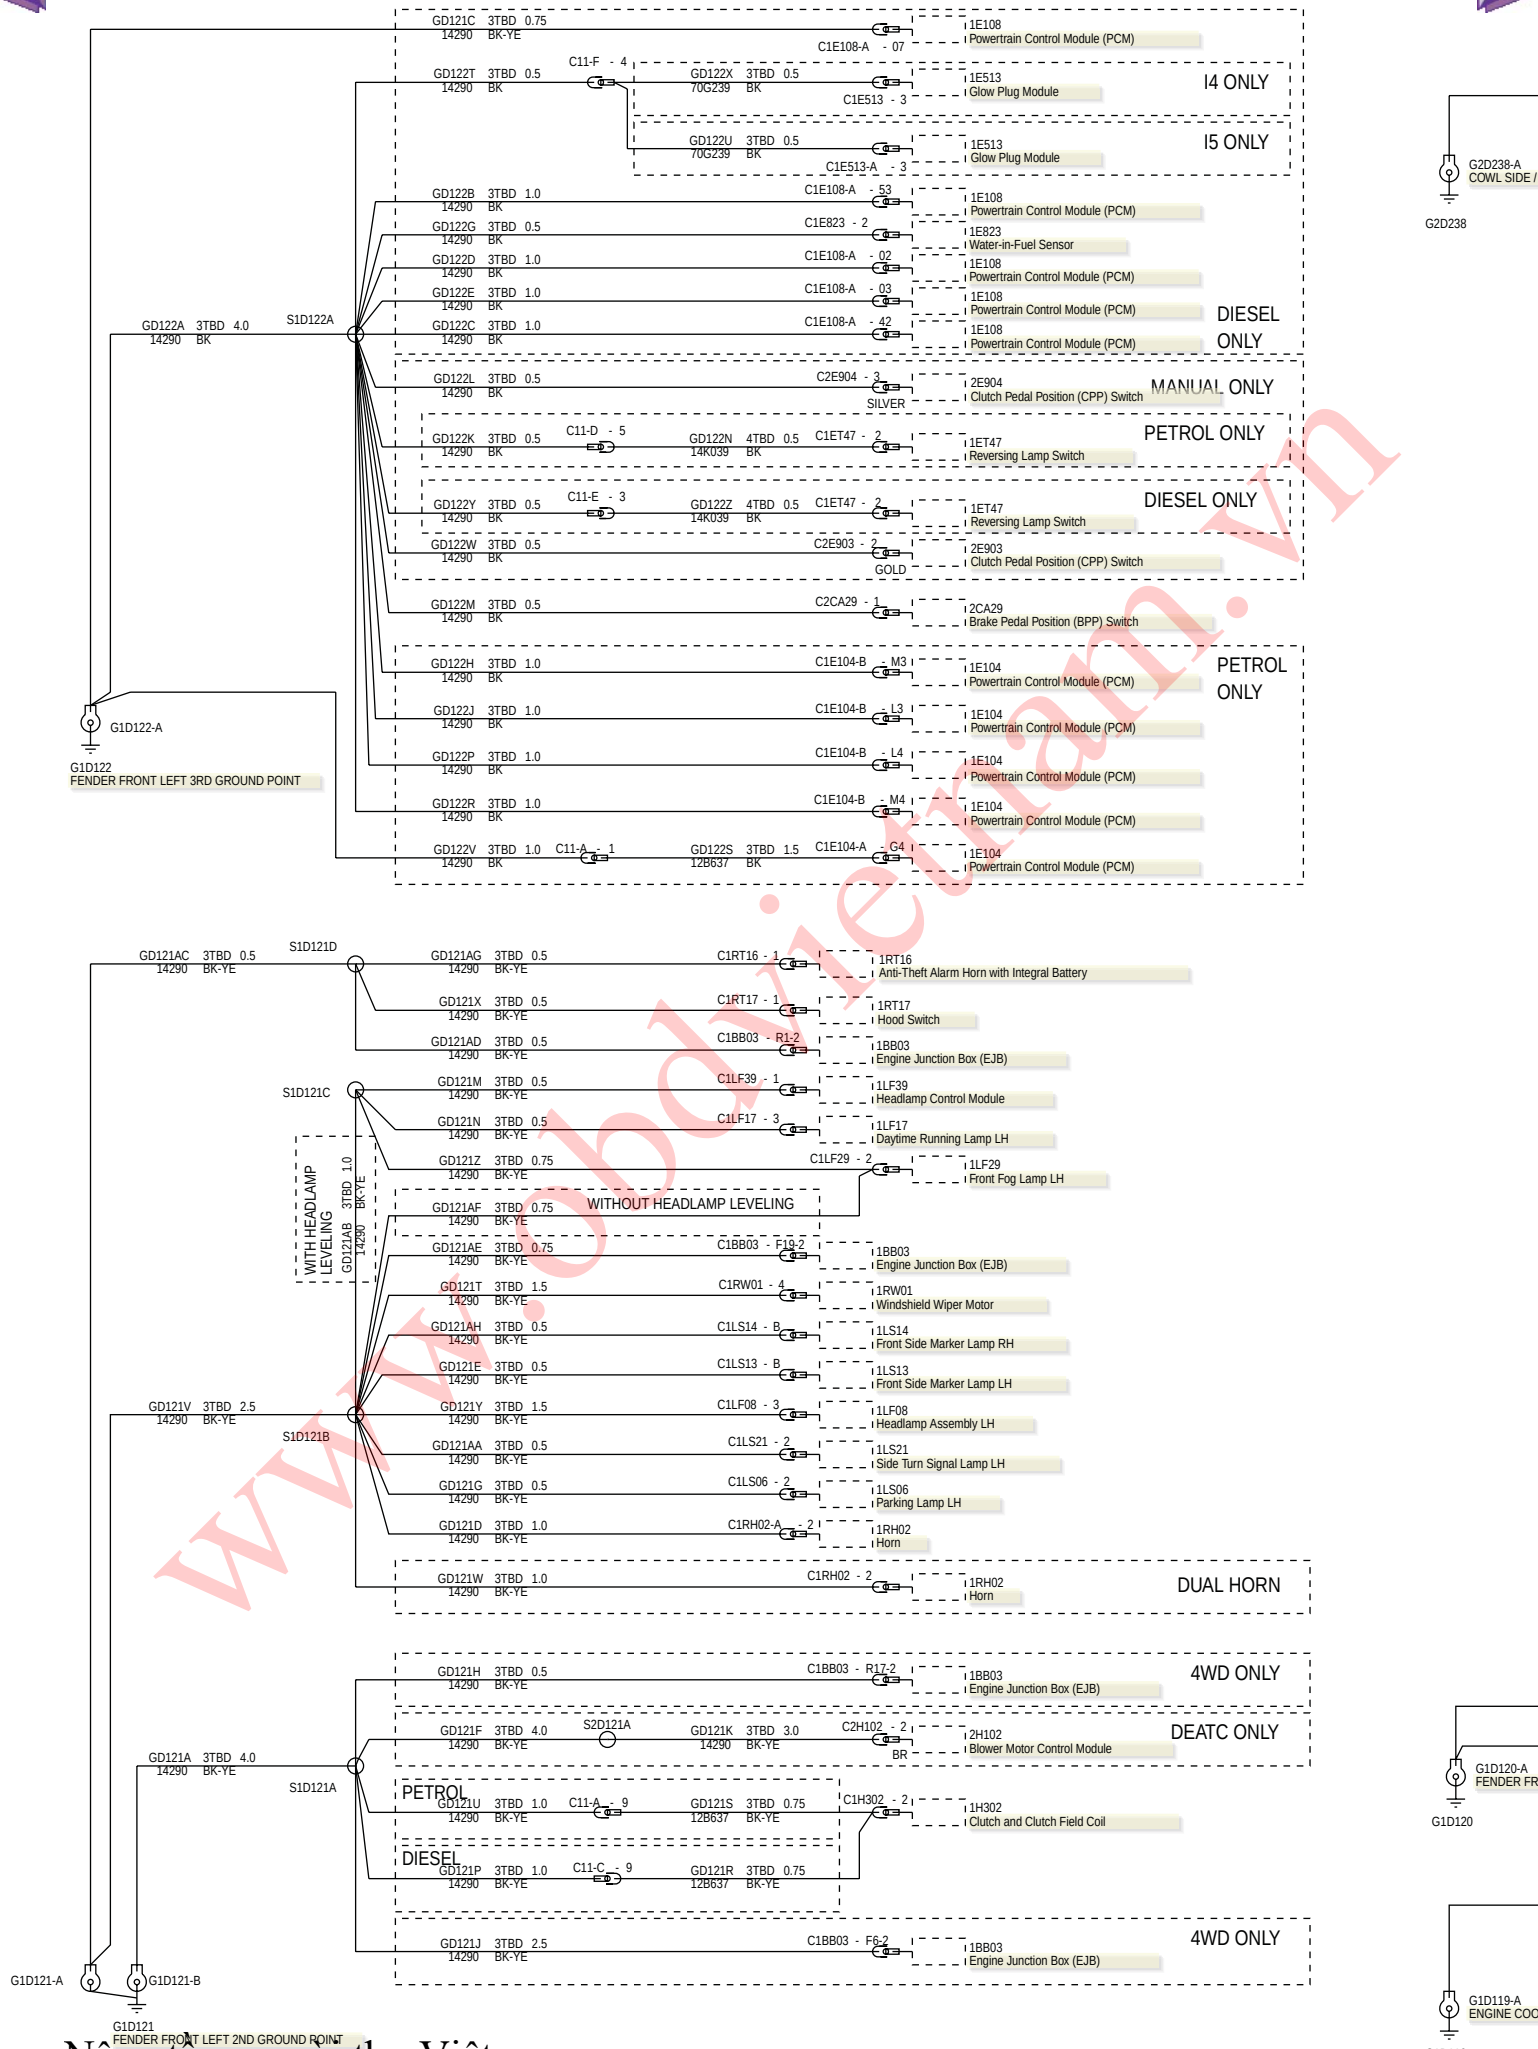

700-03-17 Grounding—RHD

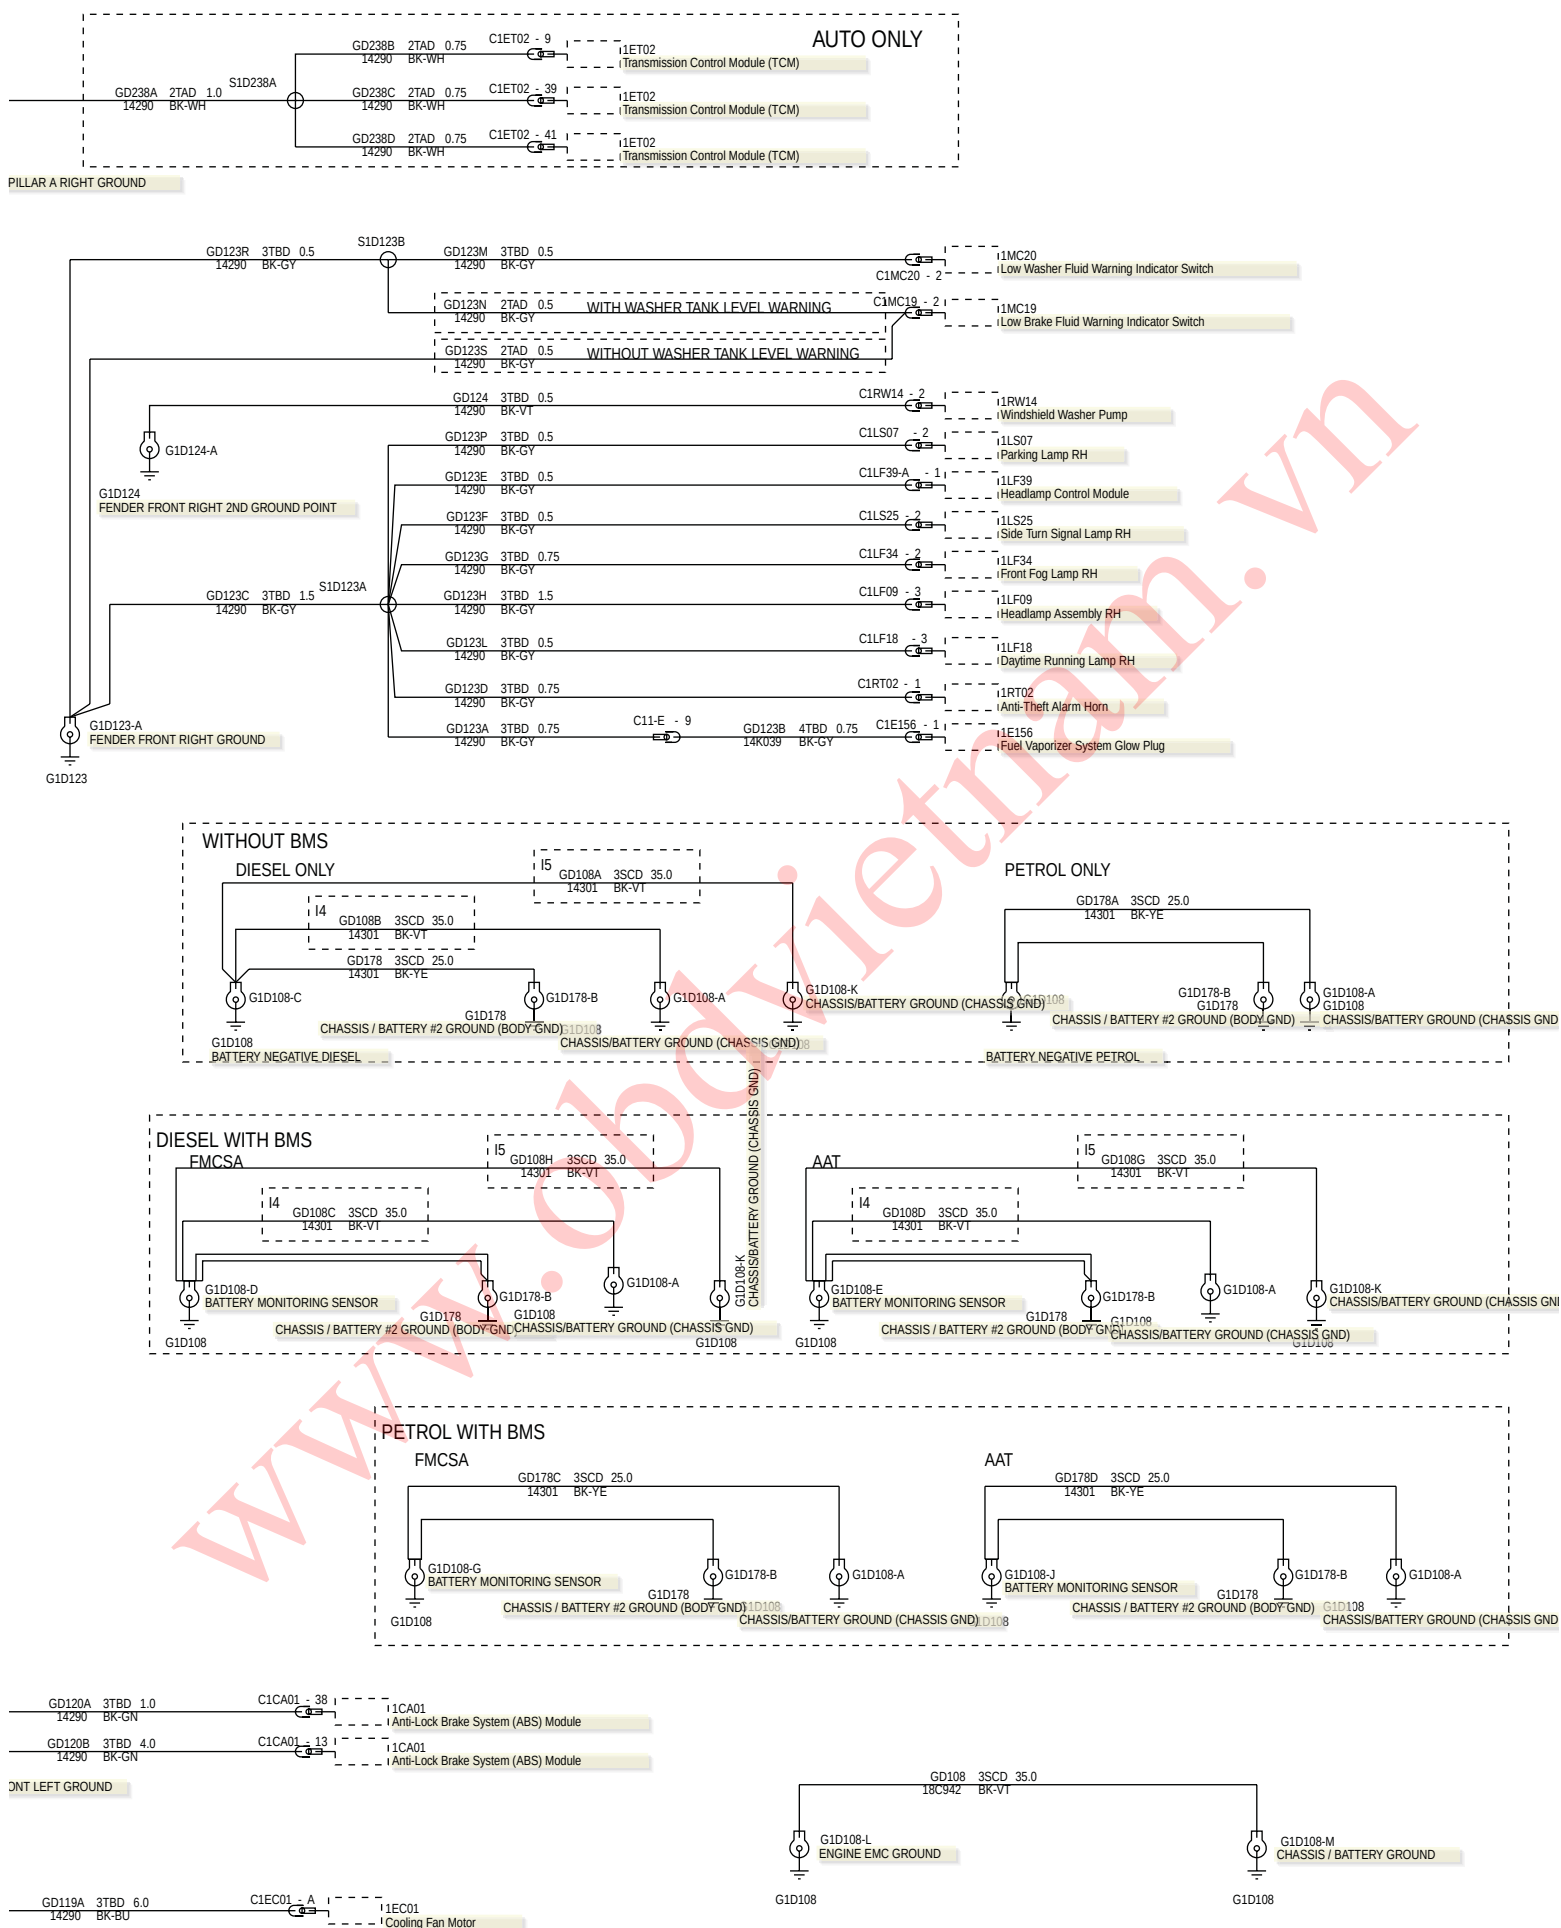

SECTION 700-04 Electrical Connectors

VEHICLE APPLICATION: 2012.0 Ranger

CONTENTS

PAGE




ELECTRICAL CONNECTORS

In-Line Connector 11 — A.....	700-04-2
In-Line Connector 11 — AA.....	700-04-2
In-Line Connector 11 — B.....	700-04-3
In-Line Connector 11 — C.....	700-04-3
In-Line Connector 11 — D.....	700-04-4
In-Line Connector 11 — E.....	700-04-6
In-Line Connector 11 — F.....	700-04-6
In-Line Connector 13.....	700-04-7
In-Line Connector 21.....	700-04-9
In-Line Connector 23.....	700-04-12
In-Line Connector 25.....	700-04-13
In-Line Connector 25 — A.....	700-04-14
In-Line Connector 26.....	700-04-14
In-Line Connector 26 — A.....	700-04-14
In-Line Connector 29.....	700-04-15
In-Line Connector 30.....	700-04-15
In-Line Connector 31.....	700-04-16
In-Line Connector 33.....	700-04-16
In-Line Connector 34.....	700-04-17
In-Line Connector 34 — A.....	700-04-19
In-Line Connector 34 — B.....	700-04-20
In-Line Connector 37.....	700-04-21
In-Line Connector 37 — A.....	700-04-22
In-Line Connector 38.....	700-04-23
In-Line Connector 38 — A.....	700-04-23
In-Line Connector 44.....	700-04-23
In-Line Connector 44 — A.....	700-04-24
In-Line Connector 44 — B.....	700-04-24
In-Line Connector 44 — C.....	700-04-25
In-Line Connector 44 — D.....	700-04-25
In-Line Connector 44 — E.....	700-04-26
In-Line Connector 44 — F.....	700-04-26


700-04-2

In-Line Connector 11—A (G1404899)

Thumbnail

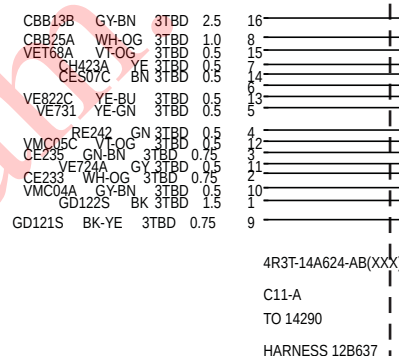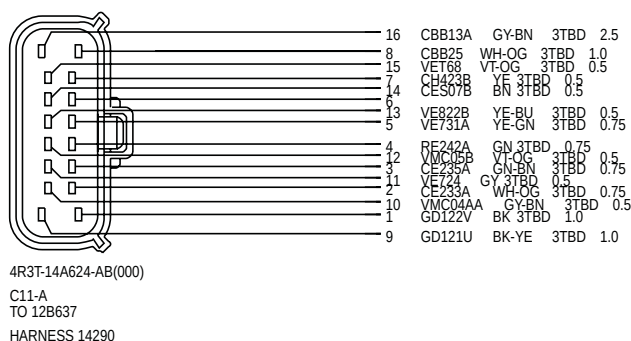
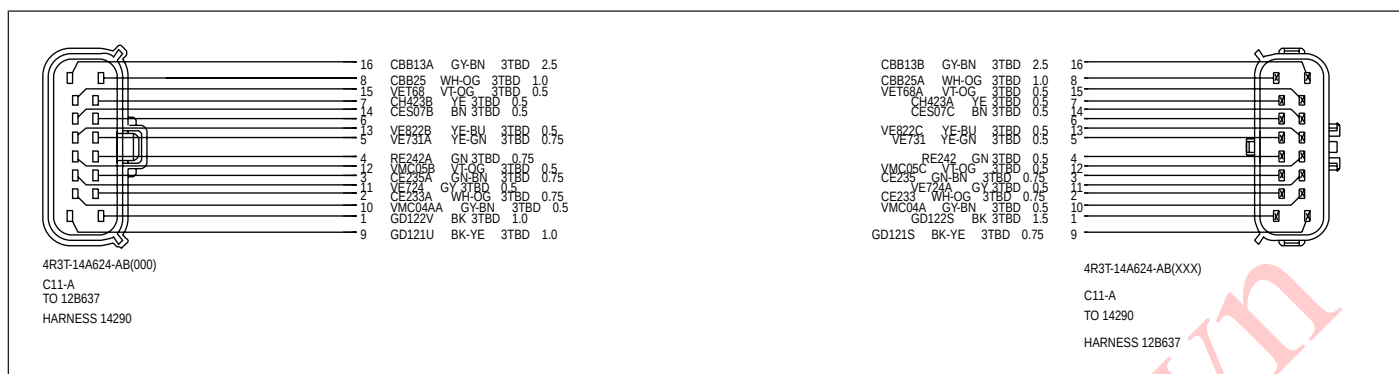


Part 1 of 2

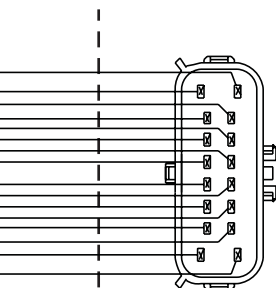

Part 2 of 2


In-Line Connector 11—AA (G1404900)

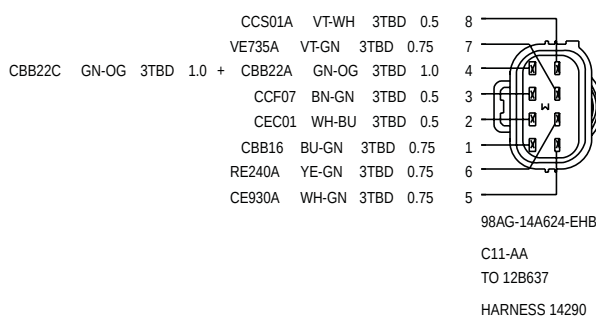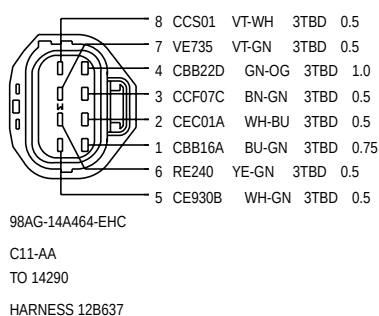

700-04-3

In-Line Connector 11—B (G1404901)

PIN 1 => SBB03G BU-RD 6.0 3TBD




XR8T-14A464-LA

C11-B

TO 14290

HARNESS 70G239

SBB03H BU-RD 3TBD 6.0 1

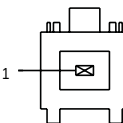

XR8T-14A624-NA



C11-B

TO 70G239


HARNESS 14290

In-Line Connector 11—C (G1404902)

Thumbnail

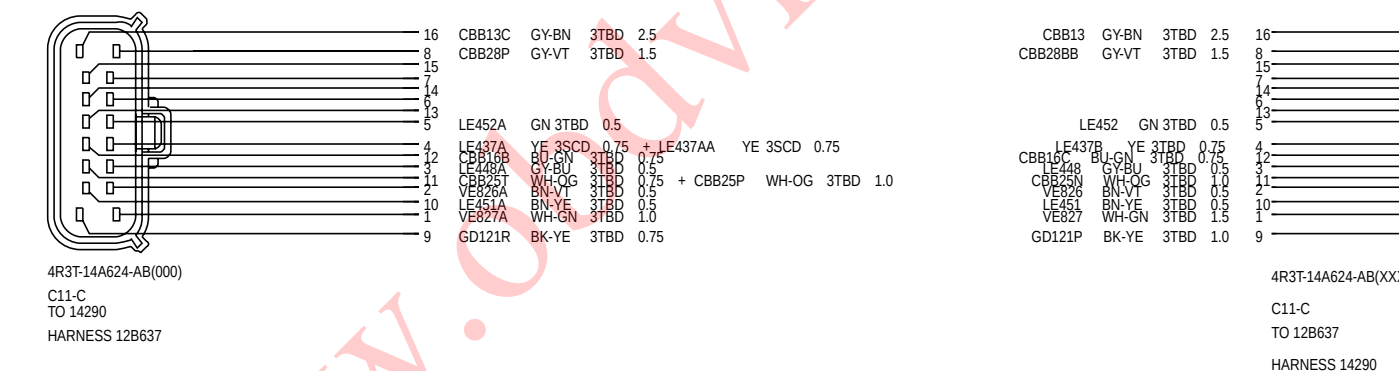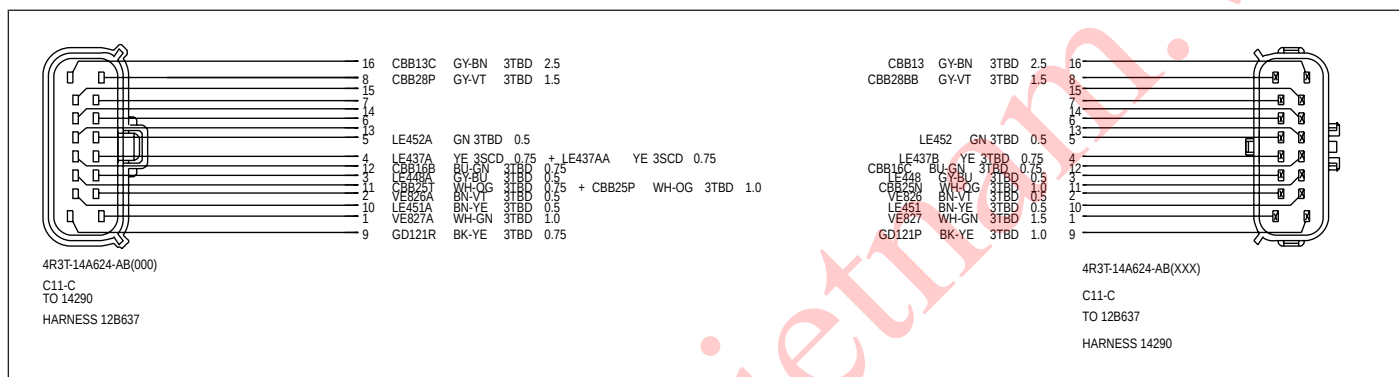

Part 1 of 2

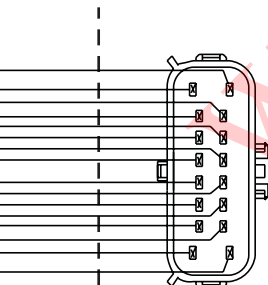

4R3T-14A624-AB(XXX)

C11-C

TO 12B637


HARNESS 14290

Part 2 of 2


700-04-4

In-Line Connector 11—D (G1404903)

Thumbnail

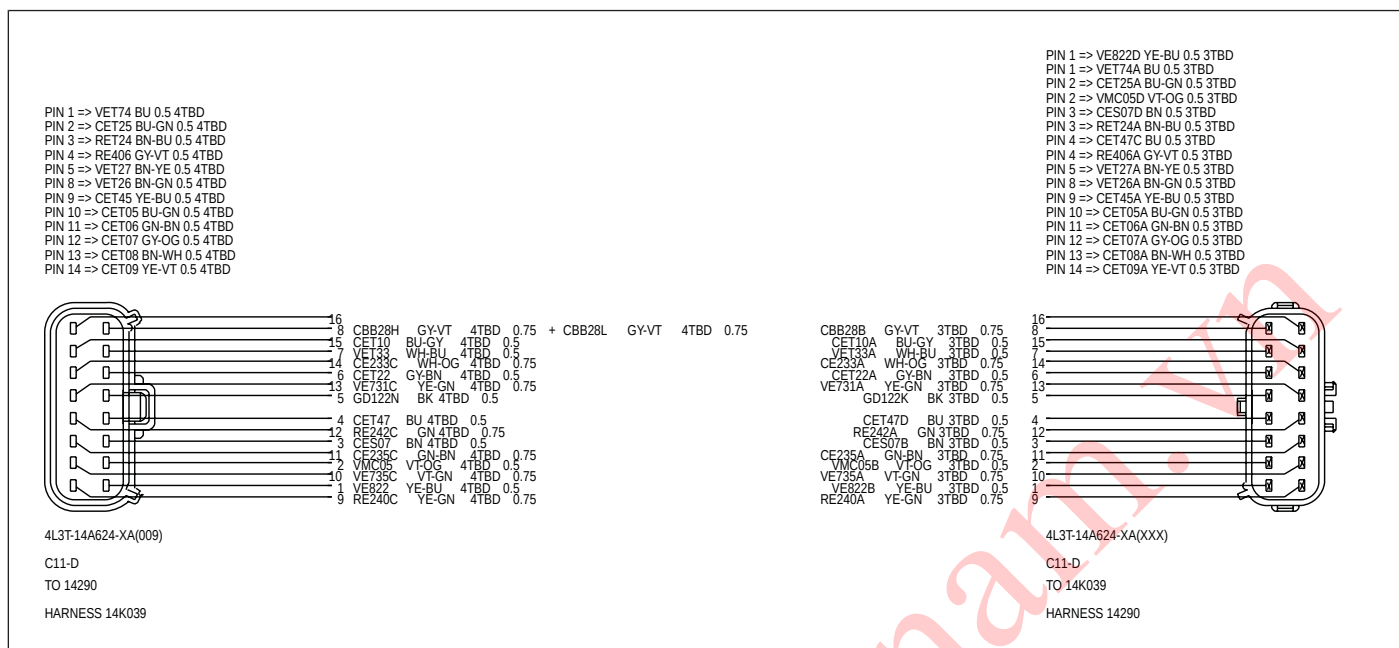

PIN 1 => VET74 BU 0.5 4TBD
PIN 2 => CET25 BU-GN 0.5 4TBD
PIN 3 => RET24 BN-BU 0.5 4TBD
PIN 4 => RE406 GY-VT 0.5 4TBD
PIN 5 => VET27 BN-YE 0.5 4TBD
PIN 8 => VET26 BN-GN 0.5 4TBD
PIN 9 => CET45 YE-BU 0.5 4TBD
PIN 10 => CET05 BU-GN 0.5 4TBD
PIN 11 => CET06 GN-BN 0.5 4TBD
PIN 12 => CET07 GY-OG 0.5 4TBD
PIN 13 => CET08 BN-WH 0.5 4TBD
PIN 14 => CET09 YE-VT 0.5 4TBD

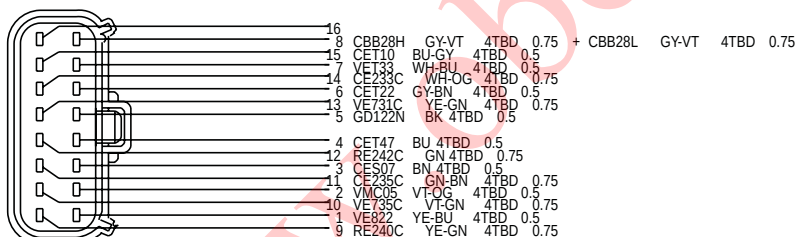


4L3T-14A624-XA(009)

C11-D
TO 14290

HARNESS 14K039

PIN 1 => VE822D YE-BU 0.5 3TBD
PIN 1 => VET74A BU 0.5 3TBD
PIN 2 => CET25A BU-GN 0.5 3TBD
PIN 2 => VMC05D VT-OG 0.5 3TBD
PIN 3 => CES07D BN 0.5 3TBD
PIN 3 => RET24A BN-BU 0.5 3TBD
PIN 4 => CET47C BU 0.5 3TBD
PIN 4 => RE406A GY-VT 0.5 3TBD
PIN 5 => VET27A BN-YE 0.5 3TBD
PIN 8 => VET26A BN-GN 0.5 3TBD
PIN 9 => CET45A YE-BU 0.5 3TBD
PIN 10 => CET05A BU-GN 0.5 3TBD
PIN 11 => CET06A GN-BN 0.5 3TBD
PIN 12 => CET07A GY-OG 0.5 3TBD
PIN 13 => CET08A BN-WH 0.5 3TBD
PIN 14 => CET09A YE-VT 0.5 3TBD

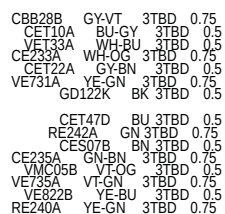

4L3T-14A624-XA(XXX)


C11-D
TO 14K039

HARNESS 14290

Part 1 of 2

700-04-5

BU 0.5 3TBD
BU 0.5 3TBD
GN 0.5 3TBD
OG 0.5 3TBD
OG 0.5 3TBD
BU 0.5 3TBD
BU 0.5 3TBD
VT 0.5 3TBD
YE 0.5 3TBD
GN 0.5 3TBD
BU 0.5 3TBD
-GN 0.5 3TBD
-BN 0.5 3TBD
-OG 0.5 3TBD
-WH 0.5 3TBD
-VT 0.5 3TBD

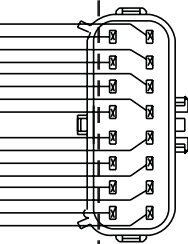


Part 2 of 2


700-04-6

In-Line Connector 11—E (G1404904)


Thumbnail

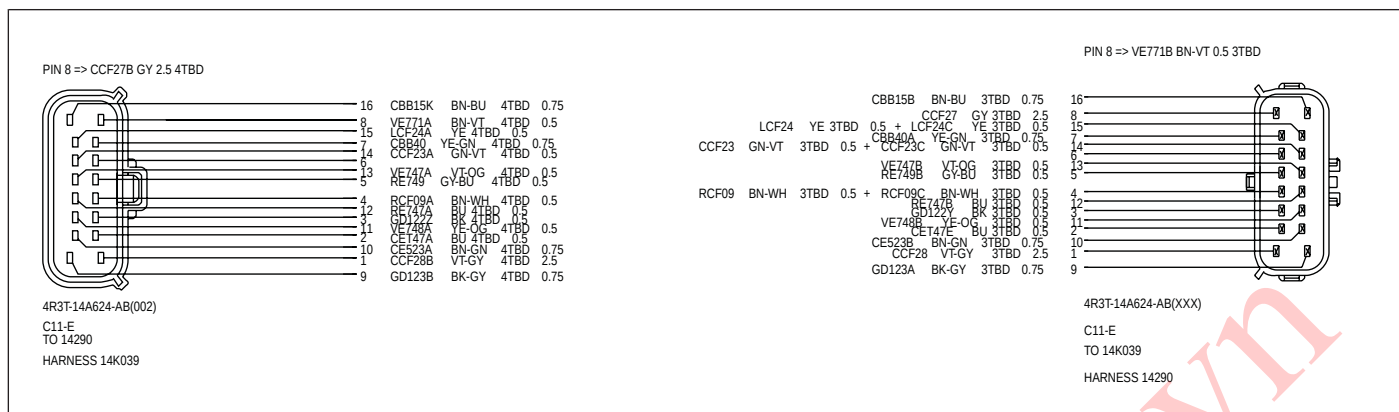


PIN 8 => CCF27B GY 2.5 4TBD

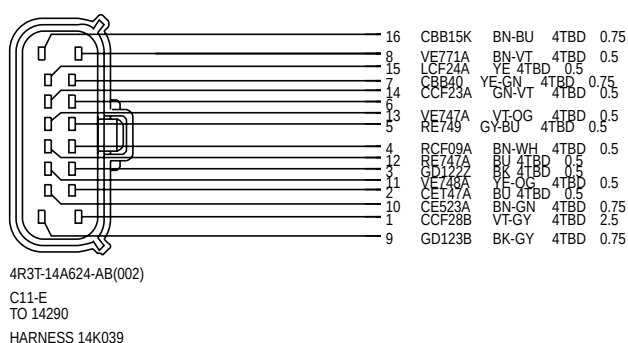

PIN 8 => VE771B BN-VT 0.5 3TBD

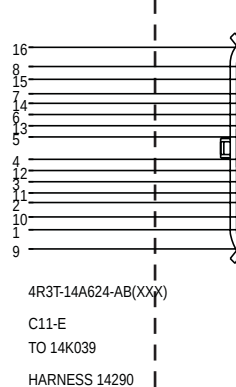


Part 1 of 2

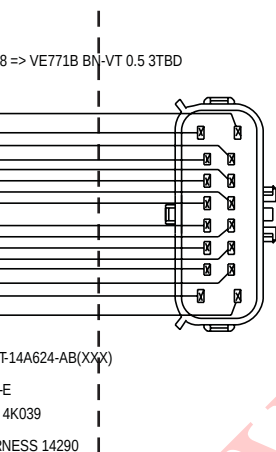

Part 2 of 2


In-Line Connector 11—F (G1404905)

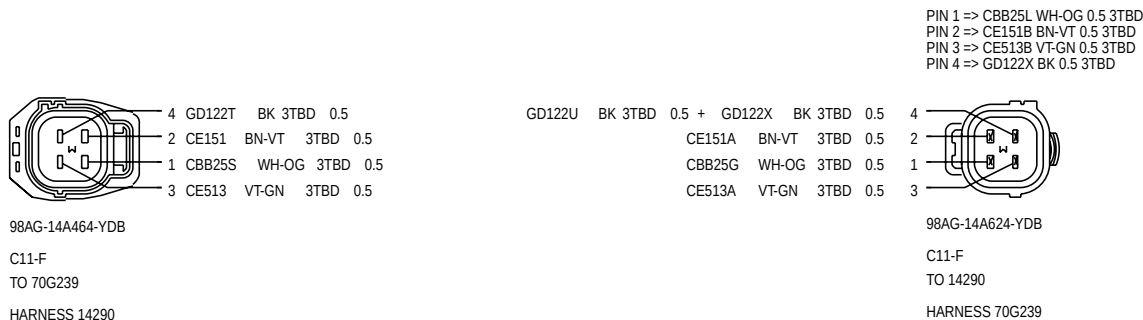


700-04-7

In-Line Connector 13 (G1404906)

Thumbnail

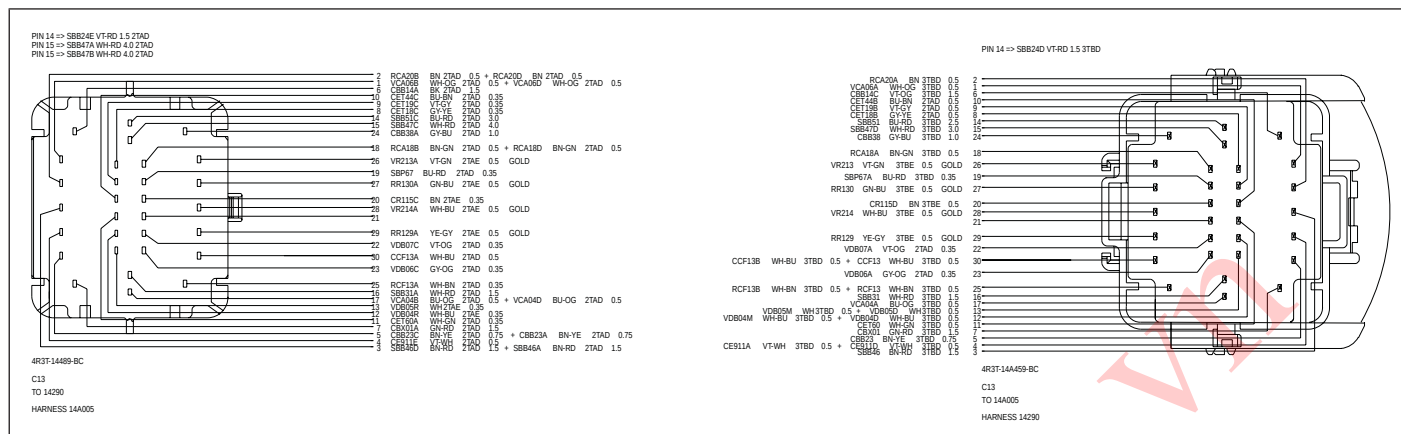


PIN 14 => SBB24E VT-RD 1.5 2TAD
PIN 15 => SBB47A WH-RD 4.0 2TAD
PIN 15 => SBB47B WH-RD 4.0 2TAD

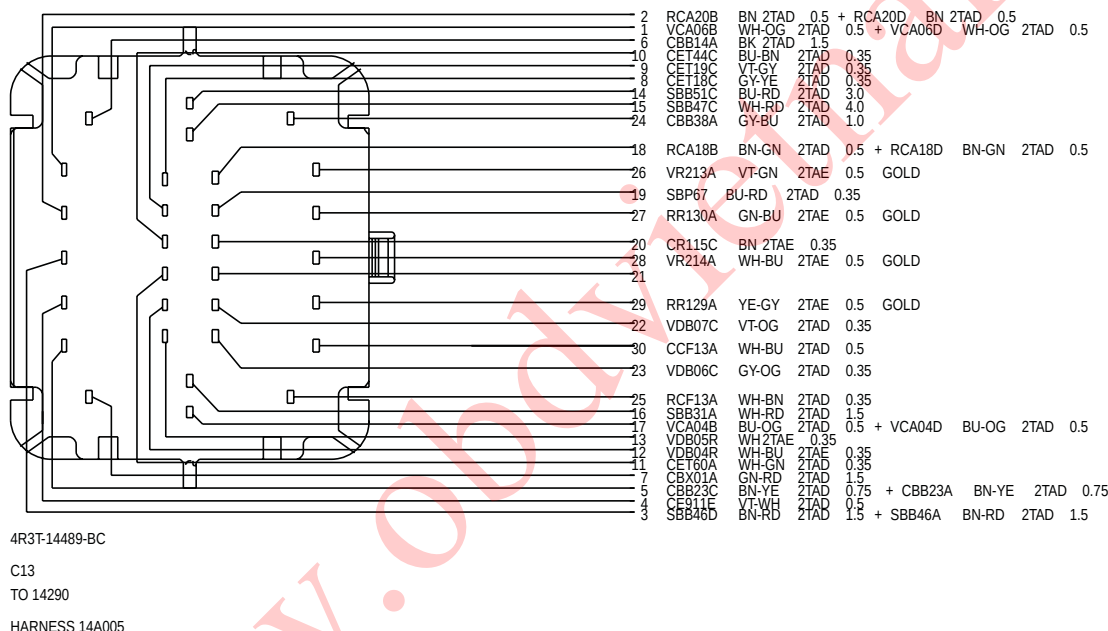

Part 1 of 2

700-04-8

Part 1 of 2

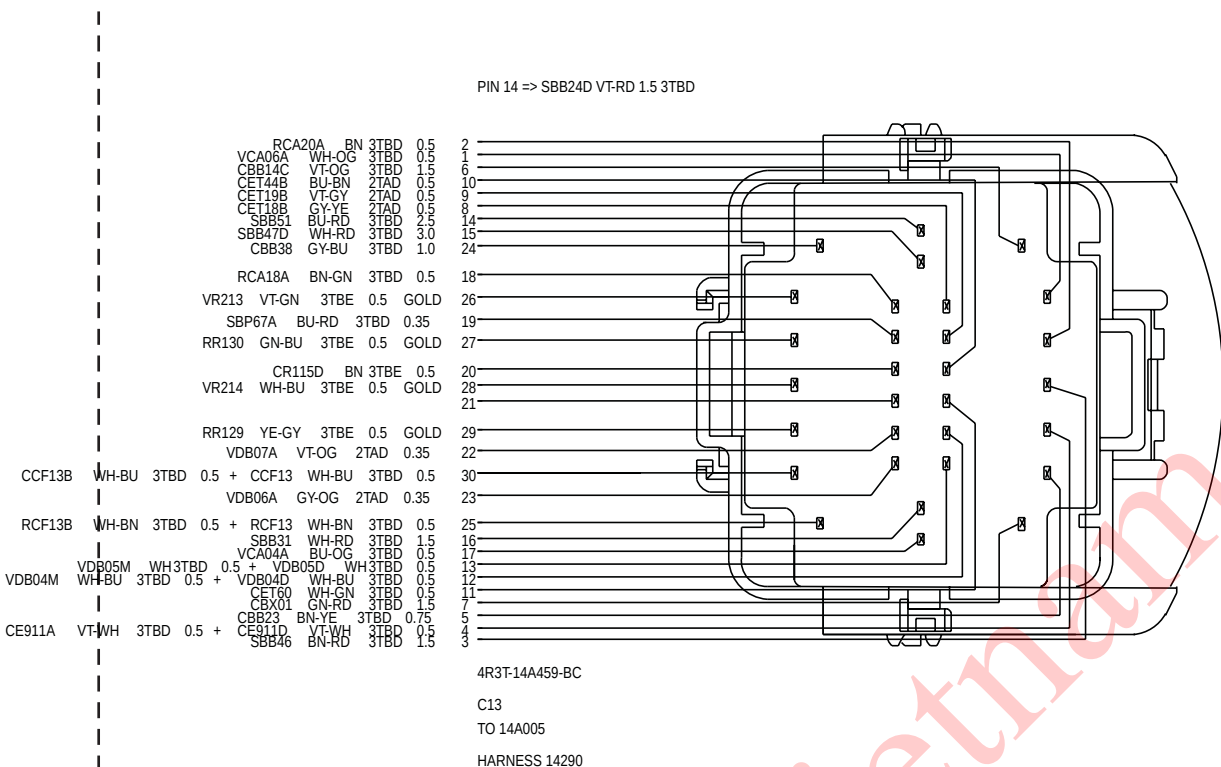


Part 2 of 2

700-04-9

In-Line Connector 21 (G1404907)

Thumbnail

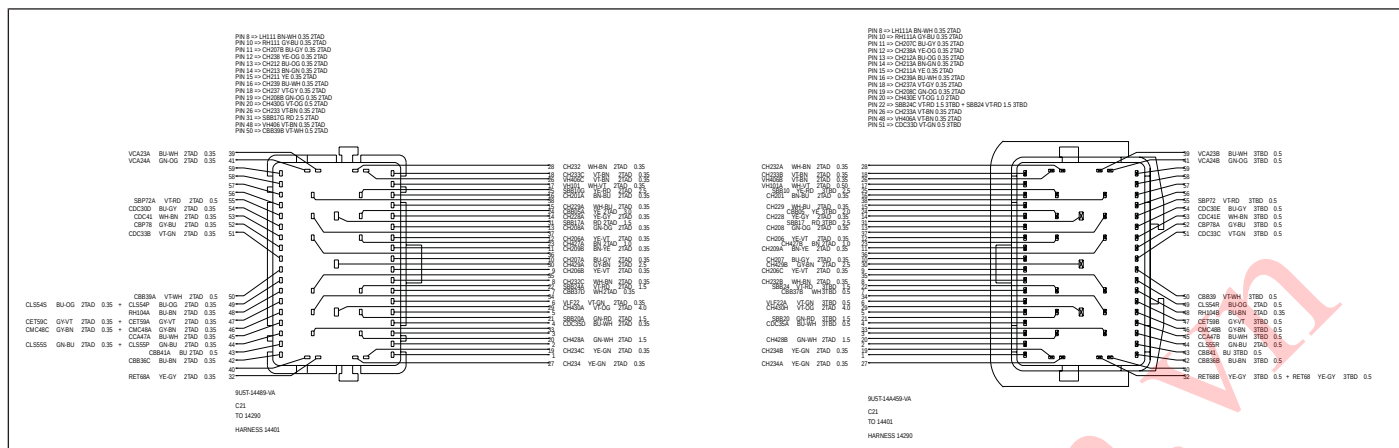


PIN 8 => LH111 BN-WH 0.35 2TAD
 PIN 10 => RH111 GY-BU 0.35 2TAD
 PIN 11 => CH207B BU-GY 0.35 2TAD
 PIN 12 => CH238 YE-OG 0.35 2TAD
 PIN 13 => CH212 BU-OG 0.35 2TAD
 PIN 14 => CH213 BN-GN 0.35 2TAD
 PIN 15 => CH211 YE 0.35 2TAD
 PIN 16 => CH239 BU-WH 0.35 2TAD
 PIN 18 => CH237 VT-GY 0.35 2TAD
 PIN 19 => CH208B GN-OG 0.35 2TAD
 PIN 20 => CH430G VT-OG 0.5 2TAD
 PIN 26 => CH233 VT-BN 0.35 2TAD
 PIN 31 => SBB17G RD 2.5 2TAD
 PIN 48 => VH406 VT-BN 0.35 2TAD
 PIN 50 => CBB39B VT-WH 0.5 2TAD

VCA23A BU-WH 2TAD 0.35
 VCA24A GN-OG 2TAD 0.35

SBP72A VT-RD 0.5
 CDC30D BU-GY 2TAD 0.35
 CDC41 WH-BN 2TAD 0.35
 CBP78 GY-BU 2TAD 0.35
 CDC33B VT-GN 2TAD 0.35

CLS54S BU-OG 2TAD 0.35 + CBB39A VT-WH 2TAD 0.5
 CET59C GY-VT 2TAD 0.35 + RH104A BU-BN 2TAD 0.35
 CMC48C GY-BN 2TAD 0.35 + CET59A GY-VT 2TAD 0.35
 CLS55S GN-BU 2TAD 0.35 + CMC48A GY-BN 2TAD 0.35
 + CCA47A BU-WH 2TAD 0.35
 + CLS55P GN-BU 2TAD 0.35
 + CBB41A BU 2TAD 0.5
 + CBB36C BU-BN 2TAD 0.35
 RET68A YE-GY 2TAD 0.35

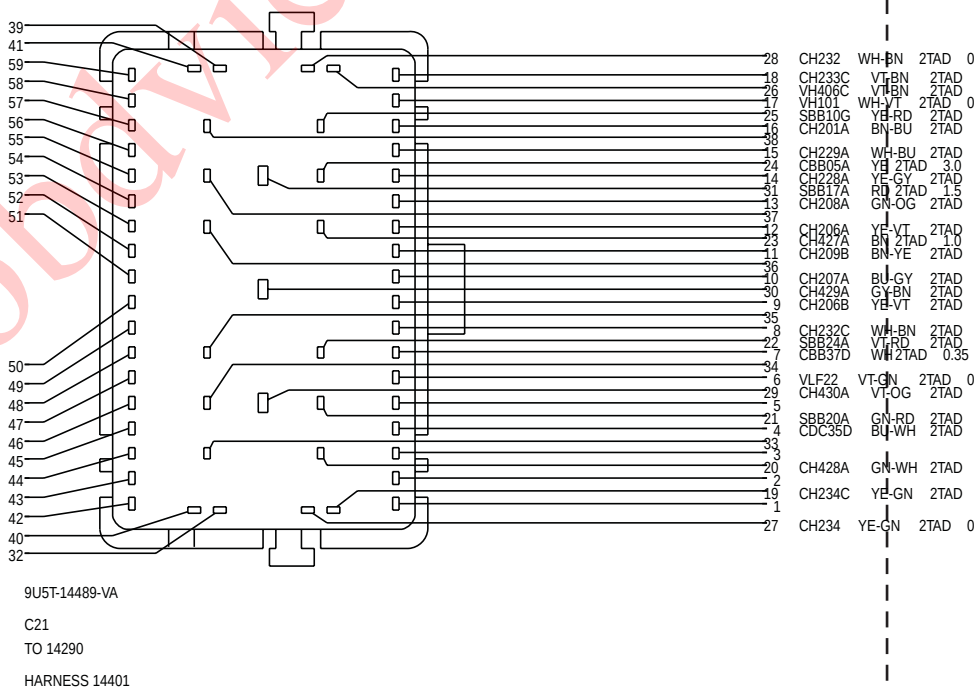

Part 1 of 3

700-04-10

CH232 WH-BN 2TAD 0.35
CH233C VT-BN 2TAD 0.35
VH406C VT-BN 2TAD 0.35
VH101A WH-VT 2TAD 0.35
SBB10G YB-RD 2TAD 2.5
CH201A BN-BU 2TAD 0.35

CH229A WH-BU 2TAD 0.35
CBB05A YB 2TAD 3.0
CH228A YE-GY 2TAD 0.35
SBB17A RD 2TAD 1.5
CH208A GN-OG 2TAD 0.35

CH206A YE-VT 2TAD 0.35
CH427A BN 2TAD 1.0
CH209B BN-YE 2TAD 0.35

CH207A BU-GY 2TAD 0.35
CH429A GY-BN 2TAD 2.5
CH206B YB-VT 2TAD 0.35

CH232C WH-BN 2TAD 0.35
SBB24A VT-RD 2TAD 1.5
CBB37D WH 2TAD 0.35

VLF22 VT-GN 2TAD 0.35
CH430A VT-OG 2TAD 4.0

SBB20A GN-RD 2TAD 1.5
CDC35D BU-WH 2TAD 0.35

CH428A GN-WH 2TAD 1.5

CH234C YE-GN 2TAD 0.35

CH234 YE-GN 2TAD 0.35

CH232A WH-BN 2TAD 0.35
CH233B VT-BN 2TAD 0.35
VH406B VT-BN 2TAD 0.35
VH101A WH-VT 2TAD 0.35
SBB10 YE-RD 3TBD 2.5
CH201 BN-BU 2TAD 0.35

CH229 WH-BU 2TAD 0.35
CBB05 YE 3TBD 2.0
CH228 YE-GY 2TAD 0.35
SBB17 RD 3TBD 2.5
CH208 GN-OG 2TAD 0.35

CH206 YE-VT 2TAD 0.35
CH427B BN 2TAD 1.0
CH209A BN-YE 2TAD 0.35

CH207 BU-GY 2TAD 0.35
CH429B GY-BN 2TAD 2.5
CH206C YE-VT 2TAD 0.35

CH232B WH-BN 2TAD 0.35
SBB24 VT-RD 3TBD 1.5
CBB37B WH 3TBD 0.5

VLF22A VT-GN 3TBD 0.5
CH430H VT-OG 2TAD 4.0


SBB20 GN-RD 3TBD 1.5
CDC35A BU-WH 3TBD 0.5

CH428B GN-WH 2TAD 1.5

CH234B YE-GN 2TAD 0.35

CH234A YE-GN 2TAD 0.35

PIN 8 => LH111A BN-WH 0.35 2TAD
PIN 10 => RH111A GY-BU 0.35 2TAD
PIN 11 => CH207C BU-GY 0.35 2TAD
PIN 12 => CH238A YE-OG 0.35 2TAD
PIN 13 => CH212A BU-OG 0.35 2TAD
PIN 14 => CH213A BN-GN 0.35 2TAD
PIN 15 => CH211A YE 0.35 2TAD
PIN 16 => CH239A BU-WH 0.35 2TAD
PIN 18 => CH237A VT-GY 0.35 2TAD
PIN 19 => CH208C GN-OG 0.35 2TAD
PIN 20 => CH430E VT-OG 1.0 2TAD
PIN 22 => SBB24C VT-RD 1.5 3TBD + SBB24 VT-RD 1.5 3TBD
PIN 26 => CH233A VT-BN 0.35 2TAD
PIN 48 => VH406A VT-BN 0.35 2TAD
PIN 51 => CDC33D VT-GN 0.5 3TBD

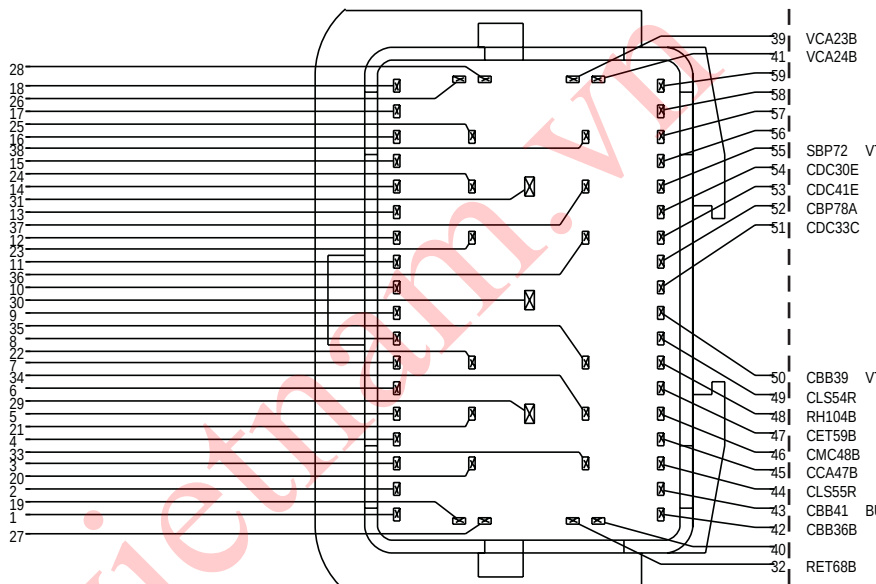

9U5T-14A459-VA

C21

TO 14401

HARNES 14290

Part 2 of 3


700-04-11

39	VCA23B	BU-WH	3TBD	0.5	
41	VCA24B	GN-OG	3TBD	0.5	
59					
58					
57					
56					
55	SBP72	VF-RD	3TBD	0.5	
54	CDC30E	BU-GY	3TBD	0.5	
53	CDC41E	WH-BN	3TBD	0.5	
52	CBP78A	GY-BU	3TBD	0.5	
51	CDC33C	VT-GN	3TBD	0.5	
50	CBB39	VF-WH	3TBD	0.5	
49	CLS54R	BU-OG	2TAD	0.5	
48	RH104B	BU-BN	2TAD	0.35	
47	CET59B	GY-VT	3TBD	0.5	
46	CMC48B	GY-BN	3TBD	0.5	
45	CCA47B	BU-WH	3TBD	0.5	
44	CLS55R	GN-BU	2TAD	0.5	
43	CBB41	BU	3TBD	0.5	
42	CBB36B	BU-BN	3TBD	0.5	
40					
32	RET68B	YE-GY	3TBD	0.5 + RET68	YE-GY 3TBD 0.5


Part 3 of 3

In-Line Connector 23 (G1404908)

Thumbnail

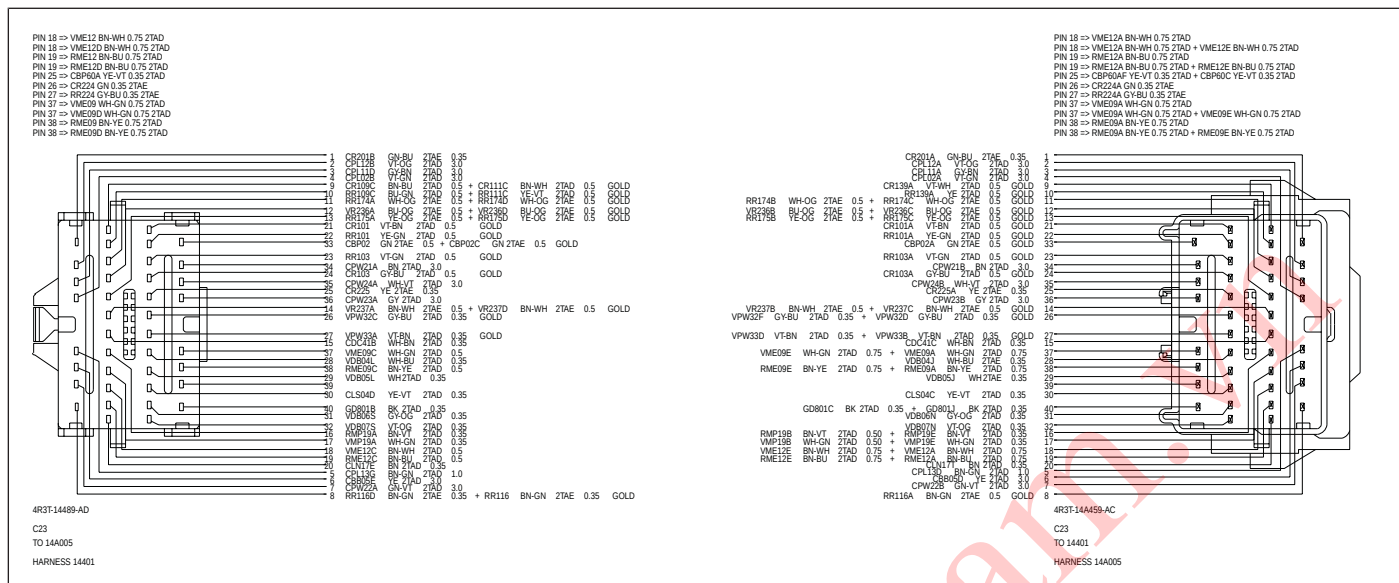


PIN 18 => VME12 BN-WH 0.75 2TAD
PIN 18 => VME12D BN-WH 0.75 2TAD
PIN 19 => RME12 BN-BU 0.75 2TAD
PIN 19 => RME12D BN-BU 0.75 2TAD
PIN 25 => CBP60A YE-VT 0.35 2TAD
PIN 26 => CR224 GN O 0.35 2TAE
PIN 27 => RR224 GY-BU 0.35 2TAE
PIN 37 => VME09 WH-GN 0.75 2TAD
PIN 37 => VME09D WH-GN 0.75 2TAD
PIN 38 => RME09 BN-YE 0.75 2TAD
PIN 38 => RME09D BN-YE 0.75 2TAD

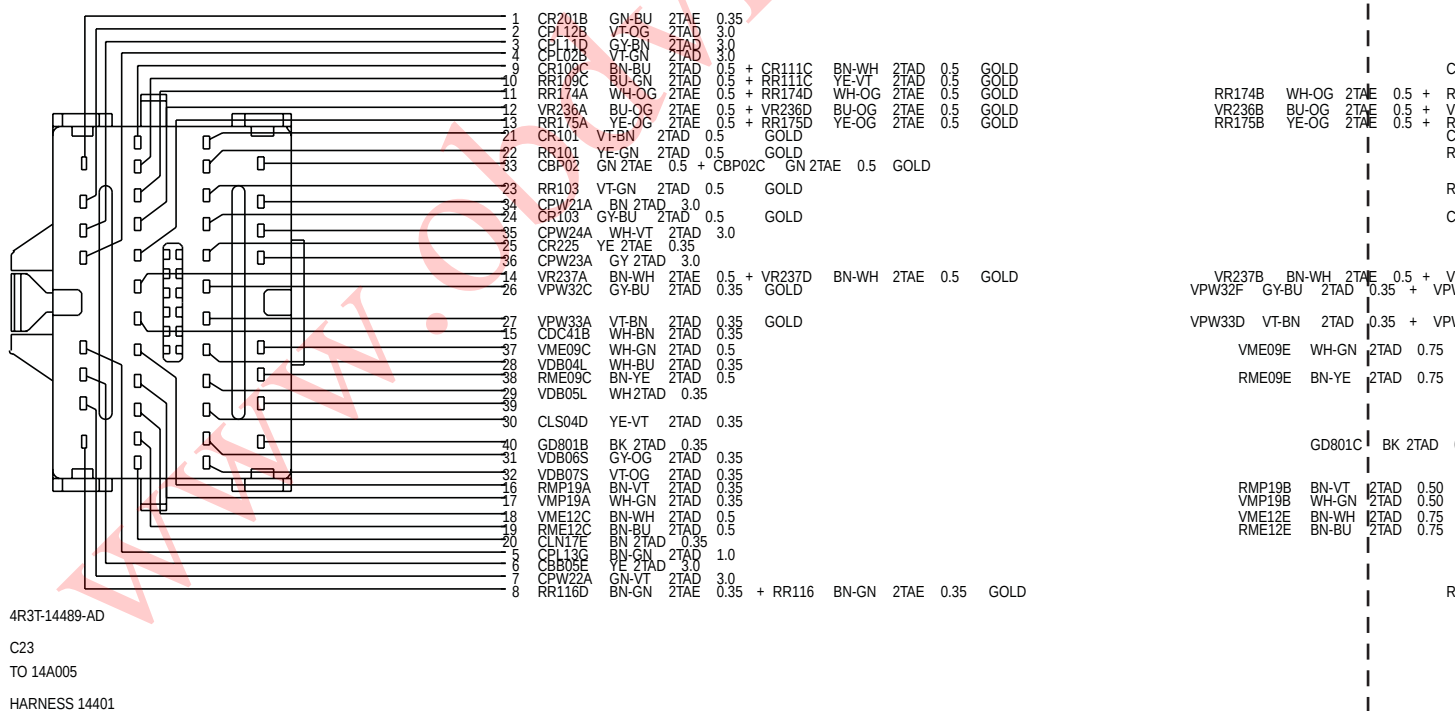

Part 1 of 2


700-04-13

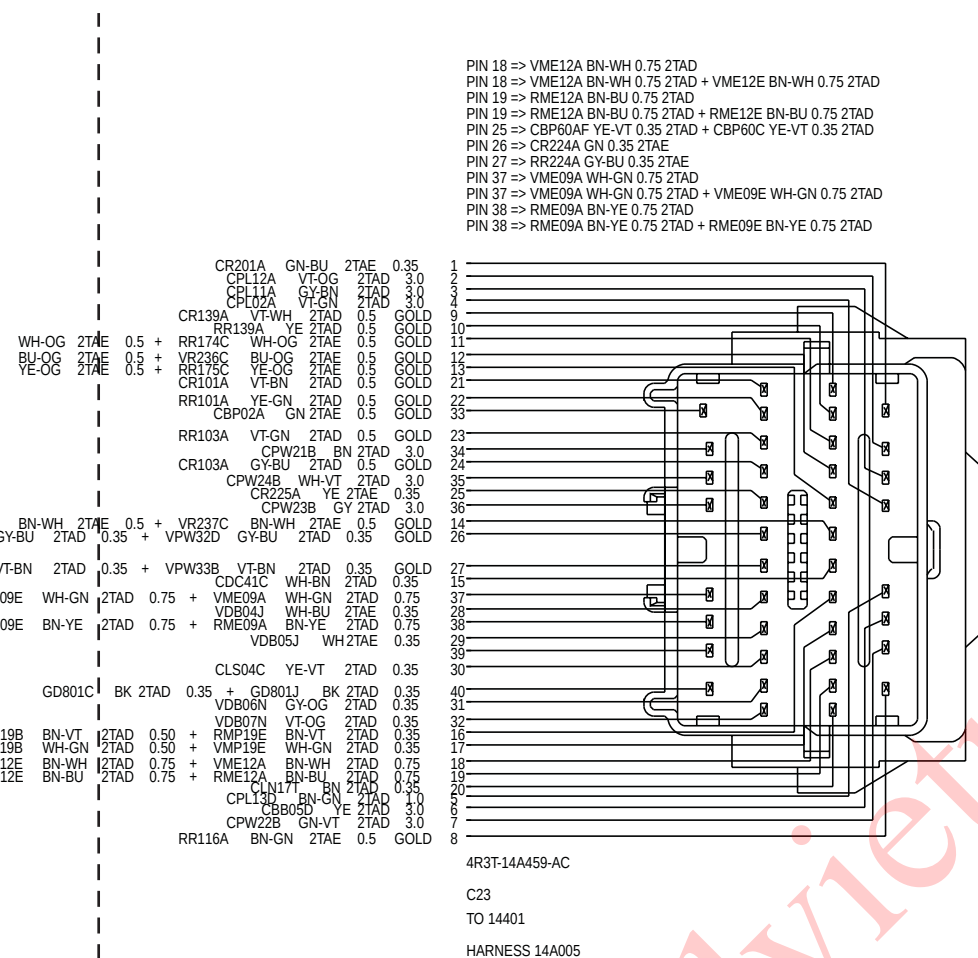

Part 2 of 2


In-Line Connector 25 (G1404909)

Thumbnail

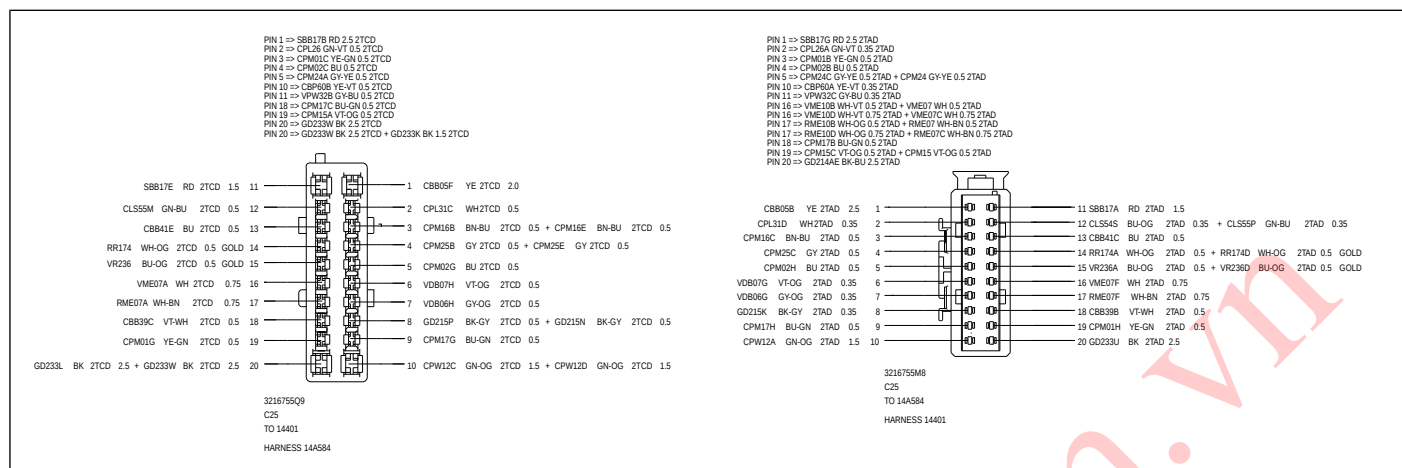


PIN 1 => SBB17B RD 2.5 2TCD
 PIN 2 => CPL26 GN-VT 0.5 2TCD
 PIN 3 => CPM01C YE-GN 0.5 2TCD
 PIN 4 => CPM02C BU 0.5 2TCD
 PIN 5 => CPM24A GY-YE 0.5 2TCD
 PIN 10 => CBBP60B YE-VT 0.5 2TCD
 PIN 11 => VPW32B GY-BU 0.5 2TCD
 PIN 18 => CPM17C BU-GN 0.5 2TCD
 PIN 19 => CPM15A VT-OG 0.5 2TCD
 PIN 20 => GD233W BK 2.5 2TCD
 PIN 20 => GD233W BK 2.5 2TCD + GD233K BK 1.5 2TCD

PIN 1 => SBB17G RD 2.5 2TAD
 PIN 2 => CPL26A GN-VT 0.35 2TAD
 PIN 3 => CPM01B YE-GN 0.5 2TAD
 PIN 4 => CPM02B BU 0.5 2TAD
 PIN 5 => CPM24C GY-YE 0.5 2TAD
 PIN 10 => CBBP60A YE-VT 0.35 2TAD
 PIN 11 => VPW32C GY-BU 0.35 2TAD
 PIN 16 => VME10B WH-VT 0.5 2TAD
 PIN 16 => VME10D WH-VT 0.75 2TAD
 PIN 17 => RME10B WH-OG 0.5 2TAD
 PIN 17 => RME10D WH-OG 0.75 2TAD
 PIN 18 => CPM17B BU-GN 0.5 2TAD
 PIN 19 => CPM15C VT-OG 0.5 2TAD
 PIN 20 => GD214AE BK-BU 2.5 2TAD

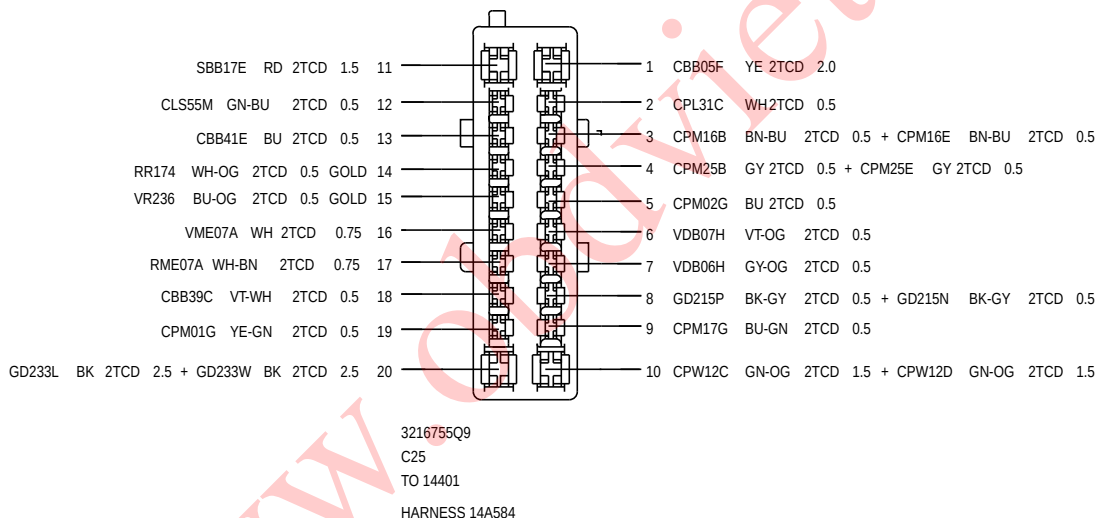

IN 1 => SBB17G RD 2.5 2TAD
IN 2 => CPL26A GN-VT 0.35 2TAD
IN 3 => CPM01H YE-GN 0.5 2TAD
IN 4 => CPM02B BU 0.5 2TAD
IN 5 => CPM24G GY-YE 0.5 2TAD + CPM24 GY-YE 0.5 2TAD
IN 10 => CBP60A YE-VT 0.35 2TAD
IN 11 => VPW32C GY-BU 0.35 2TAD
IN 16 => VME10B WH-VT 0.5 2TAD + VME07 WH 0.5 2TAD
IN 16 => VME10D WH-VT 0.75 2TAD + VME07C WH 0.75 2TAD
IN 17 => RME10B WH-OG 0.5 2TAD + RME07 WH-BN 0.5 2TAD
IN 17 => RME10D WH-OG 0.75 2TAD + RME07C WH-BN 0.75 2TAD
IN 18 => CPM17B BU-GN 0.5 2TAD
IN 19 => CPM15C VT-OG 0.5 2TAD + CPM15 VT-OG 0.5 2TAD
IN 20 => GD214AE BK-BU 2.5 2TAD

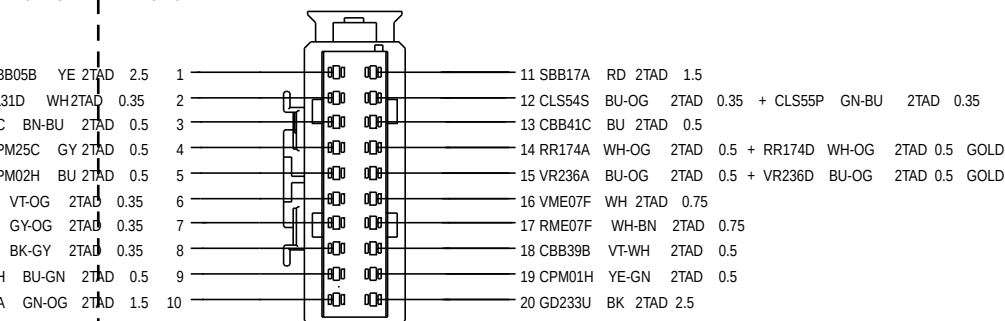


3216755M8
C25
TO 14A584
HARNESS 14401

Part 2 of 2

In-Line Connector 25—A (G1404910)

PIN 6 => CPL11L GY-BN 0.75 2TCD
PIN 8 => CPL51D BU-GN 0.5 2TCD
PIN 12 => CPL02F VT-GN 1.5 2TCD

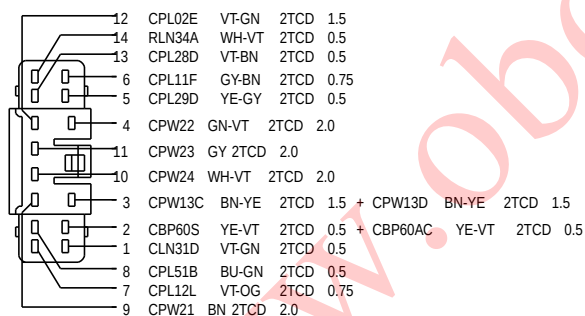


4L3T-14489-AC
C25-A
TO 14401
HARNESS 14A584

RLN34B WH-VT 2TAD 0.5
CPL28A VT-BN 2TAD 0.35
CPL02B VT-GN 2TAD 3.0
CPW23A GY 2TAD 3.0
CPW24A WH-VT 2TAD 3.0
CPW21A BN 2TAD 3.0
CPL51A BU-GN 2TAD 0.35
CPL12E VT-OG 2TAD 0.75
CPL11E GY-BN 2TAD 0.75
CPL29A YE-GY 2TAD 0.35
CPW22A GN-VT 2TAD 3.0
CPW13A BN-YE 2TAD 1.5
CBP60L YE-VT 2TAD 0.5
CLN31A VT-GN 2TAD 0.35


BU5T-14A459-BA
C25-A
TO 14A584
HARNESS 14401

In-Line Connector 26 (G1404924)

Thumbnail

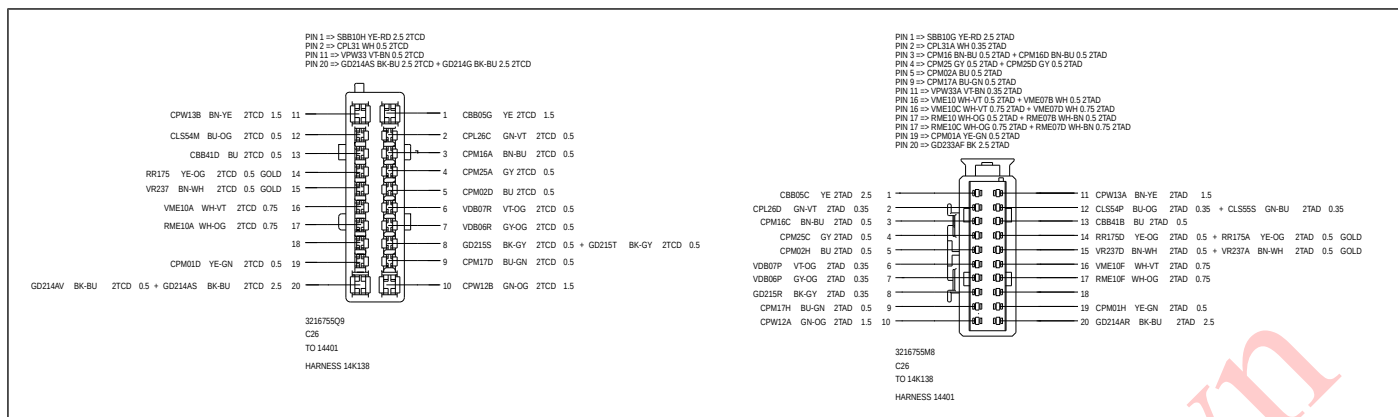


PIN 1 => SBB10H YE-RD 2.5 2TCD
 PIN 2 => CPL31 WH 0.5 2TCD
 PIN 11 => VPW33 VT-BN 0.5 2TCD
 PIN 20 => GD214AS BK-BU 2.5 2TCD + GD214G BK-BU 2.5 2TCD

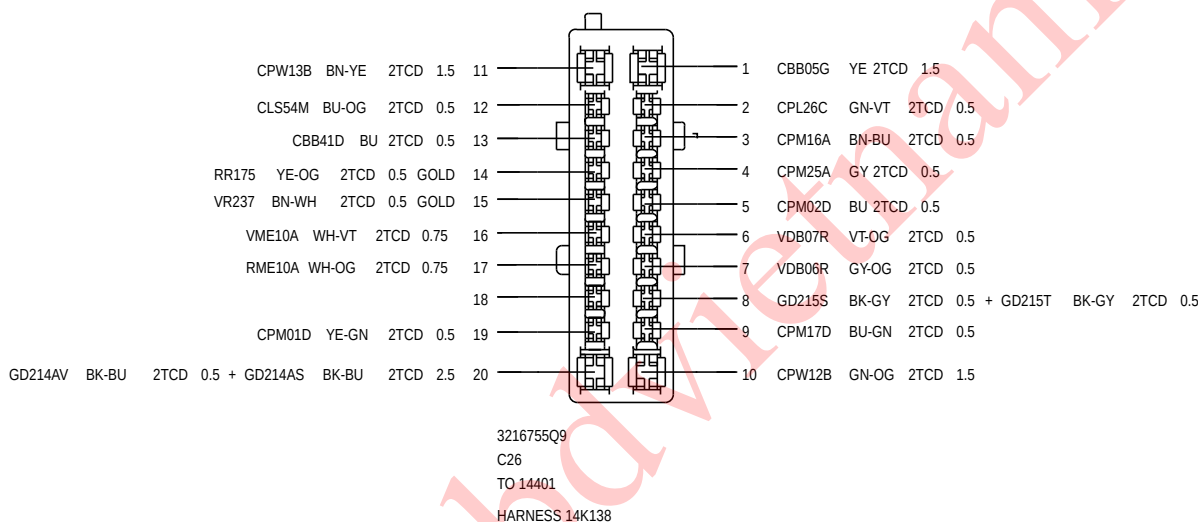

Part 1 of 2


PIN 1 => SBB10G YE-RD 2.5 2TAD
 PIN 2 => CPL31A WH 0.35 2TAD
 PIN 3 => CPM16 BN-BU 0.5 2TAD + CPM16D BN-BU 0.5 2TAD
 PIN 4 => CPM25 GY 0.5 2TAD + CPM25D GY 0.5 2TAD
 PIN 5 => CPM02A BU 0.5 2TAD
 PIN 9 => CPM17A BU-GN 0.5 2TAD
 PIN 11 => VPW33A VT-BN 0.35 2TAD
 PIN 16 => VME10 WH-VT 0.5 2TAD + VME07B WH 0.5 2TAD
 PIN 16 => VME10C WH-VT 0.75 2TAD + VME07D WH 0.75 2TAD
 PIN 17 => RME10 WH-OG 0.5 2TAD + RME07B WH-BN 0.5 2TAD
 PIN 17 => RME10C WH-OG 0.75 2TAD + RME07D WH-BN 0.75 2TAD
 PIN 19 => CPM01A YE-GN 0.5 2TAD
 PIN 20 => GD233AF BK 2.5 2TAD

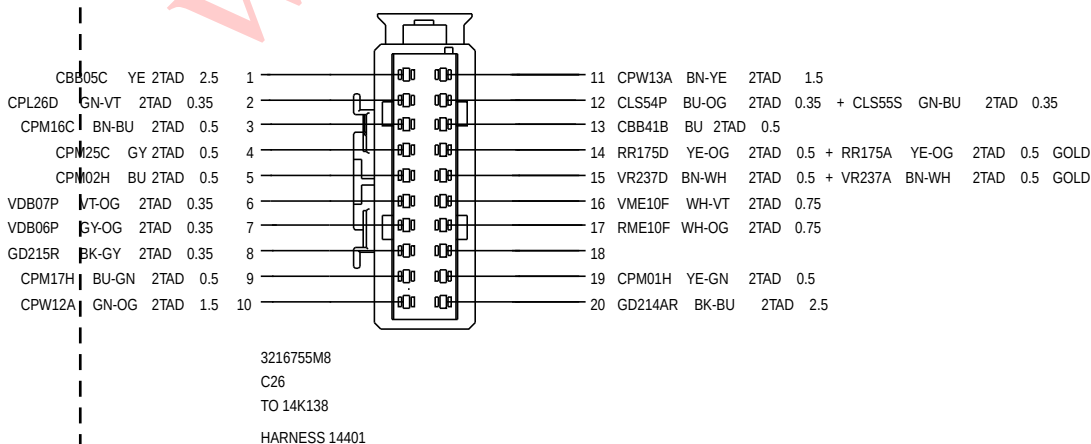

700-04-14

In-Line Connector 26—A (G1404925)

PIN 8 => CPL66C BU-BN 0.5 2TCD
PIN 9 => CPL11P GY-BN 1.0 2TCD
PIN 11 => CPL13M BN-GN 1.0 2TCD

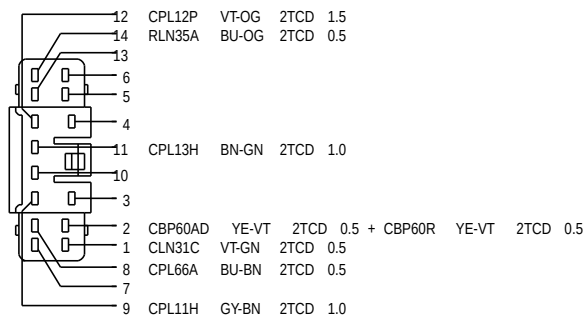


4L3T-14489-AC

C26-A

TO 14401

HARNESS 14K138

RLN35B	BU-OG	2TAD	0.5
CPL12F	VT-OG	2TAD	2.5
CPL13G	BN-GN	2TAD	1.0
CPL11G	GY-BN	2TAD	1.0
CPL66	BU-BN	2TAD	0.35
CBP60M	YE-VT	2TAD	0.5
CLN31B	VT-GN	2TAD	0.35

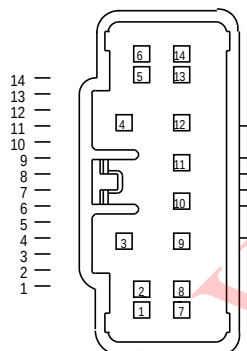

BU5T-14A459-BA


C26-A

TO 14K138

HARNESS 14401

In-Line Connector 29 (G1404926)

PIN 2 => VMM12B WH-BN 0.35 2TAD
PIN 3 => RMM12B VT-BN 0.35 2TAD

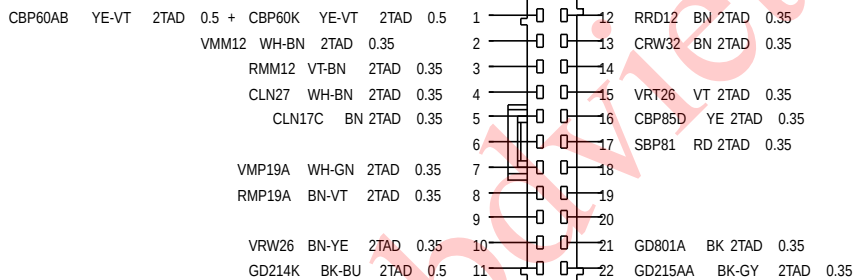


1S7T-14489-SB

C29

TO 14334

HARNESS 14401

PIN 11 => GD233C BK 0.5 2TAD + GD233AC BK 0.5 2TAD
PIN 12 => RRD12B BN 0.35 2TAD
PIN 16 => CBP85F YE 0.35 2TAD

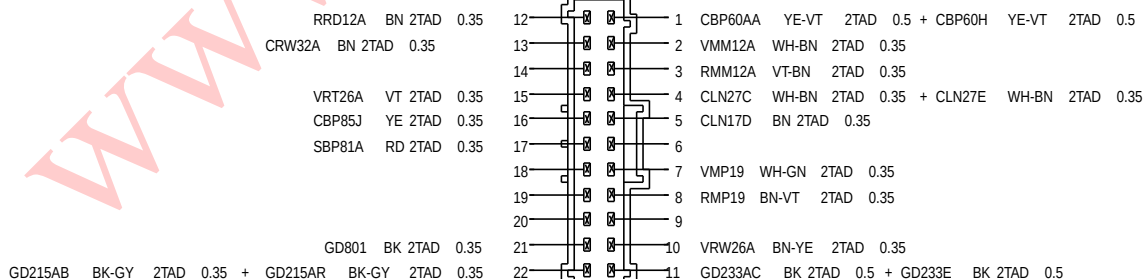

1S7T-14A459-SB

C29

TO 14401

HARNESS 14334

In-Line Connector 31 (G1404928)

1	CR106	VT-GY	2TAD	0.5	+	CR106A	VT-GY	2TAD	0.5	GOLD
2	RR106	YE-OG	2TAD	0.5	+	RR106A	YE-OG	2TAD	0.5	GOLD
3										
4										
5	CR228	BN-VT	2TAE	0.5						
6	RR155	GY	2TAE	0.5						
7										
8										
9										
10										
11	CBB38B	GY-BU	2TAD	1.0						
12	GD345D	BK-BU	2TAD	1.0	+	GD343D	BK-VT	2TAD	1.0	
13	CR203	GY-VT	2TAE	0.35						
14	RR155A	GY	2TAE	0.35						


In-Line Connector 33 (G1404929)

4S7T-14A459-VKA
C33
TO 14B079
HARNESS 14A005

700-04-17

In-Line Connector 34 (G1404930)

Thumbnail

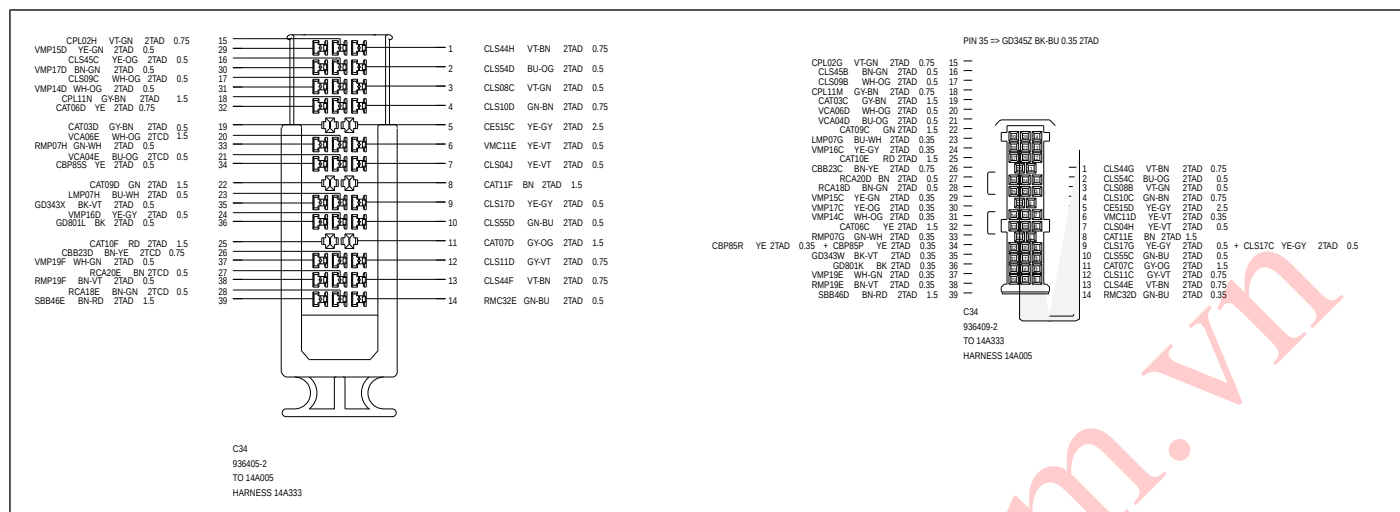

CPL02H VT-GN 2TAD 0.75

VMP15D YE-GN 2TAD 0.5

CLS45C YE-OG 2TAD 0.5

VMP17D BN-GN 2TAD 0.5

CLS09C WH-OG 2TAD 0.5

VMP14D WH-OG 2TAD 0.5

CPL11N GY-BN 2TAD 1.5

CAT06D YE 2TAD 0.75

CAT03D GY-BN 2TAD 0.5

VCA06E WH-OG 2TCD 1.5

RMP07H GN-WH 2TAD 0.5

VCA04E BU-OG 2TCD 0.5

CBP85S YE 2TAD 0.5

CAT09D GN 2TAD 1.5

LMP07H BU-WH 2TAD 0.5

GD343X BK-VT 2TAD 0.5

VMP16D YE-GY 2TAD 0.5

GD801L BK 2TAD 0.5

CAT10F RD 2TAD 1.5

CBB23D BN-YE 2TCD 0.75


VMP19F WH-GN 2TAD 0.5

RCA20E BN 2TCD 0.5

RMP19F BN-VT 2TAD 0.5

RCA18E BN-GN 2TCD 0.5

SBB46E BN-RD 2TAD 1.5

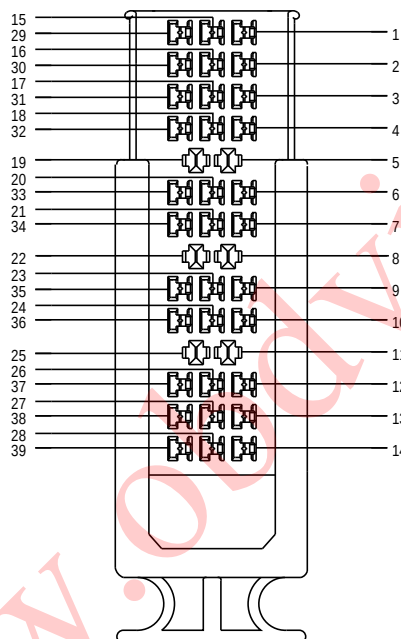

CLS44H VT-BN 2TAD 0.75

CLS54D BU-OG 2TAD 0.5

CLS08C VT-GN 2TAD 0.5

CLS10D GN-BN 2TAD 0.75

CES15C YE-GY 2TAD 2.5

VMC11E YE-VT 2TAD 0.5

CLS04J YE-VT 2TAD 0.5

CAT11F BN 2TAD 1.5

CLS17D YE-GY 2TAD 0.5

CLS55D GN-BU 2TAD 0.5

CAT07D GY-OG 2TAD 1.5

CLS11D GY-VT 2TAD 0.75

CLS44F VT-BN 2TAD 0.75

RMC32E GN-BU 2TAD 0.5

CPL02G VT-GN 2TAD

CLS45B BN-GN 2TAD

CLS09B WH-OG 2TAD

CPL11M GY-BN 2TAD

CAT03C GY-BN 2TAD

VCA06D WH-OG 2TAD

VCA04D BU-OG 2TAD

CAT09C GN 2TAD

LMP07G BU-WH 2TAD

VMP16C YE-GY 2TAD

CAT10E RD 2TAD

CBB23C BN-YE 2TAD

RCA20D BN 2TAD

RCA18D BN-GN 2TAD

VMP15C YE-GN 2TAD

VMP17C YE-OG 2TAD

VMP14C WH-OG 2TAD

CAT06C YE 2TAD

RMP07G GN-WH 2TAD

CBP85R YE 2TAD 0.35

GD343W BK-VT 2TAD

GD801K BK 2TAD


VMP19E WH-GN 2TAD

RMP19E BN-VT 2TAD

SBB46D BN-RD 2TAD

Part 1 of 2

700-04-18



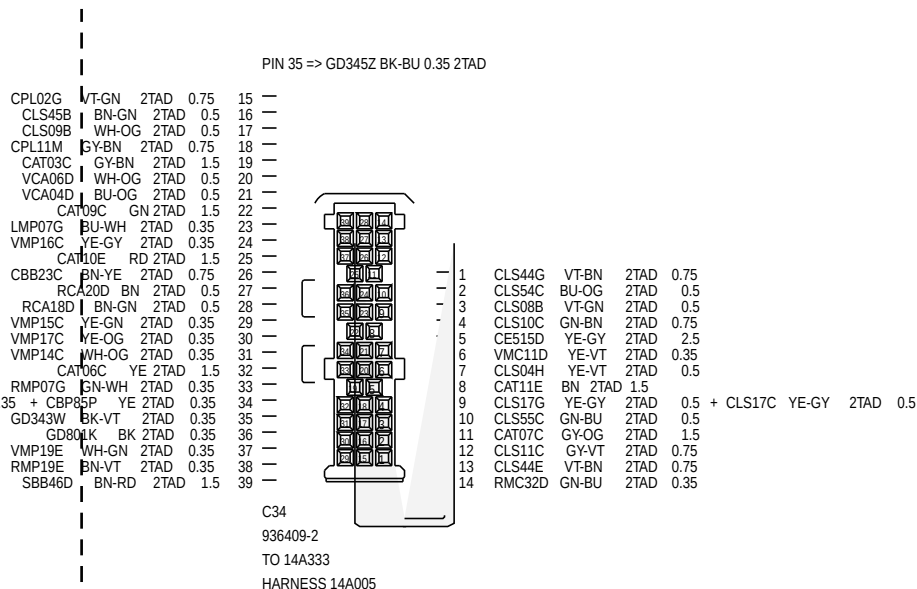


Part 2 of 2


700-04-19

In-Line Connector 34—A (G1404931)

Thumbnail

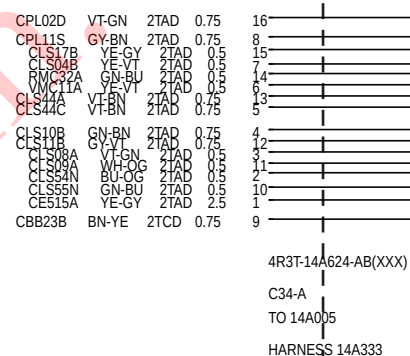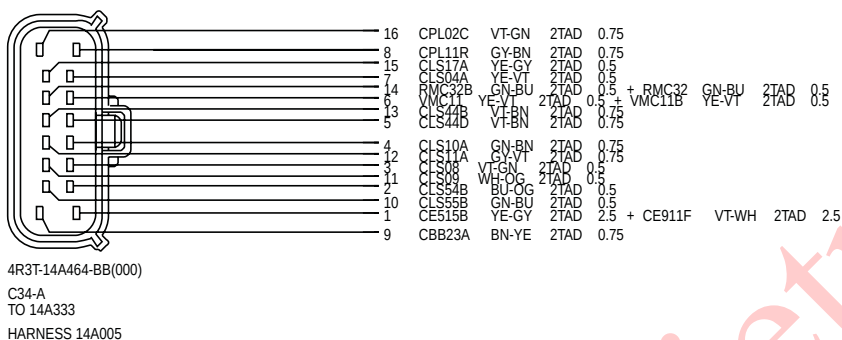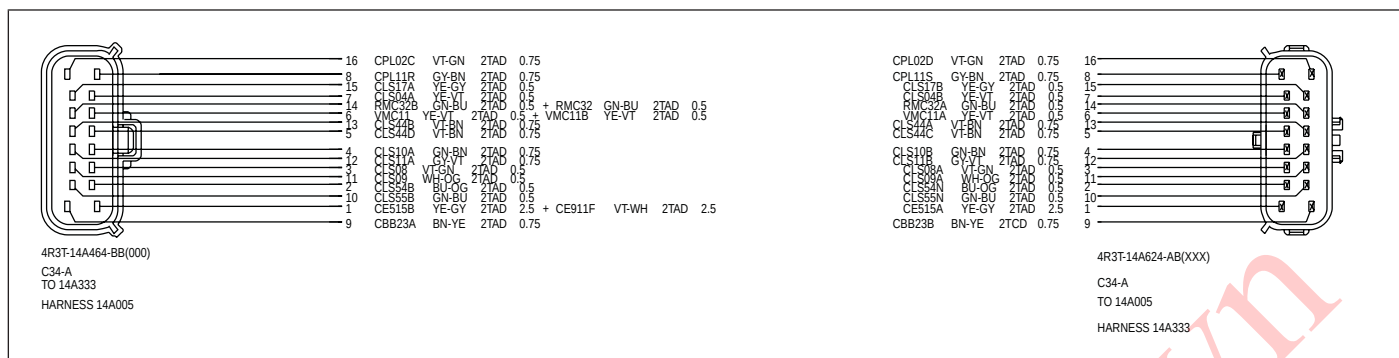

Part 1 of 2

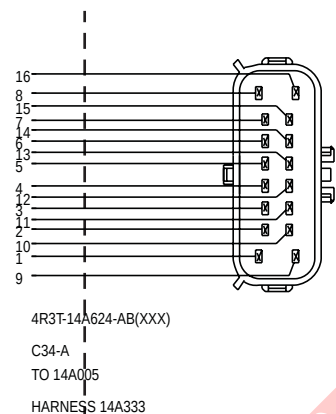


Part 2 of 2


700-04-20

In-Line Connector 34—B (G1404932)


Thumbnail

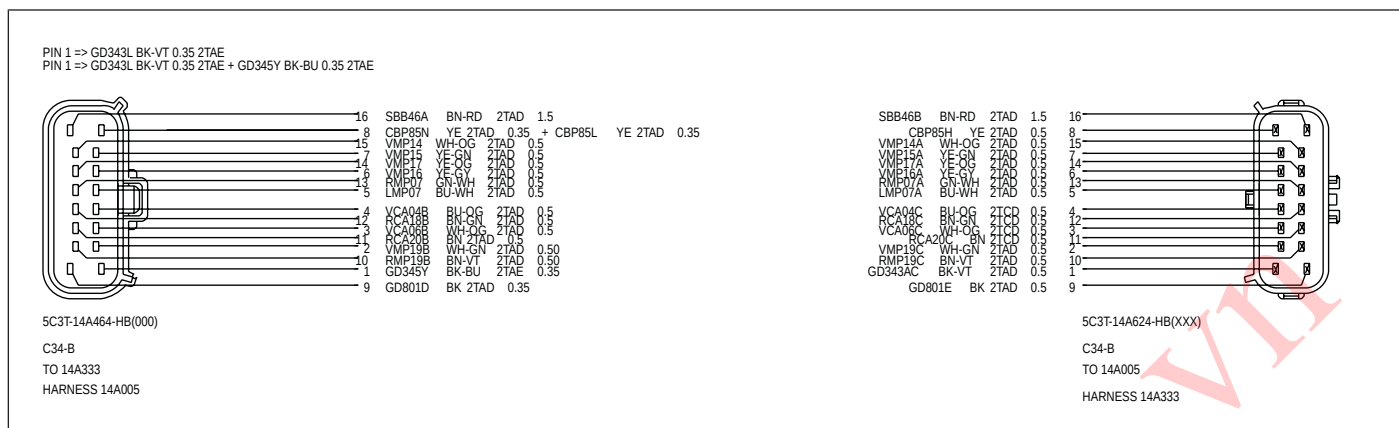

PIN 1 => GD343L BK-VT 0.35 2TAE
PIN 1 => GD343L BK-VT 0.35 2TAE + GD345Y BK-BU 0.35 2TAE

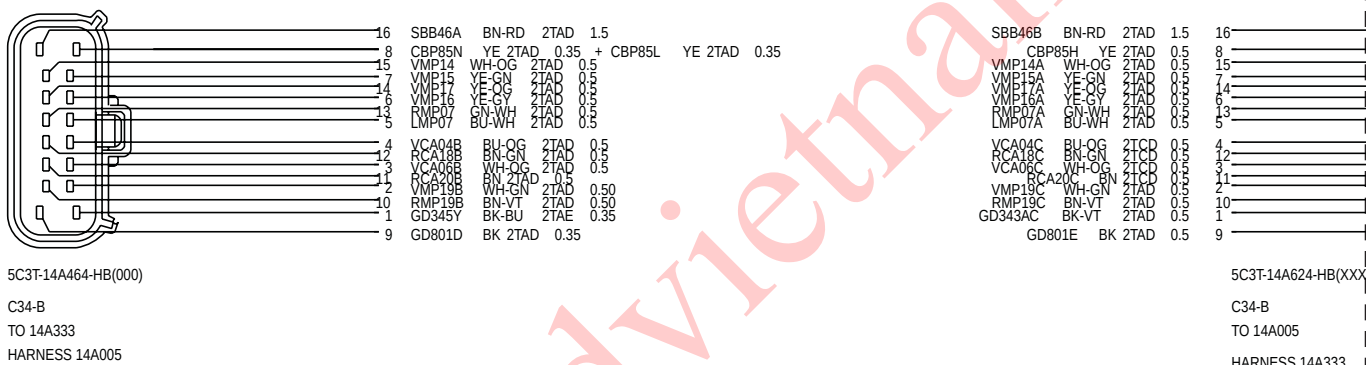

Part 1 of 2


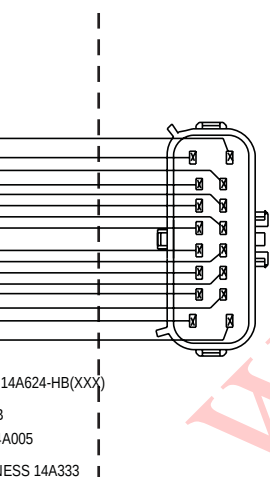


Part 2 of 2

700-04-21

In-Line Connector 37 (G1404933)


Thumbnail

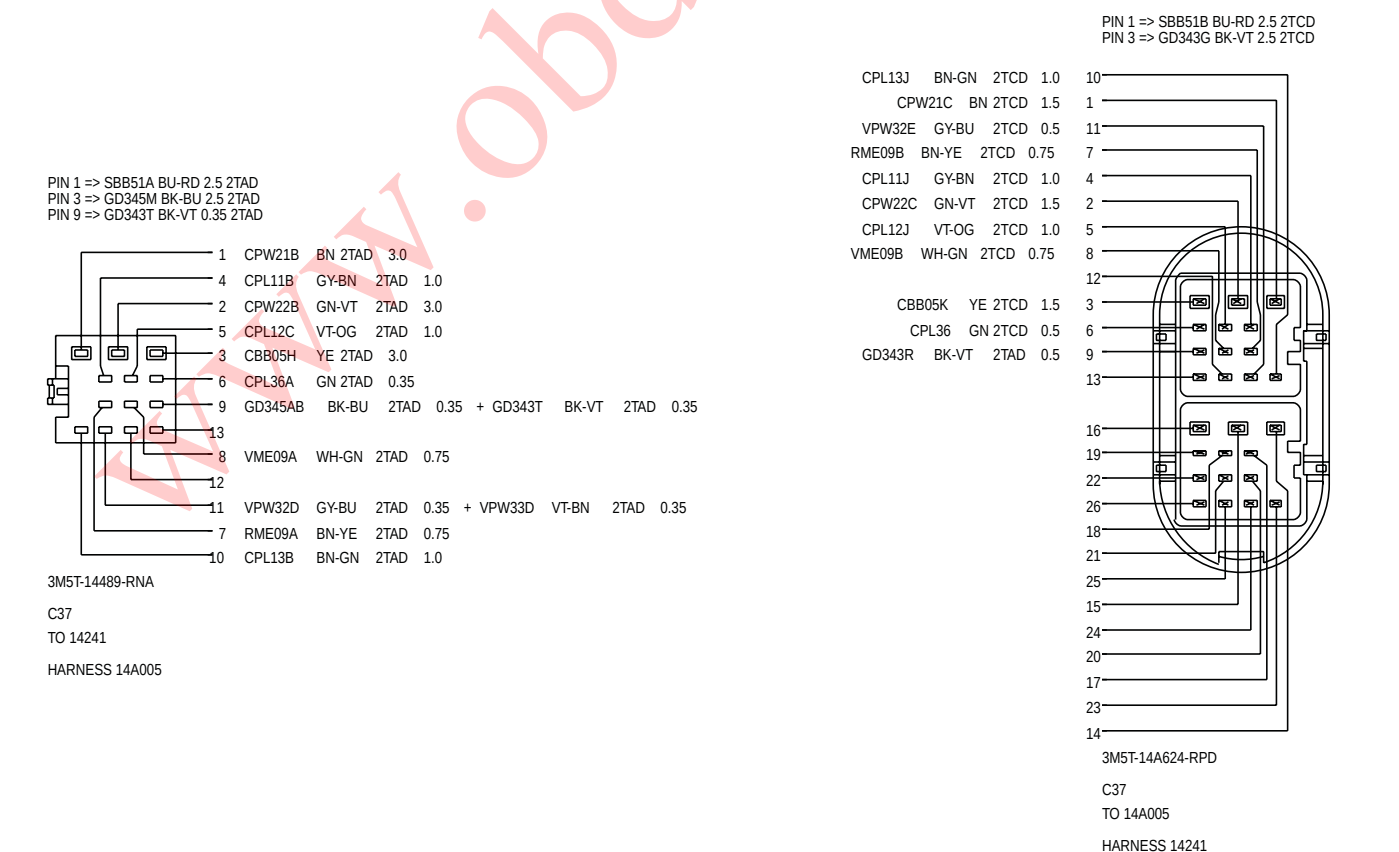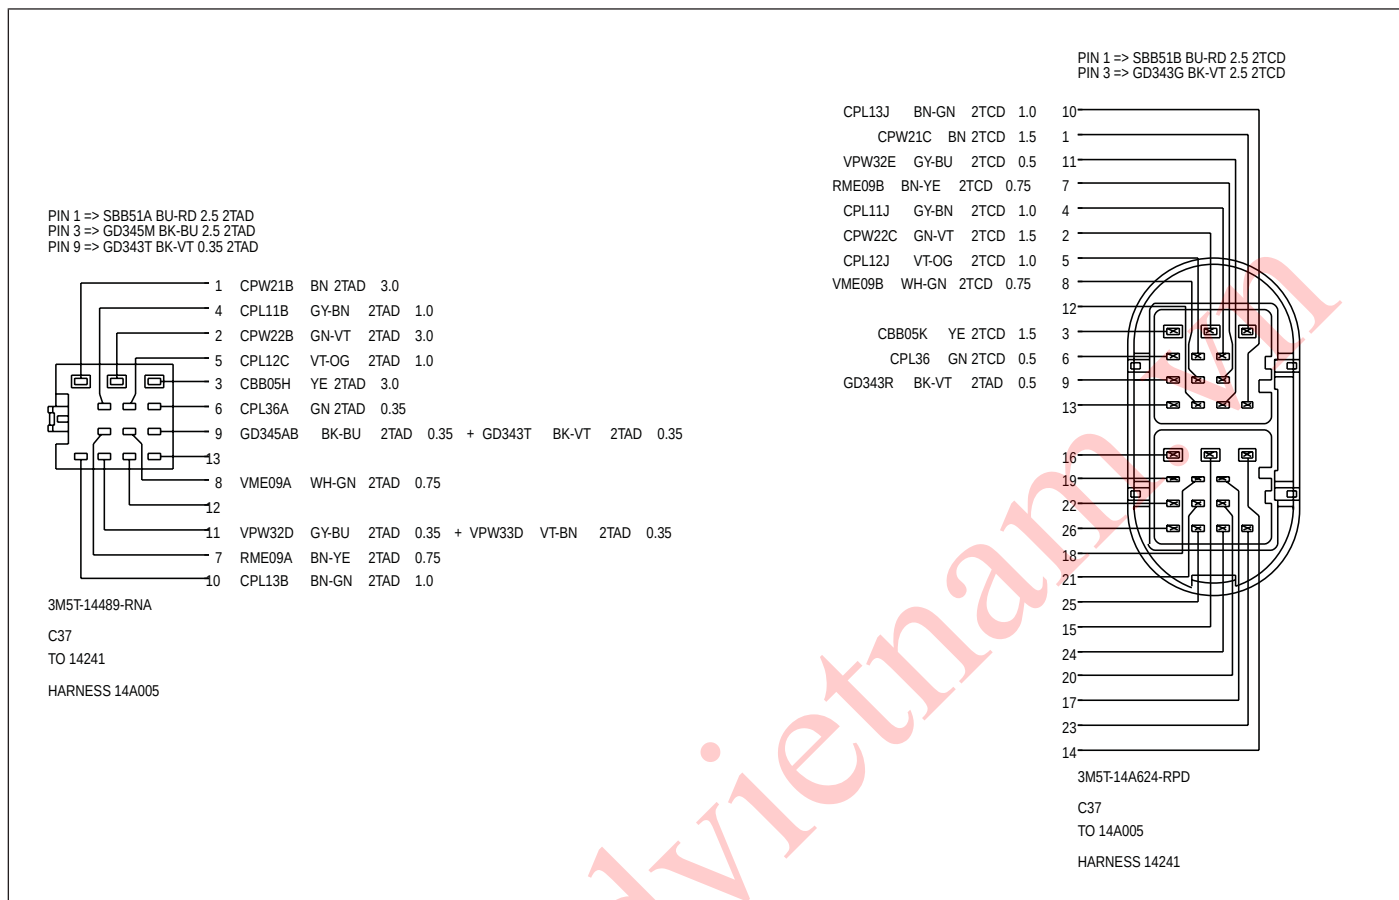

700-04-22



Part 2 of 2

In-Line Connector 37—A (G1404934)

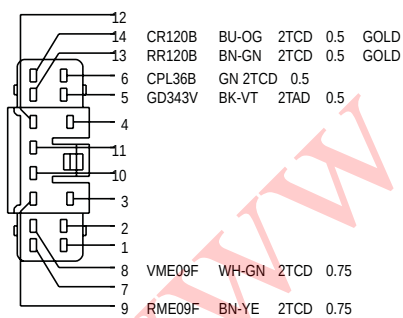

4L3T-14489-AC
C37-A
TO 14A005
HARNESS 14241

PIN 5 => GD345AD BK-BU 0.35 2TAD
PIN 5 => GD345AD BK-BU 0.35 2TAD + GD343AF BK-VT 0.35 2TAD

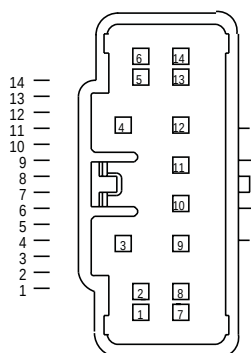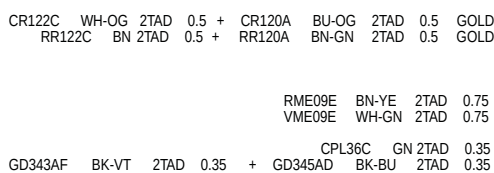


BU5T-14A459-BA
C37-A
TO 14241
HARNESS 14A005

700-04-23

In-Line Connector 38 (G1404935)

PIN 1 => SBB51D BU-RD 2.5 2TAD
PIN 3 => GD345C BK-BU 2.5 2TAD
PIN 9 => GD343C BK-VT 0.35 2TAD
PIN 9 => GD343C BK-VT 0.35 2TAD + GD345AA BK-BU 0.35 2TAD

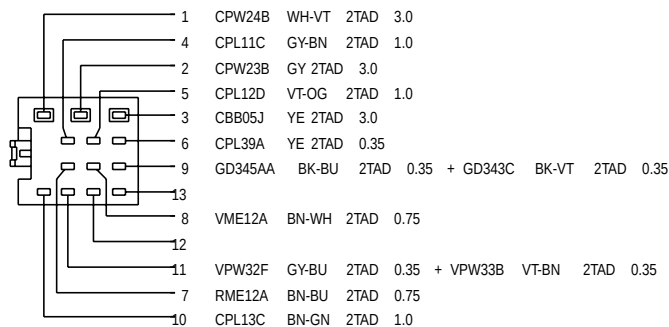


3M5T-14489-RNA

C38

TO 14240

HARNESS 14A005

PIN 1 => SBB51E BU-RD 2.5 2TCD
PIN 3 => GD345G BK-BU 2.5 2TCD

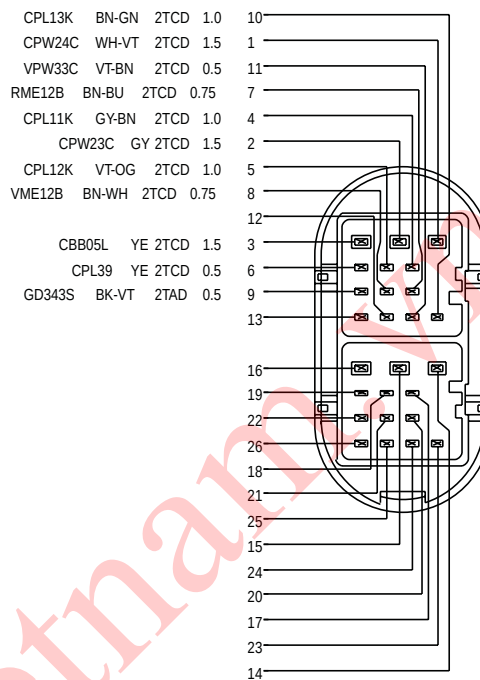

3M5T-14A624-RPD


C38

TO 14A005

HARNESS 14240

In-Line Connector 38—A (G1404936)

PIN 5 => GD343AG BK-VT 0.35 2TAD
PIN 5 => GD343AG BK-VT 0.35 2TAD + GD345AC BK-BU 0.35 2TAD

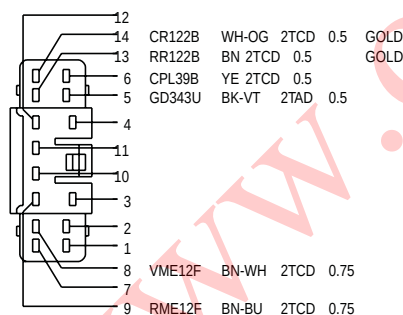


4L3T-14489-AC

C38-A

TO 14A005

HARNESS 14240

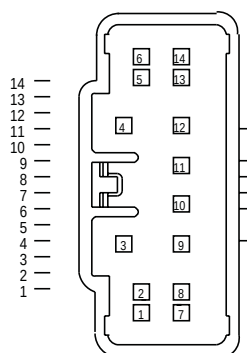


BU5T-14A459-BA

C38-A

TO 14240

HARNESS 14A005

In-Line Connector 44 (G1404944)

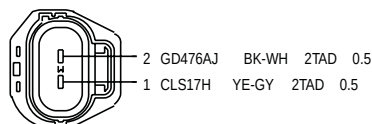


97BG-14A464-VBB

C44

TO 14A333

HARNESS 13B551



97BG-14A624-VBB

C44


TO 13B551

HARNESS 14A333


700-04-24

In-Line Connector 44—A (G1404945)


Thumbnail

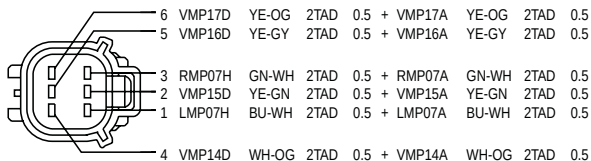


AU5T-14A464-FA(000)
C44-A
TO 19B516
HARNESS 14A333

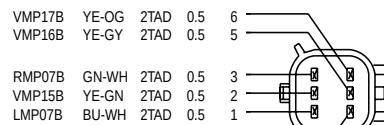

5W7T-14A624-EA(XXX)
C44-A
TO 14A333
HARNESS 19B516

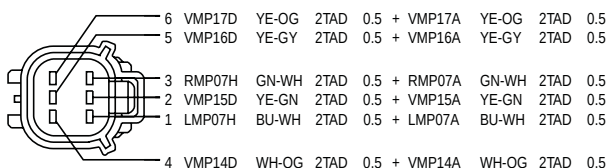

AU5T-14A464-FA(000)
C44-A
TO 19B516
HARNESS 14A333

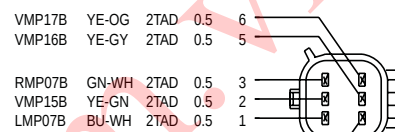


5W7T-14A624-EA(XXX)
C44-A
TO 14A333
HARNESS 19B516


Part 1 of 2

Part 2 of 2

In-Line Connector 44—B (G1404946)

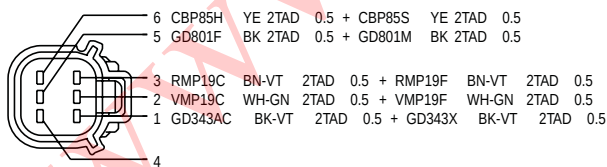

3W4T-14A464-AA(000)
C44-B
TO 14B562
HARNESS 14A333

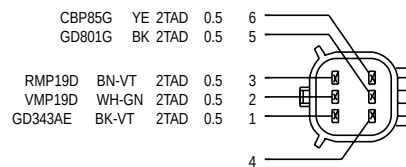


5W7T-14A624-EA(XXX)
C44-B
TO 14A333
HARNESS 14B652

700-04-25

In-Line Connector 44—C (G1404947)

Thumbnail



97BG-14A464-VBB


C44-C

TO 19B966

HARNESS 14A333

2 SBB46E BN-RD 2TAD 1.5 + SBB46B BN-RD 2TAD 1.5
1 GD476F BK-WH 2TAD 1.5

SBB46C BN-RD 2TAD 2.5
GD476G BK-WH 2TAD 2.5




97BG-14A624-VBB

C44-C

TO 14A333

HARNESS 19B966



97BG-14A464-VBB


C44-C

TO 19B966

HARNESS 14A333

2 SBB46E BN-RD 2TAD 1.5 + SBB46B BN-RD 2TAD 1.5
1 GD476F BK-WH 2TAD 1.5

SBB46C BN-RD 2TAD 2.5
GD476G BK-WH 2TAD 2.5



97BG-14A624-VBB

C44-C


TO 14A333

HARNESS 19B966

Part 1 of 2

Part 2 of 2

In-Line Connector 44—D (G1404948)



2S7T-14A464-GA


C44-D

TO 14A333

HARNESS 19B516

1 CLS04E YE-VT 2TAD 0.5
2 GD476R BK-WH 2TAD 0.5

CLS04B YE-VT 2TAD 0.5 + CLS04J YE-VT 2TAD 0.5
GD476M BK-WH 2TAD 0.5



2S7T-14A624-GA

C44-D


TO 19B516

HARNESS 14A333

700-04-26

In-Line Connector 44—E (G1404949)

PIN 1 => CAT11B BN 1.5 2TAD
PIN 2 => CAT10D RD 1.5 2TAD
PIN 3 => CAT09B GN 1.5 2TAD
PIN 4 => CAT07E BU 1.5 2TAD
PIN 5 => CAT06B YE 1.5 2TAD
PIN 6 => CAT03B BU 1.5 2TAD
PIN 8 => GD476P WH 2.5 2TAD

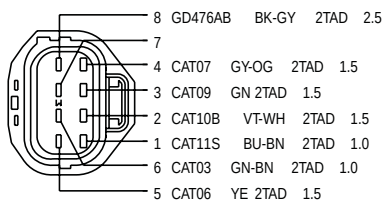


98AG-14A464-EHC


C44-E

TO 14A333

HARNESS 15A417

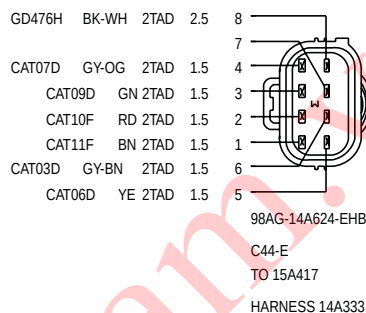

In-Line Connector 44—F (G1404950)

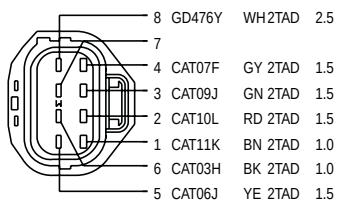

98AG-14A464-EHC

C44-F

TO INLINE-15A416-14A333

HARNESS 15A416

Index

PAGE 1 OF 16

2.2L Duratorq-TDCi (110kW/150PS) - Puma.....	303-04B	2.2L Duratorq-TDCi (96kW/130PS) - Puma.....	303-06B
2.2L Duratorq-TDCi (110kW/150PS) - Puma.....	303-06B	2.2L Duratorq-TDCi (96kW/130PS) - Puma.....	303-07B
2.2L Duratorq-TDCi (110kW/150PS) - Puma.....	303-07B	2.2L Duratorq-TDCi (96kW/130PS) - Puma.....	303-08
2.2L Duratorq-TDCi (110kW/150PS) - Puma.....	303-08	2.2L Duratorq-TDCi (96kW/130PS) - Puma.....	303-14B
2.2L Duratorq-TDCi (110kW/150PS) - Puma.....	303-14B	2.2L Duratorq-TDCi (96kW/130PS) - Puma.....	309-00
2.2L Duratorq-TDCi (110kW/150PS) - Puma.....	309-00	2.2L Duratorq-TDCi (96kW/130PS) - Puma.....	310-00B
2.2L Duratorq-TDCi (110kW/150PS) - Puma.....	310-00B	2.2L Duratorq-TDCi (96kW/130PS) - Puma.....	310-01B
2.2L Duratorq-TDCi (110kW/150PS) - Puma.....	310-01B	2.5L Duratec-HE (122kW/165PS) - MI4.....	303-04A
2.2L Duratorq-TDCi (88kW/120PS) - Puma.....	303-04B	2.5L Duratec-HE (122kW/165PS) - MI4.....	303-06A
2.2L Duratorq-TDCi (88kW/120PS) - Puma.....	303-06B	2.5L Duratec-HE (122kW/165PS) - MI4.....	303-07A
2.2L Duratorq-TDCi (88kW/120PS) - Puma.....	303-07B	2.5L Duratec-HE (122kW/165PS) - MI4.....	303-14A
2.2L Duratorq-TDCi (88kW/120PS) - Puma.....	303-08	2.5L Duratec-HE (122kW/165PS) - MI4.....	310-00A
2.2L Duratorq-TDCi (88kW/120PS) - Puma.....	303-14B	3.2L Duratorq-TDCi (148kW/200PS) - Puma.....	303-04C
2.2L Duratorq-TDCi (88kW/120PS) - Puma.....	309-00	3.2L Duratorq-TDCi (148kW/200PS) - Puma.....	303-06B
2.2L Duratorq-TDCi (88kW/120PS) - Puma.....	310-00B	3.2L Duratorq-TDCi (148kW/200PS) - Puma.....	303-07C
2.2L Duratorq-TDCi (88kW/120PS) - Puma.....	310-01B	3.2L Duratorq-TDCi (148kW/200PS) - Puma.....	303-08
2.2L Duratorq-TDCi (96kW/130PS) - Puma.....	303-04B	3.2L Duratorq-TDCi (148kW/200PS) - Puma.....	303-14B
		3.2L Duratorq-TDCi (148kW/200PS) - Puma.....	309-00

Index

PAGE 2 OF 16

3.2L Duratorq-TDCi (148kW/200PS) - Puma.....	310-00B
3.2L Duratorq-TDCi (148kW/200PS) - Puma.....	310-01B
6-Speed Automatic Transaxle - 6R80.....	307-01
About This Manual.....	100-00
Accelerator Pedal Position (APP) Sensor.....	303-14A
Accelerator Pedal Position (APP) Sensor.....	303-14B
Air Bags and Safety Belt Pretensioners—Single Cab, LHD 4WD/LHD RWD, Vehicles With: Passenger Air Bag Deactivation Switch.....	501-20B
Air Bags and Safety Belt Pretensioners—Single Cab, LHD 4WD/LHD RWD, Vehicles Without: Passenger Air Bag Deactivation Switch.....	501-20B
Air Bags and Safety Belt Pretensioners—Double Cab, LHD 4WD/LHD RWD, Vehicles With: Passenger Air Bag Deactivation Switch.....	501-20B
Air Bags and Safety Belt Pretensioners—Double Cab, LHD 4WD/LHD RWD, Vehicles Without: Passenger Air Bag Deactivation Switch.....	501-20B
Air Bags and Safety Belt Pretensioners—Super Cab, LHD 4WD/LHD RWD, Vehicles With: Passenger Air Bag Deactivation Switch.....	501-20B
Air Bags and Safety Belt Pretensioners—Super Cab, LHD 4WD/LHD RWD, Vehicles Without: Passenger Air Bag Deactivation Switch.....	501-20B
Air Bags and Safety Belt Pretensioners—Single Cab, RHD 4WD/RHD RWD, Vehicles With: Passenger Air Bag Deactivation Switch.....	501-20B

Air Bags and Safety Belt Pretensioners—Single Cab, RHD 4WD/RHD RWD, Vehicles Without: Passenger Air Bag Deactivation Switch.....	501-20B
Air Bags and Safety Belt Pretensioners—Double Cab, RHD 4WD/RHD RWD, Vehicles With: Passenger Air Bag Deactivation Switch.....	501-20B
Air Bags and Safety Belt Pretensioners—Double Cab, RHD 4WD/RHD RWD, Vehicles Without: Passenger Air Bag Deactivation Switch.....	501-20B
Air Bags and Safety Belt Pretensioners—Super Cab, RHD 4WD/RHD RWD, Vehicles With: Passenger Air Bag Deactivation Switch.....	501-20B
Air Bags and Safety Belt Pretensioners—Super Cab, RHD 4WD/RHD RWD, Vehicles Without: Passenger Air Bag Deactivation Switch.....	501-20B
Air Conditioning (A/C) Dual Pressure Switch.....	412-01
Air Conditioning (A/C) Pressure Transducer.....	412-01
Ambient Air Temperature Sensor.....	412-01
Anti-Lock Brake System (ABS) Module.....	206-09A
Anti-Lock Brake System (ABS) Module.....	206-09C
Anti-Lock Control.....	206-09A
Anti-Lock Control - Stability Assist.....	206-09B
Anti-Theft Alarm Horn.....	419-01A
Anti-Theft Alarm Horn with Integral Battery.....	419-01A
Anti-Theft Alarm Module.....	419-01A
Anti-Theft Alarm System—Double Cab, LHD 4WD/LHD RWD.....	419-01A

Index

PAGE 3 OF 16

Anti-Theft Alarm System—Single Cab, LHD 4WD/LHD RWD.....	419-01A	Audio System—Double Cab, LHD 4WD/LHD RWD, Vehicles With: Bluetooth and Voice Control.....	415-01
Anti-Theft Alarm System—Super Cab, LHD 4WD/LHD RWD.....	419-01A	Audio System—Double Cab, LHD 4WD/LHD RWD, Vehicles Without: Bluetooth and Voice Control.....	415-01
Anti-Theft Alarm System—Double Cab, RHD 4WD/RHD RWD.....	419-01A	Audio System—Super Cab, LHD 4WD/LHD RWD, Vehicles With: Bluetooth and Voice Control.....	415-01
Anti-Theft Alarm System—Single Cab, RHD 4WD/RHD RWD.....	419-01A	Audio System—Super Cab, LHD 4WD/LHD RWD, Vehicles Without: Bluetooth and Voice Control.....	415-01
Anti-Theft Alarm System—Super Cab, RHD 4WD/RHD RWD.....	419-01A	Audio System—Single Cab, RHD 4WD/RHD RWD, Vehicles With: Bluetooth and Voice Control.....	415-01
Audio Input Socket.....	415-01	Audio System—Single Cab, RHD 4WD/RHD RWD, Vehicles Without: Bluetooth and Voice Control.....	415-01
Audio System—Single Cab, LHD 4WD/LHD RWD, Vehicles With: Single DIN Standard Audio Unit.....	415-01	Audio System—Double Cab, RHD 4WD/RHD RWD, Vehicles With: Bluetooth and Voice Control.....	415-01
Audio System—Single Cab, RHD 4WD/RHD RWD, Vehicles With: Single DIN Standard Audio Unit.....	415-01	Audio System—Double Cab, Vehicles Without: Bluetooth and Voice Control, RHD.....	415-01
Audio System—Double Cab, LHD 4WD/LHD RWD, Vehicles With: Single DIN Standard Audio Unit.....	415-01	Audio System—Super Cab, RHD 4WD/RHD RWD, Vehicles With: Bluetooth and Voice Control.....	415-01
Audio System—Double Cab, RHD 4WD/RHD RWD, Vehicles With: Single DIN Standard Audio Unit.....	415-01	Audio System—Super Cab, RHD 4WD/RHD RWD, Vehicles Without: Bluetooth and Voice Control.....	415-01
Audio System—Super Cab, LHD 4WD/LHD RWD, Vehicles With: Single DIN Standard Audio Unit.....	415-01	Audio Unit.....	415-01
Audio System—Super Cab, RHD 4WD/RHD RWD, Vehicles With: Single DIN Standard Audio Unit.....	415-01	Audio Unit—A.....	415-01
Audio System—Single Cab, LHD 4WD/LHD RWD, Vehicles With: Bluetooth and Voice Control.....	415-01	Audio Unit—B.....	415-01
Audio System—Single Cab, LHD 4WD/LHD RWD, Vehicles Without: Bluetooth and Voice Control.....	415-01	Audio Unit—J.....	415-01
		Auto-Dimming Interior Mirror.....	501-09
		Auto-Dimming Interior Mirror.....	501-09
		Auto-Dimming Interior Mirror.....	501-09

Index

PAGE 4 OF 16

Autolamps—LHD 4WD/LHD RWD.....	417-01
Autolamps—RHD 4WD/RHD RWD.....	417-01
Automatic Transmission/Transaxle—LHD 4WD/LHD RWD.....	307-01
Automatic Transmission/Transaxle—RHD 4WD/RHD RWD.....	307-01
Battery—A.....	414-01
Battery—C.....	414-01
Battery Monitoring Sensor.....	414-01
Blower Motor.....	412-01
Blower Motor Control Module.....	412-01
Blower Motor Resistor.....	412-01
B-Pillar LH—Single Cab.....	700-00
B-Pillar LH—Super Cab.....	700-00
B-Pillar RH—Single Cab.....	700-00
B-Pillar RH—Super Cab.....	700-00
Brake Pedal Position (BPP) Switch.....	303-14A
Brake Pedal Position (BPP) Switch.....	303-14B
Catalyst Monitor Sensor.....	303-14A
Cellular Phone Microphone.....	415-01
Central Junction Box (CJB)—A.....	418-00
Central Junction Box (CJB)—B.....	418-00
Central Junction Box (CJB)—C.....	418-00
Central Junction Box (CJB)—D.....	418-00
Central Junction Box (CJB)—E.....	418-00
Central Junction Box (CJB)—F.....	418-00
Central Junction Box (CJB)—G.....	418-00
Central Junction Box (CJB)—H.....	418-00
Central Junction Box (CJB)—LHD 4WD/LHD RWD.....	700-00

Central Junction Box (CJB)—RHD 4WD/RHD RWD.....	700-00
Central Junction Box (CJB)—LHD 4WD/LHD RWD.....	700-01
Central Junction Box (CJB)—RHD 4WD/RHD RWD.....	700-01
Central Locking Lock/Unlock Switch.....	501-14
Charging System—2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma.....	414-02
Charging System—3.2L Duratorq-TDCi (148kW/200PS) - Puma.....	414-02
Charging System—2.5L Duratec-HE (122kW/165PS) - MI4.....	414-02
Cigar Lighter.....	501-12
Cigar Lighter and Power Points—LHD 4WD/LHD RWD.....	700-02
Cigar Lighter and Power Points—RHD 4WD/RHD RWD.....	700-02
Climate Control—2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma/3.2L Duratorq-TDCi (148kW/200PS) - Puma, LHD 4WD/LHD RWD, Vehicles With: Dual Automatic Temperature Control.....	412-01
Climate Control—2.5L Duratec-HE (122kW/165PS) - MI4, LHD 4WD/LHD RWD, Vehicles With: Dual Automatic Temperature Control.....	412-01
Climate Control—2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma/3.2L Duratorq-TDCi.....	

Index

PAGE 5 OF 16

(148kW/200PS) - Puma, RHD 4WD/RHD RWD, Vehicles With: Dual Automatic Temperature Control.....	412-01	Climate Control Assembly—LHD 4WD/LHD RWD, Vehicles With: Manual Temperature Control.....	700-00
Climate Control—2.5L Duratec-HE (122kW/165PS) - MI4, RHD 4WD/RHD RWD, Vehicles With: Dual Automatic Temperature Control.....	412-01	Climate Control Assembly—LHD 4WD/LHD RWD, Vehicles With: Air Conditioning.....	700-00
Climate Control—LHD 4WD/LHD RWD, Vehicles Without: Air Conditioning.....	412-01	Climate Control Assembly—LHD 4WD/LHD RWD, Vehicles Without: Air Conditioning.....	700-00
Climate Control—RHD 4WD/RHD RWD, Vehicles Without: Air Conditioning.....	412-01	Climate Control Assembly—RHD 4WD/RHD RWD, Vehicles With: Dual Automatic Temperature Control.....	700-00
Climate Control—2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma/3.2L Duratorq-TDCi (148kW/200PS) - Puma, LHD 4WD/LHD RWD, Vehicles With: Manual Temperature Control.....	412-01	Climate Control Assembly—RHD 4WD/RHD RWD, Vehicles With: Manual Temperature Control.....	700-00
Climate Control—2.5L Duratec-HE (122kW/165PS) - MI4, LHD 4WD/LHD RWD, Vehicles With: Manual Temperature Control.....	412-01	Climate Control Assembly—RHD 4WD/RHD RWD, Vehicles With: Air Conditioning.....	700-00
Climate Control—2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma/3.2L Duratorq-TDCi (148kW/200PS) - Puma, RHD 4WD/RHD RWD, Vehicles With: Manual Temperature Control.....	412-01	Climate Control Assembly—RHD 4WD/RHD RWD, Vehicles Without: Air Conditioning.....	700-00
Climate Control—2.5L Duratec-HE (122kW/165PS) - MI4, RHD 4WD/RHD RWD, Vehicles With: Manual Temperature Control.....	412-01	Climate Control Module.....	412-01
Climate Control Assembly—LHD 4WD/LHD RWD, Vehicles With: Dual Automatic Temperature Control.....	700-00	Climate Control Module—A.....	412-01
		Climate Control Module—B.....	412-01
		Clockspring.....	501-20B
		Clockspring—A.....	501-20B
		Clutch and Clutch Field Coil.....	412-01
		Clutch Pedal Position (CPP) Switch.....	303-14A
		Clutch Pedal Position (CPP) Switch.....	303-14A
		Clutch Pedal Position (CPP) Switch.....	303-14B
		Clutch Pedal Position (CPP) Switch.....	303-14B
		Communications Module—A.....	415-01
		Communications Module—B.....	415-01
		Communications Network - High-Speed (HS) Controller Area Network (CAN) Bus—Vehicles With: 5-Speed	

Index

PAGE 6 OF 16

Manual Transmission - MT75/6-Speed Manual Transmission - MT82.....	418-00	Courtesy and Demand Lighting—Double Cab, LHD 4WD/LHD RWD.....	417-02
Communications Network - High-Speed (HS) Controller Area Network (CAN) Bus—Vehicles With: 6-Speed Automatic Transaxle - 6R80.....	418-00	Courtesy and Demand Lighting—Super Cab, LHD 4WD/LHD RWD.....	417-02
Communications Network - Local Interconnect Network (LIN) Bus—2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma/3.2L Duratorq-TDCi (148kW/200PS) - Puma, LHD 4WD/LHD RWD.....	418-00	Courtesy and Demand Lighting—Single Cab, RHD 4WD/RHD RWD.....	417-02
Communications Network - Local Interconnect Network (LIN) Bus—2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma/3.2L Duratorq-TDCi (148kW/200PS) - Puma, LHD 4WD/LHD RWD.....	418-00	Courtesy and Demand Lighting—Double Cab, RHD 4WD/RHD RWD.....	417-02
Communications Network - Local Interconnect Network (LIN) Bus—2.5L Duratec-HE (122kW/165PS) - M14, LHD 4WD/LHD RWD.....	418-00	Courtesy and Demand Lighting—Super Cab, RHD 4WD/RHD RWD.....	417-02
Communications Network - Local Interconnect Network (LIN) Bus—2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma/3.2L Duratorq-TDCi (148kW/200PS) - Puma, RHD 4WD/RHD RWD.....	418-00	Crankshaft Position (CKP) Sensor.....	303-14A
Communications Network - Local Interconnect Network (LIN) Bus—2.5L Duratec-HE (122kW/165PS) - M14, RHD 4WD/RHD RWD.....	418-00	Crankshaft Position (CKP) Sensor—A.....	303-14B
Communications Network - Mid-Speed (MS) Controller Area Network (CAN) Bus.....	418-00	Cruise Control Switch.....	419-03
Communications Network - Multimedia (MM) Controller Area Network (CAN) Bus.....	418-00	Data Link Connector (DLC).....	418-00
Cooling Fan Motor.....	303-03	Daytime Running Lamp LH.....	417-04
Courtesy and Demand Lighting—Single Cab, LHD 4WD/LHD RWD.....	417-02	Daytime Running Lamp RH.....	417-04
		Defrost Vent/Register/Footwell Blend Door Actuator.....	412-01
		Defrost Vent/Register/Footwell Blend Door Actuator—A.....	412-01
		Diagnostics.....	418-00
		Diesel Particulate Filter (DPF) Differential Pressure Sensor.....	303-14B
		Driver Door Interior View—Double Cab, LHD 4WD/LHD RWD.....	700-00
		Driver Door Interior View—Single Cab/Super Cab, LHD 4WD/LHD RWD.....	700-00
		Driver Door Interior View—Double Cab, RHD 4WD/RHD RWD.....	700-00
		Driver Door Interior View—Single Cab/Super Cab, RHD 4WD/RHD RWD.....	700-00
		Driver Door Latch.....	501-14
		Driver Door Latch—A.....	501-14
		Driver Door Module (DDM).....	419-10

Index

PAGE 7 OF 16

Driver Door Module (DDM)—A.....	419-10	Engine Control—2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma, Vehicles With: 5-Speed Manual Transmission - MT75/6-Speed Manual Transmission - MT82.....	303-14B
Driver Door Side Impact Sensor.....	501-20B	Engine Control—2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma, Vehicles With: 6-Speed Automatic Transaxle - 6R80.....	303-14B
Driver Door Window Control Switch.....	501-11	Engine Control—3.2L Duratorq-TDCi (148kW/200PS) - Puma, Vehicles With: 6-Speed Automatic Transaxle - 6R80.....	303-14B
Driver Door Window Control Switch—A.....	501-11	Engine Control—3.2L Duratorq-TDCi (148kW/200PS) - Puma, Vehicles With: 6-Speed Manual Transmission - MT82.....	303-14B
Driver Door Window Control Switch—B.....	501-11	Engine Control—3.2L Duratorq-TDCi (148kW/200PS) - Puma, Vehicles With: 6-Speed Automatic Transaxle - 6R80, Emission Requirements: DGA Emissions.....	303-14B
Driver Door Window Regulator Motor.....	501-11	Engine Coolant Temperature (ECT) Sensor—A.....	303-14A
Driver Door Window Regulator Motor—A.....	501-11	Engine Coolant Temperature (ECT) Sensor.....	303-14B
Driver Lower Air Bag Module.....	501-20B	Engine Junction Box (EJB).....	418-00
Driver Safety Belt Pretensioner.....	501-20A	Engine Junction Box (EJB)—A.....	418-00
Driver Side Air Curtain Module.....	501-20B	Engine Left-Hand View—2.5L Duratec-HE (122kW/165PS) - MI4.....	700-00
Electronic Locking Differential (ELD) Solenoid.....	205-02	Engine Left-Hand View—2.5L Duratec-HE (122kW/165PS) - MI4, Emission Requirements: DGA Emissions, Compressed	
Engine Compartment Left-Hand View—LHD 4WD/LHD RWD.....	700-00		
Engine Compartment Left-Hand View—RHD 4WD/RHD RWD.....	700-00		
Engine Compartment Right-Hand View—LHD 4WD/LHD RWD.....	700-00		
Engine Compartment Right-Hand View—RHD 4WD/RHD RWD.....	700-00		
Engine Control—2.5L Duratec-HE (122kW/165PS) - MI4, Compressed Natural Gas (CNG)/Ethanol/Liquefied Petroleum Gas (LPG).....	303-14A		
Engine Control.....	303-14A		
Engine Control—2.2L Duratorq-TDCi (88kW/120PS) - Puma.....	303-14B		
Engine Control—2.2L Duratorq-TDCi (110kW/150PS) - Puma, Vehicles With: 6-Speed Automatic Transaxle - 6R80, Emission Requirements: DGA Emissions.....	303-14B		

Index

PAGE 8 OF 16

Natural Gas (CNG)/Ethanol/Liquefied Petroleum Gas (LPG).....	700-00	Engine Right-Hand View—2.2L Duratorq-TDCi (110kW/150PS) - Puma.....	700-00
Engine Left-Hand View—2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma, Emission Requirements: DGA Emissions.....	700-00	Engine Right-Hand View—3.2L Duratorq-TDCi (148kW/200PS) - Puma.....	700-00
Engine Left-Hand View—2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma, Emission Requirements: DGA Emissions.....	700-00	Engine Right-Hand View—3.2L Duratorq-TDCi (148kW/200PS) - Puma, Emission Requirements: DGA Emissions.....	700-00
Engine Left-Hand View—3.2L Duratorq-TDCi (148kW/200PS) - Puma.....	700-00	Engine Right-Hand View—3.2L Duratorq-TDCi (148kW/200PS) - Puma, Emission Requirements: DGA Emissions.....	700-00
Engine Left-Hand View—3.2L Duratorq-TDCi (148kW/200PS) - Puma, Emission Requirements: DGA Emissions.....	700-00	Engine Upper View—2.5L Duratec-HE (122kW/165PS) - MI4, Emission Requirements: DGA Emissions, Compressed Natural Gas (CNG)/Ethanol/Liquefied Petroleum Gas (LPG).....	700-00
Engine Left-Hand View—3.2L Duratorq-TDCi (148kW/200PS) - Puma, Emission Requirements: DGA Emissions.....	700-00	Engine Upper View—2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma, Emission Requirements: DGA Emissions.....	700-00
Engine Oil Pressure (EOP) Switch.....	303-14A	Engine Upper View—3.2L Duratorq-TDCi (148kW/200PS) - Puma.....	700-00
Engine Oil Pressure (EOP) Switch—A.....	303-14B	Engine Upper View—3.2L Duratorq-TDCi (148kW/200PS) - Puma, Emission Requirements: DGA Emissions.....	700-00
Engine Right-Hand View—2.5L Duratec-HE (122kW/165PS) - MI4.....	700-00	Engine Upper View—3.2L Duratorq-TDCi (148kW/200PS) - Puma, Emission Requirements: DGA Emissions.....	700-00
Engine Right-Hand View—2.5L Duratec-HE (122kW/165PS) - MI4, Emission Requirements: DGA Emissions, Compressed Natural Gas (CNG)/Ethanol/Liquefied Petroleum Gas (LPG).....	700-00	Engine Upper View—3.2L Duratorq-TDCi (148kW/200PS) - Puma, Emission Requirements: DGA Emissions.....	700-00
Engine Right-Hand View—2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma.....	700-00	Evaporative Emission Canister Purge Valve.....	303-13
		Evaporator Temperature Sensor.....	412-01
		Evaporator Temperature Sensor—A.....	412-01
		Exhaust Gas Recirculation (EGR) Valve.....	303-08

Index

PAGE 9 OF 16

Exhaust Gas Temperature Sensor.....	303-14B	Front Door Trim Panel Ambient Lighting Lamp RH.....	417-02
Exterior Lighting—LHD 4WD/LHD RWD.....	417-01	Front Door Tweeter Speaker LH.....	415-01
Exterior Lighting—RHD 4WD/RHD RWD.....	417-01	Front Door Tweeter Speaker RH.....	415-01
Exterior Mirror Control Switch.....	501-09	Front Fender LH.....	700-00
Exterior Mirror LH.....	501-09	Front Fender RH.....	700-00
Exterior Mirror RH.....	501-09	Front Floor Left-Hand View—Single Cab, LHD 4WD/LHD RWD.....	700-00
Fog Lamps—LHD 4WD/LHD RWD.....	417-01	Front Floor Left-Hand View—Double Cab, LHD 4WD/LHD RWD.....	700-00
Fog Lamps—RHD 4WD/RHD RWD.....	417-01	Front Floor Left-Hand View—Super Cab, LHD 4WD/LHD RWD.....	700-00
Footwell Lamp LH.....	417-02	Front Floor Left-Hand View—Single Cab, RHD 4WD/LHD RWD.....	700-00
Footwell Lamp RH.....	417-02	Front Floor Left-Hand View—Double Cab, RHD 4WD/RHD RWD.....	700-00
Four-Wheel Drive Systems—2.5L Duratec-HE (122kW/165PS) - M14, Vehicles With: Electronic Locking Differential (ELD).....	308-07	Front Floor Left-Hand View—Super Cab, RHD 4WD/RHD RWD.....	700-00
Four-Wheel Drive Systems—2.5L Duratec-HE (122kW/165PS) - M14, Vehicles Without: Electronic Locking Differential (ELD).....	308-07	Front Floor Right-Hand View—Single Cab, LHD 4WD/LHD RWD.....	700-00
Four-Wheel Drive Systems—2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma/3.2L Duratorq-TDCi (148kW/200PS) - Puma, Vehicles With: Electronic Locking Differential (ELD).....	308-07	Front Floor Right-Hand View—Double Cab, LHD 4WD/LHD RWD.....	700-00
Four-Wheel Drive Systems—2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma/3.2L Duratorq-TDCi (148kW/200PS) - Puma, Vehicles Without: Electronic Locking Differential (ELD).....	308-07	Front Floor Right-Hand View—Super Cab, LHD 4WD/LHD RWD.....	700-00
Front Door Speaker LH.....	415-01	Front Floor Right-Hand View—Single Cab, RHD 4WD/RHD RWD.....	700-00
Front Door Speaker RH.....	415-01	Front Floor Right-Hand View—Double Cab, RHD 4WD/RHD RWD.....	700-00
Front Door Trim Panel Ambient Lighting Lamp LH.....	417-02	Front Fog Lamp LH.....	417-01
		Front Fog Lamp RH.....	417-01
		Front Impact Severity Sensor.....	501-20B
		Front Impact Severity Sensor.....	501-20B

Index

PAGE 10 OF 16

Front Power Outlet	
Socket.....	501-12
Front Side Marker Lamp	
LH.....	417-01
Front Side Marker Lamp	
RH.....	417-01
Front Wheel Speed Sensor	
LH.....	206-09A
Front Wheel Speed Sensor	
LH.....	206-09C
Front Wheel Speed Sensor	
RH.....	206-09A
Front Wheel Speed Sensor	
RH.....	206-09C
Fuel Filler Door Latch	
Motor.....	501-14
Fuel Injector 1—A.....	303-04A
Fuel Injector 1.....	303-04B
Fuel Injector 1.....	303-04C
Fuel Injector 2—A.....	303-04A
Fuel Injector 2.....	303-04B
Fuel Injector 2.....	303-04C
Fuel Injector 3—A.....	303-04A
Fuel Injector 3.....	303-04B
Fuel Injector 3.....	303-04C
Fuel Injector 4—A.....	303-04A
Fuel Injector 4.....	303-04B
Fuel Injector 4.....	303-04C
Fuel Injector 5.....	303-04C
Fuel Level Sensor—A.....	310-01A
Fuel Metering Valve.....	303-04B
Fuel Metering Valve.....	303-04C
Fuel Pump and Sender	
Unit.....	310-01A
Fuel Pump and Sender	
Unit.....	310-01B
Fuel Rail Temperature	
Sensor.....	303-14B
Fuel Supply.....	310-00A
Fuel Supply.....	310-00B
Fuel Tank.....	700-00
Fuel Temperature	
Sensor.....	303-14B
Fuel Vaporizer System Fuel	
Pump.....	309-00
Fuel Vaporizer System Glow	
Plug.....	309-00
Generator.....	414-02
Generator—A.....	414-02
Glove Compartment	
Lamp.....	417-02

Glow Plug 1.....	303-07B
Glow Plug 1.....	303-07C
Glow Plug 2.....	303-07B
Glow Plug 2.....	303-07C
Glow Plug 3.....	303-07B
Glow Plug 3.....	303-07C
Glow Plug 4.....	303-07B
Glow Plug 4.....	303-07C
Glow Plug 5.....	303-07C
Glow Plug Module.....	303-07B
Glow Plug Module—B.....	303-07B
Glow Plug Module—A.....	303-07C
Glow Plug Module—C.....	303-07C
Grounding—LHD 4WD/LHD	
RWD.....	700-03
Grounding—RHD 4WD/RHD	
RWD.....	700-03
Hazard Flasher Switch.....	211-05
Headlamp Assembly LH.....	417-01
Headlamp Assembly	
RH.....	417-01
• Headlamp Control	
Module.....	417-01
Headlamp Control	
Module—A.....	417-01
Headlamp Leveling.....	417-01
Headlamp Leveling	
Switch.....	417-01
Headliner—Single Cab, LHD	
4WD/LHD RWD.....	700-00
Headliner—Double Cab, LHD	
4WD/LHD RWD.....	700-00
Headliner—Super Cab, LHD	
4WD/LHD RWD.....	700-00
Headliner—Single Cab, RHD	
4WD/RHD RWD.....	700-00
Headliner—Double Cab, RHD	
4WD/RHD RWD.....	700-00
Headliner—Super Cab, RHD	
4WD/RHD RWD.....	700-00
Heated Oxygen Sensor	
(HO2S).....	303-14A
Heated Oxygen Sensor	
(HO2S).....	303-14B
Heated Rear Window	
Element.....	501-11
Heated Rear Window	
Element—A.....	501-11
Heated Seats—LHD 4WD/LHD	
RWD.....	501-10

Index

PAGE 11 OF 16

Heated Seats—RHD 4WD/RHD RWD.....	501-10	In-Line Connector 11—C.....	700-04
Heated Windshield and Rear Window—LHD 4WD/LHD RWD.....	501-11	In-Line Connector 11—D.....	700-04
Heated Windshield and Rear Window—RHD 4WD/RHD RWD.....	501-11	In-Line Connector 11—E.....	700-04
Heated Windshield Element LH.....	501-11	In-Line Connector 11—F.....	700-04
Heated Windshield Element RH.....	501-11	In-Line Connector 13.....	700-04
High Mounted Stoplamp.....	417-01	In-Line Connector 21.....	700-04
High Mounted Stoplamp.....	417-01	In-Line Connector 23.....	700-04
Hood Switch.....	419-01A	In-Line Connector 25.....	700-04
Horn.....	413-06	In-Line Connector 25—A.....	700-04
Horn.....	413-06	In-Line Connector 26.....	700-04
Horn—A.....	413-06	In-Line Connector 26—A.....	700-04
Ignition Coil-On-Plug 1.....	303-07A	In-Line Connector 29.....	700-04
Ignition Coil-On-Plug 2.....	303-07A	In-Line Connector 30.....	700-04
Ignition Coil-On-Plug 3.....	303-07A	In-Line Connector 31.....	700-04
Ignition Coil-On-Plug 4.....	303-07A	In-Line Connector 33.....	700-04
Ignition Switch.....	211-05	In-Line Connector 34.....	700-04
Inertia Fuel Shutoff (IFS) Switch.....	310-01A	In-Line Connector 34—A.....	700-04
Inertia Fuel Shutoff (IFS) Switch.....	310-01B	In-Line Connector 34—B.....	700-04
Information and Entertainment Control Panel.....	415-01	In-Line Connector 37.....	700-04
Information and Entertainment Unit.....	415-01	In-Line Connector 37—A.....	700-04
Information and Entertainment Unit—A.....	415-01	In-Line Connector 38.....	700-04
Information and Entertainment Unit—B.....	415-01	In-Line Connector 38—A.....	700-04
Information and Entertainment Unit—D.....	415-01	In-Line Connector 44.....	700-04
Information and Entertainment Unit—E.....	415-01	In-Line Connector 44—A.....	700-04
Information and Entertainment Unit—F.....	415-01	In-Line Connector 44—B.....	700-04
Information and Entertainment Unit—K.....	415-01	In-Line Connector 44—C.....	700-04
Information and Entertainment Unit—J.....	415-01	In-Line Connector 44—D.....	700-04
In-Line Connector 11—A.....	700-04	In-Line Connector 44—E.....	700-04
In-Line Connector 11—AA.....	700-04	In-Line Connector 44—F.....	700-04
In-Line Connector 11—B.....	700-04	Instrument Cluster—LHD 4WD/LHD RWD.....	413-01
		Instrument Cluster—RHD 4WD/RHD RWD.....	413-01
		Instrument Cluster.....	413-01

Index

PAGE 12 OF 16

Instrument Cluster and Panel Illumination—LHD 4WD/LHD RWD.....	417-02	Message Center Module—A.....	413-08
Instrument Cluster and Panel Illumination—RHD 4WD/RHD RWD.....	417-02	Message Center Module—B.....	413-08
Instrument Panel—LHD 4WD/LHD RWD.....	700-00	Message Center Module—C.....	413-08
Instrument Panel—RHD 4WD/RHD RWD.....	700-00	Message Center Module—D.....	413-08
Intake Air Temperature (IAT) Sensor.....	303-14B	Message Center Module—E.....	413-08
Intake Camshaft Position (CMP) Sensor.....	303-14A	Message Center Module—F.....	413-08
Intake Camshaft Position (CMP) Sensor—A.....	303-14B	Message Center Module—G.....	413-08
Intake Variable Valve Timing (VVT) Oil Control Solenoid.....	303-14A	Message Center Module—H.....	413-08
Interior Front Door Handle Ambient Lighting Lamp LH.....	417-02	Mode Select Switch (MSS).....	308-07
Interior Front Door Handle Ambient Lighting Lamp RH.....	417-02	Noise Suppression Capacitor.....	415-01
Intrusion Sensor.....	419-01A	Overhead Ambient Lighting Lamp.....	417-02
Knock Sensor (KS).....	303-14A	Overhead Ambient Lighting Lamp—A.....	417-02
License Plate Lamp.....	417-01	Overhead Ambient Lighting Lamp—B.....	417-02
License Plate Lamp—A.....	417-01	Parking Aid—LHD 4WD/LHD RWD, Vehicles With: Parking Aid Camera.....	413-13
Low Brake Fluid Warning Indicator Switch.....	206-06	Parking Aid—LHD 4WD/LHD RWD, Vehicles Without: Parking Aid Camera.....	413-13
Low Brake Fluid Warning Indicator Switch—A.....	206-06	Parking Aid—RHD 4WD/RHD RWD, Vehicles With: Parking Aid Camera.....	413-13
Low Washer Fluid Warning Indicator Switch.....	413-09	Parking Aid—RHD 4WD/RHD RWD, Vehicles Without: Parking Aid Camera.....	413-13
Luggage Compartment Power Outlet Socket.....	501-12	Parking Aid Module.....	413-13
Manifold Absolute Pressure (MAP) Sensor.....	303-14B	Parking Aid Module—A.....	413-13
Manifold Absolute Pressure and Temperature (MAPT) Sensor.....	303-14A	Parking Brake Warning Indicator Switch.....	206-05
Mass Air Flow and Temperature (MAFT) Sensor.....	303-14B	Parking Lamp LH.....	417-01
Message Center—LHD 4WD/LHD RWD.....	413-08	Parking Lamp RH.....	417-01
Message Center—RHD 4WD/RHD RWD.....	413-08	Passenger Air Bag Deactivation (PAD) Indicator.....	501-20B
Message Center Module.....	413-08	Passenger Air Bag Deactivation (PAD) Indicator—A.....	501-20B
		Passenger Air Bag Deactivation (PAD) Switch.....	501-20B

Index

PAGE 13 OF 16

Passenger Air Bag Module.....	501-20B	Power Exterior Mirrors—RHD 4WD/RHD RWD.....	501-09
Passenger Door Interior View—Double Cab, LHD 4WD/LHD RWD.....	700-00	Power Seats—LHD 4WD/LHD RWD.....	501-10
Passenger Door Interior View—Double Cab, RHD 4WD/RHD RWD.....	700-00	Power Seats—RHD 4WD/RHD RWD.....	501-10
Passenger Door Interior View—Single Cab/Super Cab, LHD 4WD/LHD RWD.....	700-00	Power Steering Pressure (PSP) Switch.....	303-14A
Passenger Door Interior View—Single Cab/Super Cab, RHD 4WD/RHD RWD.....	700-00	Power Windows—LHD 4WD/LHD RWD, Vehicles With: Door Module.....	501-11
Passenger Door Latch—A.....	501-14	Power Windows—RHD 4WD/RHD RWD, Vehicles With: Door Module.....	501-11
Passenger Door Latch.....	501-14	Power Windows—LHD 4WD/LHD RWD, Vehicles Without: Door Module.....	501-11
Passenger Door Module (PDM).....	419-10	Power Windows—RHD 4WD/RHD RWD, Vehicles Without: Door Module.....	501-11
Passenger Door Module (PDM)—A.....	419-10	Powertrain Control Module (PCM)—A.....	303-14A
Passenger Door Side Impact Sensor.....	501-20B	Powertrain Control Module (PCM)—B.....	303-14A
Passenger Door Window Control Switch.....	501-11	Powertrain Control Module (PCM)—C.....	303-14A
Passenger Door Window Control Switch—A.....	501-11	Powertrain Control Module (PCM)—A.....	303-14B
Passenger Door Window Regulator Motor.....	501-11	Powertrain Control Module (PCM)—B.....	303-14B
Passenger Door Window Regulator Motor—A.....	501-11	Powertrain Control Module (PCM)—C.....	303-14B
Passenger Safety Belt Pretensioner.....	501-20A	Pre DPF Exhaust Gas Temperature Sensor.....	303-14B
Passenger Side Air Curtain Module.....	501-20B	Radio Frequency (RF) Receiver.....	501-14
Passive Anti-Theft System (PATS).....	419-01B	Rain Sensor.....	501-16
Passive Anti-Theft System (PATS) Transceiver.....	419-01B	Rear Axle.....	700-00
Post DPF Exhaust Gas Temperature Sensor.....	303-14B	Rear Bumper.....	700-00
Power Distribution.....	700-02	Rear Door Latch LH.....	501-14
Power Door Locks—LHD 4WD/LHD RWD.....	501-14	Rear Door Latch LH—A.....	501-14
Power Door Locks—RHD 4WD/RHD RWD.....	501-14	Rear Door Latch RH.....	501-14
Power Exterior Mirrors—LHD 4WD/LHD RWD.....	501-09	Rear Door Latch RH—A.....	501-14
		Rear Door LH Interior View.....	700-00
		Rear Door Module (RDM) LH.....	419-10
		Rear Door Module (RDM) RH.....	419-10

Index

PAGE 14 OF 16

Rear Door RH Interior View.....	700-00	Rear Wheel Speed Sensor RH.....	206-09C
Rear Door Speaker LH.....	415-01	Recirculation Blend Door Actuator.....	412-01
Rear Door Speaker RH.....	415-01	Recirculation Blend Door Actuator—A.....	412-01
Rear Door Window Control Switch LH.....	501-11	Restraints Control Module (RCM).....	501-20B
Rear Door Window Control Switch LH—A.....	501-11	Restraints Control Module (RCM)—A.....	501-20B
Rear Door Window Control Switch RH.....	501-11	Reversing Lamp Switch.....	417-01
Rear Door Window Control Switch RH—A.....	501-11	Side Impact Sensor LH.....	501-20B
Rear Door Window Regulator Motor LH.....	501-11	Side Impact Sensor RH.....	501-20B
Rear Door Window Regulator Motor LH—A.....	501-11	Side Turn Signal Lamp LH.....	417-01
Rear Door Window Regulator Motor RH.....	501-11	Side Turn Signal Lamp RH.....	417-01
Rear Door Window Regulator Motor RH—A.....	501-11	Speed Control.....	310-03
Rear Inner Parking Aid Sensor LH/Center.....	413-13	Stability Assist/Traction Control Switch.....	206-09B
Rear Inner Parking Aid Sensor RH.....	413-13	Stability Assist/Traction Control Switch.....	206-09C
Rear Interior Lamp.....	417-02	Starter Motor—A.....	303-06A
Rear Interior Lamp—A.....	417-02	Starter Motor—B.....	303-06A
Rear Lamp Assembly LH.....	417-01	Starter Motor—A.....	303-06B
Rear Lamp Assembly RH.....	417-01	Starter Motor—B.....	303-06B
Rear Outer Parking Aid Sensor LH.....	413-13	Starting System—Vehicles With: 5-Speed Manual Transmission - MT75.....	303-06A
Rear Outer Parking Aid Sensor RH.....	413-13	Starting System—Vehicles With: 5-Speed Manual Transmission - MT75/6-Speed Manual Transmission - MT82.....	303-06B
Rear Parking Aid Camera.....	413-13	Starting System—Vehicles With: 6-Speed Automatic Transaxle - 6R80, LHD 4WD/LHD RWD.....	303-06B
Rear Passenger Power Outlet Socket.....	501-12	Starting System—Vehicles With: 6-Speed Automatic Transaxle - 6R80, RHD 4WD/RHD RWD.....	303-06B
Rear Passenger Power Outlet Socket—A.....	501-12	Steering Column Multifunction Switch.....	211-05
Rear Safety Belt Retractor and Pretensioner.....	501-20A	Steering Column Multifunction Switch—A.....	211-05
Rear Safety Belt Retractor and Pretensioner.....	501-20A	Steering Column Switches Front View.....	700-00
Rear Under Floor View.....	700-00		
Rear Wheel Speed Sensor LH.....	206-09A		
Rear Wheel Speed Sensor LH.....	206-09C		
Rear Wheel Speed Sensor RH.....	206-09A		

Index

PAGE 15 OF 16

Steering Column Switches Rear		Transmission Left-Hand	
View.....	700-00	View—Vehicles With: 5-Speed	
Steering Wheel.....	700-00	Manual Transmission - MT75,	
Steering Wheel Rotation		4WD.....	700-00
Sensor.....	206-09B	Transmission Right-Hand	
Steering Wheel Rotation		View—Vehicles With: 6-Speed	
Sensor.....	206-09C	Manual Transmission - MT82,	
Stoplamp Switch.....	417-01	2WD.....	700-00
Sunload Sensor.....	412-01	Transmission Right-Hand	
Symbols Glossary.....	100-00	View—Vehicles With: 6-Speed	
Tachograph.....	413-17	Automatic Transaxle - 6R80,	
Temperature Blend Door		2WD.....	700-00
Actuator.....	412-01	Transmission Right-Hand	
Temperature Blend Door		View—Vehicles With: 6-Speed	
Actuator LH.....	412-01	Manual Transmission - MT82,	
Temperature Blend Door		4WD.....	700-00
Actuator RH.....	412-01	Transmission Right-Hand	
Throttle Control Unit.....	303-14A	View—Vehicles With: 6-Speed	
Throttle Control		Automatic Transaxle - 6R80,	
Unit—A.....	303-14B	4WD.....	700-00
Trailer Module.....	417-01	Turbocharger Variable Vane	
Trailer Module—A.....	417-01	Actuator.....	303-04D
Trailer Module—B.....	417-01	Turn Signal and Hazard	
Trailer Socket—LHD 4WD/LHD		Lamps—LHD 4WD/LHD	
RWD.....	417-01	RWD.....	417-01
Trailer Socket—RHD 4WD/RHD		Turn Signal and Hazard	
RWD.....	417-01	Lamps—RHD 4WD/RHD	
Trailer Socket.....	417-01	RWD.....	417-01
Trailer Socket—A.....	417-01	Universal Serial Bus (USB)	
Trailer Socket—B.....	417-01	Module.....	415-01
Trailer Socket—C.....	417-01	Universal Serial Bus (USB)	
Trailer Socket—D.....	417-01	Module—A.....	415-01
Trailer Socket—E.....	417-01	Vehicle Speed Sensor 1	
Trailer Socket—F.....	417-01	(VSS1).....	303-14A
Trailer Socket—G.....	417-01	Vehicle Speed Sensor 1	
Trailer Socket—H.....	417-01	(VSS1).....	303-14B
Trailer Socket—J.....	417-01	Wastegate Control	
Transfer Case Shift		Solenoid.....	303-14B
Motor.....	308-07	Wastegate Position	
Transmission Control Module		Sensor.....	303-04D
(TCM).....	307-01	Water-in-Fuel Sensor.....	310-01B
Transmission Control Switch		Windshield Washer	
(TCS).....	307-05	Pump.....	501-16
Transmission Control Unit		Windshield Wiper Motor.....	501-16
Solenoids.....	307-01	Windshield Wiper/Washer	
Transmission Left-Hand		Switch.....	501-16
View—Vehicles With: 5-Speed		Windshield Wiper/Washer	
Manual Transmission - MT75,		Switch—A.....	501-16
2WD.....	700-00	Wipers and Washers—LHD	
		4WD/LHD RWD.....	501-16



Index

PAGE 16 OF 16

Wipers and Washers—RHD
4WD/RHD RWD.....501-16

www.obdviethnam.vn

