


Run the MKGW4 decoder on MQTTX




This decoder is provided to help users easily understand the gateway uploading data, it includes the decoding for actively uploading data, such as the gateway status, BLE scanning data, GNSS data, and the gateway reply message.

Import the decoder java script


1. Open MQTTX tool, click the  button in the left side to go to the script edit page


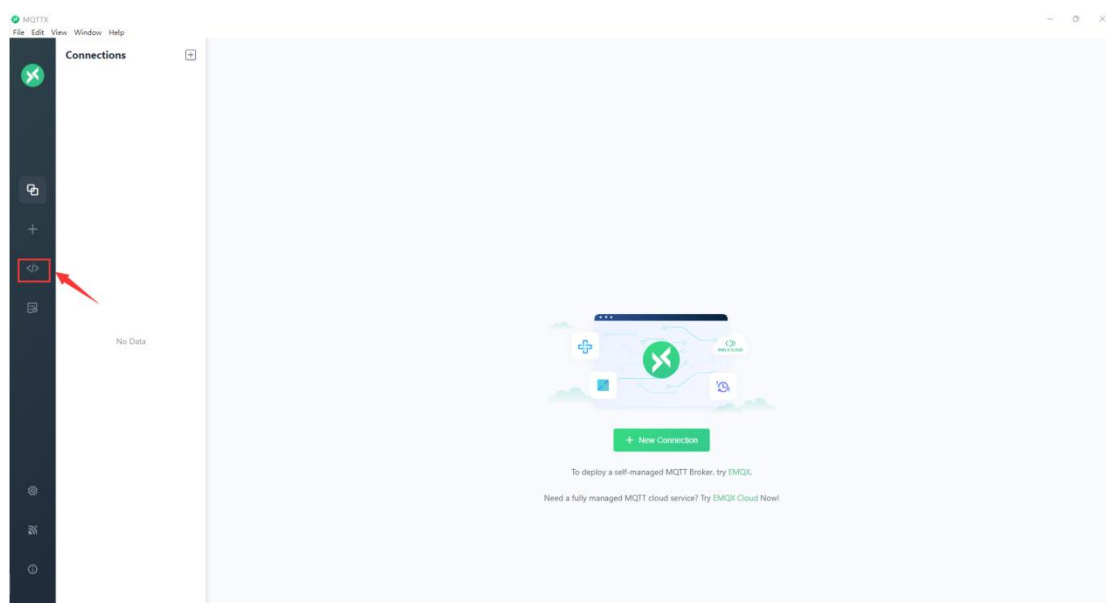



2. Click  button in the top right corner, import the MKGW4 Decoder file, the decoder code will be created in the page. Then click  button to save the decoder script.

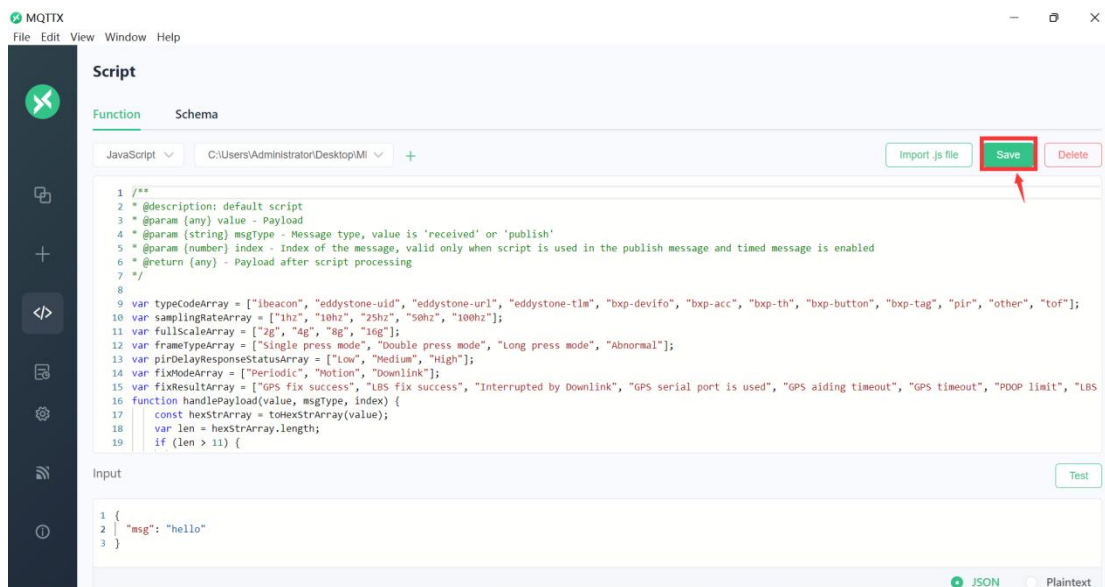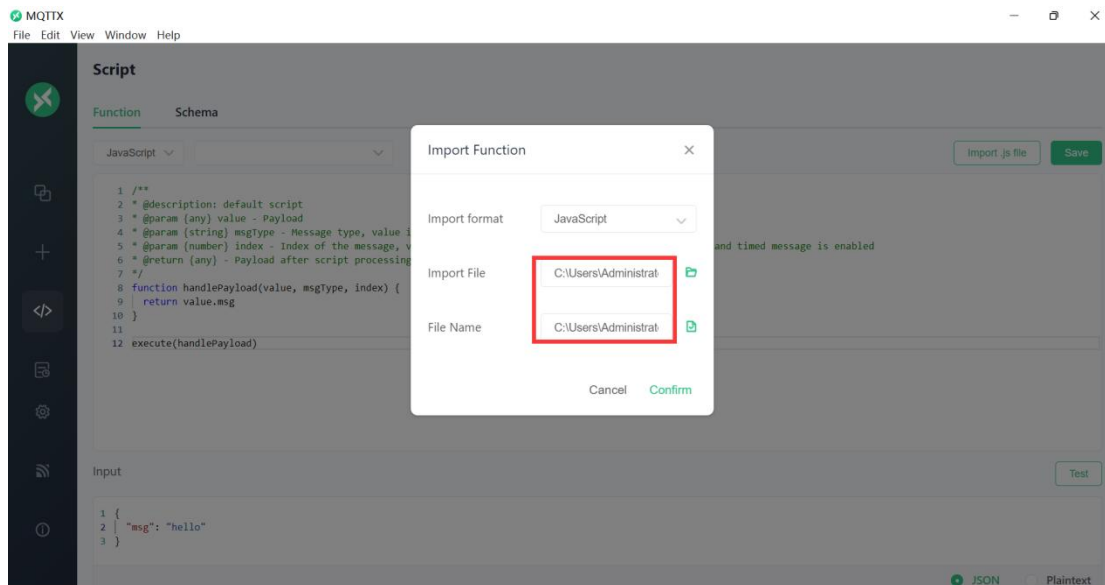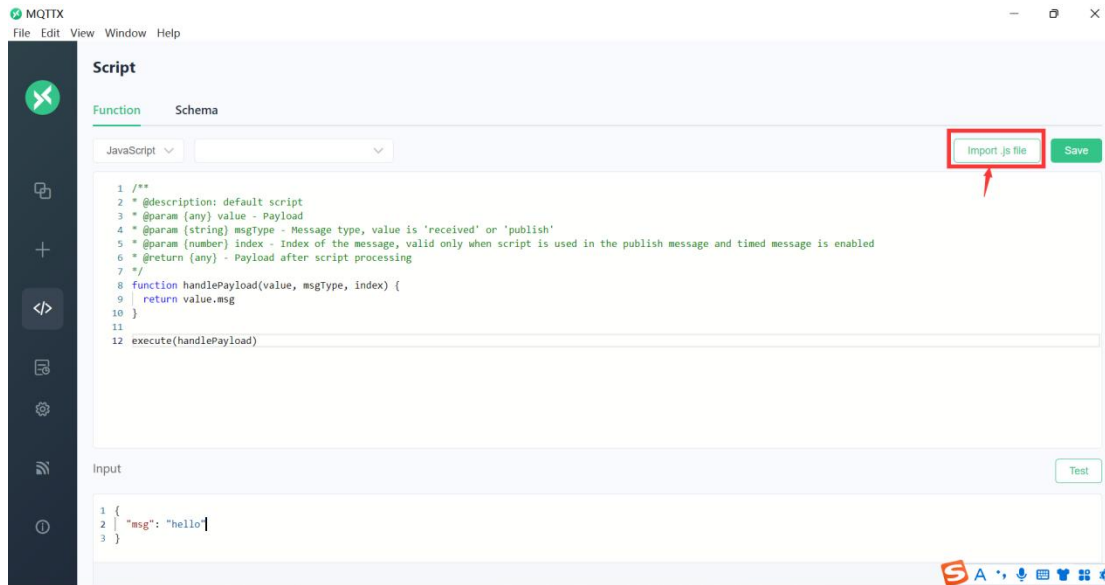

Edit the connection

1. Click the  button in the top left corner or click  in the middle to edit MQTT broker settings. After all settings are filled, click  to establish connection. If a successful connection is established, it will prompt “Connected”.

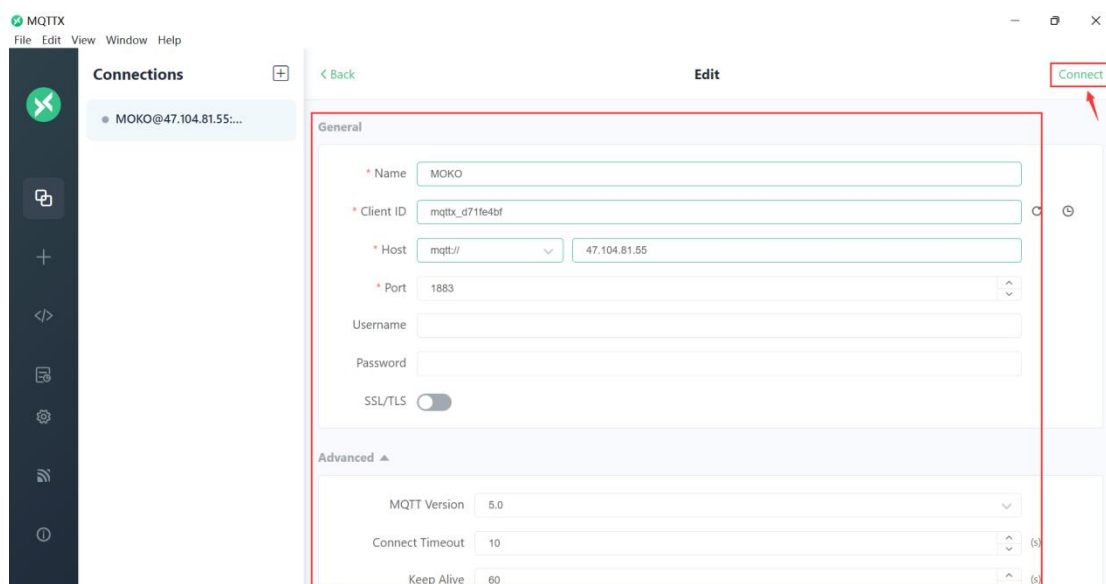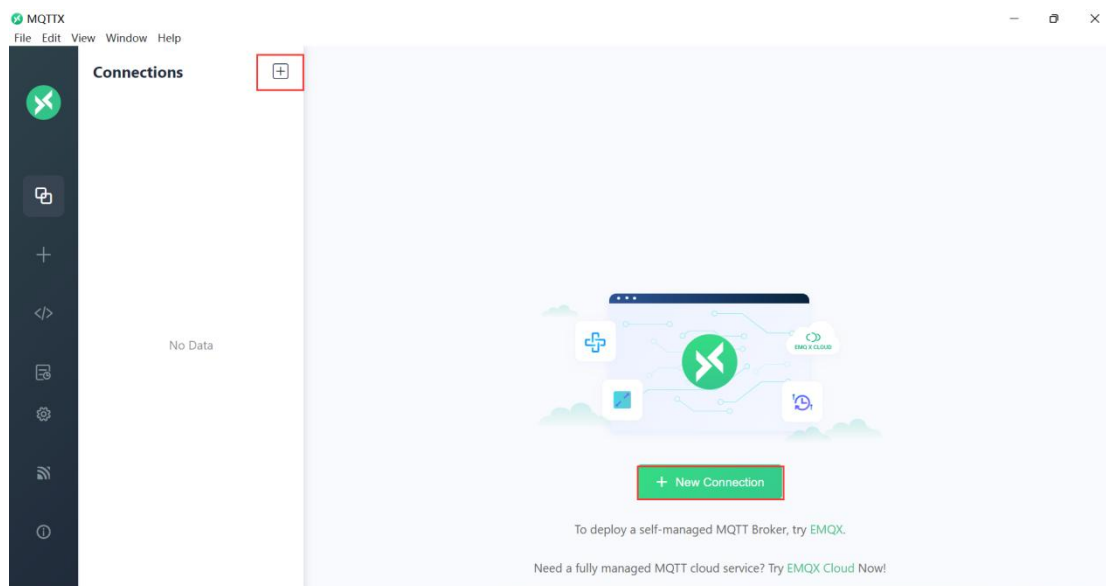

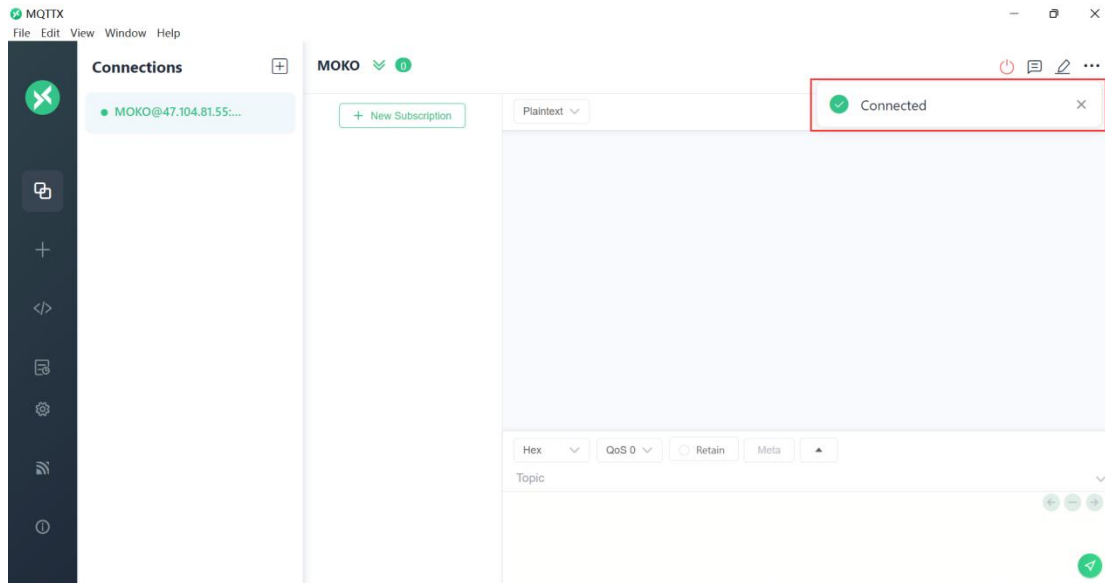

Edit Subscription and view MQTT data from the gateway

1. Click  button to edit the data subscription.
Fill the publish topic of your gateway into the topic box.
2. Run script and select the MKGW4 decoder script. Select the data format as HEX. If the gateway is connected to the MQTT broker and sending data, we can see the gateway data refreshing in the page. With the decoder, we can get the decoded message directly.

