


Instructions for Using the Heating Function

Exported on 06/30/2026 By Neil

I. Heating Function Port 1	3
II. Heating Function Port 2.....	6
III. Heating Function Icon	7

I. Heating Function Port 1


1. Go to the heating settings page from Ezkit - EzHeat

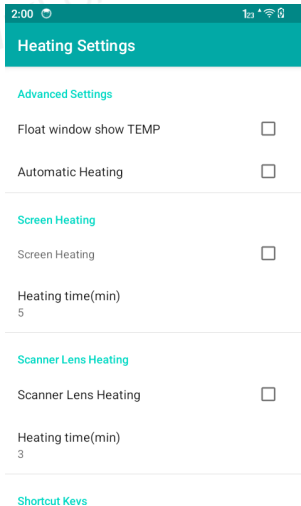

2. Introduction to the Heating Function

2.1 Float window show TEMP

Display a small floating window showing the currently detected temperatures for the motherboard, screen, scanner, and battery.

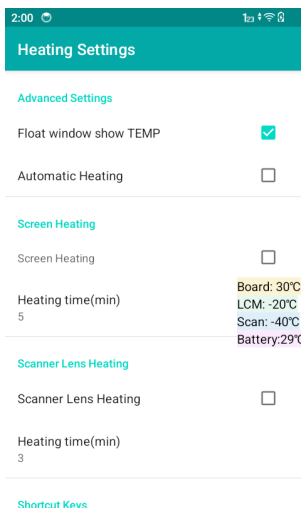


2.2 Automatic Heating

When automatic heating is enabled, the system records the temperature every 15 seconds and automatically activates heating when the following conditions are met.


- Temperature rises by more than 2 degrees
- Temperature drops by more than 5 degrees

The heating duration is determined by the settings below. By default, the screen is heated for 5 minutes, and the scanner lens is heated for 2 minutes.

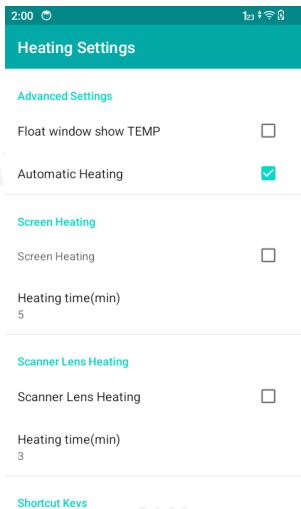


2.3 Screen Heating & Heating time(min)

Manually turn on the screen heating and set the duration of the screen heating.

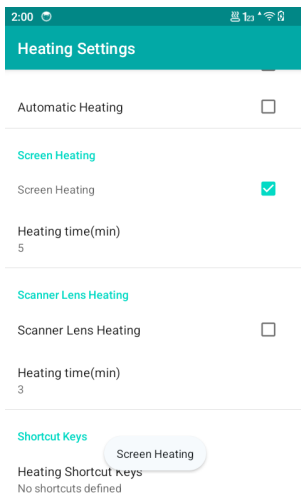

2.4 Scanner Lens Heating


Manually turn on the scan head lens heating and set the heating duration.

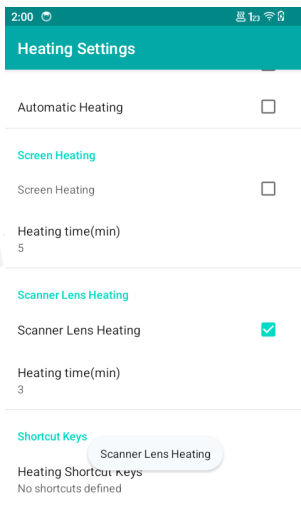

2.5 Heating Shortcut Keys


You can set up heating shortcut keys by selecting two buttons: the first for the screen heating shortcut and the second for the scanner lens heating shortcut.

Once set up, you can press the shortcut keys on any page to activate the heating function.

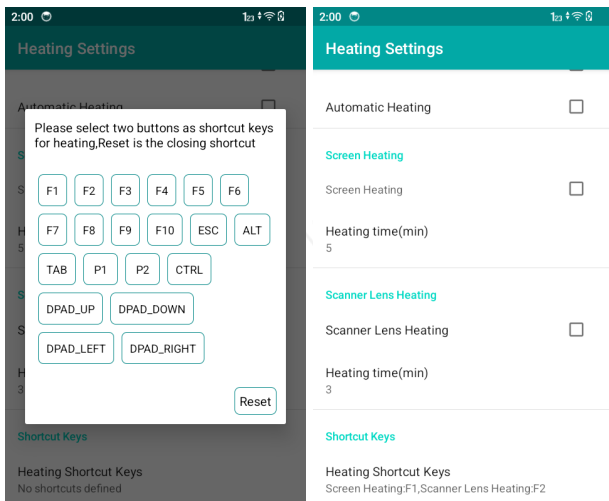


II. Heating Function Port 2

Pull down the status bar to activate the heating function.

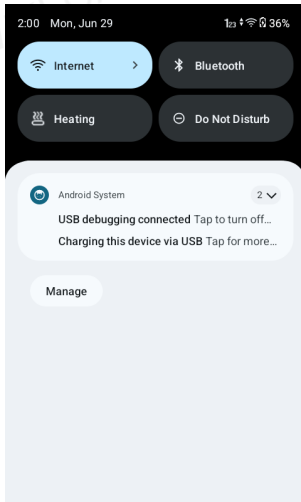

Once turned on, heating begins and stops after the set heating duration has elapsed. You can set the heating duration in "I. Heating Function Port 1."

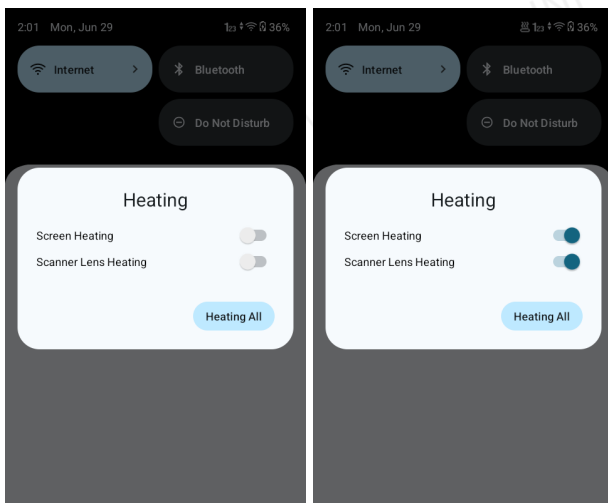

III. Heating Function Icon

When heating is turned on, a small heating icon will appear in the status bar.

