

1 · Live camera

The web console at localhost:8080. The front camera is live, and every sensor pill along the top is receiving data. Control is free, so an agent may claim the dog. A person at this page can press Take over at any time.

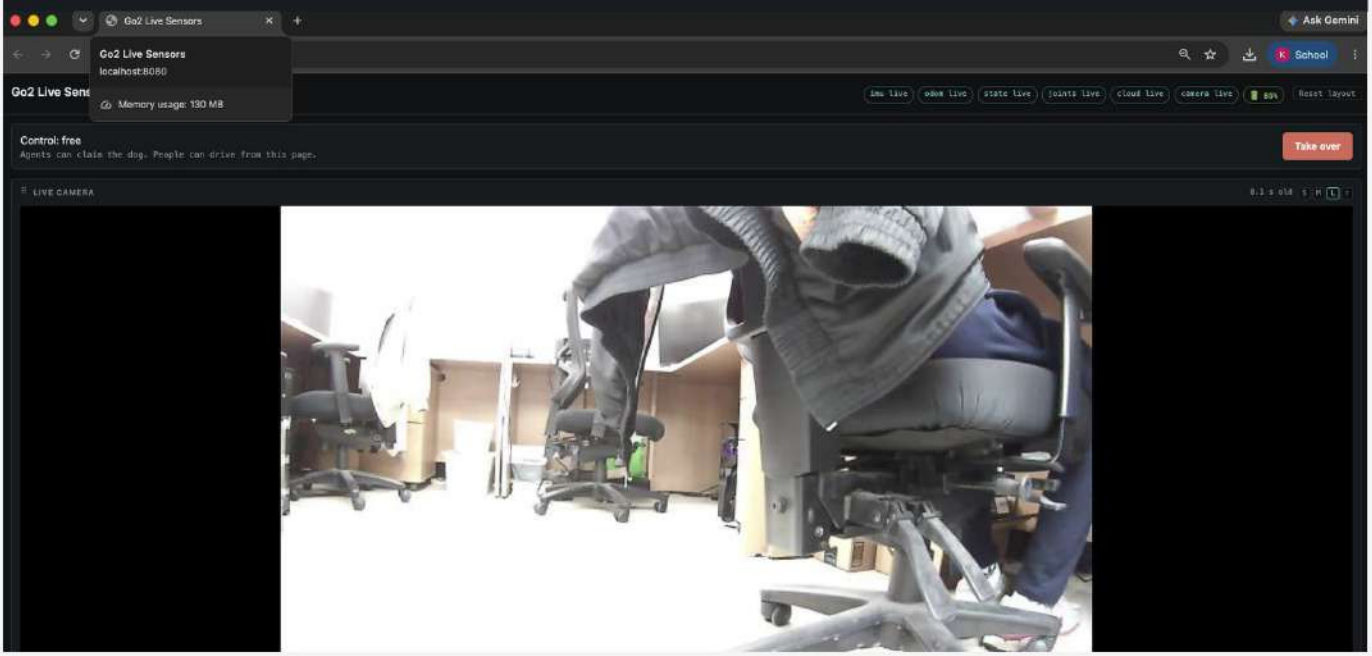

2 · Drive, mapping, and live lidar

Enable driving arms the keyboard. Obstacle avoidance is on, so the dog slows near obstacles. This panel also starts or saves the map, records camera, lidar, and robot pose, and shows the lidar from above: grey is floor already seen, yellow to red is an obstacle, and the arrow is the dog's heading.

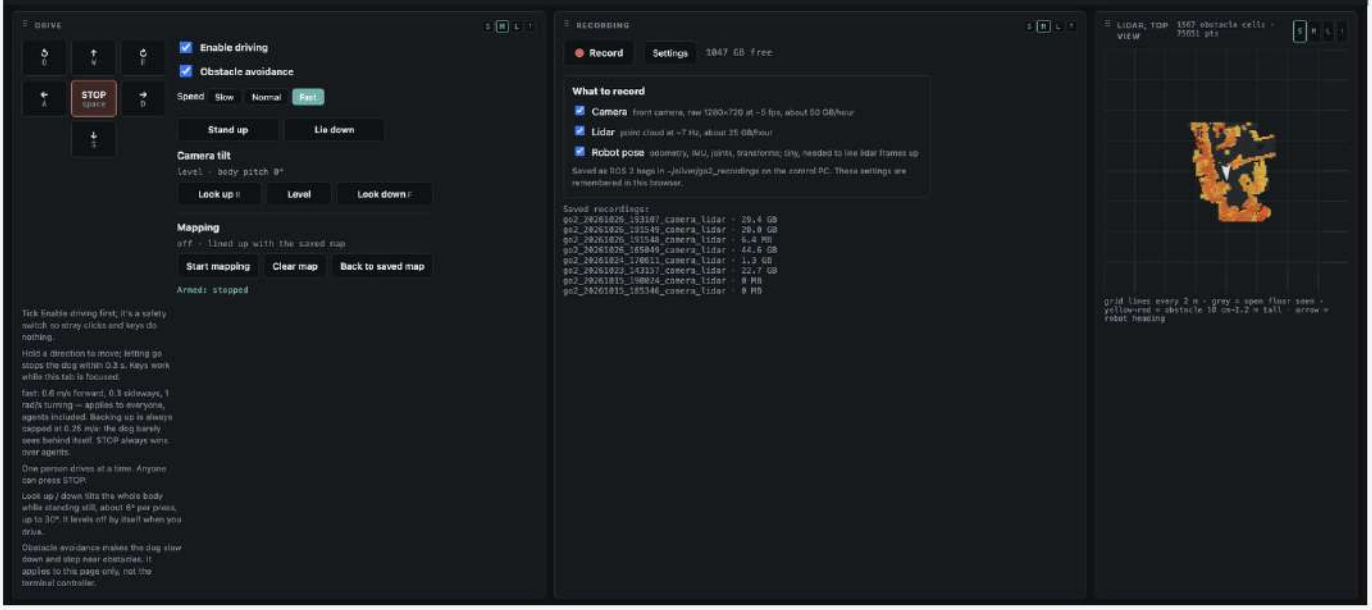

3 · Places and body sensors

Saved places, each with a photo, a stand point, and a facing direction. Beside them are the live body readings: IMU roll, pitch, and yaw, odometry in the dog's own frame, gait and body height, foot contact force, and the twelve leg joint angles.

