


使用说明书

USER MANUAL

热敏标签打印机

THERMAL LABEL PRINTER

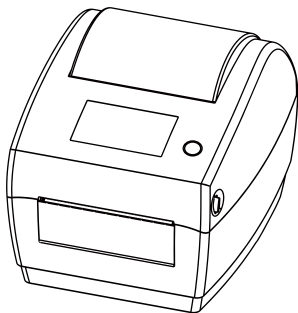

该说明书适用于iData D400、GT、XC和QR Serie热敏标签打印机

Apply to iData thermal label printers including D400,GT,XC and QR Series

目录 Contents

1.装箱清单	1
2.外观及组件	2
3.使用前准备	3
4.基本使用功能	4
5.故障排除	5
6.清洁打印机	6
7.蓝牙连接和使用方法	7
8.产品保修卡	8
1.Packing List	9
2.Appearance and Components.....	10
3.Preparation before Usage	11
4.Basic Functions of Usage	12
5.Troubleshooting	13
6.Printer Cleaning	14
7.Bluetooth Connecting and Usage	15
8.Product Warranty Card	16

前言

关于本手册

本手册包含产品使用、安装等信息。在操作使用打印机之前，请仔细阅读本说明书，并遵守使用。

国际惯例 为方便您查阅信息，本手册使用了以下符号(图标)和惯例：



警告

该标识表示警告，使用不当可能会造成财产损失，致人重伤或死亡。



注意

该标识表示注意，使用不当可能会造成人员伤亡或者物品弄坏。



备注

该标识表示备注，所列信息能让您更好地使用本产品或者延长产品的使用寿命。

警告

此为A级产品，在生活环境中，该产品可能会造成无线电干扰。

在这种情况下，可能需要用户对干扰采取切实可行的措施。

Preface

About This Manual

This manual provides you with product usage and installation information etc. Please read the manual carefully and follow the instruction before you start to use this printer.

International Conventions

The following conventions are used throughout this manual to help you better understand the information.



Warning:

Indicates a hazardous situation caused by improper use, could result in property loss, physical severe injury or death.



Caution:

Indicates a hazardous situation caused by improper use, could result in physical harm or product failure.



Note:


Indicates the information listed can help you better use the product or extend the product service life.

Warning


This is a product of Class A, which may cause radio interference in a living environment. In this case, the user may be required to take practical measures against the interference.

1 装箱清单


拆开包装箱后,请检查产品外观是否完好无损,清点所有配件。如有缺损,请与经销商联系!

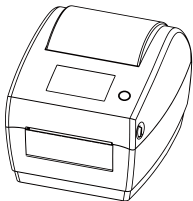

打印机

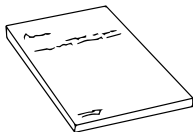


说明书

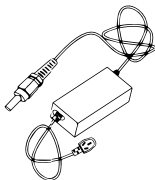

电源适配器

(该配件以实物为准)




USB 数据线



备注

因产品的持续改进,故手册中所述的机种规格、配件及程序以实机为准,如有变更,恕不另行通知。

2 外观及组件

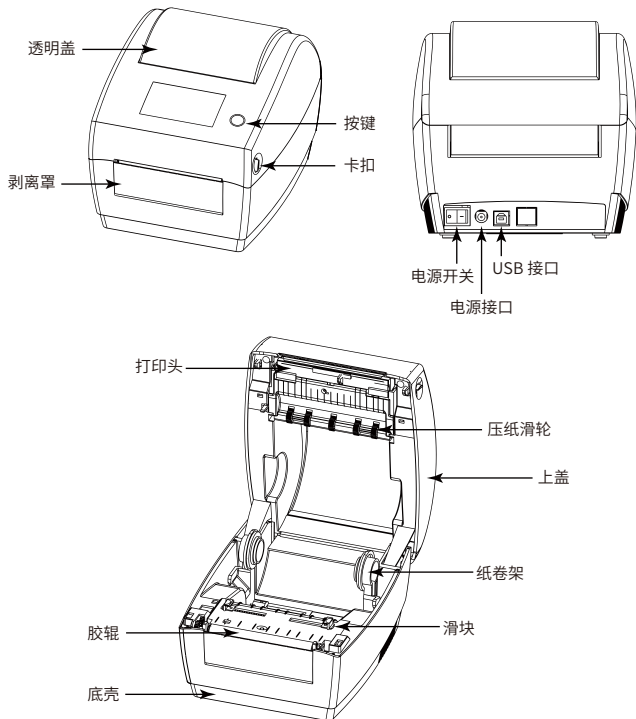

3 使用前准备

1. 电源开关

将打印机电源开关打到“1”状态，即为打开电源开关。

将打印机电源开关打到“0”状态，即为关闭电源开关。

1) 必须用电源开关关闭电源。如果用拔掉电源插头的方法关闭电源，会损坏打印机内的电路，破坏打印数据。


2) 请使用本机原装电源，否则可能造成打印质量下降或者损伤打印机。

3) 电源关闭后再次打开电源时，要等待一定的时间 ($\geq 5S$)。如果不隔开一定的时间而立即打开电源易产生故障。

4) 关闭电源后，操作面板的电源灯需通过 2 -3 秒后才灭掉。这是正常情况，不是故障。

2. 电源连接

1) 连接电源线缆

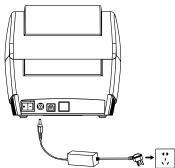

2) 连接USB线缆



3) 打开电源

将打印机电源开关打到“1”状态。

4 基本使用功能

打印机的状态及故障可通过按键指示灯颜色及蜂鸣器鸣叫确定，并可通过对按键对打印机进行简单操作。

1. 走纸功能

打开打印机电源，按下走纸键，打印机会依所学习到的纸张类型将纸张送出到指定的吐纸位置。使用热敏纸时，按走纸键一次会送出一整张纸。


2. 纸张的智能学习

关闭打印机电源，打开上盖，装入纸张并合上上盖，开启打印机电源，待打印机正常初始化完成后（大概 3-5 秒时间），按下走纸按键并保持，直到听到“滴”的一声后松开，打印机即可自动执行纸张的智能学习。

3. 打印设备自检页

在打印机待机状态下，且正确装入纸张情况下，按下走纸按键并保持，直到听到“滴、滴滴”后松开，打印机即可打印设备自检页。

4. 纸张安装

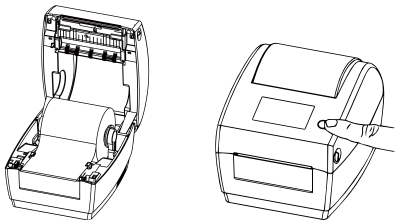

5 故障排除

指示灯	状态说明	故障排除
绿色	打印机正常	
红绿交替闪烁	打印头过热	等待打印机冷却后自动继续工作 注①
红色慢闪(2秒一次)	纸张错误, 打印缺纸	确认有无纸张粘连或卡纸注①② 确认打印机正确装入纸张注①② 进行标签自动智能学习
红色快闪(1秒两次)	上盖未合上	检查确认上盖已完全合上

注释

- ①此类故障下无需关闭打印机即可排除, 排除故障后打印机可自动继续工作, 且不造成打印内容的丢失。
- ②请按照顺序检查, 如上一条无法排除故障, 再进行下一条操作。

6 清洁打印机

灰尘、异物、粘性物质或其他粘连在打印头或打印机内的污染物可能会降低打印质量。脏污时请按以下方法清洁打印头。



注意事项:

- 1) 清洁前务必关闭打印机电源。
- 2) 由于打印时, 打印头会变得很热。因此, 如果想要清洁打印头, 请关闭打印机电源, 并在开始前等待2~3分钟。
- 3) 清洁打印头时, 注意不要触碰打印头的加热部分, 以免打印头因静电等造成损坏。
- 4) 注意不要刮伤或损坏打印头。

清洁打印头

- 1) 请打开打印机顶盖用清洁笔(或沾有稀释酒精(酒精或异丙醇)的棉棒)沿打印头中间到两边的方向清洁。
- 2) 清洁打印头后, 不要立刻使用打印机, 等待所使用的清洁酒精完全挥发(1到2分钟), 打印头完全干燥后方可使用。

清洁传感器、胶辊和纸张路径

- 1) 请打开打印机顶盖取出纸卷。
- 2) 使用干燥的棉布或棉棒擦去灰尘或异物。
- 3) 将棉布或棉棒浸上医用酒精, 用其擦去粘性异物或其他污染物。
- 4) 清洁零部件后不要立刻使用打印机, 等待酒精完全挥发(1到2分钟), 打印机完全干燥后方可使用。



注意

当打印质量或纸张检测性能下降时, 清洁零部件。

7 蓝牙连接和使用方法

1. 安卓手机使用方法:

第一步:打开打印机电源;

第二步:在手机蓝牙界面搜索,然后点击打印机进行连接,输入PIN码“000”或者“1234”完成配对;

第三步:打开相应APP,在设备列表里选择已配对的打印机即可。

2. 苹果手机使用方法:

第一步:打开手机蓝牙及打印机电源;

第二步:打开相应APP,在设备列表里选择已配对的打印机即可。



备注

- 1、适用于带蓝牙的机器
- 2、以上连接过程手机蓝牙需处于打开状态
- 3、IOS设备无需进行PIN码配对即可使用APP或小程序进行连接

8 产品保修卡

尊敬的用户：

欢迎您选择iData产品！从您购买本产品开始，您即将拥有以下服务：

【免费维保】

自您购买之日起，非人为损坏造成的产品性能故障按以下保修期限：

产品类型	配件名称	保修期限
桌面打印机	整机(打印头除外)	1 年
	打印头	3 个月或 30 公里， 以先到为准
便携式打印机	整机(打印头除外)	1 年
	打印头	3 个月或 30 公里， 以先到为准
周边配件	电池	1 年
	电源适配器	3 个月
	数据线	3 个月

注：如打印头出现不可抗力因素（包括但不限于：刮伤、创伤、烧毁、腐蚀等）不在保修范围。

【有偿维保】

属于下列情况（包括但不限于），您可以选择有偿服务：

- 1) 无保修卡或缺失有效发票或超过保修期的；
- 2) 无iData标识或产品编号模糊辨认不清的情况下；
- 3) 客户未按产品说明书的要求使用、维护、保管和私自拆装或维修造成机器故障的情况；
- 4) 因客户使用非iData原装正品配件(打印头、主板、电源线、数据线等)而造成的故障；
- 5) 产品使用过程中正常的磨损和消耗；
- 6) 由非授权服务者拆修造成损坏的；
- 7) 使用者自身网络、软件原因导致产品无法使用的；
- 8) 因意外因素或人为原因(操作失误、划伤、搬运磕碰、输入不合适的电压等)导致的故障或损坏；
- 9) 因用户保管不当（如鼠害、虫害、液体渗入、异物进入等其他类似原因）而造成的产品故障或损坏，或造成产品零部件的丢失；
- 10) 因自然灾害等不可抗力(如地震、火灾等)原因造成的故障或损坏。

说明：维修服务所需部件的最长保有期为产品停产1年。

售后服务

服务热线:4008838268转2

服务QQ:2782597064(昵称:iData售后)

服务邮箱:service@idatachina.com

公司官网:www.idatachina.com


总部地址:江苏省无锡市滨湖区高浪东路999号国家传感信息中心B1号楼11层

2022©无锡盈达聚力科技有限公司保留所有权利及对本保修条款拥有最终解释权。


1 Packing List

After unpacking, check the appearance of printer, make sure you have all parts.


Contact the seller if you found any defective or missing.

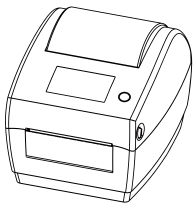

Printer

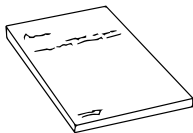


User Manual

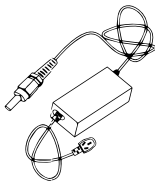

Power Adapter

(Image shown is for illustration purposes only.
Actual product may vary.)




USB Cable



Note

As the product is improving continuously, all specifications, accessories and programs are subject to practical models. Information in this manual is subject to change without notice.

2 Appearance and Components

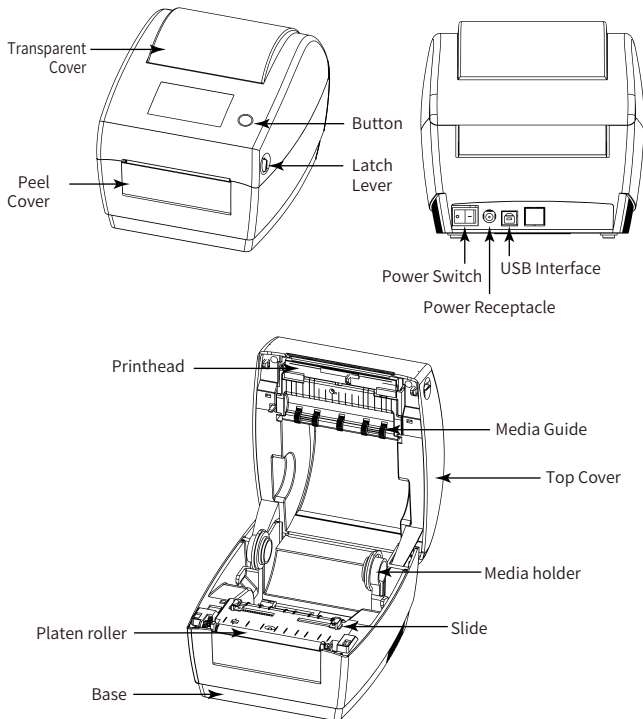

3 Preparation before Usage

1. Power switch


The printer power is on when the switch is in status “1”;

The printer power is off when the switch is in status “0”.

- 1) Make sure you switch off the printer by power switch. Unplugging directly could result in damage of interior circuit of the printer, and the printing data.
- 2) Make sure you use the original power supply, otherwise it could result in quality degradation or printer damage.
- 3) Do not switch on the printer right after you switch off (Interval time $\geq 5S$), otherwise it could result in product failure.
- 4) When you switch off the power, the power indicator light will fade out after 2-3 seconds. This is a normal condition instead of a failure.

2. Power connecting

1) Connecting the power cable

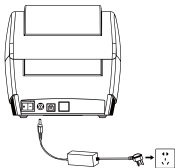

2) Connecting the USB cable



3) Switch on the power to status “I”

4 Basic Functions of Usage

The printer's status and failure can be confirmed by indicator color of buttons and buzzer alert. You can also do simple printer settings by the buttons.

1.Feed function

Turn on the printer's power, press feed button, the printer would feed media to designated position according to the media types.

If you use the thermal media, you will get a whole piece of media by pressing the feed button.


2.Smart learning of media

Turn off the printer's power, open the top cover and load the media, then close the cover. Turn on the power and wait for about 3-5 seconds until the printer finish the initialization. Press and hold the feed button until you hear a "Di" sound, loosen it. The printer will then execute the smart learning of media.

3.Printer device self-test page

If the printer's in standby mode with correct media loading, press and hold the feed button until you hear the "Di.. Di Di" sound, loosen it. The printer will print the device self-test page.

4. Loading the media

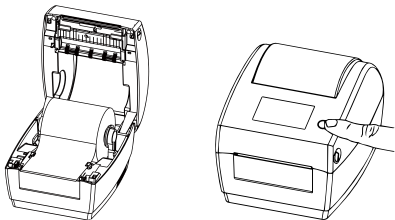

5 Troubleshooting

Indicator light	Status description	Troubleshooting
Green	Printer normal	
Flashing red and green light interchange	Printer head overheat	Wait until the printer cool down, it will resume working. Annotation①
Slow flashing red (every 2 secs)	Media error, media is running out	Check for media sticking or media jams; Annotation①② Make sure you load the media properly; Annotation①② Execute label smart learning automatically
Fast flashing red (every1 sec)	Top cover is not closed	Make sure you close the top cover properly

Annotation

①Regarding this kind of failure, it can be eliminated without turning off the printer. The printer can resume working automatically without loss of the content after the elimination.

②Please check in order, if the previous failure cannot be eliminated, then proceed to the next one.

6 Printhead Cleaning

The contaminants stick on the printhead and the interior of the printer, including dusts, foreign matters, adhesive material etc., could result in printing quality degradation. Follow the steps below to clean the printhead if it's contaminated.



Note:

- 1) Make sure you switch off the printer before cleaning.
- 2) The printhead gets very hot due to the printing. Switch off the printer, and kindly wait for 2-3 mins before you start cleaning.
- 3) Do not touch the heating part of the printhead, otherwise it could result in the damage of the printhead due to the static.
- 4) Do not scratch or damage the printhead.

Printhead cleaning

- 1) Open the top cover, use a cleaning pen (or diluted alcohol dampened swab) to clean the printhead from the middle, then towards both sides.
- 2) Do not use the printer right after the cleaning. Wait until the cleaning alcohol volatilize in 1-2 mins. Make sure the printhead is dry before you resume printing.

Sensors, roller and media path cleaning

- 1) Open the top cover and take out the media.
- 2) Use dry cotton cloth or swabs to wipe off the dusts and foreign matters.
- 3) Dampen the cloth or swabs with medical alcohol, then use it to wipe off the adhesive matter and other contaminants.
- 4) Do not use the printer right after the cleaning. Wait until the cleaning alcohol volatilize in 1-2 mins. Make sure the printhead is dry before you resume printing.



Note

Please clean the parts whenever you found the degradation of printing quality or media sensing function.

7 Bluetooth Connecting and Usage

1. For mobile phones of Android

Step 1: Turn on the printer

Step 2: Search device in Bluetooth interface, select the printer and connect.

The original password is 0000 or 1234. When the Bluetooth pairing's done, turn on Bluetooth mode per picture.

Step 3: Open the APP, link the printer and print.

2. For mobile phones of iOS

Step 1: Turn on the printer and Bluetooth.

Step 2: Open the APP, link the printer and print.



Notes

1. It supports the devices with Bluetooth.
2. Make sure Bluetooth is on when you process the connection.
3. iOS devices can use APP or mini program to connect without PIN code matching.

8 Product Warranty Card

Dear customer: Thank you for using our product, since purchase, you have below services:

[Free Maintenance]

Since the date of your purchase, product performance failure caused by non-human damage according to the following warranty period:

Product Type	Parts	Warranty Period
Desktop Printer	Whole device (except print head)	1 year
	Print head	3 months or 30 km (whichever comes first)
Portable Printer	Whole device (except print head)	1 year
	Print head	3 months or 30 km (whichever comes first)
Accessories	Battery	1 year
	Power adapter	3 months
	Data cable	3 months

Note: The print head damaged by force majeure factors (including but not limited to scratches, injuries, burns, corrosion, etc.) is not covered by warranty.

[Paid Maintenance]

In the following cases (including but not limited to), you can choose paid services:

- 1) No warranty card or missing valid invoice or exceeding the warranty period;
- 2) No iData mark or illegible product number;
- 3) Damage caused by failure to use, maintain, keep, disassemble or repair the machine in accordance with the requirements of the product manual;
- 4) Damage caused by customers in using non-authentic(iData) accessories (print head, motherboard, power adapter, data cable, etc.);
- 5) Normal wear and tear during use of the product;
- 6) Damage caused by unauthorised service personnel's disassembly;
- 7) The user's own network and software cause the product to be unusable;
- 8) Damage caused by accident or human factors (operation error, scratch, handling bump, improper input voltage, etc.);
- 9) Damage caused by improper storage by users, or loss of product parts (rodent, insect pest, liquid infiltration, foreign matter entry and other similar reasons);
- 10) Damage caused by force majeure such as natural disaster (earthquake, fire, etc.).

Note: Required accessories for repairing are valid for a 1 year after the product discontinued.

After-sale Service

Service Email: sales@idataglobal.com or contact the salesman/local dealer/authorized repair station

Official Website: www.idataglobal.com

Head Office Address: Floor 11, Building B1, Wuxi (Binhu) National Sensing Information Center, No. 999 Gaolang East Road, Wuxi City, Jiangsu Province, P.R.C.

2022© WUXI Idata TECHNOLOGY COMPANY LTD. reserves the right of final interpretation of this warranty and conditions.



电话: 4008-838- 268(中国大陆)

网址: www.idatachina.com

Website: www.idataglobal.com

地址: 无锡市滨湖区高浪东路999号国家传感信息中心B1号楼11层

Headquarters: Floor 11, Building B1,

Wuxi (Binhu) National Sensing Information Center,

No.999 Gaolang East Road, Wuxi city, Jiangsu Province ,P.R.C.