
HVAC STUFF · USER GUIDE

Flex Tail

The end of a rigid duct at an element becomes flex — in one click

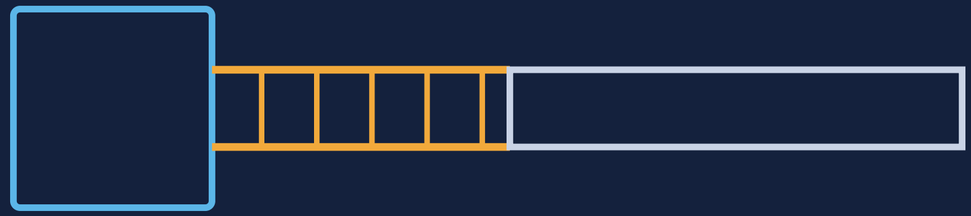

Revit 2023–2027 · Flex Tail · version 1.0

OVERVIEW


What the command does

Before



The rigid duct runs right up to the air terminal.

After

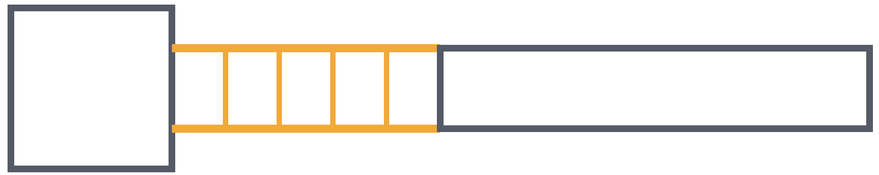


A flex segment of the same size at the element, then the rest of the duct.

Size, system and joints are kept. You set the flex length.

WHERE TO FIND IT

Ribbon: HVAC Stuff → Ductwork

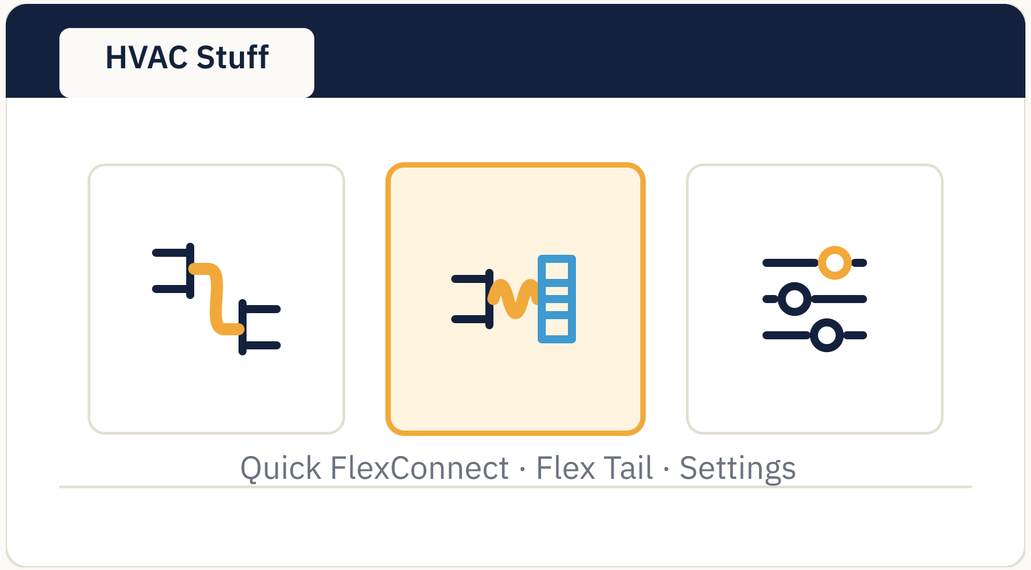

The Flex Tail button is the second on the **Ductwork** panel of the **HVAC Stuff** tab.

Works only in a project, in these views:

- floor, ceiling, or structural plan;
- section;
- 3D view without perspective.

In families, sheets, elevations and perspective views the button is grayed out.

QUICK START

Three steps to a flex segment

1

Click the element

Near the connector the rigid duct is joined to. The connector gets marked.

2

Length in the window

Type a number or click 500… 2500 or Whole segment. The flex duct is already shown in gray.

3


OK

The flex segment stays in the model. Esc — nothing changes.

Works with: equipment, accessories, fittings, air terminals.

WHERE TO CLICK

Click the element, not the duct

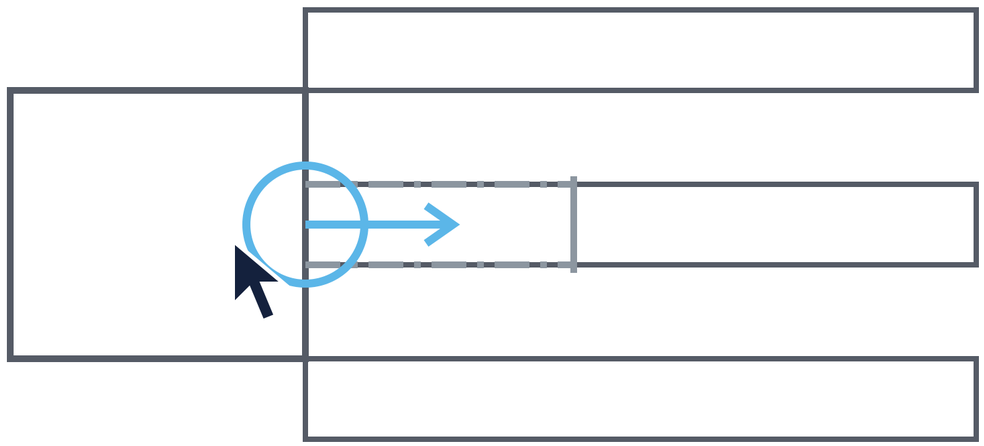


Click equipment, an accessory, a fitting, or an air terminal — near the connector you need.

The mark shows the connector nearest to the pointer on the screen; **the gray outline** — the future flex segment.

If no rigid duct is joined to the connector, a message explains why the element cannot be used.

THE COMMAND WINDOW

Length and type — with a live preview

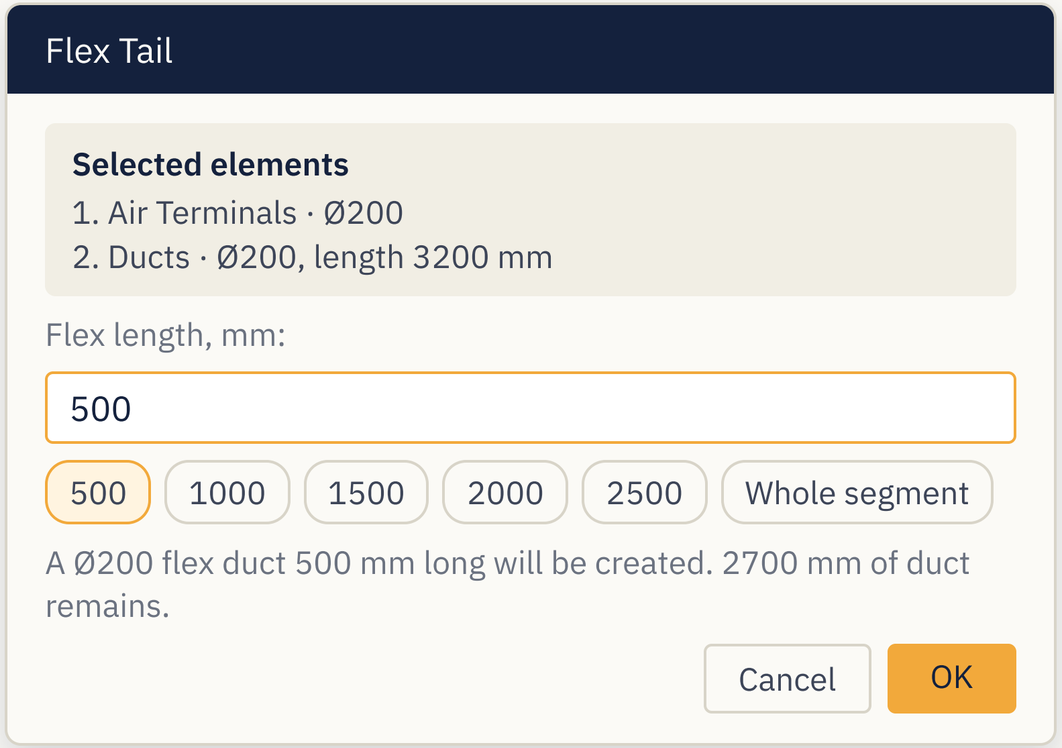

The real flex duct is already in the model — in gray, both ends marked. Every change rebuilds it.

The line under the values says what happens to the duct.

Flex type — the list under the length; remembered for each section shape.

LENGTH RULES

The length always fits the duct

Longer than the duct

The maximum length — the length of this duct — is put in. The window stays open.

A tiny leftover

If the rigid leftover would be shorter than 1/10 inch, the whole segment is converted.

Whole segment

The whole duct up to the next element becomes flex.

Length from 5 to 50,000 mm. Default 500 mm; the last entered length is remembered (a setting).

SERIES AND UNDO

Element after element, one click each

Action	What happens
Continue	The next element of the same section shape is converted at once — same length and type, no window.
Shift + click	Hold Shift while clicking — the window opens again to change the length or type.
Esc	Ends the series. Converted elements stay.
Ctrl + Z	Each element is a separate step, “Flex Tail: rigid duct to flex”.

The Revit status bar shows how many elements are converted.

SETTINGS

The Settings button on the panel


Setting	What it changes
Flex Pattern	The Flex Pattern value of new flex ducts (default Flex).
Default length	The length the window starts with, mm (default 500).
Remember the length	The window starts with the last entered length.
Loop	The next element after this one — until Esc.
Color, outline, language	The General tab — shared by both commands.

IF SOMETHING GOES WRONG

Frequently asked questions


Situation	What to do
The button is grayed out	Open a plan, a section, or a 3D view without perspective in a project.
Clicking the duct does nothing	Click the element the duct is joined to, near its connector.
“This element cannot be used”	The nearest connector has no rigid duct — click closer to another one.
“No flex type for the shape”	Load a flex duct type of that shape into the project.
The whole segment was converted	The length exceeded the duct, or the leftover would be too short — see the length rules.
An error	Click Copy in the message window and send the text to the developer.

Picking an element and the checks

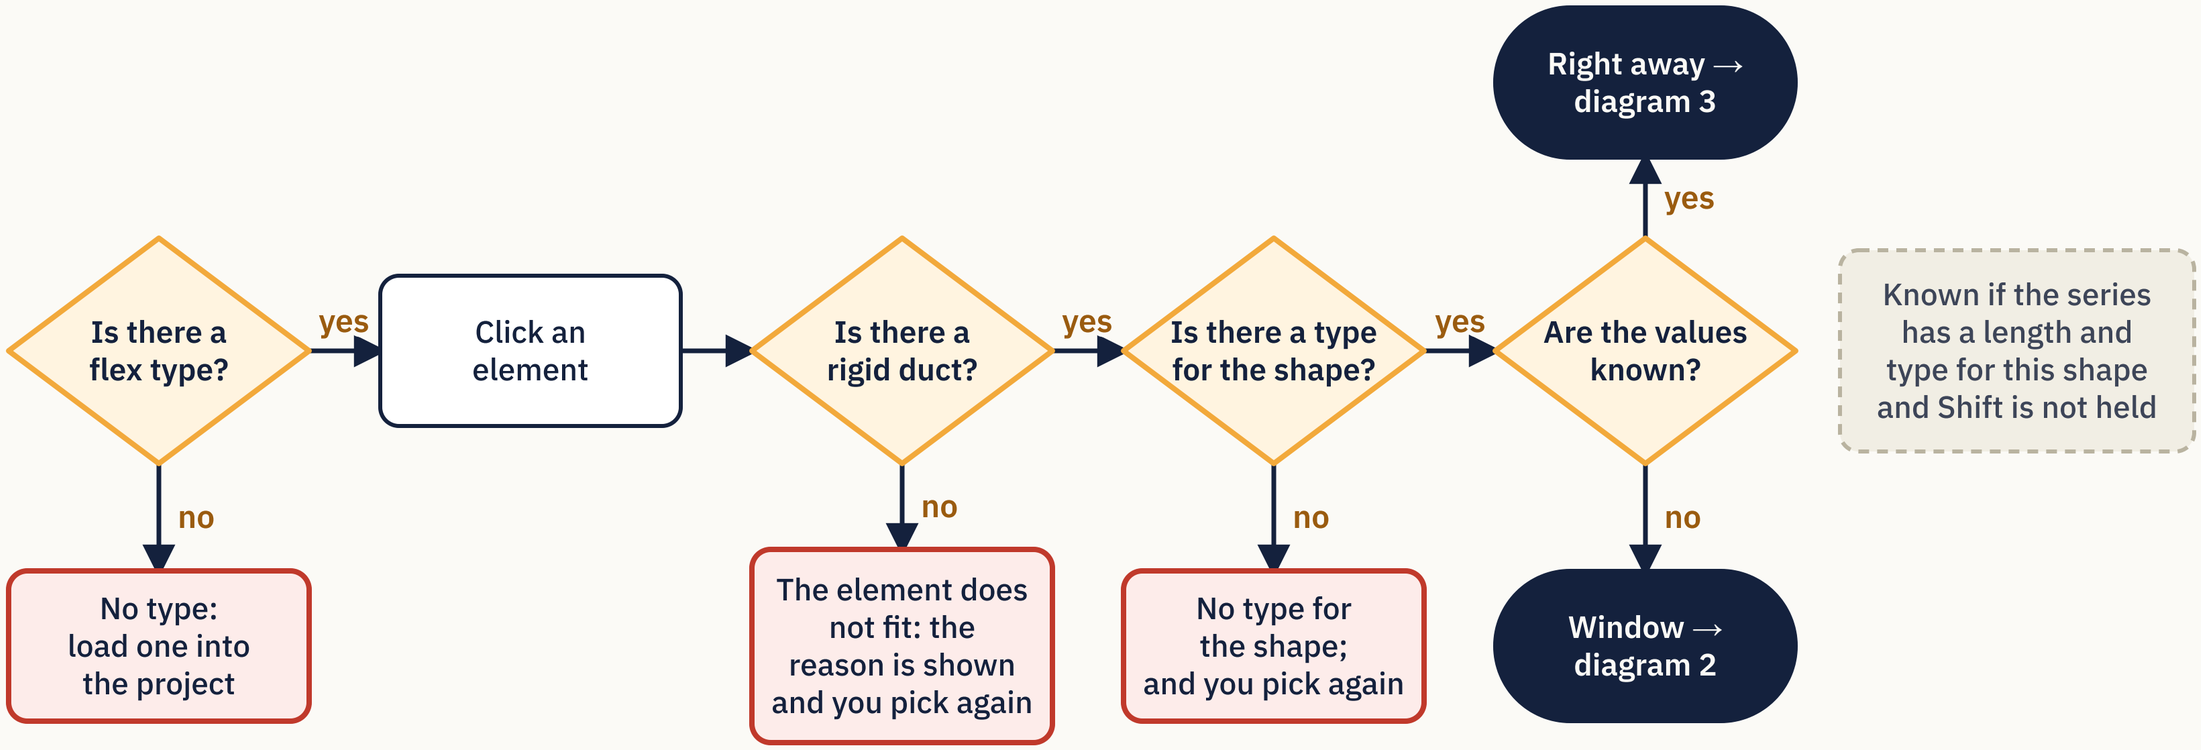


Esc ends the command. After a red message you pick again without restarting.

The window with a live preview

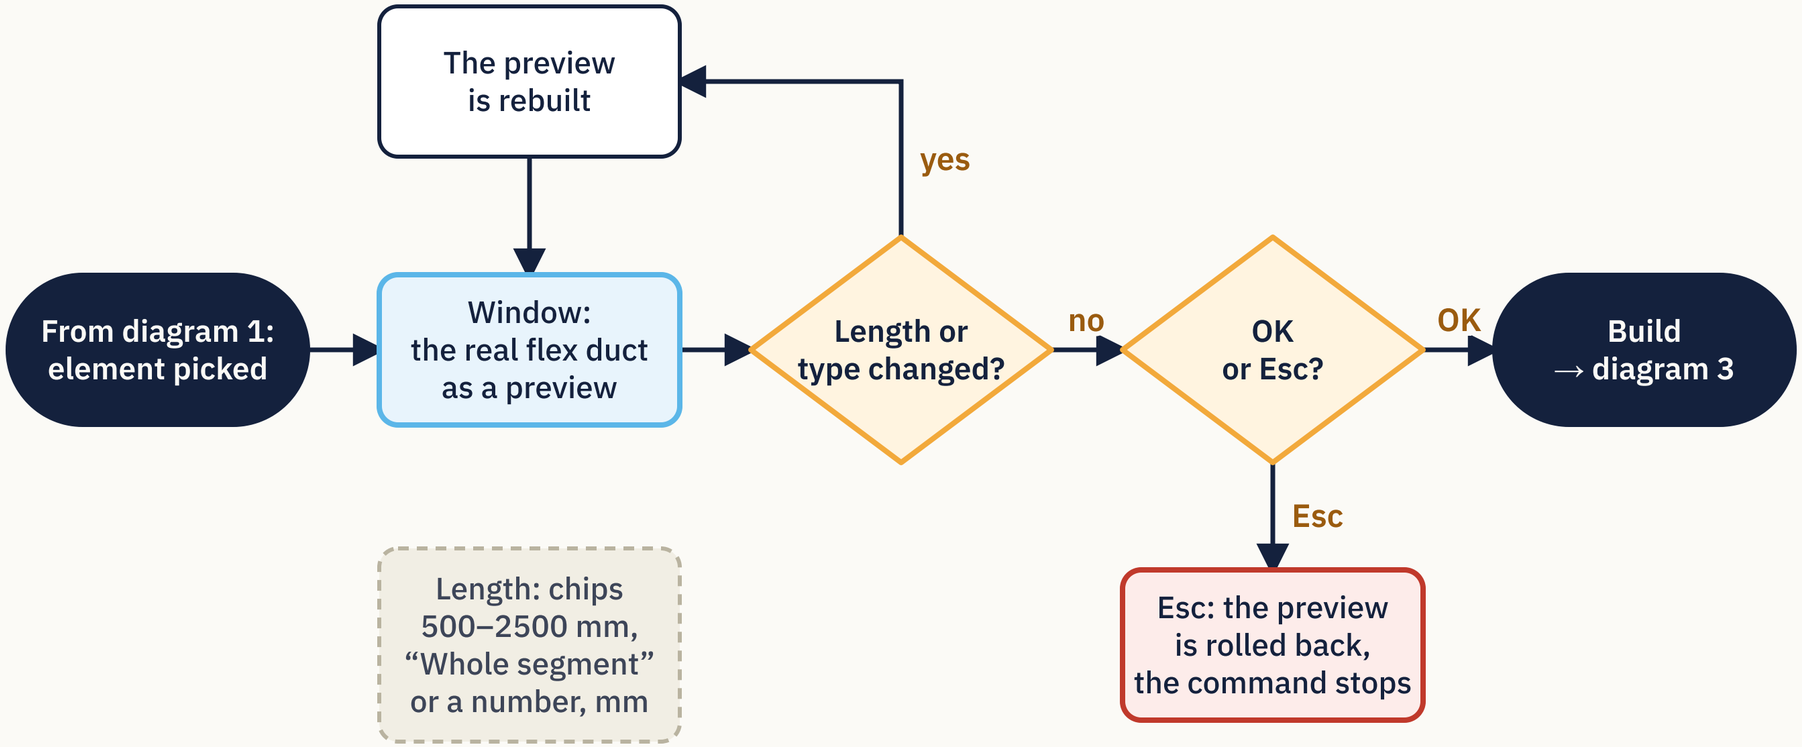

Every change of length or type rebuilds the real flex duct. OK keeps it, Esc rolls it back and ends the command.

Length, building and the series

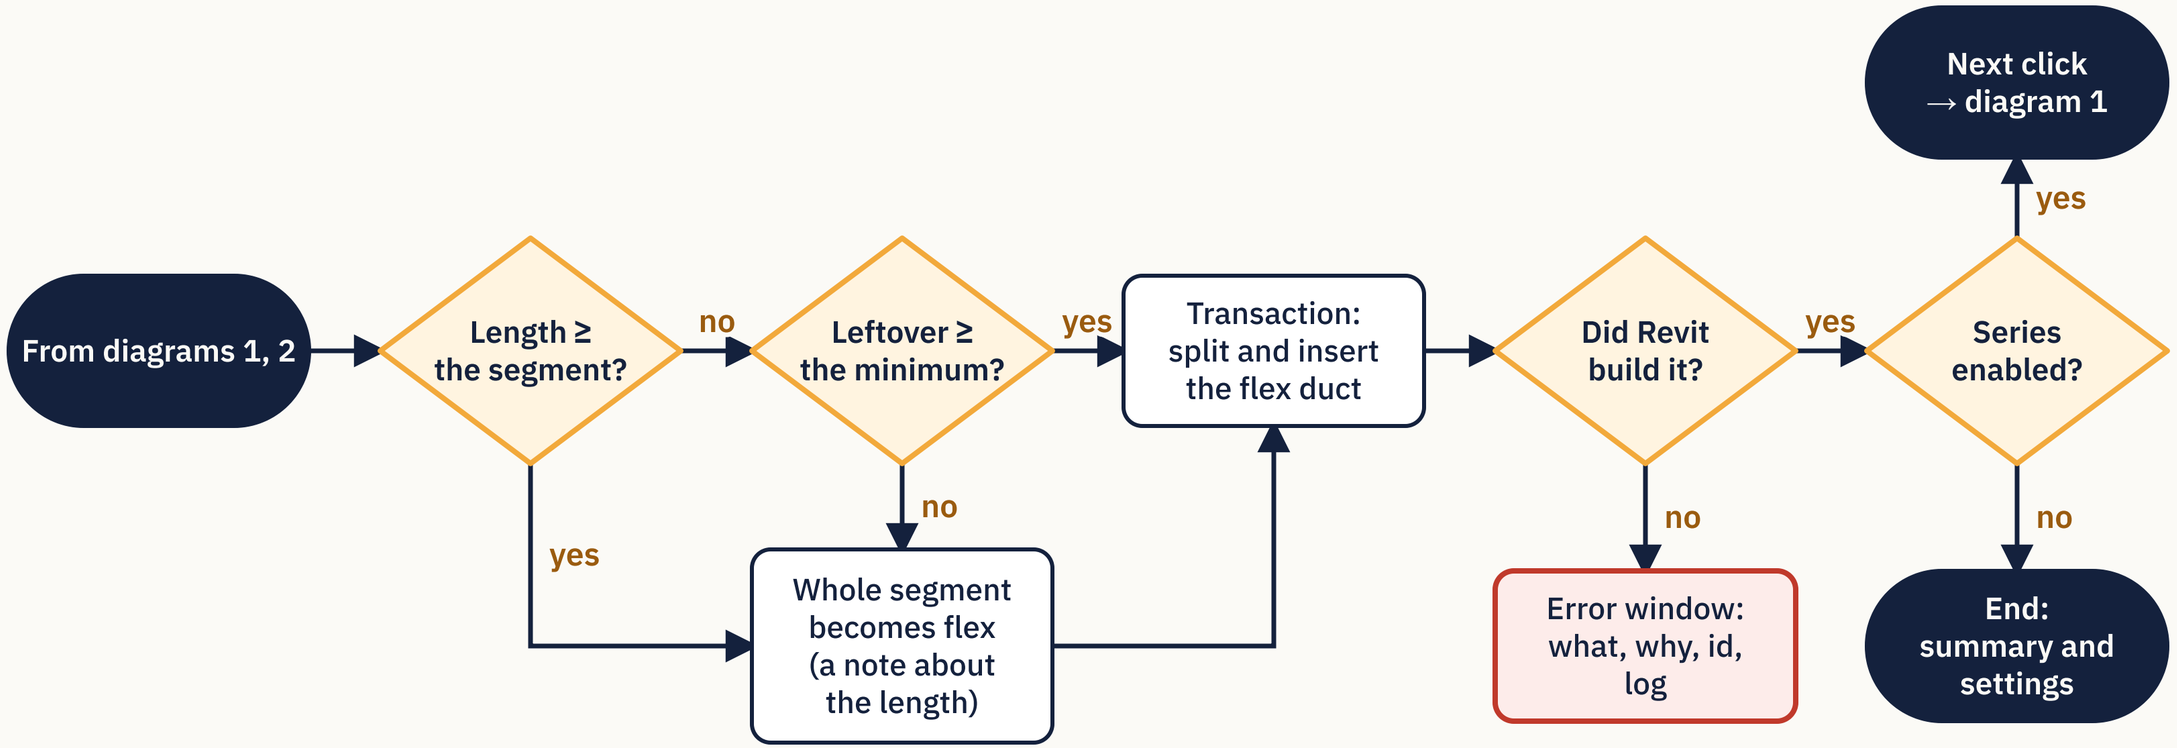

A length longer than the segment, or a leftover that is too short, turns the whole segment flex and adds a note to the summary.

HVAC STUFF

One click — and the duct end is flex

New versions, installers and guides: github.com/iMrVoLaNd/HVAC-Stuff-Releases

Help from Revit: point at the button and press **F1**.

Also in the add-in: Quick FlexConnect — a flex duct between two connectors in two clicks.