


User Manual

How to get NM Miner work?

1. Connect the **computer** and the **screen** using **our USB-to-Type-C cable**.
2. Computer Visit: <https://flash.nmmminer.com/>
3. Select the **firmware version** and other information in the **upper-right corner** as shown in the figure. Then Connect.



4. Select the connected device, then click **Connect**. The tool will automatically flash the firmware. If an error occurs, re-plug the cable and repeat the above steps.

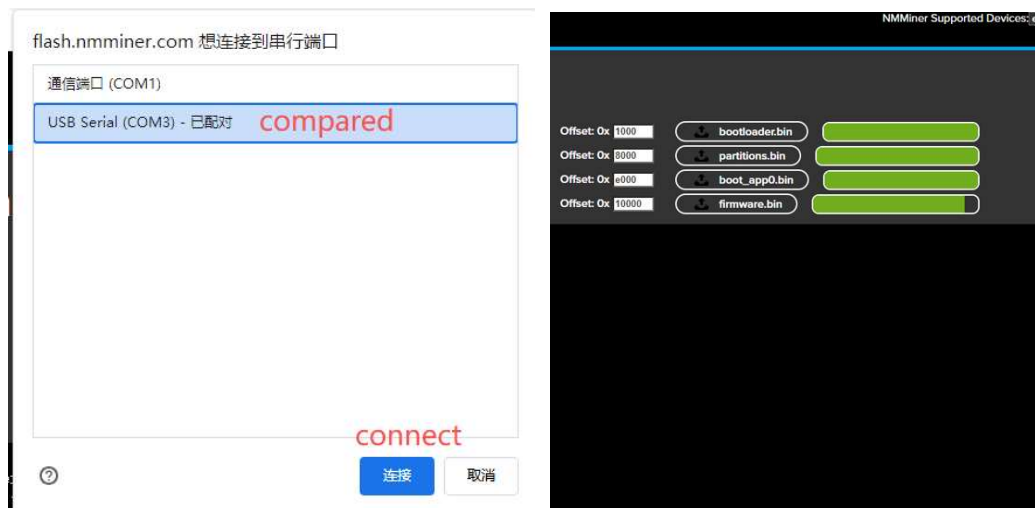

5. At this point, the screen you purchased will display an image and wait for configuration. On the computer side, you need to purchase a License. Be sure to keep the **device ID** (or **device serial number**) and the **purchased License** — they may be needed later if you reset the device.



8. Visit <https://github.com/NMminer1024/NMMiner/tree/main/tool> , select the nmcontroller_client folder and download **Device Management Tool** on your computer.

For 32-bit systems, download the x86 version.

For 64-bit systems, download the x64 version.

Right-click and run as administrator to install. If your antivirus or firewall prompts a warning, add it to the whitelist and ignore the risk. After installation, open the client, and you will see all devices connected to your computer.





NMController v0.4.1

IP	BoardType	HashRate	Share	Pool	NetDiff	LastDiff	BestDiff	Valid	Temp	RSSI(dBm)	FreeHeap	Version	Uptime	UpdateTime
192.168.0.103	cyd 2.8	999.46KH/s	1/28/96.6%	pool.ne	149.3T	0.019	0.011	0	0.0	-47	92.71	v1.8.23	000d 00:08:10 000d 00:45:5	2025-12-08 15:09:29
192.168.0.105	cyd 2.8	1.0009MH/s	0/29/100.0%	pool.ne	149.3T	0.014	0.013	0	0.0	-47	96.60	v1.8.23	000d 00:06:20 000d 00:06:2	2025-12-08 15:57:29


NMTech Team. Follow us for updates.

Facebook, Telegram, YouTube, GitHub, Email, RSS, Twitter

You can also use a browser to manage your device by entering its IP address, where you can edit any information.

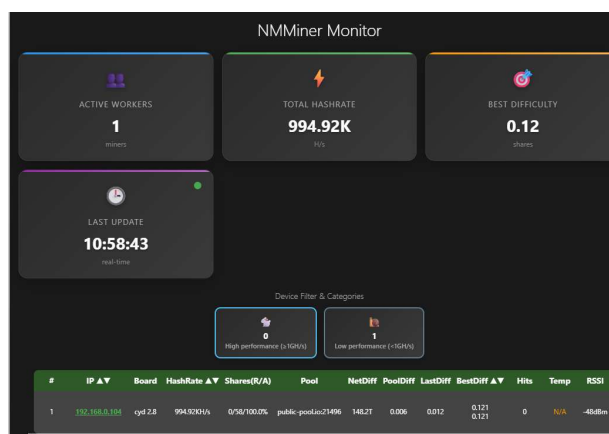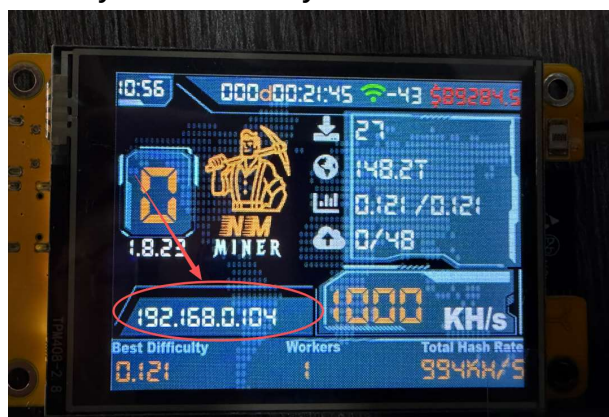

Note:

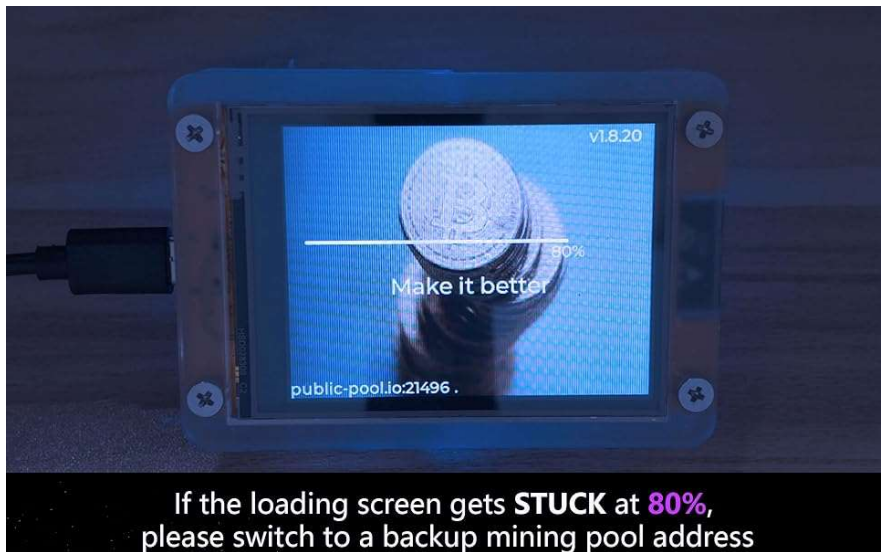

NOTE information

1. In the settings interface, please enter your connectable Wi-Fi network name in the SSID field. NOTE: It should not be the "namp-2.4g" signal emitted by the product.
2. After saving the settings, if the loading screen gets STUCK at 80%, please switch to a backup mining pool address. (You just need to modify Pool URL, wallet address and pool password is no need to edit)

Alternative addresses:


stratum+tcp://pool.nerdminer.de:3333
stratum+tcp://pool.tazmining.ch:33333
stratum+tcp://public-pool.io:21496

How to install the Case?

1. Peel off the protective film on both sides of the two acrylic casings.



2. Place the **acrylic shell** onto the **screen** as shown in the **picture**, and **align the screw holes**.

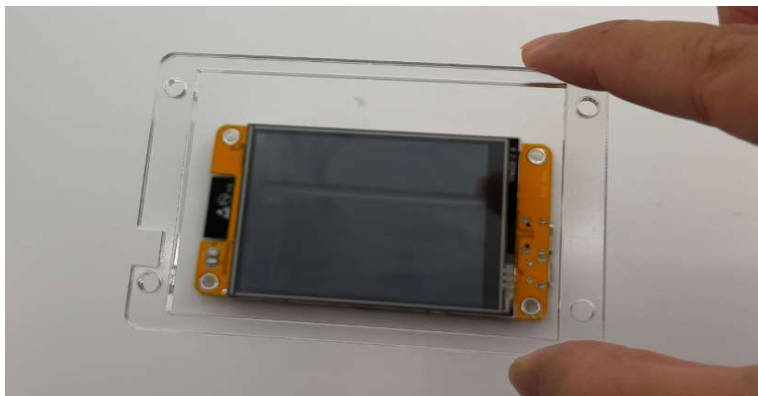

3. Use the **M3x7 screws**(the **longer** ones) and the **M3x5 brass standoffs** to secure the **acrylic shell** to the **screen** at the **four corners**, as shown in the **picture**.



4. Place the **acrylic backplate** as shown in the **picture**, then secure the **four corners** with **M3x6 screws**(the **shorter** ones) to **complete the installation**.



Customer Service Email:

iuniker@yeah.net

If you have any questions, please feel
free to contact us.