


User Manual

How to get NM Miner work?

1. Connect the **computer** and the **screen** using **our USB-to-Type-C cable**.
2. Computer Visit: <https://flash.nmmminer.com/>
3. Select the **firmware version** and other information in the **upper-right corner** as shown in the figure. Then Connect.



4. Select the connected device, then click **Connect**. The tool will automatically flash the firmware. If an error occurs, re-plug the cable and repeat the above steps.

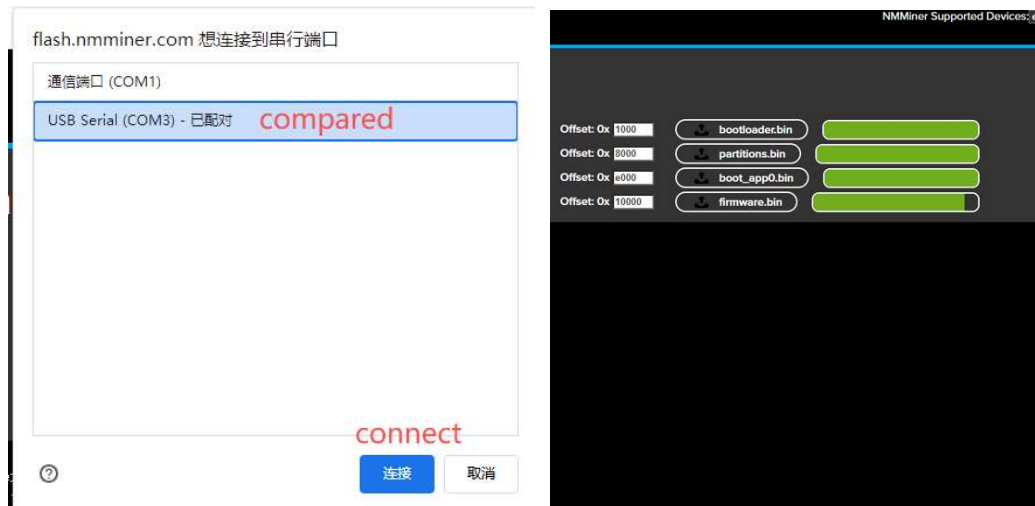




5. At this point, the screen you purchased will display an image and wait for configuration. On the computer side, you need to purchase a License. Be sure to keep the **device ID** (or **device serial number**) and the **purchased License** — they may be needed later if you reset the device.



6. After paying **\$2.99 USD**, you will receive a **License**. Copy it in to activate the device firmware.



7. After completion, the screen device you purchased will prompt you to scan a QR code to connect to the Wi-Fi signal emitted by the device for network configuration. The Wi-Fi name is **nmap-2.4g**. Once connected, the browser will automatically open the network configuration page. Click configure wifi, Then select your own available Wi-Fi network, enter the **Wi-Fi name (SSID)** and **password**, and tap **Save**. Only after saving can the device connect to the network and start working.

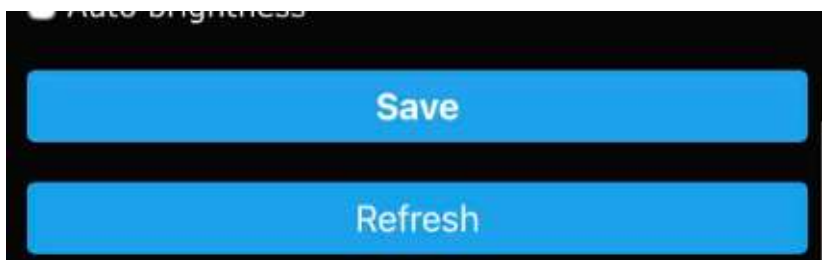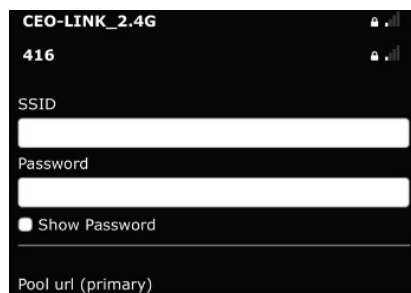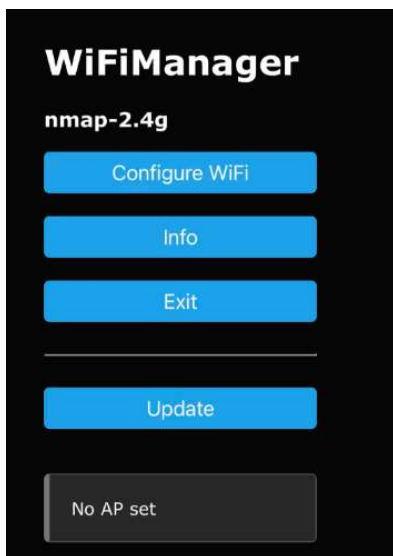


8. Visit <https://github.com/NMminer1024/NMMiner/tree/main/tool> and download **Device Management Tool** on your computer.

NMController v0.4.1															
IP	BoardType	HashRate	Share	Pool	NetDiff	LastDiff	BestDiff	Valid	Temp	RSSI(dBm)	FreeHeap	Version	Uptime	UpdateTime	
192.168.0.103	cyd 2.8	999.46KH/s	1/28/96.6%	poolName:3333	149.3T	0.019	0.011.13	0	0.0	-47	92.71	v1.8.23	000d 00:08:1000d 00:49:5	2025-12-08 15:09:29	
192.168.0.105	cyd 2.8	1.0009MH/s	0/29/100.0%	poolName:3333	149.3T	0.014	0.011.13	0	0.0	-47	96.60	v1.8.23	000d 00:06:2000d 00:06:2	2025-12-08 15:57:29	

NMTech Team. Follow us for updates.

Note:

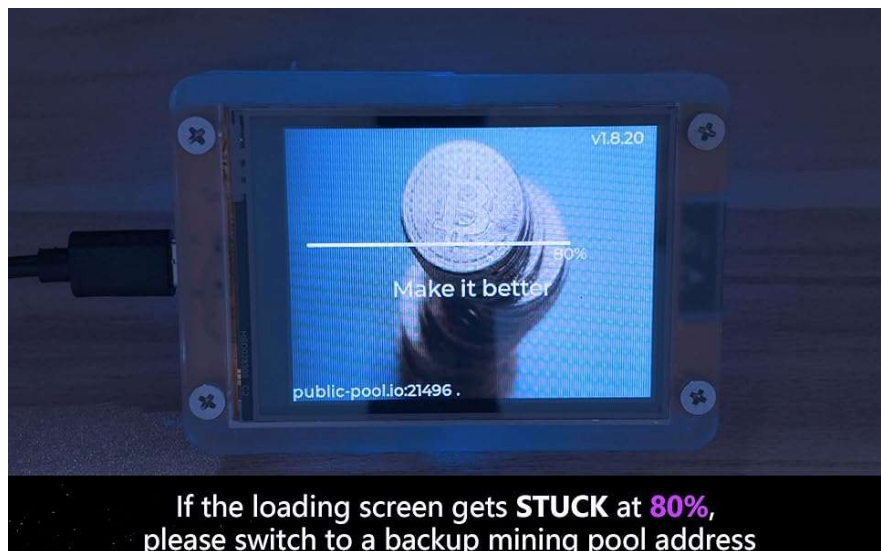

NOTE information

1. In the settings interface, please enter your connectable Wi-Fi network name in the SSID field. NOTE: It should not be the "namp-2.4g" signal emitted by the product.

2. After saving the settings, if the loading screen gets STUCK at 80%, please switch to a backup mining pool address. Alternative addresses:

<stratum+tcp://pool.nerdminer.de:3333>

<stratum+tcp://pool.tazmining.ch:33333>


Because we failed to make it clear that the device is not pre-activated, we would like to provide you with a \$3 refund, which we consider our responsibility. We also invite you to share your shopping experience. (Contact the email listed at the bottom of this document.)

How to install the Case?

1. Peel off the protective film on both sides of the two acrylic casings.



2. Place the **acrylic shell** onto the **screen** as shown in the **picture**, and **align the screw holes**.

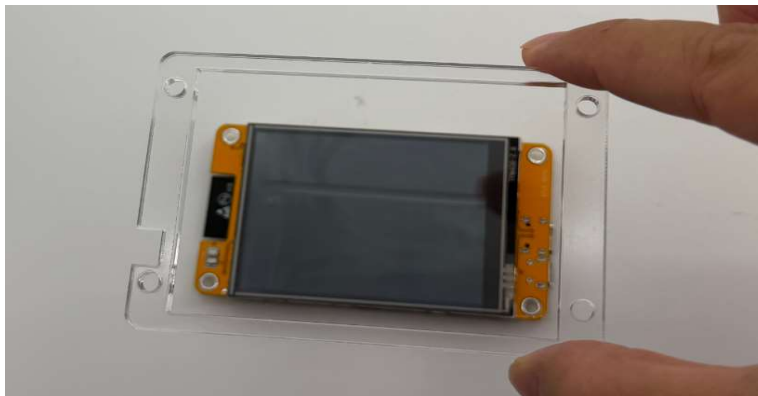

3. Use the **M3x7 screws**(the **longer** ones) and the **M3x5 brass standoffs** to secure the **acrylic shell** to the **screen** at the **four corners**, as shown in the **picture**.



4. Place the **acrylic backplate** as shown in the **picture**, then secure the **four corners** with **M3x6 screws**(the **shorter** ones) to **complete the installation**.



Customer Service Email:

iuniker@yeah.net

If you have any questions, please feel free to contact us.