


User Manual

How to get NM Miner work?

1. Connect the **computer** and the **screen** using **our USB-to-Type-C cable**.
2. Computer Visit: <https://flash.nmmminer.com/>
3. Select the **firmware version** and other information in the **upper-right corner** as shown in the figure. (Support Devices and BaudRate are fixed and can't be changed, the firmware Version should choose the latest) Then Connect.



4. Select the connected device, then click **Connect**. The tool will automatically flash the firmware. If an error occurs, re-plug the cable and repeat the above steps.

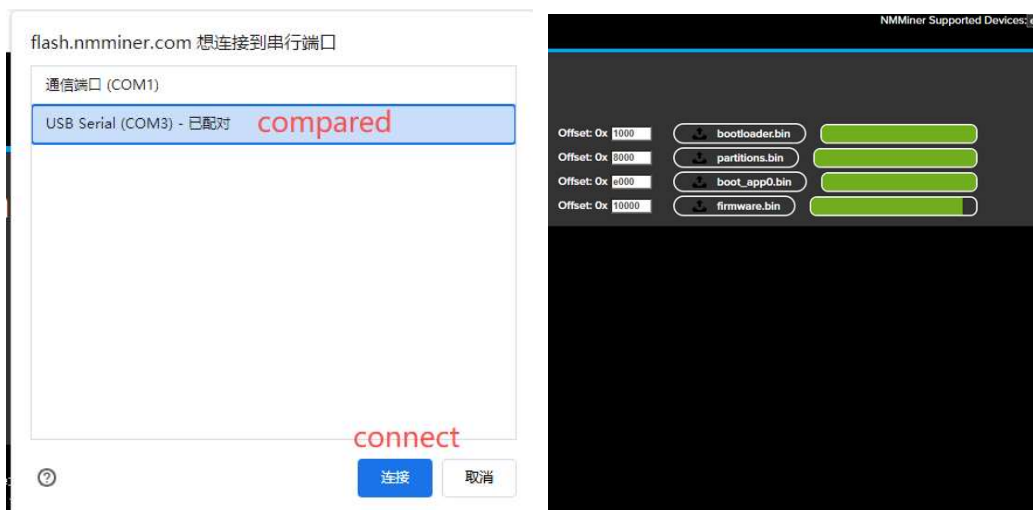

5. At this point, the screen you purchased will display an image and wait for configuration. On the computer side, you need to purchase a License. Be sure to keep the **device ID** (or **device serial number**) and the **purchased License** — they may be needed later if you reset the device.




6. After paying **\$2.99 USD**, you will receive a **License**. Copy it in to activate the device firmware.



Device Code: dd87efed014e1e98e1610e6b41b8acdfa66cf0d6d92cad 51b8ab03d9e [Get License Code](#)

License Code: 464660aea32d85728373dfa95d7657448044f255bbaf729011c1 5fbc30f18e31a9229c25a2f40ea9a55dc13cd778dd1a30453bb9625e3f6cb [Activation the device](#)

7. After completion, the screen device you purchased will prompt you to scan a QR code to connect to the Wi-Fi signal emitted by the device for network configuration. The Wi-Fi name is **namp-2.4g**. Once connected, the browser will automatically open the network configuration page. Click configure wifi, Then select your own available Wi-Fi network, enter the **Wi-Fi name (SSID)** and **password**, and tap **Save**. Only after saving can the device connect to the network and start working.

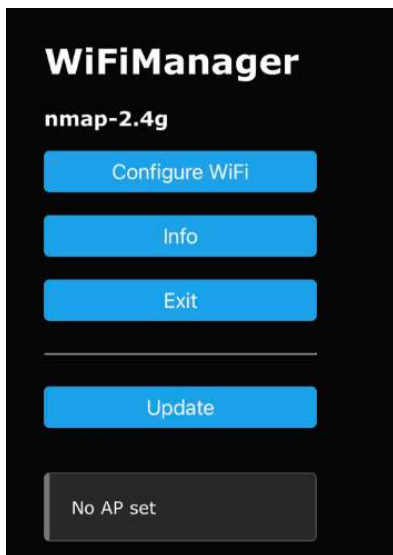

WiFiManager

nmap-2.4g


[Configure WiFi](#)

[Info](#)

[Exit](#)

[Update](#)

No AP set

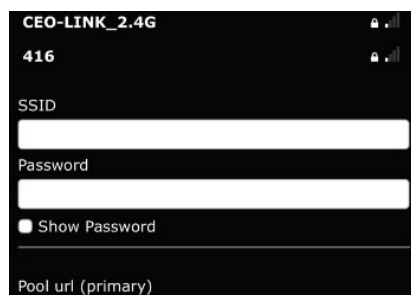

CEO-LINK_2.4G


416

SSID

Password

☐ Show Password

Pool url (primary)

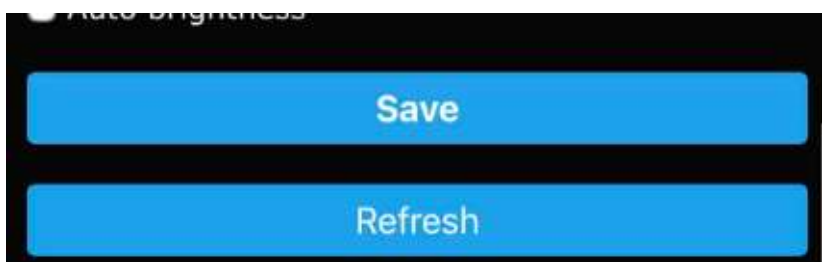

[Save](#)


[Refresh](#)

8. Visit <https://github.com/NMminer1024/NMMiner/tree/main/tool> , select the nmcontroller_client folder and download **Device Management Tool** on your computer.

For 32-bit systems, download the x86 version.

For 64-bit systems, download the x64 version.

Right-click and run as administrator to install. If your antivirus or firewall prompts a warning, add it to the whitelist and ignore the risk. After installation, open the client, and you will see all devices connected to your computer.

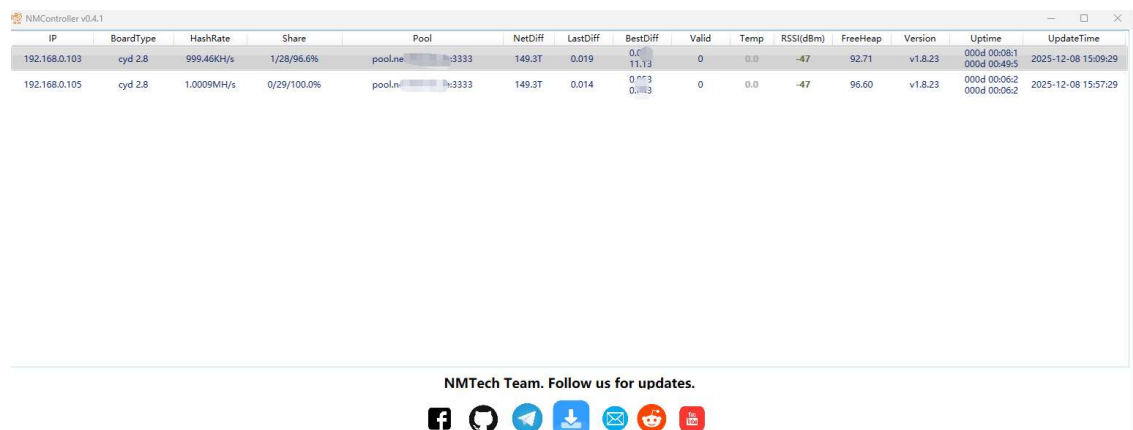


NMController v0.4.1


IP	BoardType	HashRate	Share	Pool	NetDiff	LastDiff	BestDiff	Valid	Temp	RSSI(dBm)	FreeHeap	Version	Uptime	UpdateTime
192.168.0.103	cyd 2.8	999.46KH/s	1/28/96.6%	poolName	149.3T	0.019	0.011.13	0	0.0	-47	92.71	v1.8.23	000d 00:08:1000d 00:49:5	2025-12-08 15:09:29
192.168.0.105	cyd 2.8	1.0009MH/s	0/29/100.0%	poolName	149.3T	0.014	0.011.13	0	0.0	-47	96.60	v1.8.23	000d 00:06:2000d 00:06:2	2025-12-08 15:57:29

NMTech Team. Follow us for updates.


Facebook, Telegram, YouTube, Email, RSS, GitHub icons

You can also use a browser to manage your device by entering its IP address, where you can edit any information.

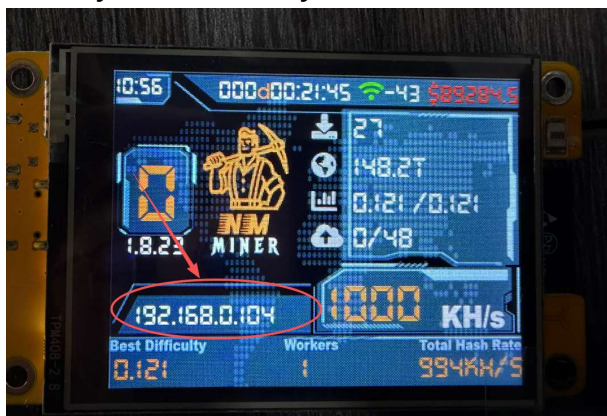

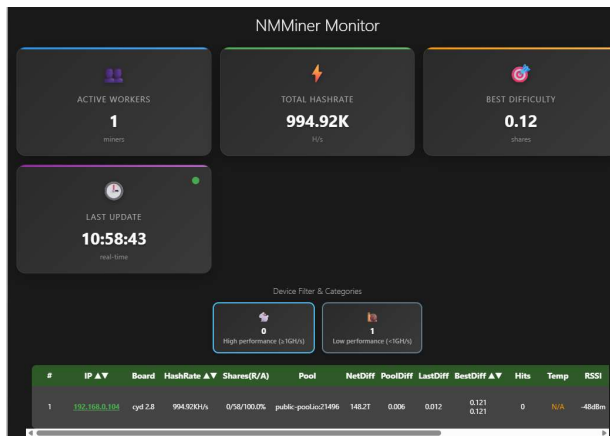

Note:

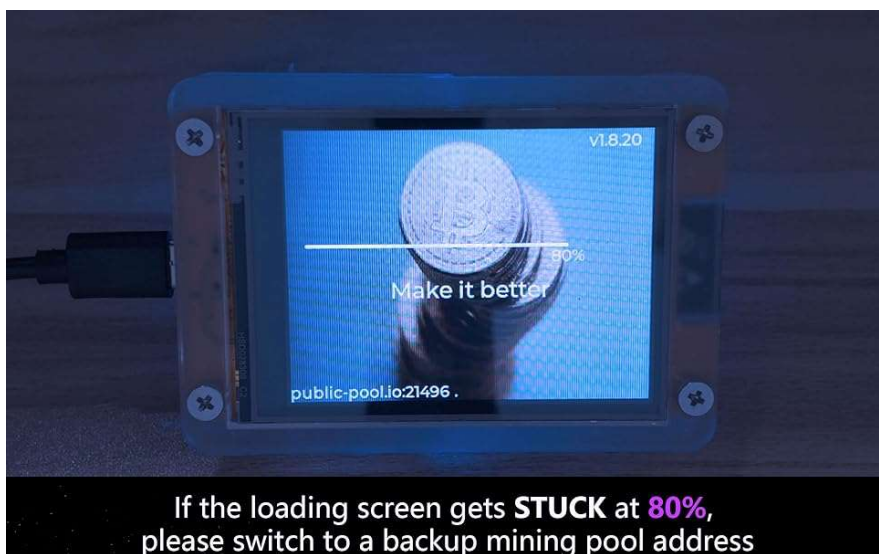

If the loading screen gets **STUCK** at **80%**, please switch to a backup mining pool address

NOTE information

1. In the settings interface, please enter your connectable Wi-Fi network name in the SSID field. NOTE: It should not be the "namp-2.4g" signal emitted by the product.
2. After saving the settings, if the loading screen gets STUCK at 80%, please switch to a backup mining pool address. (You just need to modify Pool URL, wallet address and pool password is no need to edit)

Alternative addresses:


stratum+tcp://pool.nerdminer.de:3333
 stratum+tcp://pool.tazmining.ch:33333
 stratum+tcp://public-pool.io:21496

How to install the Case?


1. Peel off the protective film on both sides of the two acrylic casings.



2. Place the **acrylic shell** onto the **screen** as shown in the **picture**, and **align the screw holes**.

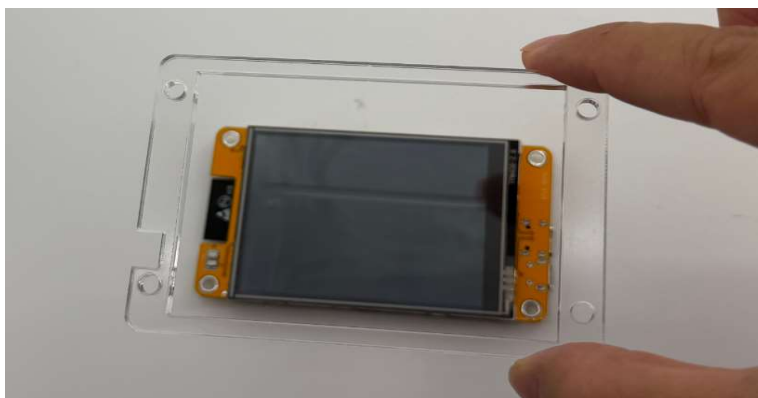

3. Use the **M3x7 screws**(the **longer** ones) and the **M3x5 brass standoffs** to secure the **acrylic shell** to the **screen** at the **four corners**, as shown in the **picture**.

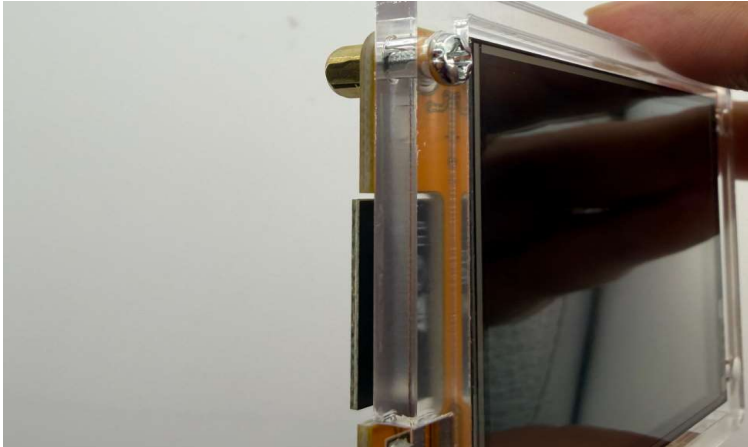

4. Place the **acrylic backplate** as shown in the **picture**, then secure the **four corners** with **M3x6 screws**(the **shorter** ones) to **complete the installation**.



Customer Service Email:

iuniker@yeah.net

If you have any questions, please feel free to contact us.