


User Manual

How to get NM Miner work?

For any questions, please contact our customer service email: mazerpi@yeah.net


1. Connect the **computer** and the **screen** using **our USB cable**.
2. Computer Visit: <https://flash.nmminer.com/>
3. Select the **firmware version** and other information in the **upper-right corner** as shown in the figure. (Support Devices and BaudRate are fixed and can't be changed, the firmware Version should choose the latest) Then Connect.



4. Select the connected device, then click **Connect**. The tool will automatically flash the firmware. If an error occurs, re-plug the cable and repeat the above steps.



5. At this point, the screen you purchased will display an image and wait for configuration. On the computer side, you need to purchase a License. Be sure to keep the **device ID** (or **device serial number**) and the **purchased License** — they may be needed later if you reset the device.

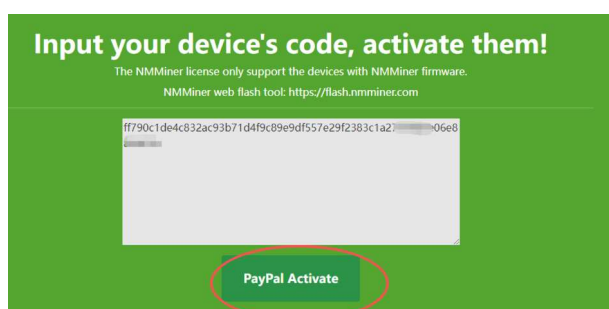



- After paying **\$2.99 USD**, you will receive a **License**. Copy it in to activate the device firmware. (Contact the email address listed on the front page of the instruction manual, provide your order number, and we will issue a \$3 USD refund to you.)



- After the device is activated, the system will attempt to start up. After 15-20 seconds, it will enter the configuration page, which is the page with a QR code as shown in the image below.




- At this point, you need to manually connect your mobile device to the open hotspot broadcast by this screen. Typically, the hotspot name is **nmap-2.4g**. Once connected to the hotspot, your mobile device will automatically jump to the configuration page. Click **Configure Wifi**, and directly click on the name of the Wi-Fi network you are using, then enter the password, and click **Save** to complete the Wi-Fi configuration.

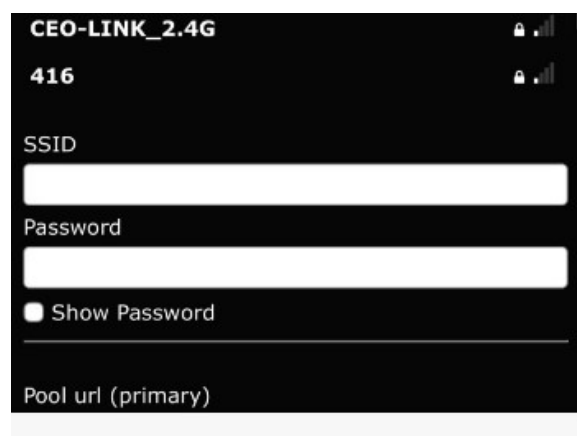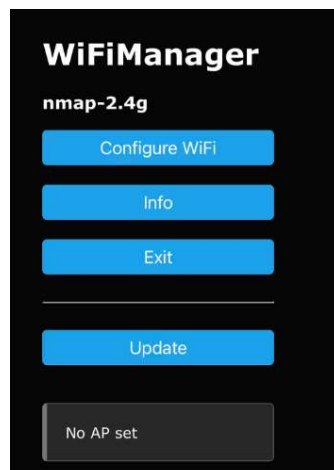


- The screen will then attempt to connect to the Wi-Fi again, and finally enter the MINER main interface.

10. You can use the browser on your PC or mobile device, enter the IP address displayed on the Miner page, and manage your device. After entering the device management page, you can click the edit button on the far right to modify the information you want to change. This part pertains to software operation. You can visit: <https://www.nmminer.com/blog/> for forums and the customer service email address.

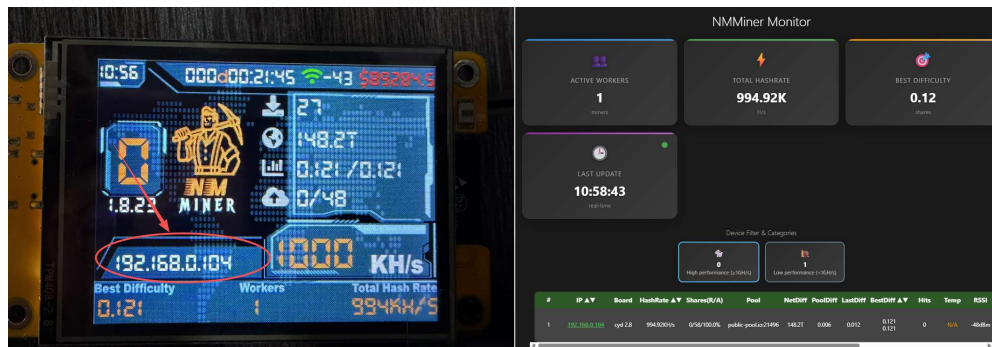

Note information:

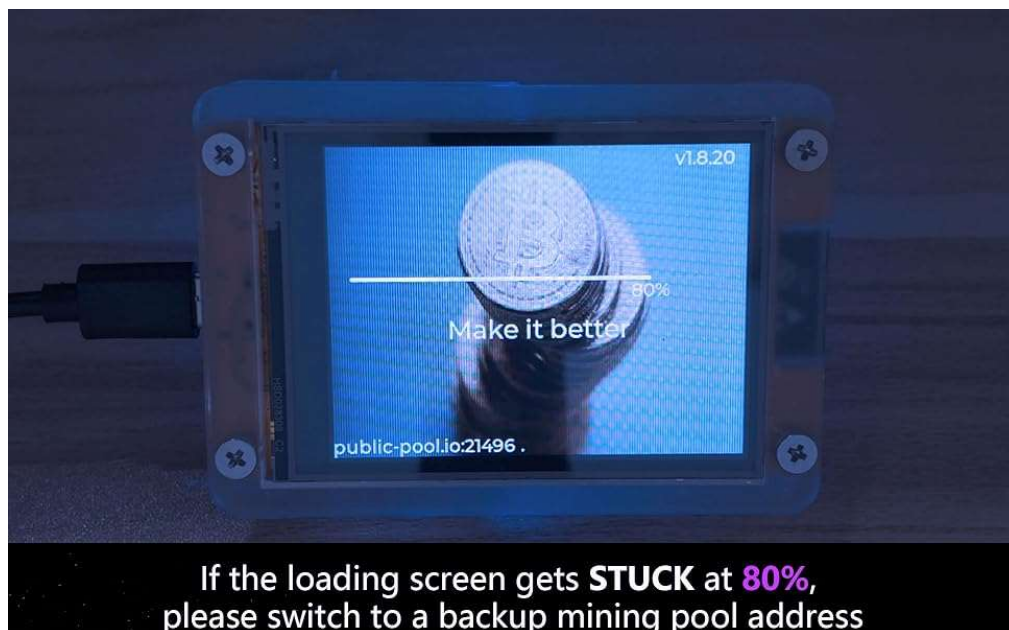

1. If the loading screen gets STUCK at 80%, please switch to a backup mining pool address. (You just need to modify Pool URL, wallet(BTC) address and pool password is no need to edit)

Pool URL:


stratum+tcp://pool.nerdminer.de:3333
stratum+tcp://pool.tazmining.ch:33333
stratum+tcp://public-pool.io:21496

How to install the Case?

1. Peel off the protective film on both sides of the two acrylic casings.



2. Place the **acrylic shell** onto the **screen** as shown in the **picture**, and **align the screw holes**.

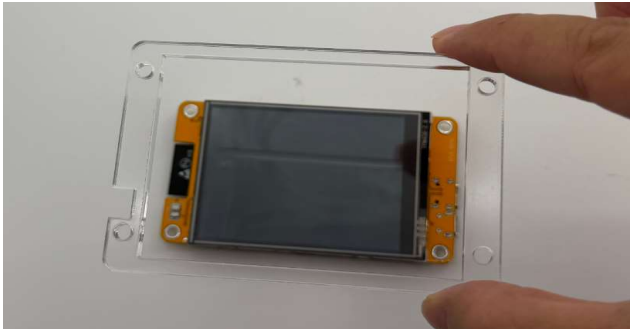

3. Use the **M3x7 screws**(the **longer** ones) and the **M3x5 brass standoffs** to secure the **acrylic shell** to the **screen** at the **four corners**, as shown in the **picture**.



4. Place the **acrylic backplate** as shown in the **picture**, then secure the **four corners** with **M3x6 screws**(the **shorter** ones) to **complete the installation**.

