


MUENCHEN ATIS	123.130	MUENCHEN APRON 1	121.780
MUENCHEN TOWER	118.705, 119.405, 120.505, 342.100	MUENCHEN APRON 2	121.710
MUENCHEN GROUND	121.830, 121.980	MUENCHEN APRON 3	121.930

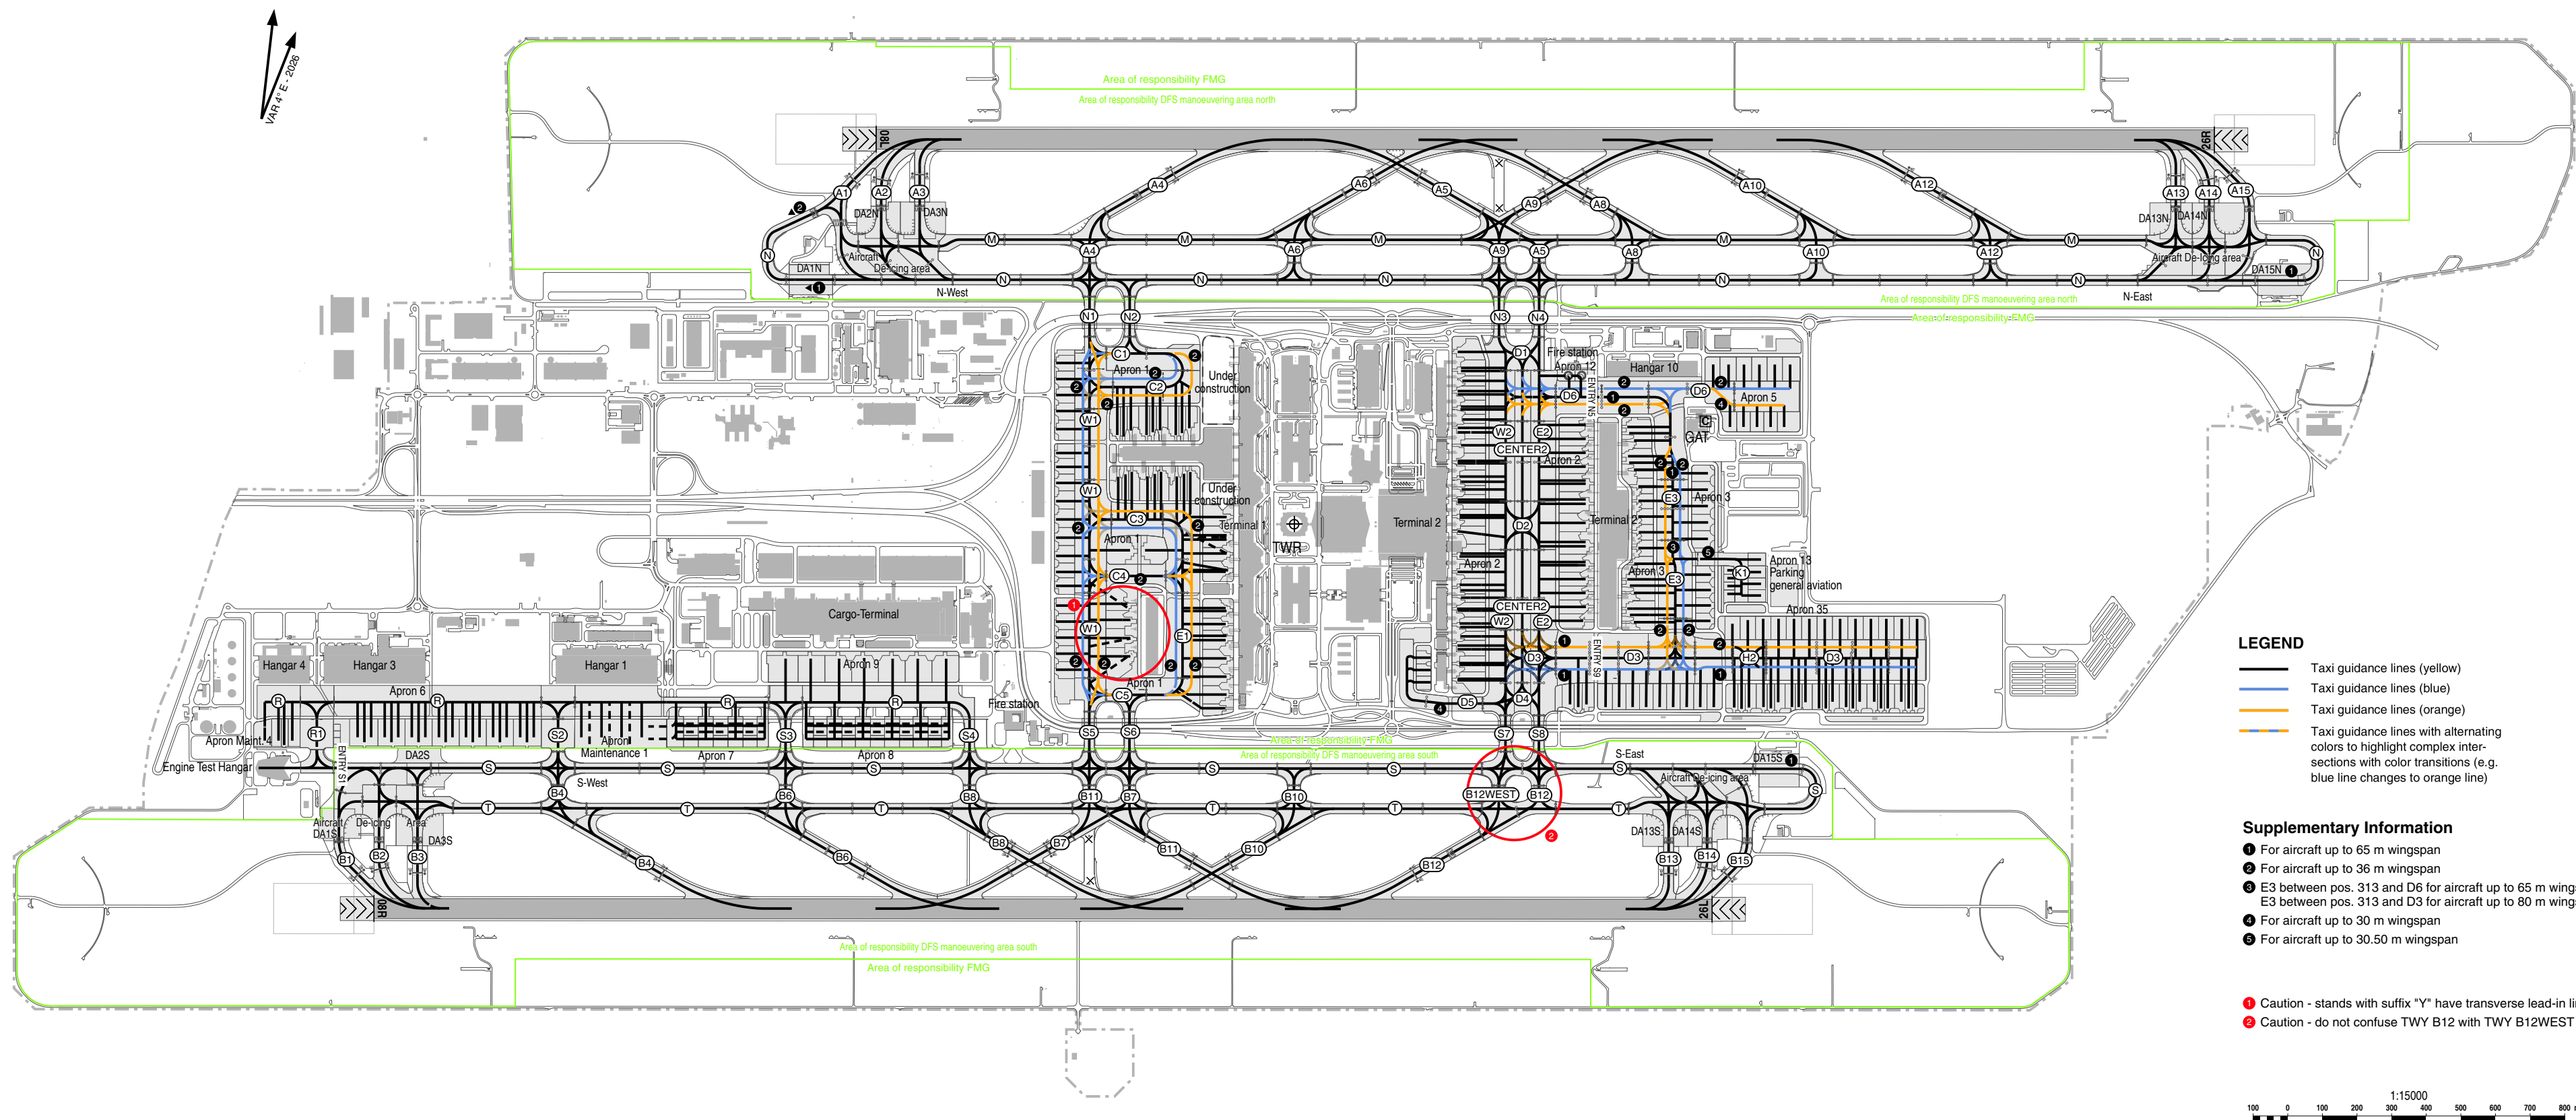

AIRCRAFT PARKING/DOCKING CHART - ICAO

MUENCHEN ATIS	123.130	MUENCHEN APRON 1	121.780
MUENCHEN TOWER	118.705, 119.405, 120.505, 342.100	MUENCHEN APRON 2	121.710
MUENCHEN GROUND	121.830, 121.980	MUENCHEN APRON 3	121.930

ADVANCED VISUAL DOCKING GUIDANCE SYSTEM (A-VDGS)

Procedure and safety information:

- Aircraft shall not enter a stand when "HOLD" is displayed.
- Aircraft shall not enter the stand unless the running/floating arrows are displayed and the displayed aircraft type matches the approaching aircraft.
- Aircraft shall not proceed further than the (first) passenger boarding bridge or stairs unless the running/floating arrows have been superseded by the closing rate bar.
- In case of malfunction, uncertainty or concerns, aircraft shall hold and contact Apron Control for further information and assistance.
- All installed A-VDGS are from the manufacturer ADB Safegate. The figures shown here only represent exemplary key indications of the pilot display during normal operations. Depending on the actual installed model and configuration, the pilot display may look different.



Aircraft shall hold position and not enter the stand (red steady message). The stand is not reported clear and not activated.



Yellow running/floating arrows indicate that the system is scanning for approaching aircraft. If the displayed aircraft type matches the approaching aircraft, the aircraft may enter the stand.



The running/floating arrows have been superseded by a yellow closing rate bar/centre line indication. The aircraft position in relation to the centre line and stop position is displayed in yellow. Distance to go information is provided. The direction to turn for azimuth guidance is displayed as red flashing arrow.



The correct stop position has been reached and a red steady message, "STOP" message is displayed.

Aircraft parking stands with A-VDGS:

103, 103A/B, 104, 104A/B, 105, 105A/B, 106, 106A/B, 107, 107A/B, 108, 108A/B, 110, 111A/B, 112, 113A/B/X, 115A/B, 116, 117A/B, 118, 119, 120, 121, 135, 155, 161, 161Y, 162, 163, 163Y, 164, 164Y, 181, 182, 183, 184, 185, 186, 187, 188, 189, 201, 202A/B, 203, 204A/B, 205A/B, 206, 207A/B, 208, 209A/B, 210A/B, 211, 212A/B, 215A/B, 214, 215A/B, 216, 217A/B, 218, 219A/B, 220A/B, 221, 222A/B, 223A/B, 224A/B, 232, 233, 234, 244, 245, 246, 247, 248A/B, 249A/B, 250, 251A/B, 252A/B, 253, 254, 255, 256, 257, 301, 301A/B, 302, 302A/B, 308, 309, 310, 311, 312, 313, 317, 317A/B, 318, 318A/B, 352, 352A/B, 353, 353A/B, 354, 354A/B, 355, 355A/B, 356, 356A/B, 371, 371A/B, 372, 372A/B.

PARKING POSITIONS

Frequency "Munich Apron":

Apron 1, 6, 7, 8, 9, Maintenance 121.780
Apron 2, 12 121.710
Apron 3, 5, 13, 35 121.930

Hydrant system for underground refuelling is available at parking stands 101-121, 135, 155, 161-164, 181-189, 201-263, 301-318, 352-372, 901-907.

No hydrant system is available at parking stands 170-175, 191-195, 321-349, 511-595, Z1, Z2 and aprons 6, 7, 8, 13, M1. At this parking stands refuelling with fuel trucks.

Remotely operated PBB available at parking stand 218. See AIP AD 6.7

LEGEND

- Taxi guidance lines (yellow)
- Taxi guidance lines (blue)
- Taxi guidance lines (orange)
- Taxi guidance lines with alternating colors to highlight complex intersections with color transitions (e.g. blue line changes to orange line)

- Caution - stands with suffix "Y" have transverse lead-in lines
- Caution - do not confuse TWY B12 with TWY B12WEST

