Ex1 5G.m | untitled2.m


/MATLAB Drive/untitled2.m

```
clear;
clc;
close all;

% System Parameters
totalBandwidthHz = 1e6;
fdmaChannelHz = 200e3;
tdmaSlots = 8;
processingGain = 64;
targetSIRdB = 7;

% Calculate User Capacity
```

Figure 1 | Figure 2 | Figure 3

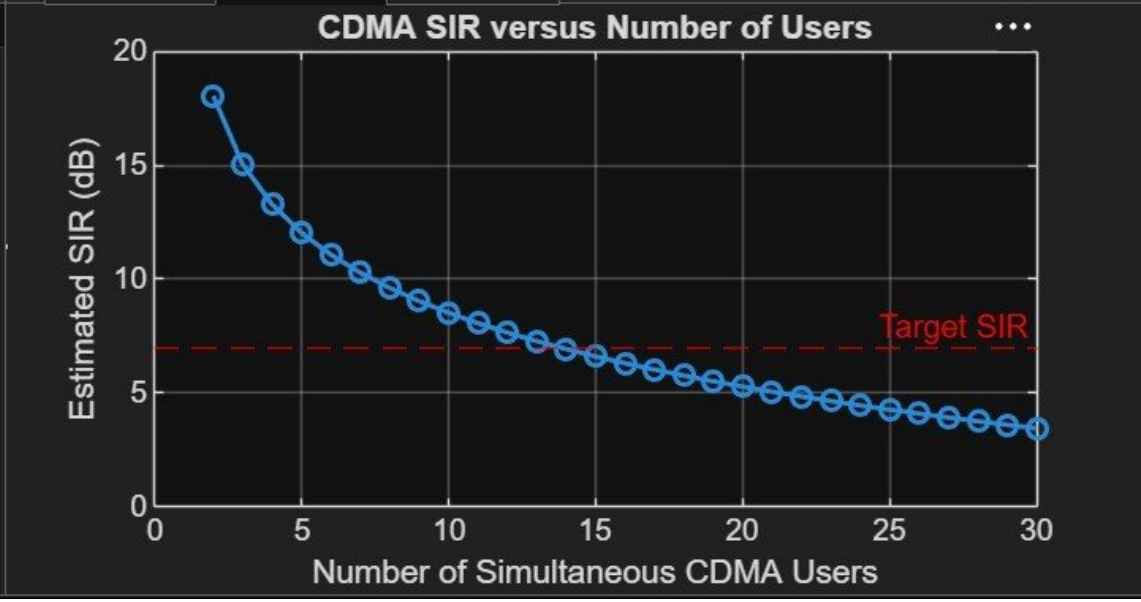

Ex1 5G.m × untitled2.m ×

/MATLAB Drive/untitled2.m

```
clear;
clc;
close all;

% System Parameters
totalBandwidthHz = 1e6;
fdmaChannelHz = 200e3;
tdmaSlots = 8;
processingGain = 64;
targetSIRdB = 7;

% Calculate User Capacity
```

Figure 1 × Figure 2 × Figure 3 ×

