


BATHSHEVA LONDON

Atelier

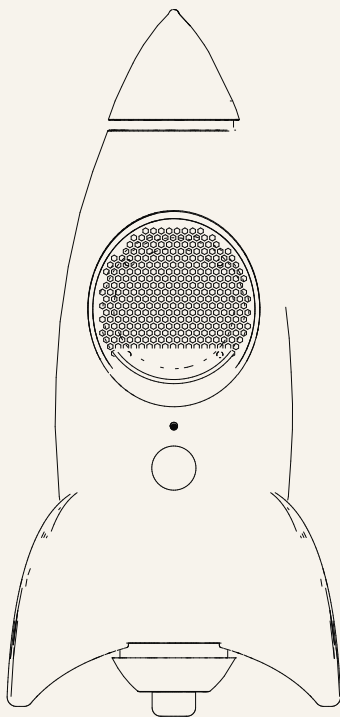

Provisional illustration. Pending production CAD confirmation.

Welcome


Thank you for choosing Atelier.

Every Atelier is finished by hand, in lacquer and brass.

In the box


- Atelier
- USB-C to USB-C cable
- This booklet

Getting to know Atelier

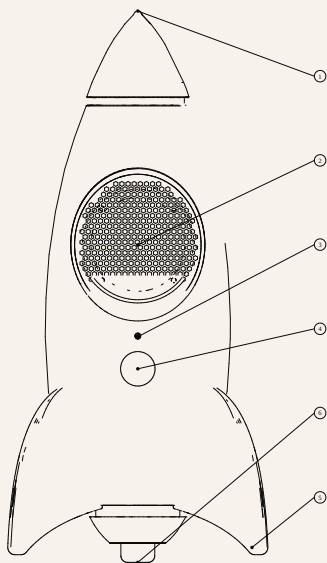

1. Nose cone
2. Grille
3. LED
4. Knob
5. Fins
6. Foot

Getting to know Atelier

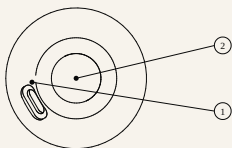

1. USB-C port
2. Foot

Set Atelier down gently, straight down onto the fins and foot rather than tipping it into place.

Charging

The USB-C port sits on the underside of the collar, angled clear of the table, so Atelier charges standing upright.

1. Plug the USB-C cable into the port in the collar.
2. Plug the other end into a USB-C power source.

While charging and switched off, the LED pulses slowly. Once full, it stays solid until you unplug the cable. See the LED guide on page 6 for every pattern.

Charge time: charge time hours: TBD hours from empty. Can play while charging: can play while charging: TBD.

Power and pairing

Turn on

Hold the knob for 2 seconds.

Turn off

Hold the knob for 2 seconds again.


The LED shows Atelier is awake: solid for 3 seconds when it connects, then off. It stays off while playing, so a dark LED during music is normal, not a fault.

Pairing

1. Hold the knob for 5 seconds until the LED blinks quickly.
2. On your phone or player, open Bluetooth settings and choose Atelier.
3. Once connected, the LED goes solid for 3 seconds, then off.

If Atelier does not appear, move your device closer and try again. Multipoint (more than one device connected at once):
multipoint: TBD.

Controls

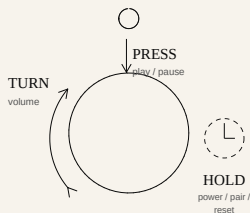

One knob does everything. Turn it, press it, or hold it.

Quick reference

Action	Result
Turn	Volume up or down
Press	Play or pause
Double press	Next track
Hold 2 seconds	Power on or off
Hold 5 seconds	Enter pairing mode
Hold 10 seconds	Factory reset

Factory reset clears any paired devices and returns Atelier to its first-use state.

LED guide

When	LED does
Power on	Solid for 1 second
Power off	2 slow blinks
Pairing mode	Fast blink
Just connected	Solid for 3 seconds, then off
Playing	Off
Charging, switched off	Slow pulse
Fully charged	Solid until unplugged
Battery low	3 slow blinks, repeated every 60 seconds
Factory reset	3 fast blinks

Every pattern above is proposed and pending confirmation that the LED module and firmware can drive it.

Placement and care

Stand Atelier on a flat, stable surface. The three fins and centre foot are designed to hold it upright there.

Keep it away from table edges, and away from water or damp surfaces. Do not stand it on a slope or on soft or uneven ground, such as a cushion or rug, where it could tip.

Caring for the lacquer and brass

Wipe the lacquer with a soft, dry or barely damp cloth. Do not use solvents, abrasives, or household cleaning sprays: they will dull the finish.

The brass will develop a natural patina over time. That is normal, and part of the material. Do not use metal polish or tarnish remover on it.

Unplug Atelier before cleaning it.

Safety and battery

Keep Atelier away from open flame and standing water. Do not immerse it.

Do not open, disassemble, or attempt to repair Atelier yourself. There are no user-serviceable parts inside.

Use only the supplied cable, or a replacement of the same type, to charge it. Charging temperature range: **charging temperature range: TBD**. Do not leave it charging unattended for long periods.

Operating temperature: **operating temperature c: TBD**.

At end of life, recycle Atelier through a WEEE collection point rather than general waste. It contains a built-in battery.

Troubleshooting

Symptom	Likely cause	Try this
Won't turn on	Battery empty	Charge for a while, then try again
Won't pair	Already paired elsewhere	Turn off Bluetooth on the other device, or forget Atelier and pair again
No sound	Volume low, or wrong output selected	Turn the knob to raise volume; check your device's output
LED not responding	Held for the wrong length of time	Hold firmly and count the full 2, 5 or 10 seconds
Sound cuts out	Out of range, or another device interfering	Move closer, or away from other Bluetooth or Wi-Fi devices

If none of this helps, see Warranty and support.

Specifications, warranty and support

Height	approx. 288 mm
Body diameter	approx. 97 mm
Width across fins	approx. 136.0 mm
Weight	1.8 kg
Bluetooth version	bluetooth version: TBD
Range	range m: TBD
Codecs	codecs: TBD
Stereo pairing	stereo pairing support: TBD
Battery capacity	battery capacity mah: TBD
Playtime	playtime hours: TBD
Charge time	charge time hours: TBD
Output power	output power w: TBD
Input rating	input rating: TBD
Charge port	USB-C, located in the collar on the underside

Dimensions and weight are prototype/CAD figures and may change slightly in production.

Warranty

2 years from date of purchase, covering manufacturing defects under normal use. This does not affect your statutory rights.

Support

support email: TBD

MANUFACTURED BY BATHSHEVA LONDON

Regulatory

manufacturer address: TBD

UK/EU responsible person: uk eu responsible person: TBD

Contact: electronic contact: TBD

Compliance marks: marks: TBD

Regulatory identifiers: regulatory identifiers: TBD

This product contains a built-in rechargeable battery. Do not dispose of it in household waste. Recycle it through a WEEE collection point or an authorised recycler.

BATHSHEVA LONDON