

# Install OpenWrt on your Atlas Media Router

*[This zine is still a draft. Last updated July 27, 2023.]*

The Iffy Books router challenge is complete! We have a working build of OpenWrt that you can install on the Atlas Media routers we've been hacking away at for the past few months! Retry and Jim are sharing the prize, which we'll award at [Router Hack Day III](#) on Saturday, July 29th. We should also thank Anthony, who helped with initial research and did a great job spreading the word about the project.

This post will show you how to install Retry's build of OpenWrt on your Atlas Media AC1200 router (actually a rebranded Tenda FH1205 router). This project doesn't require any soldering, but you will need to disassemble the router's case and connect a couple wires to the board.

If you're interested in soldering wires to the router's serial pinout to access the serial shell, check out our blog post 'Notes from Router Hack Day II.' That post will also get you started on decompressing the router's stock firmware:

• <https://iffybooks.net/router-hack-day-2>

For background info and instructions on gaining telnet access using the router's stock firmware, check out Jim's progress report from March:


- <https://iffybooks.net/challenge-router-progress>

For hardware specs and manuals, check out the event page for our first Router Hack Day event:

• <https://iffybooks.net/event/router-hack-day>

# Getting started

- Download the OpenWrt firmware from the following URL:  
<https://iffybooks.net/AtlasMediaOpenWrt.trx>
- Go to your computer's wi-fi settings and turn off wi-fi completely. Here's what that looks like in Ubuntu Linux:

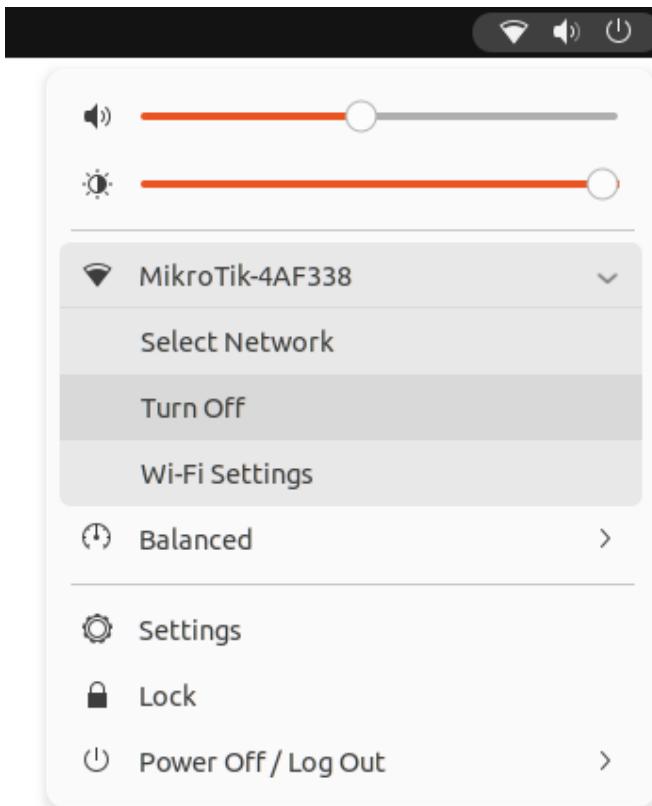

- Connect your Atlas Media router to your computer with an ethernet cable. Then attach the power cable.




## Give yourself a static IP address

Next you'll assign yourself a static IP address on the network. Here's why this step is necessary: In order to flash new firmware to your router, you'll need to boot into CFE (Common Firmware Environment) mode, a bare-bones version of the router's OS. CFE mode doesn't offer DHCP (Dynamic Host Configuration Protocol), which is the typical way a router assigns IP addresses to connected devices.

## **Instructions for Ubuntu:**

- Go to **Settings > Network**. Under **Wired**, make sure your connection is turned **on**. Then click the **gear** on the right side.

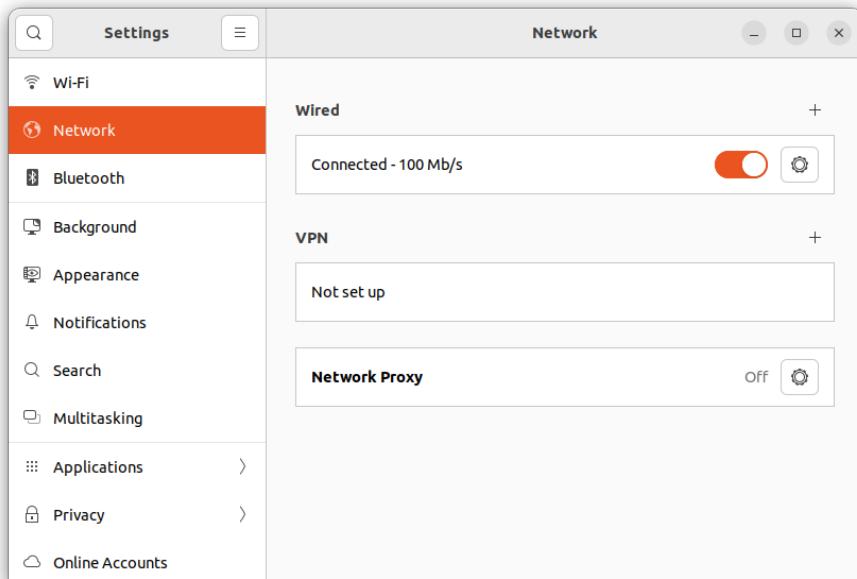

- Go to the **IPv4** tab and make the following changes:
  - Switch **IPv4 Method** to **Manual**.
  - Under **Address**, enter the IP address **192.168.1.X**, replacing X with a number from 0 to 255.
  - Set **Netmask** to **255.255.255.0**.

Cancel **Wired** Apply

Details Identity **IPv4** IPv6 Security

**IPv4 Method**  Automatic (DHCP)  Manual  Link-Local Only  Disable  
 Shared to other computers

**Addresses**

Address	Netmask	Gateway
192.168.1.240	255.255.255.0	

**DNS** Automatic

- Click **Apply** to save your changes.

### ***Instructions for macOS:***

- Go to **System Preferences** > **Network**. Find your Ethernet interface in the left column and click on it.
- Switch **Configure IPv4** to **Manually**.
- For **IP Address**, enter **192.168.1.X**, replacing X with a number from 0 to 255.
- For **Subnet Mask**, enter **255.255.255.0**.
- Click **Apply** to save your changes.

### ***Instructions for Windows:***

[Coming soon]


# Set up your USB serial interface

Your Atlas Media router runs at 3.3V, so you'll want to use a USB serial interface that matches.

- Find your **alligator-to-jumper wire** and connect the jumper end to the **GND** pin on your USB serial interface.



- Attach the **port** end of a **port-to-plug jumper wire** to the **Tx** pin.

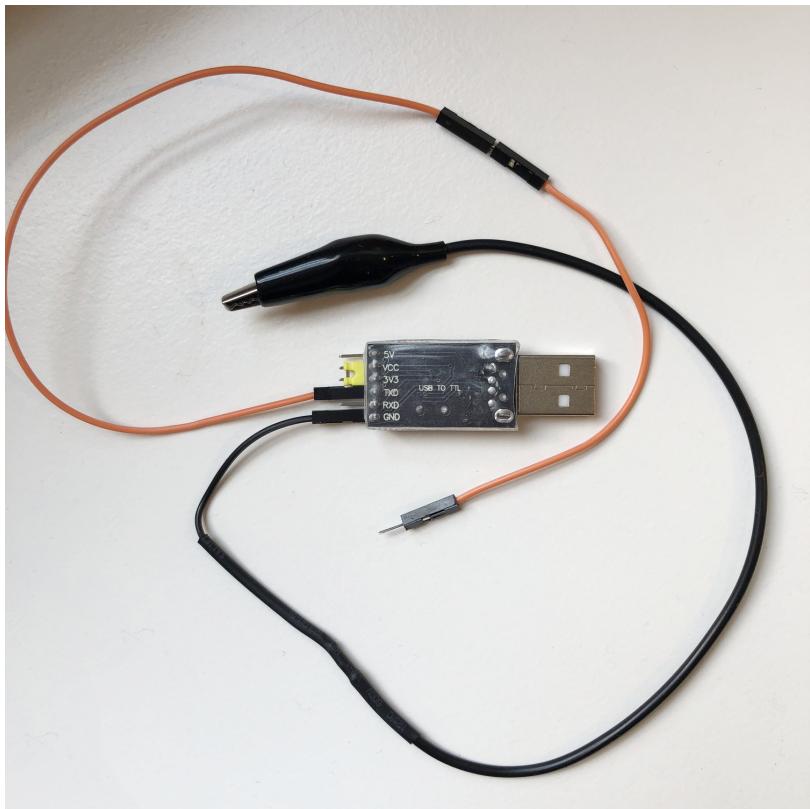


# Remove the router's faceplate

- Disconnect the power cable and Ethernet from your router.
- Find the screw on the bottom of your router, using a **Phillips-head screwdriver** to pierce through the label. Unscrew the screw and remove the base.




- With the wider side of the router facing left, pry off the front panel of the case. It's easiest to start at the top corner on the narrow end.

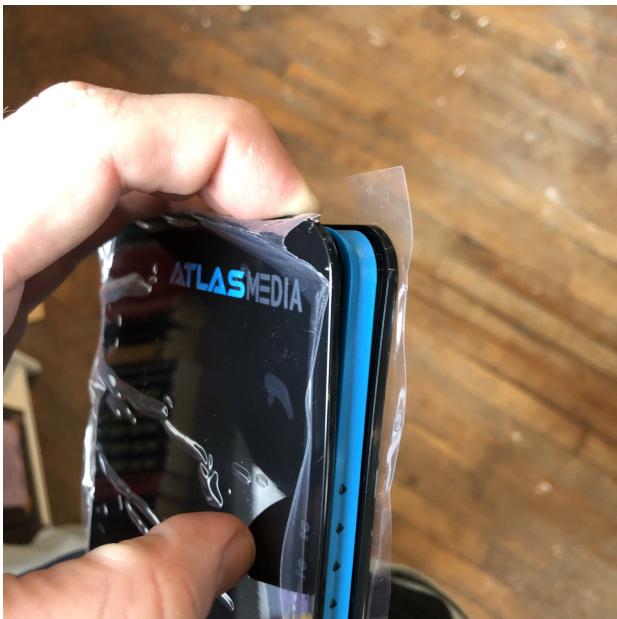

Here's what the router looks like inside:



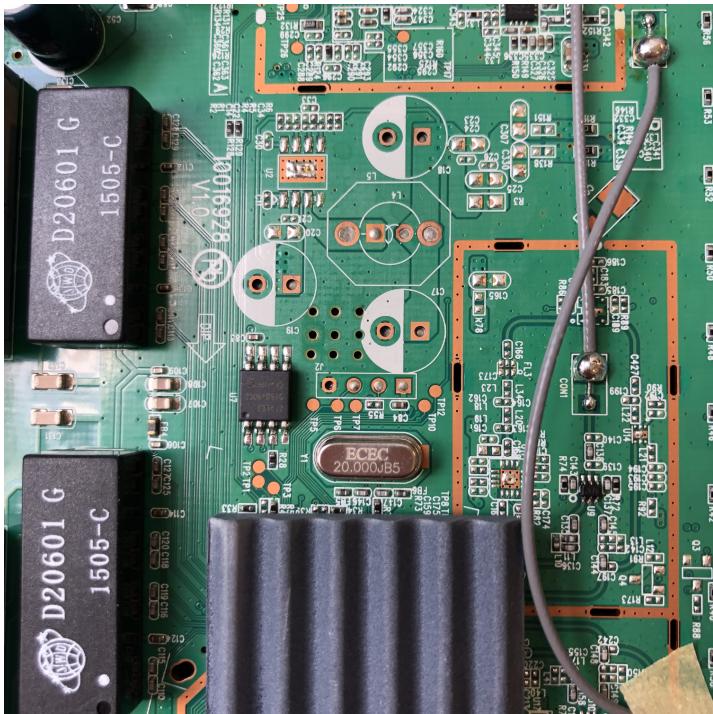


## Install Minicom and test your USB serial interface

- In Ubuntu, open a terminal window and run the following command to install Minicom:

```
sudo apt-get install minicom
```


- Attach the USB serial interface to a USB port on your computer.

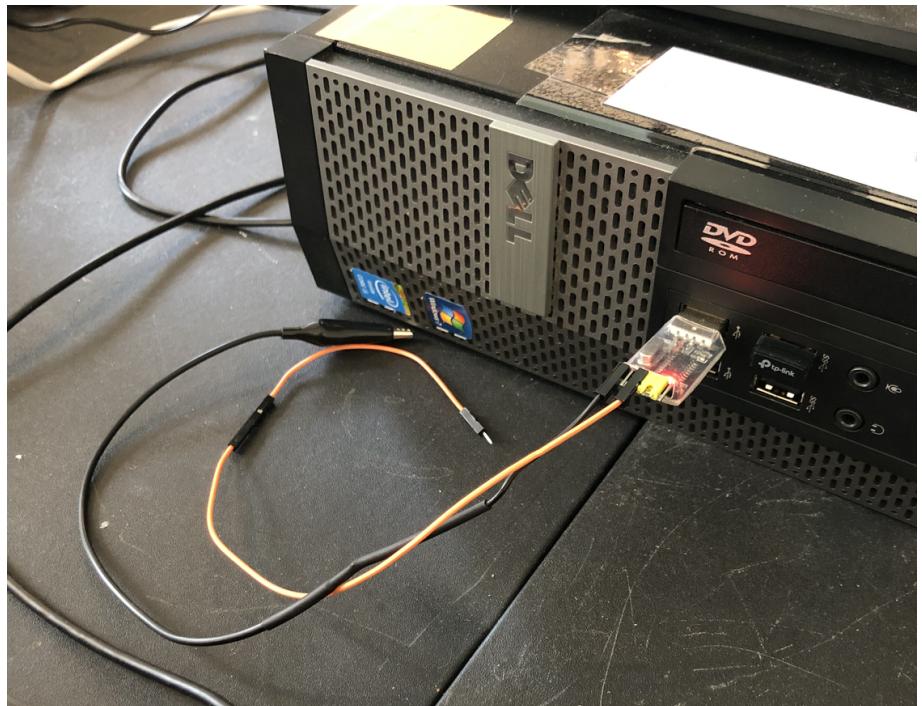

- Open a terminal window and run the following command to launch a Minicom session:

```
minicom -D /dev/ttyUSB0 -c on
```

- Next you'll test your USB serial adapter. Touch the plug end of your Tx jumper wire to the Rx pin, then type a few characters in the minicom window. If the characters appear onscreen, your USB serial interface is working.

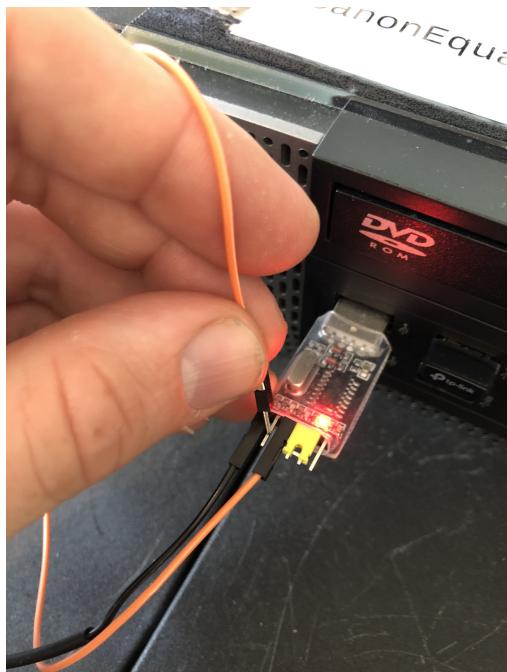


```
iffybooks@Iffy-Books-11: ~
Welcome to minicom 2.8
OPTIONS: I18n
Port /dev/ttyUSB0, 13:22:56
Press CTRL-A Z for help on special keys
abcdefg
```


## Boot your router into CFE mode

- Reconnect the Ethernet cable to your router.

- Attach the alligator clip from your USB serial interface to the exposed metal on one or both of the router's external buttons.

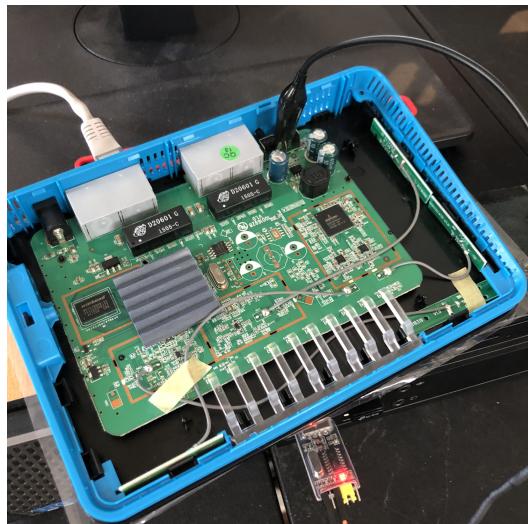


- Touch the plug end your **Tx** jumper wire to the **Rx** pin hole indicated in the photo below. Hold it there firmly for the next step.

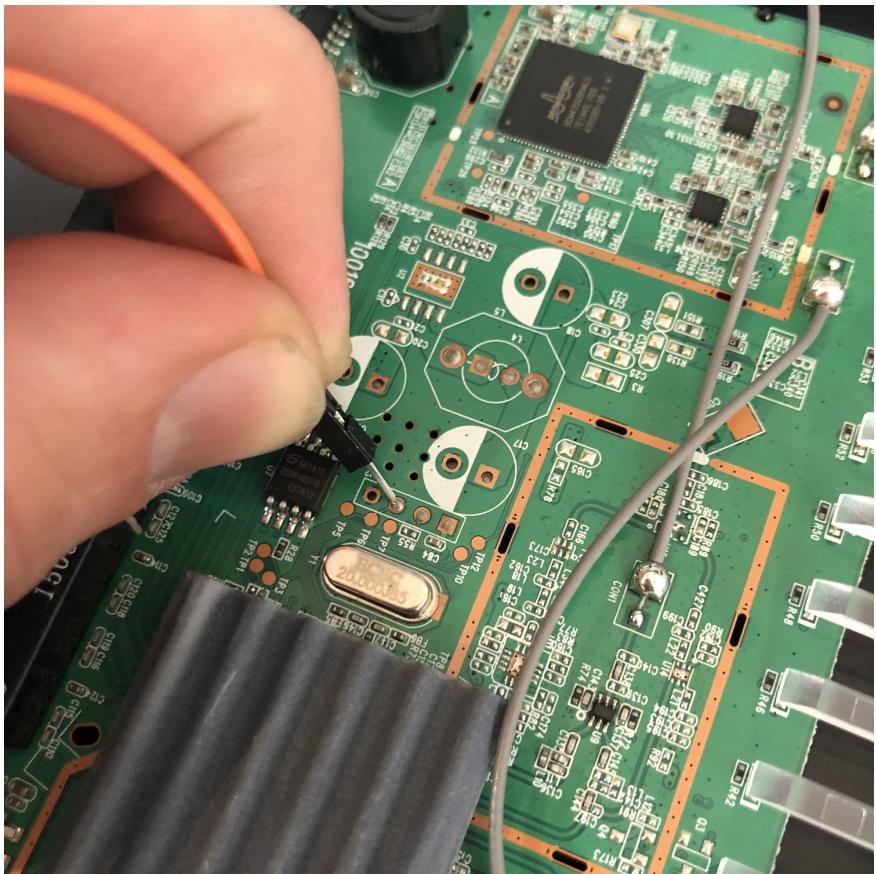

- Make sure your Minicom terminal window is still open. Plug in your router and immediately press **ctrl+C** on your keyboard repeatedly. You'll need to start less than a second after the router's lights turn on.

- Open your browser and go to the following address, using **http** at the beginning of the URL instead of "https", which your browser may use by default: **http://192.168.1.1**


If you're in CFE mode, you'll see a page like the one below. If you don't, skip back to the previous step and try again.

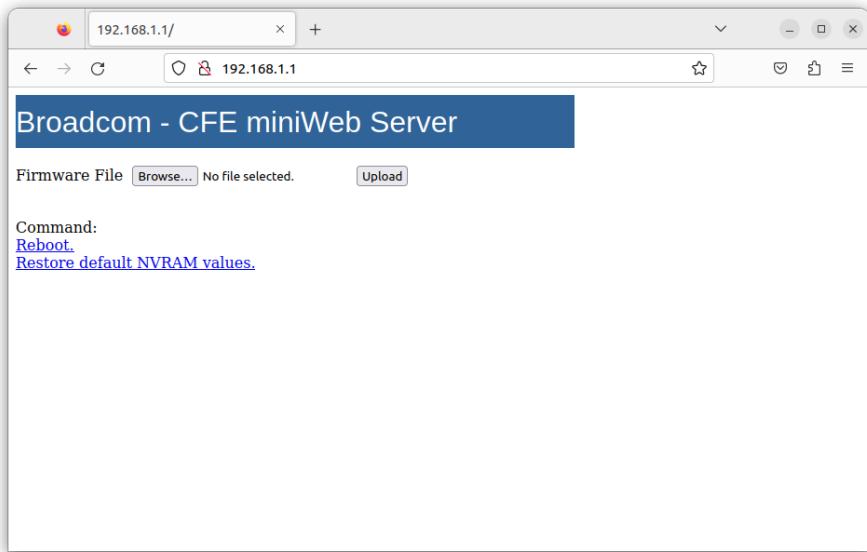


- Click **Browse ...** and select the firmware file, **AtlasMediaOpenWrt.trx**.
- Click **Upload** to start uploading the file.



- When you see the page below, it means your firmware has been uploaded successfully.

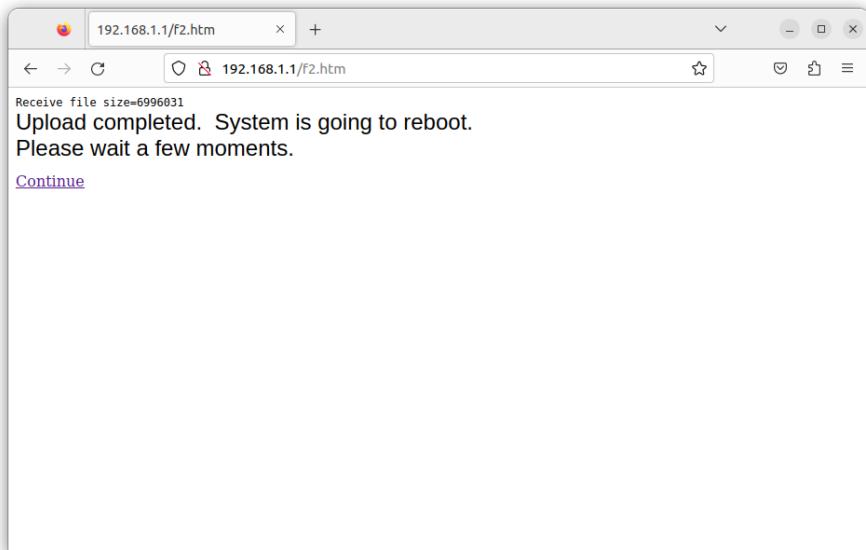

- Wait a minute or two for OpenWrt to finish setting up, then go the following address in your browser: <http://192.168.1.1>

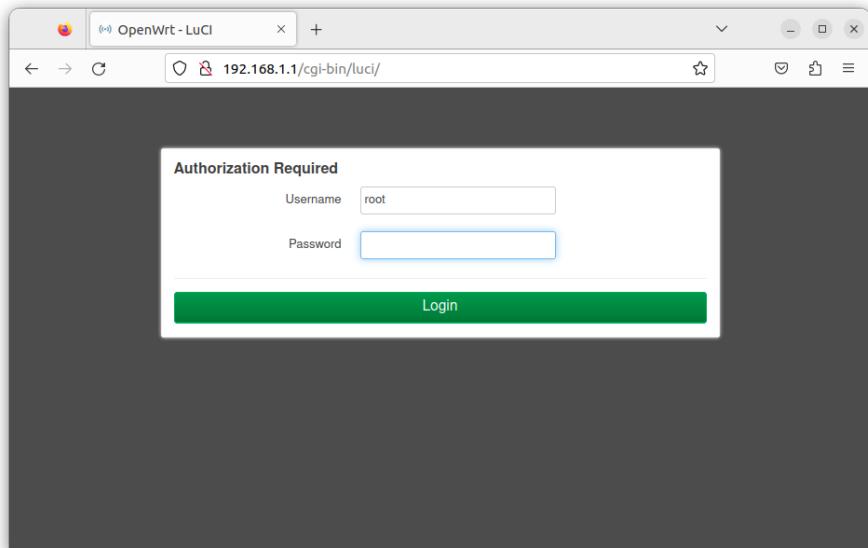

- There's no password by default. Press enter to log in.
- Set a new password.

A screenshot of the OpenWrt LuCI web interface. The title bar says "OpenWrt Status System Network Logout REFRESHING". A yellow banner at the top left says "No password set! There is no password set on this router. Please configure a root password to protect the web interface." with a "Go to password configuration..." button. Below the banner is a "Status" section with a "System" subsection. It lists the following information:

Hostname	OpenWrt
Model	Unknown Board
Architecture	Broadcom BCM5357
Target Platform	bcm47xx/mips74k
Firmware Version	OpenWrt SNAPSHOT r23422-e0fb38f4ee / LuCI Master git-23.174.36339-9535d54
Kernel Version	5.15.118
Local Time	2023-06-23 21:09:15

The bottom of the page shows the URL "192.168.1.1/cgi-bin/luci/admin/system/admin".

- If your home router (or something else) is using the IP address 192.168.1.1, you'll need to change your router's LAN IP address. Change the IP address to 192.168.1.X, where X is a number <= 255, but not 1.

Details at the following URL: [https://openwrt.org/docs/guide-user/network/openwrt\\_as\\_routerdevice](https://openwrt.org/docs/guide-user/network/openwrt_as_routerdevice)

- Before reassembling your router's case, you may want to drill holes in it to provide access to the ground and Rx pins in case you want to re-flash the firmware later.
- Remove the alligator clip from the router.
- Snap the case back together. (You may want to disconnect power while you do this.)
- Screw on the router's base.

**Now the fun begins! If you make something cool with OpenWrt on your Atlas Media router, send an email to [iffybooks@iffybooks.net](mailto:iffybooks@iffybooks.net) and let us know.**