

6U Wall-Mount Rack Enclosure



Actual product may vary from photos

User Manual

SKU#: RK616WALM

For the latest information and specifications visit
www.startech.com/RK616WALM

Use of Trademarks, Registered Trademarks, and other Protected Names and Symbols

This manual may make reference to trademarks, registered trademarks, and other protected names and/or symbols of third-party companies not related in any way to StarTech.com. Where they occur these references are for illustrative purposes only and do not represent an endorsement of a product or service by StarTech.com, or an endorsement of the product(s) to which this manual applies by the third-party company in question. Regardless of any direct acknowledgement elsewhere in the body of this document, StarTech.com hereby acknowledges that all trademarks, registered trademarks, service marks, and other protected names and/or symbols contained in this manual and related documents are the property of their respective holders.

Warning Statements

Read the entire manual and make sure that you understand the instructions before you start to assemble and use this product.

Wall structures vary, and it is important to make sure that the type of wall structure and mounting hardware that you are using will properly support the mounted equipment. Failure to do so might result in personal injury and/or equipment damage. The wall structure should be capable of supporting at least four times the weight of the mounted equipment.

This enclosure is extremely heavy. Never attempt to move or lift this enclosure without assistance.

Tipping hazard! Extending multiple components from this enclosure increases the chance that the enclosure will tip over. To avoid this risk, do not extend more than one component from the enclosure.

Do not place any items on this enclosure and do not stack the enclosure on top of another enclosure.

Keep liquid away from this enclosure.

Make sure that you install the enclosure in an area that can handle the combined weight of the enclosure and the equipment that you intend to place inside of the enclosure.

This product requires an earth ground connection. Do not use this product without an earth ground connection.

Before you add equipment to this product, make sure that you have properly assembled, installed, and mounted it to a wall.

When you load equipment into this product, load the heaviest equipment in the bottom section of this product first. Continue loading equipment in a descending order of weight, so that the lighter equipment is installed in the upper sections of this product and the heavier items are on the bottom.

Varningsmeddelanden


Läs hela manualen och se till att du förstår instruktionerna innan du börjar montera och använda produkten.

Eftersom väggstrukturer varierar är det viktigt att kontrollera att väggstrukturen och monteringsutrustningen som du använder klarar av den monterade

Table of Contents

Warning Statements	2
Product Diagram	11
Product Information	12
Package Contents	12
Requirements.....	12
Grounding the Wall-Mount Enclosure	13
Locking or Unlocking the Front Door	14
Removing the Side Panels	14
Replacing the Side Panels.....	15
Removing the Cable Access Cover	15
Replacing the Cable Access Cover	16
Reversing the Front Door.....	17
Adjust the Depth of the Mounting Rails.....	18
Use the Mounting Rail Tapped Holes.....	19
Mount the Enclosure to the Wall	20
Installing Equipment	23

Product Diagram

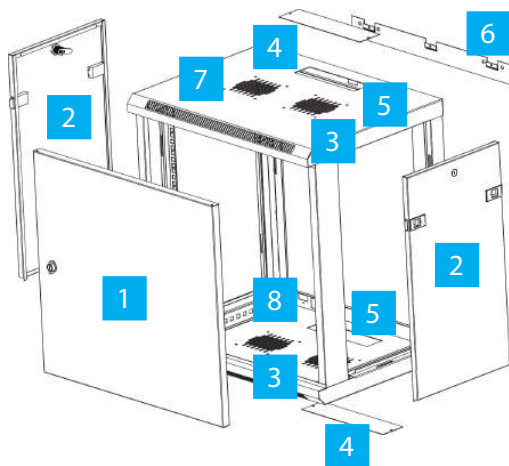

1	<i>Front Door</i>	5	<i>Cable Access Openings (x 2)</i>
2	<i>Side Panels (x 2)</i>	6	<i>Mounting Plate</i>
3	<i>Vents</i>	7	<i>Top Panel</i>
4	<i>Cable Access Covers (x 2)</i>	8	<i>Bottom Panel</i>

Product Information

Package Contents

- Wall-Mount Enclosure x 1
- 1U Shelf (CABSHELFV1U) x 1
- Roll of Hook-and-Loop Fastener x 1
- 12-24 Cage Nuts x 24
- 12-24 Screws x 24
- Door Keys x 2
- Side Panel Keys x 2
- Cup Washers x 24
- Pre-installed M4x8 mm self-tapping screws x 3
- User Manual x 1

Requirements


- Phillips™ type screwdriver
- Appropriate tools and mounting hardware for the type of wall you're using

Note: *The images in this manual depict RK920WALM. This product features a different rack height and depth, and has two posts instead of four.*

Grounding the Wall-Mount Enclosure

Warning! This product must be grounded. Do not use this product without an earth ground connection.

1. Use an **M6 Screw** to attach a **Grounding Wire** to the front or rear **Grounding Point** on the **Wall-Mount Enclosure**.

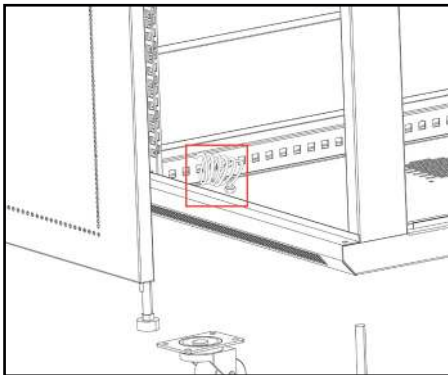

Installing the Grounding Wire


2. Route the **Grounding Wire** under the frame of the **Wall-Mount Enclosure** and connect the **Grounding Wire** to your facility's earth ground connection.

Locking or Unlocking the Front Door

- To lock or unlock the front door of the enclosure, insert one of the provided **Door Keys** in the **Lock** on the Front Door on the **Wall-Mount Enclosure** and turn the key clockwise or counterclockwise.

Removing the Side Panels

1. If the **Side Panels** are locked, use one of the provided **Side Panel Keys** to unlock the **Side Panels**.
2. Pull the two **Tabs** on the **Side Panel** towards the center of the panel.

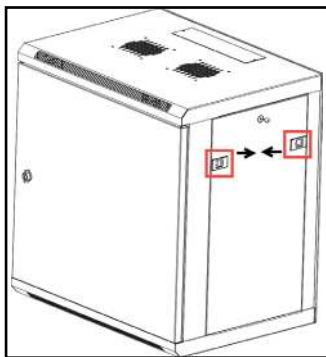

Side Panel Tabs

3. While pulling the two **Tabs**, lift the **Side Panel** free from the **Wall-Mount Enclosure**. Be careful and use proper lifting techniques when removing the **Side Panels** from the **Wall-Mount Enclosure**.
4. Repeat steps 1 to 3 to remove the other **Side Panel**.

Replacing the Side Panels


1. Place one of the **Side Panels** in the groove at the bottom of the **Wall-Mount Enclosure**.
2. Pull the two **Tabs** on the **Side Panel** towards the center of the panel.
3. Push the top part of the **Side Panel** into the **Wall-Mount Enclosure** and release the **Tabs**.
4. Use one of the provided **Side Panel Keys** to lock the **Side Panel**.

Removing the Cable Access Cover

Both the top and bottom panels of the enclosure have cable access covers that you can remove to access and manage your cables.

1. Use a **Phillips Head Screwdriver** to remove the four **Screws** securing the **Cable Access Cover**.

2. Pull the **Cable Access Cover** away from the **Wall-Mount Enclosure**.

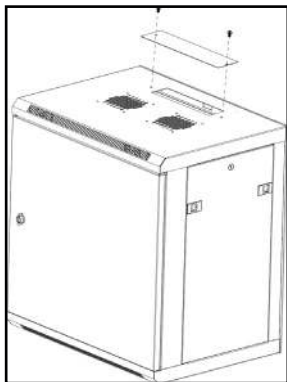

Removing the Cable Access Cover


Replacing the Cable Access Cover

1. Align the **Cable Access Cover** with the **Cable Access Opening**.
2. Use a **Phillips Head Screwdriver** to insert the four **Screws** through the **Cable Access Cover** and into the **Wall-Mount Enclosure**.
3. Tighten the **Screws**, being careful not to over-tighten.

Reversing the Front Door

To accommodate different rack configurations, you can reverse the **Front Door** of the **Wall-Mount Enclosure** so that it opens to the left or right of the **Wall-Mount Enclosure**. The **Front Door** is attached to the **Wall-Mount Enclosure** with **Levers** that are located at the top and bottom of the **Front Door**.

1. In the top corner of the inside of the **Front Door**, pull the lever down and move the top corner of the **Front Door** away from the **Wall-Mount Enclosure**.
2. In the bottom corner of the inside of the **Front Door**, pull the lever up and remove the **Front Door** from the **Wall-Mount Enclosure**.

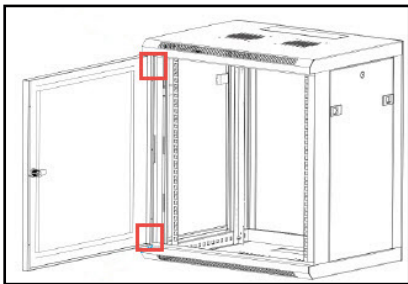

Lever Location

3. Flip the **Front Door** so that the **Levers** are located on the opposite side.
4. Position the **Front Door** so that the top and bottom **Levers** are aligned with the washers located in the hinge area of the **Wall-Mount Enclosure**.


5. In the top corner of the **Front Door**, pull the **Lever** down and release it into the washer and hole in the **Wall-Mount Enclosure**.
6. In the bottom corner of the **Front Door**, pull the **Lever** up and release it into the washer and hole in the **Wall-Mount Enclosure**.

Adjust the Depth of the Mounting Rails

The **Mounting Rails** come pre installed in the **Wall-Mount Enclosure**. The **Mounting Rails** can be adjusted independently in 3/4 inch (20 mm) increments to accommodate different sizes of equipment.

Warning! *Remove all equipment before adjusting the Mounting Rails.*

1. Use a **Phillips Head Screwdriver** to remove the **Screw** and **Cage Nut** located in the upper and lower corners of the **Mounting Rails**.
2. Install the **Cage Nuts** at the desired depth, along the upper and lower **Mounting Rails**.
3. Slide the **Mounting Rail** to the depth of the **Cage Nuts** and use a **Phillips Head Screwdriver** to install and tighten the **Screws** that you removed in step 1.

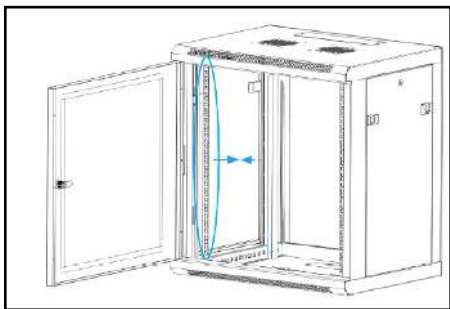


Adjusting the Mounting Rails

Use the Mounting Rail Tapped Holes

The **Mounting Rails** come pre installed with the **Cage Nut Holes** facing outward. However, the **Mounting Rails** can be adjusted so that you can use the **Tapped Holes** to install your equipment.

Warning! Remove all equipment before adjusting the **Mounting Rails**.

1. Use a **Phillips Head Screwdriver** to remove the **Screw** and **Cage Nut** located in the upper and lower corners of the **Mounting Rails**.
2. Change the location of the **Mounting Rails** so that the sides of the **Mounting Rails** with the **Tapped Holes** are facing the **Front Door**.

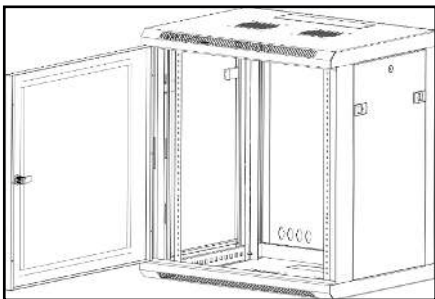

Flipping the Mounting Rails

3. To reattach the **Mounting Rails** to the **Wall-Mount Enclosure**, use a **Phillips Head Screwdriver** to install and tighten the screws that you removed in step 1.

Mount the Enclosure to the Wall

Warnings! Remove all equipment from the enclosure before you attempt to mount the enclosure to the wall.

Wall structures vary and it is important to make sure that the type of wall structure and mounting hardware that you are using will properly support the mounted equipment. Failure to do so might result in personal injury and/or equipment damage. The wall structure should be capable of supporting at least four times the weight of the mounted equipment.


*The **Wall-Mount Enclosure** weighs 32 lb. (14 kg) and can hold up to 198 lb. (90 kg) in weight.*

If you lack the necessary expertise to attach this product to the wall that you're using, contact a construction professional to install the enclosure or to provide specific mounting instructions for your wall structure.


Follow the appropriate steps for the type of wall that you're attaching the Wall-Mount Enclosure to and attach the Mounting Plate to the Wall.

Caution! The Wall-Mount Enclosure is extremely heavy and you should not attempt to lift and hang the enclosure without the assistance of other people.


1. Detach the **Mounting Plate** at the back of the **Wall-Mount Enclosure** by removing the **Three Pre-installed Screws** with a **Phillips Head Screwdriver**. These **Screws** will be used on a later step.

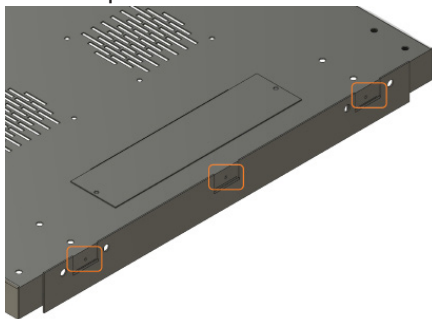

2. Fasten the **Mounting Plate** to the wall using the appropriate hardware and the **Four Mounting Holes**.

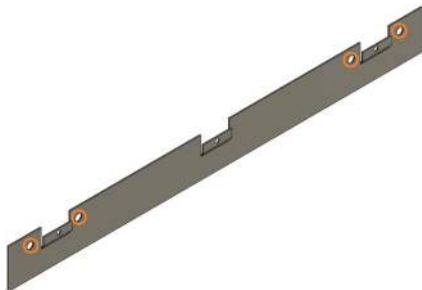

3. Attach the **Wall-Mount Enclosure** to the **Mounting Plate** by **Hanging** the **Wall- Mount Enclosure** onto the **Three Mounting Plate Hooks**. Fasten the enclosure using the **Three Screws** from **Step 1**.

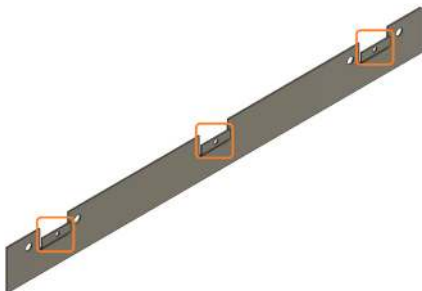

Installing Equipment

Warnings! Do not add equipment to the **Wall-Mount Enclosure** until the enclosure is securely attached to the wall.

When you load equipment into this product, load the heaviest equipment in the bottom rails first.

The **Wall-Mount Enclosure** comes with cage nuts and screws but the equipment you're installing may come with mounting hardware. Consult the documentation that came with the equipment to determine the best mounting hardware that you should use and how you should install it.

1. Decide where in the **Wall-Mount Enclosure** you want to install the equipment and insert the **Cage Nuts** in the **Mounting Rails**.
2. Line up the **Mounting Holes** on the equipment with the **Cage Nuts**.
3. Insert the **Screws** through the **Mounting Holes** on the equipment and into the **Cage Nuts**.
4. Tighten the **Screws** being careful not to over-tighten.

Warranty Information

This product is backed by a five-year warranty.

For further information on product warranty terms and conditions, please refer to www.startech.com/warranty.

Limitation of Liability

In no event shall the liability of StarTech.com Ltd. and StarTech.com USA LLP (or their officers, directors, employees or agents) for any damages (whether direct or indirect, special, punitive, incidental, consequential, or otherwise), loss of profits, loss of business, or any pecuniary loss, arising out of or related to the use of the product exceed the actual price paid for the product.

Some states do not allow the exclusion or limitation of incidental or consequential damages. If such laws apply, the limitations or exclusions contained in this statement may not apply to you.

Hard-to-find made easy. At StarTech.com, that isn't a slogan. It's a promise.

StarTech.com is your one-stop source for every connectivity part you need. From the latest technology to legacy products — and all the parts that bridge the old and new — we can help you find the parts that connect your solutions.

We make it easy to locate the parts, and we quickly deliver them wherever they need to go. Just talk to one of our tech advisors or visit our website. You'll be connected to the products you need in no time.

Visit www.startech.com for complete information on all StarTech.com products and to access exclusive resources and time-saving tools.

StarTech.com is an ISO 9001 Registered manufacturer of connectivity and technology parts. StarTech.com was founded in 1985 and has operations in the United States, Canada, the United Kingdom and Taiwan servicing a worldwide market.

Reviews

Share your experiences using StarTech.com products, including product applications and setup, what you love about the products, and areas for improvement.

StarTech.com Ltd.

45 Artisans Crescent
London, Ontario
N5V 5E9
Canada

StarTech.com LLP

4490 South Hamilton Road
Groveport, Ohio
43125
U.S.A.

StarTech.com Ltd.

Unit B, Pinnacle 15
Gowerton Road
Brackmills,
Northampton
NN4 7BW
United Kingdom

StarTech.com Ltd.

Siriusdreef 17-27
2132 WT
Hoofddorp
The Netherlands

FR: fr.startech.com

DE: de.startech.com

ES: es.startech.com

NL: nl.startech.com

IT: it.startech.com

JP: jp.startech.com