
SYSTEM DIAGRAM

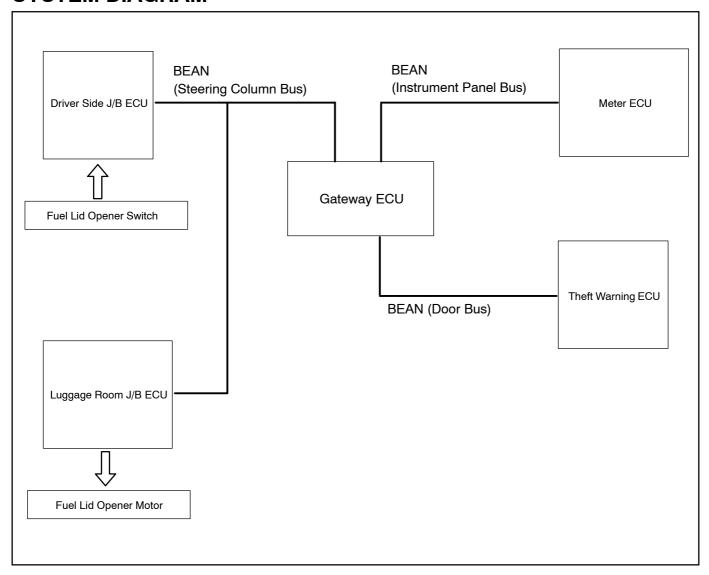

Sender	Receiver	Signal	Communication Line
Driver Side J/B ECU	Theft Deterrent ECU	Fuel lid opener switch signal	BEAN
Theft Deterrent ECU	Luggage Room J/B ECU	Fuel lid open output request signal	BEAN
Luggage Room J/B ECU	Meter ECU	Fuel opener activation signal	BEAN

05I2D-01