
## IGNITION OR STARTER SWITCH ASSY REPLACEMENT

190UR-01

HINT:

The installation procedures are the removal procedures in reverse order.

- 1. REMOVE INSTRUMENT PANEL UNDER COVER UB-ASSY NO.1 See page 71-6)
- 2. REMOVE[\$WITCH[BASE[HOLE[COVER[See[page[71-6]]
- 3. REMOVE[INSTRUMENT[PANEL[\$AFETY[PAD[\$UB-ASSY[NO.1[[See[page[71-6]]

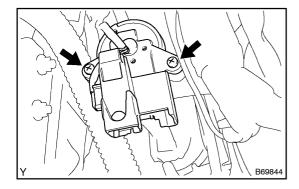

## 4. REMOVE IGNITION OR STARTER SWITCH ASSY

- (a) Disconnect the ignition switch connector and unlock warning switch connector.
- (b) Remove the clamp.
- (c) Remove the 2 screws and ignition switch.