DI2U8-03

DTC	P0335/12, 13	Crankshaft Position Sensor Circuit Malfunction
-----	--------------	--


## **CIRCUIT DESCRIPTION**

The crankshaft position sensor, which detects the engine speed and crankshaft angle signal (NE signal), has been installed on the oil pump body.

The NE signal plate has 34 teeth. The NE signal sensor generates 34 signals of every engine revolution. The engine ECU detects the standard crankshaft angle based on the G2 signals, and the actual crankshaft angle and the engine speed by the NE signals.

DTC No.	DTC Detecting Condition	Trouble Area
P0335/12, 13	No crankshaft position sensor signal to engine ECU during cranking	Open or short in crankshaft position sensor circuit  Crankshaft position sensor
	No crankshaft position sensor signal to engine ECU with engine speed 450 rpm or more	Starter     Engine ECU


## **WIRING DIAGRAM**

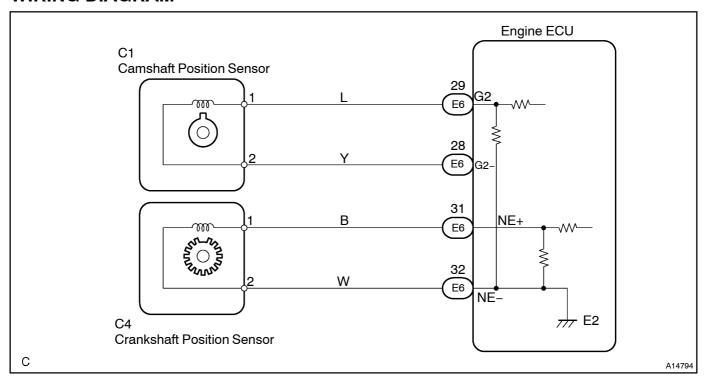

# **INSPECTION PROCEDURE**

#### HINT:

- Perform[]roubleshooting[]of[]DTC[]P0335/12,[]]3[]irst.[]f[]no[]rouble[]s[]ound,[]roubleshoot[]he[]ollowing mechanical[]systems.
- Peadifreeze frame data using mand-held tester. Because freeze frame records the engine conditions when the final function is detected, when trouble shooting it is useful for determining whether the vehicle was funning or stopped, the engine warmed up or not, the air-fuel fatio ean or fich, etc. at the time of the final function.
  - 1 Check[resistance[of[crankshaft[position[sensor[See[page[]G-1]].

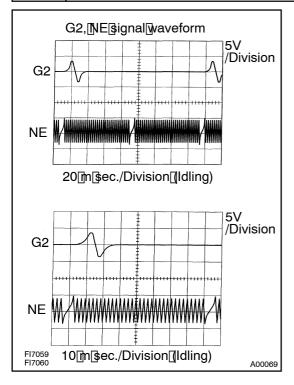

### Reference: [INSPECTION [USING [OSCILLOSCOPE

During\_cranking\_or\_dling,\_check\_between\_terminals\_G2\_and G2-,\_NE\_and\_NE\_of\_the\_engine\_ECU\_connector.

HINT:

The correct waveforms are as shown.

NG[]

Replace crankshaft position sensor.

OK

2∏

Check[for[open[and[short[]n[harness[and[connector[between[engine[ECU[and crankshaft[position[sensor[See[page[]N-35]).

NG

Repair or replace harness or connector.

OK

3 | Inspect[sensor[installation[and[teeth[of[signal[plate.

NG

Tighten sensor. Replace signal plate.

OK