RETRACT MOTOR CIRCUIT
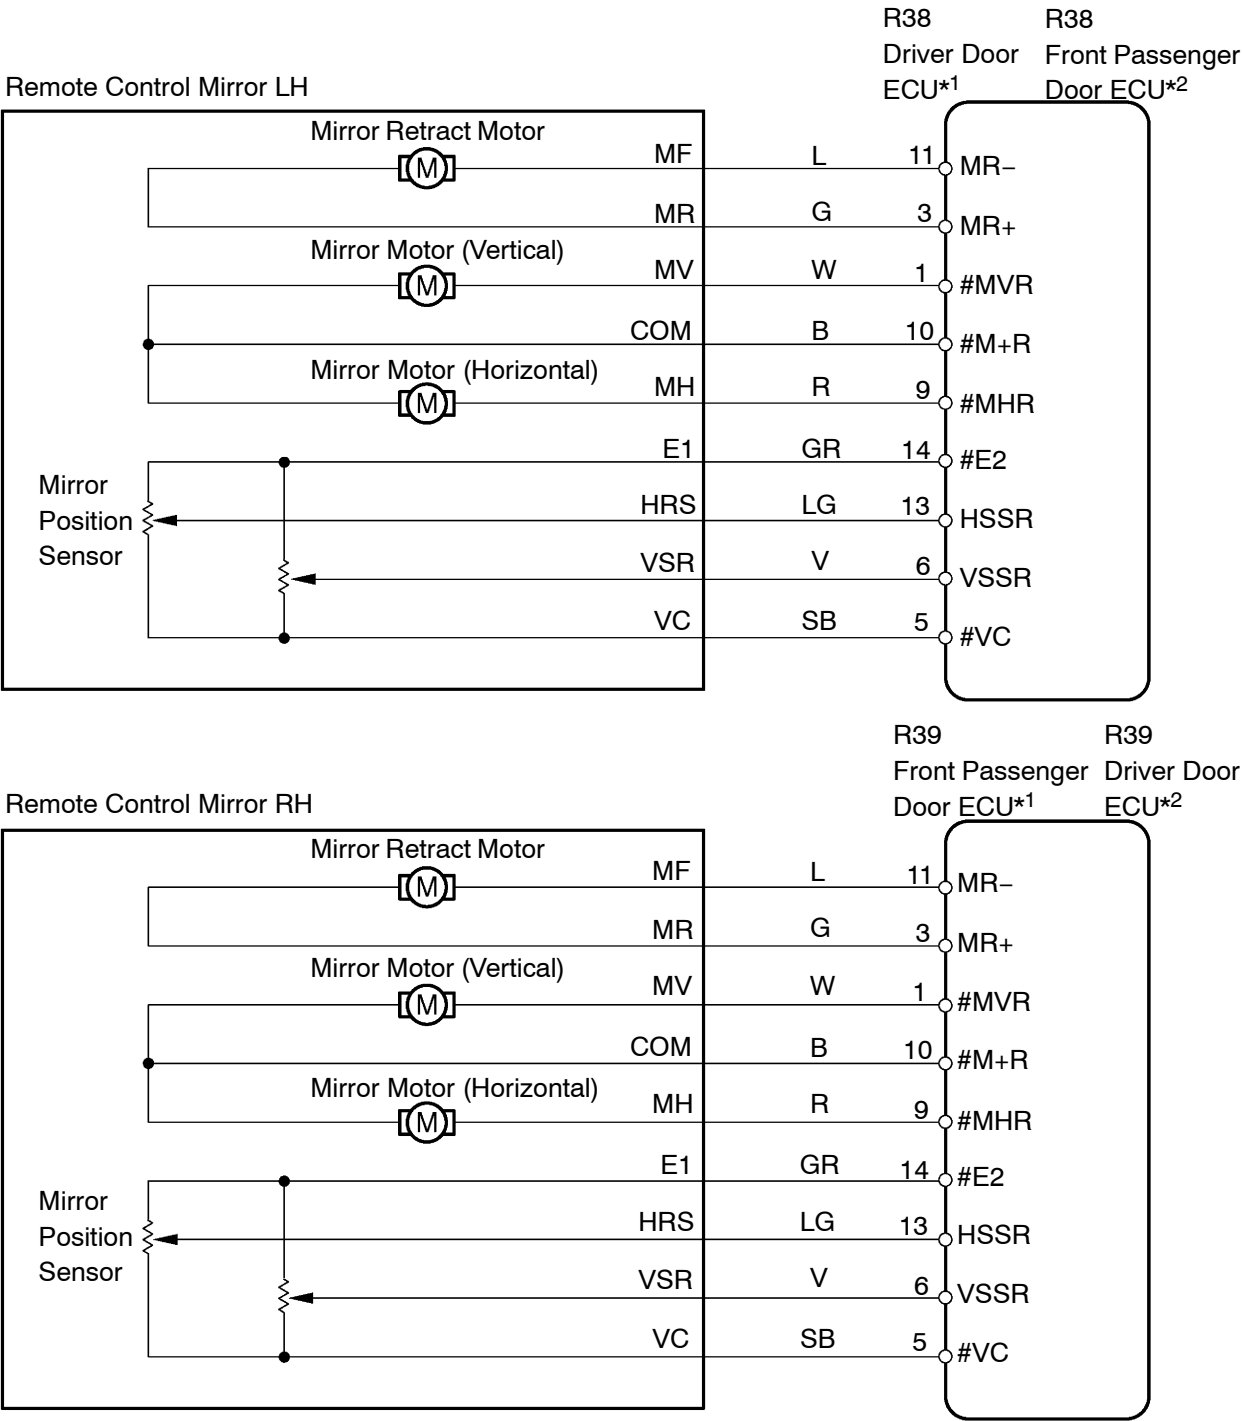
CIRCUIT DESCRIPTION

Retract motors are built into the remote control mirrors.

WIRING DIAGRAM

*1: LHD
*2: RHD

Y
B74333

INSPECTION PROCEDURE

1	PERFORM ACTIVE TEST USING INTELLIGENT TESTER II

(a) Connect the intelligent tester II to the DLC3.

(b) Turn the ignition switch ON and press the intelligent tester II main switch ON.

(c) Select the item below in the ACTIVE TEST and then check that the remote control mirror operates.
Door ECU:

Item	Test Details
Mirr Fold/Retrn	Mirror retract operation FOLD/RETRN

OK:
The motor operates normally.

NG > Go to step 2

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN ON PROBLEM SYMPTOMS TABLE **(See page 05−2080)**

2	INSPECT MIRROR RETRACT MOTOR **(See page 70−39)**

NG > REPLACE REMOTE CONTROL MIRROR

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN ON PROBLEM SYMPTOMS TABLE **(See page 05−2080)**