
#### 05HUI-01

## REPLACEMENT

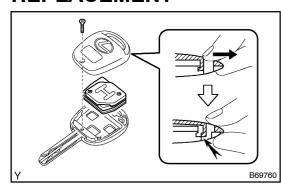

# 1. REMOVE TRANSMITTER SUB-ASSY MODULE SET DOOR CONTROL

#### NOTICE:

Take extra care when handing these precision electronic components.


#### HINT:

The installation procedure is the removal procedure reverse order.

- (a) Using a screwdriver, remove the screw.
- (b) Push the cover with your finger as shown in the illustration so a gap appears. then, pry out the cover using that gap.

#### NOTICE:

Do not forcibly pry up the cover.

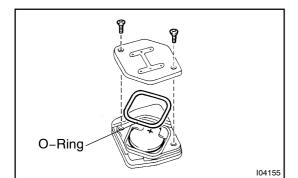


#### 2. REMOVE TRANSMITTER BATTERY

- (a) Using a screwdriver, remove the 2 screws and cover.
- (b) Remove the transmitter battery (lithium battery).

### **NOTICE:**

- Do not push the terminals with your finger.
- Do not forcibly pry up the battery (lithium battery).
  The terminals may become damaged.
- Do not touch the battery with wet hands. Water may cause rust.
- Do not touch or move any components inside the transmitter, as it may cease to work.

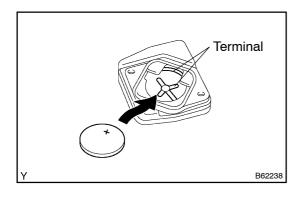

### 3. INSTALL TRANSMITTER BATTERY

(a) Install a new battery (lithium battery) with the positive (+) side up, as shown in the illustration.

### NOTICE:

- Be sure that the positive side and the negative side of the transmitter battery are matched up correctly.
- Be careful not to bend the transmitter battery electrode during insertion.
- Keep the transmitter case interior free of dust and oil.
- (b) Check that O-ring is not distorted or slipped off, and install the cover.
- (c) Using a screwdriver, tighten the 2 screws.

## NOTICE:

If the screws are loose, it may cause faulty contact between the battery (lithium battery) and the terminals.