
05HTE-01

SYSTEM DIAGRAM

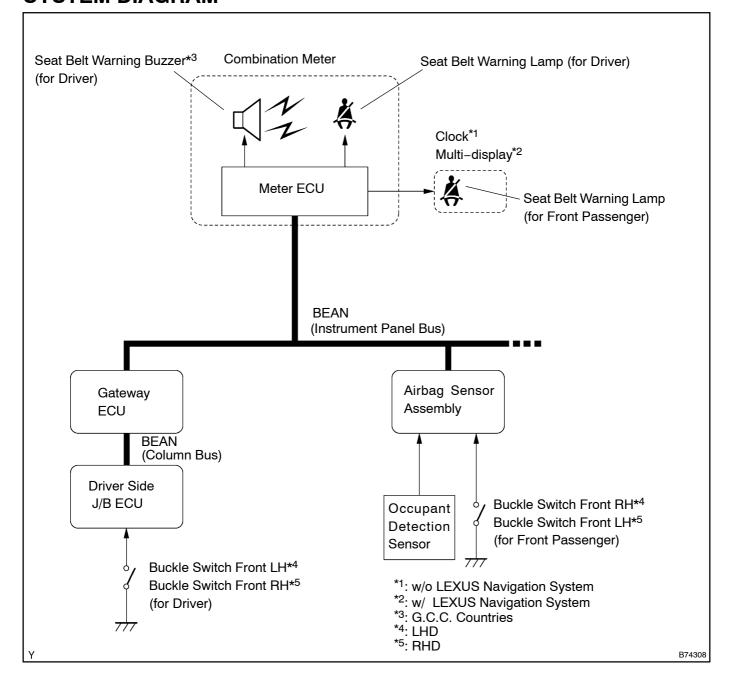

Communication Table

Sender	Receiver	Signal	Line
Driver Side J/B ECU	Meter ECU	Driver seat belt buckle signal	BEAN
Airbag Sensor Assembly	Meter ECU	Passenger seat belt buckle signal	BEAN
Airbag Sensor Assembly	Meter ECU	Passenger occupant detection signal	BEAN