
## **SYSTEM DIAGRAM**

05HOW-01

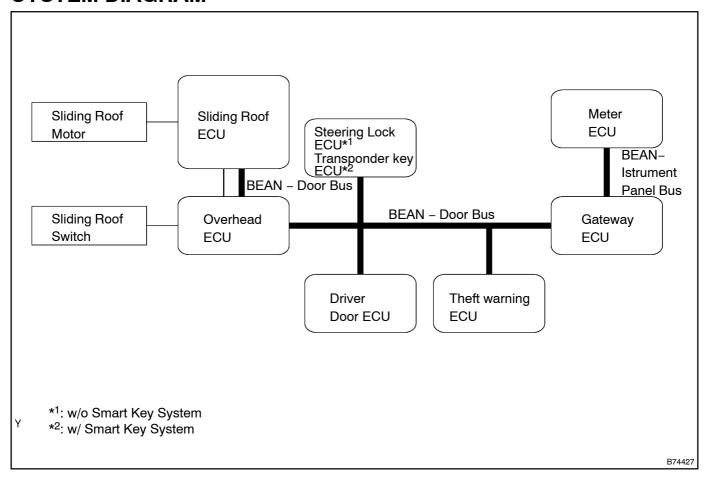

## **Communication Table**

Sender	Receiver	Signal	Line
Steering lock ECU*1	Sliding roof ECU	Ignition switch signal	BEAN
Transponder key ECU*2	Sliding roof ECU	Ignition switch signal	BEAN
Driver door ECU	Sliding roof ECU	Key-off operation signal	BEAN
Driver door ECU	Sliding roof ECU	Key related S/R operation signal	BEAN
Driver door ECU	Sliding roof ECU	Wireless S/R operation signal	BEAN
Theft warning ECU	Sliding roof ECU	S/R slide/tilt full close signal	BEAN
Theft warning ECU	Sliding roof ECU	S/R tilt full close signal	BEAN
Sliding roof ECU	Meter ECU	S/R tilt open warning signal	BEAN
Sliding roof ECU	Meter ECU	S/R slide open warning signal	BEAN
Sliding roof ECU	Meter ECU	S/R buzzer sound request	BEAN

## HINT:

\*1: w/o smart key system

\*2: w/ smart key system