
FOG[LAMP[ASSY OVERHAUL

6511D-0


HINT:

- •□ COMPONENTS: SEE PAGE 76-3.
- Use[]he[same[procedures[]or[]he[RH[side[and[]LH[side.
- The procedures listed below are for the LH side.
- •□ Reassembly[is[in[the[reverse[order[of[overhaul.
- 1. REMOVE ENGINE UNDER COVER NO.1 (SEE PAGE 76-3)
- 2. REMOVE[FRONT[FENDER[LINER[LH[[SEE[PAGE[76-3]]
- 3. REMOVE[FRONT[FENDER[LINER[RH][SEE[PAGE[76-3]]
- 4. REMOVE[FRONT[BUMPER[COVER[SEE[PAGE[76-3]

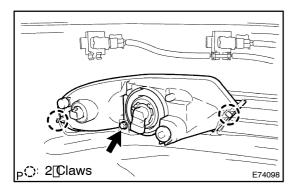

5. REMOVE FOG LAMP ASSYLH

- (a) Remove the bolt from the flog amp assy LH.
- (b) Release[the[2]@law[fittings,[then]pull@ut[the[fog[]amp@assy LH.

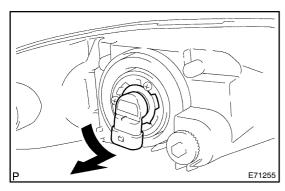

6. REMOVE FOG LAMP BULB

(a) Remove the flog amp bulb from the flog amp assy LHas shown in the illustration.

- 7. | INSTALL|FRONT|BUMPER|COVER|(SEE|PAGE|76-3)
- 8. INSTALL[FRONT[FENDER[LINER[LH][SEE[PAGE[76-3]]
- 9. INSTALL[FRONT[FENDER[LINER[RH[SEE[PAGE[76-3]
- 10. | INSTALL|ENGINE|UNDER|COVER|NO.1|(SEE|PAGE|76-3)
- 11 PUT VEHICLE UNDER THESE CONDITIONS (SEE PAGE 65-19)
- 12. ADJUST[FOG[LIGHT[AIM[SEE[PAGE[65-19]