05HX2-01

LOCATION

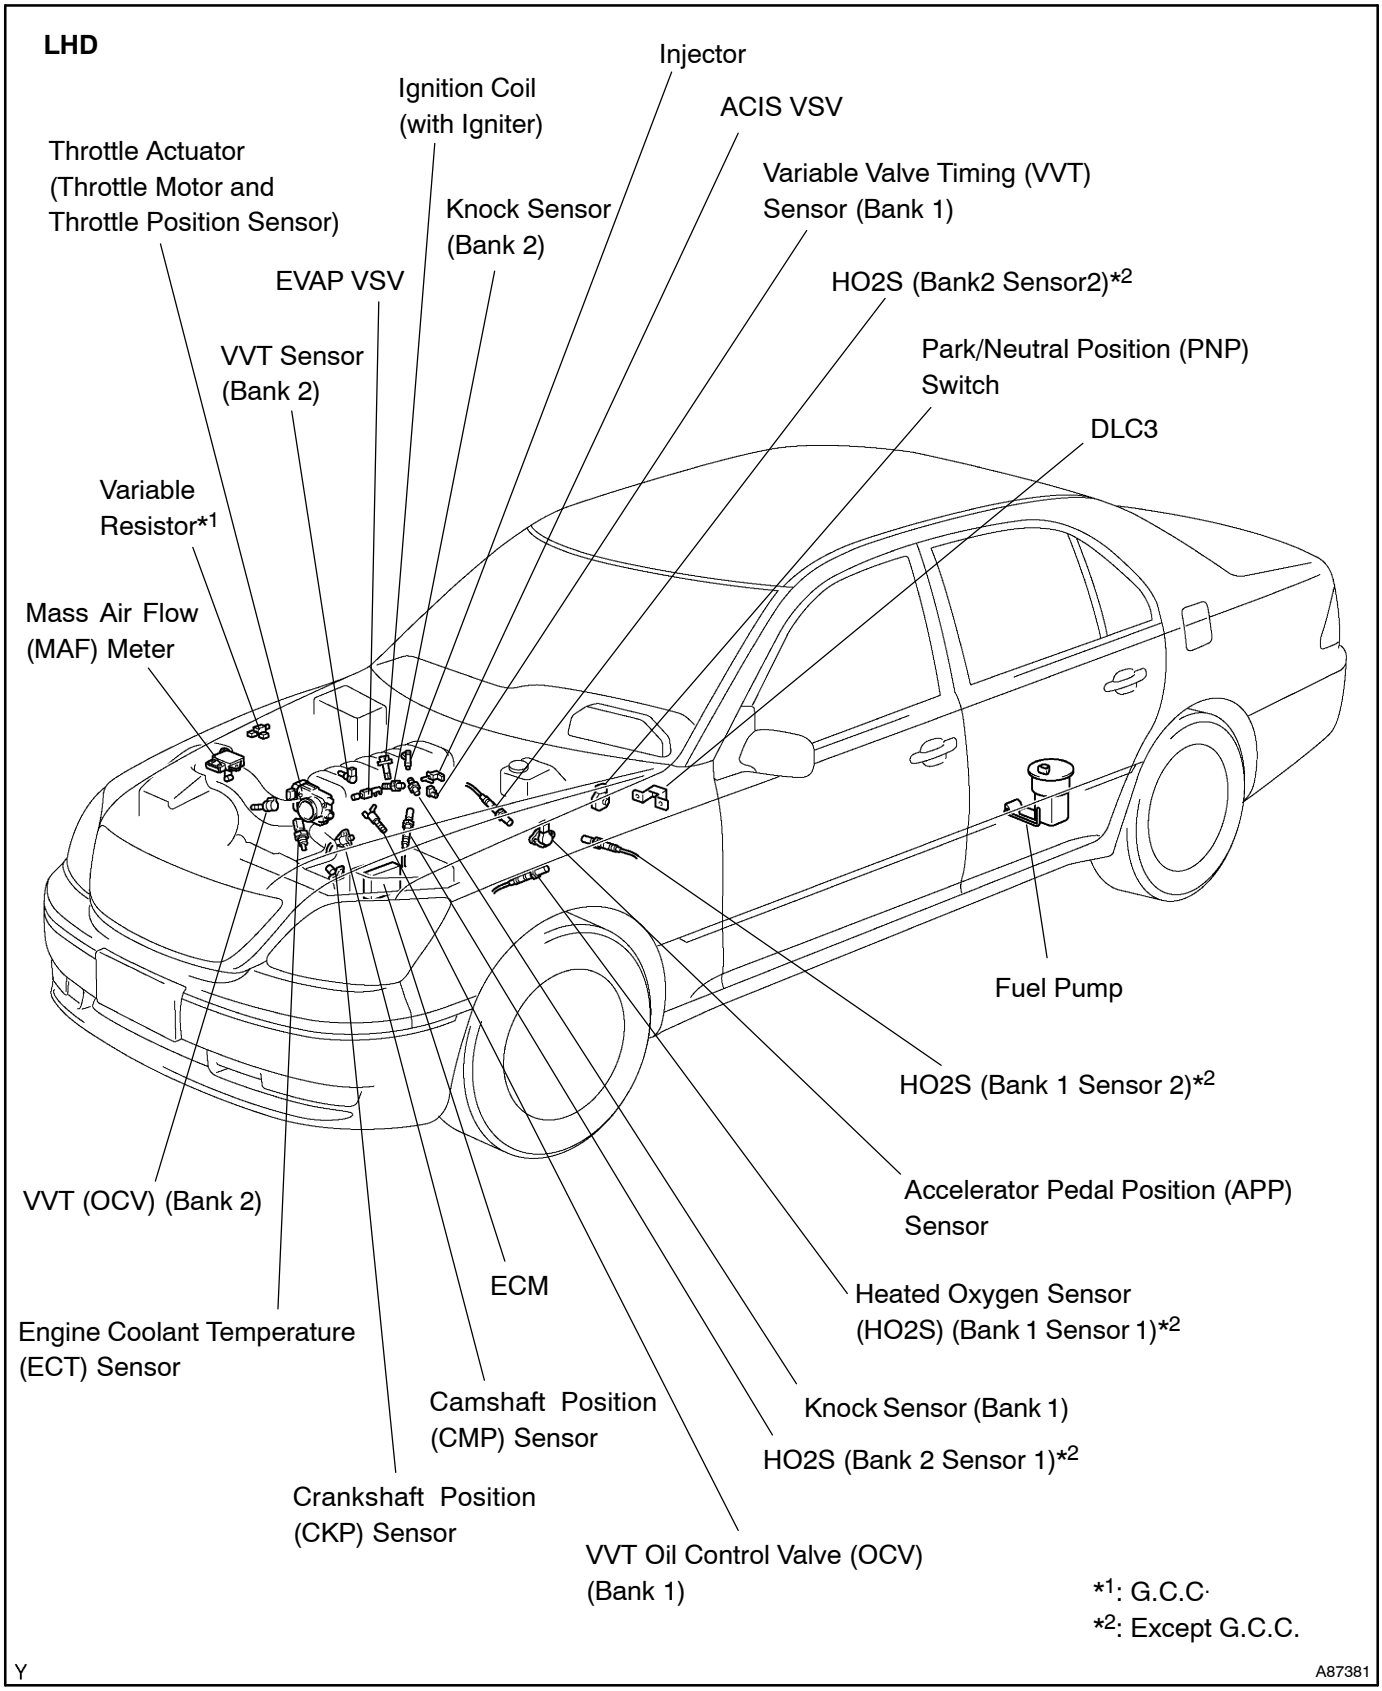

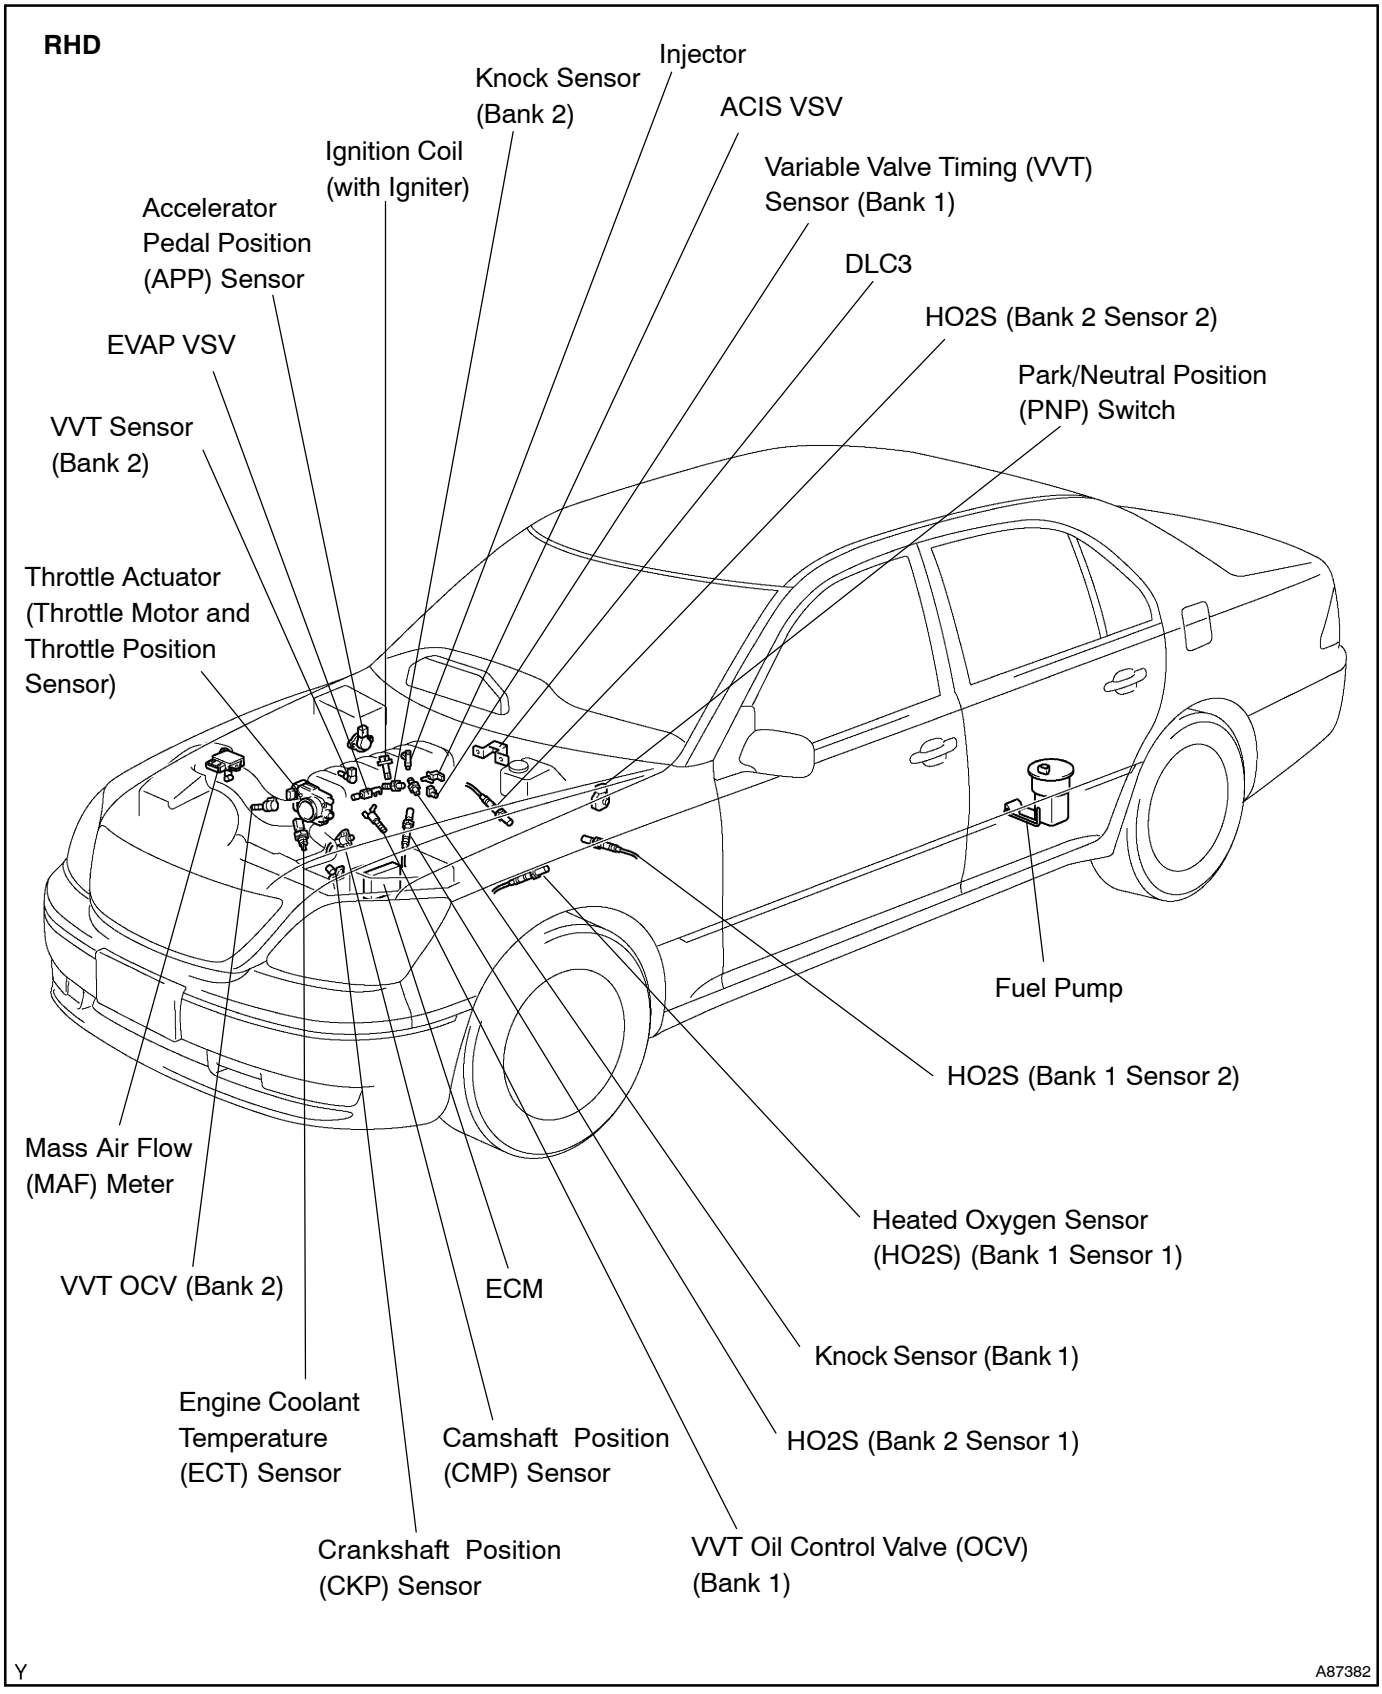
RHD
Injector
Knock Sensor (Bank 2)
ACIS VSV
Ignition Coil (with Igniter)
Variable Valve Timing (VVT) Sensor (Bank 1)
Accelerator Pedal Position (APP) Sensor
DLC3
HO2S (Bank 2 Sensor 2)
EVAP VSV
Park/Neutral Position (PNP) Switch
VVT Sensor (Bank 2)
Throttle Actuator (Throttle Motor and Throttle Position Sensor)
Fuel Pump
HO2S (Bank 1 Sensor 2)
Mass Air Flow (MAF) Meter
Heated Oxygen Sensor (HO2S) (Bank 1 Sensor 1)
VVT OCV (Bank 2)
ECM
Knock Sensor (Bank 1)
Engine Coolant Temperature (ECT) Sensor
Camshaft Position (CMP) Sensor
HO2S (Bank 2 Sensor 1)
Crankshaft Position (CKP) Sensor
VVT Oil Control Valve (OCV) (Bank 1)
Y
A87382