
05HQJ-01

SYSTEM DIAGRAM

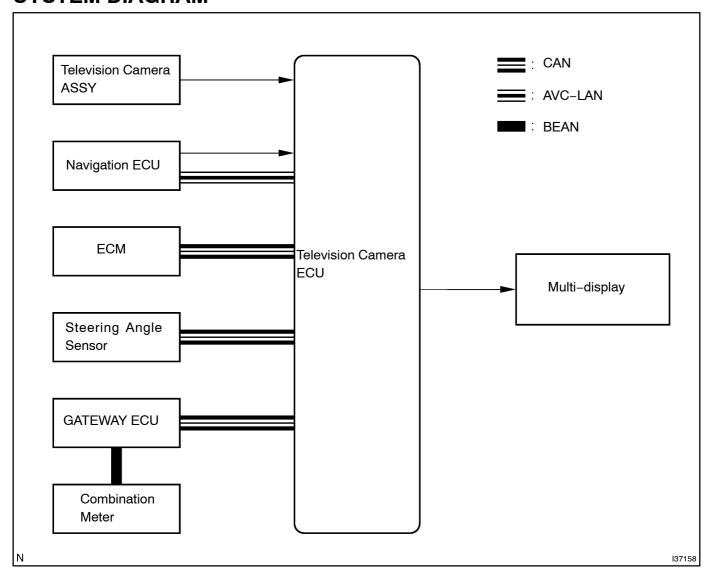

Input and output signals of each ECU.

Transmitting ECU (transmitter)	Receiving ECU	Signals	Communication method
Navigation ECU	Television Camera ECU	Vehicle angle data signal	AVC-LAN
ECM	Television Camera ECU	Shift R position signal	CAN
Steering Angle Sensor	Television Camera ECU	Steering angle signal	CAN
Combination Meter	Television Camera ECU	Vehicle speed signal	BEAN