
Position of Parts in Seat

[RHD: Front Seat]

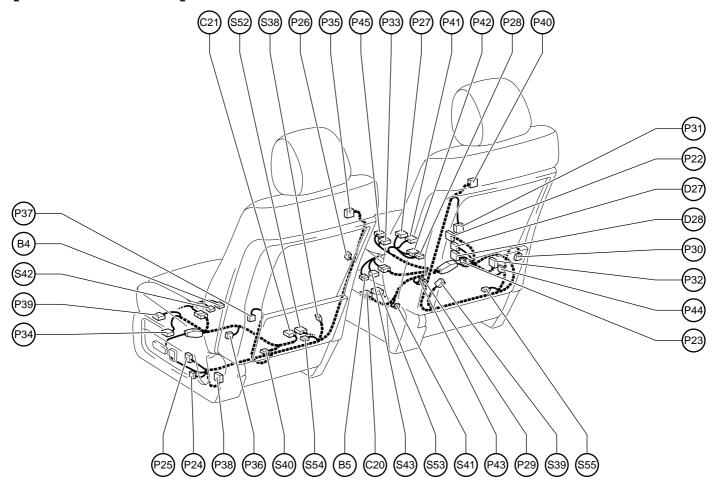

- B 4 Buckle SW Front LH
- B 5 Buckle SW Front RH
- C20 Climate Control Seat ECU (Driver's Seat)
- C21 Climate Control Seat ECU (Front Passenger's Seat)
- D27 Driver Seat ECU
- D28 Driver Seat ECU
- P22 Power Seat Control SW (Driver's Seat Cushion)
- P23 Power Seat Control SW (Driver's Seat Lumbar Support)
- P24 Power Seat Control SW
- (Front Passenger's Seat Lumbar Support)
 P25 Power Seat Control SW (Front Passenger's Seat)
- P26 Power Seat Control SW Sub (Front Passenger's Seat) P27 Power Seat Motor (Driver's Seat Cushion Control)
- P28 Power Seat Motor (Driver's Seat Front Vertical Control)
- P29 Power Seat Motor (Driver's Seat Lifter Control)
- P30 Power Seat Motor
 - (Driver's Seat Lumbar Support Lower Side Control)
- P31 Power Seat Motor
 - (Driver's Seat Lumbar Support Upper Side Control)
- P32 Power Seat Motor (Driver's Seat Reclining Control)
- P33 Power Seat Motor (Driver's Seat Slide Control) P34 Power Seat Motor
- (Front Passenger's Seat Front Vertical Control)
- P35 Power Seat Motor
- (Front Passenger's Seat Head Rest Control)
- P36 Power Seat Motor
 - (Front Passenger's Seat Lifter Control)

- P37 Power Seat Motor
 - (Front Passenger's Seat Lumbar Support Control)
- P38 Power Seat Motor
 - (Front Passenger's Seat Reclining Control)
- P39 Power Seat Motor
 - (Front Passenger's Seat Slide Control)
- P40 Power Seat Motor and Position Sensor (Driver's Seat Head Rest Control)
- P41 Power Seat Position Sensor
- (Driver's Seat Cushion Control)
- P42 Power Seat Position Sensor
- (Driver's Seat Front Vertical Control)
- P43 Power Seat Position Sensor (Driver's Seat Lifter Control)
- P44 Power Seat Position Sensor
 - (Driver's Seat Reclining Control)
- P45 Power Seat Position Sensor (Driver's Seat Slide Control)
- S38 Seat Climate Controller Front LH (Seat Back)
- S39 Seat Climate Controller Front RH (Seat Back)
- S40 Seat Heater Front LH
- S41 Seat Heater Front RH
- S42 Side Airbag Squib LH S43 Side Airbag Squib RH
- S52 Seat Climate Controller Front LH (Seat Cushion)
- \$53 Seat Climate Controller Front RH (Seat Cushion)
- S54 Step Light Rear LH
- S55 Step Light Rear RH