
## SYSTEM DIAGRAM

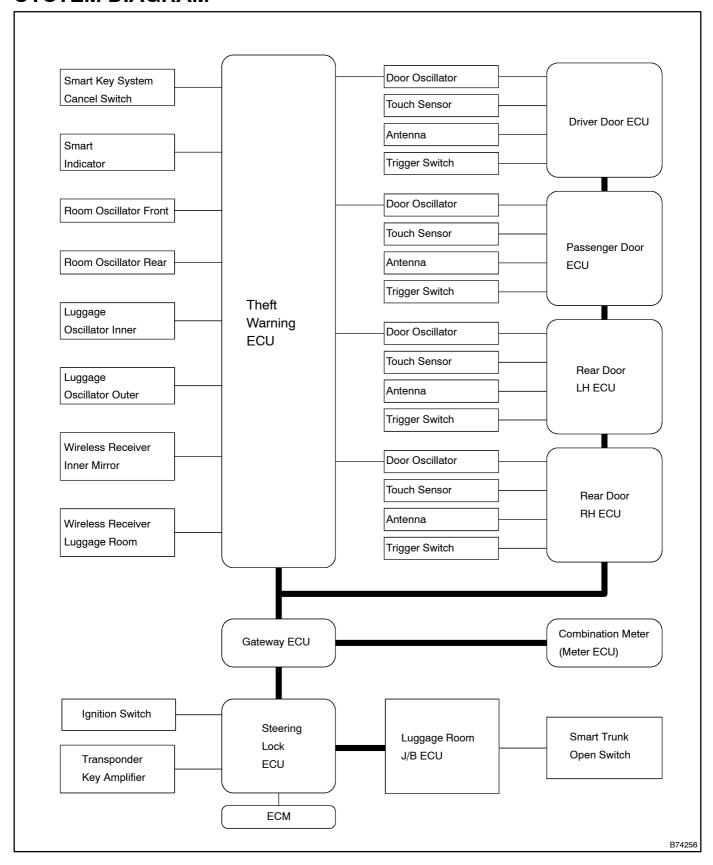

## **DIAGNOSTICS** – SMART KEY SYSTEM

Sender	Receiver	Signal	Line
Theft warning ECU	Steering lock ECU	PUSH switch signal Ignition switch signal Key switch signal Lock release signal (smart ignition control)	BEAN
Theft warning ECU	Driver door ECU	Touch sensor detection signal     Smart trigger switch signal	BEAN
Theft warning ECU	Front passenger door ECU	Touch sensor detection signal     Smart trigger switch signal	BEAN
Theft warning ECU	Rear door LH ECU	Touch sensor detection signal     Smart trigger switch signal	BEAN
Theft warning ECU	Rear door RH ECU	Touch sensor detection signal     Smart trigger switch signal	BEAN
Driver side J/B ECU	Theft warning ECU	Hazard control signal     (answer-back control)     Taillamp illumination request signal     (answer-back control)	BEAN
Passenger side J/B ECU	Theft warning ECU	Interior illumination control signal for smart	BEAN
Luggage room J/B ECU	Theft warning ECU	Luggage open output request signal	BEAN
Driver door ECU	Theft warning ECU	Smart door unlock signal     Driver door unlock standby control signal     (touch sensor activation control)     Interior illumination control signal for smart	BEAN
Front passenger door ECU	Theft warning ECU	Smart door unlock signal     Passenger door unlock standby control signal     (touch sensor activation control)     Interior illumination control signal for smart	BEAN
Rear door LH ECU	Theft warning ECU	RL door unlock standby control signal (touch sensor activation control)     Interior illumination control signal for smart	BEAN
Rear door RH ECU	Theft warning ECU	RR door unlock standby control signal (touch sensor activation control) Interior illumination control signal for smart	BEAN
Meter ECU	Theft warning ECU	Key present or not inside vehicle information signal     Key battery information signal     Key present or not on front seats signal     Key match failure signal     Shift lever position warning signal     Buzzer sound signal     Door open indication signal	BEAN