2. Layout of Main Component
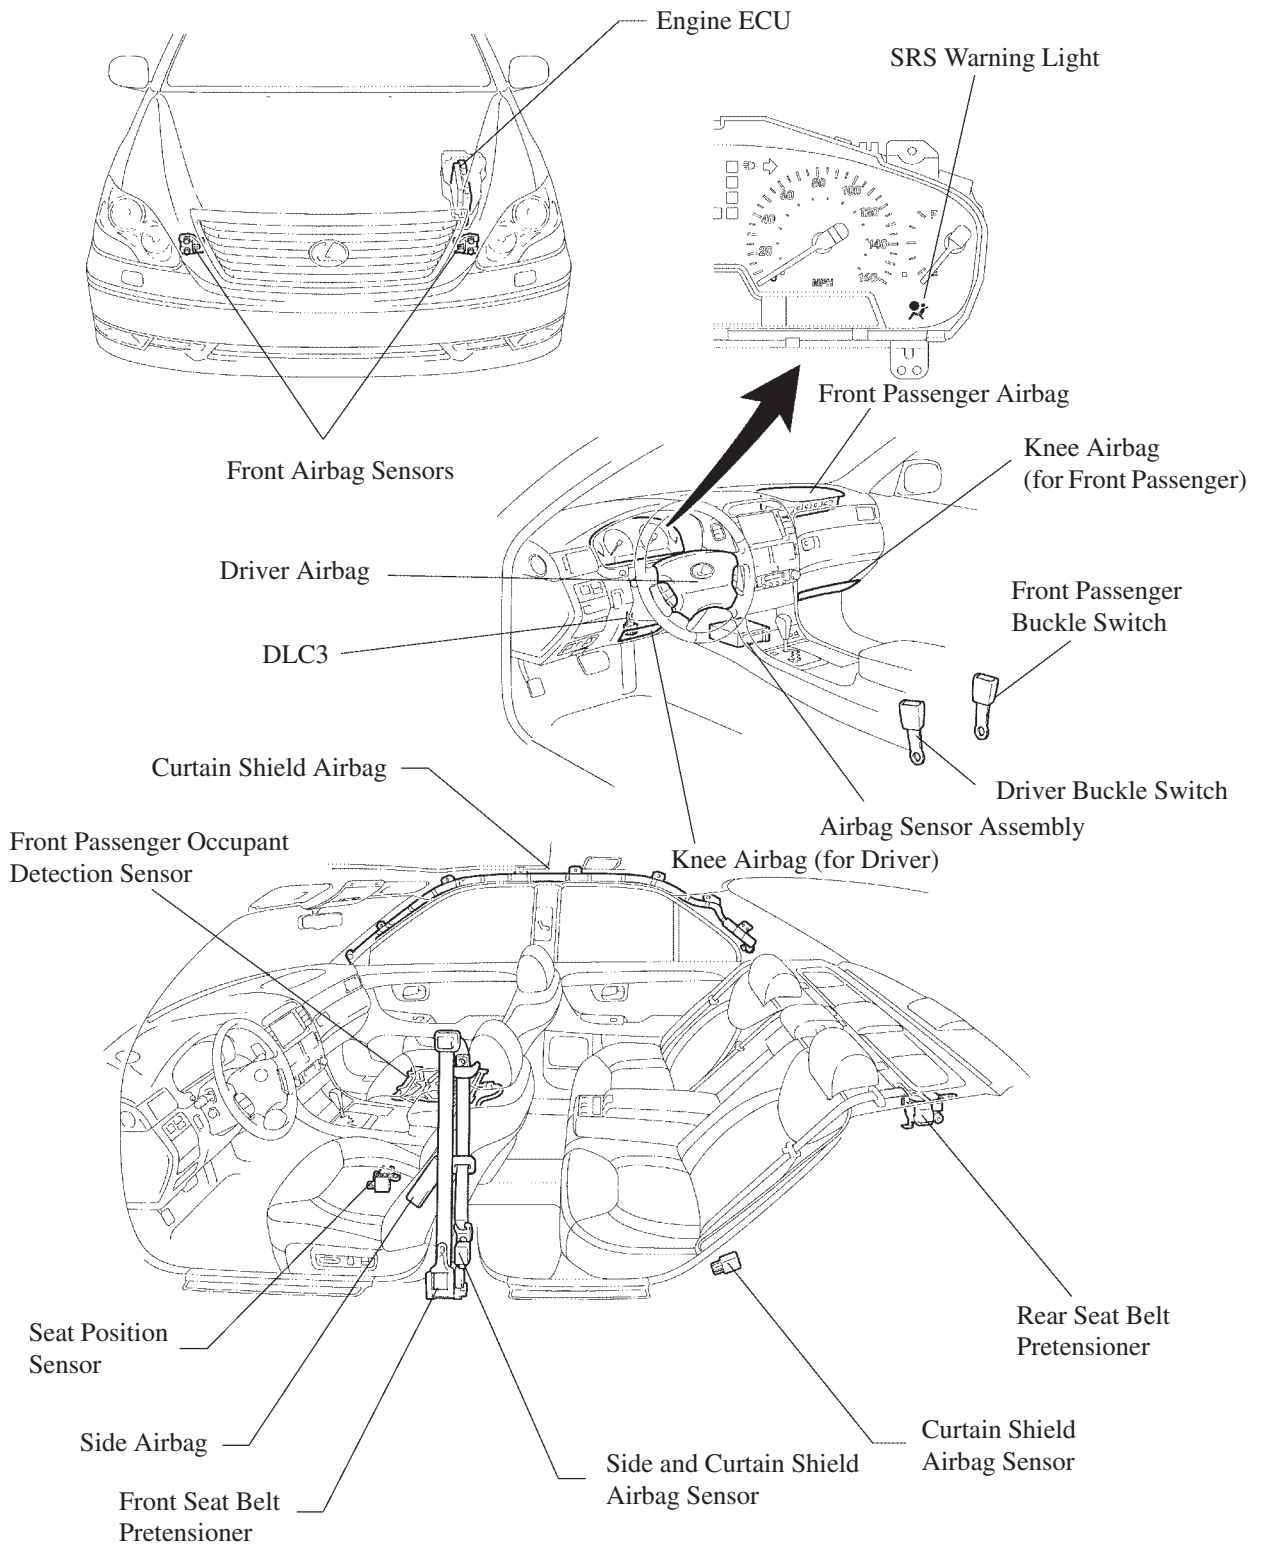
2

Engine ECU

SRS Warning Light

Front Passenger Airbag

Knee Airbag
(for Front Passenger)

Front Airbag Sensors

Driver Airbag

Front Passenger
Buckle Switch

DLC3

Curtain Shield Airbag

Driver Buckle Switch

Airbag Sensor Assembly

Knee Airbag (for Driver)

Front Passenger Occupant
Detection Sensor

Seat Position
Sensor

Rear Seat Belt
Pretensioner

Side Airbag

Side and Curtain Shield
Airbag Sensor

Curtain Shield
Airbag Sensor

Front Seat Belt
Pretensioner

259LSI47